



Installation & Assembly

Drawers

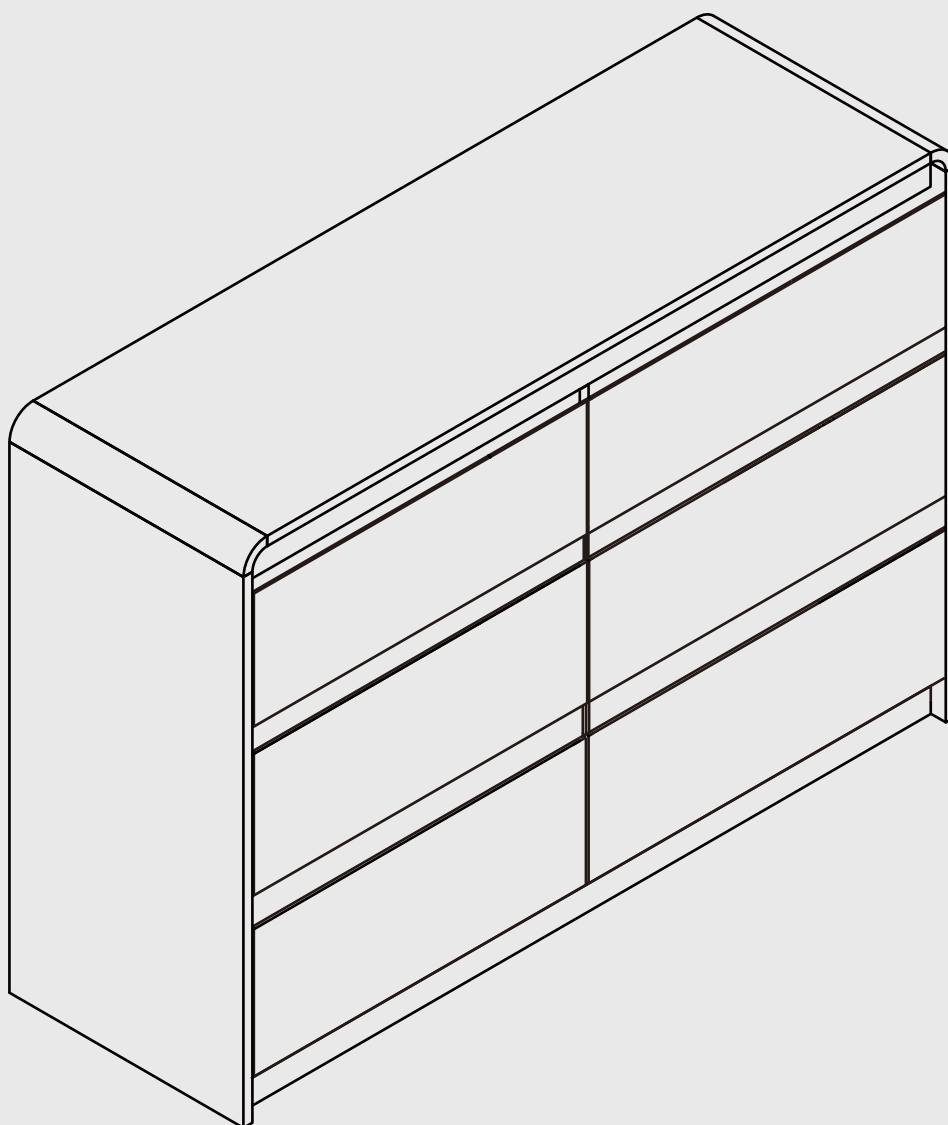

Before You Start

Read through each step carefully and follow the proper order.

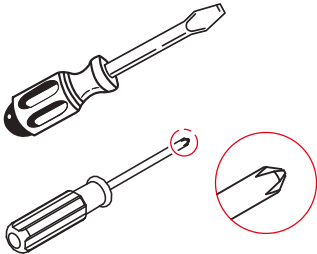

Separate and count all your parts and hardware.

Give yourself enough room for the assembly process.

Have the following tools: Flat Head Screwdriver, Phillips Head Screwdriver.

Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver.)

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY:1-2



Adult Assembly
Required.



Small parts may
present choking
hazard prior to
assembly.



DO NOT use the
product if it is
damaged, broken,
and/or components are
missing or broken.



Please read the
instructions
thoroughly. Identify all
parts & hardware.

Helpful Hints



Do Not Use Power Drills or Drivers.




To protect your parts during assembly, please place them on a soft surface.




To clean surface, use only water on a damp cloth. Do not use window cleaner or cleaning abrasive as it will scratch the surface and could damage the protective coating.



Always monitor your child's activity in the nursery or near furniture.

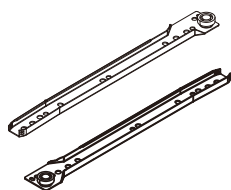


Slides are labeled with an **R** (right) and **L** (left) for proper placement .




















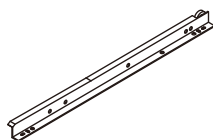


Make sure to always face the on the top of the Cam Lock towards the outer edge .








Exploded Drawing

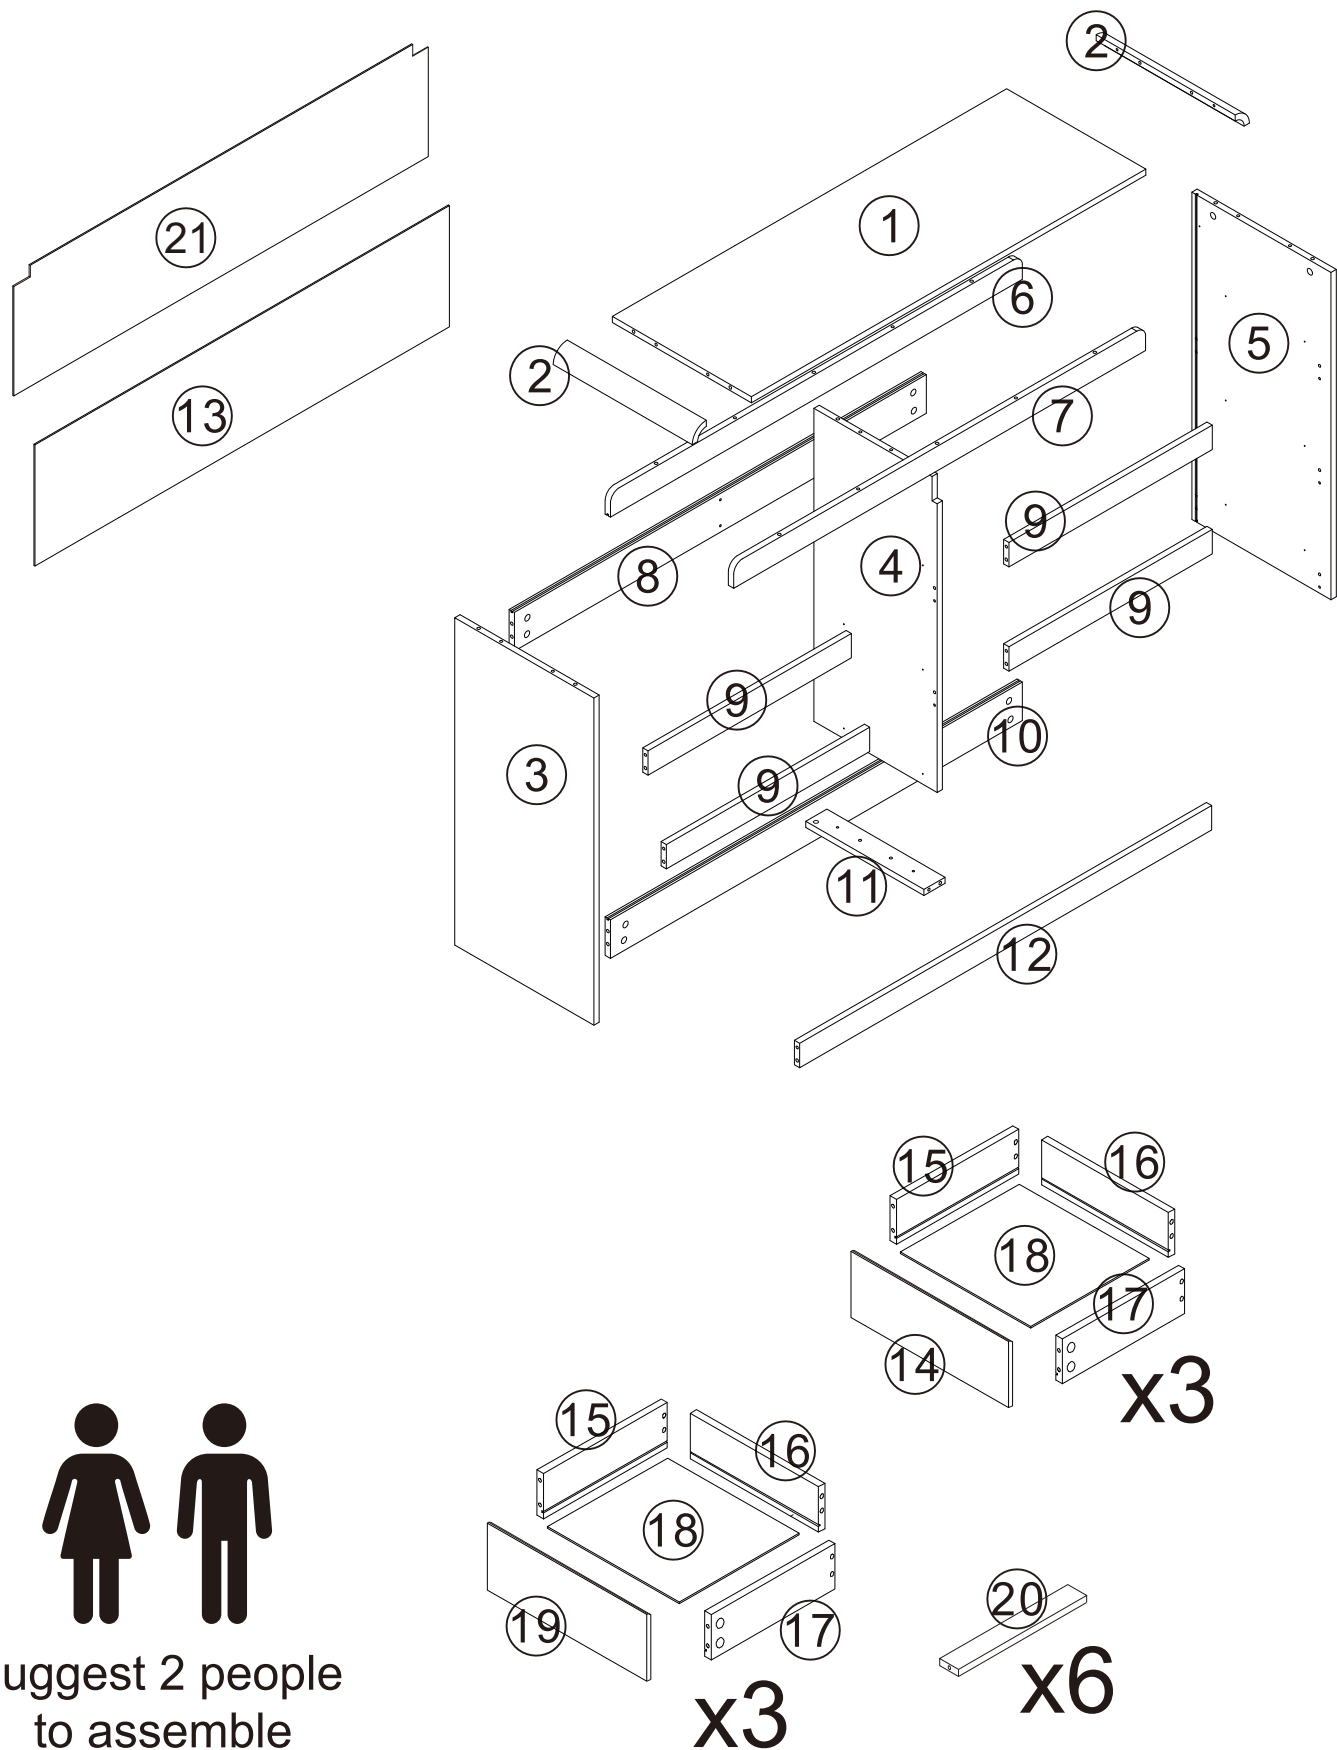





Board List

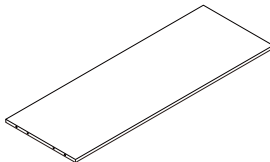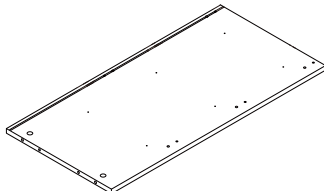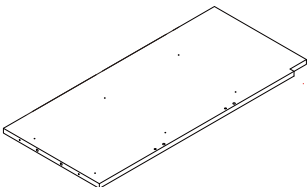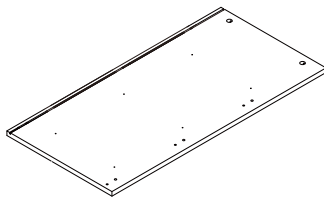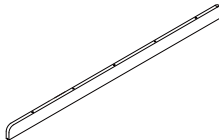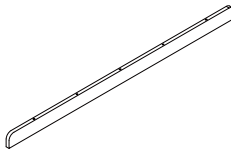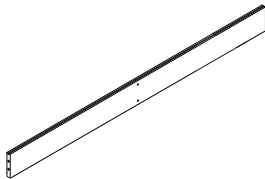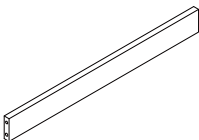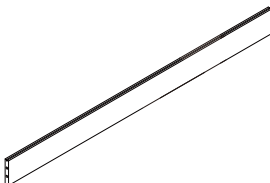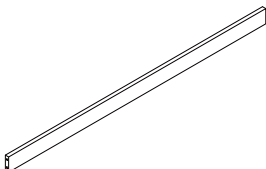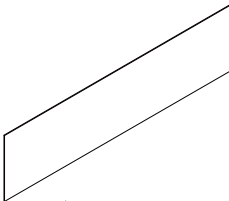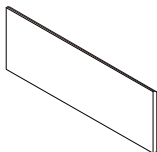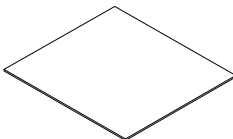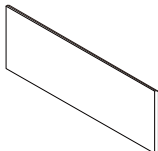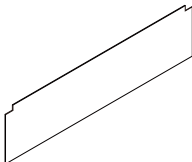①  1PCS	②  2PCS	③  1PCS	④  1PCS	
⑤  1PCS	⑥  1PCS	⑦  1PCS	⑧  1PCS	
⑨  4PCS	⑩  1PCS	⑪  1PCS	⑫  1PCS	
⑬  1PCS	⑭  3PCS	⑮  6PCS	⑯  6PCS	
⑰  6PCS	⑱  6PCS	⑲  3PCS	⑳  6PCS	㉑  1PCS


Parts

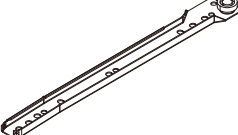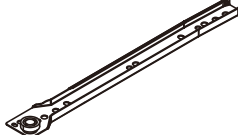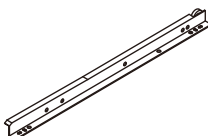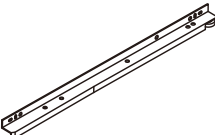A M6*35  65+2pcs	B 15*10  65+2pcs	C Ø6×30  28+2pcs	D M3.5*12  48+2pcs
E M4*35  37+2 pcs	F M3*14  8 pcs	H  8 pcs	I  2 pcs
J  2 pcs	 CR×6	 CL×6	 DL×6
 DR×6			

CAMLOCK/BOLT FASTENING INTRODUCTION






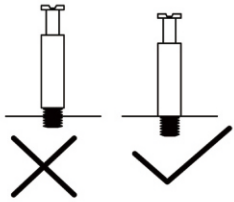
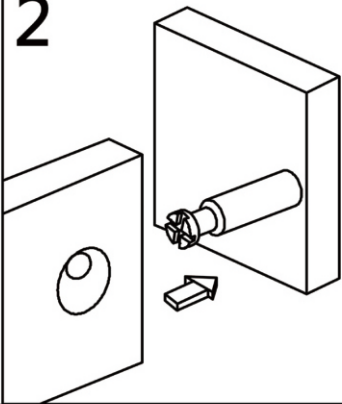
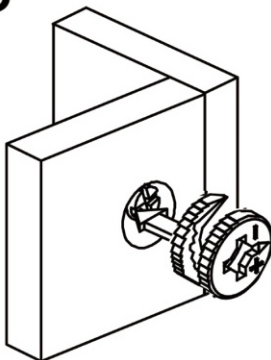
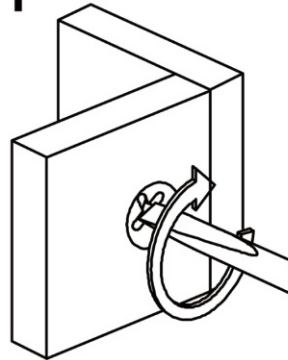
1 	2 	3 	4 
1.Screw cam bolt into the threaded anchor gently. (Attention:don't screw cam bolt too deep or too shallow.)	2.Please connect the 2 boards you want connect by inserting cam bolt.	3.Insert the cam lock into the round hole of the board. (Attention:point the arrow on the top of the cam lock to the outer edge.)	4.Turn the cam lock clockwise until it is firmly tightened.



SLIDE INTRODUCTION (You will use it during assembly)

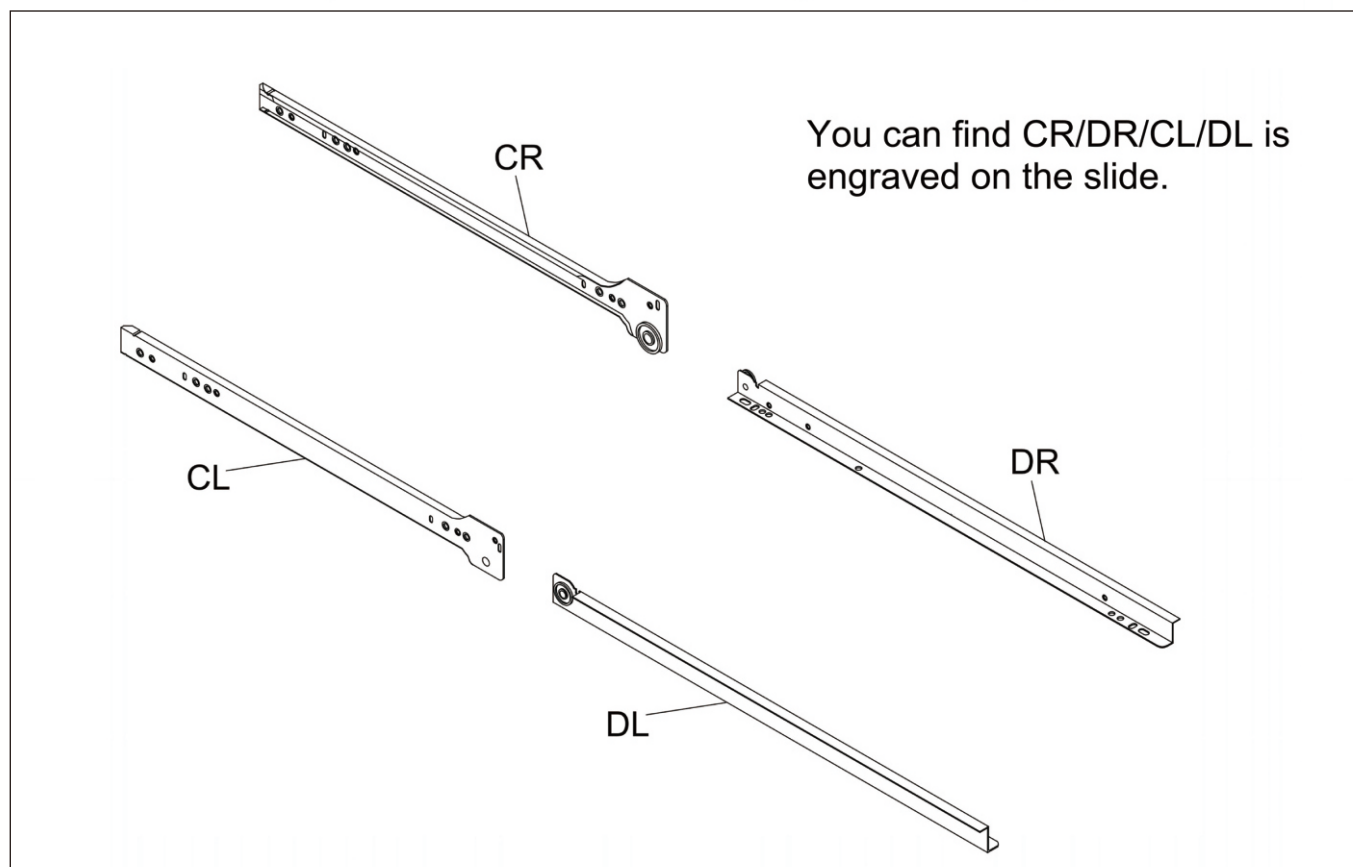

Assembly Manual



1

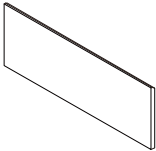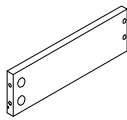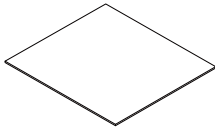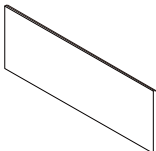				
14 x3	15 x6	16 x6	17 x6	18 x6
				
19 x3	20 x6	E x30	B x30	A x30

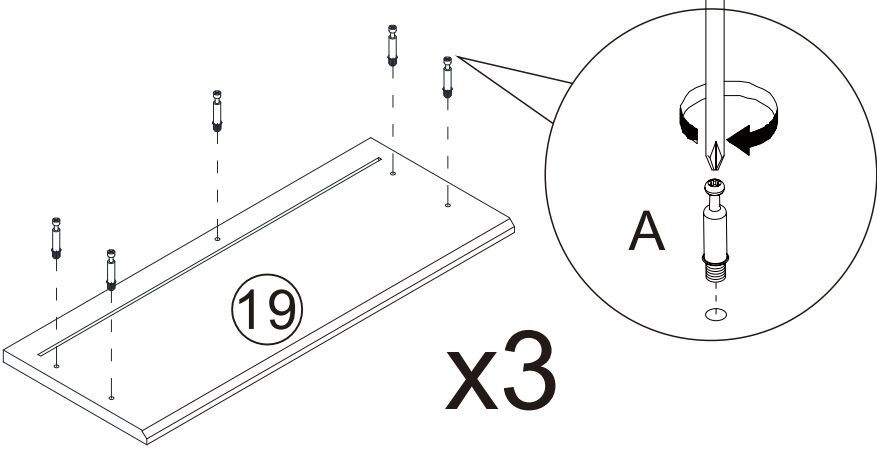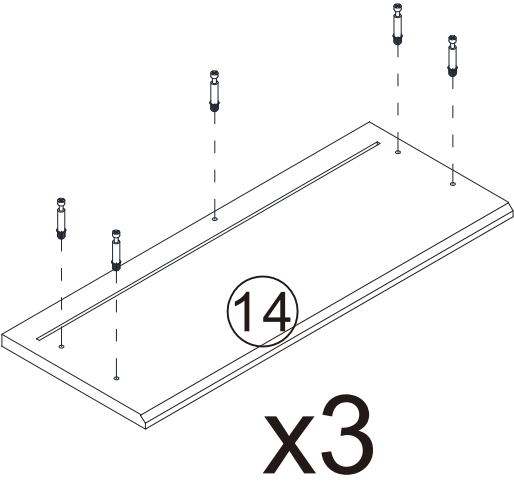

Assembly Manual

2

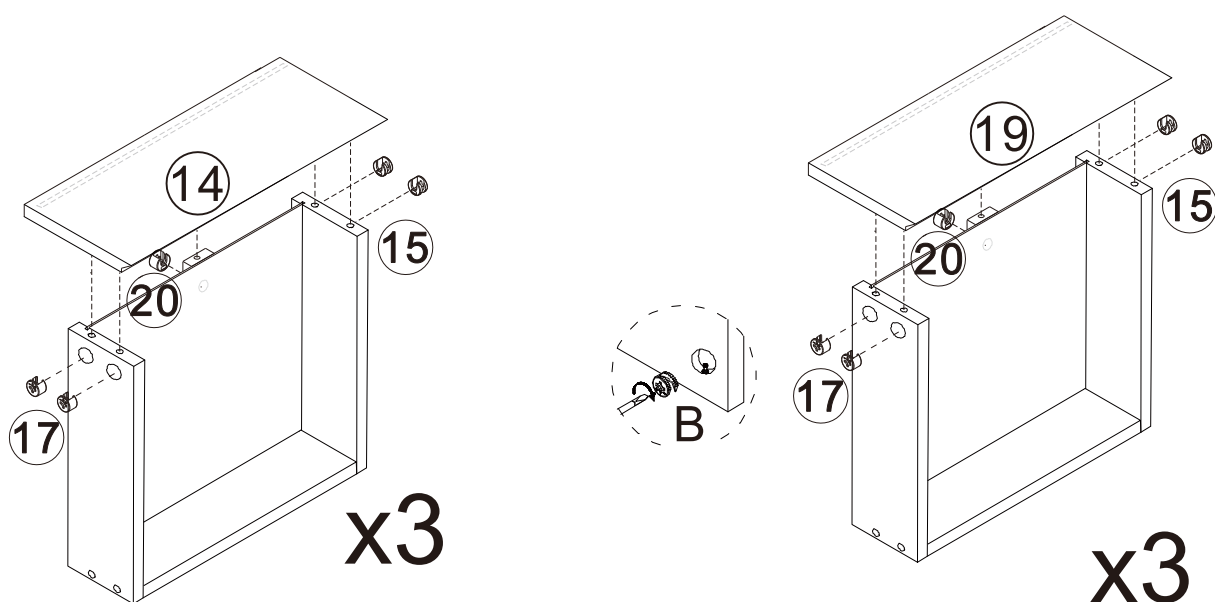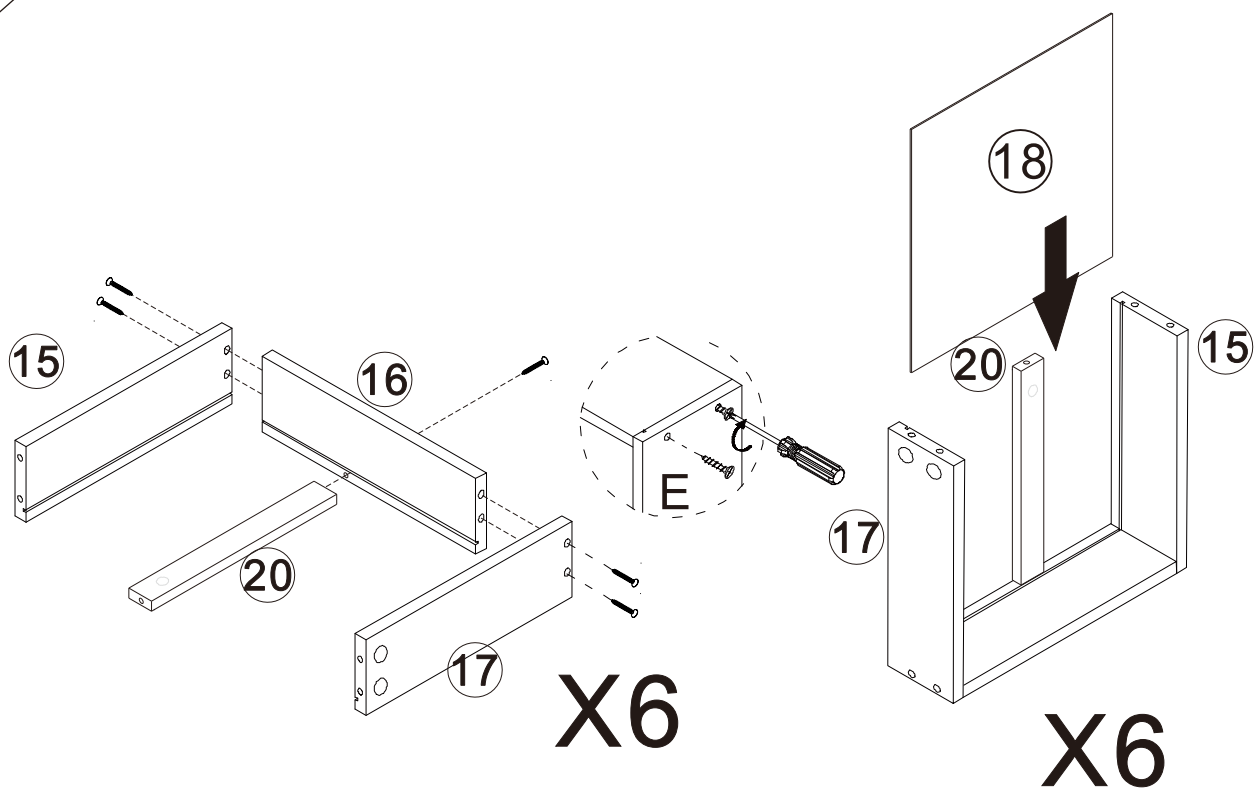

Assembly Manual


3



M 3.5*12


D

x24

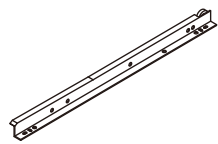


DL

x6


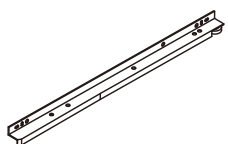


DR

x6

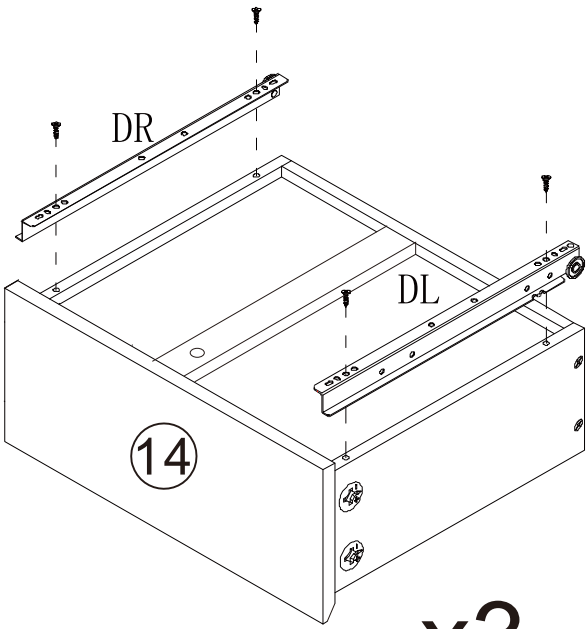


x3

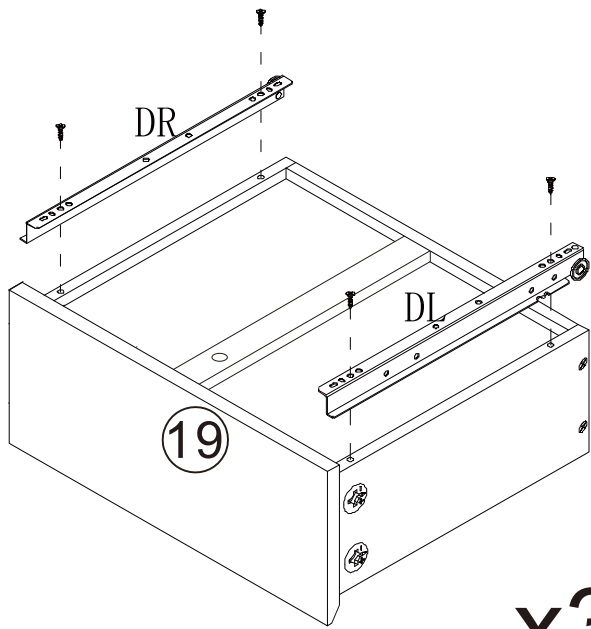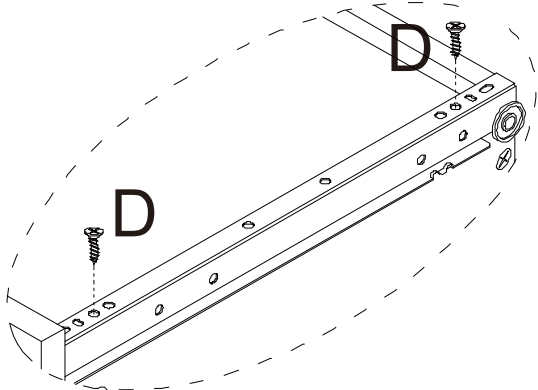

x3


Assembly Manual

4

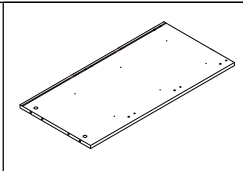


3

x1

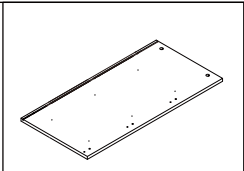


5

x1

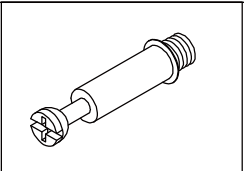

A


x14

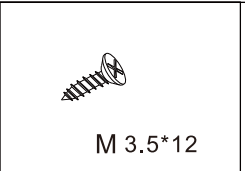

M 3.5*12


D

x12

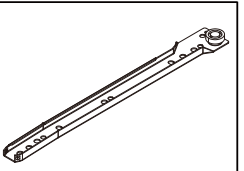






CR

x3

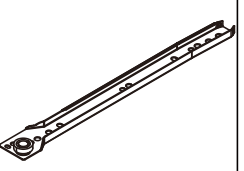





CL


x3

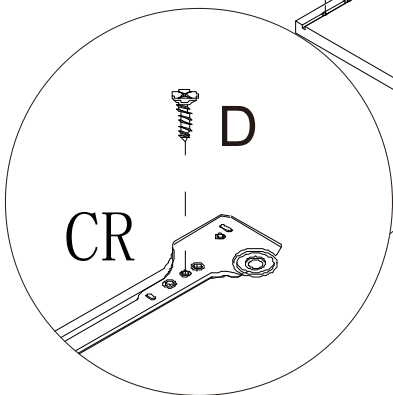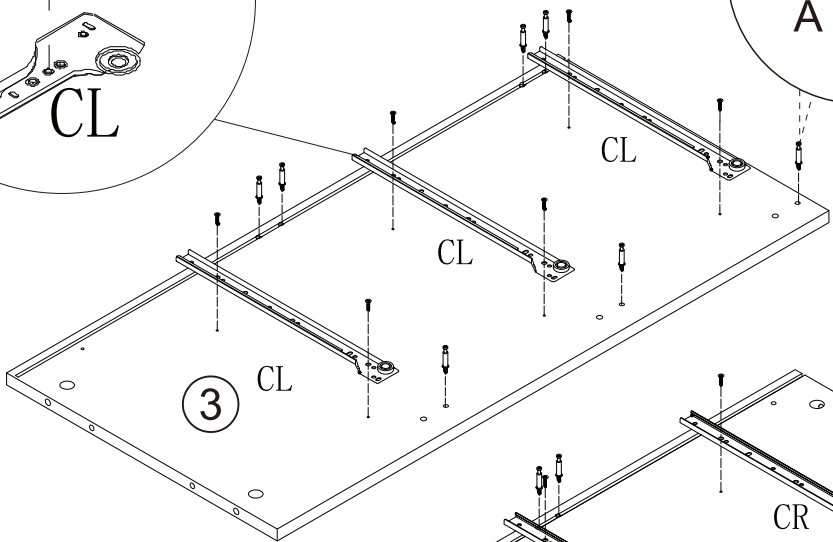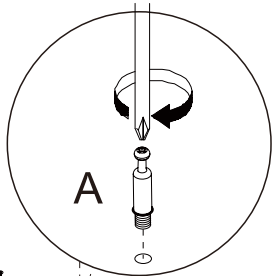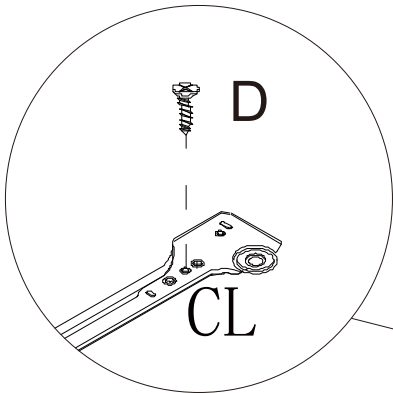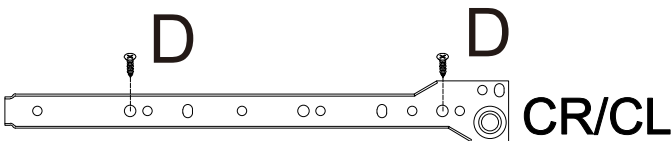

Assembly Manual

5

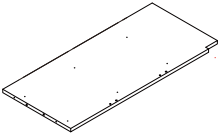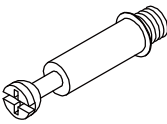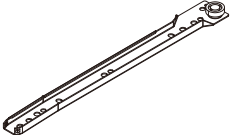
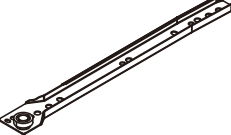
				 M 3.5*12					
4	x1	A	x4	D	x12	CR	x3	CL	x3

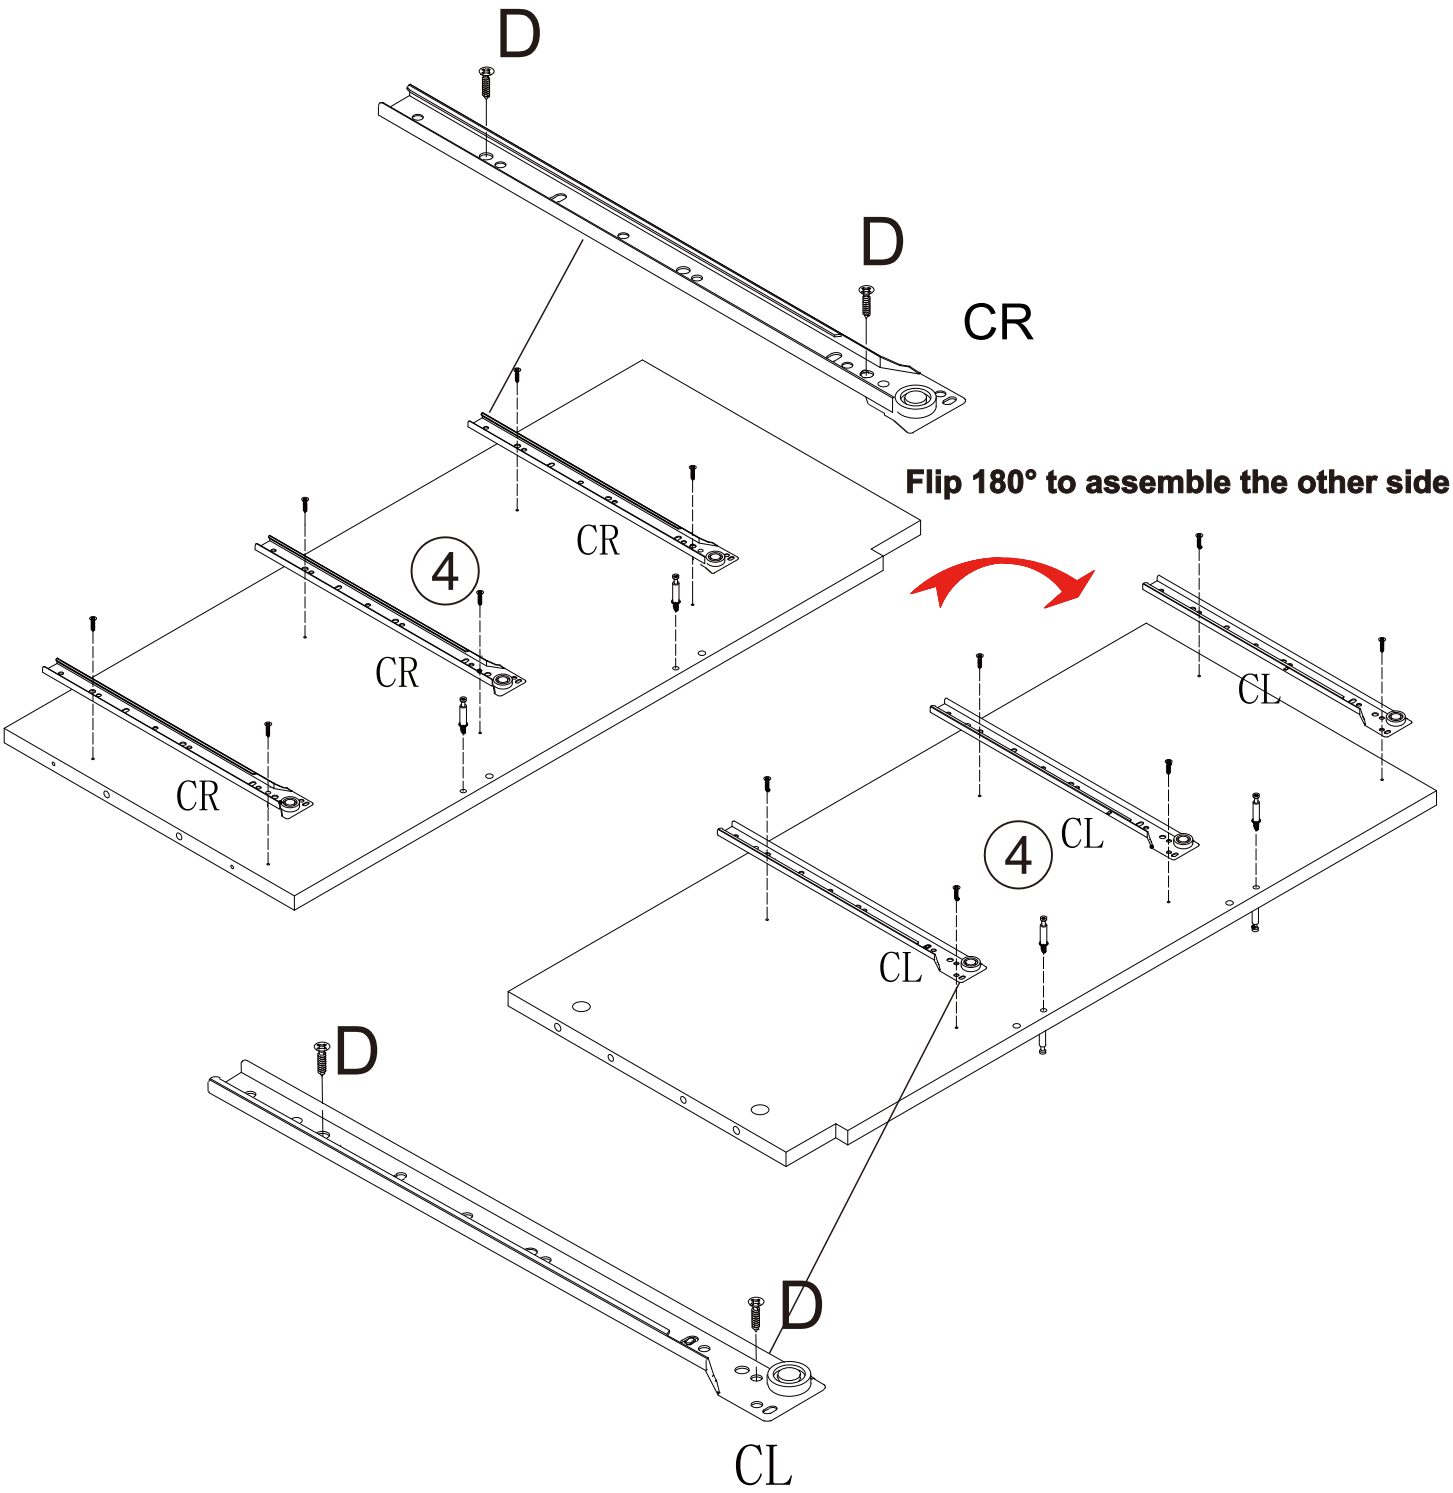

Assembly Manual




6


10	x1	11	x1	12	x1	A	x1	B	x1
A						C	x2	E	M4*35 x1

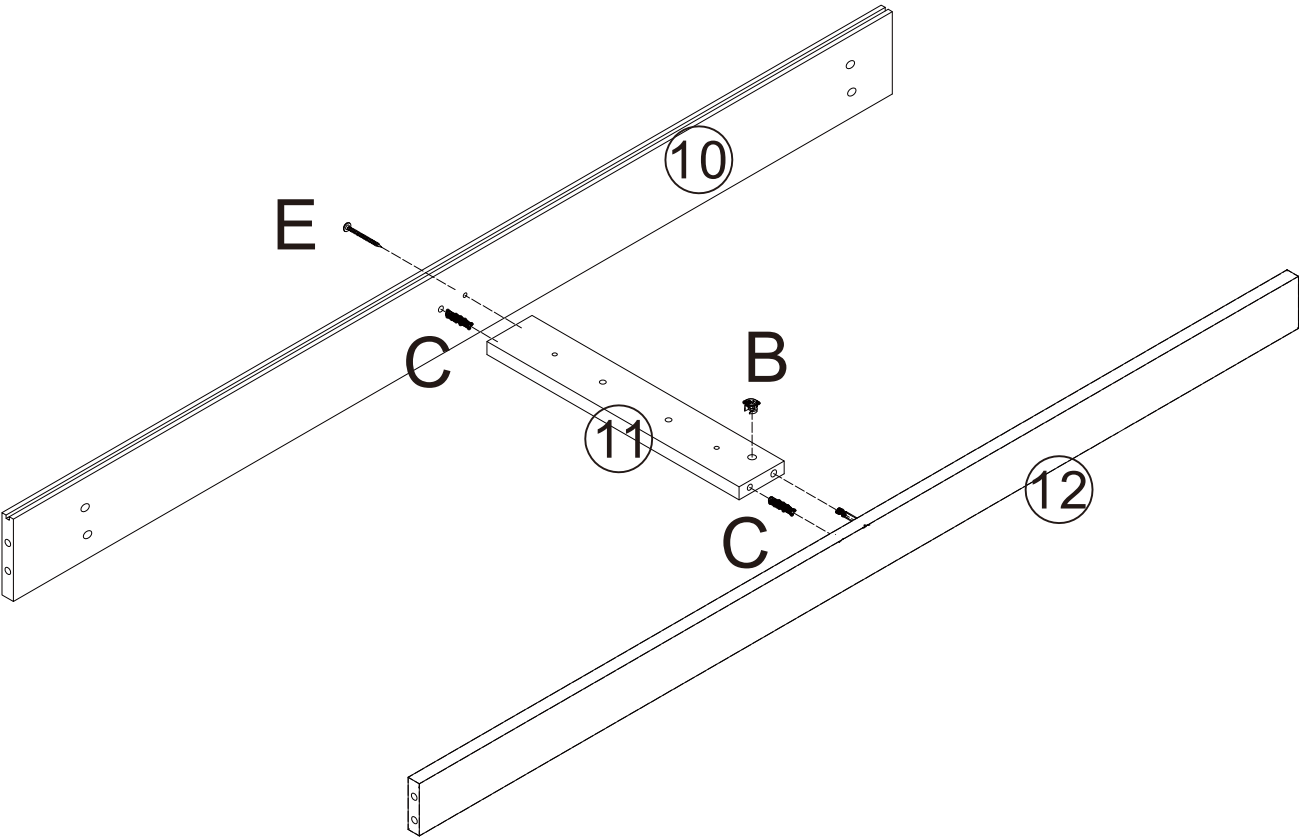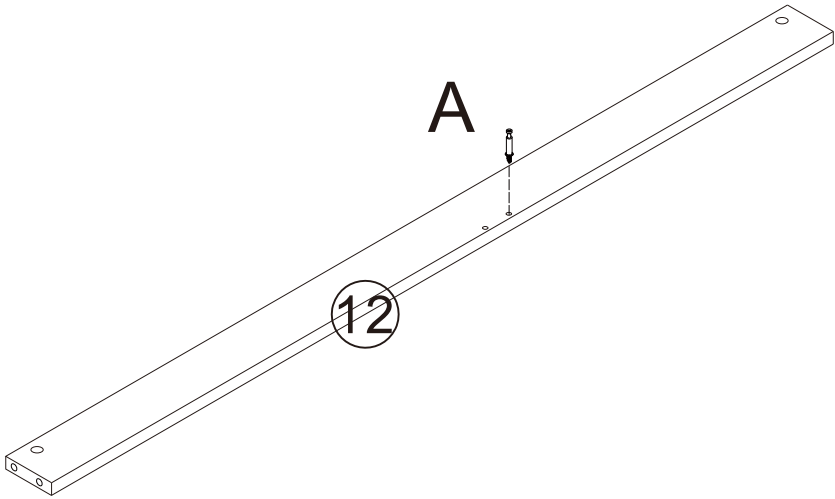

Assembly Manual



7

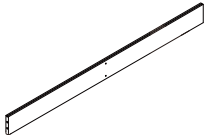
				 M4*35	
8	x1	C	x2	E	x4

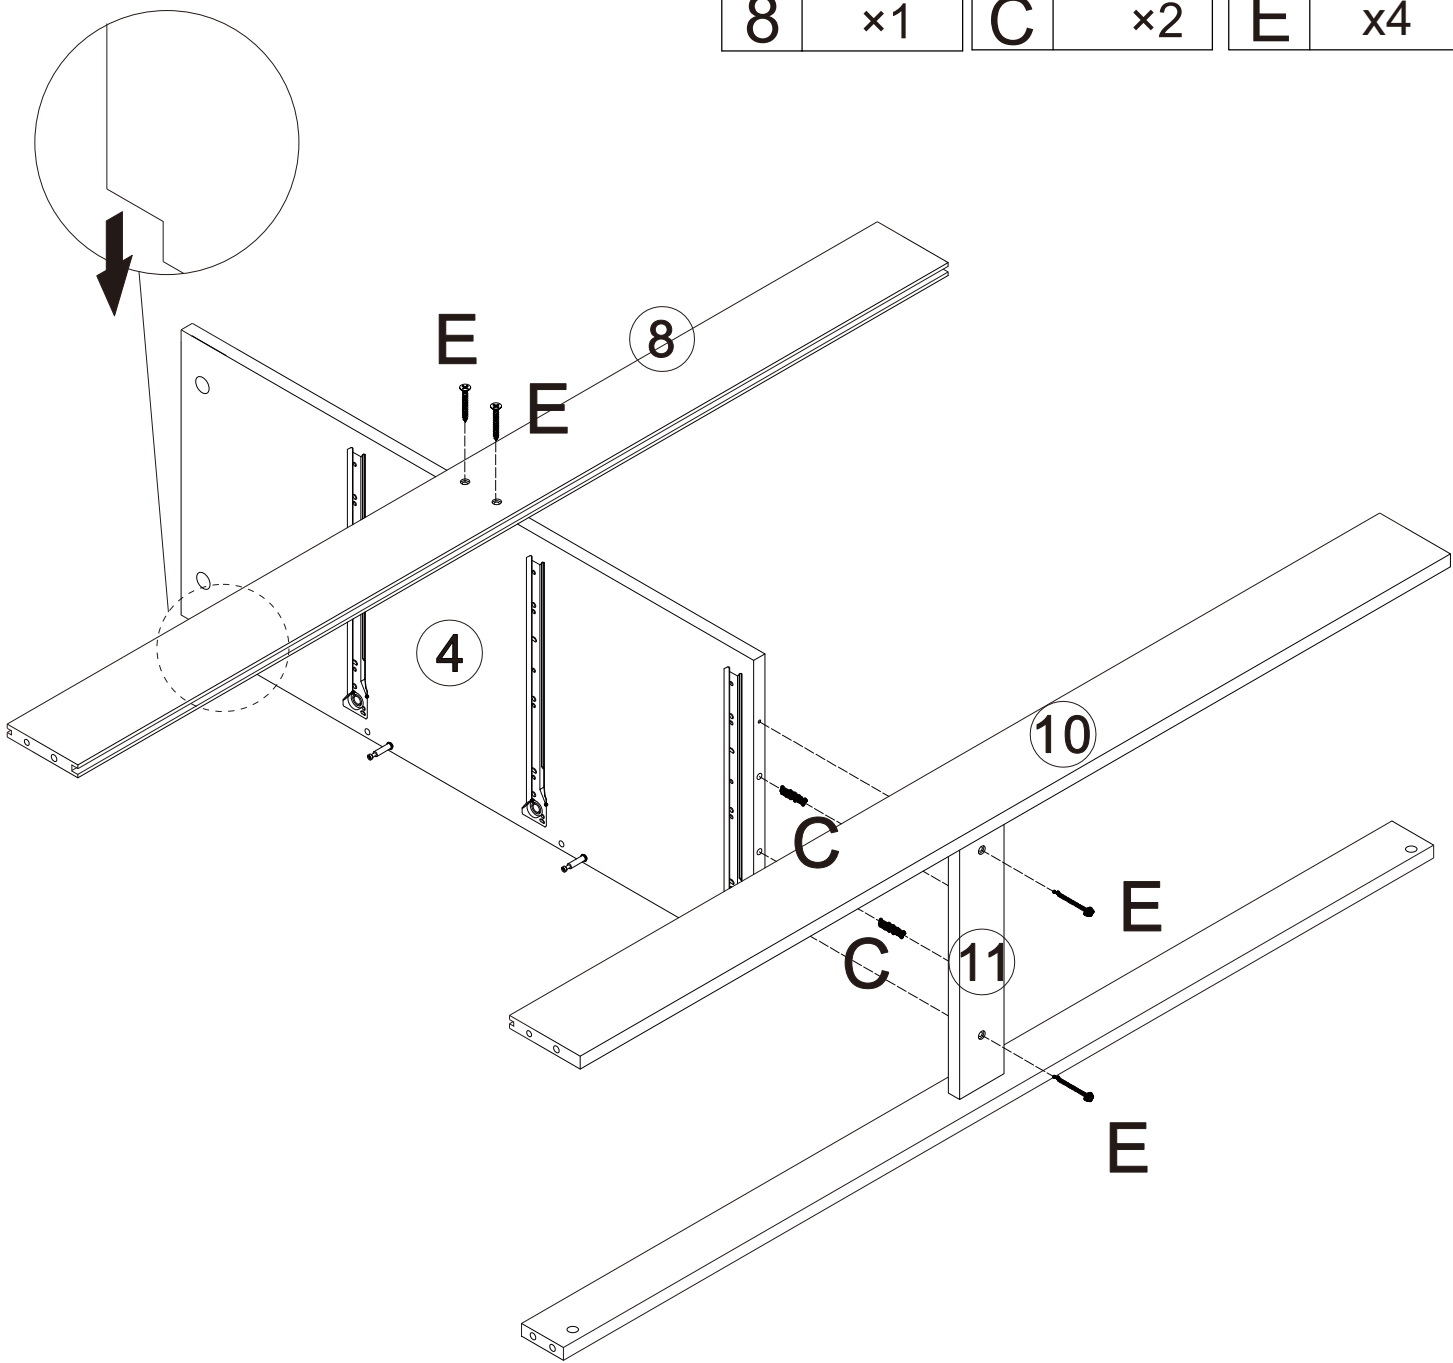

Assembly Manual



8

					
9	x2	C	x5	B	x9

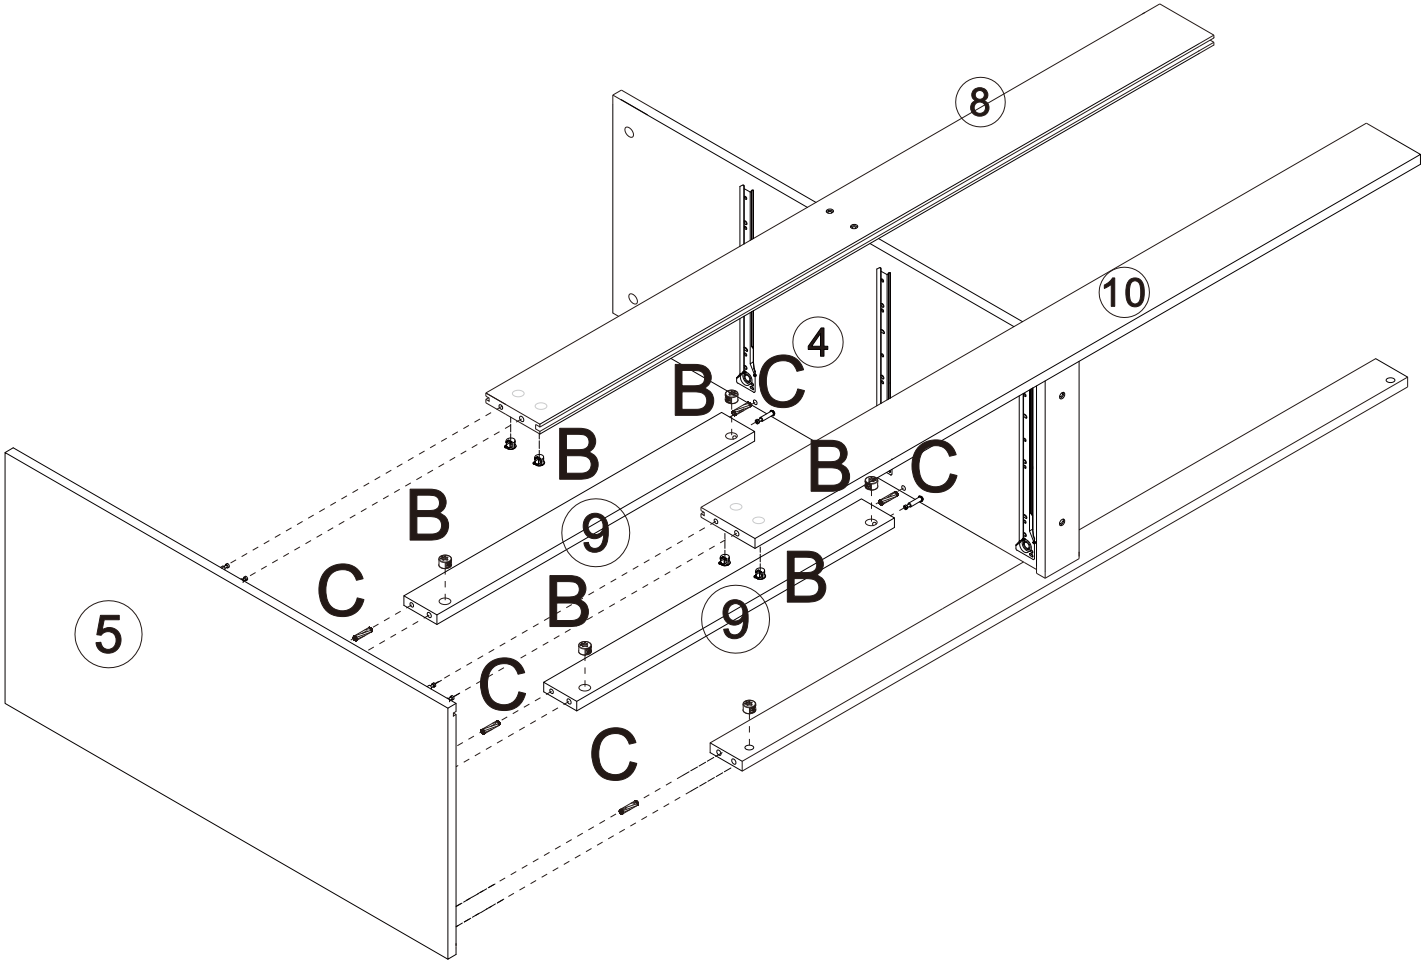



Assembly Manual


9

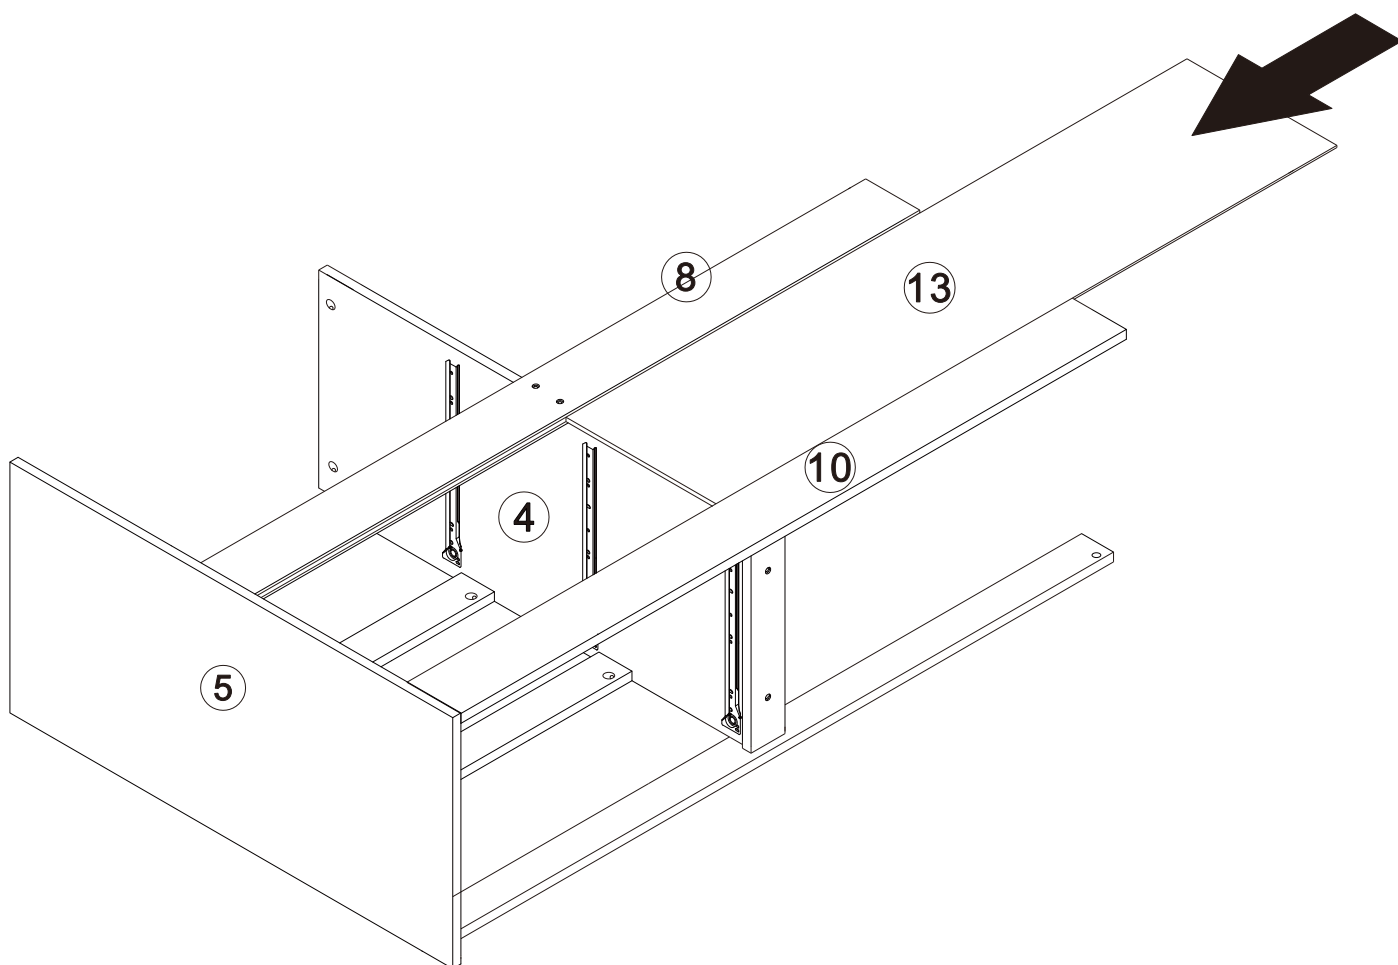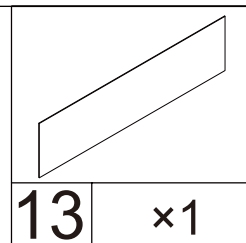

Assembly Manual






10

					
9	x2	C	x5	B	x9

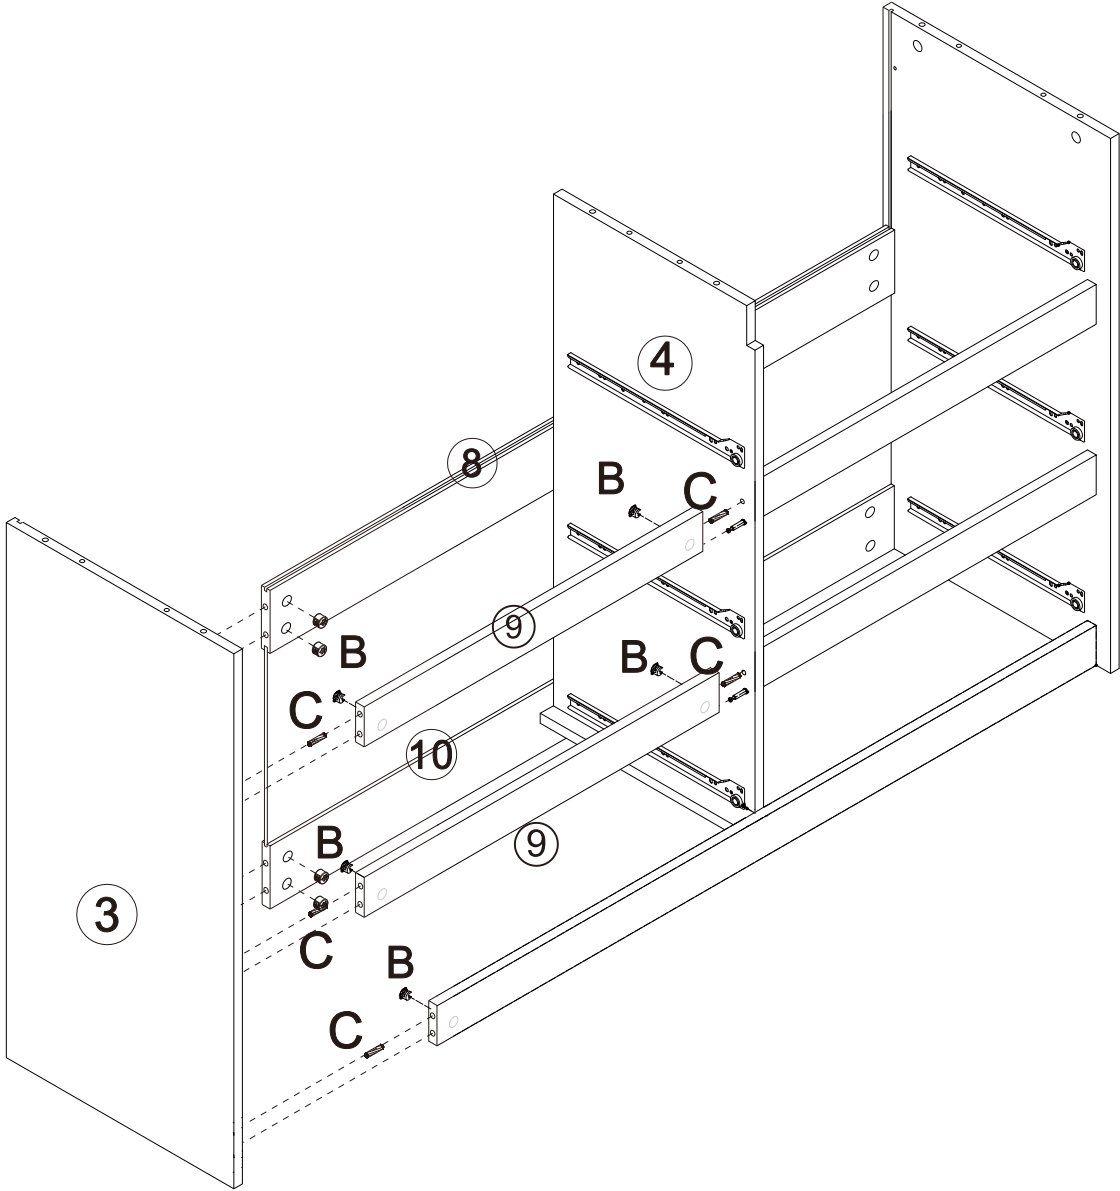


Assembly Manual

11

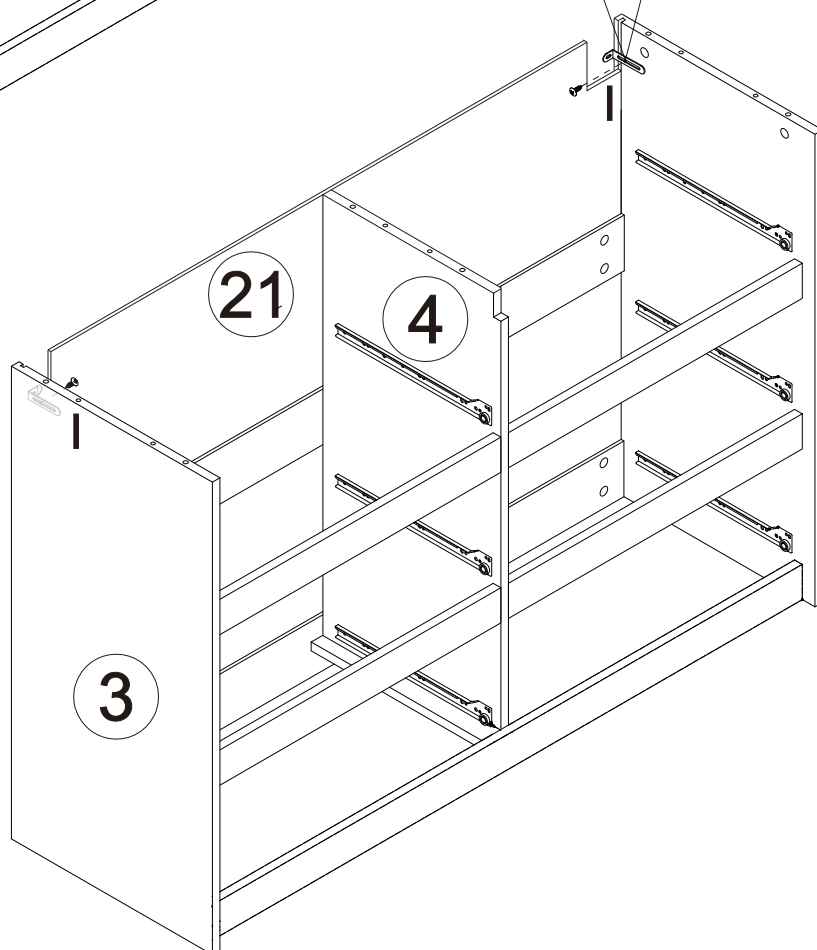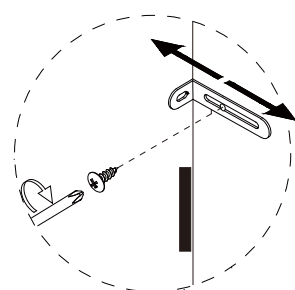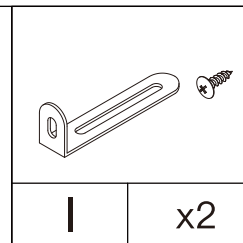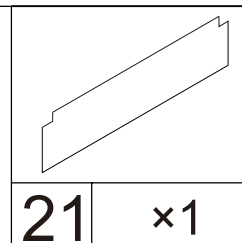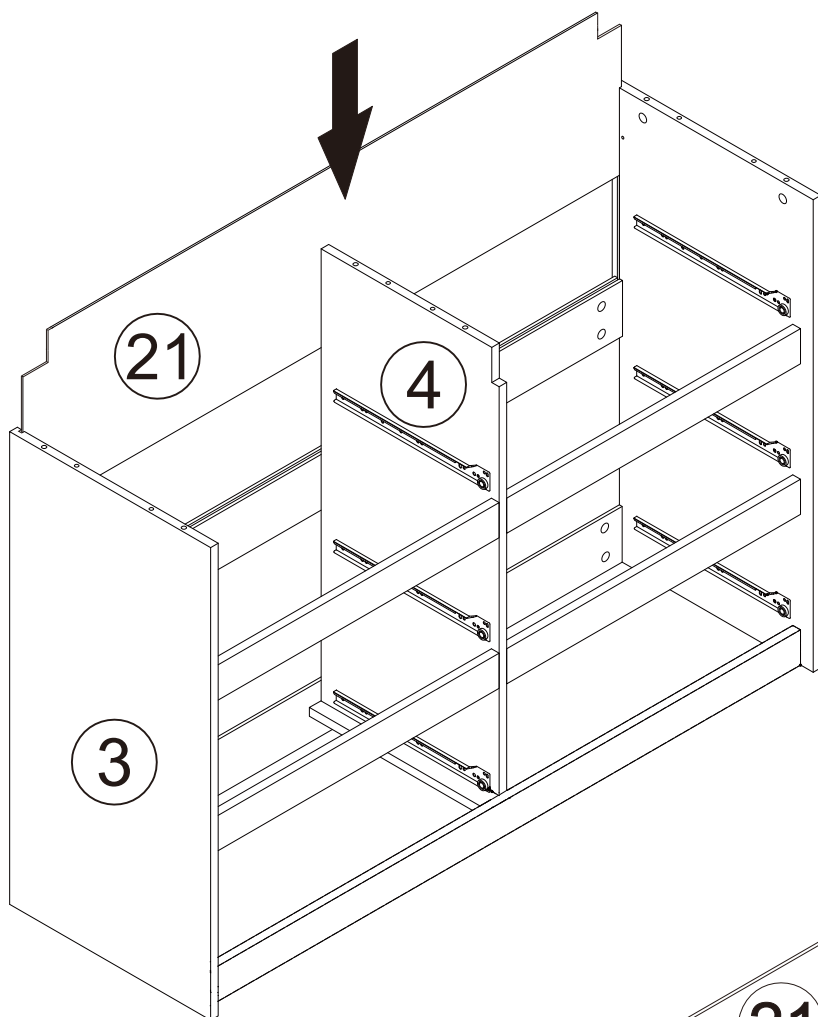


Assembly Manual

12

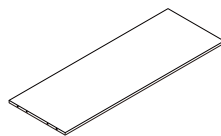


1

x1





2

x2

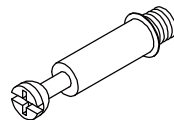

A

x16


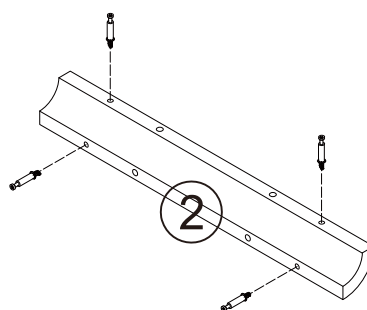
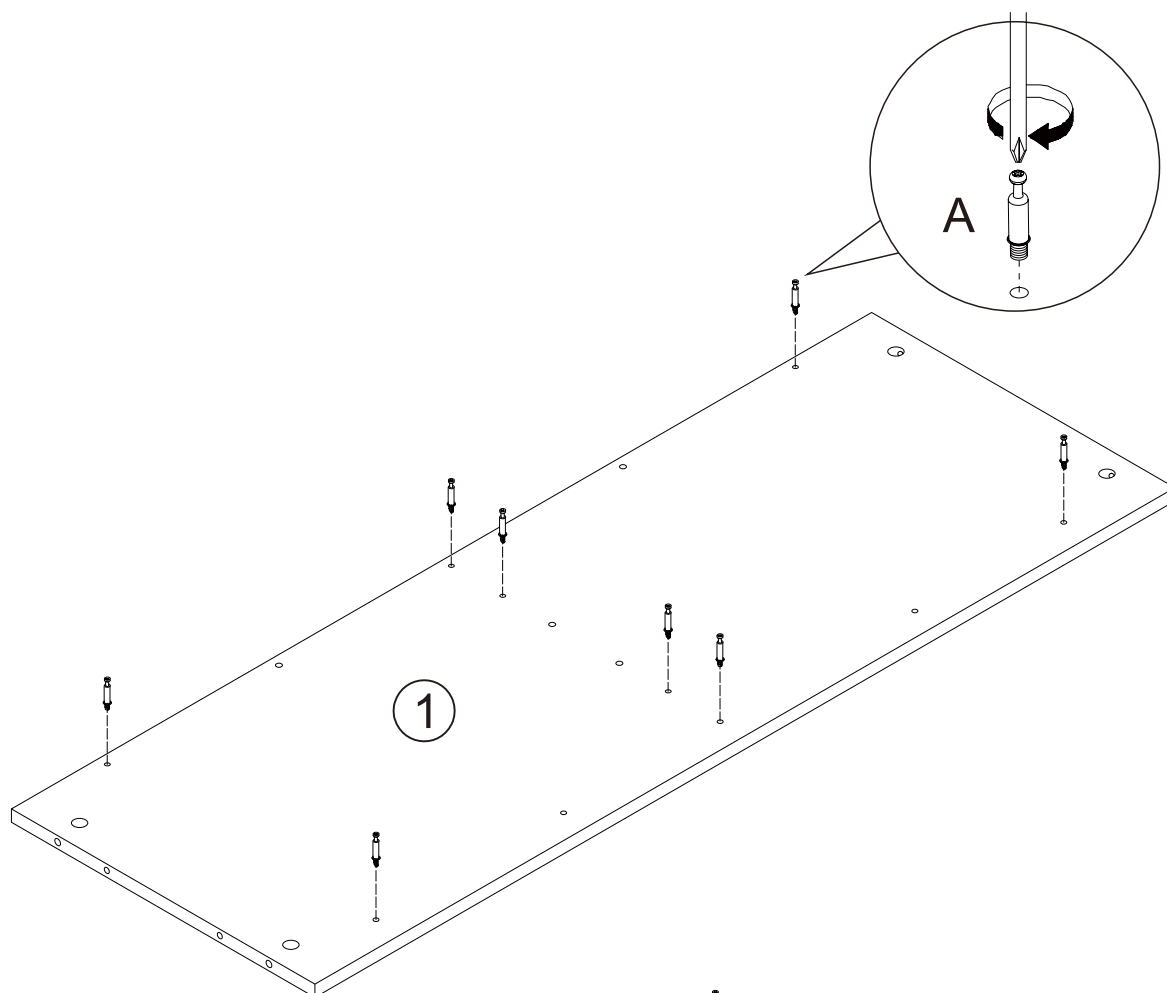


2


x2

Assembly Manual

13

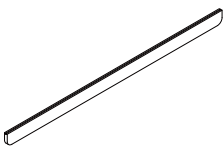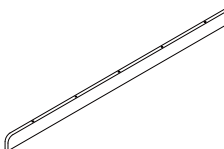
							
6	x1	7	x1	C	x8	B	x10


Note that the groove plate is No. 6.

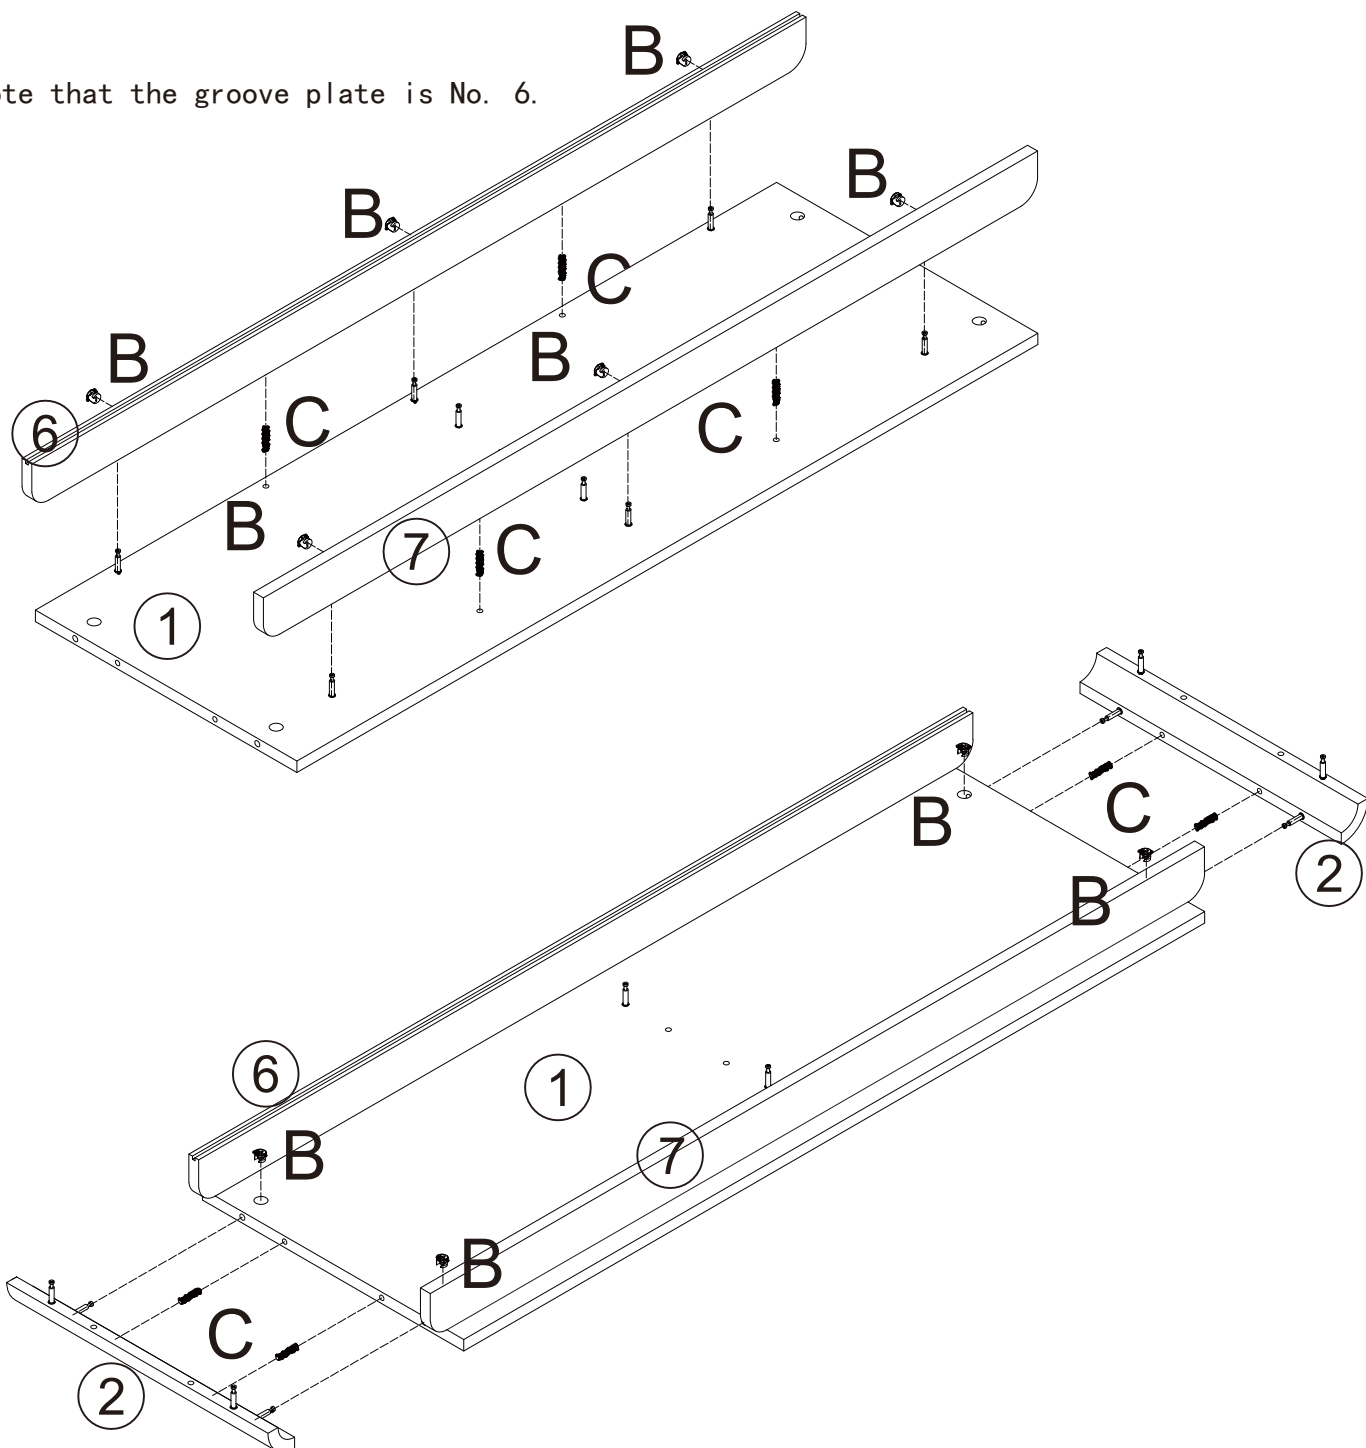

Assembly Manual


14

			
C	x6	B	x6

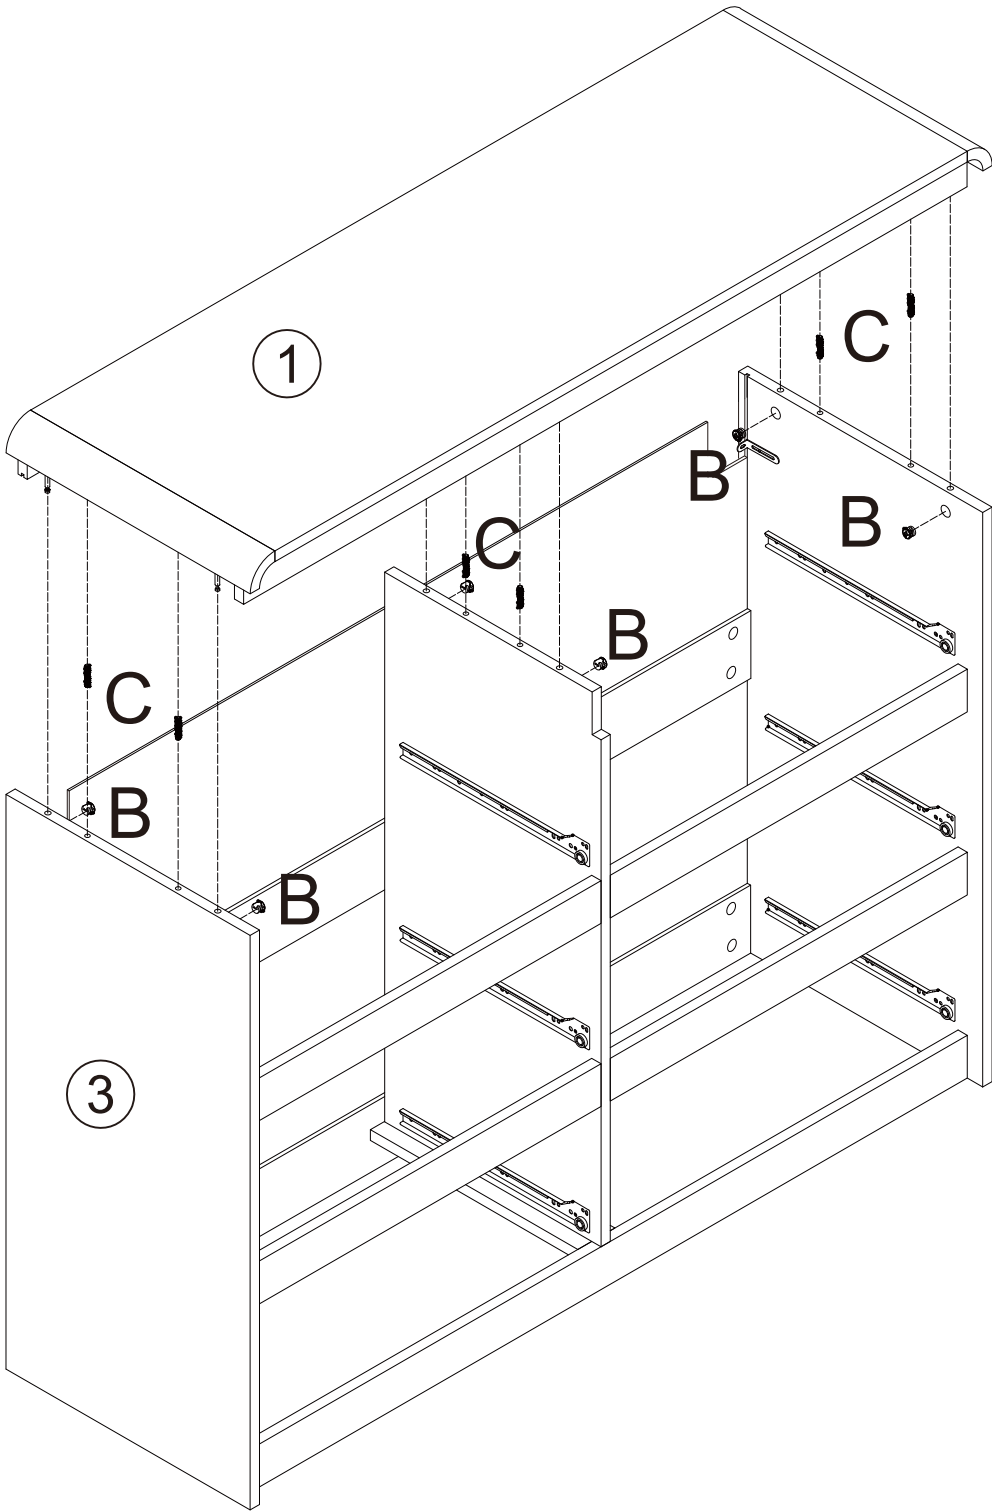

Assembly Manual

15



H




x8



M3*14


F

x8


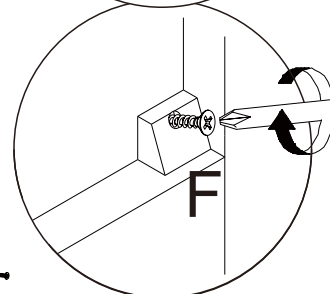
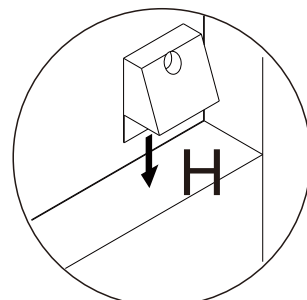
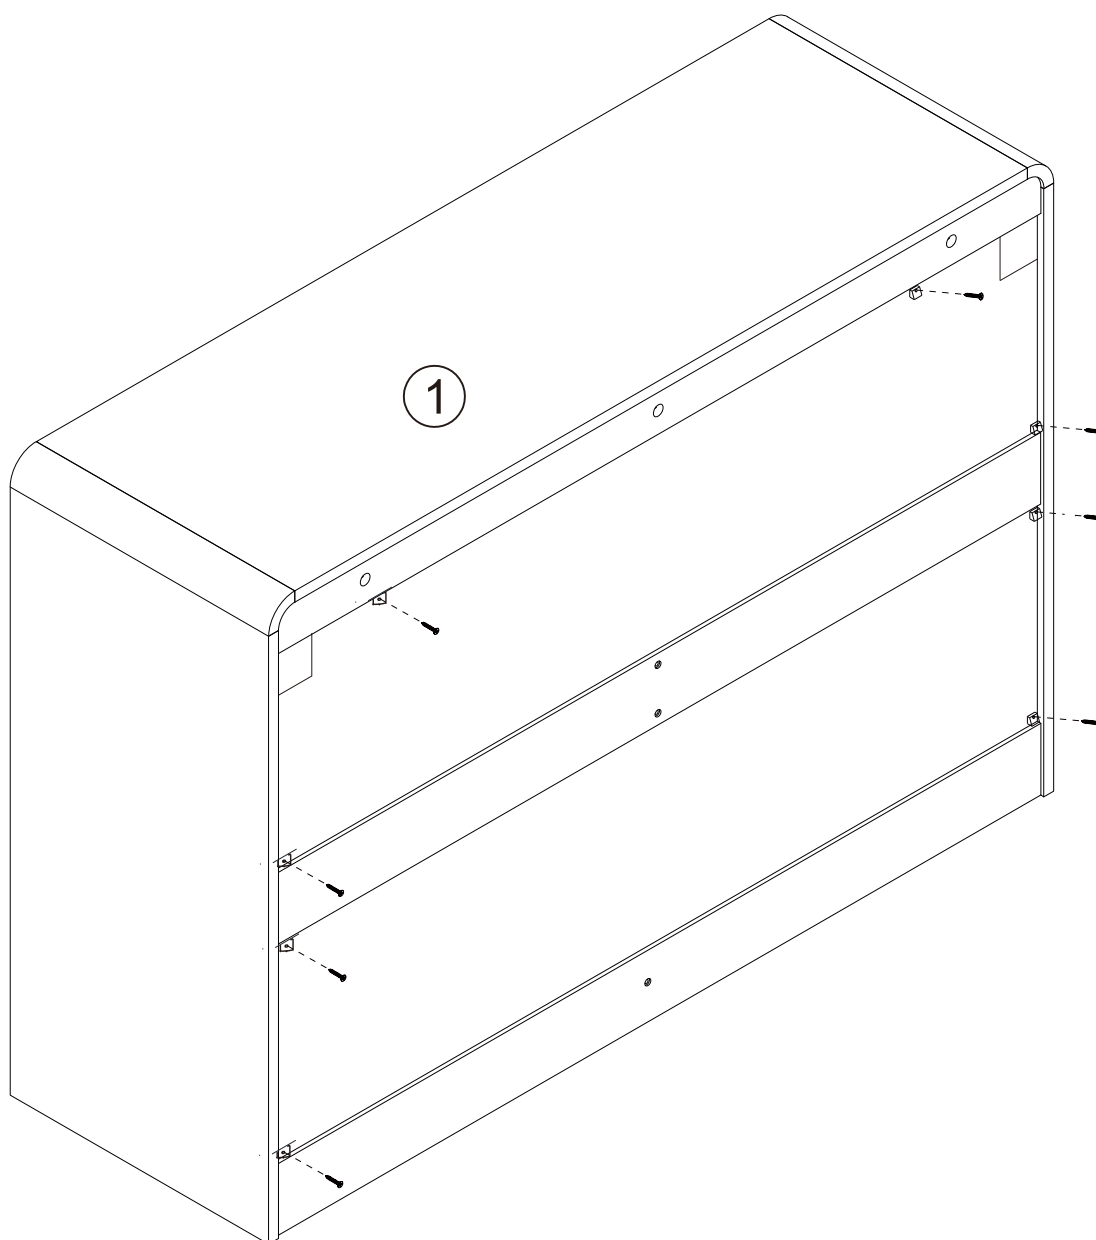


Assembly Manual

16




J x2

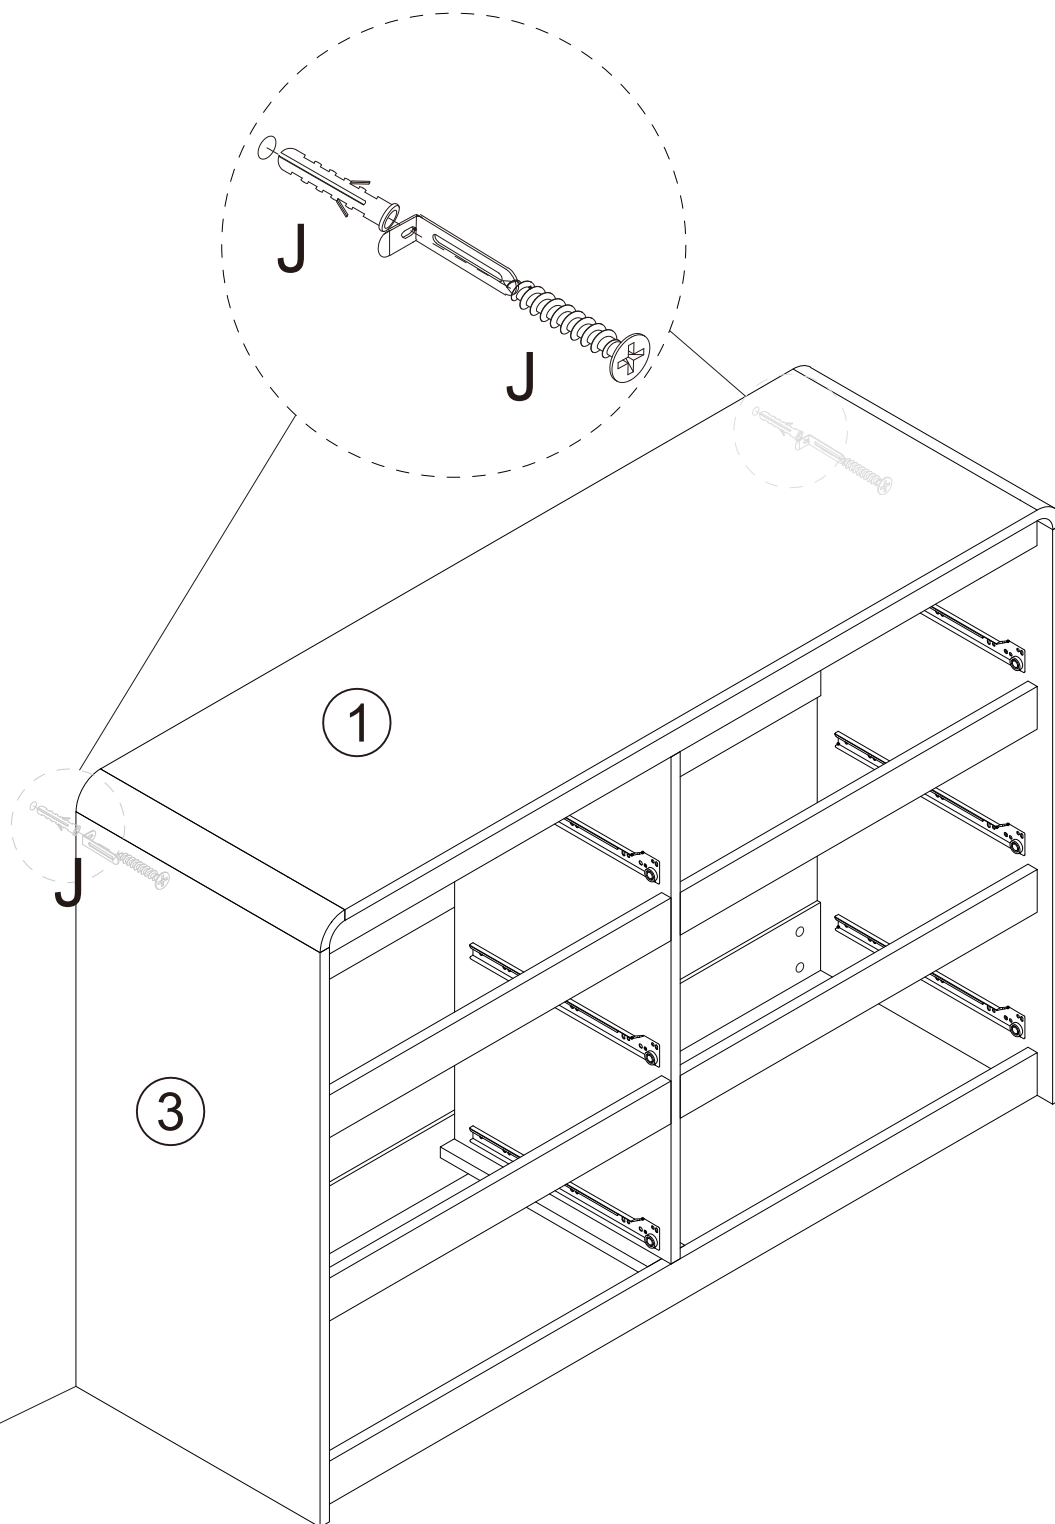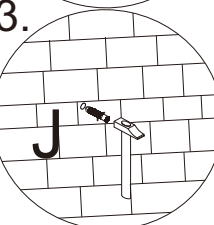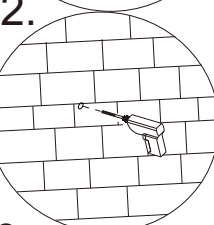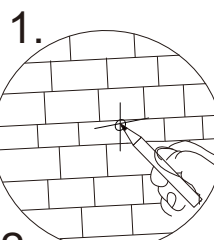

Assembly Manual

17

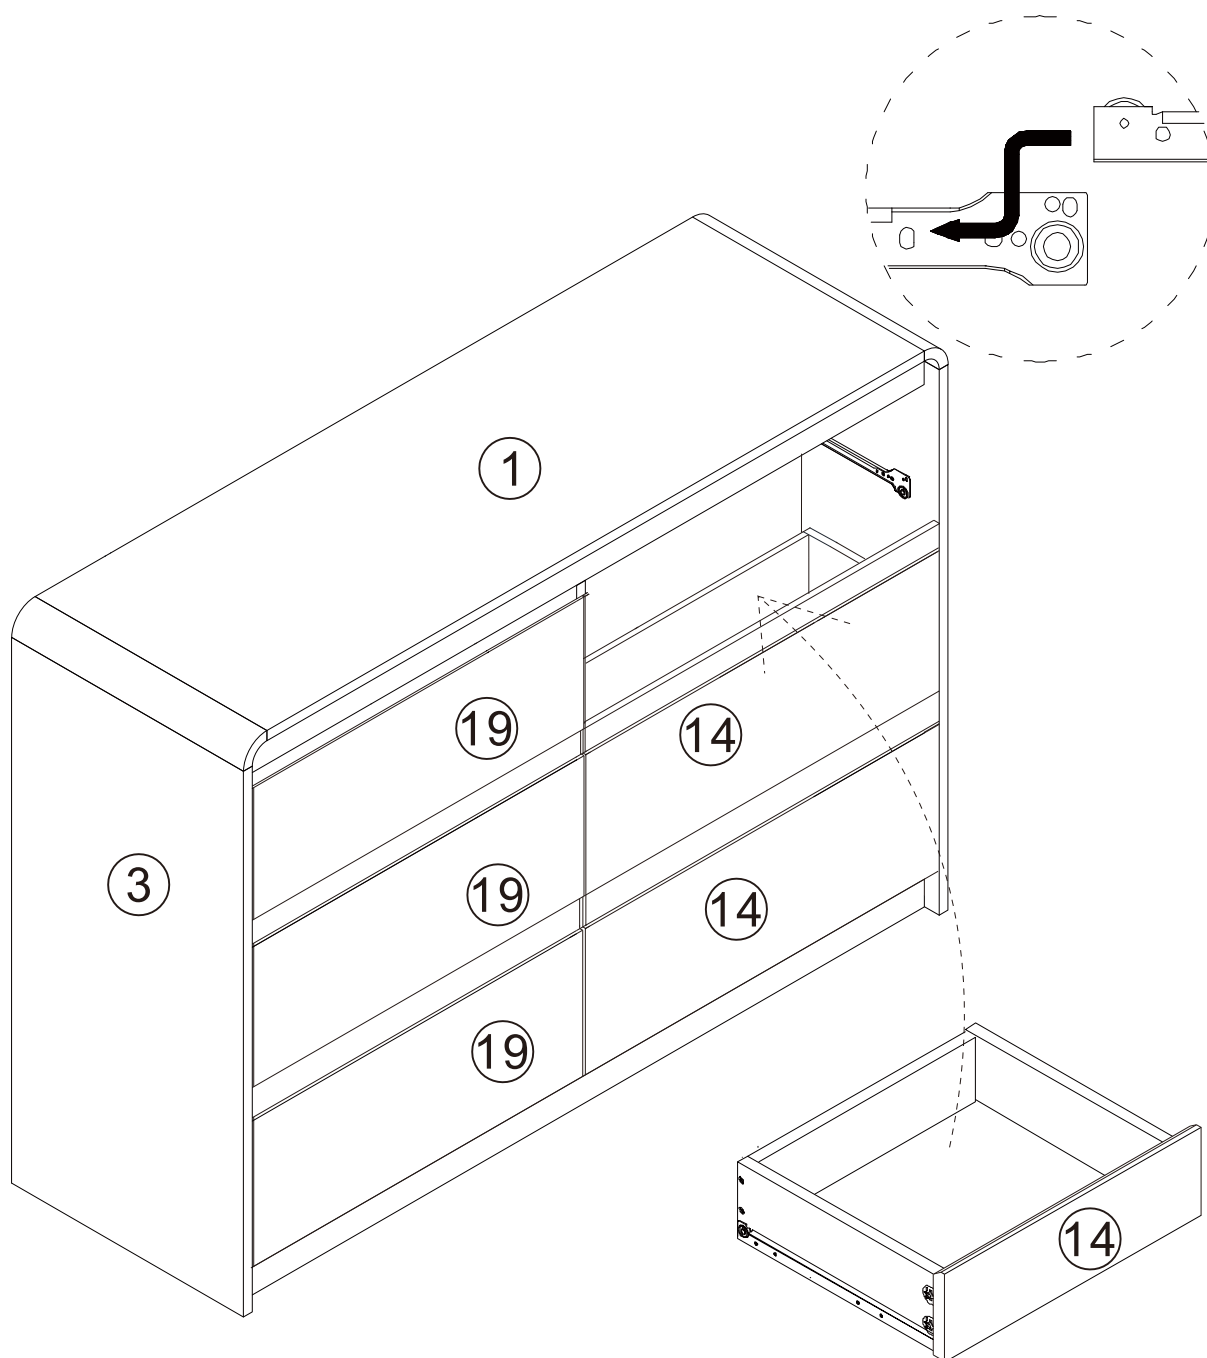

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit**. **Consult a qualified tradesperson if you are unsure.**


Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

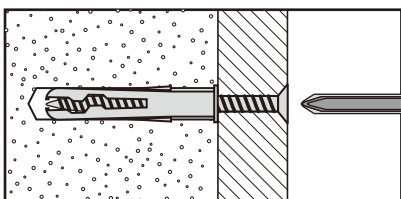


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

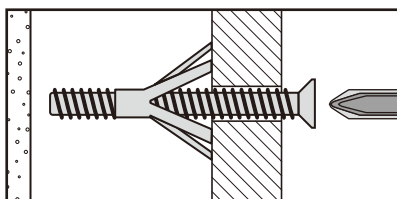


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

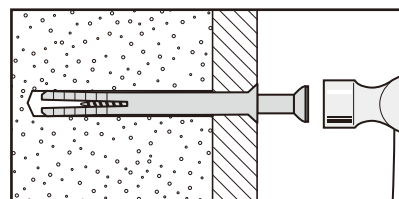


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

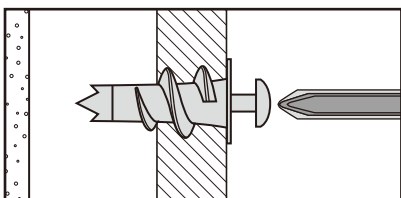


For use when attaching light loads onto plasterboard partitions.

No.4 "Cavity Fixing – Heavy Duty" wall plug

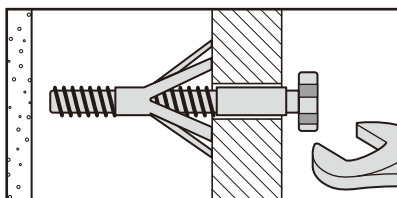

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 "Shield Anchor" wall plug – heavy loads

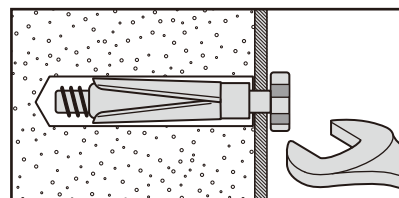

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.