
8.20 ft × 8.20 ft × 7.87ft WQOT329

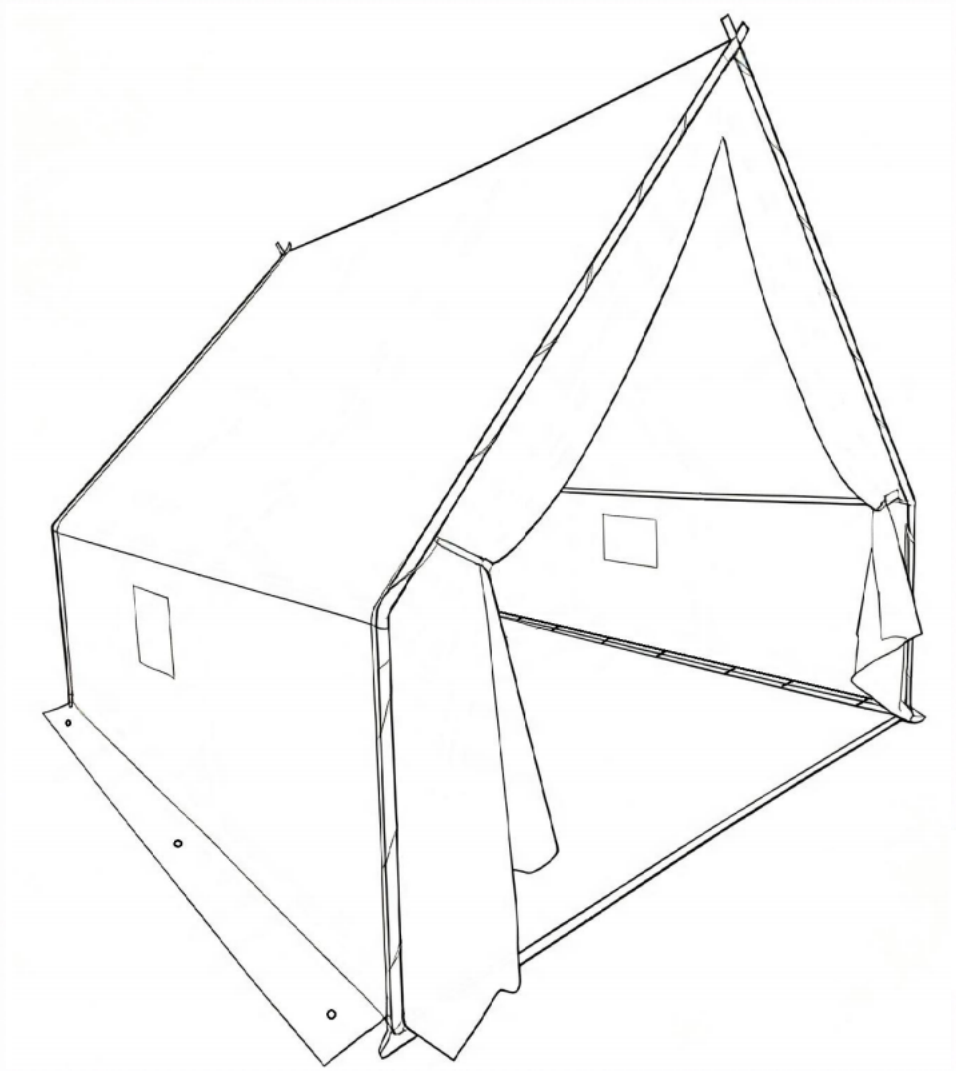

Installation instructions

⚠ Safety Warning:

Never work alone when using ladder for high- altitude assembly. Two- person operation is mandatory: one person works on ladder, another person holds and guards ladder on ground to avoid slipping or tipping- over. Place ladder on firm and flat ground. Do not stand on the top two rungs of ladder.

SEVERAL ATTEMPTS


- When you install this product, please refer to the following diagram.
- the following tools are not included and needed for assembly.




Ladder




scissors

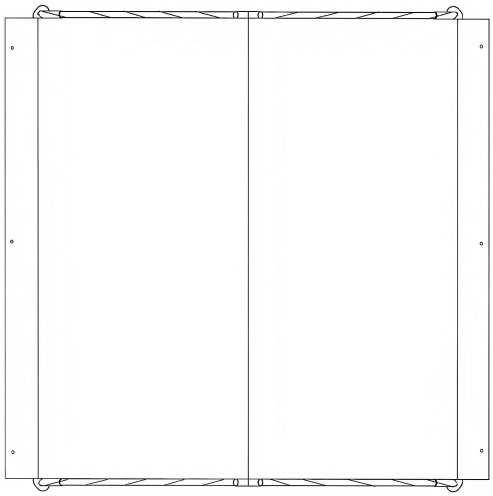

Top

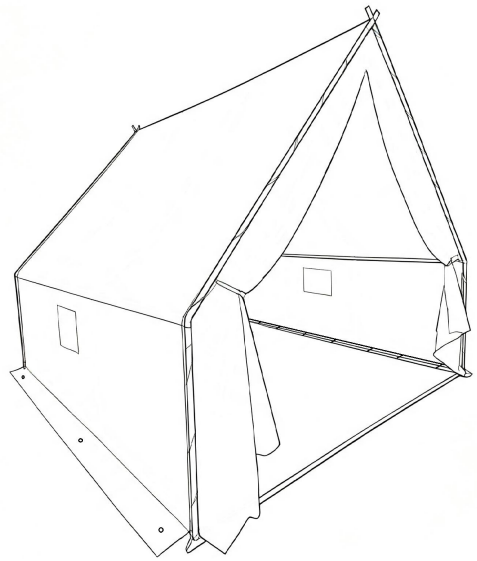


Left

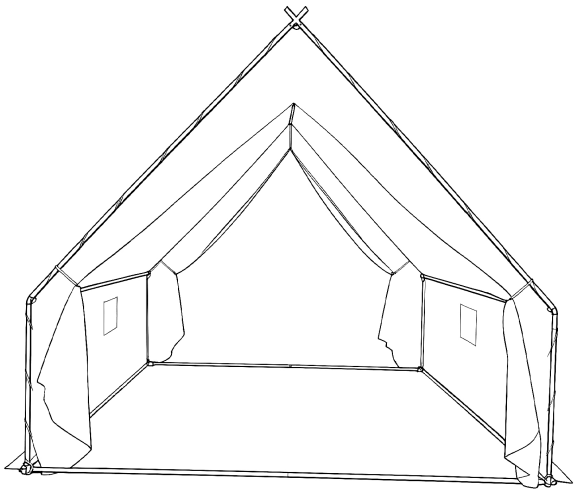

Front


ACCESSORIES LIST Hardware Included




A
(2PCS)




B
(4PCS)

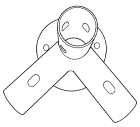


C
(4PCS)




D
(7PCS)



E
(4PCS)




F
(4PCS)



G
(7PCS)



H
1PC



1
(30PCS)



2
(30PCS)




3
(1PC)



4
(4PCS)



5
(10PCS)



6
(2PCS)




7
(2PCS)

ACCESSORIES LIST Hardware Included

Part	Description	Quantity
A	5-way top connector	2
B	3-way connector	4
C	Base 3-way hub	4
D	ϕ38×855mm short cross tube (single-telescoping)	7
E	ϕ38×1085mm upright tube (double-telescoping)	4
F	ϕ38×1560mm top diagonal tube (double-telescoping)	4
G	ϕ38×1560mm long cross tube (double-telescoping, with spring-loaded ball)	7
H	Tent canopy	1
1	8×45 screw	30
2	Nut	30
3	30m long rope	1
4	1.85m guy rope	4
5	L-shaped ground peg	10
6	Wrench	2
7	Gloves	2

EXPLODED VIEW

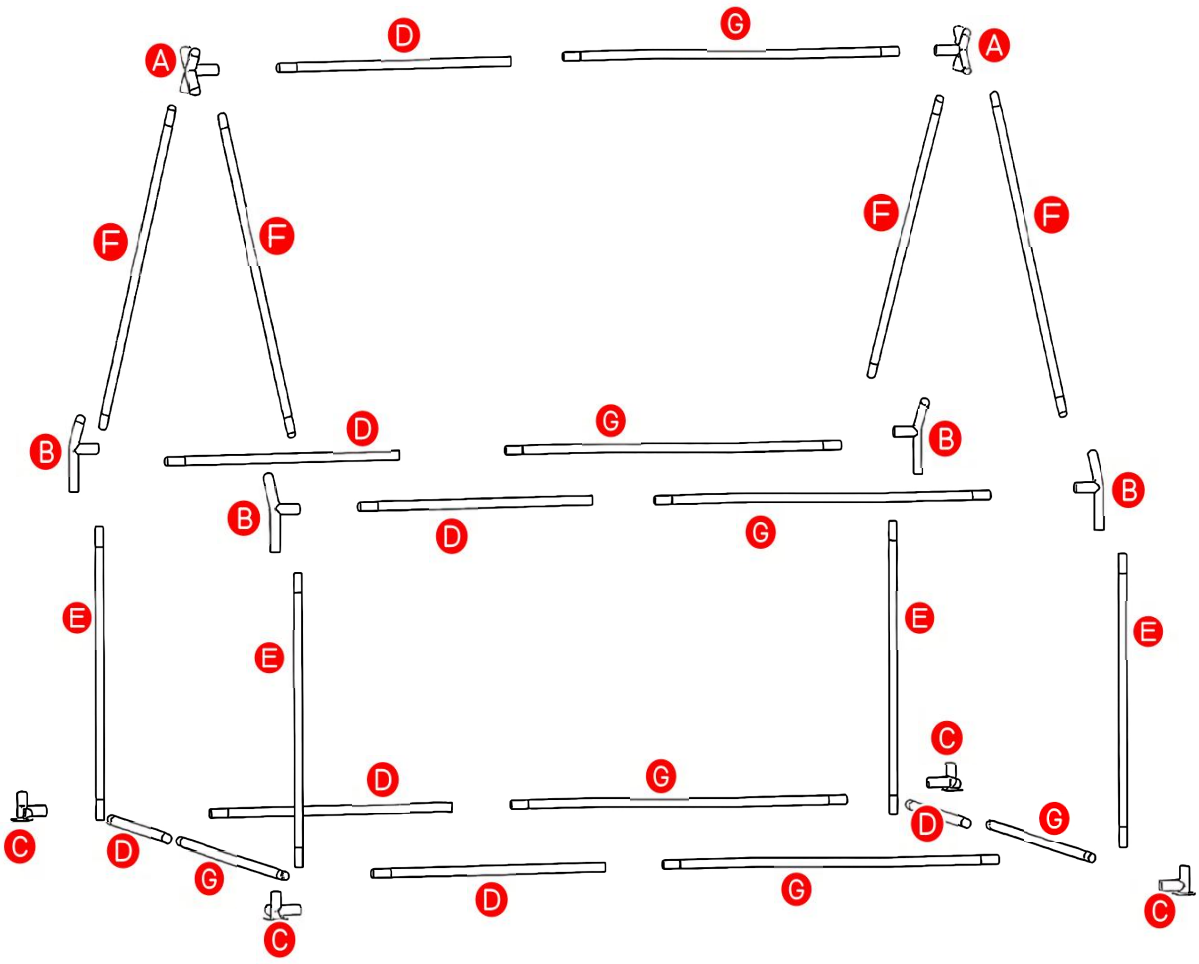

ASSEMBLY STEP ①

MANDATORY: Wear gloves during assembly.


1. Align the two holed legs of the top five-way connector A with the connecting holes of tube F respectively;
2. Insert Screw 1 and fit Nut 2;
3. Tighten the nuts with a wrench to lock the joints. Set aside for later assembly.



A (2PCS)




F (4PCS)

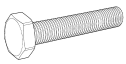

1 (4PCS)




2 (4PCS)




6 (2PCS)



7 (2PCS)

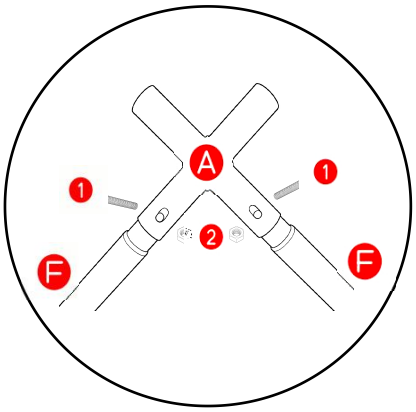

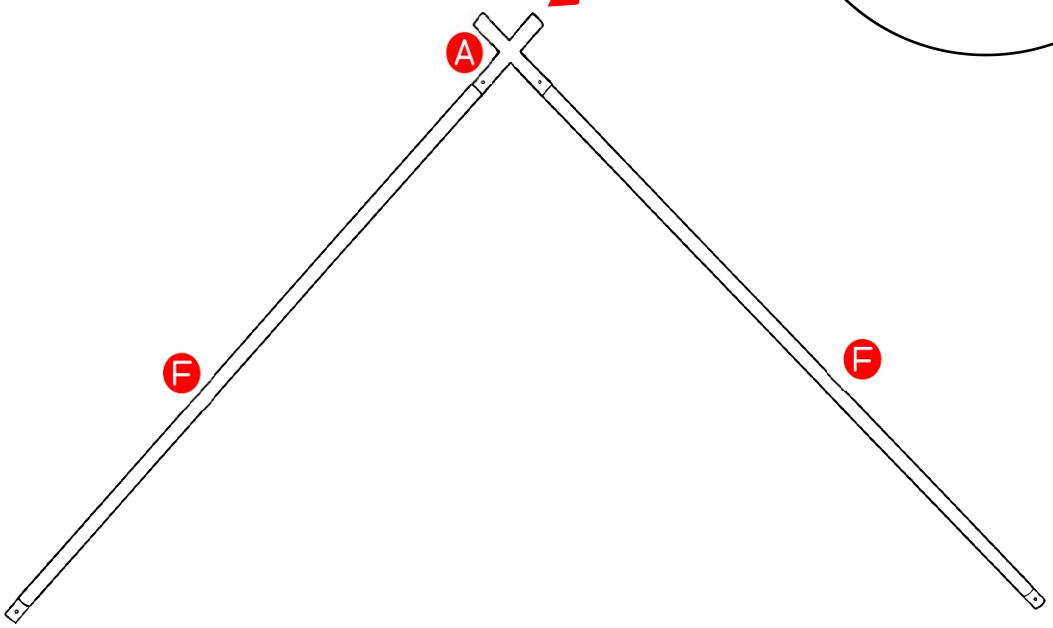

X 2

ASSEMBLY STEP ②


MANDATORY: Wear gloves during assembly.

1. Butt- connect Tube G (with built- in spring clip) to the plain- end of Tube D;
2. Secure tube D with the built-in spring clip of tube G to complete the insertion; set aside for later use after assembly.



Ⓓ

(7PCS)

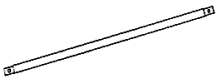


Ⓖ

(7PCS)



❼

(2PCS)



× 7

ASSEMBLY STEP 3

MANDATORY: Wear gloves during assembly.

1. Lay out the tent canopy on a clean surface. Pass the pre- assembled DG steel tube assembly through the top opening of tent canopy H. Align the hole- ended side of 5-way top connector A on the two pre- assembled AF assemblies with the connecting holes. Insert screw Part 1 by hand, then fit nut Part 2 using wrench Part 6 to secure the connection.

2. As shown in the figure, connect the lower ends of tube F from the two AF assemblies to 3- way connector B respectively. Align the middle port of 3- way connector B with the mounting hole on the DG assembly, ensuring the middle ports of part B face inward. Insert screw Part 1, then fit nut Part 2 using wrench Part 6 for connection.



B (4PCS)




H 1PC



1 (10PCS)




2 (10PCS)



6 (2PCS)




7 (2PCS)

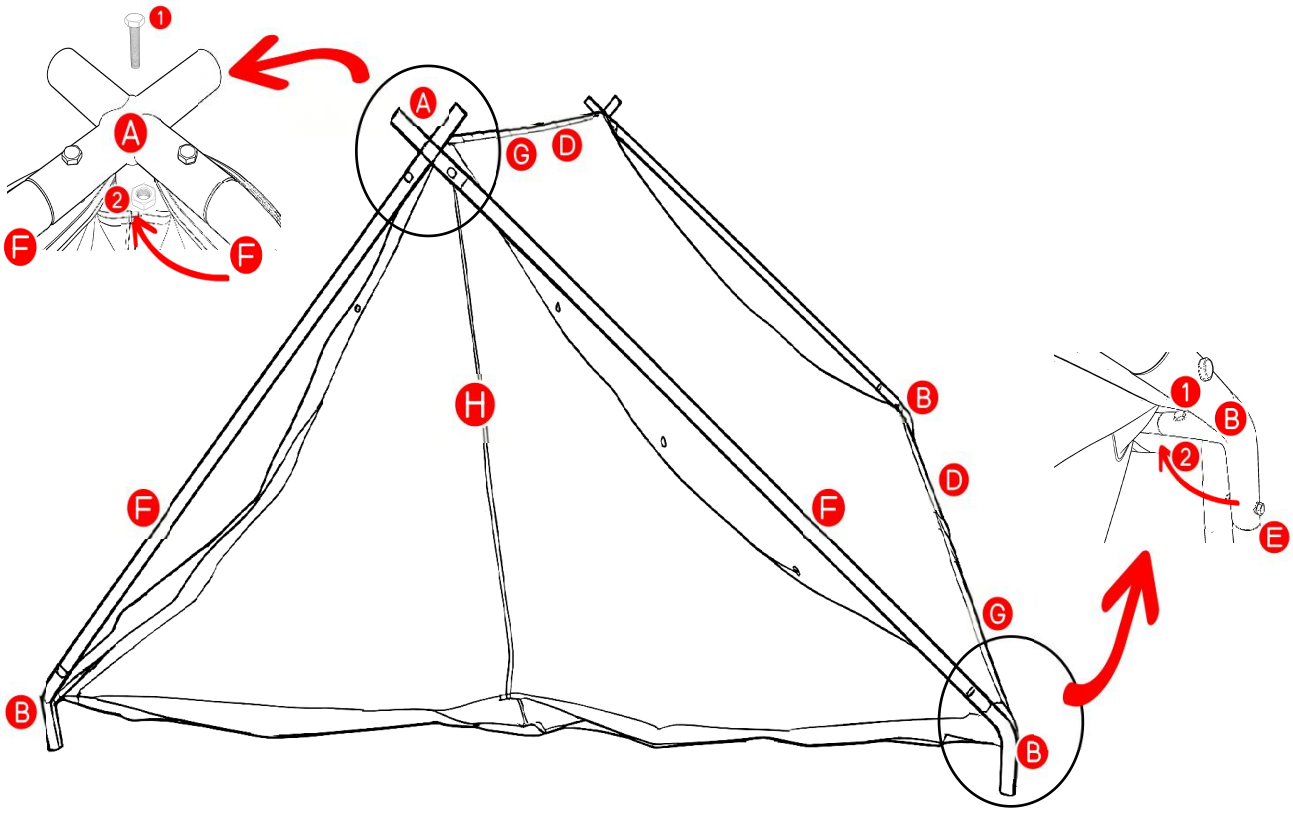

ASSEMBLY STEP 4

MANDATORY: Wear gloves during assembly.


1. Connect the lower port of 3- way connector B to upright tube E. Connect the lower end of upright tube E to base 3- way connector C.
2. Attach the DG assembly to base 3- way connector C. Connect the remaining three pre-assembled DG tube sections to one another via base 3- way connector C to form the bottom frame.
3. Align the connecting holes, insert screw Part 1, and fit nut Part 2 with wrench Part 6 to secure the frame.



C (4PCS)



E (4PCS)




1 (16PCS)




2 (16PCS)



5 (2PCS)



6 (2PCS)

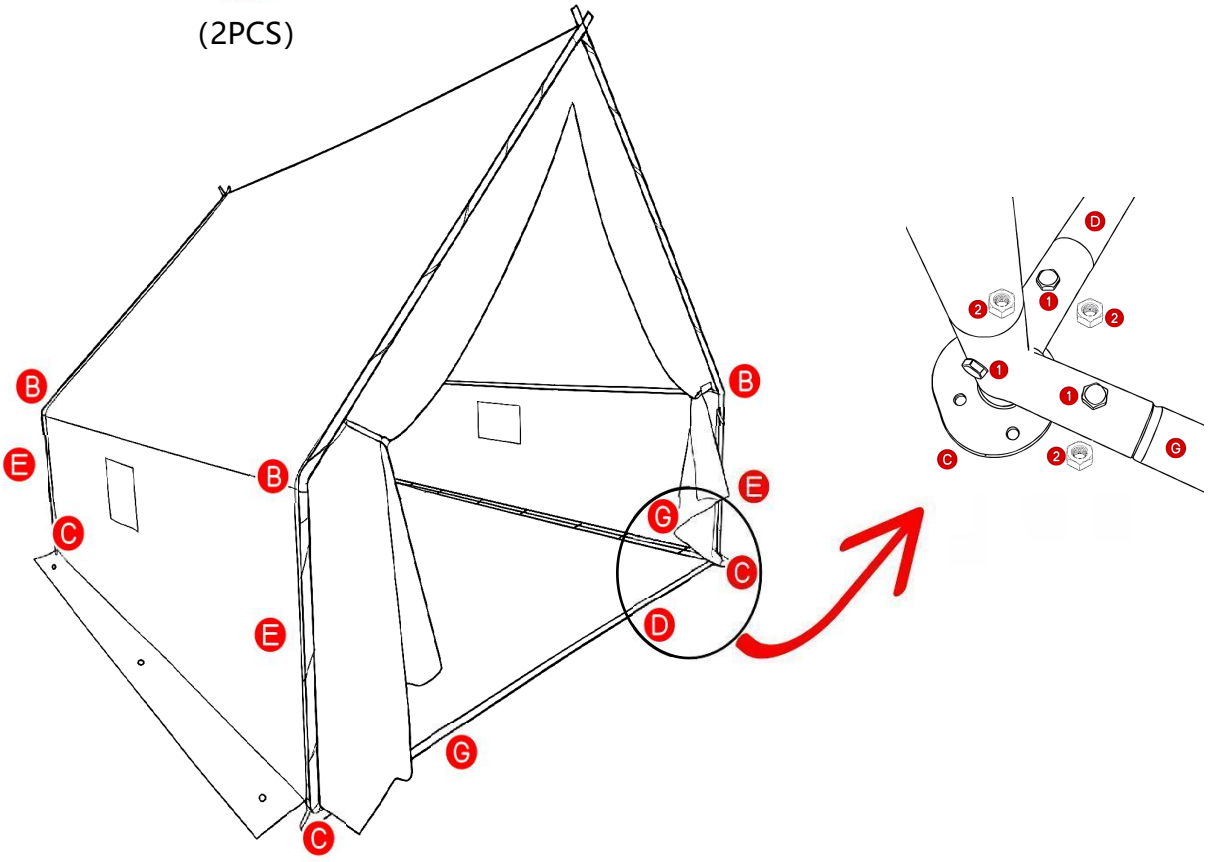

ASSEMBLY STEP 5

MANDATORY: Wear gloves during assembly. Use a ladder for overhead work.

1. Cut rope Part 3 into two equal sections with scissors. Take one section and wrap it circularly following the arrow. Wrap both tent webbing and metal pole together. Keep the rope tight while wrapping, and continue down to bottom position C to firmly secure the tent fabric on the frame.
2. Take the other cut rope section, follow the same circular- wrapping method along the arrow, and wrap down to bottom position C to finish fixation.




3

(1PC)



5

(2PCS)

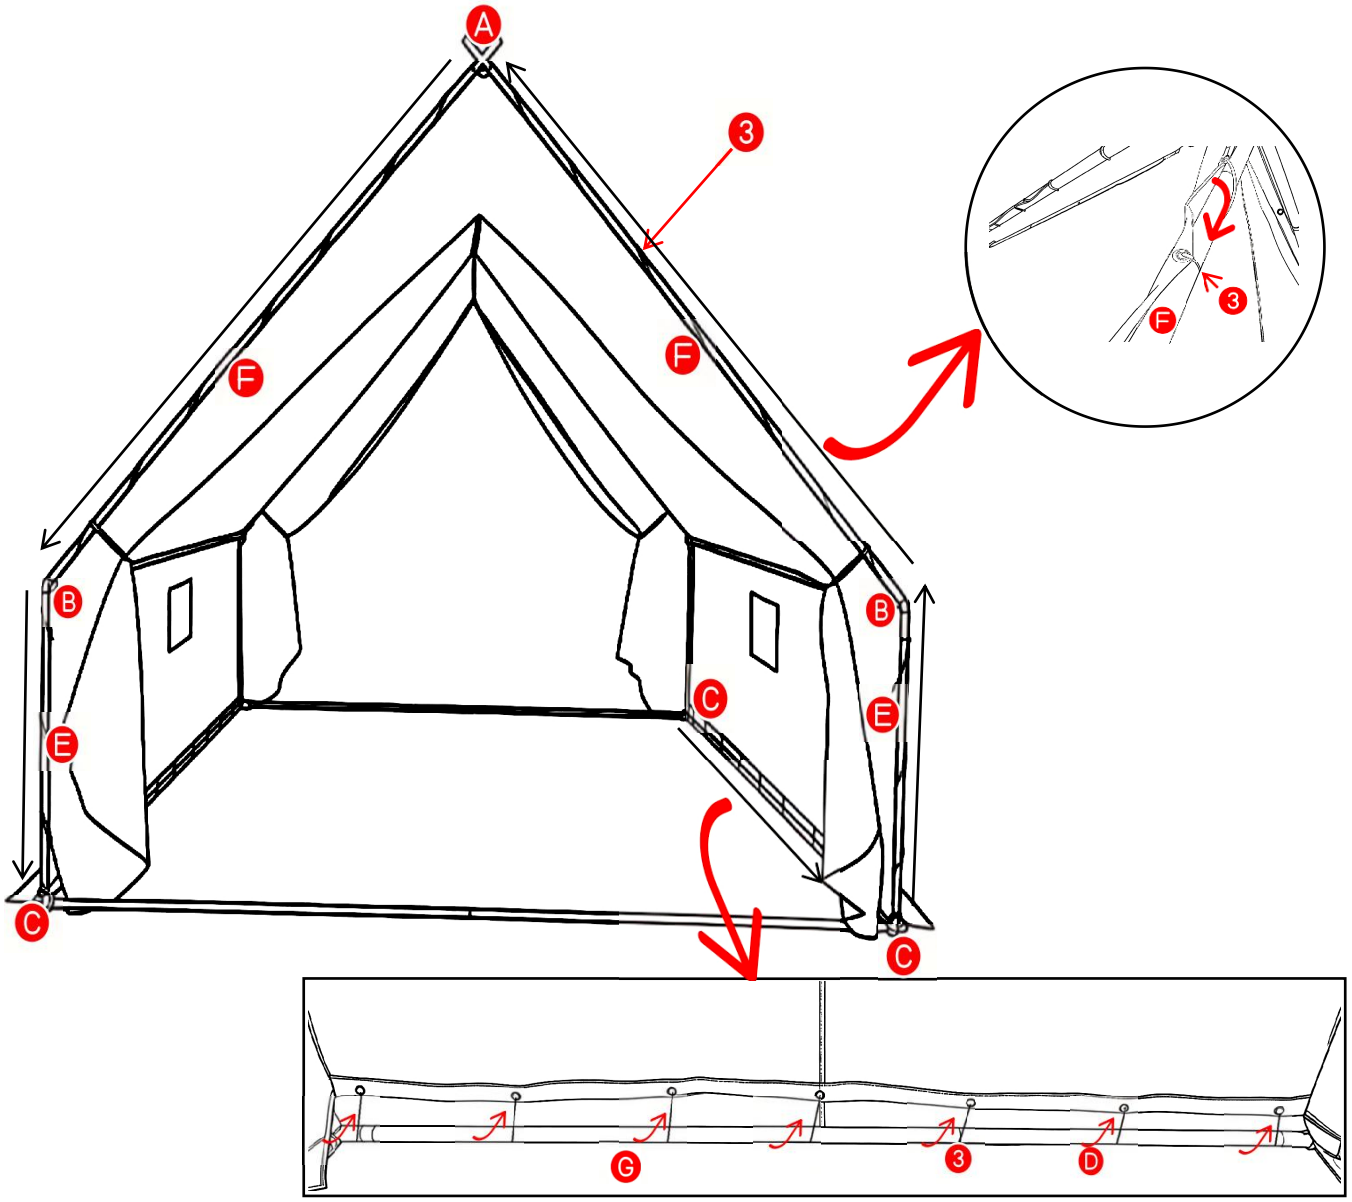

ASSEMBLY STEP 6

MANDATORY: Wear gloves during assembly.

1. Tie four guy ropes Part 4 respectively to each of the four 3- way connectors B and pull them out. Attach L- shaped ground stakes Part 5 to the ends of the guy ropes. Insert the stakes into soft soil and tension the guy ropes to secure the tent.
2. There are 3 eyelets along the bottom edge on each side of the tent. Insert ground stakes Part 5 through the eyelets into soft soil.
3. Open the tent doors as shown in the figure, then gather and secure each door with the fabric straps.




4
(4PCS)




5
(10PCS)



7
(2PCS)

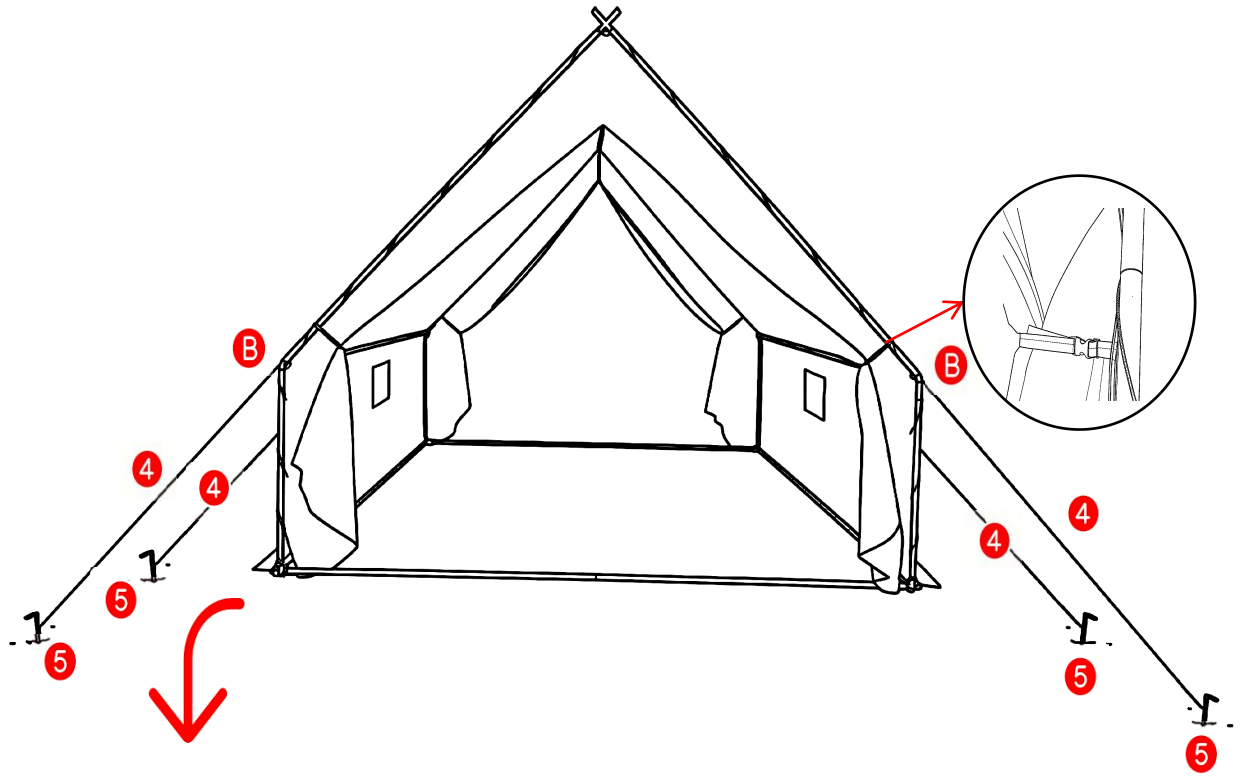

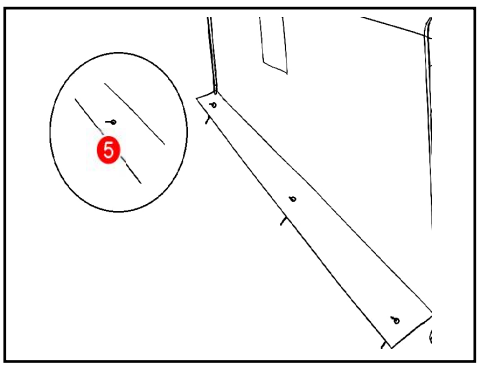

INSTALLATION SUCCESSFUL

