












Assembly Instruction

SLAT BACK SIDE CHAIR WITH CUSHION


NO	Parts List		Q'TY
A		Chair Back	1
B		Box Seat	1
C		Hardseat	1
D		Front Leg	2

NO	Hardware List		Q'TY
1		8 x 1" Pan Head Screw	6
2		M6x 40mm JCBC Bolt	2
3		M6x70mm JCBC Bolt	8
4		M6x13mm Lock Washer	10
5		M6.5x16.5mm Flat Washer	10
6		M4 x 2.1/2" Allen Key	1


STEP 1

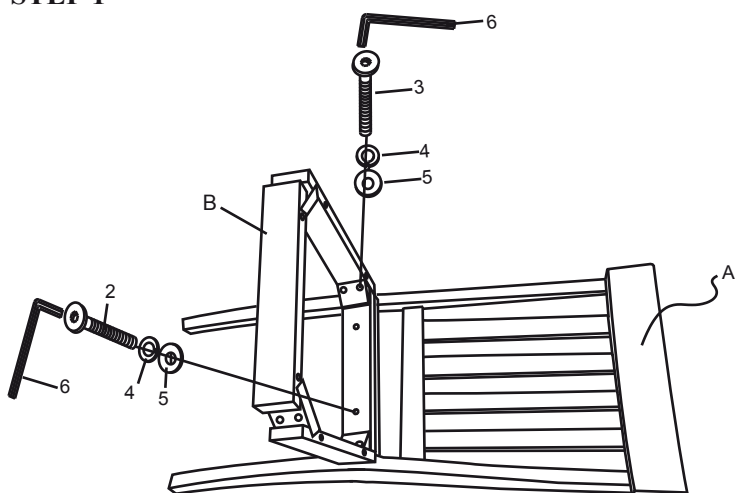

STEP 2

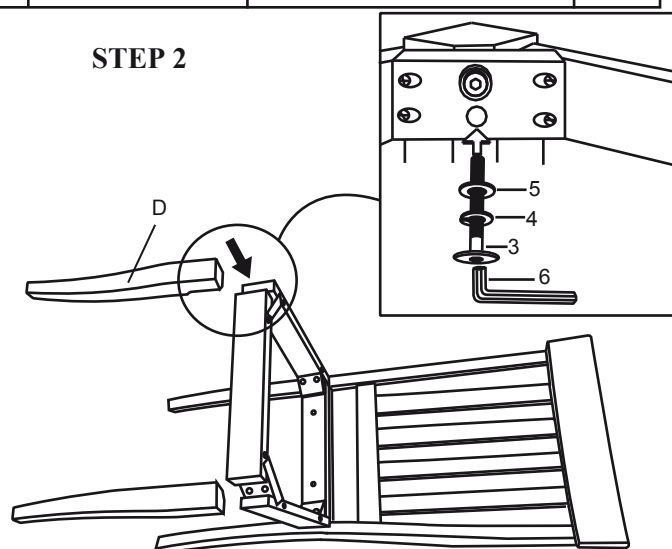

STEP 3

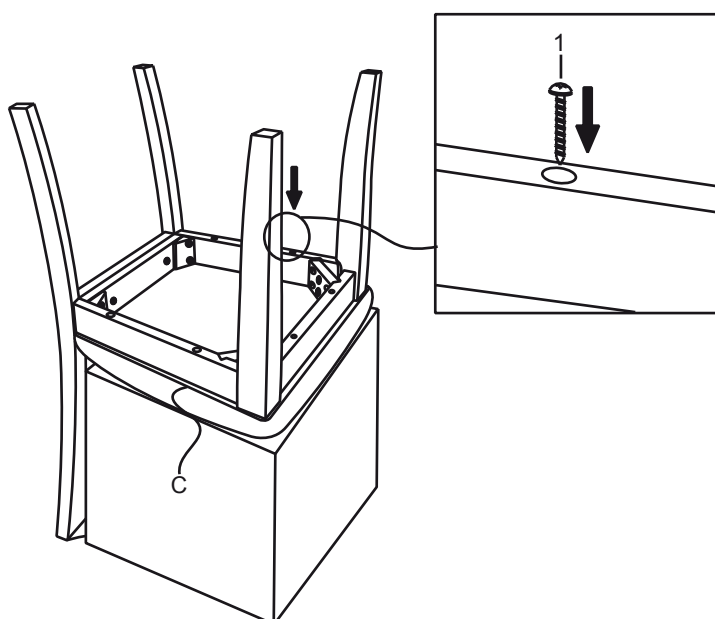

STEP 4

Turn the chair over to a standing position. Check its balance and tighten all screws and bolts to complete the assembly.

