
Assembly Instructions

Bar Cabinet

PACKAGED A - Top Panel B - Bottom Panel C - Side Panel D - Upper Shelf F -Upper Supporting Rail G -Lower Supporting Rail H-Straight Tube I -Short Post J -Long Post K-Wine cup Rack

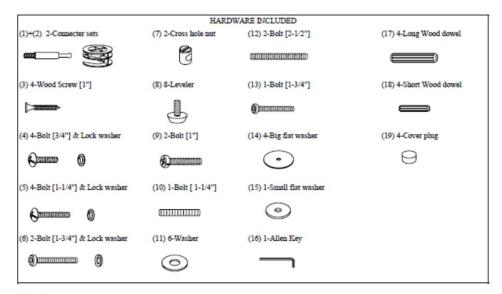

Note1: Plastic hardware packs have number shown on pack associated with steps.

Philiphead screwdriver not provided.


Note2:

Read all instruction before starting assembly:

Remove all contents from the package checking that all of the components listed in " Packaged" are included. Prepare a flat protected work surface where the product can be assembled.


Step #1-Turn A Top Panel upside down attach K Wine cup rack to A Top panel, insert (3) 4 wood screws into pilot holes and tighten

Step#2-Insert (17) 2 long wood dowels into pre-drilled holes on C Side panel then,attach to A Top panel, insert (1)+(2) 2 Connecter sets and tighten

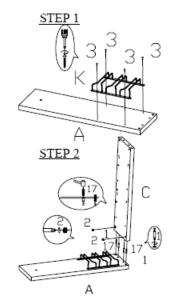


STEP 3

Step#3-Slide (14) 2 Big flat washer and (12) 2 Bolt (2-1/2") on both ends of I Short post then attach on A Top panel

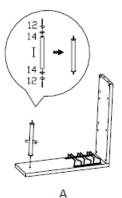


Step#4-Insert (18) 2 Short wood dowel into pre-drilled holes on **D** Upper shelf Turn **D** Upper shelf upside down and attach to C Side panel insert (5) 2 Bolt & lock washer and tighten attach **D** Upper shelf on **I** Short post as step 3.



Step#5-Insert (14) Big flat washer and (13) Bolt (1-3/4") into J Long post, then attach to D Upper shelf and tighten.

Step#6-insert (17) 2 Long wood dowel into pre-drilled holes on C Side panel upside down B Bottom panel, then attach to C Side panel insert (7) 2 Cross hole nut, (6) 2 Bolt & lock washer into C Side panel and tighten by (16) Allen key attach J Long post to B Bottom panel as step.5 insert (15) Small flat washer, (13) bolt (1-3/4") and tighten.

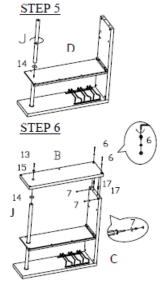

Step#7-Secure (8) Leveler on B Bottom panel.




Step#8-Repeat step 4. on E Lower shelf.




Step#9-attach G Lower supporting tube insert (11) washer, (4) Bolt & lock washer and tighten

STEP 9

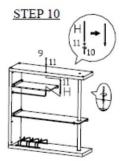


Step#10-Attach **H** Straight tube insert (10) Bolt (1-1/4"),(11) washer, (9) Bolt (1") and tighten

STEP 11



Step#11-attach F Upper supporting tube and repeat step. 10 insert (4) Bolt & lock washer and tighten





Step#12-Carefully return the bar base upright insert (19) Cover plug into C Side panel

In any correspondence regarding this product, please include the complete identification number located on the backside of this product.

We hope this product will be a useful decorative addition to your home for years to come