


ASSEMBLY INSTRUCTIONS









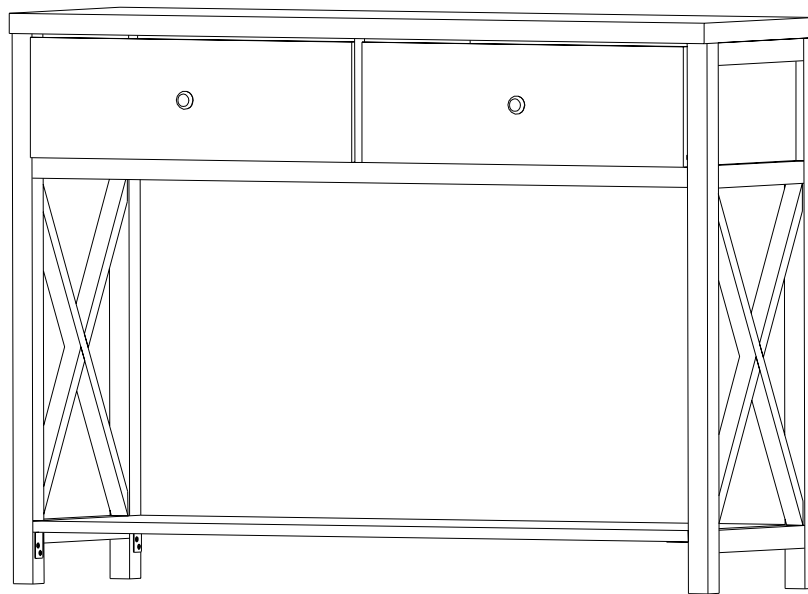


Console





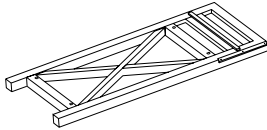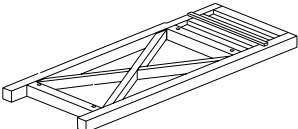







NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Part list :

 <p>A1. Top Panel Qty: 1</p>	 <p>A2. Side Frame Qty: 1</p>
 <p>A3. Side Frame Qty: 1</p>	 <p>A4. Back Panel Qty: 1</p>
 <p>A5. Divider Qty: 1</p>	 <p>A6. Middle Shelf Qty: 1</p>
 <p>A7. Bottom Panel Qty: 1</p>	 <p>A8. Drawer Front Panel Qty: 2</p>
 <p>A9. Drawer Side Panel Qty: 4</p>	 <p>A10. Drawer Bottom Panel Qty: 2</p>
 <p>A11. Drawer Back Panel Qty: 2</p>	

Hardware list :

  <p>B1. Camlock Qty: 16</p>	 <p>B2. Screw Qty: 14</p>	  <p>B3. Stopper with screw Qty: 2</p>
  <p>B4. Metal bracket with screws Qty: 4</p>	 <p>B5. Screw Qty: 16</p>	  <p>B6. Knob with bolt Qty: 2</p>





Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

To use Dowels:



1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.

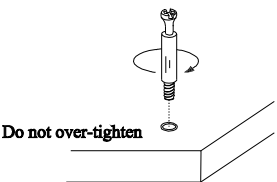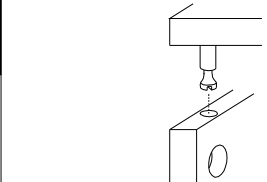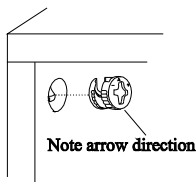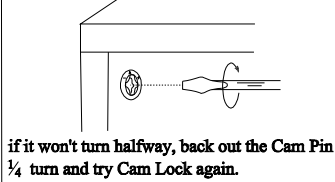
To use Cam Locks:

1. Insert Cam Pin until snug 	2. Set boards together 	3. Insert Cam Lock 	4. Turn Cam Lock clockwise (half a turn) 
--	---	--	---



Assembly instructions


Step 1: Assemble the middle shelf A6 & bottom shelf A7 to the side frame A2 using camlocks B1.

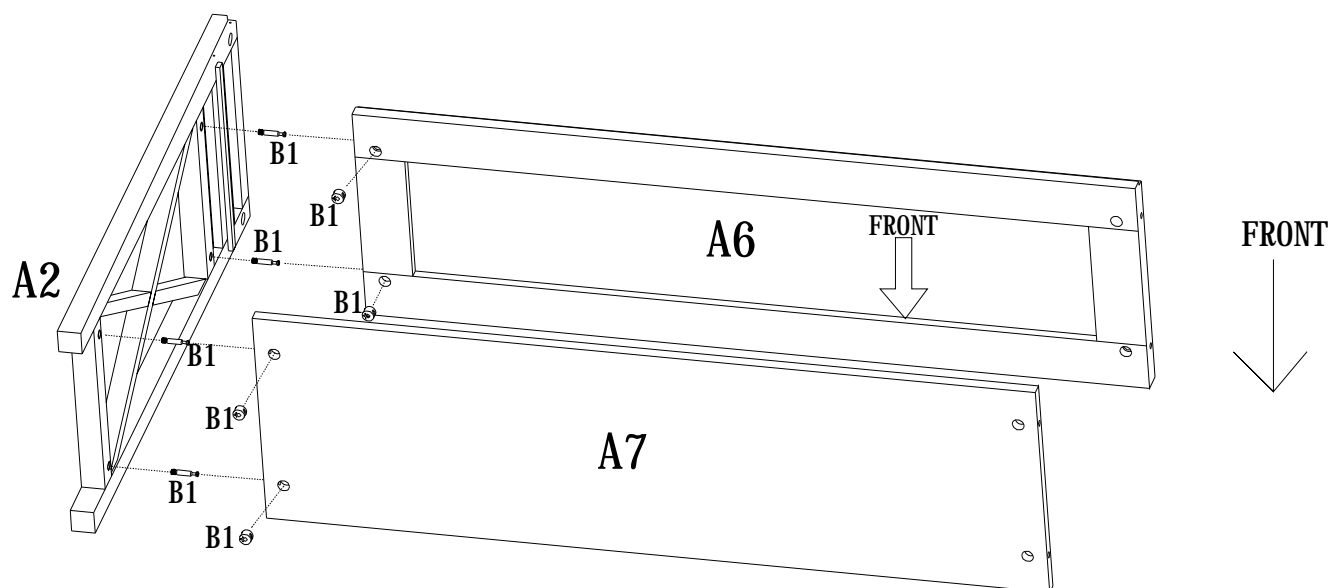B1:   4SETS




Step 2: Assemble the middle shelf A6& bottom shelf A7 to the other side frame A3 using camlocks B1.

B1:   4SETS

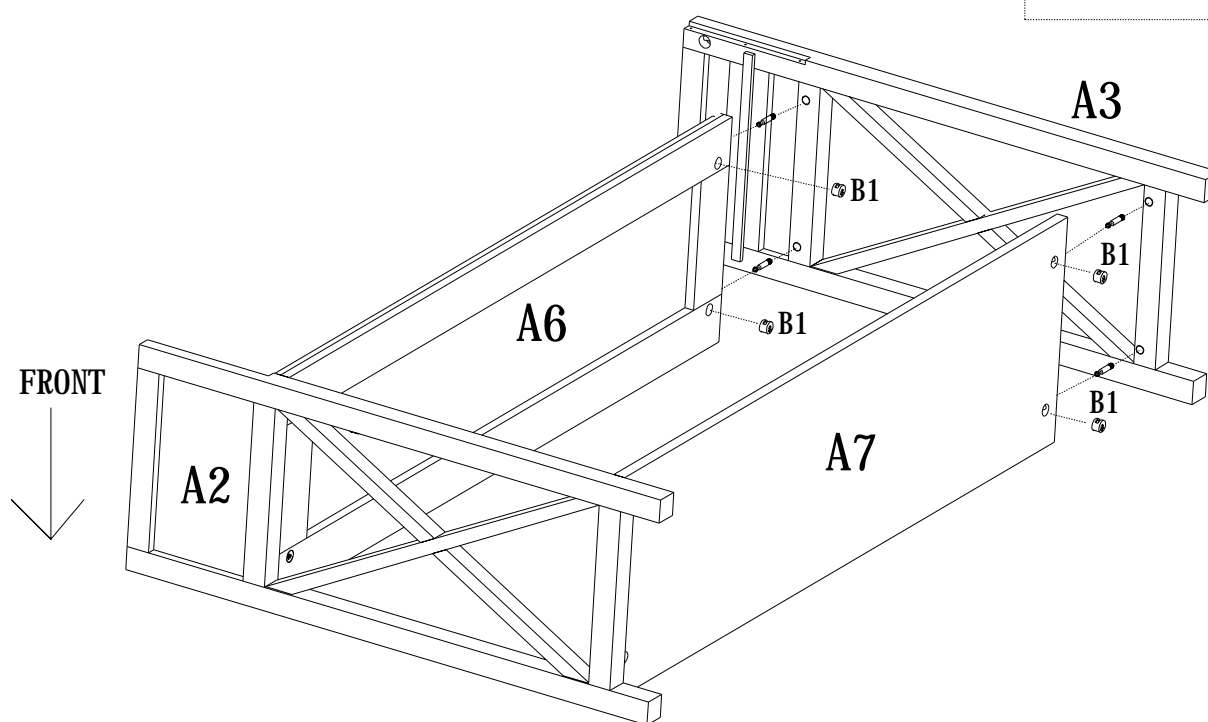


Step 3: Assemble divider A5 to the middle shelf A6 using camlocks B1.


B1:   2SETS

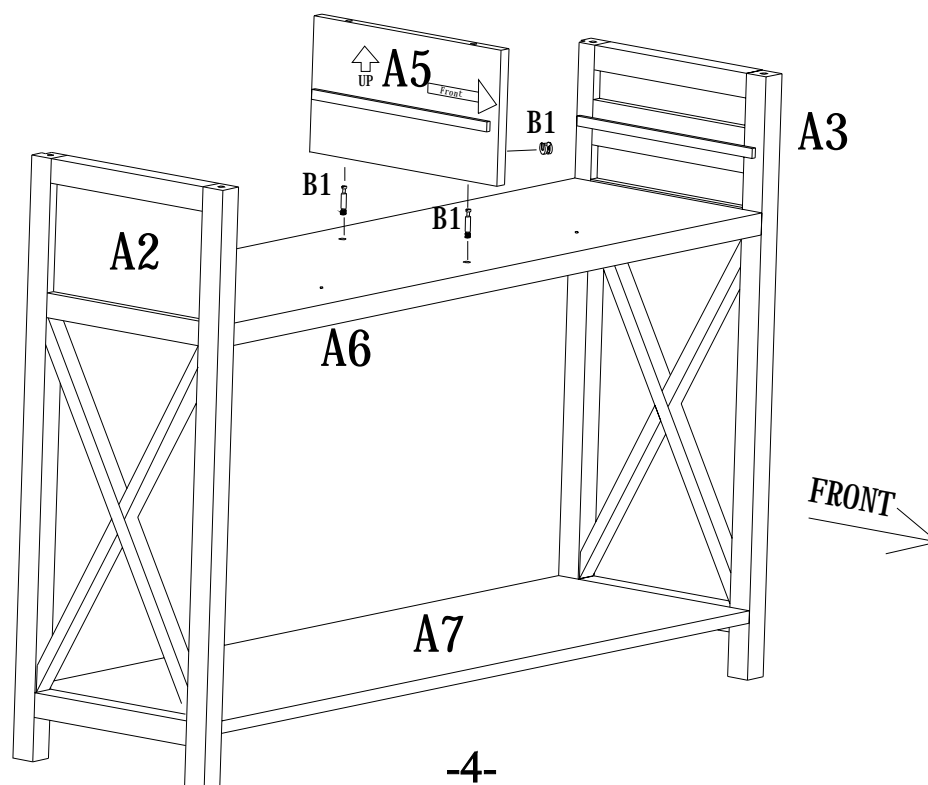

Step 4: Assemble top panel A1 to the side frames A2 ,A3 and divider A5 using camlocks B1.

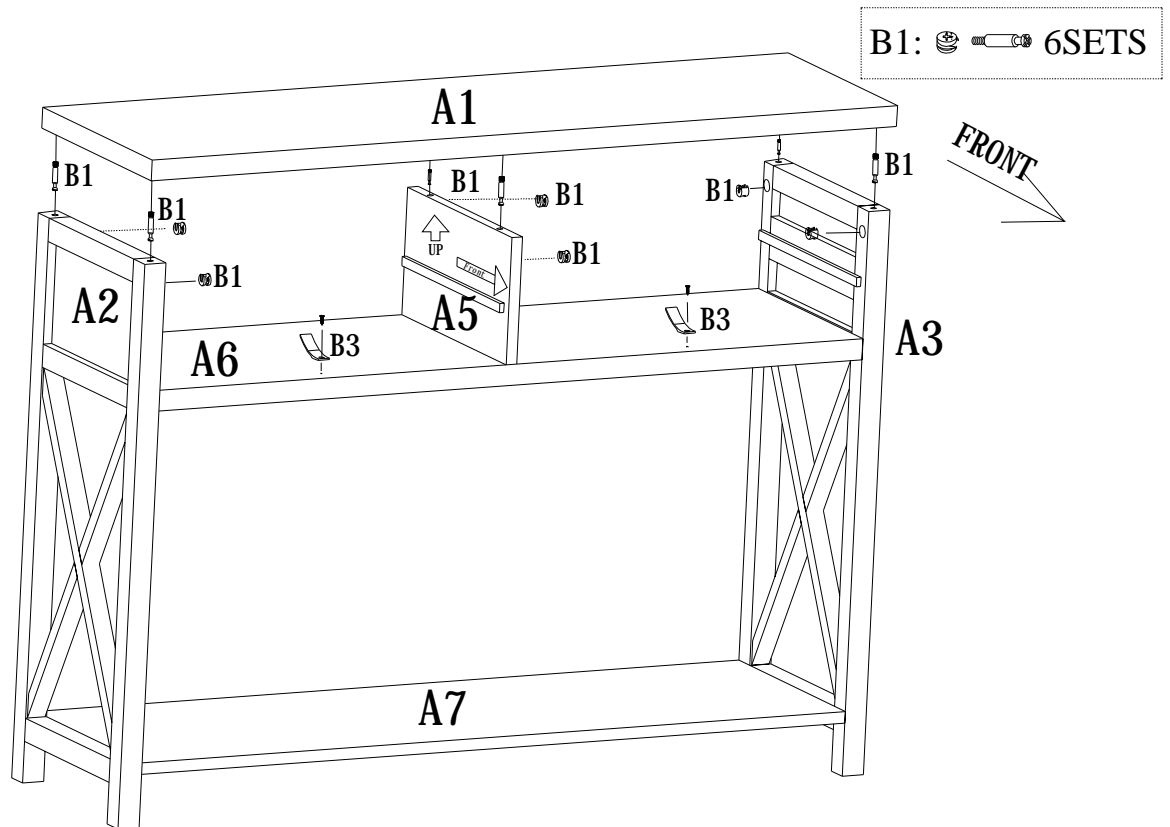


Step 5: Attach the back panel A4 to side frames A2,A3 and top panel A1, divider A5 using screws B2.

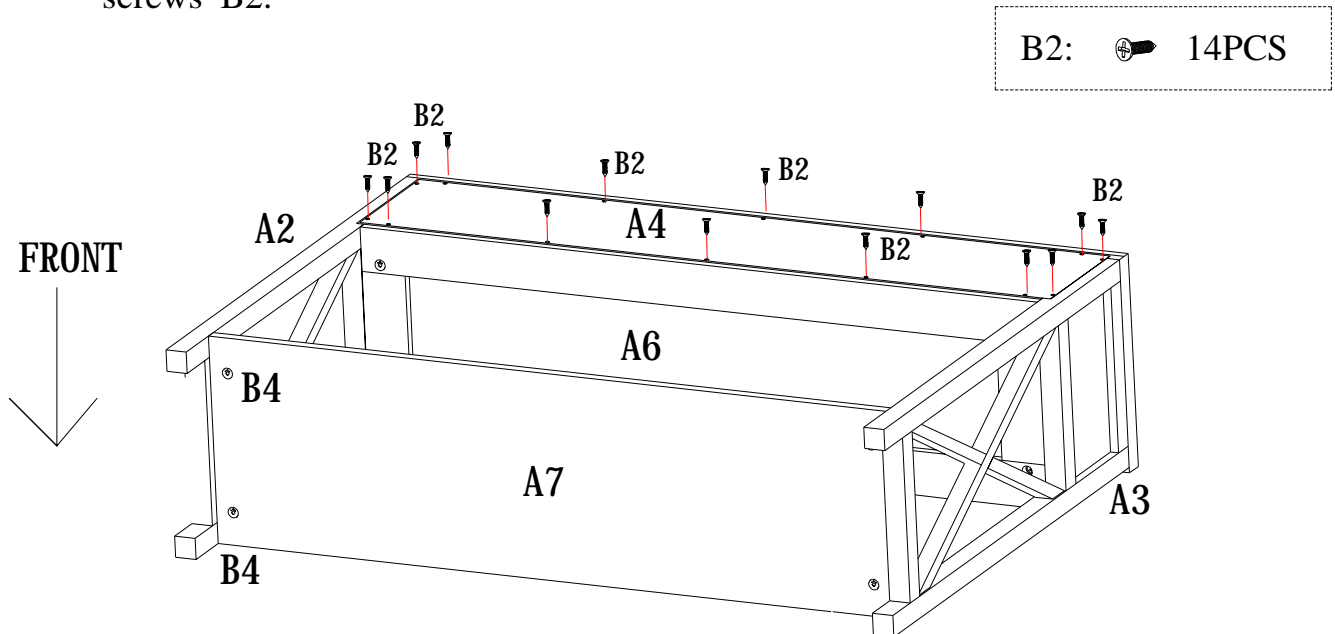


Step 6: Assemble drawer side panels A9 to the drawer front panel A8 using screws B5, then insert drawer bottom panel A10 into grooves on drawer side panels and drawer front panel.

Step 7: Attach the drawer back panel A11 to the drawer side panels A9 using screws B5.

Step 8: Attach the knob B6 to the drawer front panel A8 using included bolts .

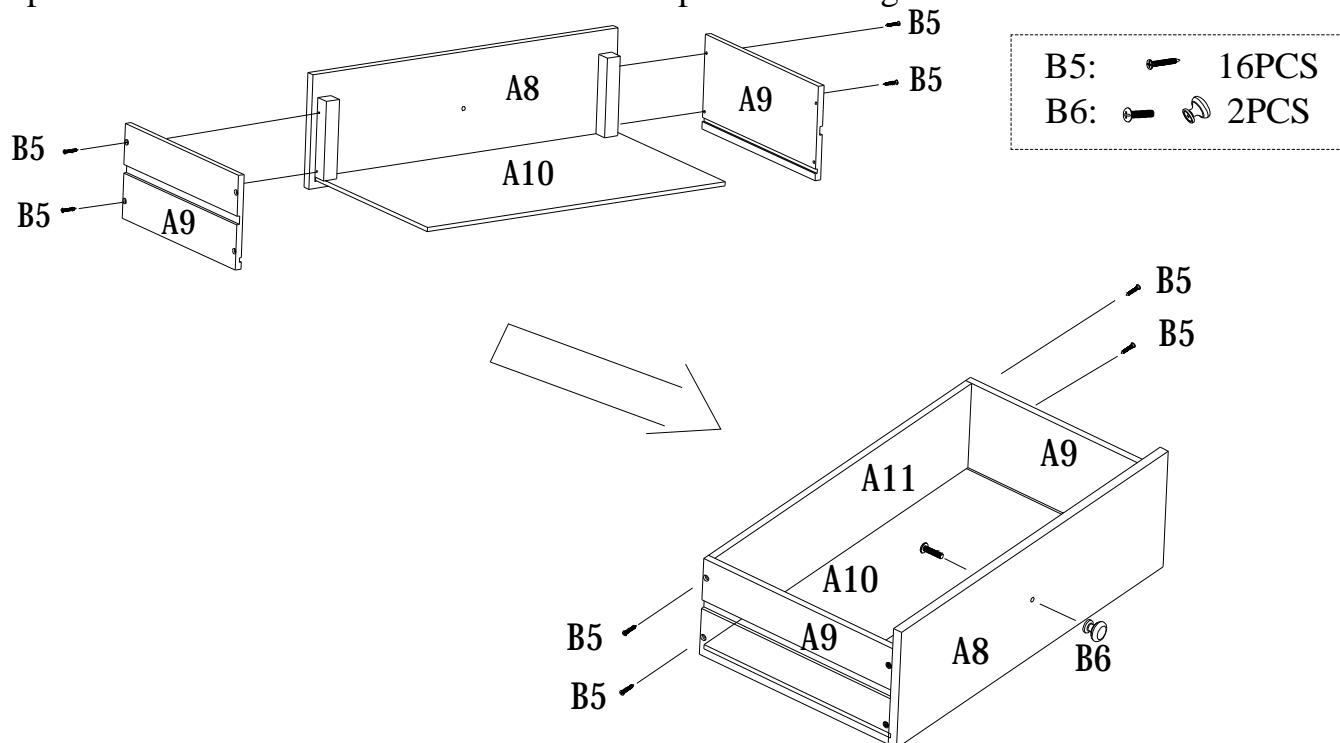

Step 9: Attach the metal brackets B4 to connect bottom shelf A7 and side frames A2, A3 using included screws.

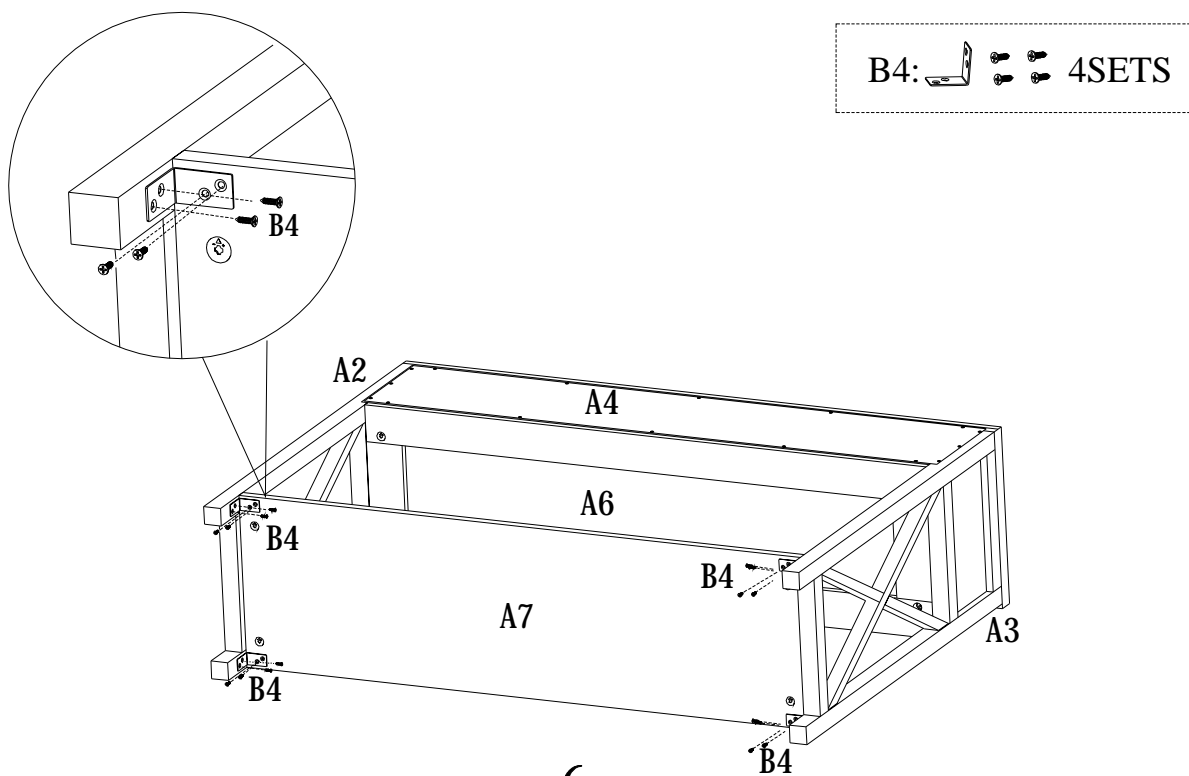

Step 9: Insert the two drawers as the following drawing shown.

