



A x24

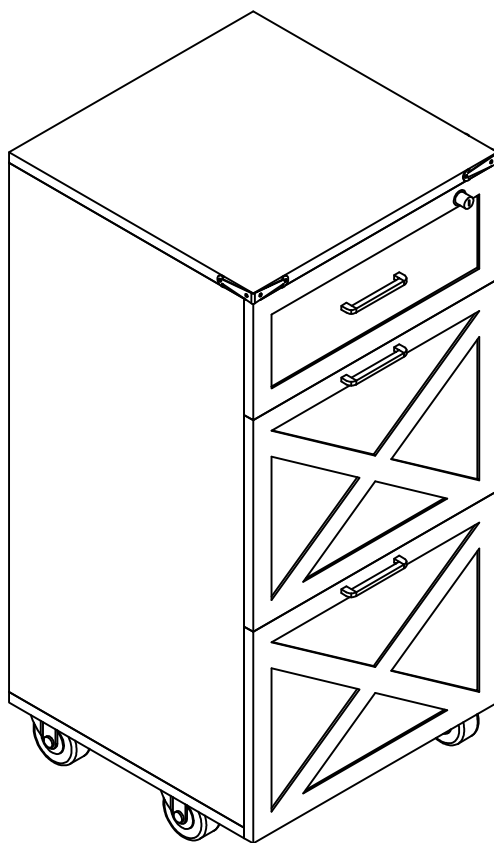

B x24




C x16



D x3




E x6

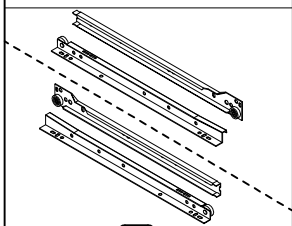

F x3



G x28




H x2




Silver

I x16

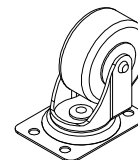

J x4




K x1




black


L x8





M x1

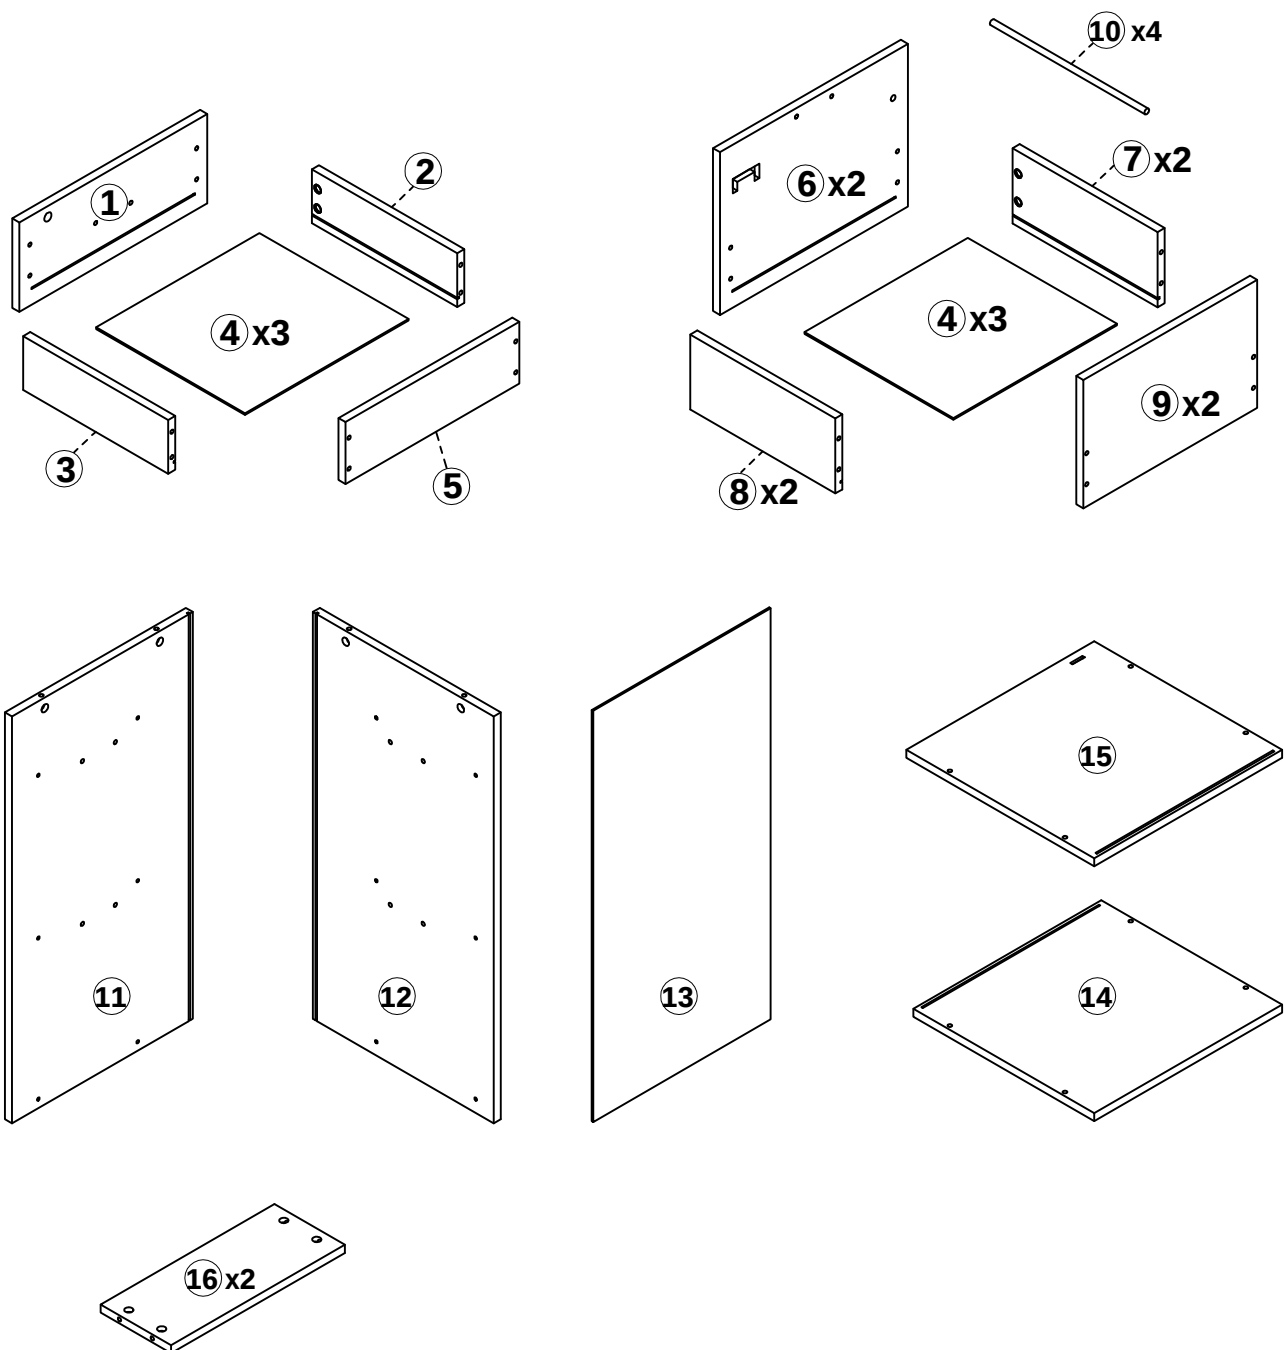


Step 1

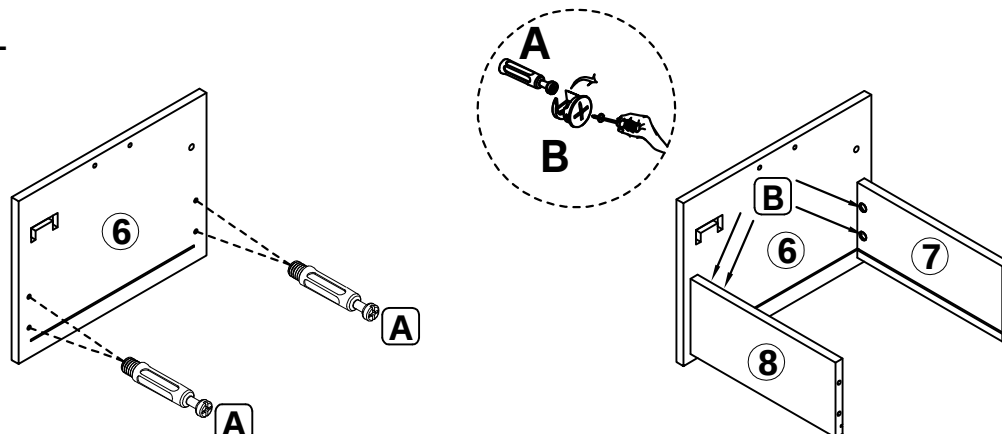



Step 2

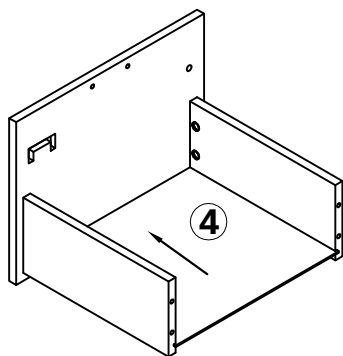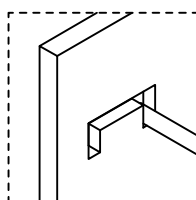

The pole can be on the left side or on the right side.



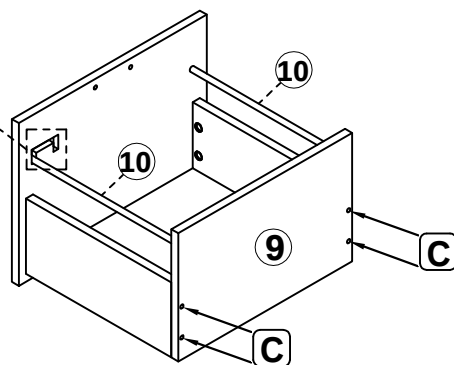


Step 3

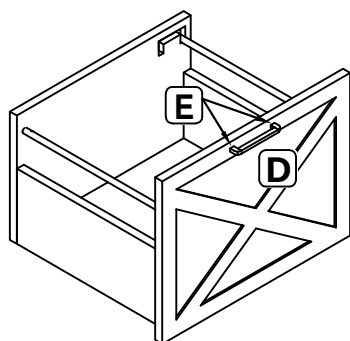
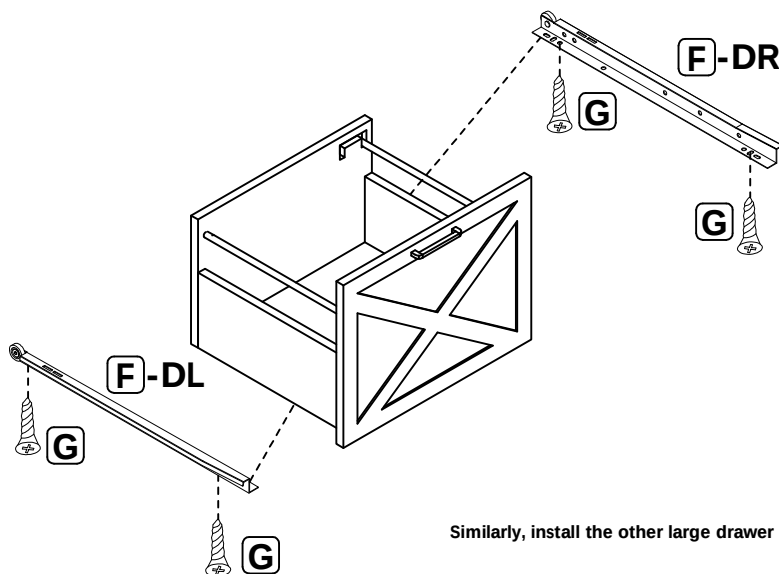


Similarly, install the other large drawer

Step 4

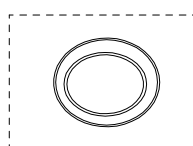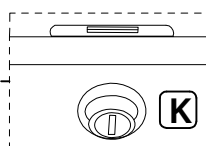
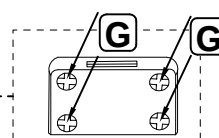


Please note to use a slightly longer self tapping thread for this step

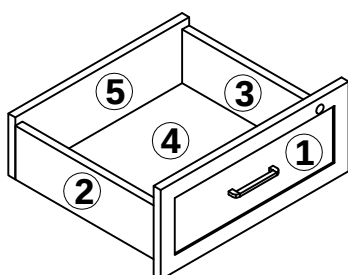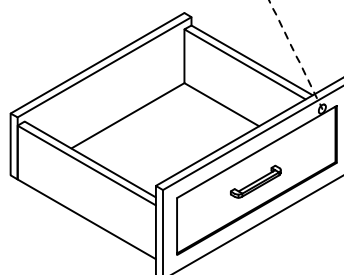


Locked drawer completed in the same way


Step 5

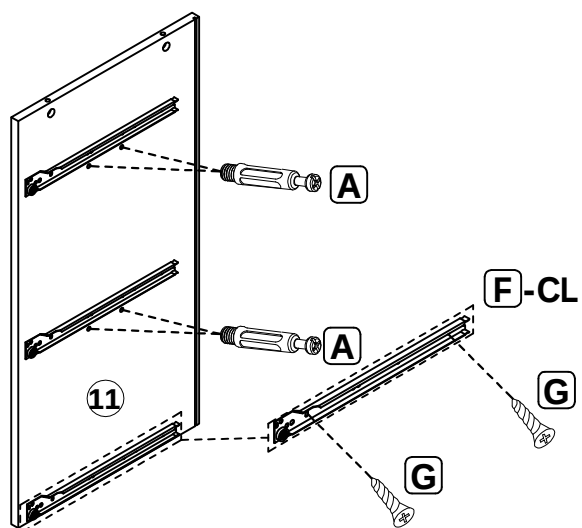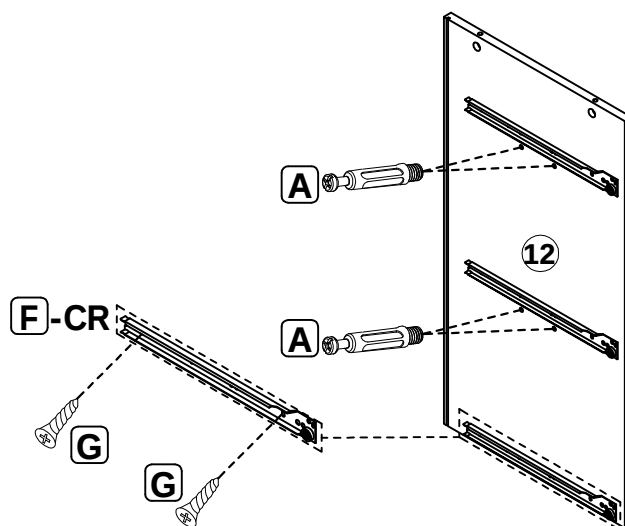



Step 6

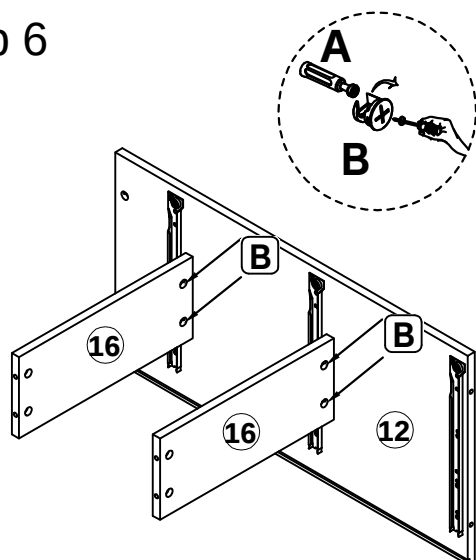


Step 7

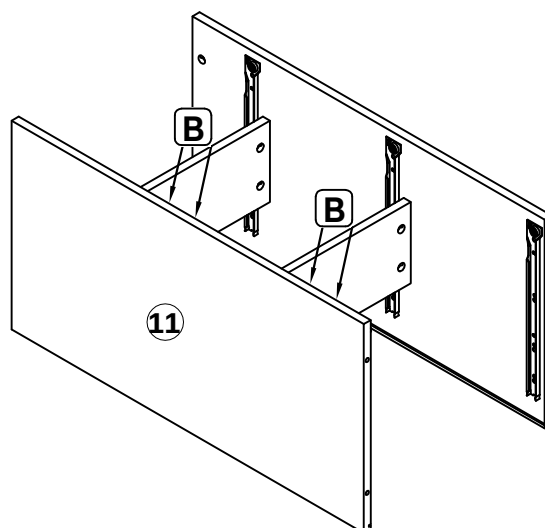


Step 8

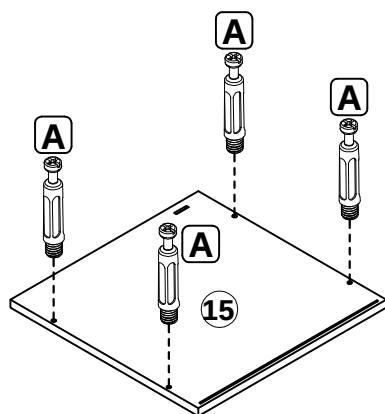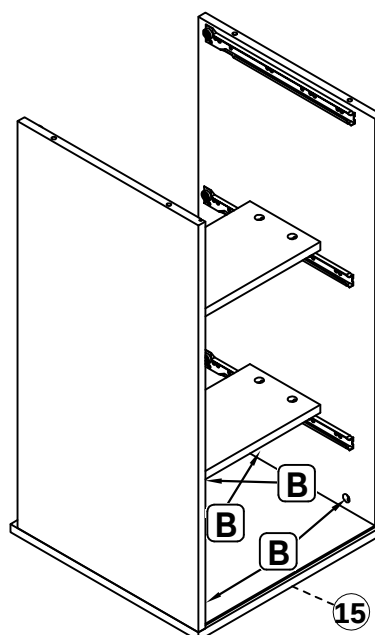


Step 9

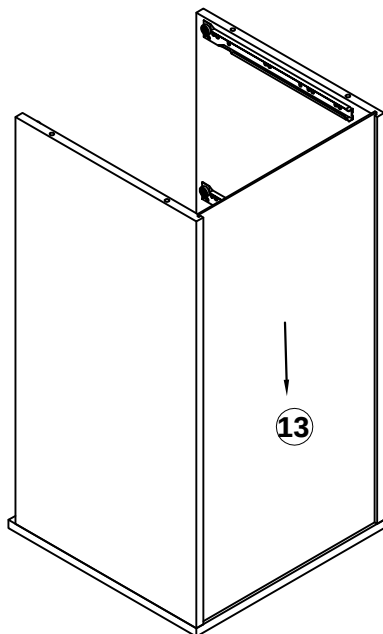


Step 10

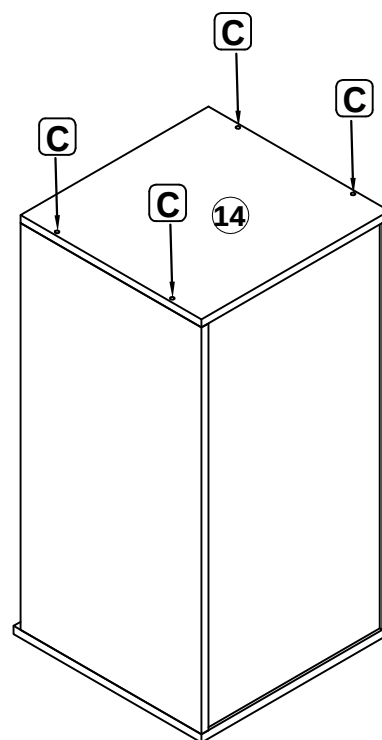


Step 11

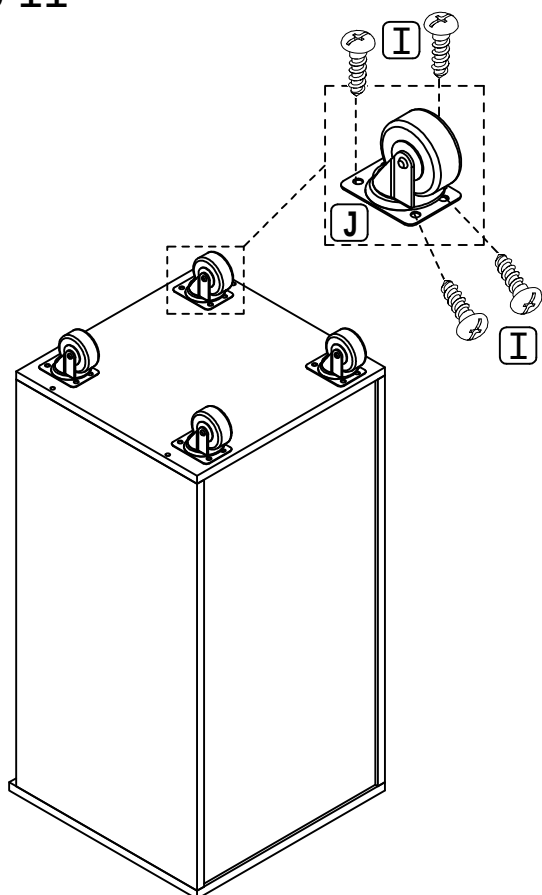


Step 12

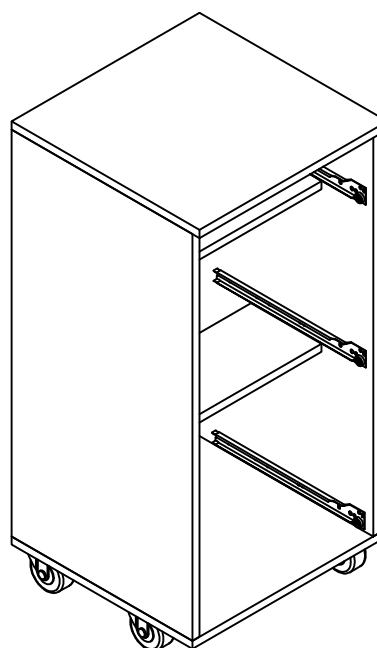

Step 13

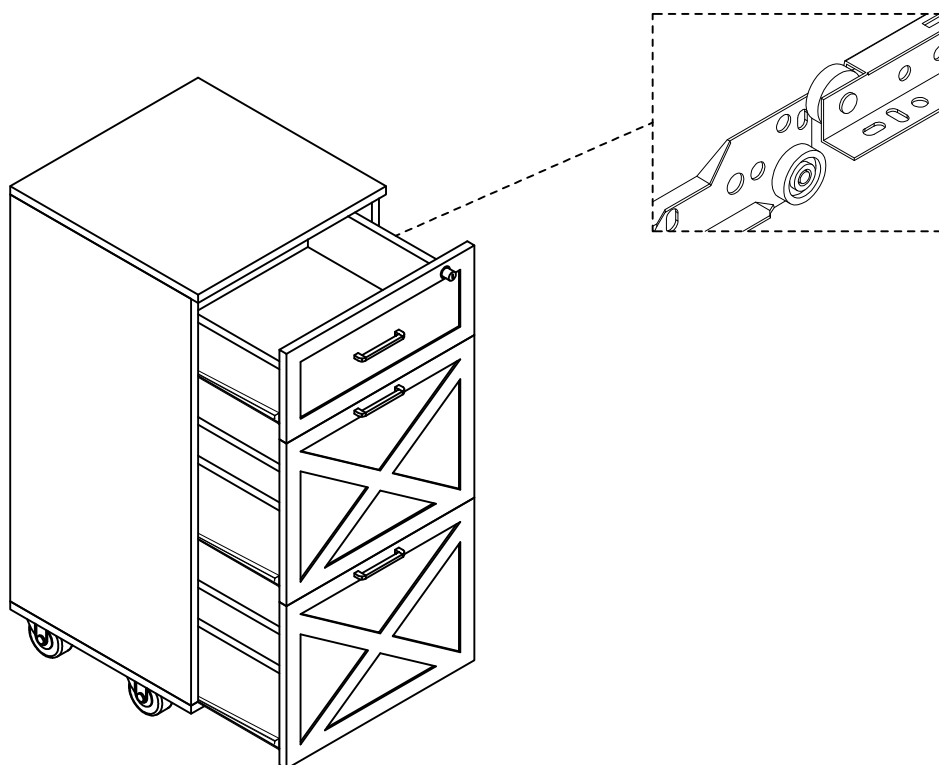

Step 14

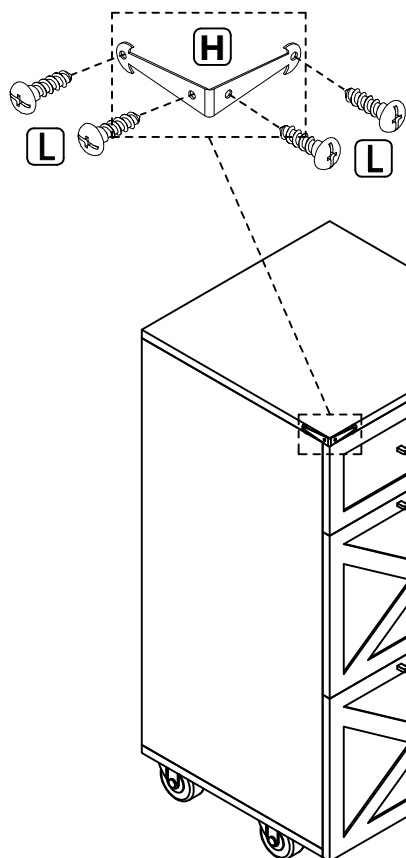

Step 15

