



ASSEMBLY INSTRUCTIONS

36 INCH BATH VANITY-CABINET

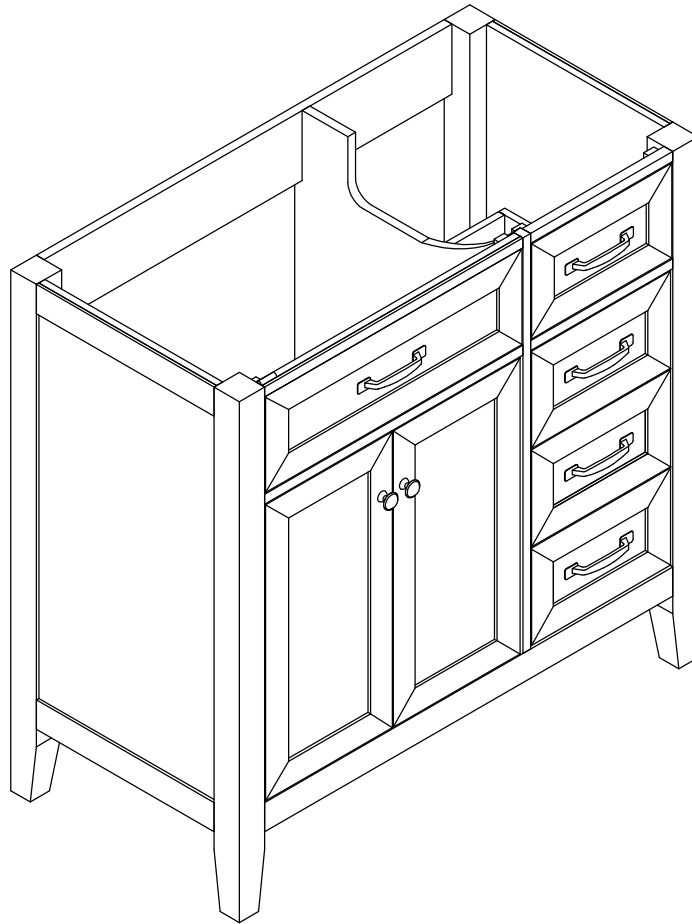


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

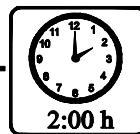

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,


do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.















Thank you again for your purchase of our products,

I wish you a happy life.

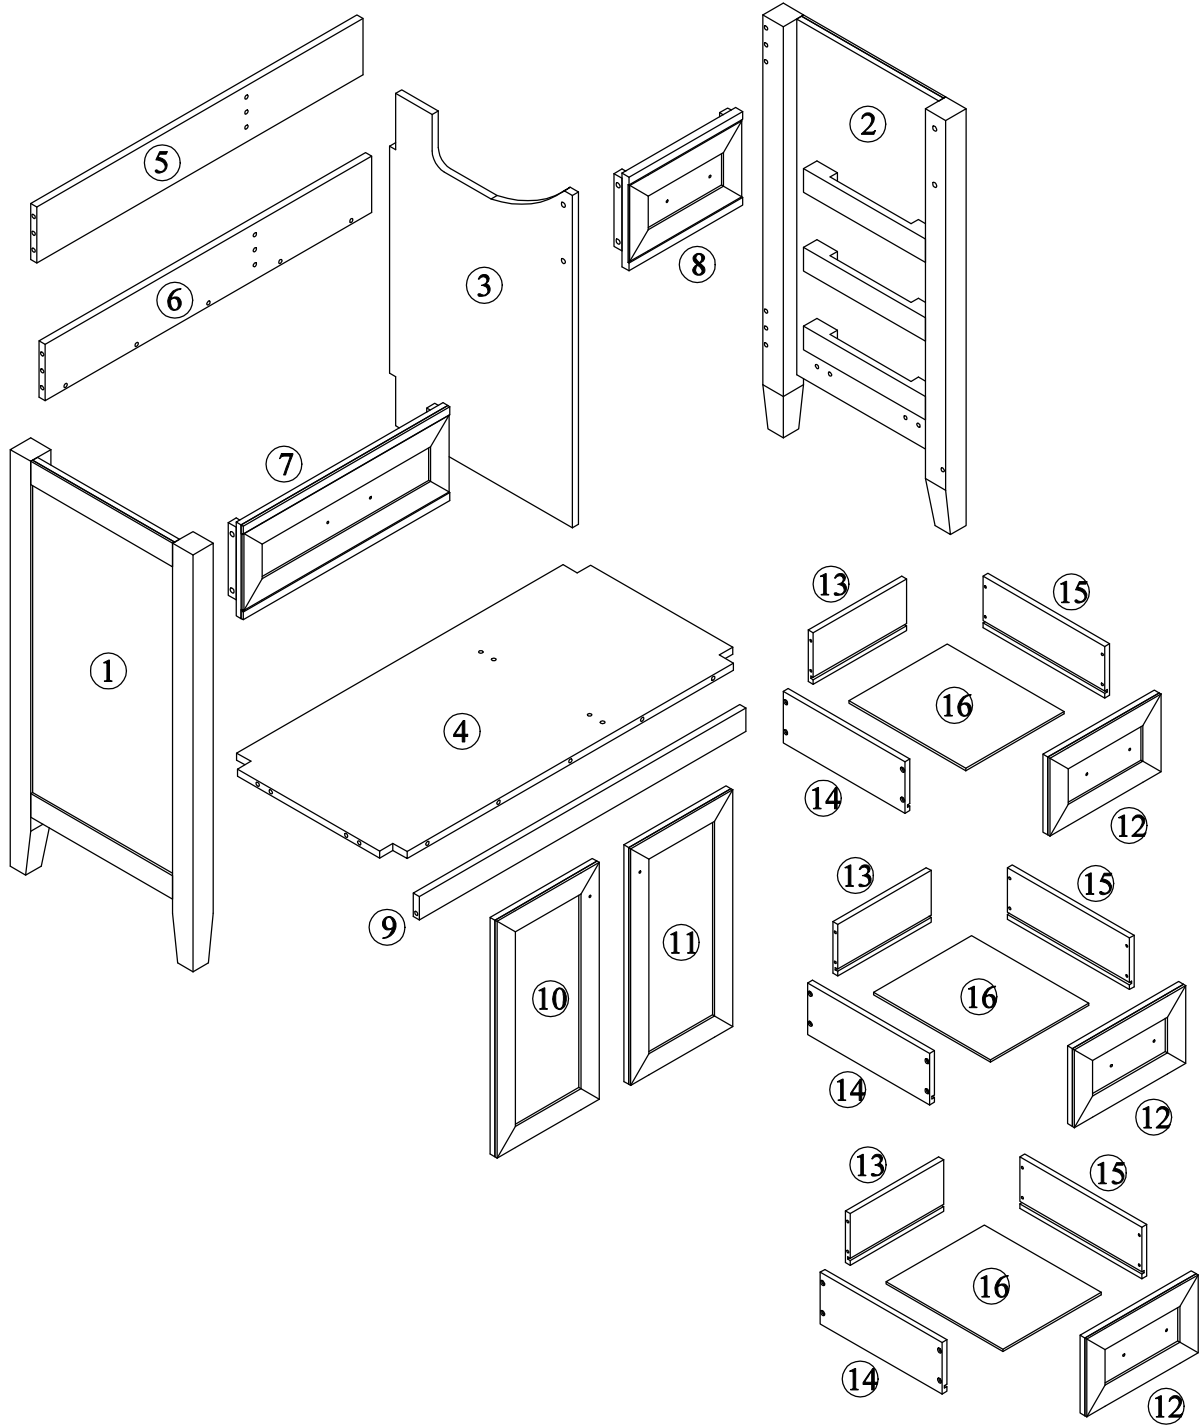
Detail View - CABINET

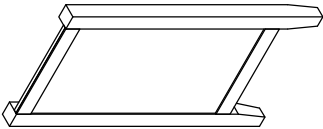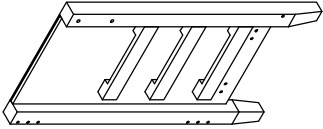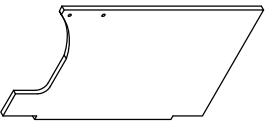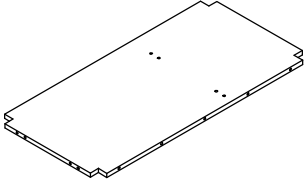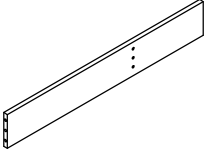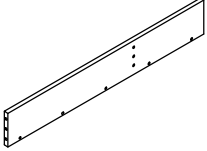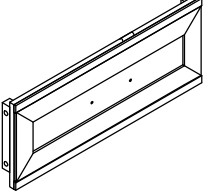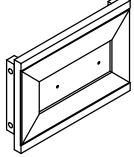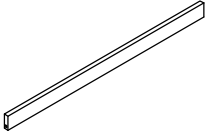

Identifying the Hardware-Identify the hardware using the illustrations below.

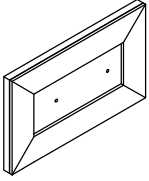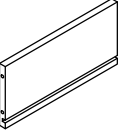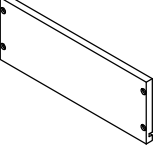
<p>1</p>  <p>Side Panel (L) - 1pc</p>	<p>2</p>  <p>Side Panel (R) - 1pc</p>
<p>3</p>  <p>Center Panel - 1pc</p>	<p>4</p>  <p>Bottom Panel - 1pc</p>
<p>5</p>  <p>Back Panel Top - 1pc</p>	<p>6</p>  <p>Back Panel Bottom - 1pc</p>
<p>7</p>  <p>Front Panel (L) - 1pc</p>	<p>8</p>  <p>Front Panel (R) - 1pc</p>
<p>9</p>  <p>Bottom Rail - 1pc</p>	<p>10</p>  <p>Door (L) - 1pc</p>
<p>11</p>  <p>Door (R) - 1pc</p>	<p>12</p>  <p>Drawer Front - 3pcs</p>
<p>13</p>  <p>Drawer Back - 3pcs</p>	<p>14</p>  <p>Drawer Side (L) - 3pcs</p>

15

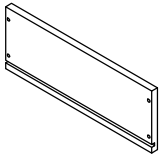













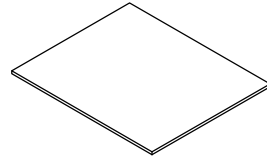



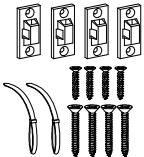


Drawer Side (R) - 3pcs

16




Drawer Bottom - 3pcs


<p>A</p>  <p>$\varnothing 13 \times 1/4" \times 50 \text{mm}$</p>	<p>B</p>  <p>$\varnothing 13 \times 1/4" \times 32 \text{mm}$</p>	<p>C</p>  <p>$\varnothing 1/4" \times 16 \times 1 \text{mm}$</p>
<p>Hex-Head bolts(2pcs) Hex-Head bolts(4pcs) Washer(6pcs)</p>		
<p>D</p>  <p>$\varnothing 6 \times 35 \text{mm}$</p>	<p>E</p>  <p>$\varnothing 14.5 \times 12 \text{mm}$</p>	<p>F</p>  <p>$\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$</p>
<p>Three in one bolts(22pcs) Three in one lock(22pcs) Round head screw(24pcs)</p>		
<p>G</p> 	<p>H</p> 	<p>I</p>  <p>$\varnothing 5/32" \times 15 \text{mm}$</p>
<p>Handle(2pcs) Handle(5pcs) Handle screw(4pcs)</p>		
<p>J</p>  <p>$\varnothing 5/32" \times 25 \text{mm}$</p>	<p>K</p> 	<p>L</p>  <p>$\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$</p>
<p>Handle screw(8pcs) Damping hinge (4pcs) Flat head screw(24pcs)</p>		
<p>M</p>  <p>$\varnothing 300 \times 35 \text{mm}$</p>	<p>N</p>  <p>$\varnothing 298 \times 18 \text{mm}$</p>	<p>O</p>  <p>$\varnothing 6 \times \varnothing 3 \times 12 \text{mm}$</p>
<p>Slide rails (6pcs) Slide rails (6pcs) Flat head screw(36pcs)</p>		
<p>P</p>  <p>$\varnothing 8 \times 30 \text{mm}$</p>	<p>Q</p>  <p>$\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$</p>	<p>R</p>  <p>4mm</p>
<p>Wood dowel(24pcs) Round head screw(4pcs) Allen key(1pc)</p>		
<p>S</p>  <p>Anti fall hardware(1set)</p>		

STEP: 1



D

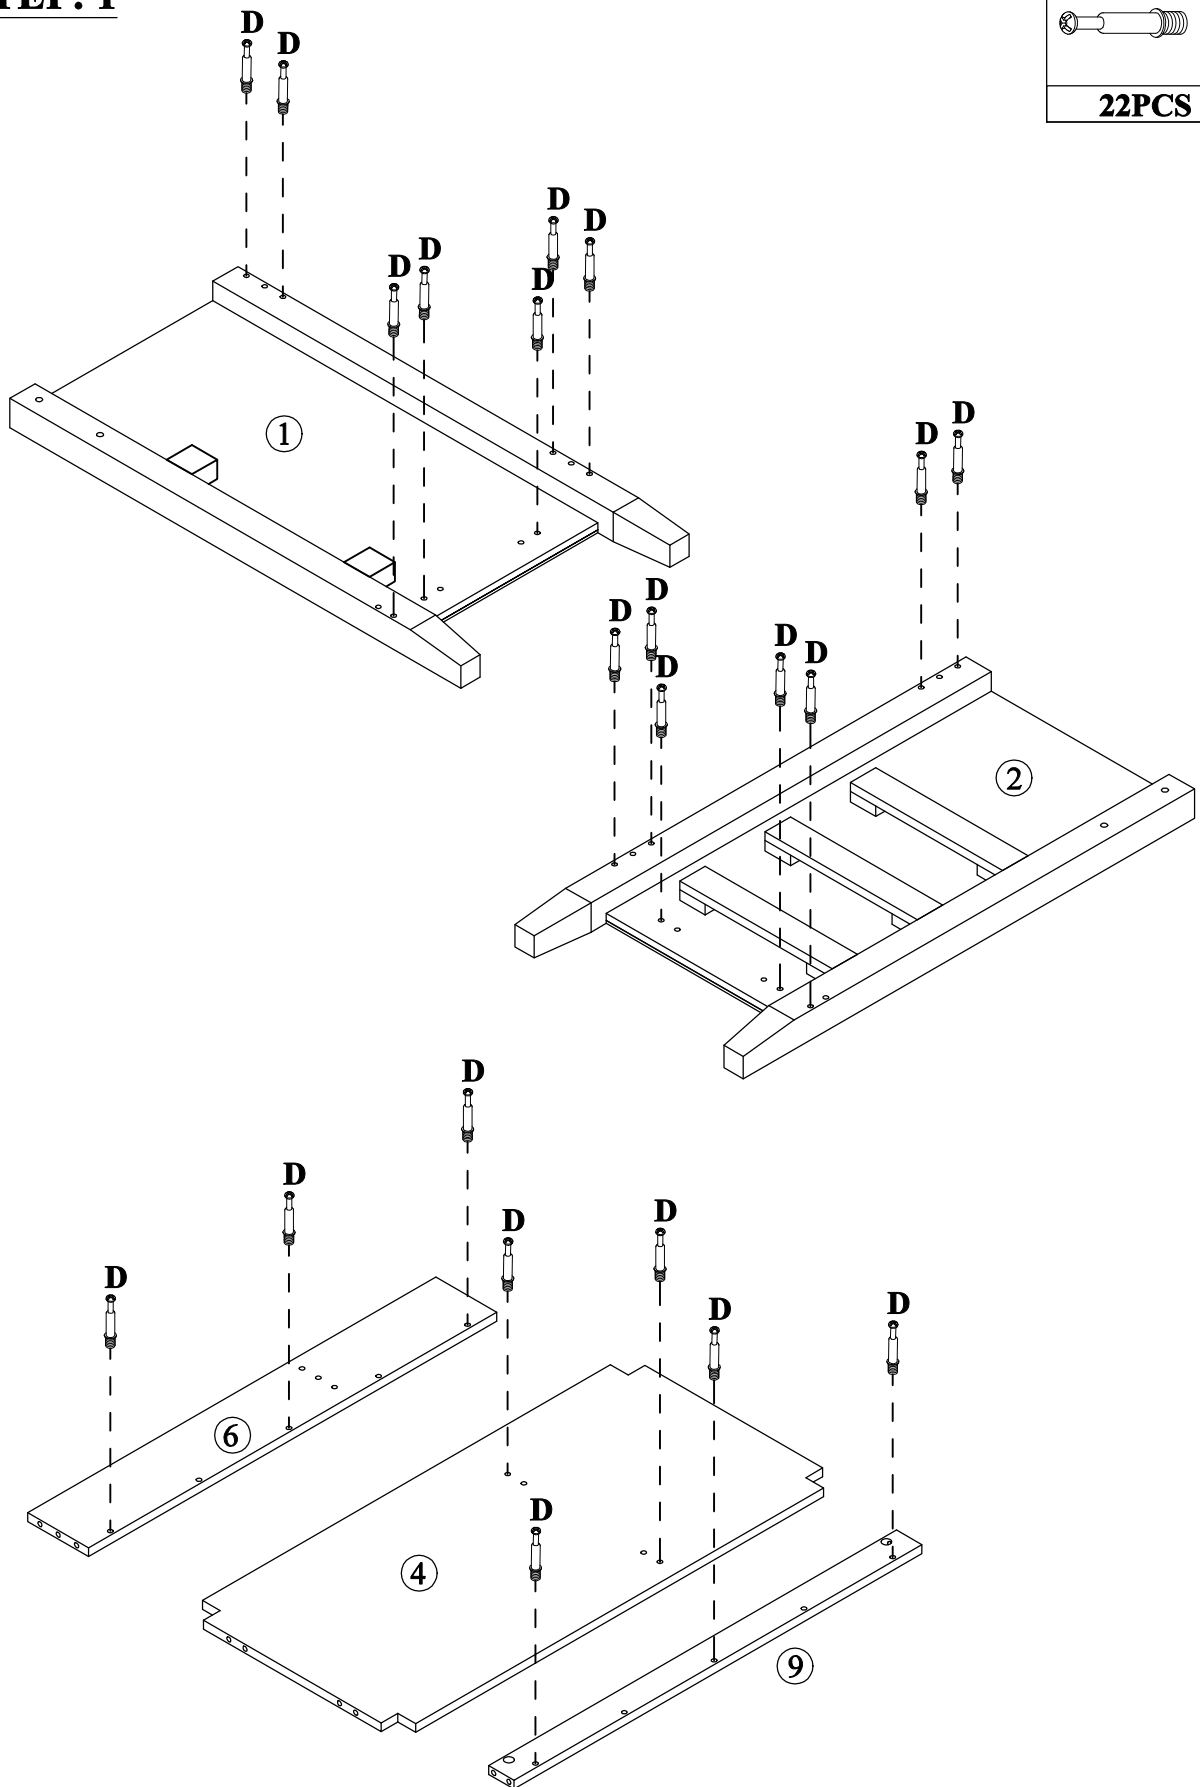


22PCS






STEP: 2

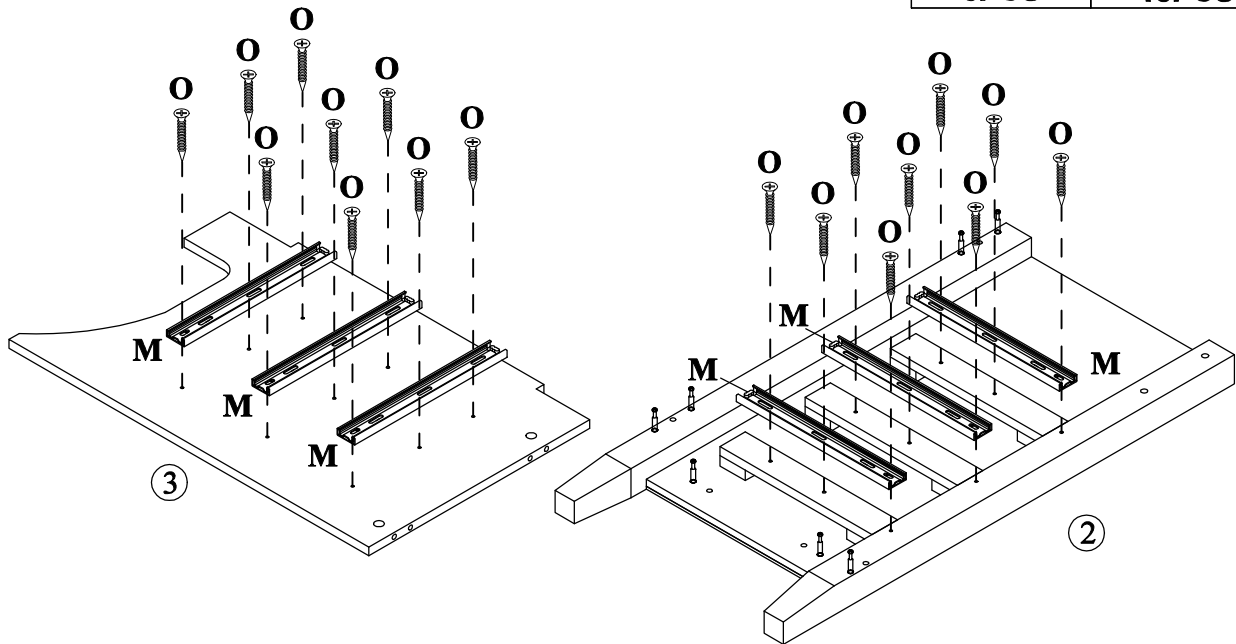M		O	
	6PCS		18PCS







STEP: 3

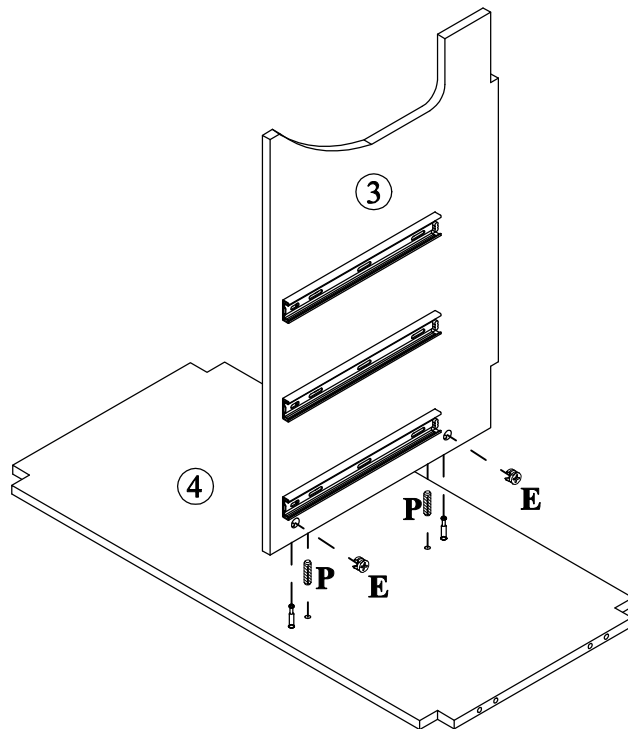E		P	
	2PCS		2PCS




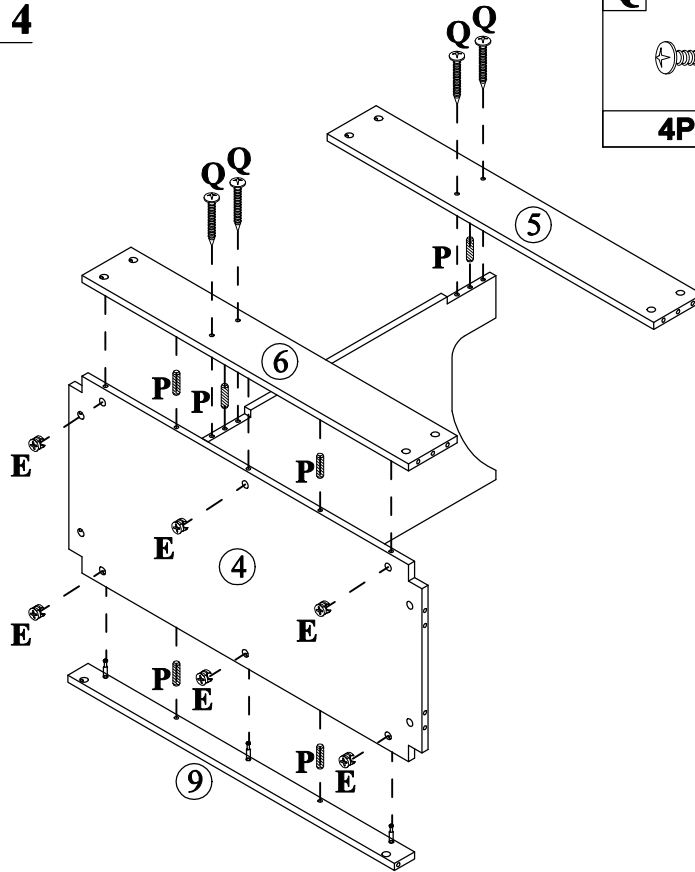



STEP: 4

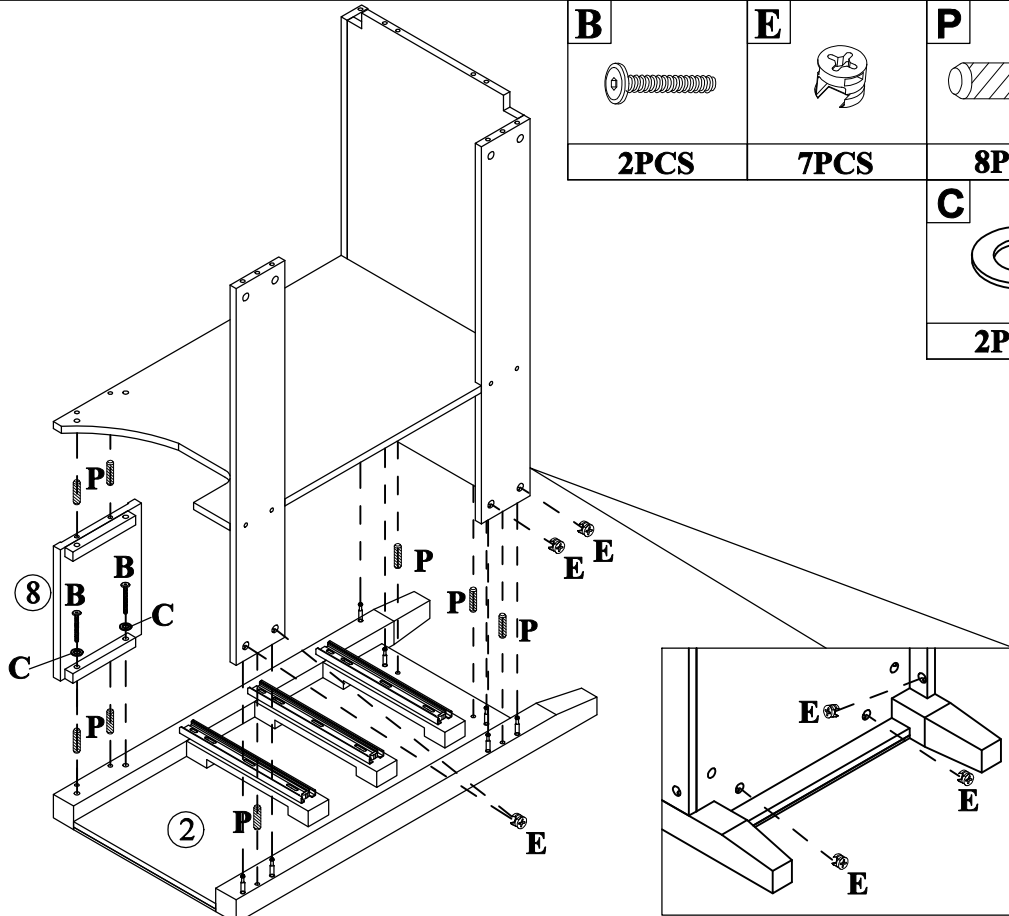


Q	E	P
		
4PCS	6PCS	6PCS






STEP: 5




B	E	P
		
2PCS	7PCS	8PCS
		C
		
		2PCS

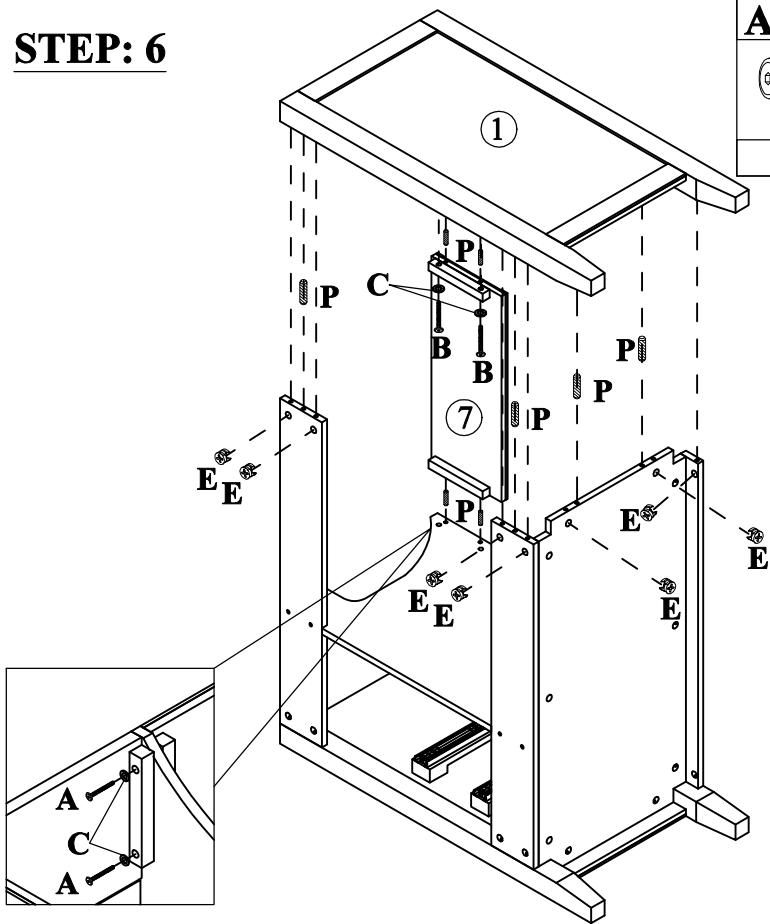

STEP: 6








A 	E 	P 
2PCS	7PCS	8PCS
B 	C 	
2PCS	4PCS	


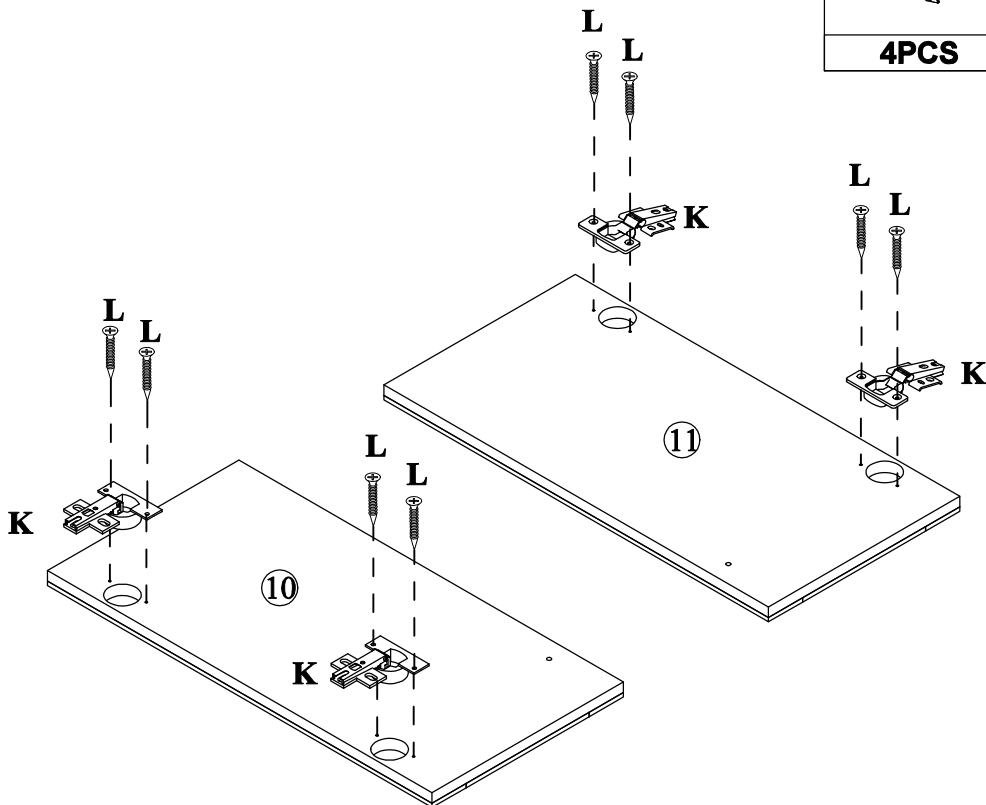
STEP: 7






K 	L 
4PCS	8PCS



STEP: 8

H	G	I
		
2PCS	2PCS	4PCS
	J	L
		
	2PCS	16PCS

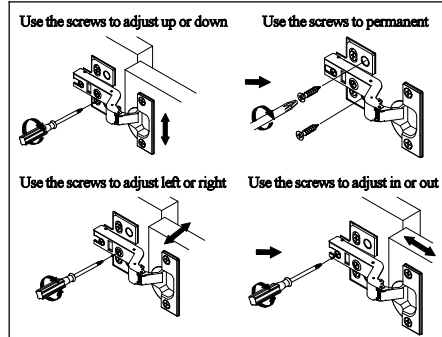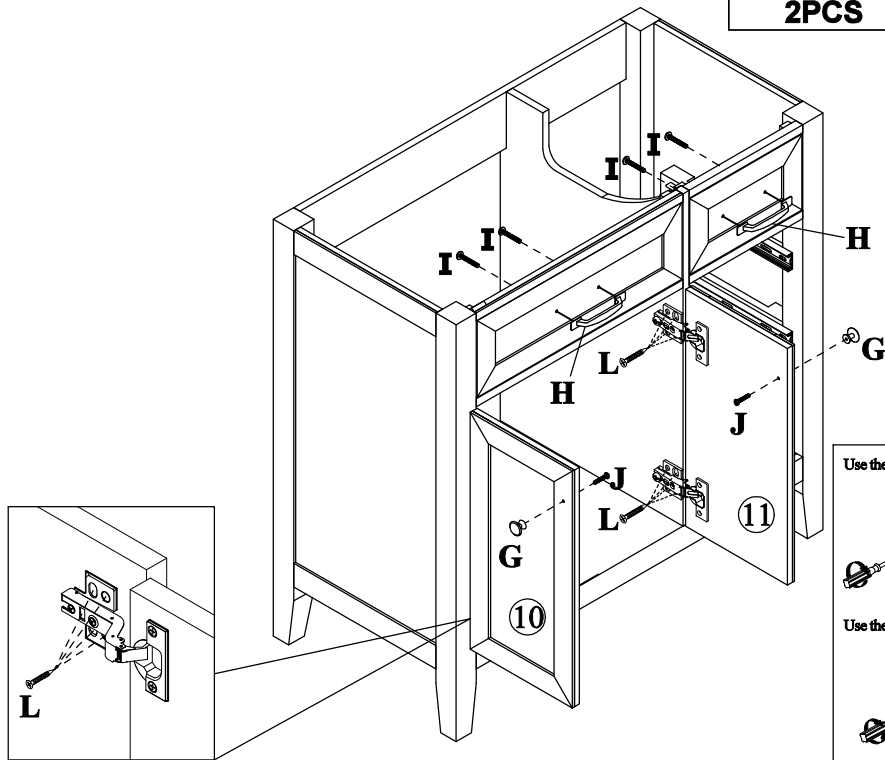



STEP: 9


H	J	F
		
3PCS	6PCS	24PCS

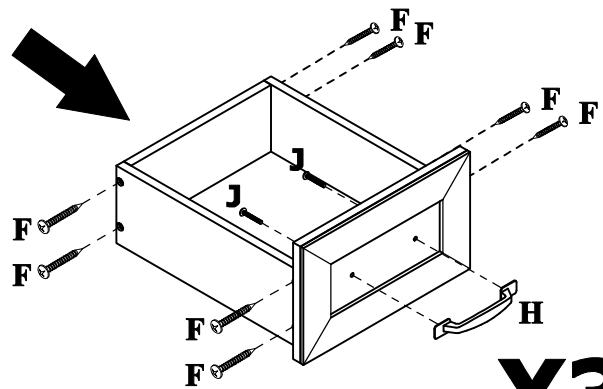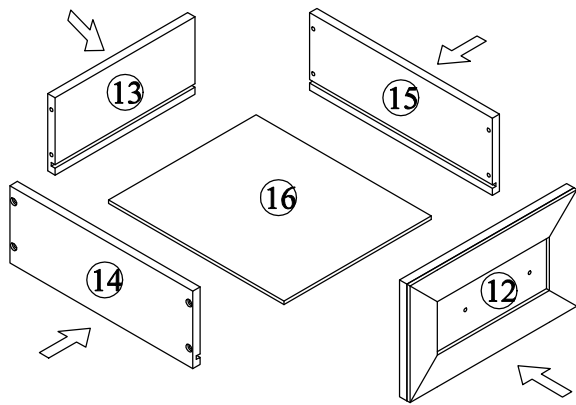

X3



STEP: 10

N		O	
6PCS		18PCS	

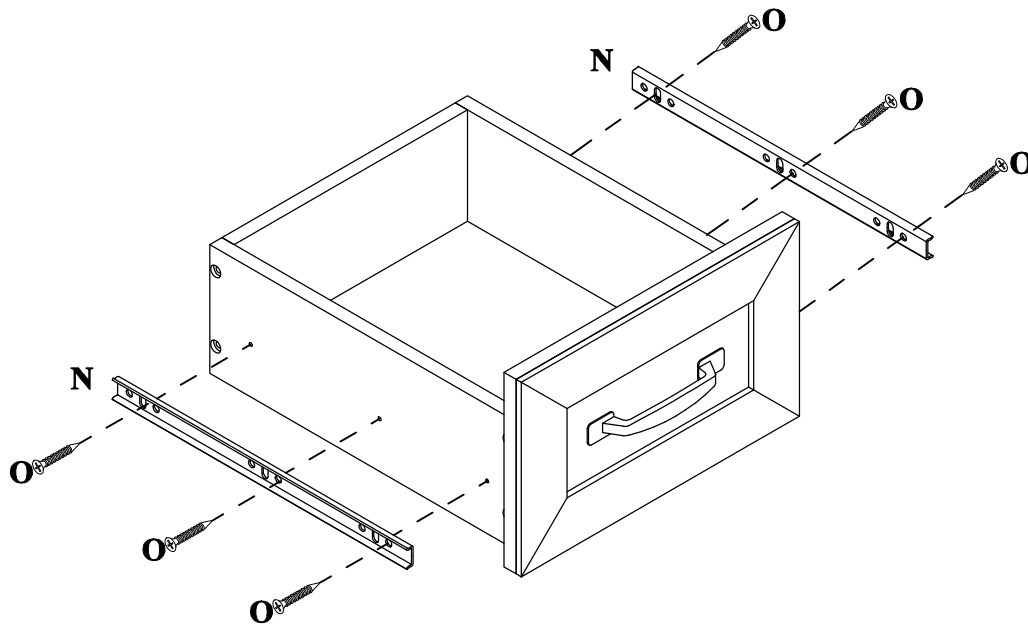

X3

STEP: 11

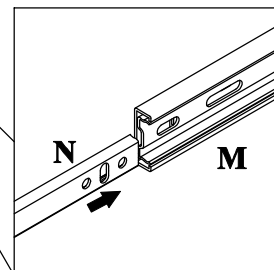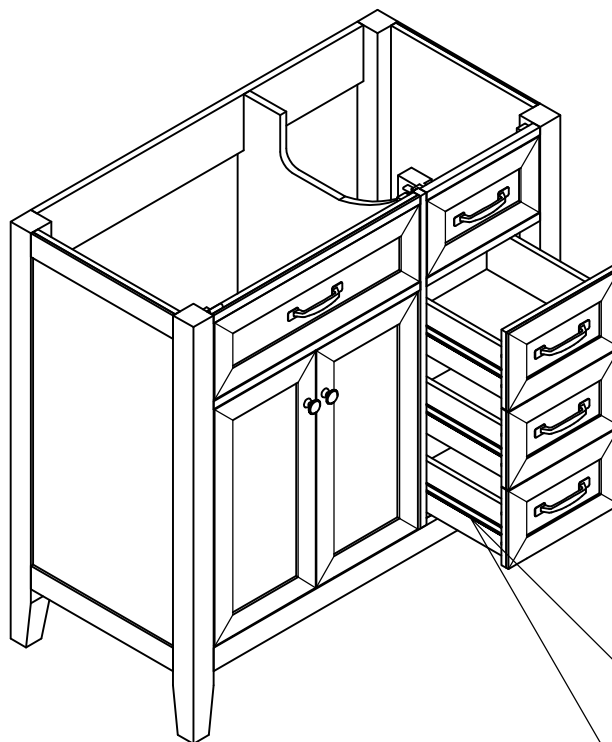

STEP: 12

