
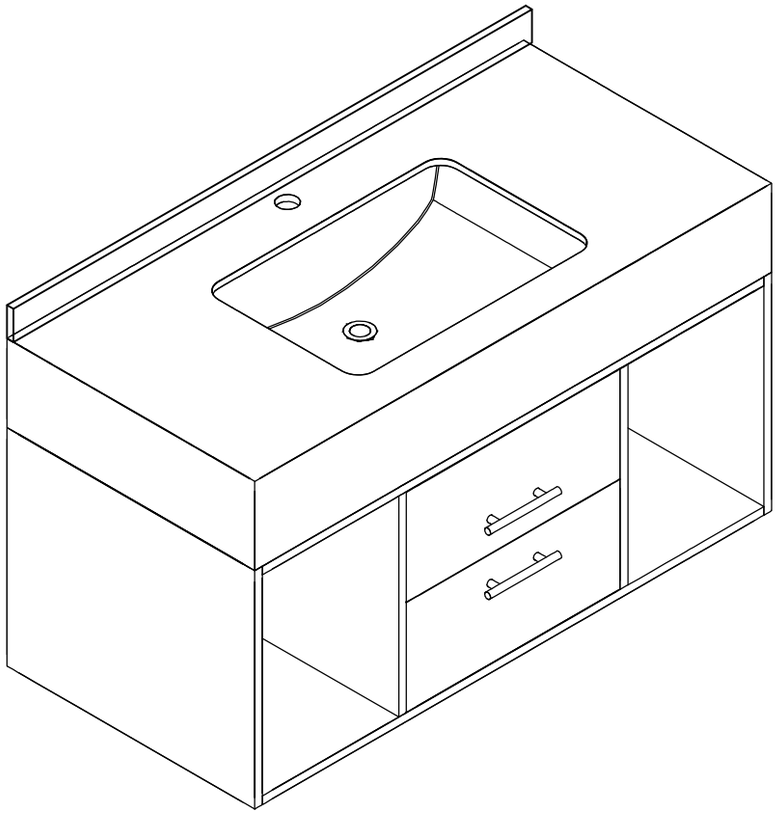
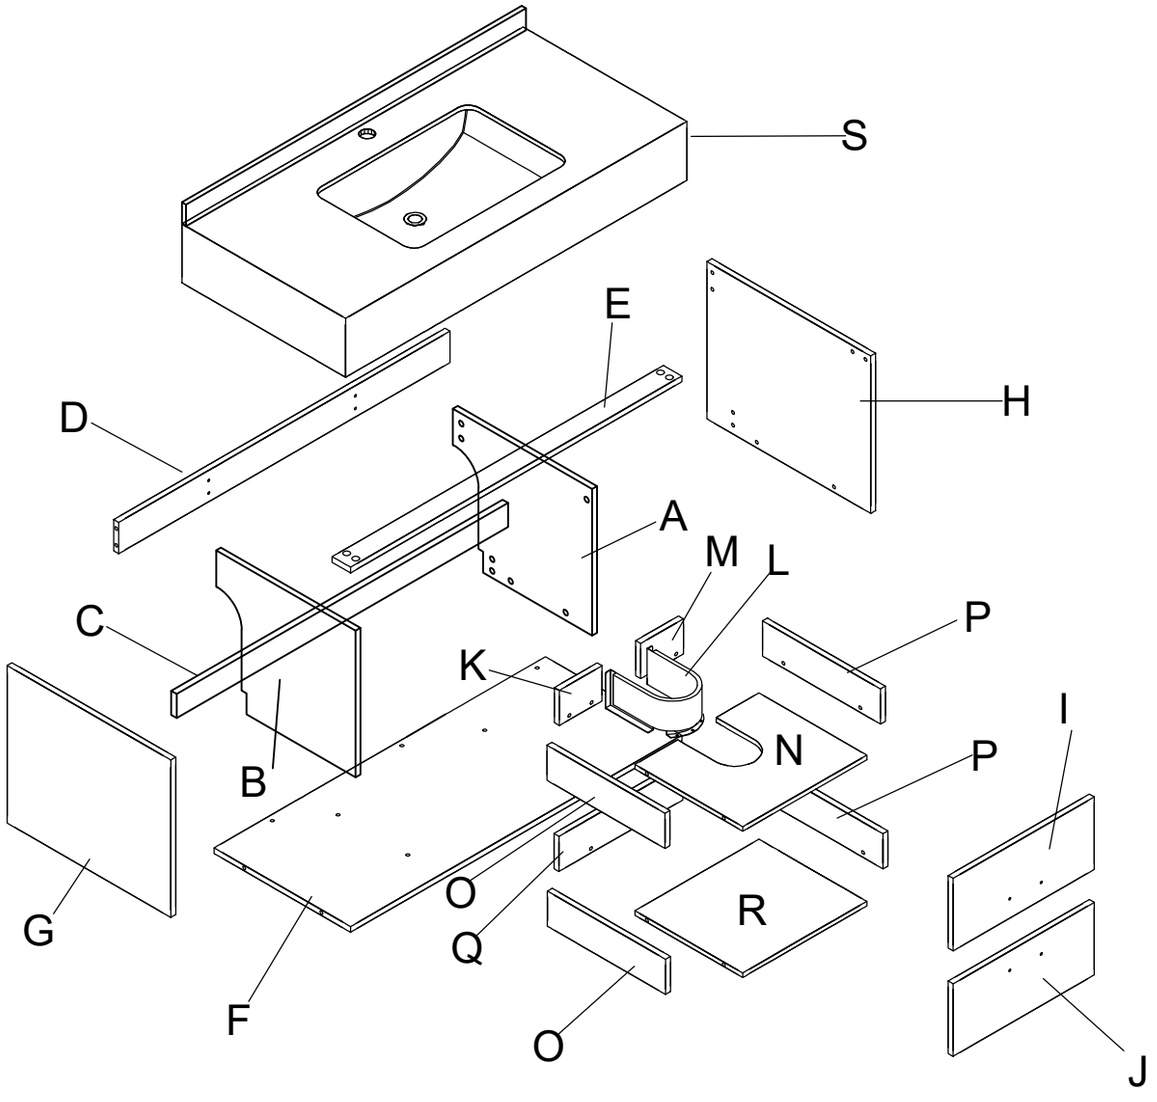


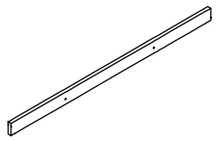
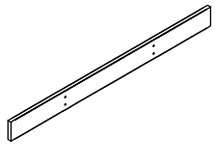
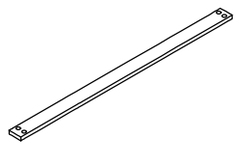
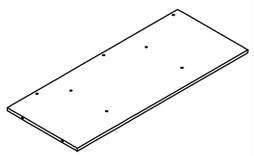
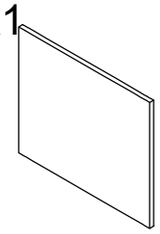
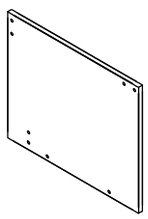
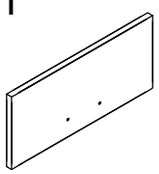
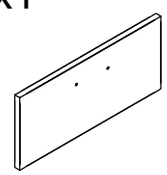



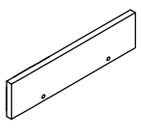
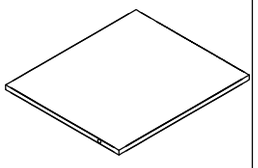



HYBC674

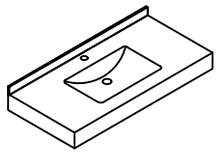

Ax1 	Bx1 	Cx1 	Dx1 	Ex1 	AAx67 	BBx67 	CCx49 	DDx2 	EEx2 
Fx1 	Gx1 	Hx1 	Ix1 	Jx1 	FFx4 	GGx2 	HHx2 	IIx3 	JJx3 
Kx1	Lx1	Mx1	Nx1	Ox2	KKx3	LLx3	MMx2	NNx4	OOx1
Px2 	Qx1 	Rx1 	Sx1 		PPx1 	QQx1 			

AA x8


BB x8

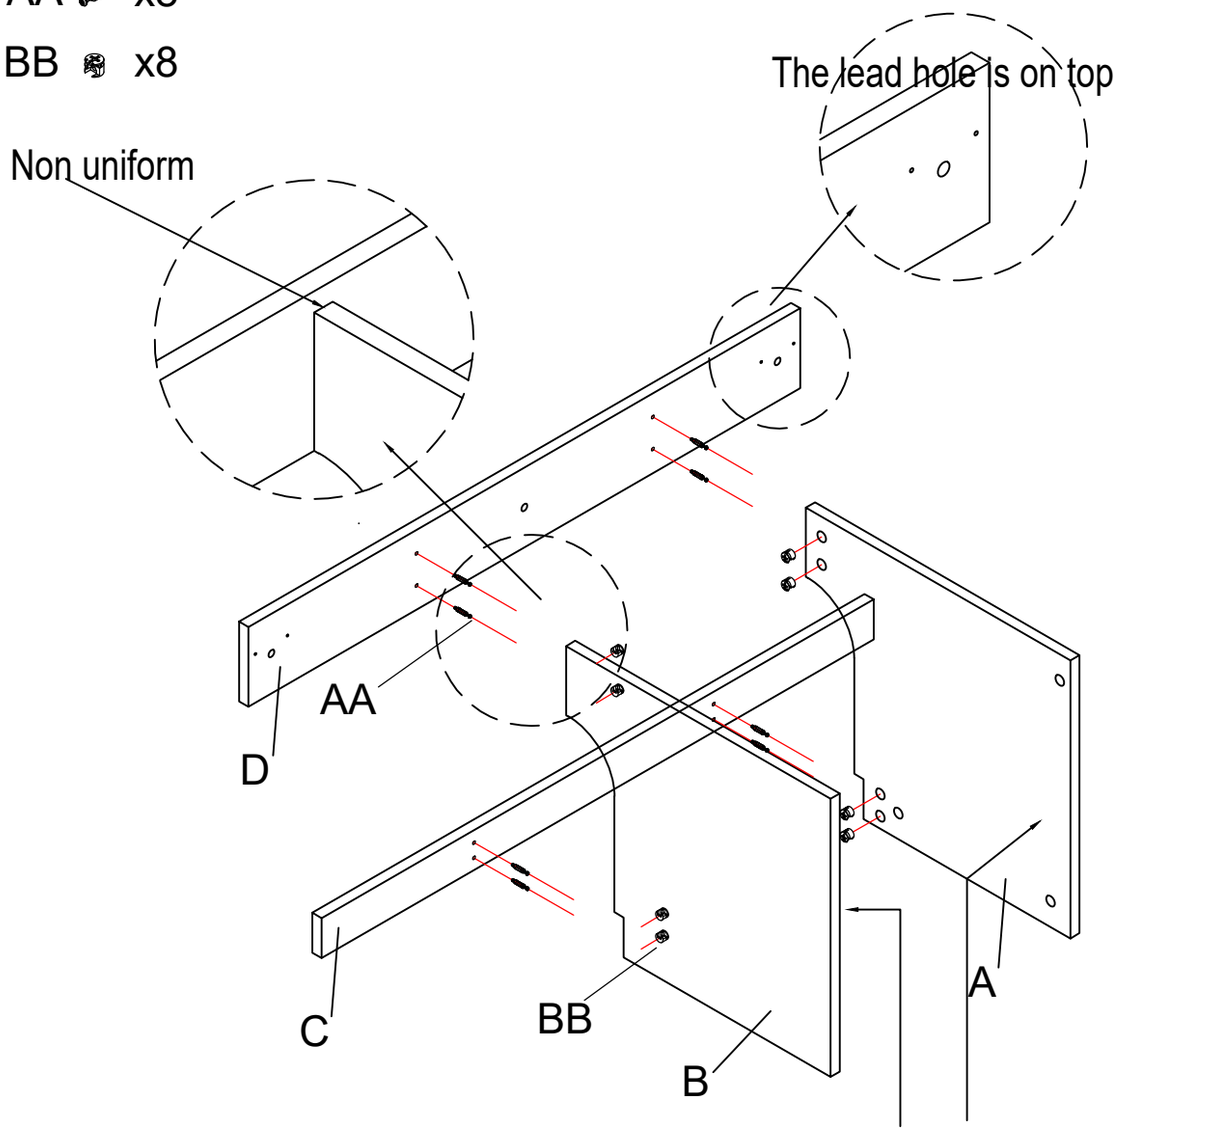

The hole is facing towards the center

AA x2


BB x2

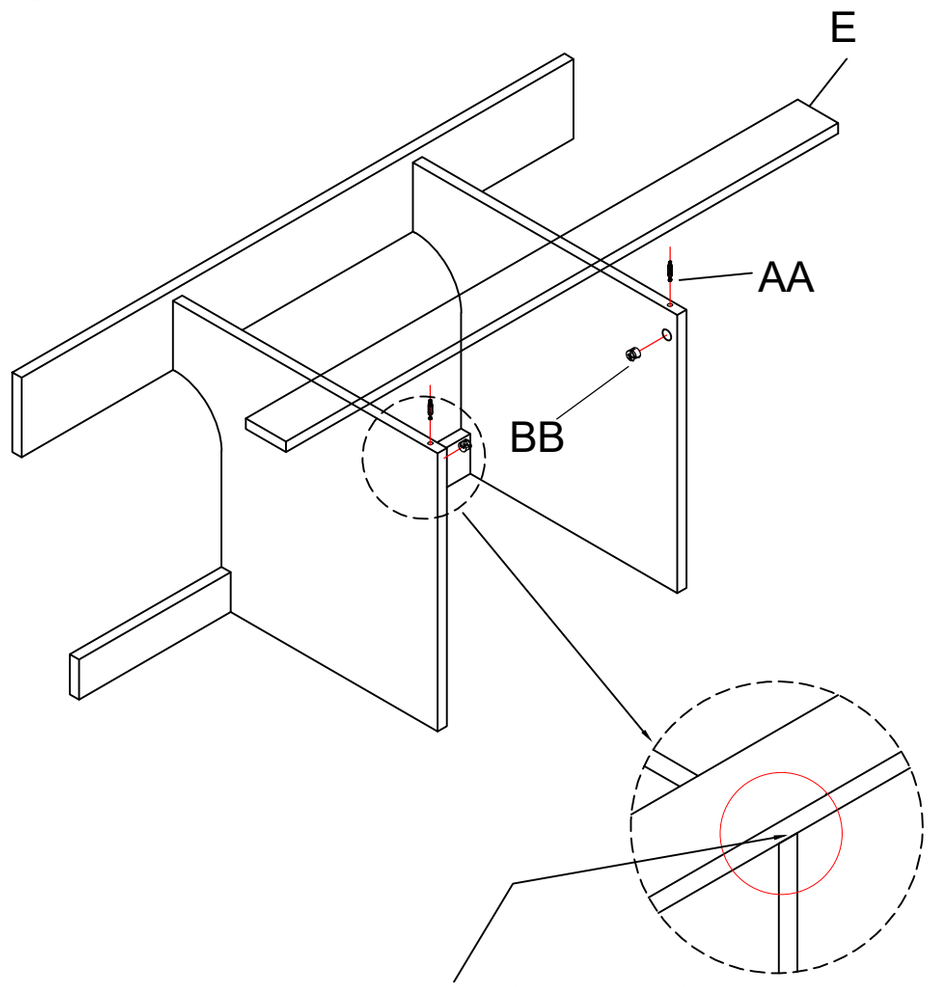

The top plate and the front side of the vertical plate are flush


AA x7

BB x7

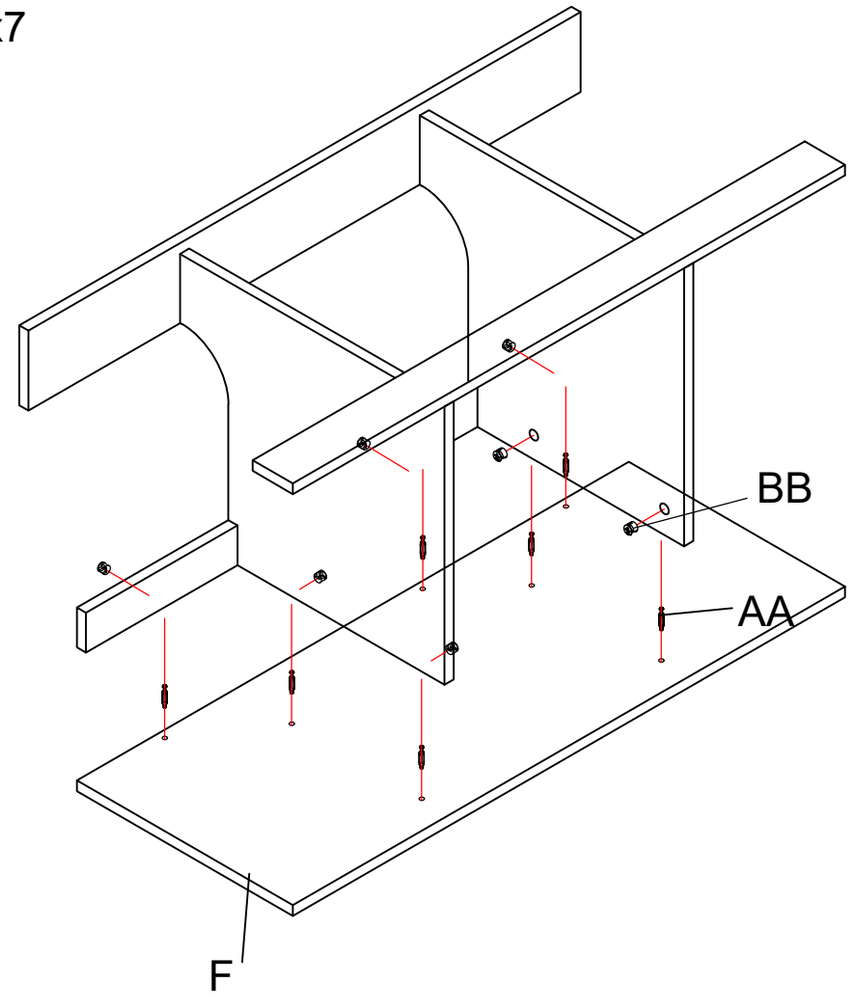



AA x16


BB x16

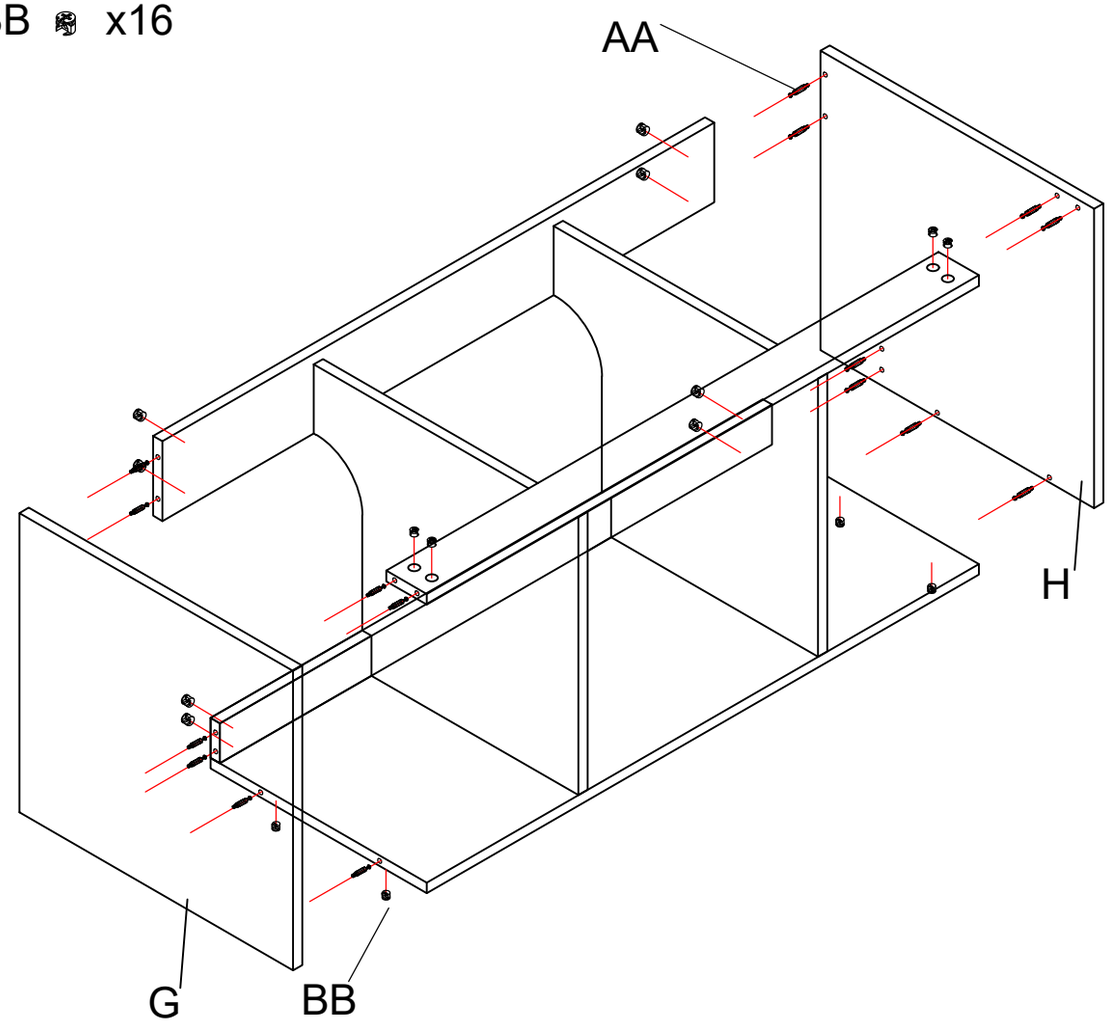

FF  x4

GG  x2

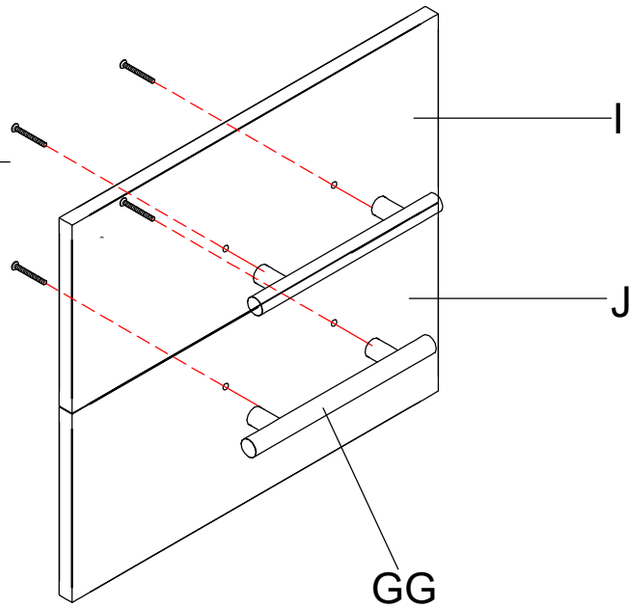


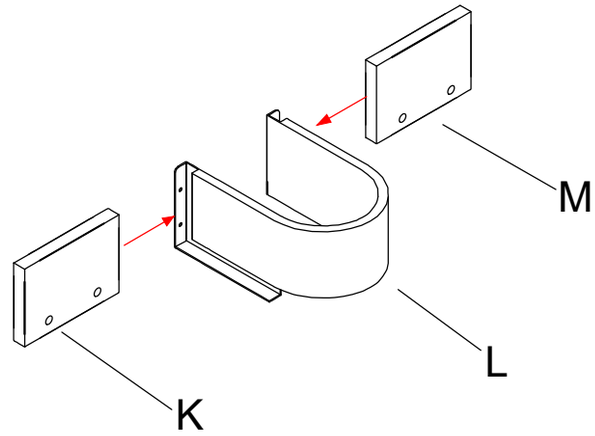

AA x4

BB x4


CC x4

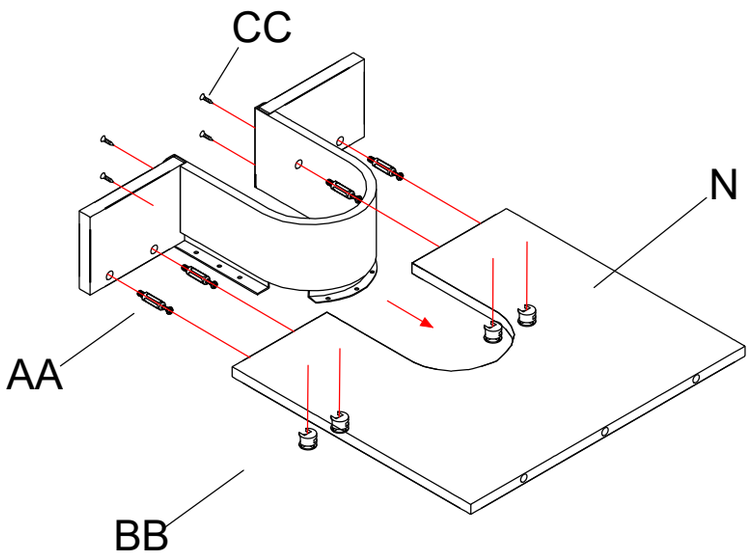

AA x8


BB x8

CC x9

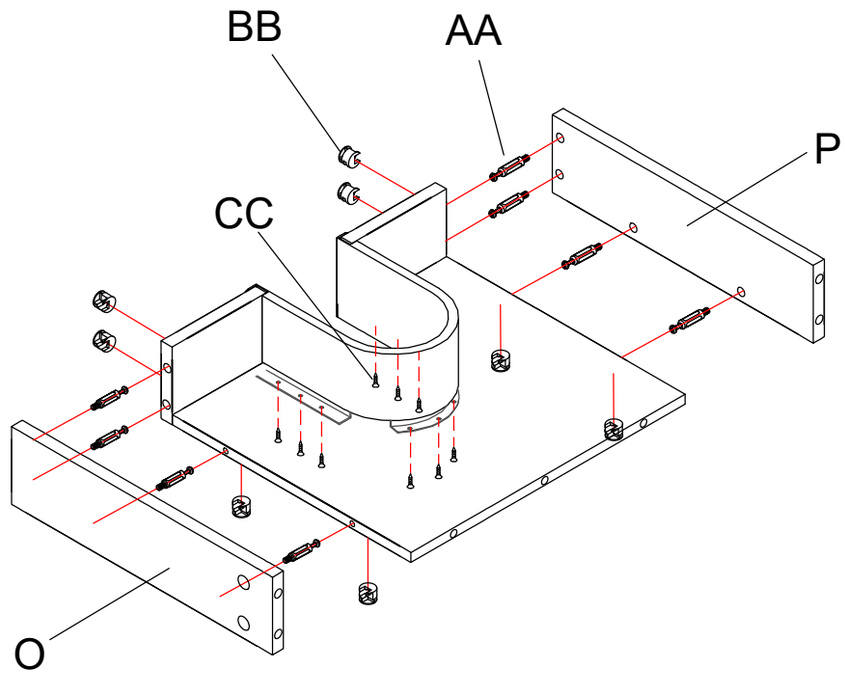


AA x6

BB x6

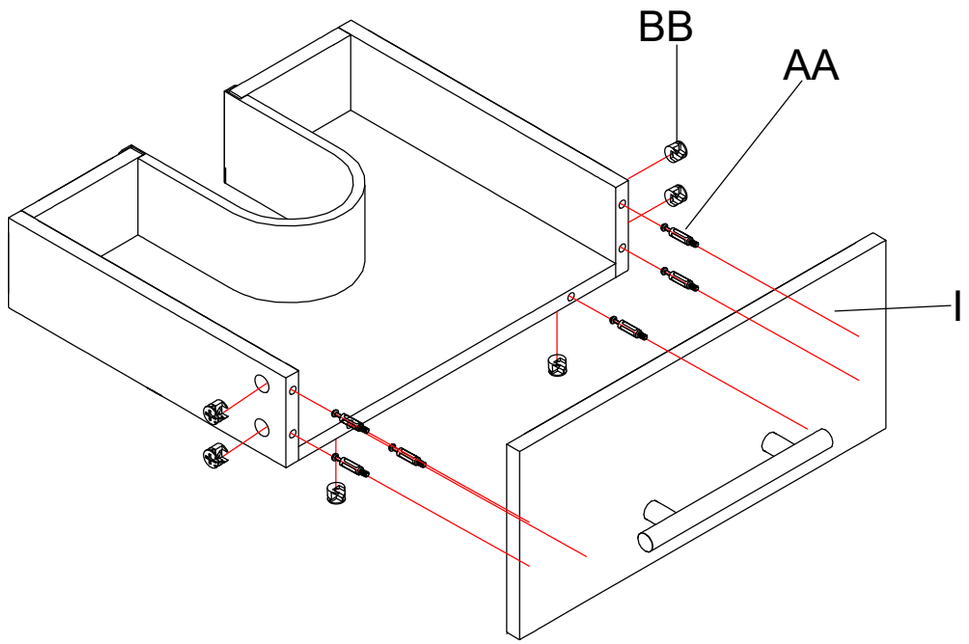


AA x2

BB x2

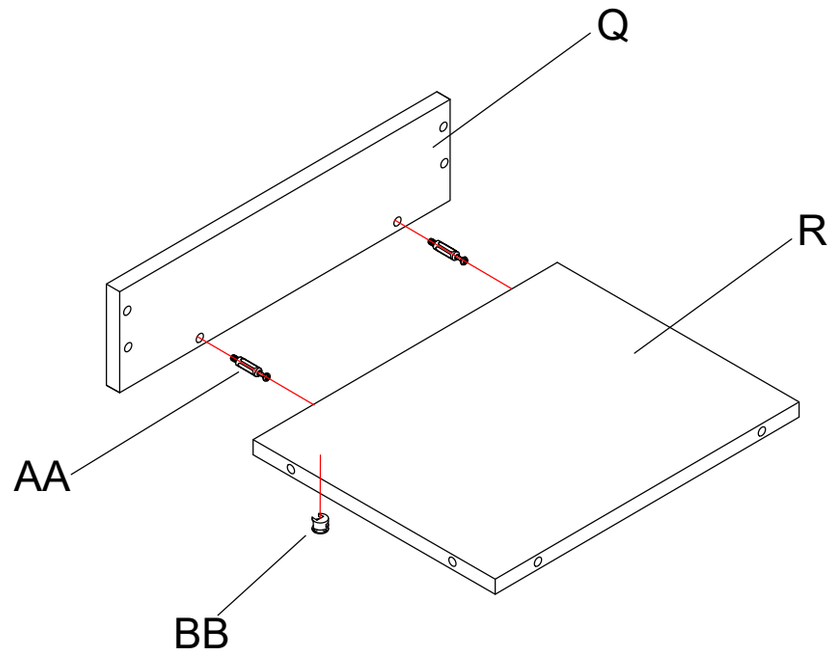


AA x8

BB x8

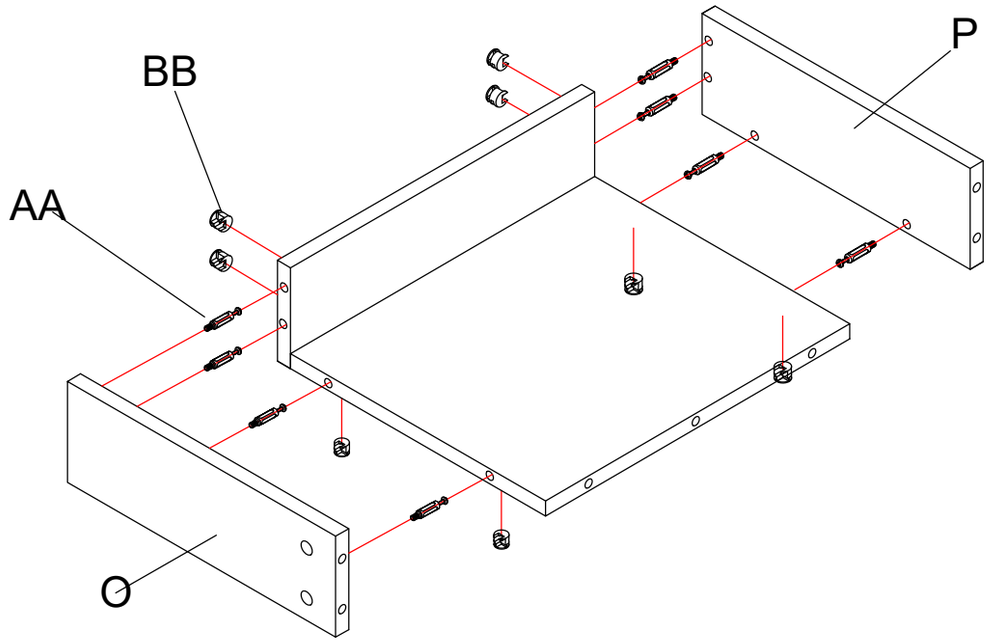

AA x6

BB x6

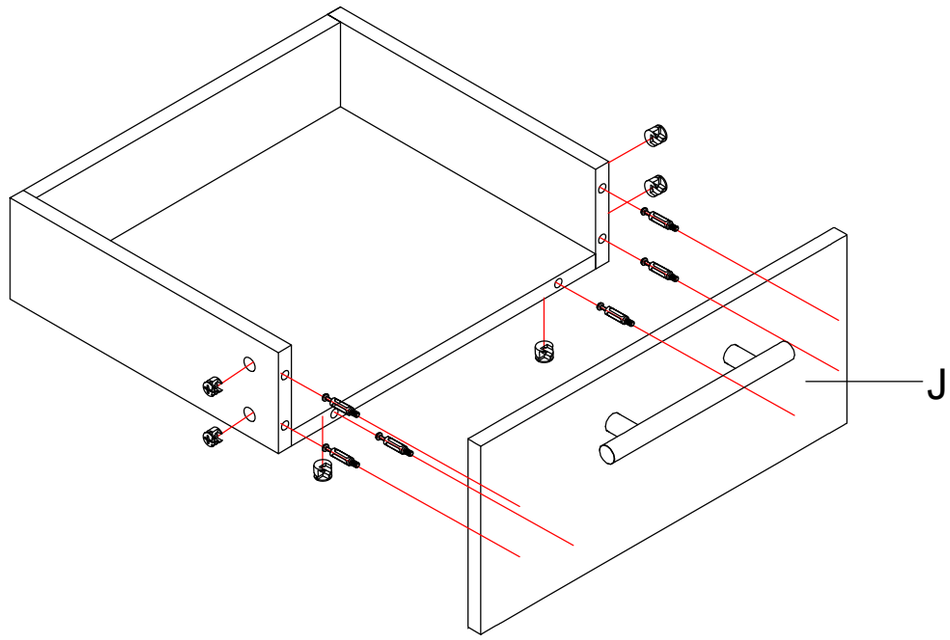



CC x36


DD x2

EE x2

HH 300 x2

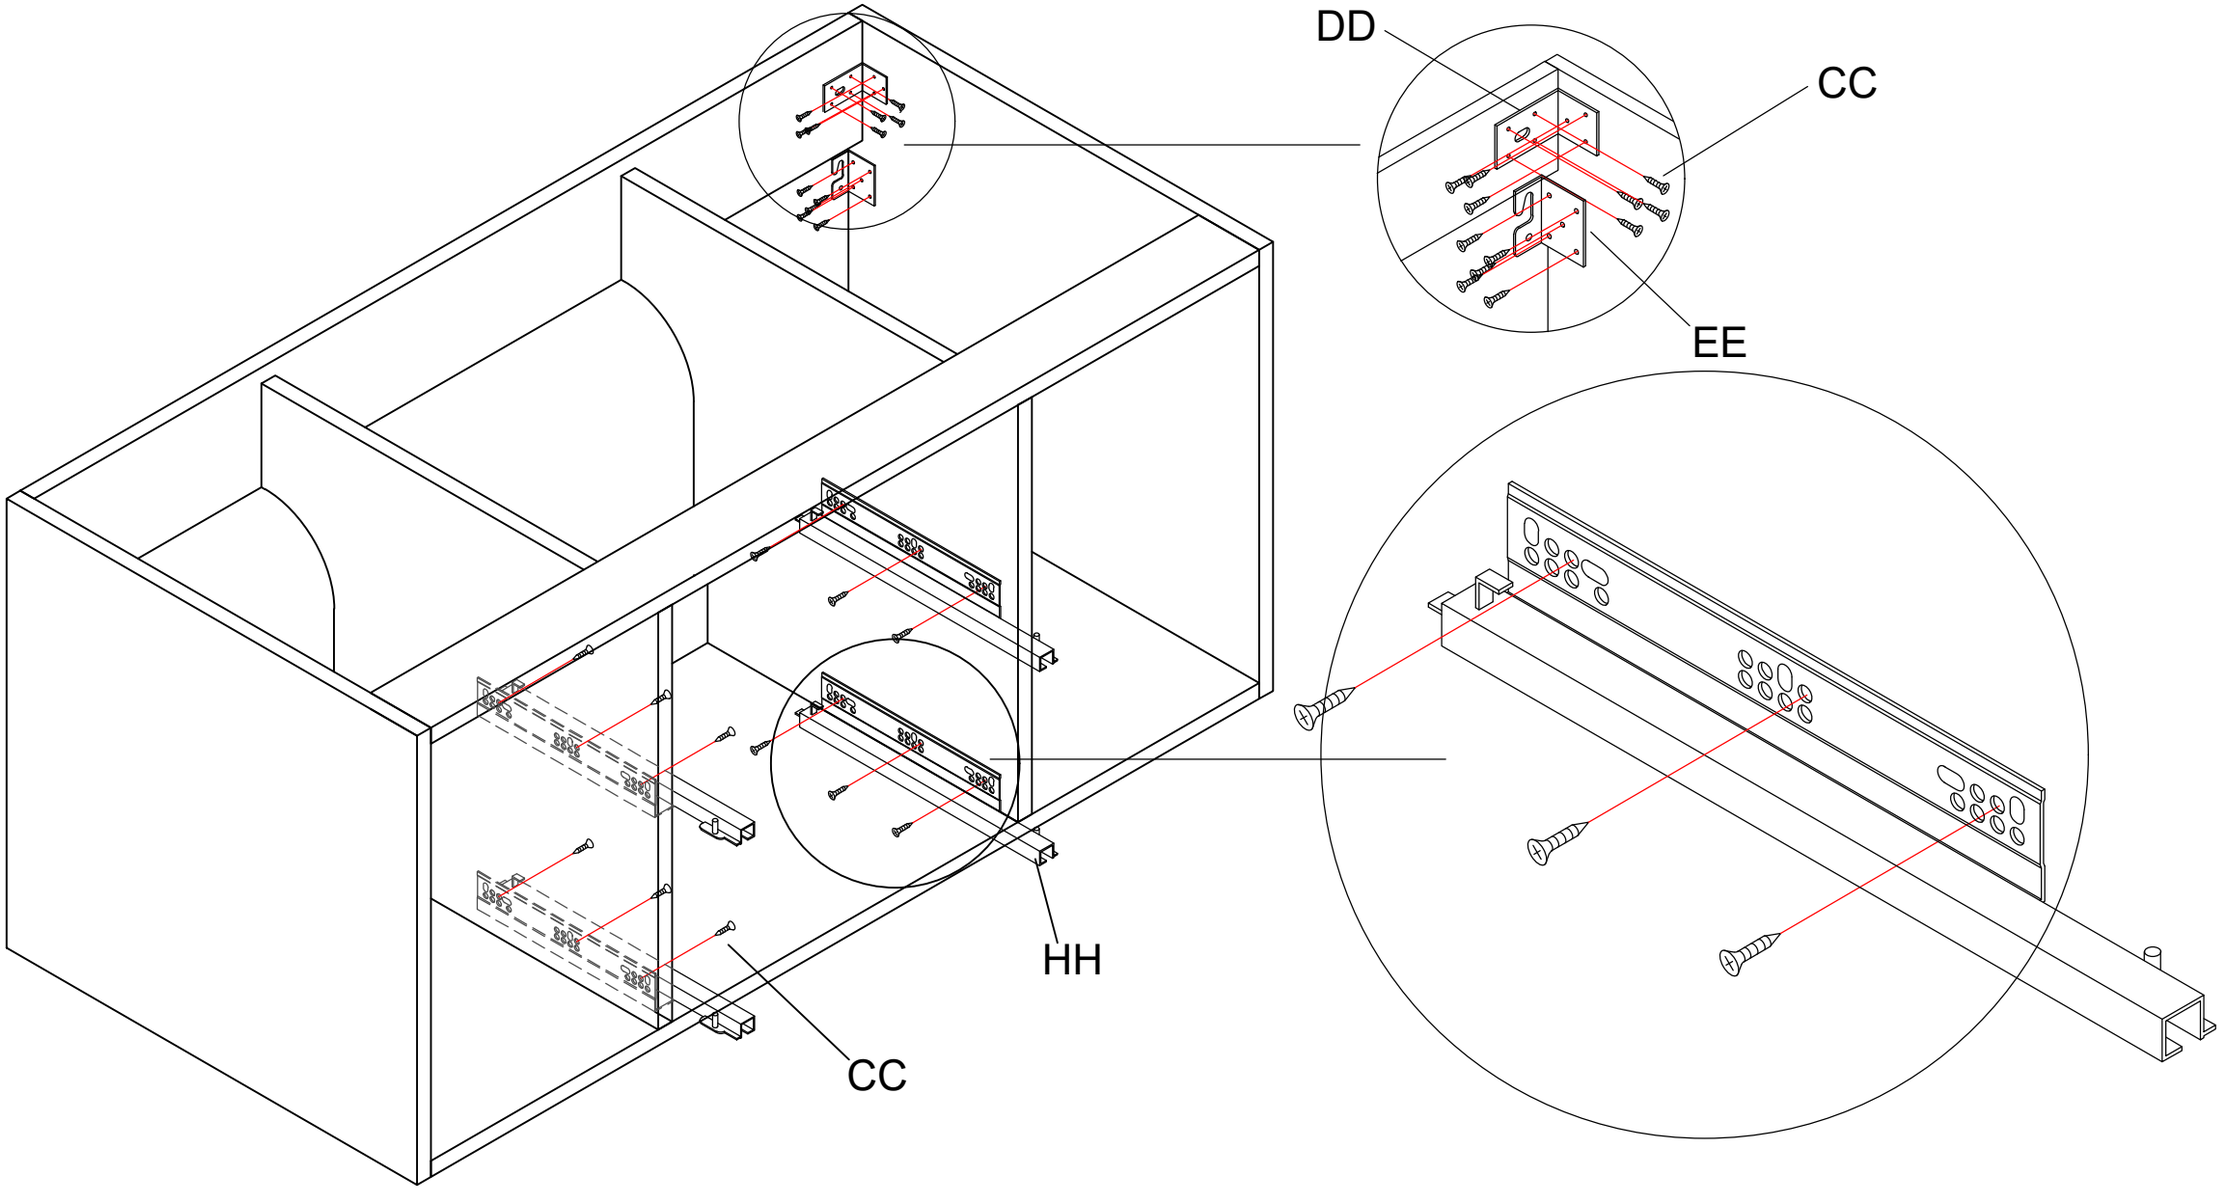


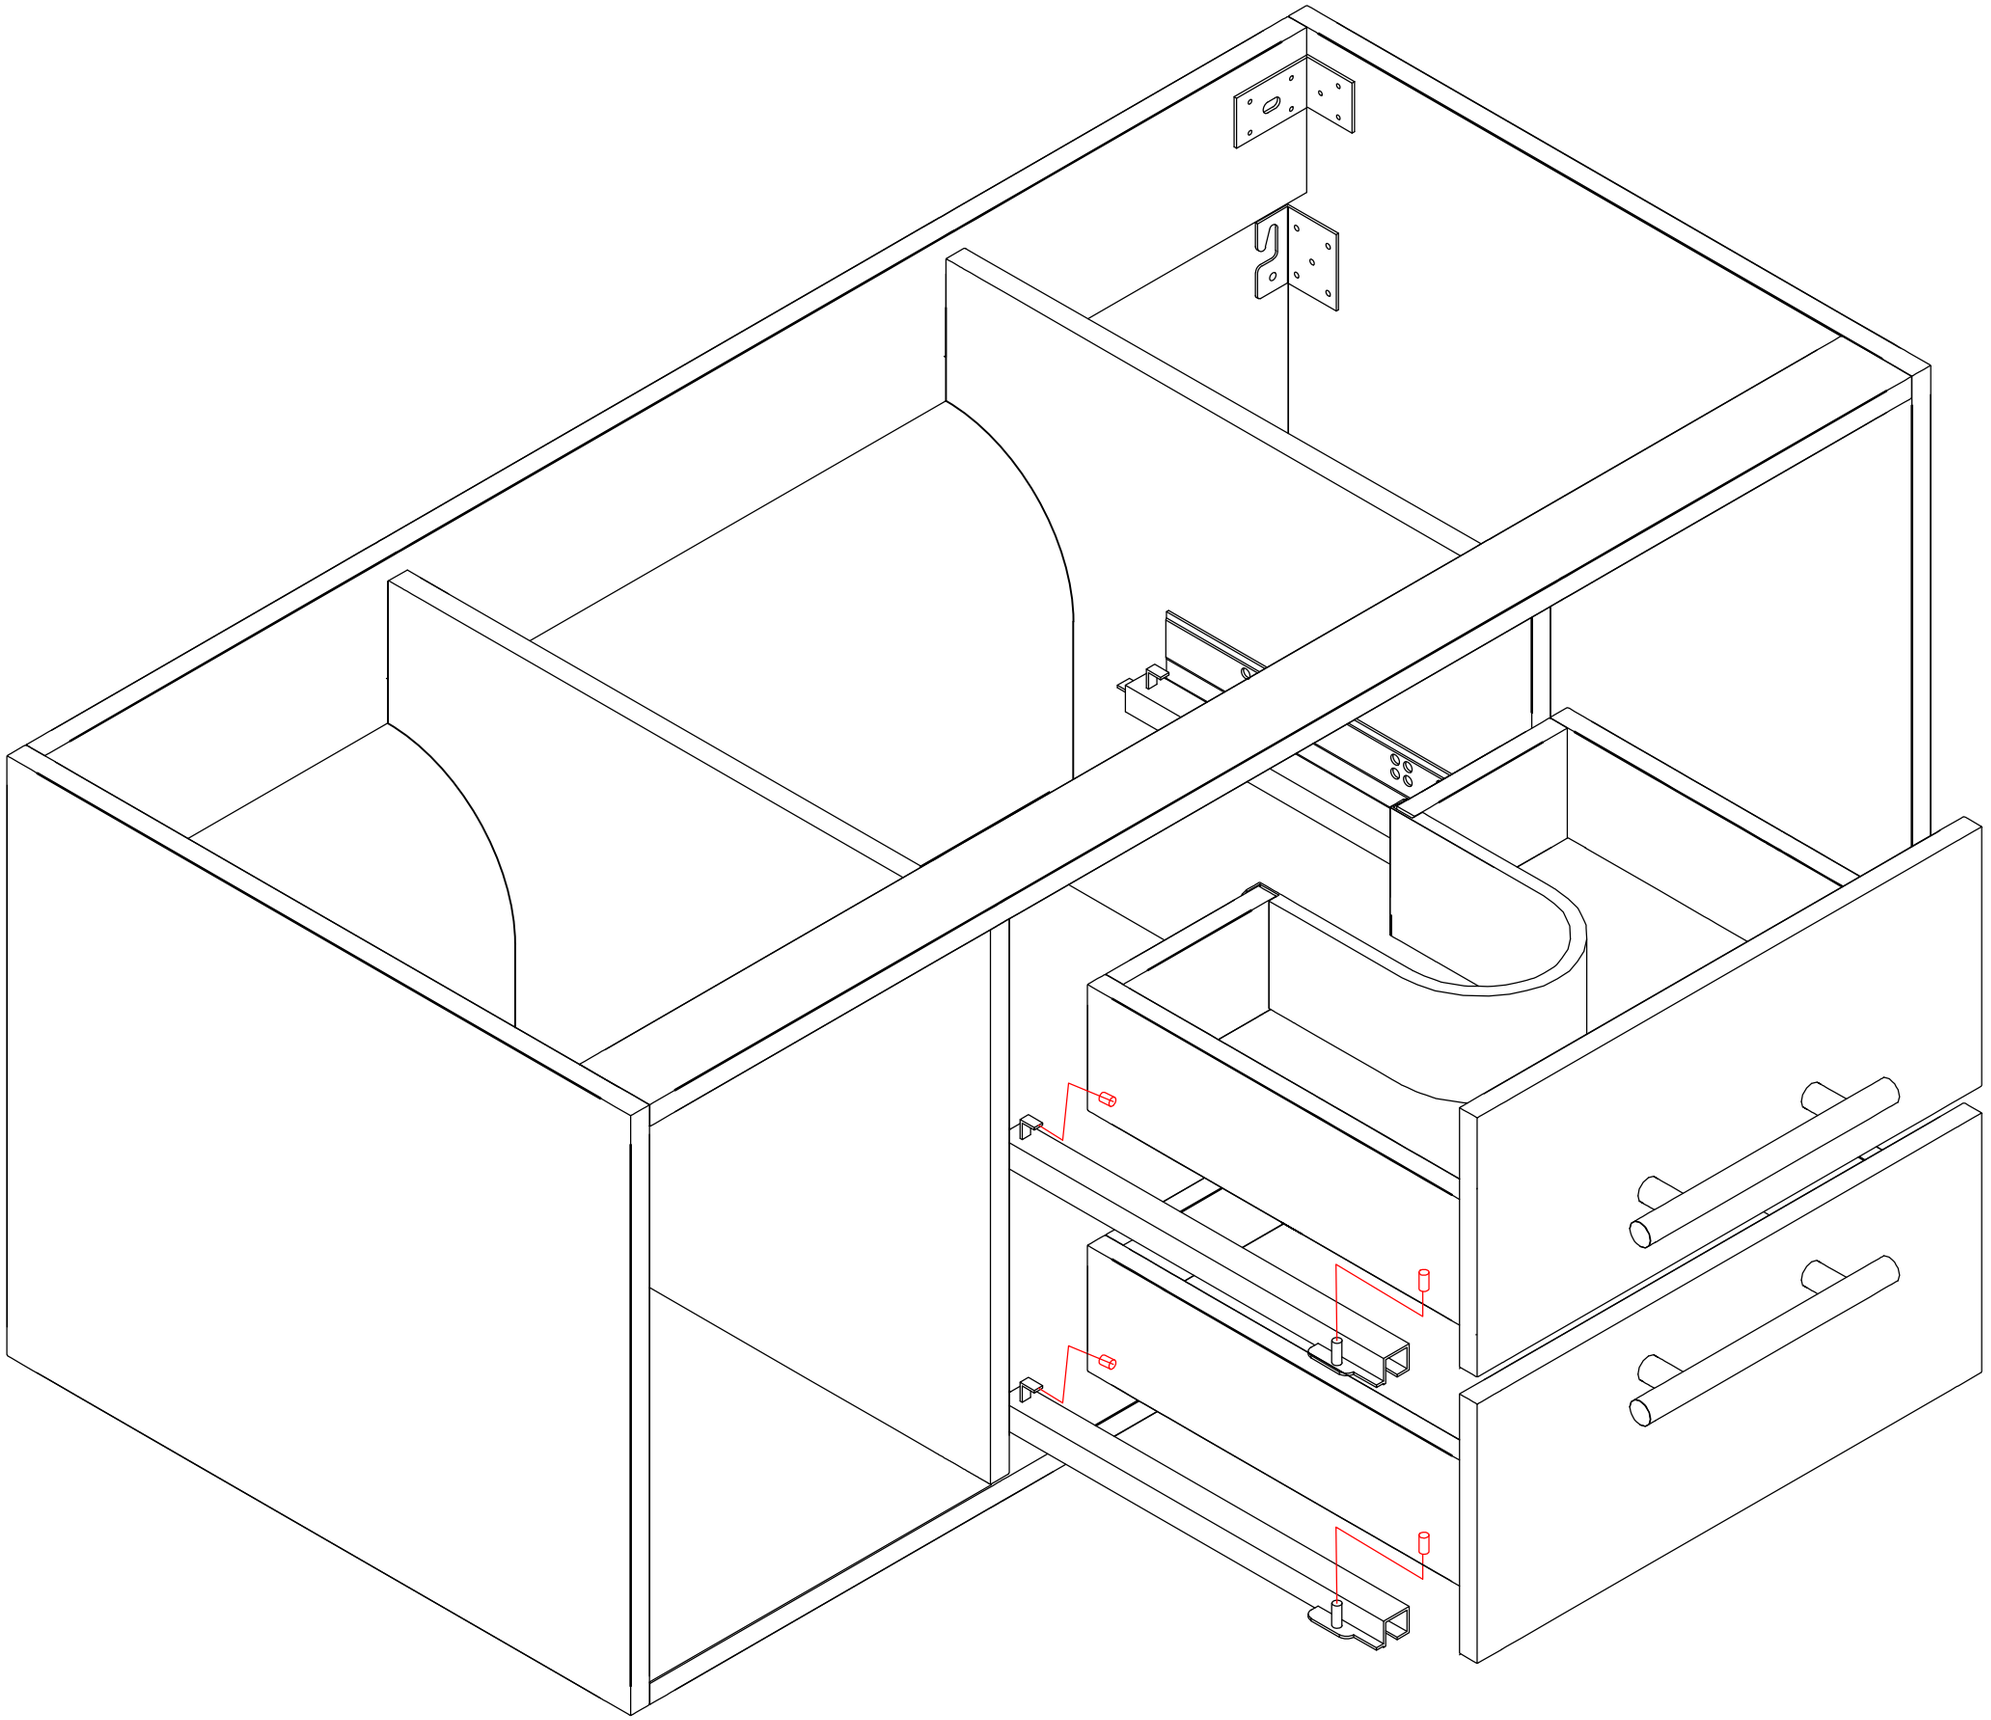

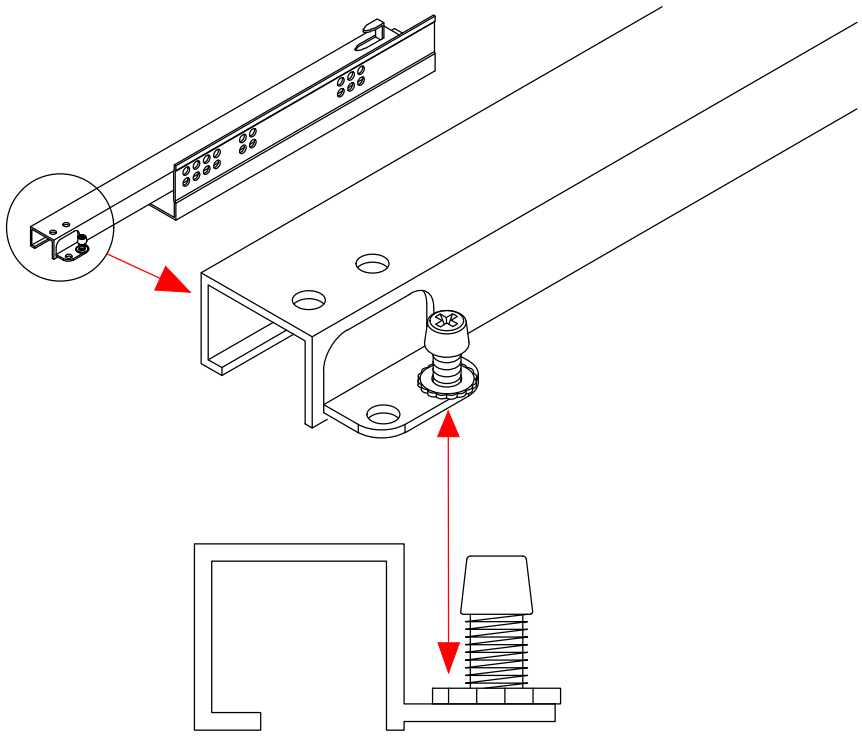


front view


1. Check that the nut is screwed to the bottom.

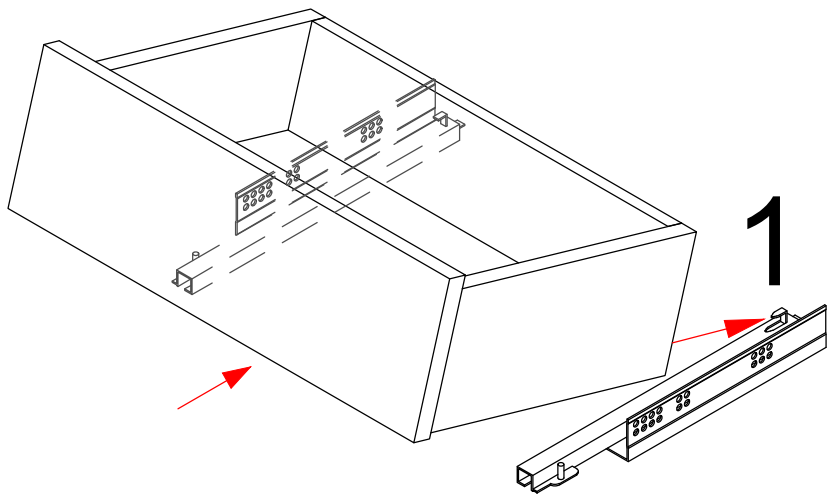

2. Tilt the drawer down, and slide the drawer inside along the rails.

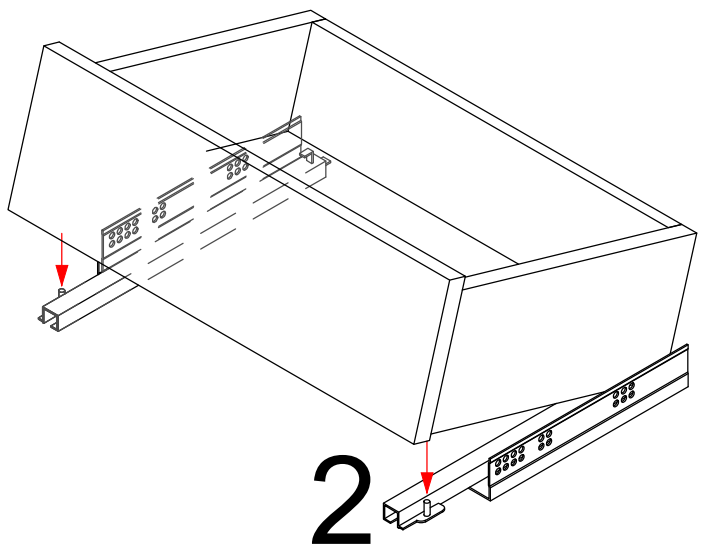

3. Put the drawer down naturally.

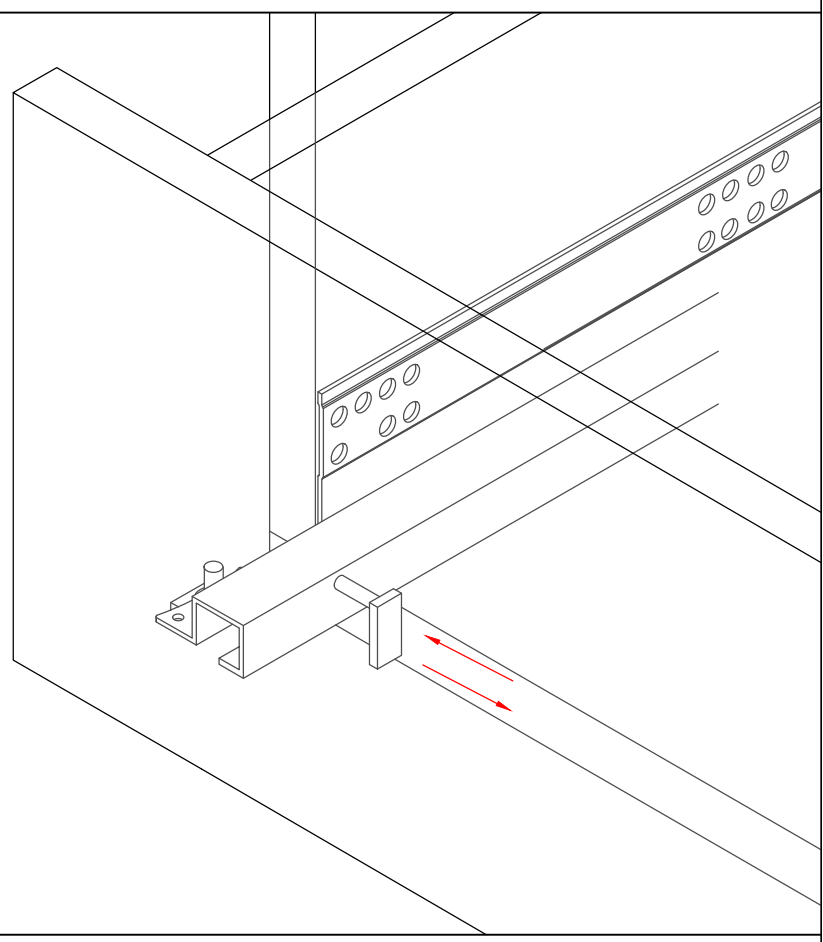

4.Push to lock
Pull to unlock


II x3

JJ x3

KK x3

LL x3

MM x2

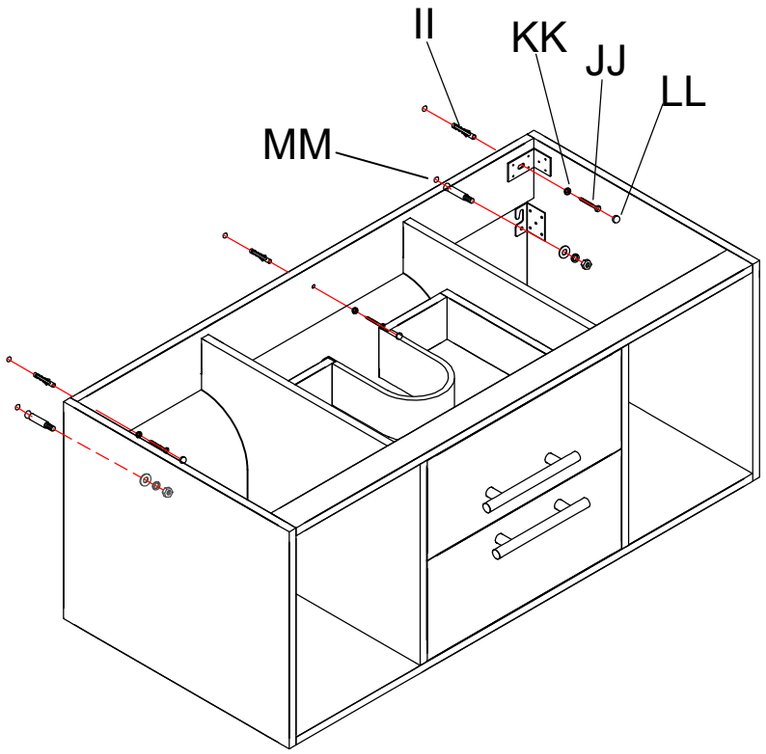

NN x4

OO x1

