
ASSEMBLY INSTRUCTION


STEP 1

√


Please align the pattern on the tabletop before tightening the screws.

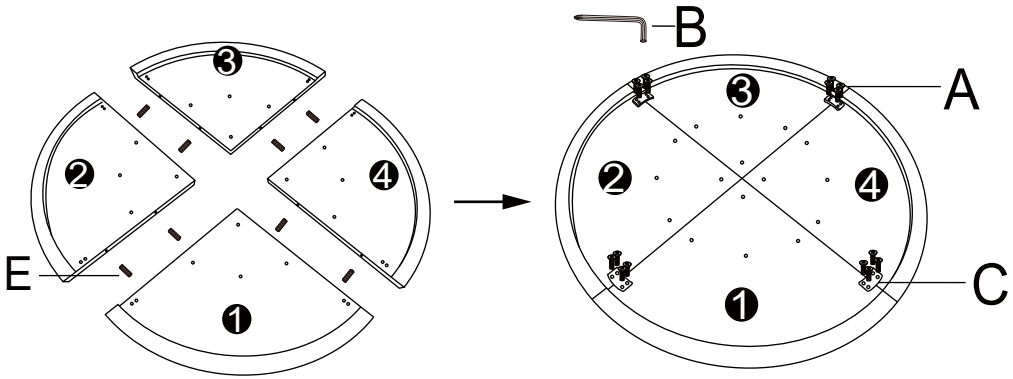


STEP 2

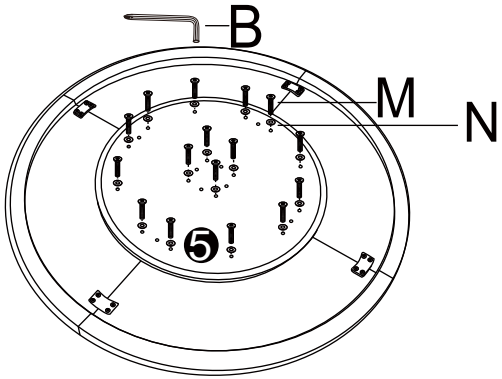


STEP 3

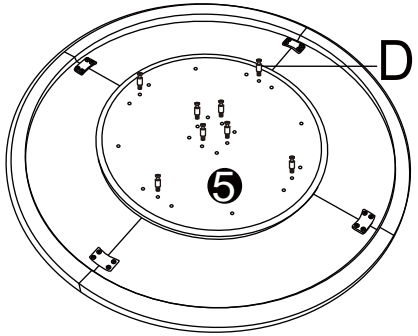


STEP 4

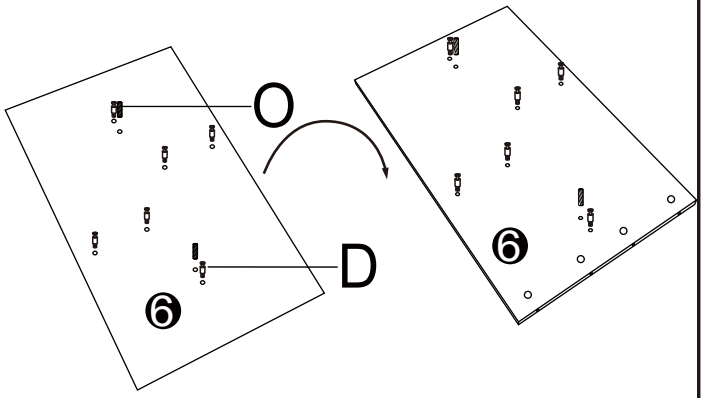


STEP 5

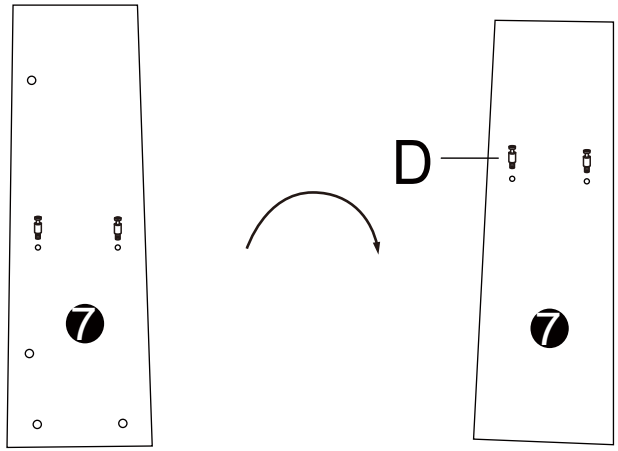


STEP 6

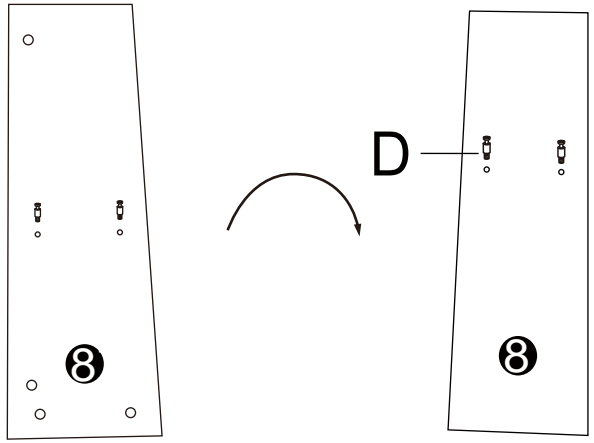


STEP 7

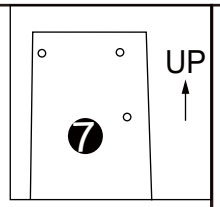


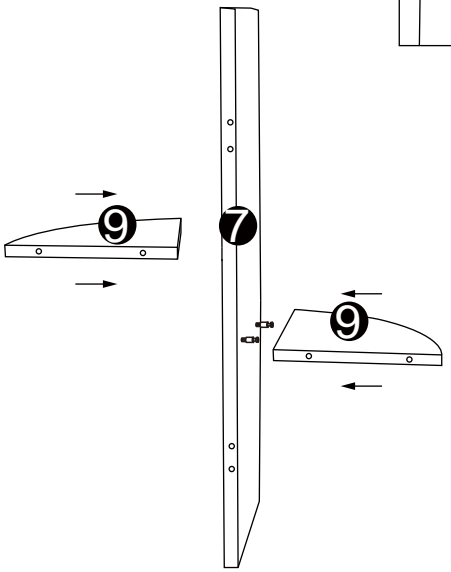


STEP 8

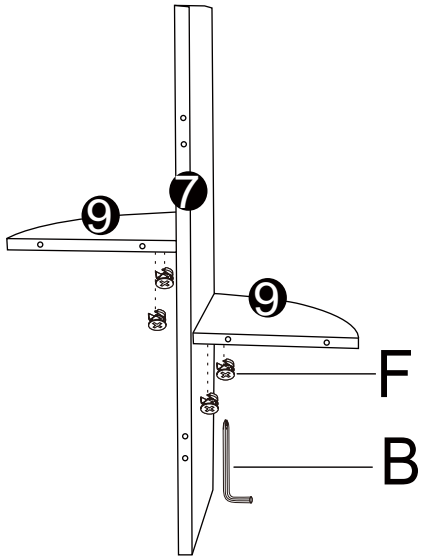


STEP 9

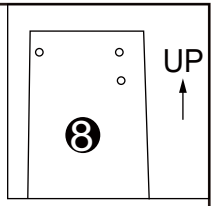


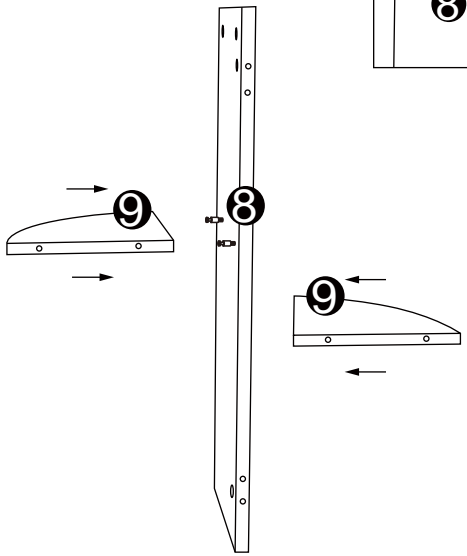


STEP 10

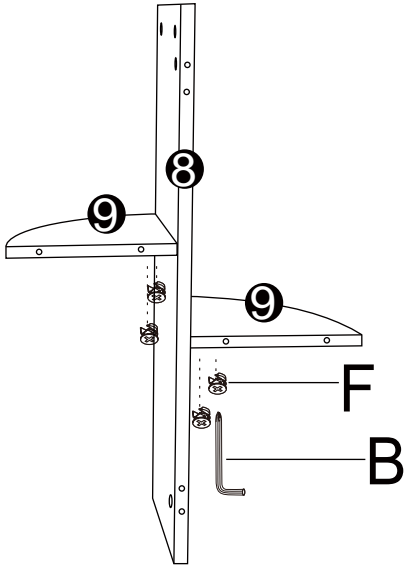


STEP 11

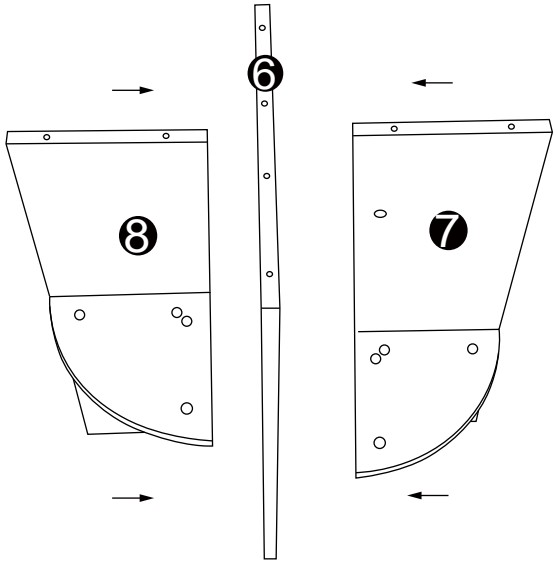


STEP 12

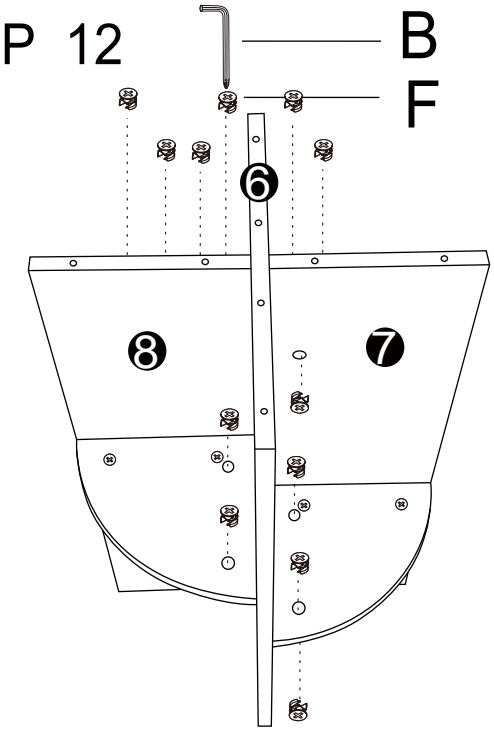


STEP 13

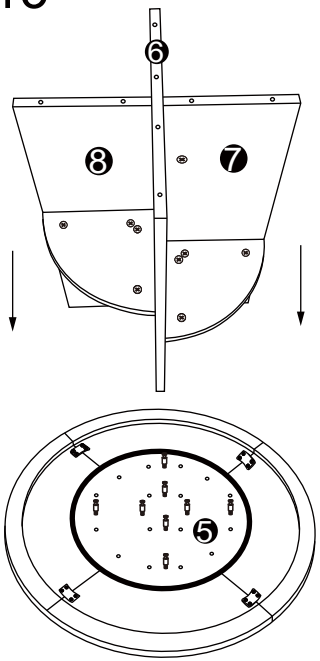


STEP 14

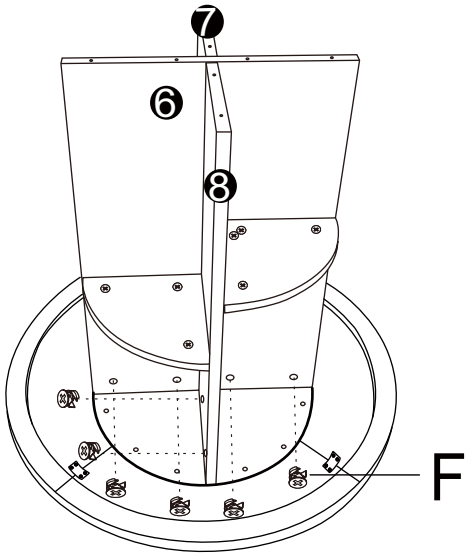

STEP 15

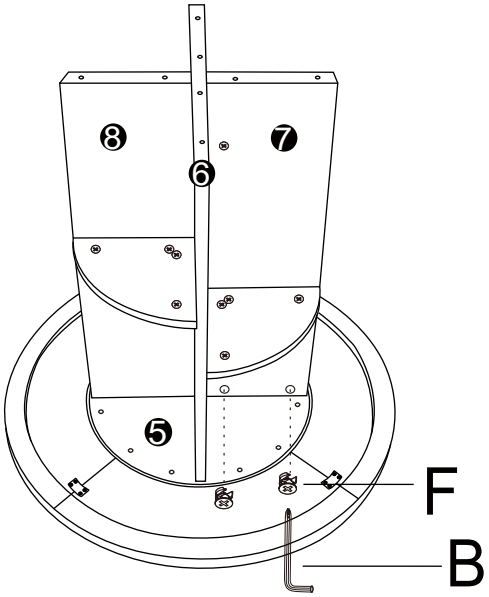


STEP 16

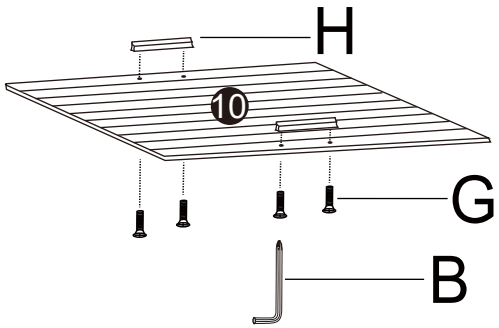

x2


STEP 17

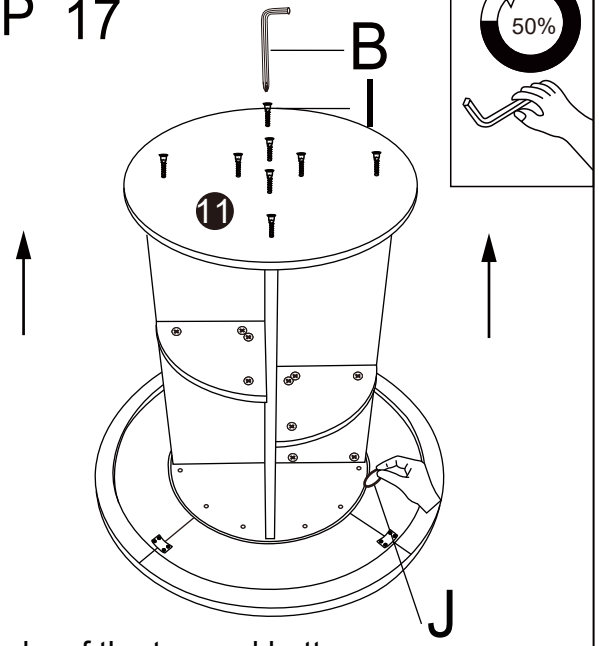


Two tracks of the top and bottom boards need to be waxed by yourself.


STEP 18

Please tighten the screws after twp Part ⑩ are intered into the tracks.

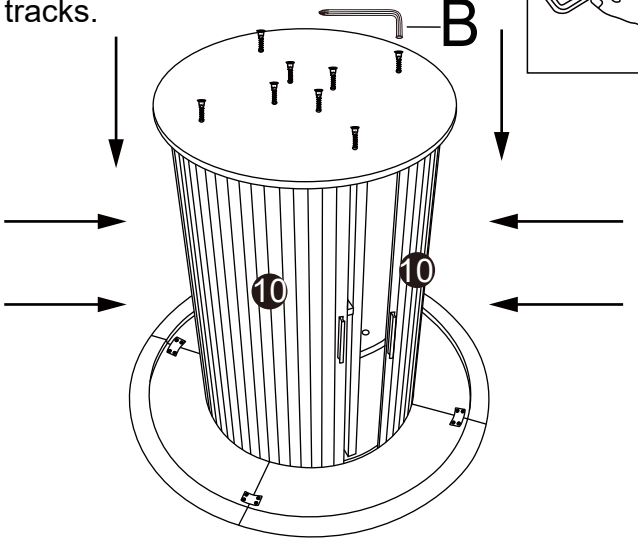


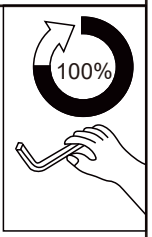


STEP 19

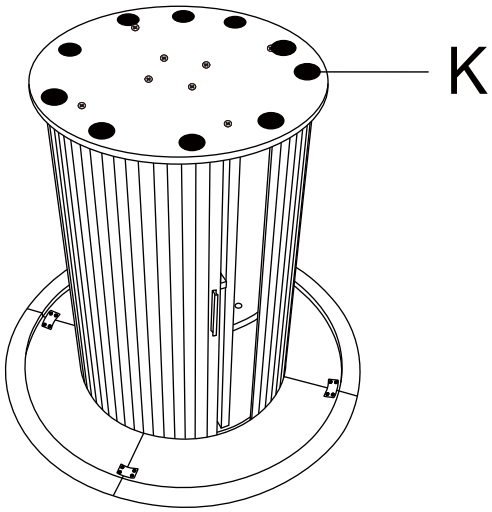

STEP 20

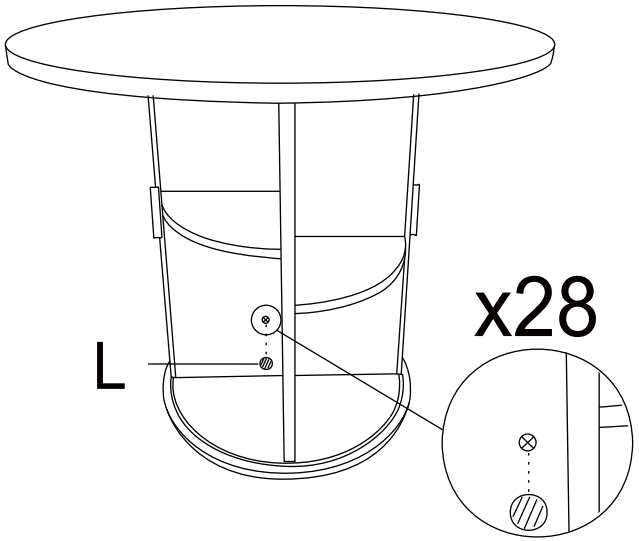

STEP 21

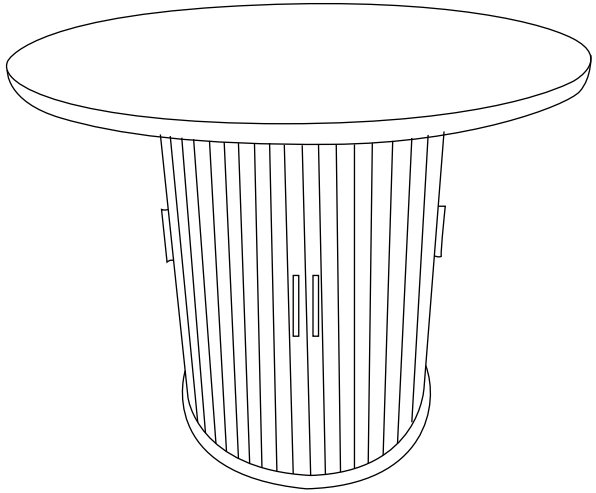

❶ x1	❷ x1	❸ x1	❹ x1	❺ x1	❻ x1	❼ x1
❽ x1	❾ x4	❿ x2	⓫ x1		A M6x13mm x16+1	B x1
C x4	D x28+3	E M6 x8+1	F x28+3	G M4x8mm x8+1	H x4	I x8+1
J WAX x1	K x10+2	L x28+3	M M6x30mm x16+1	N M6x16x1.5mm x16+1	O M8 x4+1	