



Installation manual

3BD-W48B+TSQ16-4.3FT+W48

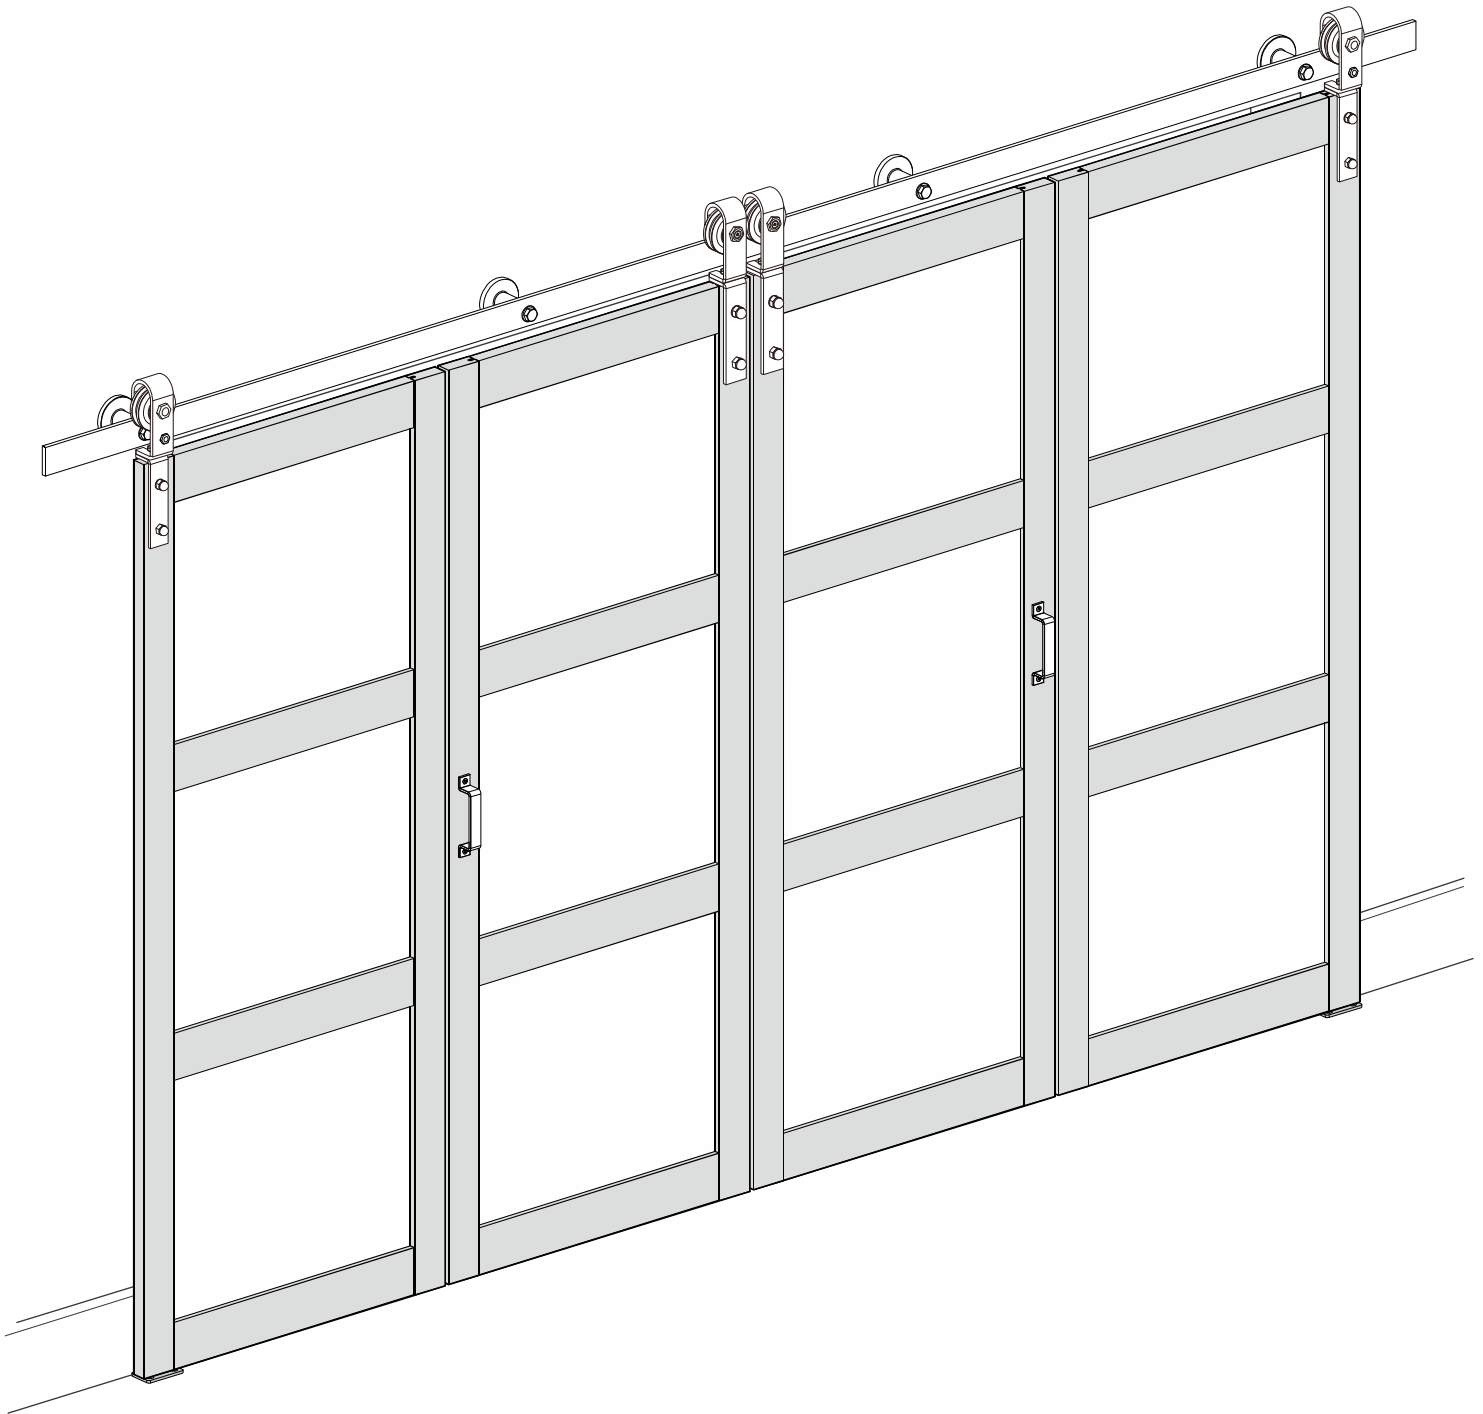


Main Components

x1 Rail

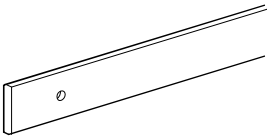

x2 Roller Hanger

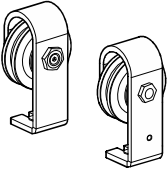

x2 Hex Bolts



x2 Nut



M5x26mm
13/64" x 1 1/32"


x2 Fixed connector



x4 Screw



x4 Hanger roller bracket




M5x6mm
13/64" x 15/64"

x8 M4.8x32mm
3/16" x 1 17/64"

25/64"x2 11/64" (x 8)
(M10x55mm)
bolts for 1 3/8"-1 37/64" door
(35-40mm)

25/64"x2 23/64" (x 8)
(M10x60mm)
bolts for 1 37/64"-1-49/64" door
(40-45mm)

x4 Wall Spacer



x4 25/64" (10mm)
Anchor Floor



x4 (8mm x 90mm)
5/16" x 3 35/64"
Wall Screw



x4 Washers




x8 (4.2mm x 32mm)
11/64" x 1 17/64"
Floor Screws



x8 5/16"(8mm)
Floor Anchor



x2 Internal
Floor -Mounted
Door Guide




x2 Socket



hinge
x6



x24 (3.5mmX30mm)
9/64"x1 3/16"
hinge Screws



x 2 sealing strip



x2 Handle




x4 (5.5mmx32mm)
7/32"x1 17/64"
Handle screw



To provide feedback on a particular part, please mark it by circling in the instruction manual and kindly send us a photo.

Tools Required


Tape Measure

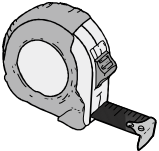

Pencil



Cordless Drill




Phillips Screwdriver



Wrench




1/4"
Mortise Router Head

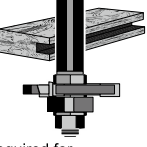


Required for
Floor-Mounted Door
Guide InstallationAllen


level



Speed Square



x 1Allen Key

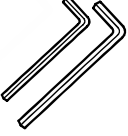


IMPORTANT: BEFORE YOU BEGIN

IF INSTALLING DIRECTLY INTO A NON-CONCRETE WALL, DO NOT ATTEMPT TO INSTALL THE RAIL SOLELY TO THE DRYWALL OR ANY WALL SURFACE AS THIS MAY NOT SUPPORT THE WEIGHT OF THE RAIL AND MOUNTED DOOR. THE RAIL MUST BE INSTALLED ONTO A PIECE OF SOLID WOOD BLOCKING (PACKAGE NOT INCLUDED) USING MOUNTING SCREWS (PACKAGE NOT INCLUDED). ENSURE THE SOLID WOOD BLOCKING IS SECURED INTO THE STRUCTURAL SURFACE. USE A STUD FINDER WHERE NECESSARY TO LOCATE STUDS AND SECURE SAFELY. TYPICAL SOLID WOOD BLOCKING SHOULD BE 81 3/4" x 5 1/2" x 7/8".

NOTE, SEPARATE BOLTS ARE PROVIDED FOR 13/8" DOORS AND LONGER BOLTS PROVIDED FOR 13/4" DOORS. IF INSTALLING WITH THE INTERNAL FLOOR-MOUNTED DOOR GUIDE, THE DOOR MUST BE MORTISED 1/4" WIDE X 3/4" DEEP CENTRALLY.


Step 1. CONCRETE Wall Preparation1

Position the rail by measuring up from the door height (H) +1 17/32" to the centre of the track. Also ensure a gap of 25/64" - 1/2" at the bottom. Ensure the rail is level and leave a minimum of 2" from the end of the rail to the side of the opening.

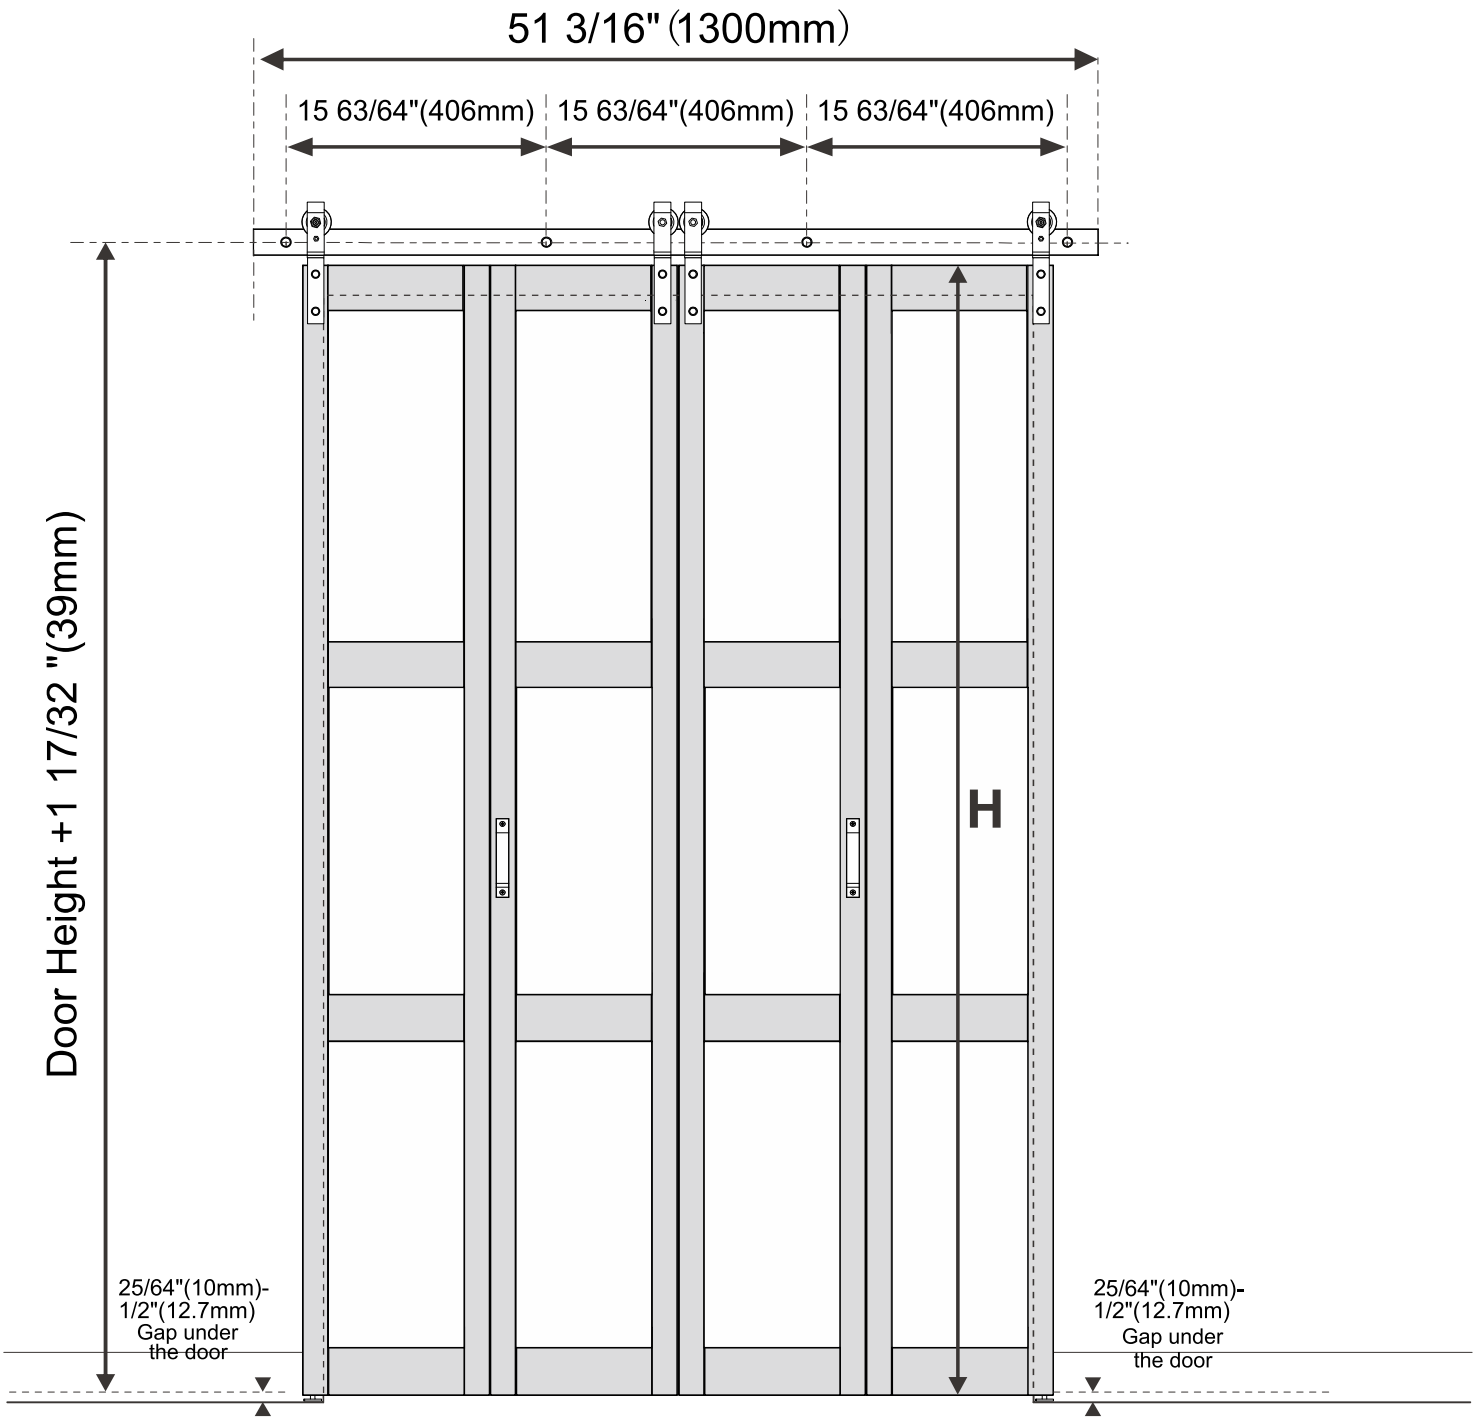


Step 2. CONCRETE Wall Preparation2

Position the rail in place ensuring that it is level, mark the holes on the rail using a pencil and pre-drill $\frac{3}{8}$ " holes into the concrete.

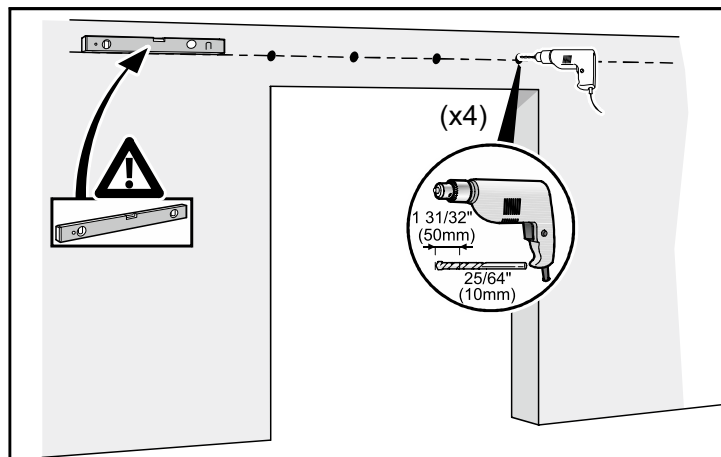


Step 3. CONCRETE Rail Installation

When installing directly into concrete, align the spacers to holes, insert using the provided anchors and hex bolts (with washers). Ensure to unscrew to separate the hex bolt and anchor to install correctly, securing with a wrench.

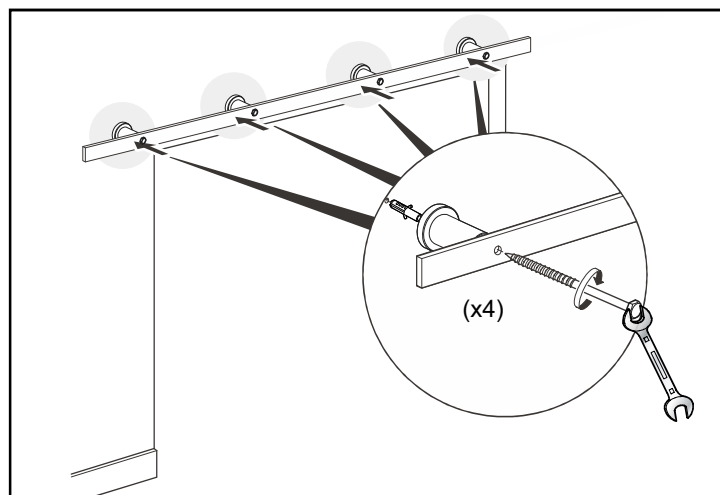


Step 4. DRYWALL Wall Preparation

Position the rail on top of the wood blocking ensuring levelness, mark the holes using a pencil and pre-drill $\frac{3}{16}$ " holes into the wood blocking.

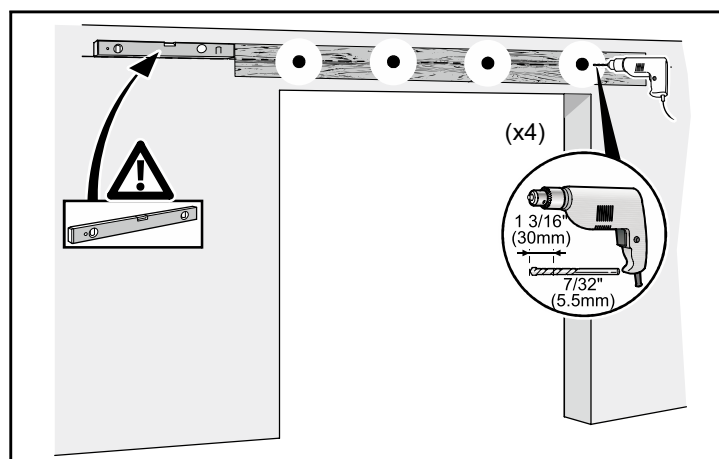


Step 5. DRYWALL Rail Installation

When installing into the solid wood block and wall, insert using the provided wall screws. Align each spacer to the rail holes, inserting screws (with washers), securing with a wrench.

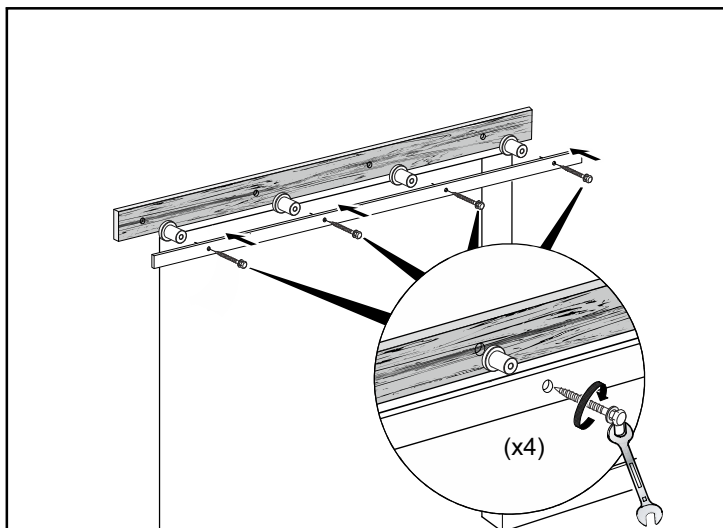


Step 6. Fit the hinge

Fit the hinge to the door in the proper position

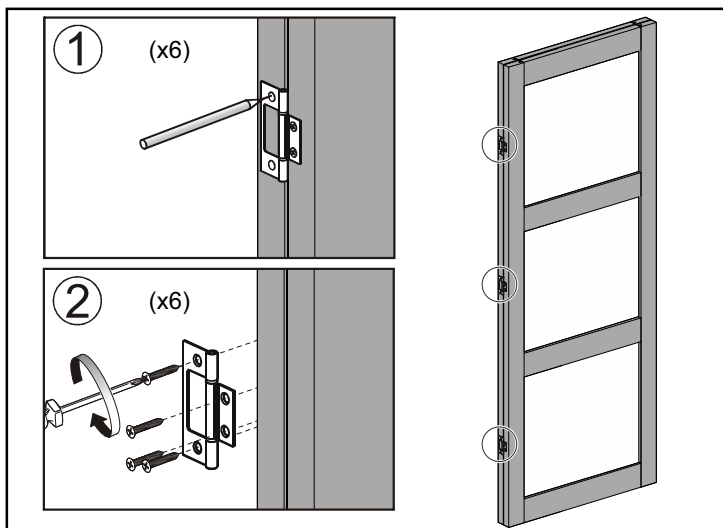


Step 7. Install Side Bracket

First, drill 10MM holes in the door and then fix the bracket to the door with screws

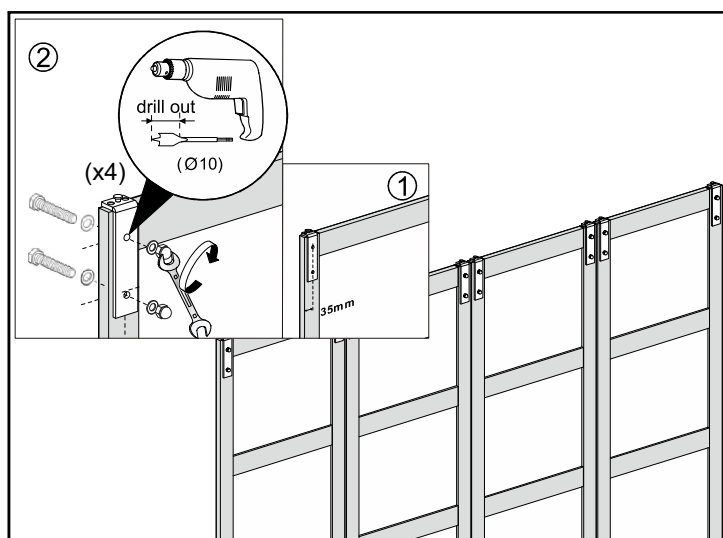


Step 8. Fixing Bracket Top Screw

Install the hanger roller bracket on the reserved hole of the top of door by 3/16" x 1 17/64 screw.

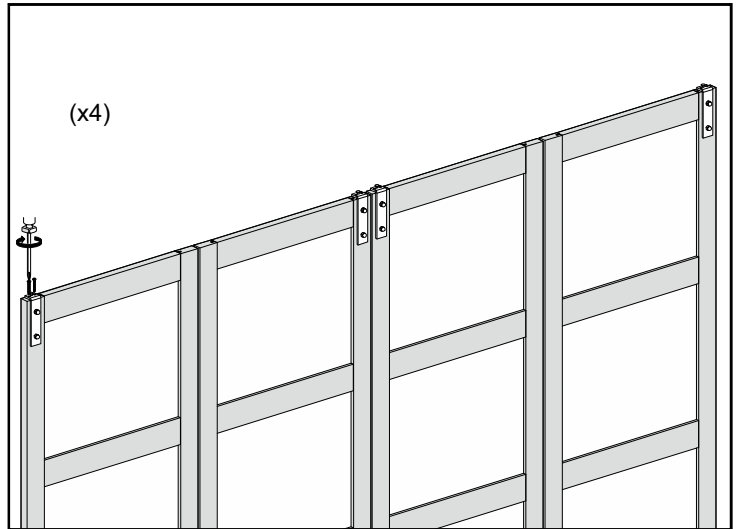


Step 9. Hanging the rollers

Put the 4 rollers on the rail

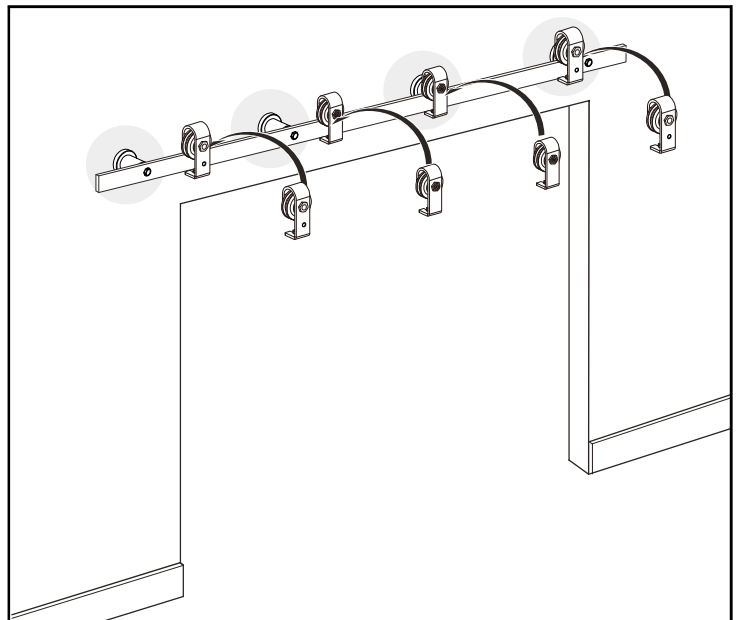


Step 10. Floor-Mounted Door Guide Installation

Mark the hole position on the bottom of the door with a pen, punch a hole with diameter 5/16" depth 29/32". Then put the socket on the hole, and knock it in with a wooden hammer. Finally, put the floor guide into the socket.

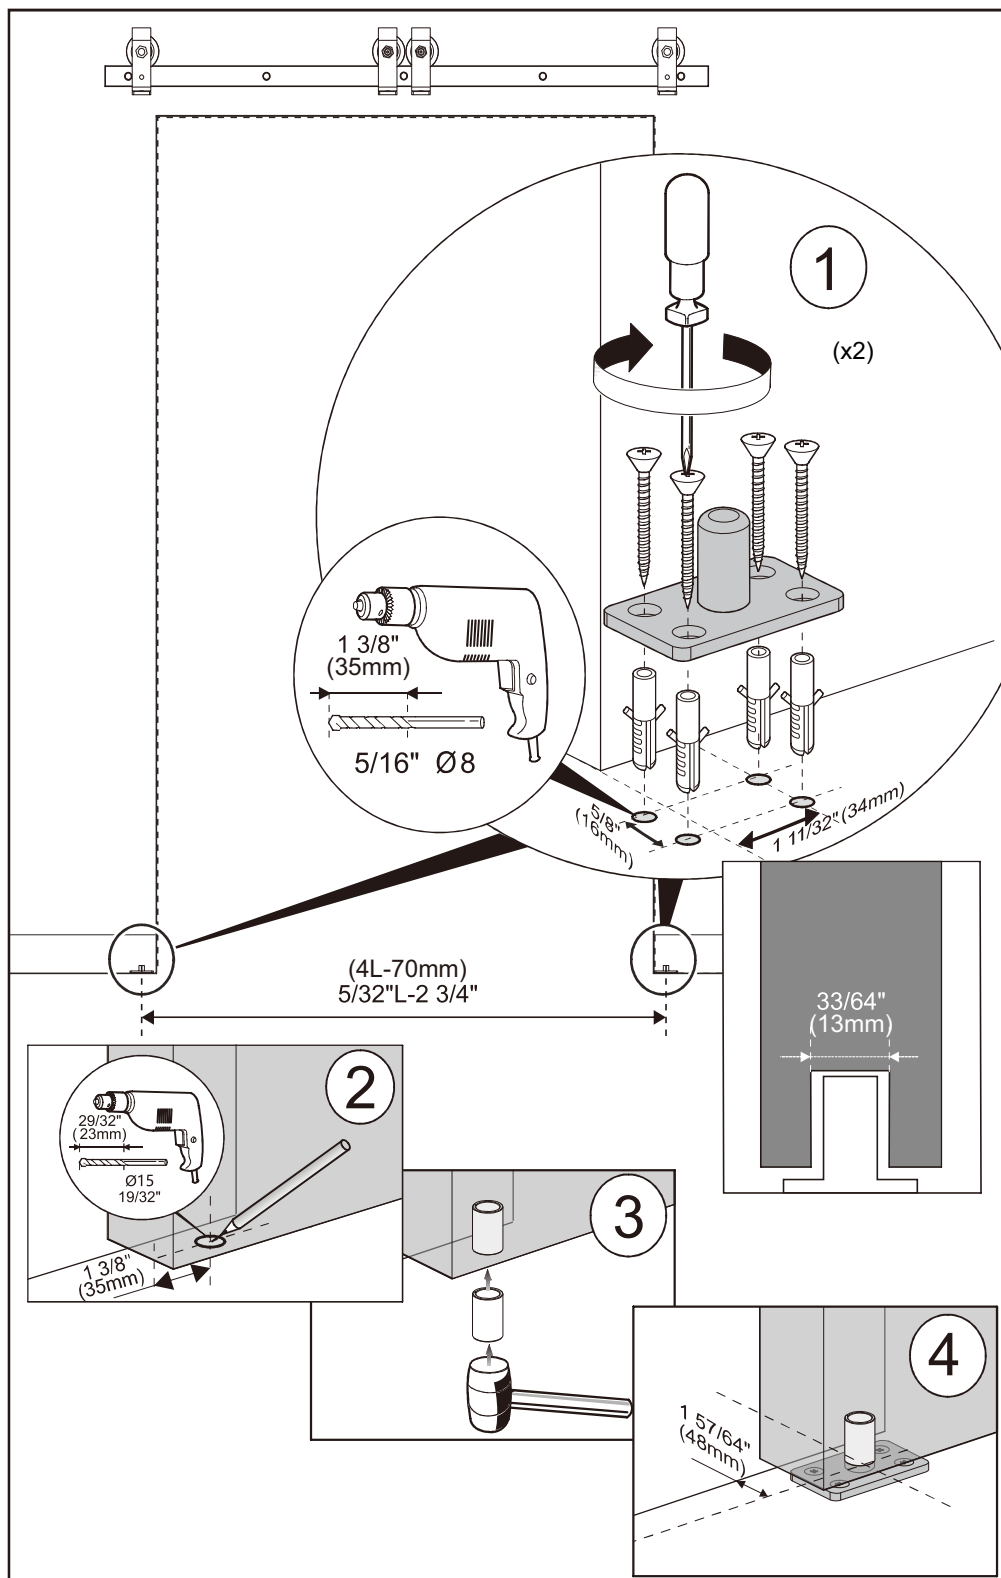

Step 11. Install hanger roller 1


Unscrew the screw, adjust the position of the door and the floor guide, then push in the hanger roller slot, and fix it with screw.

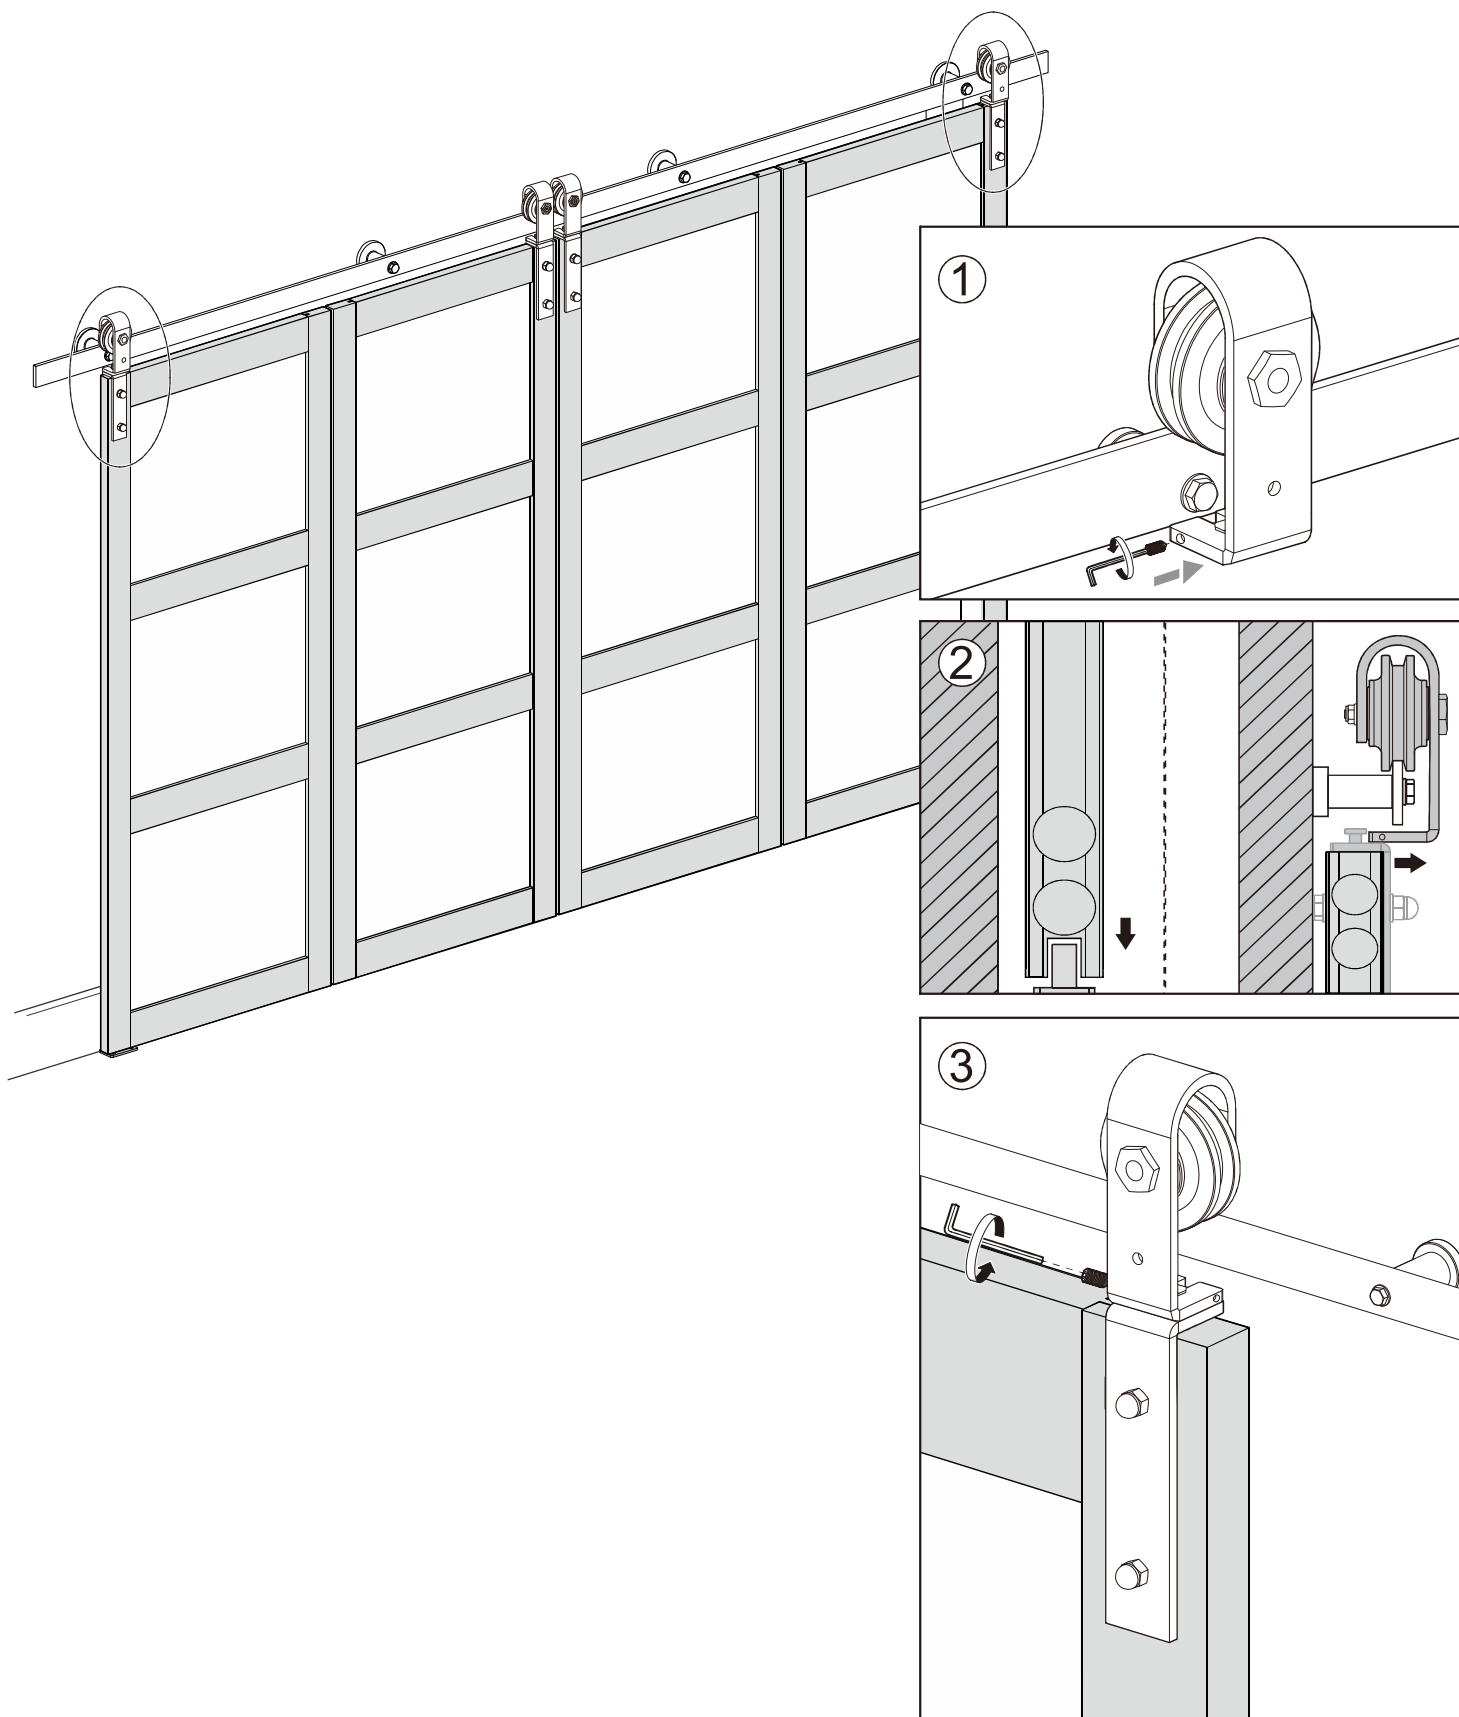

Step 12. Install hanger roller2

Unscrew the screw, adjust the position of the door and the floor guide then push in the hanger roller card slot, fix it with screws.

Using a wrench to adjust the height of the hanger roller to a suitable position, and tighten it.





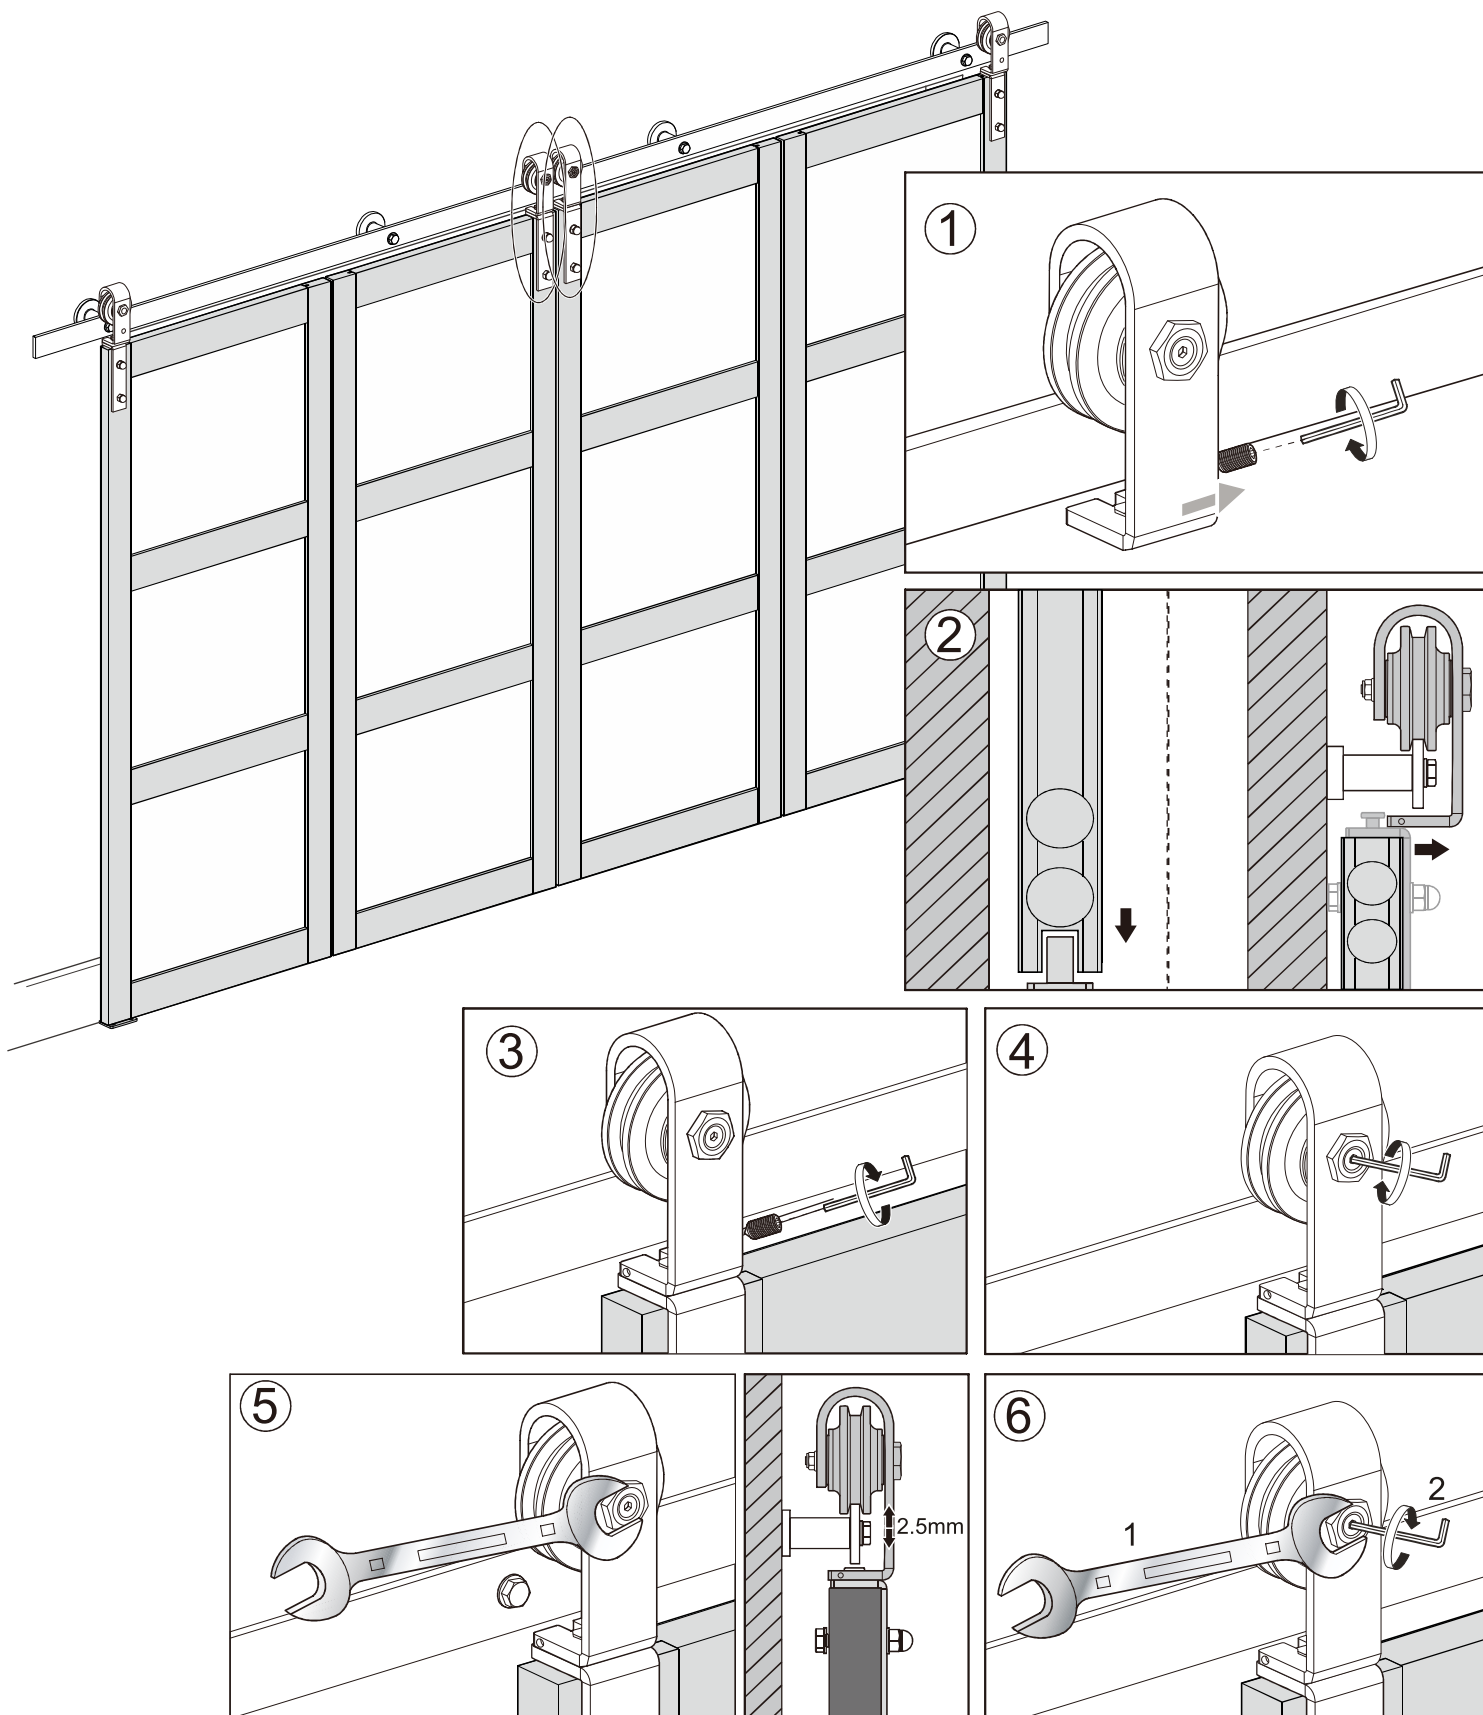


Step 13. Install the fixed connector

Align the hole of the connecting piece with the lower hole of the hanger roller plate.


Using a wrench to pass through the hanger roller plate and the connecting piece.

Tighten the other two holes of the connector with a screw. Then install the nut with the wrench.

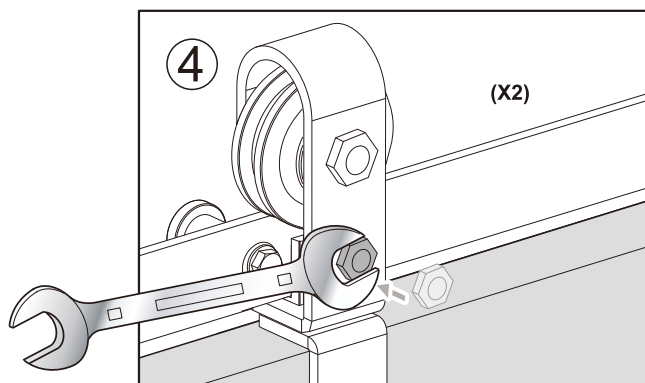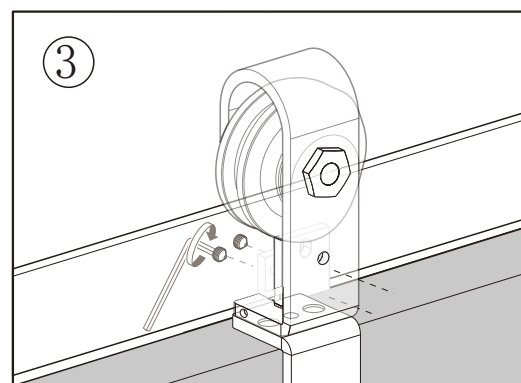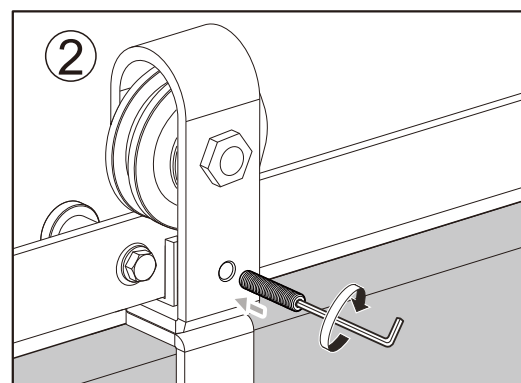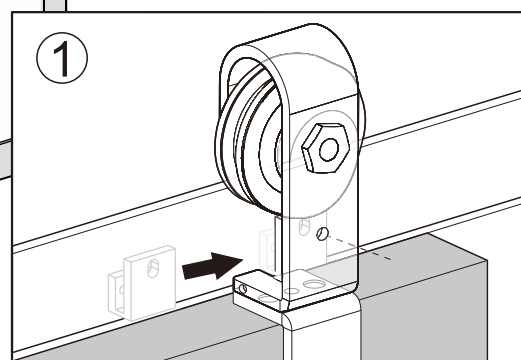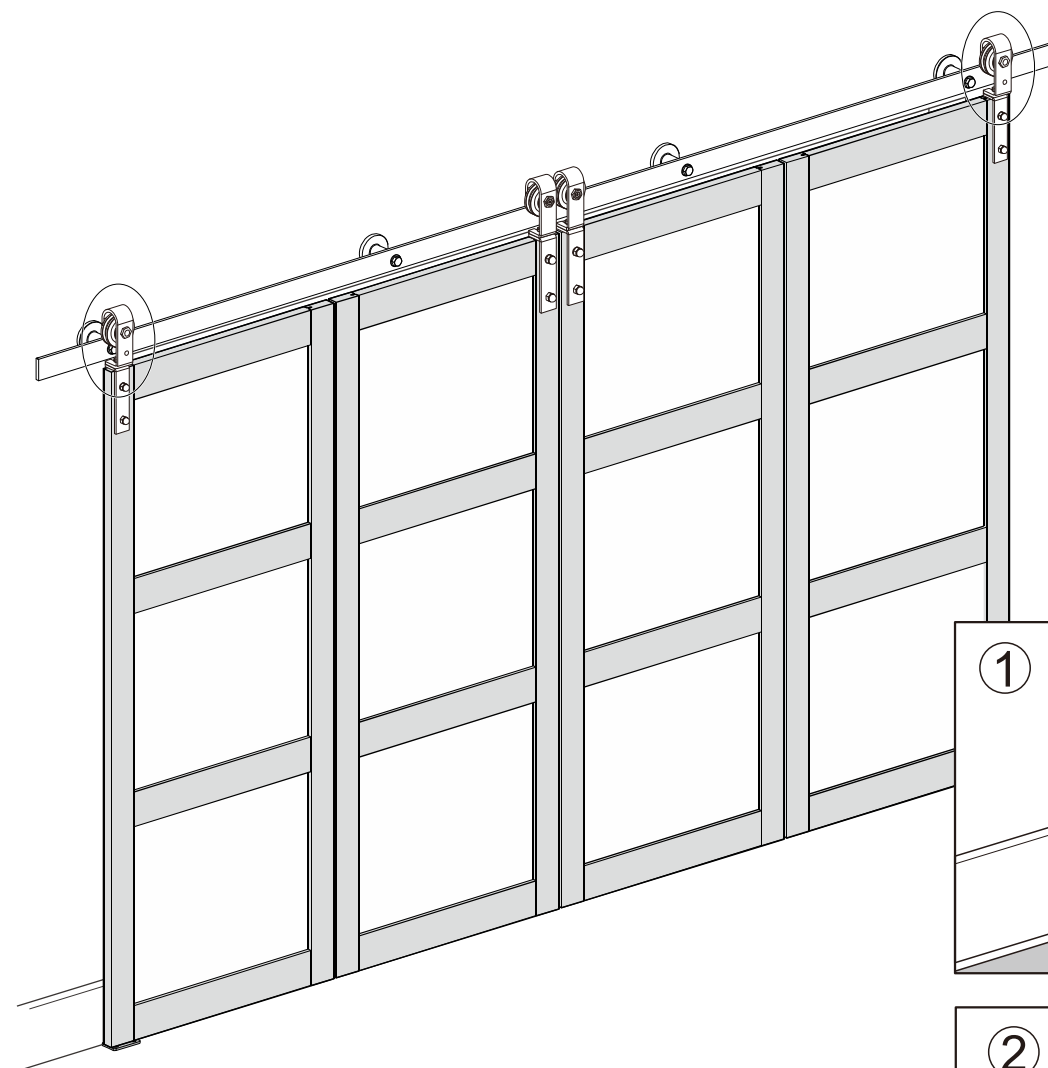

Step 14. Handle Installation

Fix the handle to the door with screws

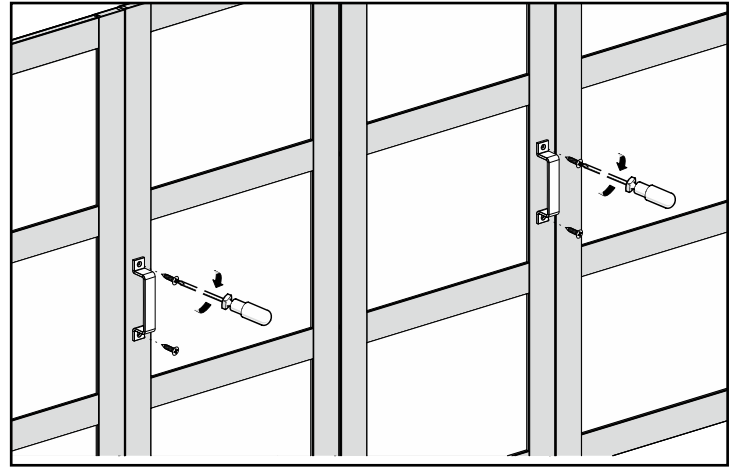

Step 15. Install the sealing strip

Tear off the sealing strip and stick it to the side of the door

