



WALL MOUNTED HAIR SALON STORAGE CABINET 110 * 18 * 68CM

INSTALLATION INSTRUCTIONS AND PROCEDURES

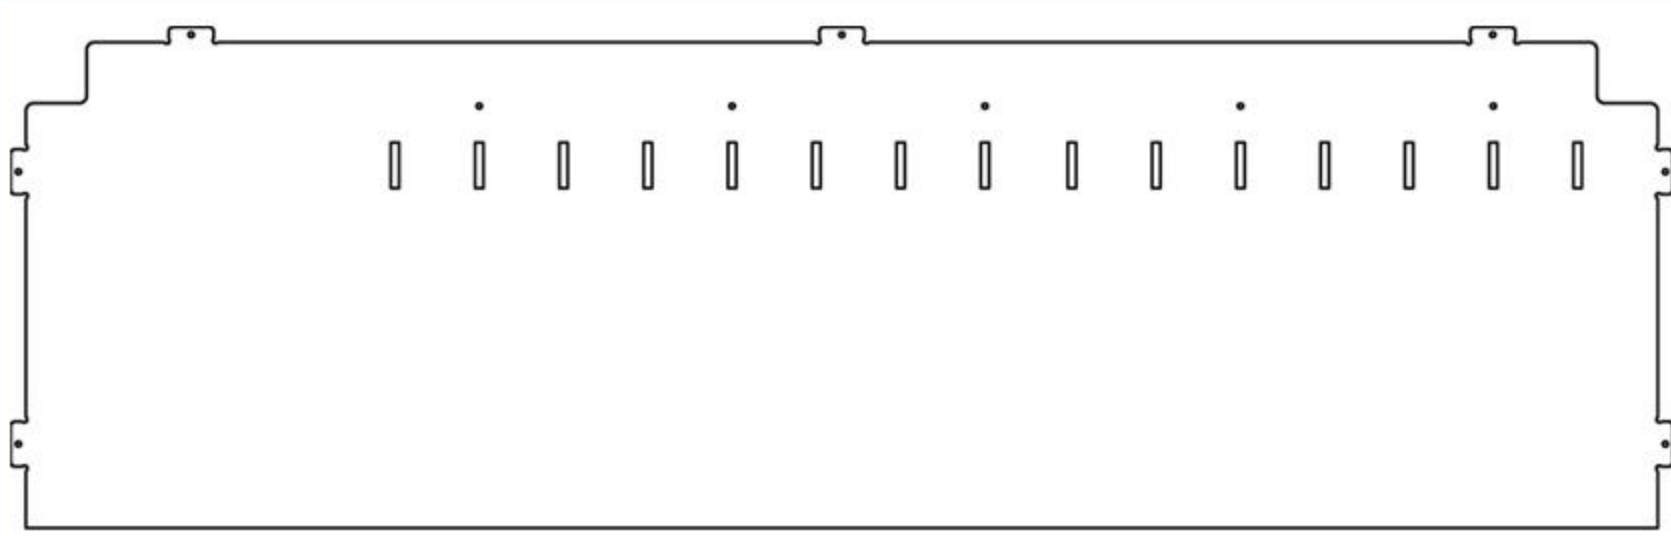

UPPER BACK PANEL (A) × 1

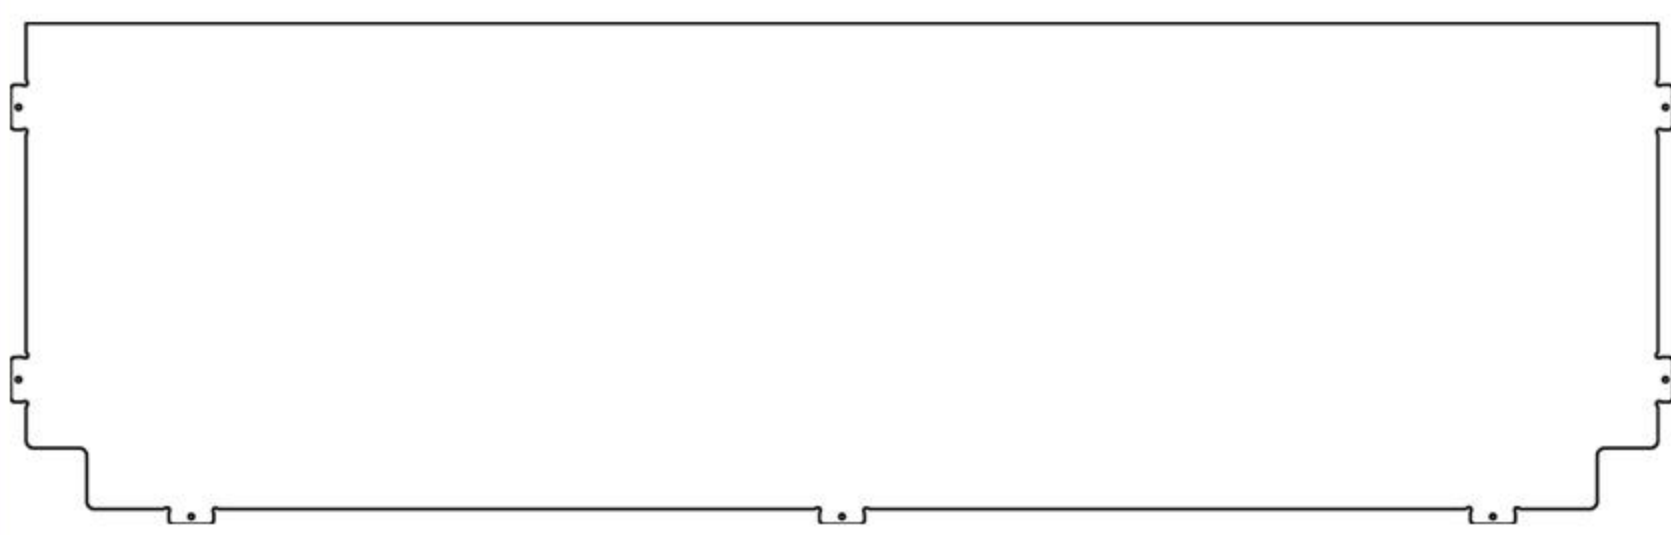


LOWER BACK PANEL (B) × 1


3.5*25 SCREWS*52, SCREWDRIVER*1
CROSS L-SHAPED IRON PLATE*4
GOLDEN HANDLE*1, FROSTED PAPER*1
ROUND HEAD HANDLE SHORT SCREW*2
PLYWOOD NAIL*12, WALL PUNCHING CAP*4
PUNCHING SCREWS*4, GLOVES*1




DOOR OPENING BOARD (C) × 2

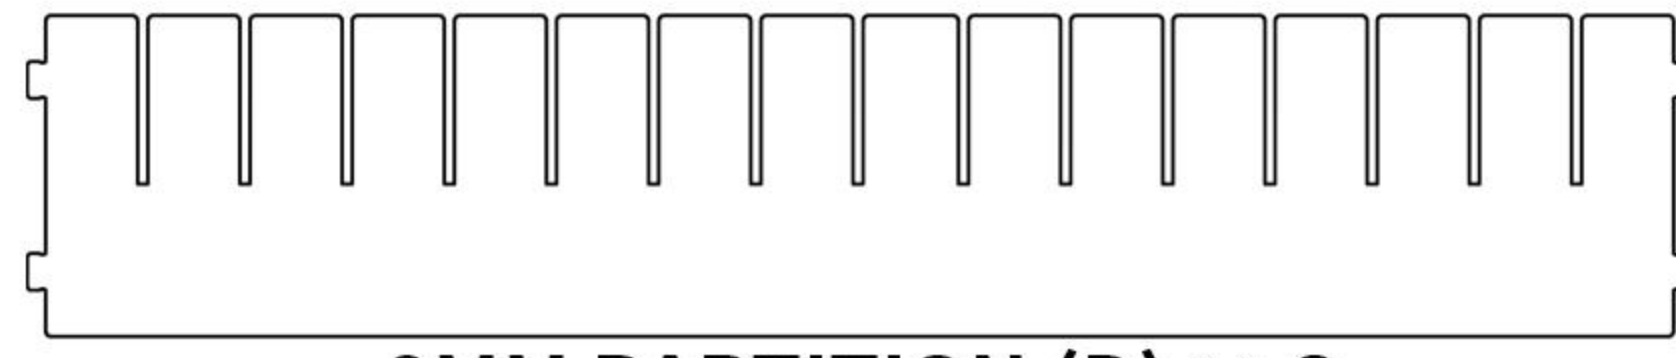


9MM PARTITION (D) × 3

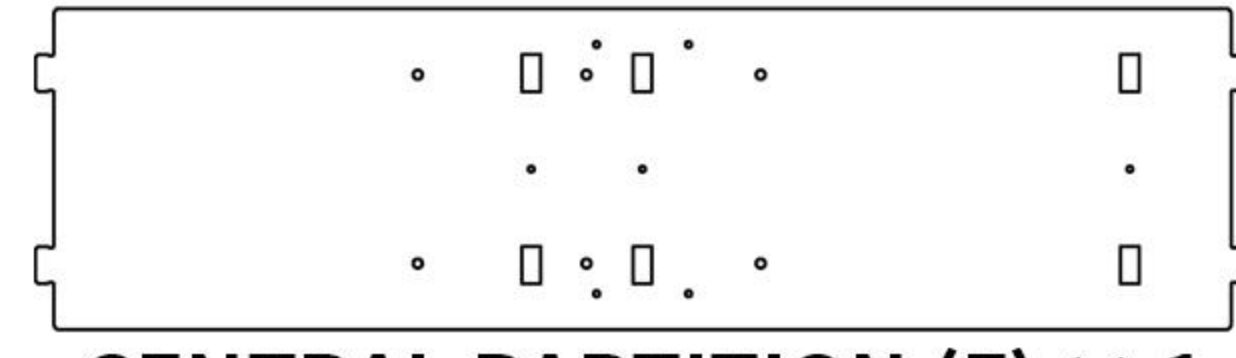

CENTRAL PARTITION (F) × 1

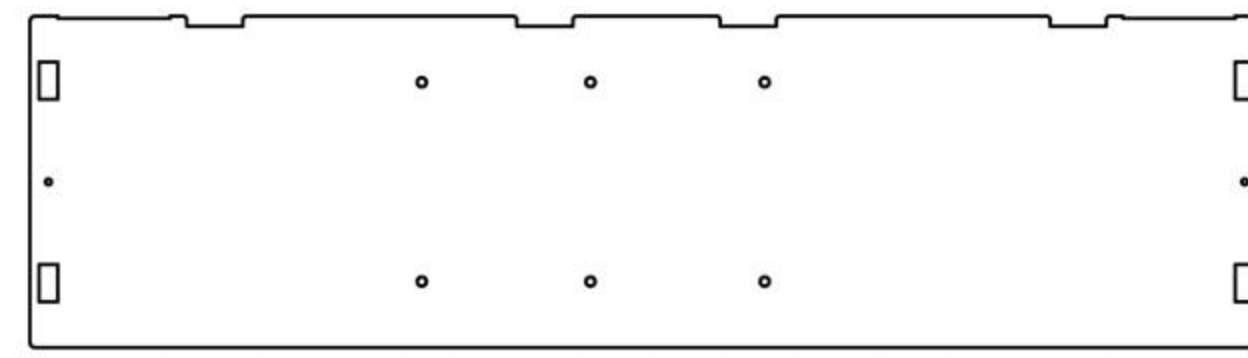

LEFT SIDE PANEL (J) × 1

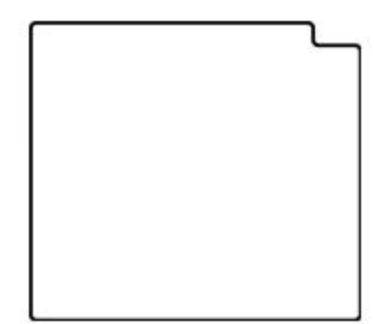


MOBILE LAYER BOARD (H) × 2




5MM PARTITION (E) × 15




DOOR PANEL (G) × 1

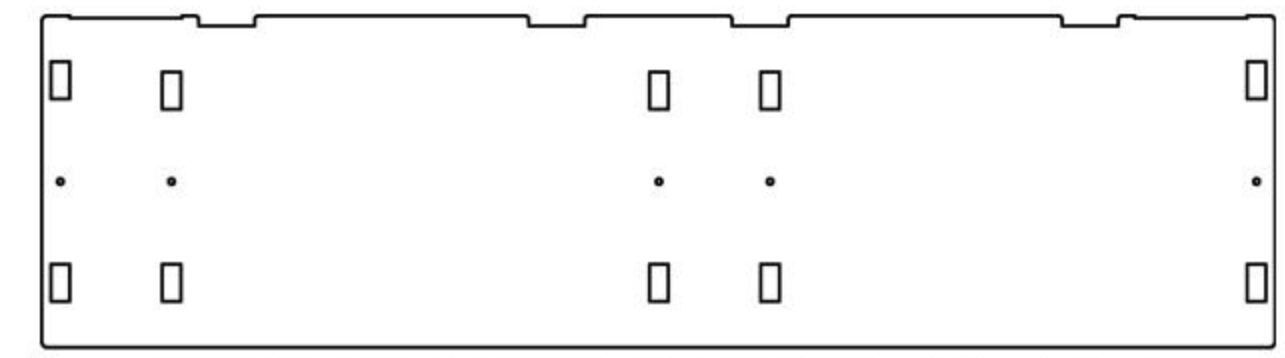

RIGHT SIDE PANEL (I) × 1

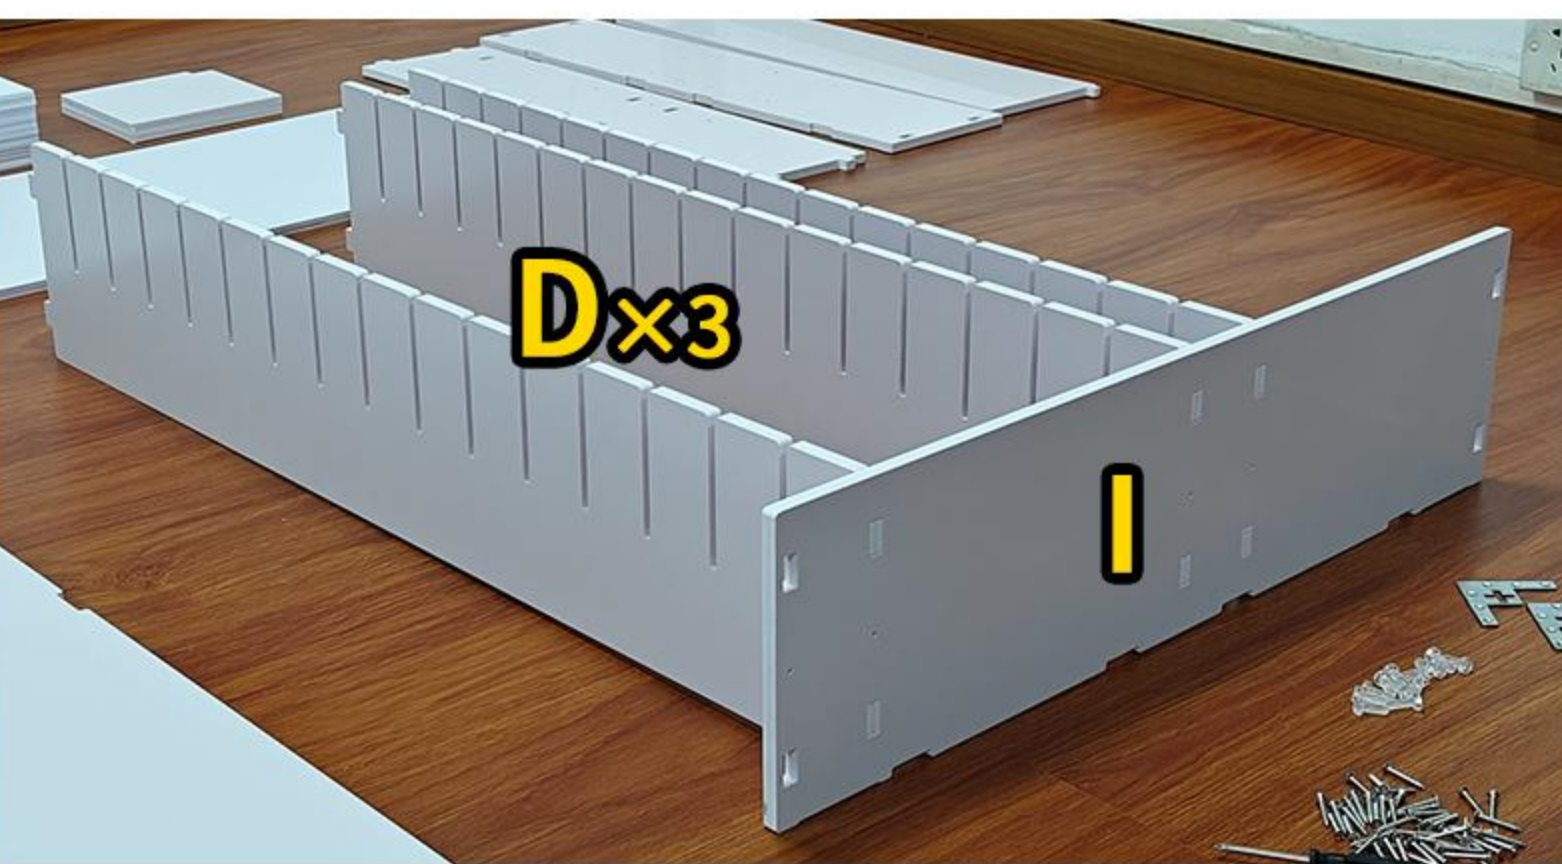

1. ASSEMBLE 3 D-BOARDS ONTO THE I-BOARD

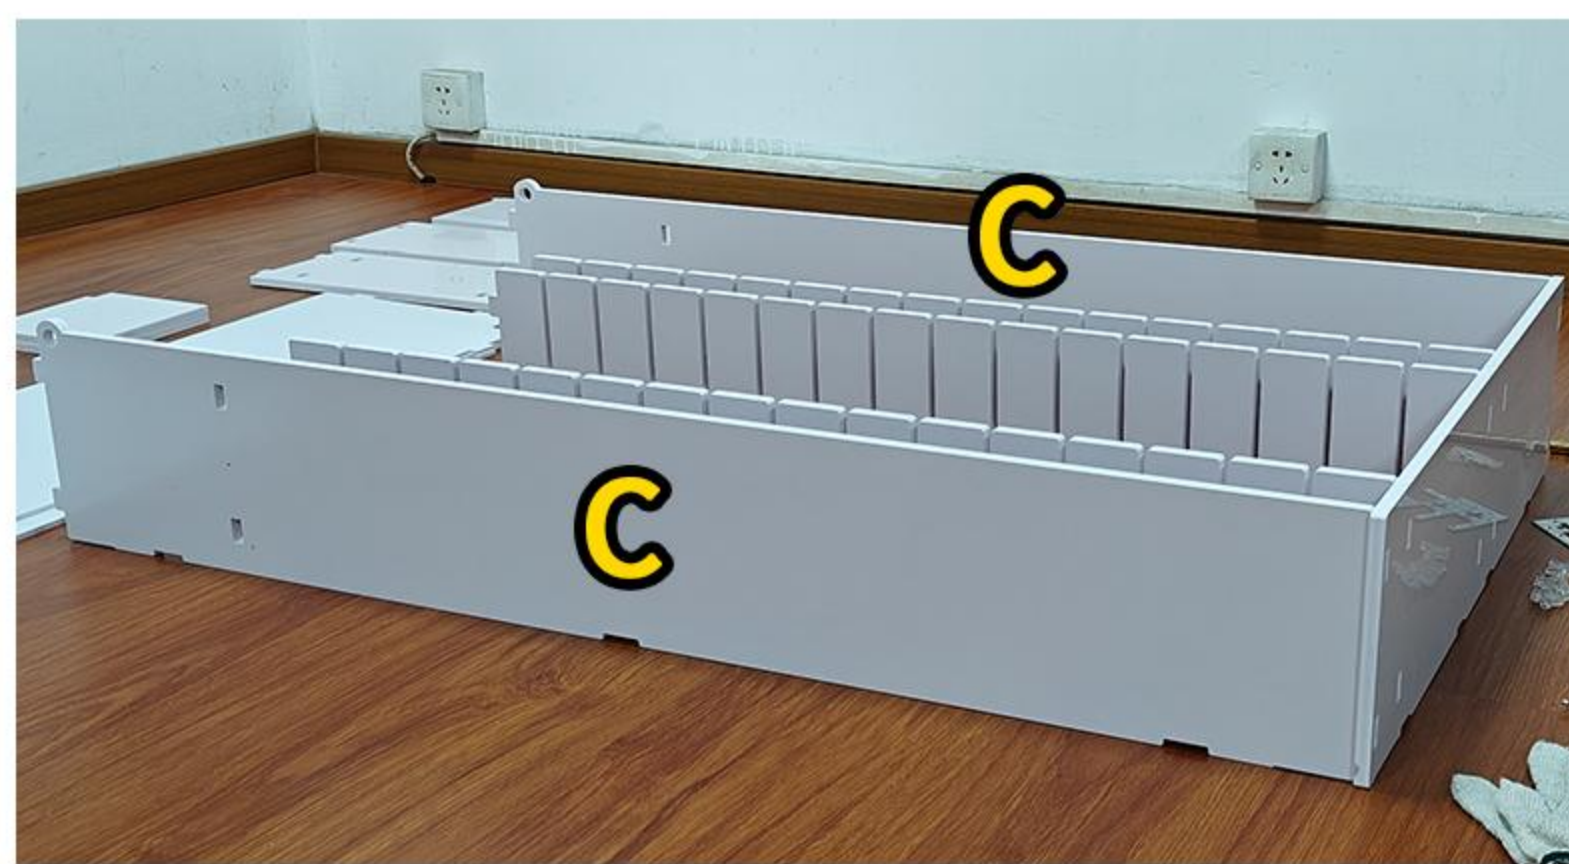

2. ASSEMBLE 2 C-BOARDS ON BOTH SIDES OF B BOARD




3. ASSEMBLE BOARD F BETWEEN BOARD C AND BOARD D



4. INSERT THE G-NUMBER DOOR PANEL




5. ASSEMBLE THE J BOARD

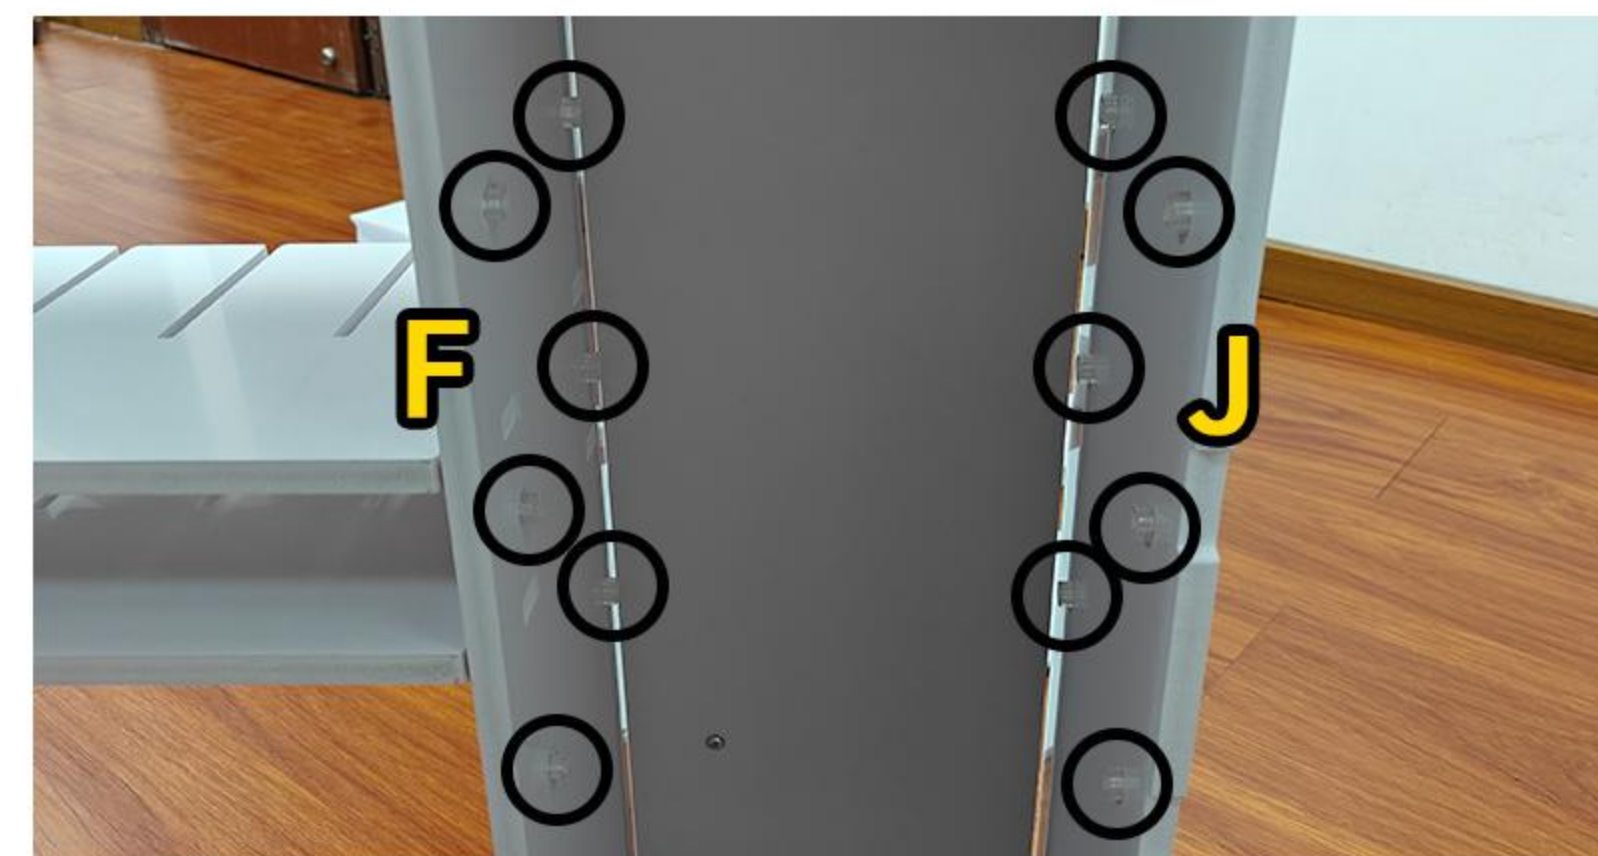

6. FIX THE 12 LAYER BOARD NAILS IN PLACE F, J BOARD




7. FIXED DOOR HANDLE

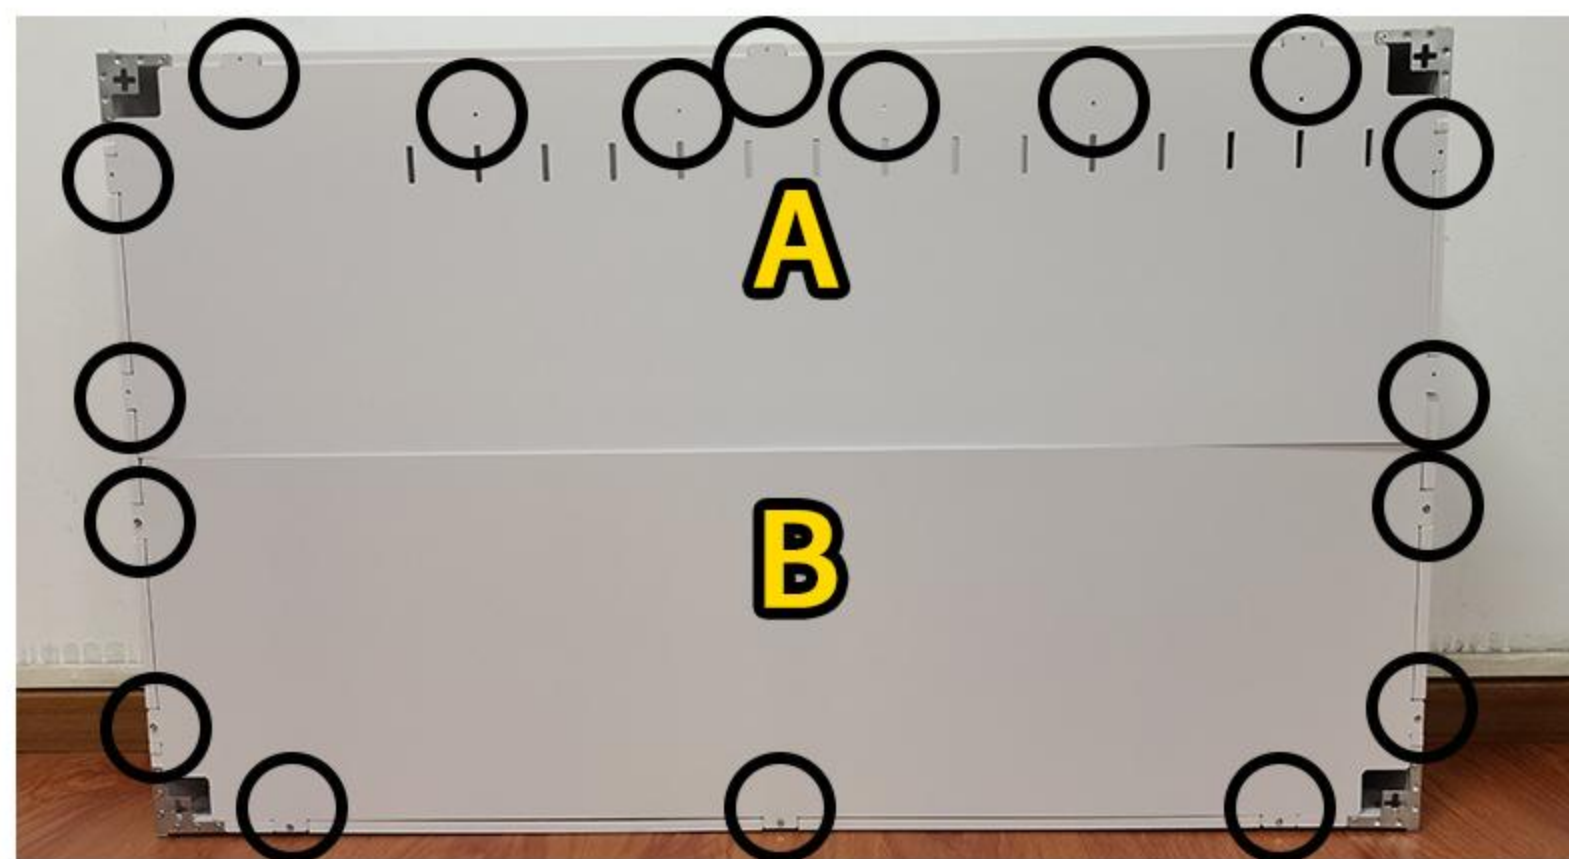

8. INSTALL A AND B BOARDS ON THE BACK, AND SECURE 14 SCREWS AT THE EDGES



9. FIX 4 CROSS L-SHAPED IRON PLATES WITH 6 SCREWS EACH, FOR A TOTAL OF 24 PIECES

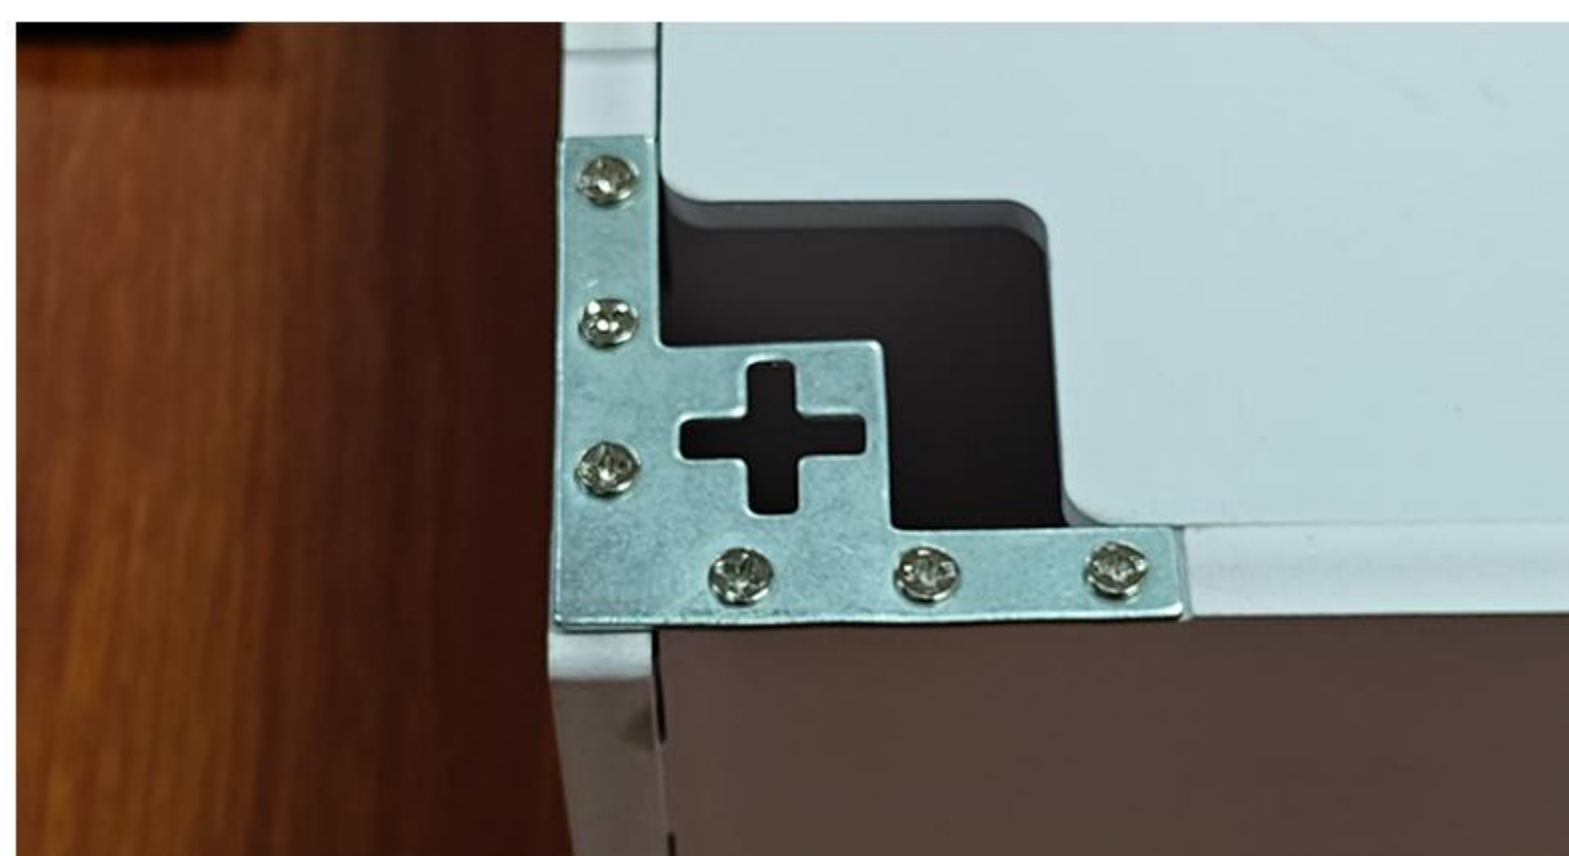

10. INSERT 15 E-BOARDS SEPARATELY

WALL MOUNTED HAIR SALON STORAGE CABINET 110 * 18 * 68CM INSTALLATION INSTRUCTIONS AND PROCEDURES



11. INSTALL 2 H-BOARDS INTO THE CABINET

INSTALLATION STEPS ON THE WALL TUTORIAL



1. MARK THE HOLE WITH A MARKER



2. CARRY OUT DRILLING SCREWS



3. DRIVE THE NAIL INTO THE HOLE



4. HANG THE SHELF ON THE WALL



INSTALLATION SCHEMATIC

CONNECTION SCHEMATIC

