

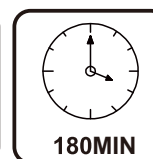
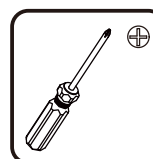
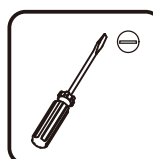



Installation & Assembly

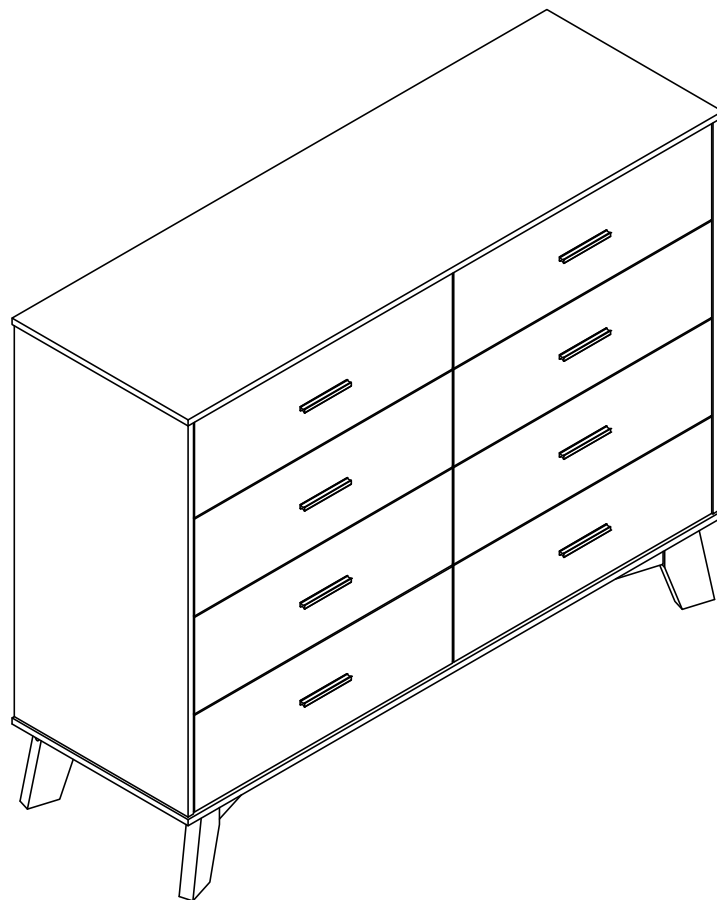


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

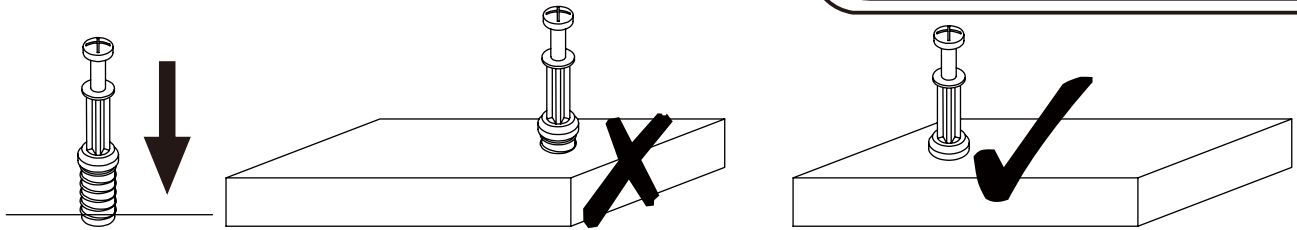


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

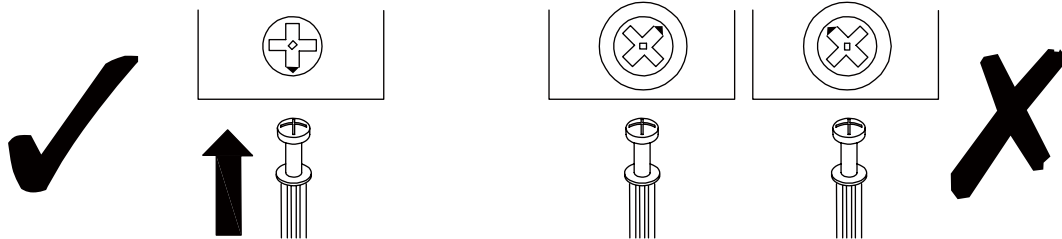











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.








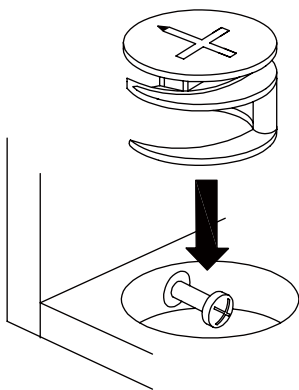


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

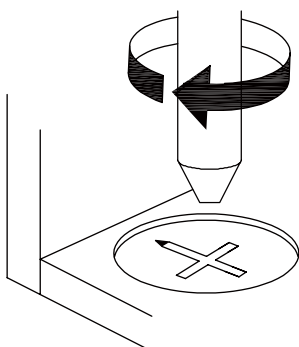





EN_Turn cam lock clockwise to tighten.

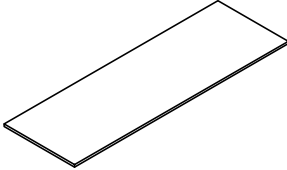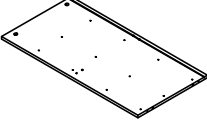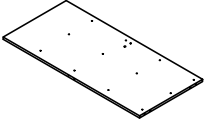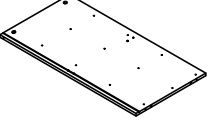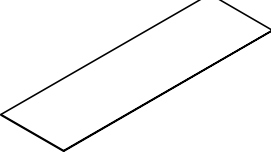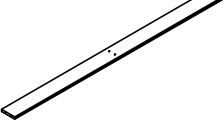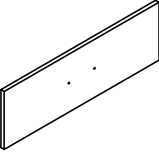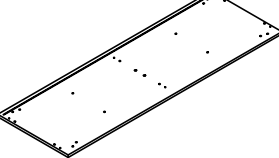NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x2	
⑥		x1	
⑦		x4	
⑧		x1	
⑨		x1	
⑩		x1	

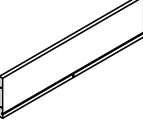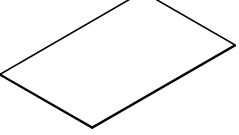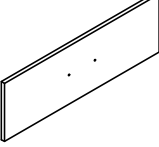NO.	PARTS	QTY	SPARE
⑪		x4	
⑫		x1	
⑬		x2	
⑮		x1	
⑯		x8	
⑰		x8	
⑱		x8	
⑲		x8	
⑳		x8	
㉑		x4	



[illegible]

PARTS

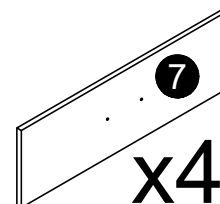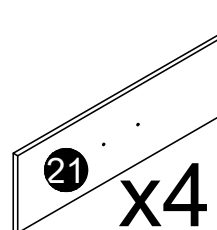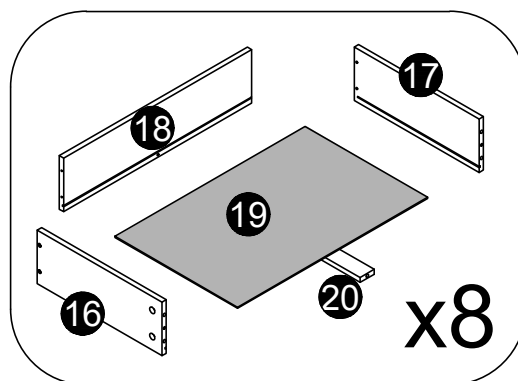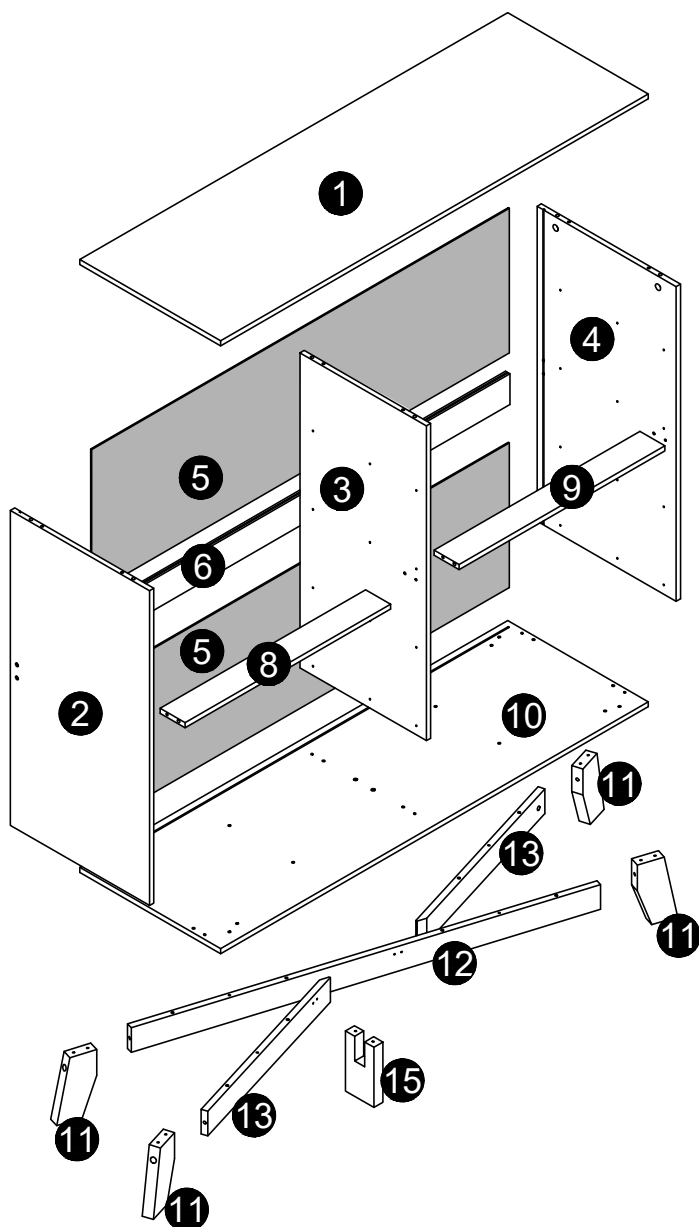

HARDWARE




A x49 $\varnothing 6 \times 35 \text{mm}$ +3(spare)	B x49 $\varnothing 15 \times 10 \text{mm}$ +3(spare)	C x40 $\varnothing 6 \times 30 \text{mm}$ +4(spare)	D x55 $\varnothing 4 \times 35 \text{mm}$ +5(spare)	E x112 $\varnothing 3.5 \times 12 \text{mm}$ +8(spare)	F x4
H x14 $\varnothing 5 \times 35 \text{mm}$ +1(spare)	I x1	J x8 J-1 J-2	K x2 $\varnothing 4 \times 14 \text{mm}$ K-1 K-2	L x10 $\varnothing 3 \times 16 \text{mm}$ +1(spare) L-1 L-2	M x2 $\varnothing 6 \times 30 \text{mm}$
N x8 +2(spare)	O x4 $\varnothing 10 \times 10 \text{mm}$	P x4 $\varnothing 6 \times 80 \text{mm}$			
CL x8 L350mm	CR x8 L350mm	DL x8 L350mm	DR x8 L350mm		

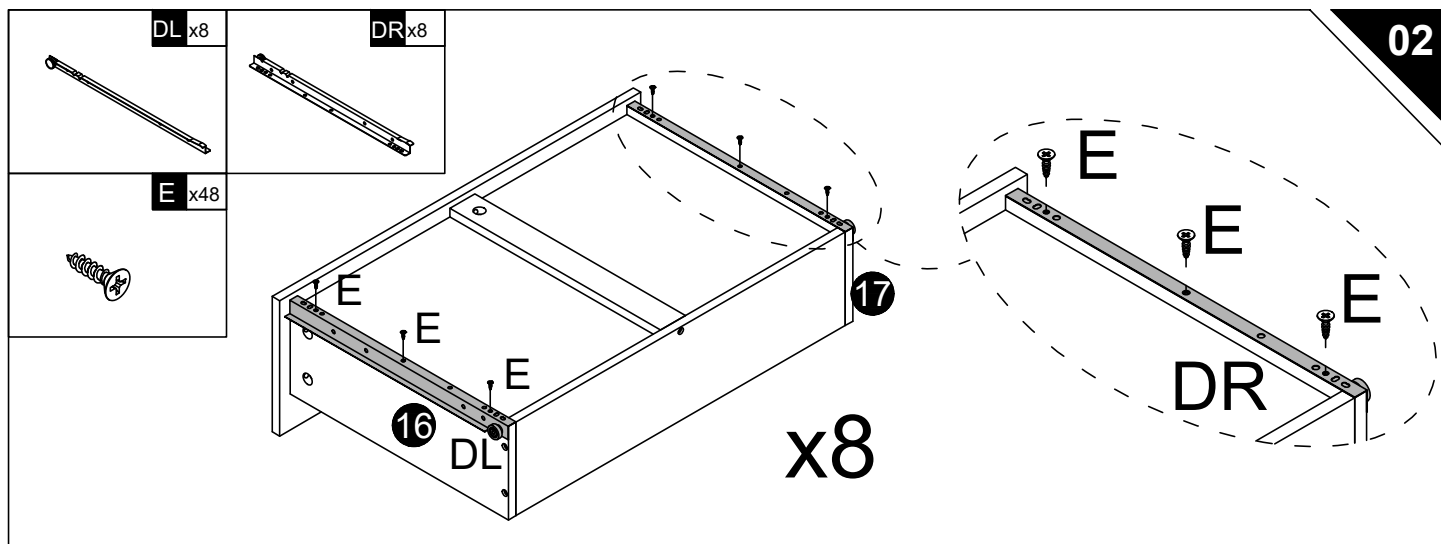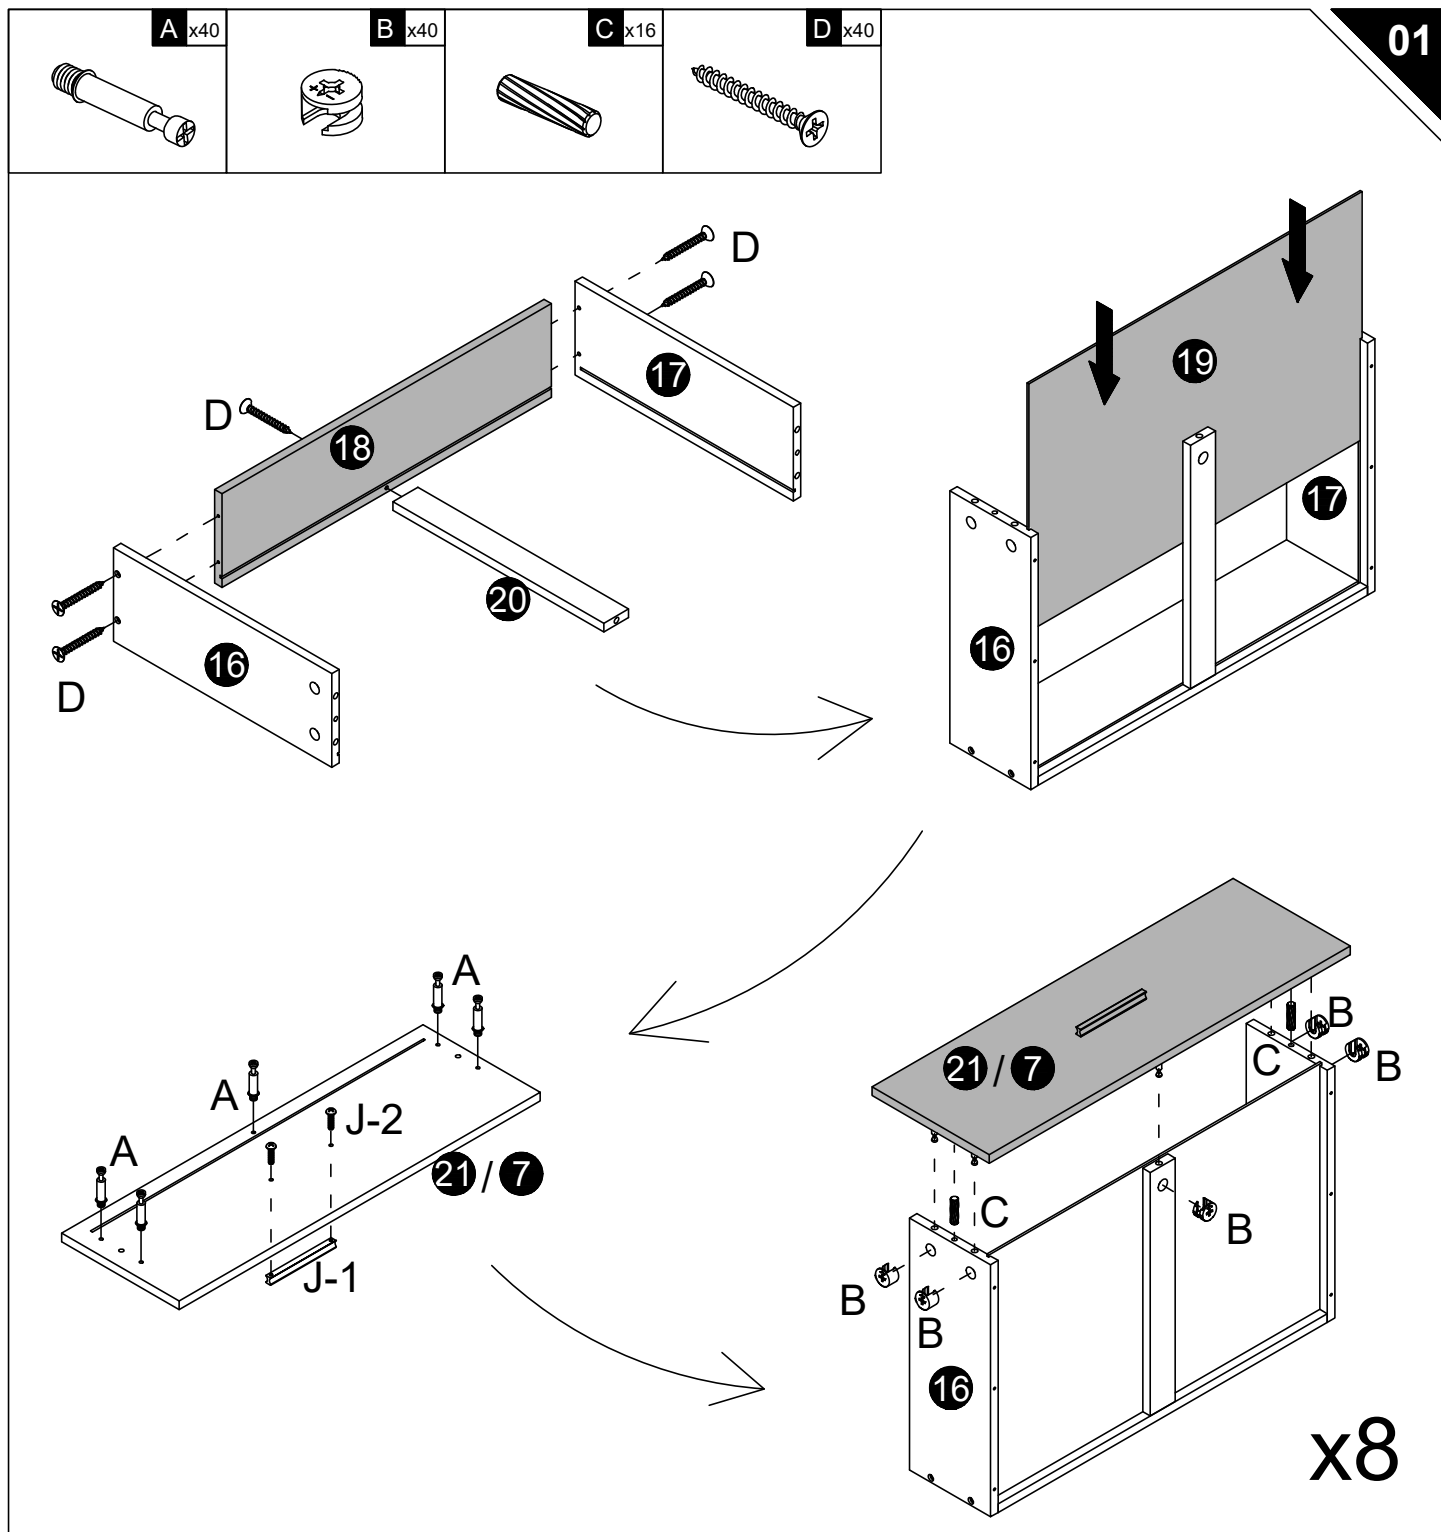

A x1

E x12



CL x4

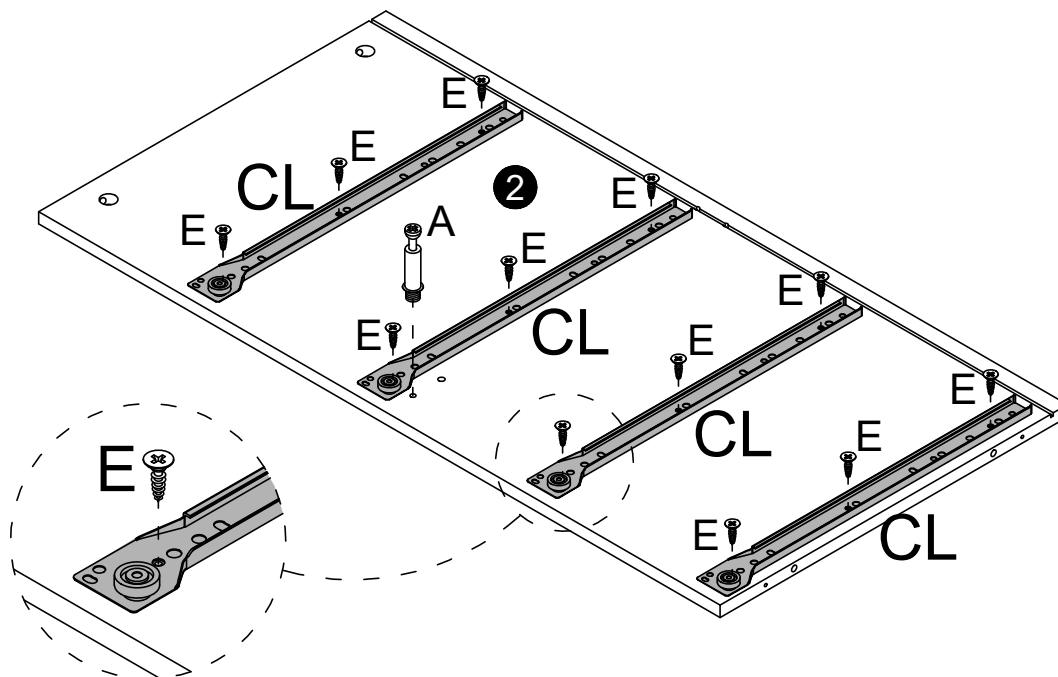




A x1

E x12

CR x4

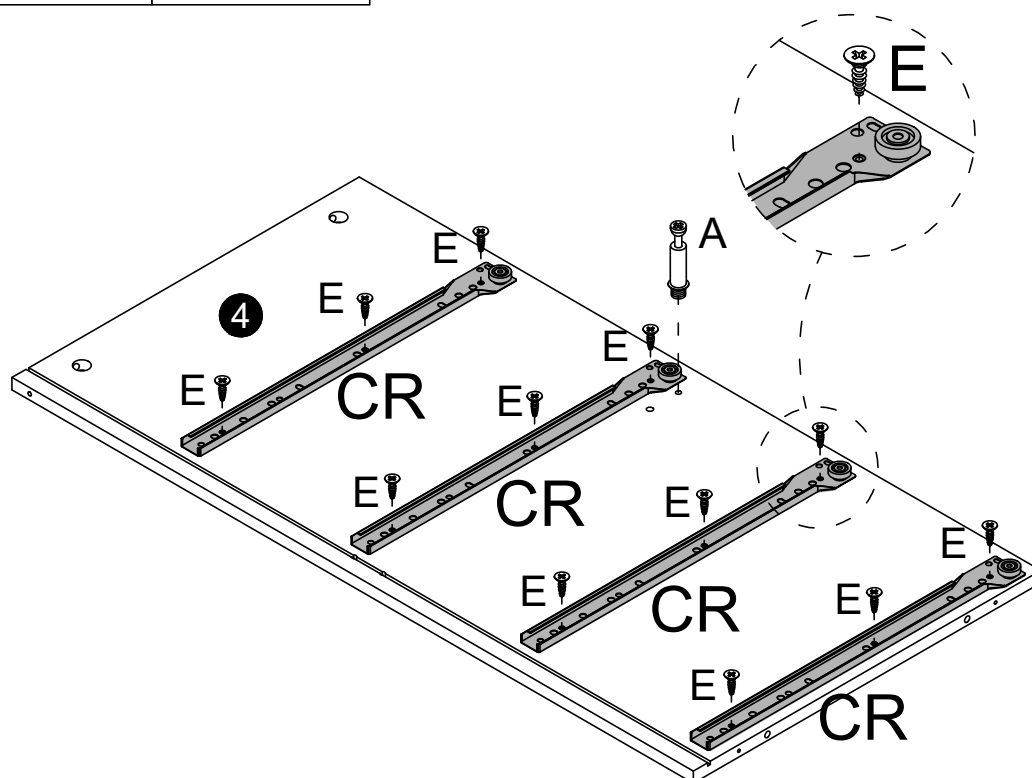



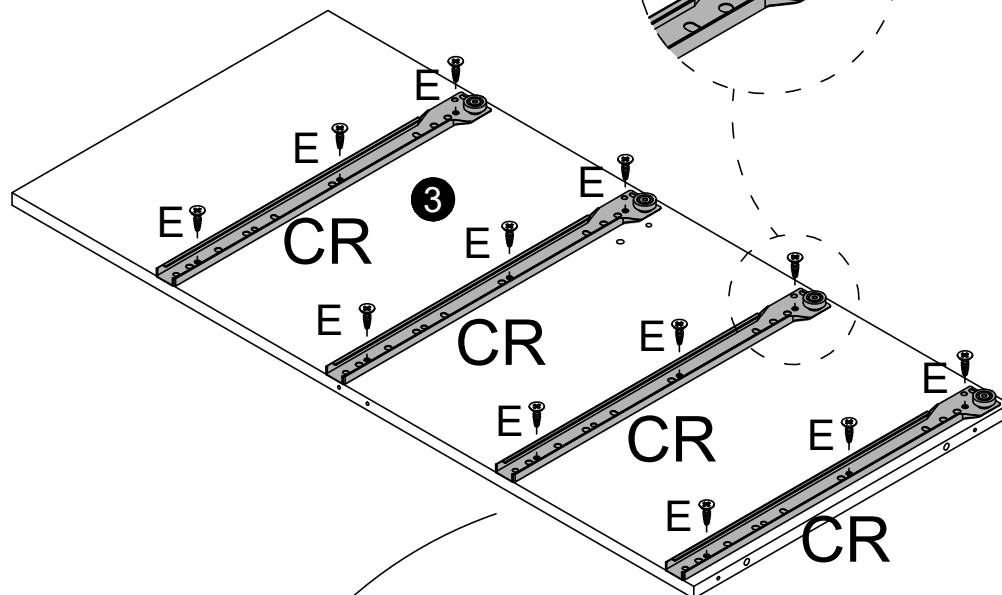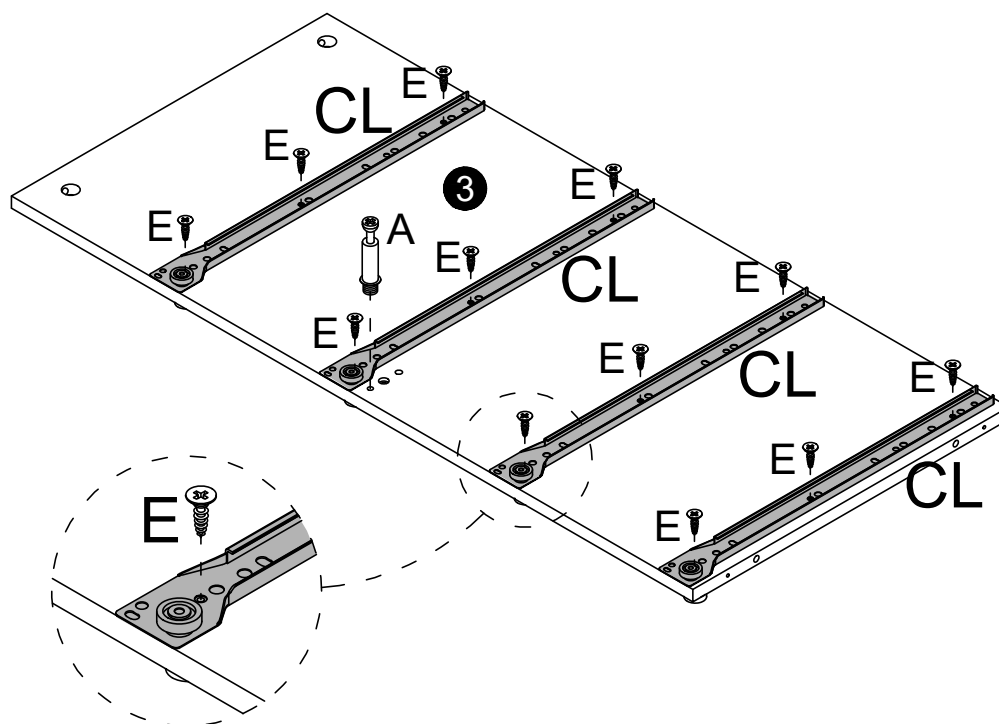 180° 

06

C x1

D x3

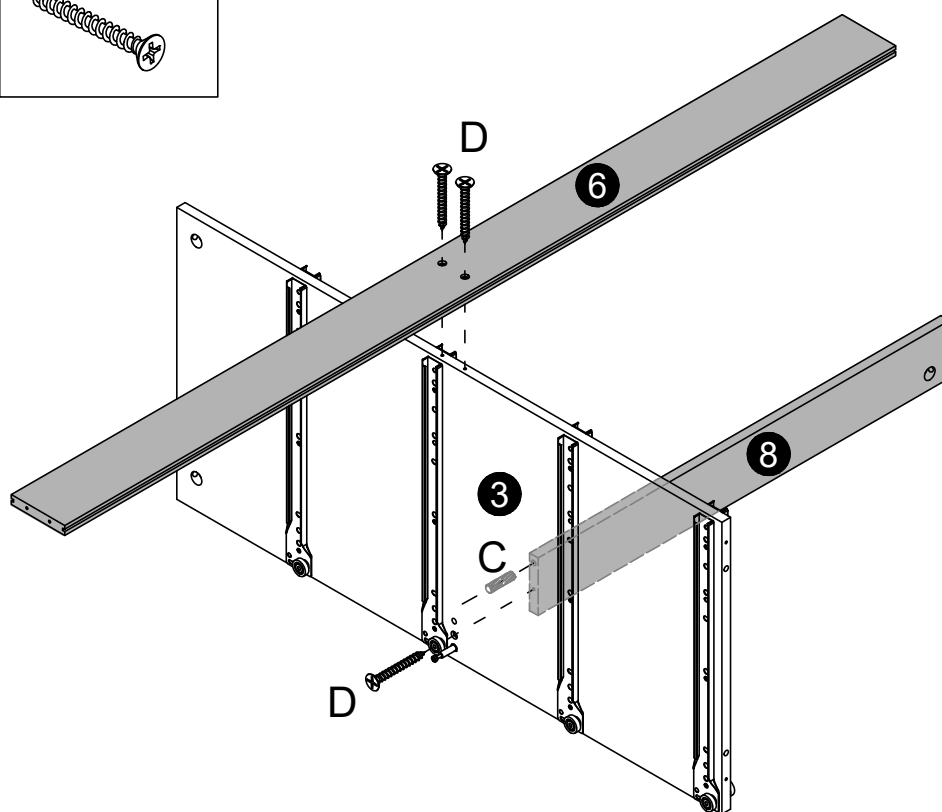



07

B x1

C x1

D x2

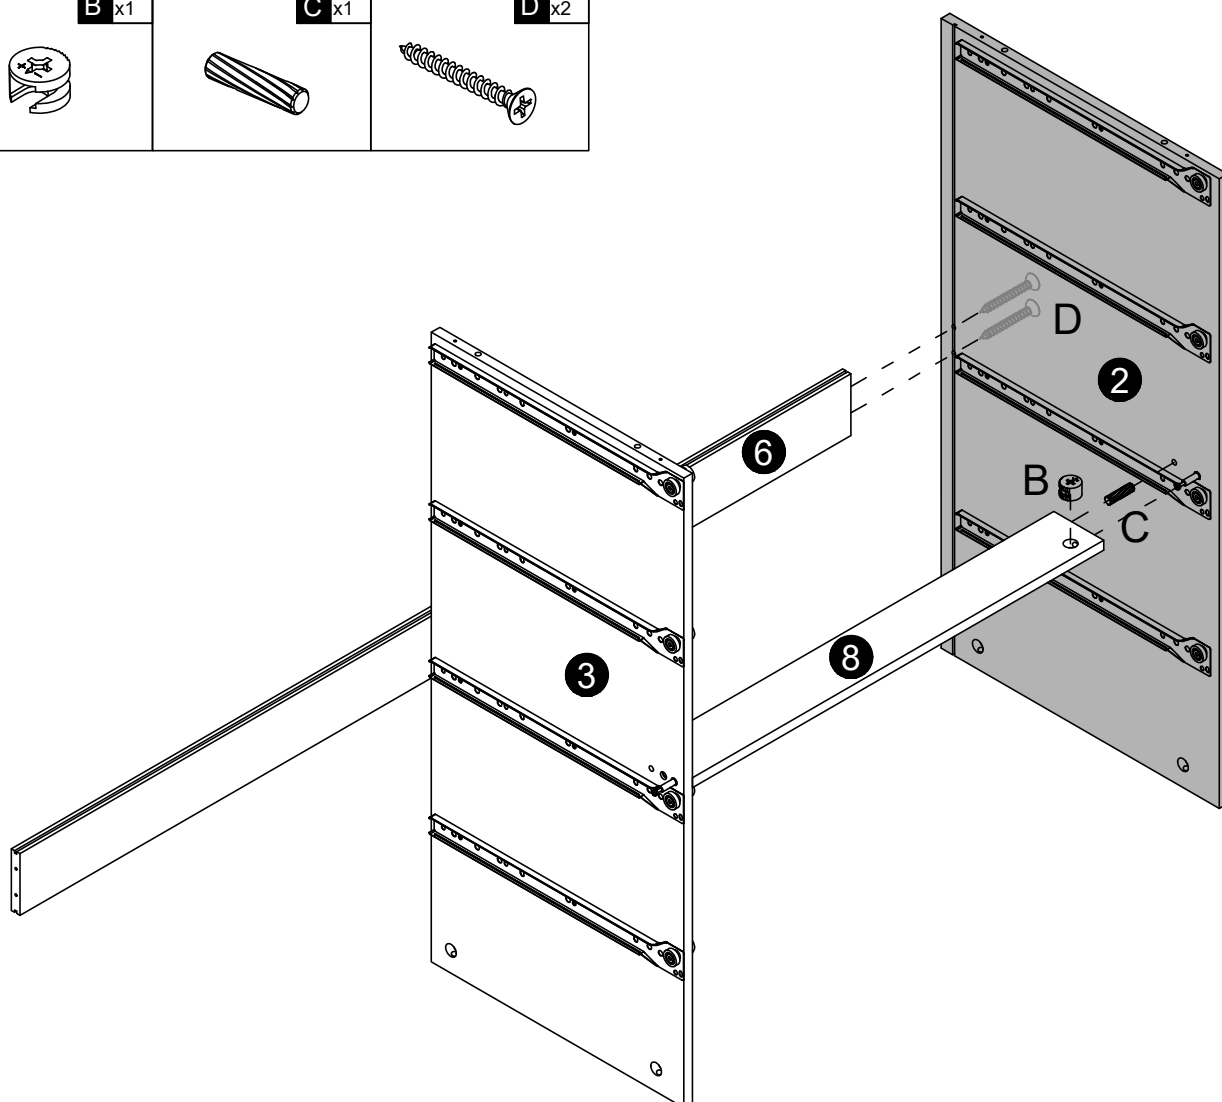



B x2






C x2




D x2

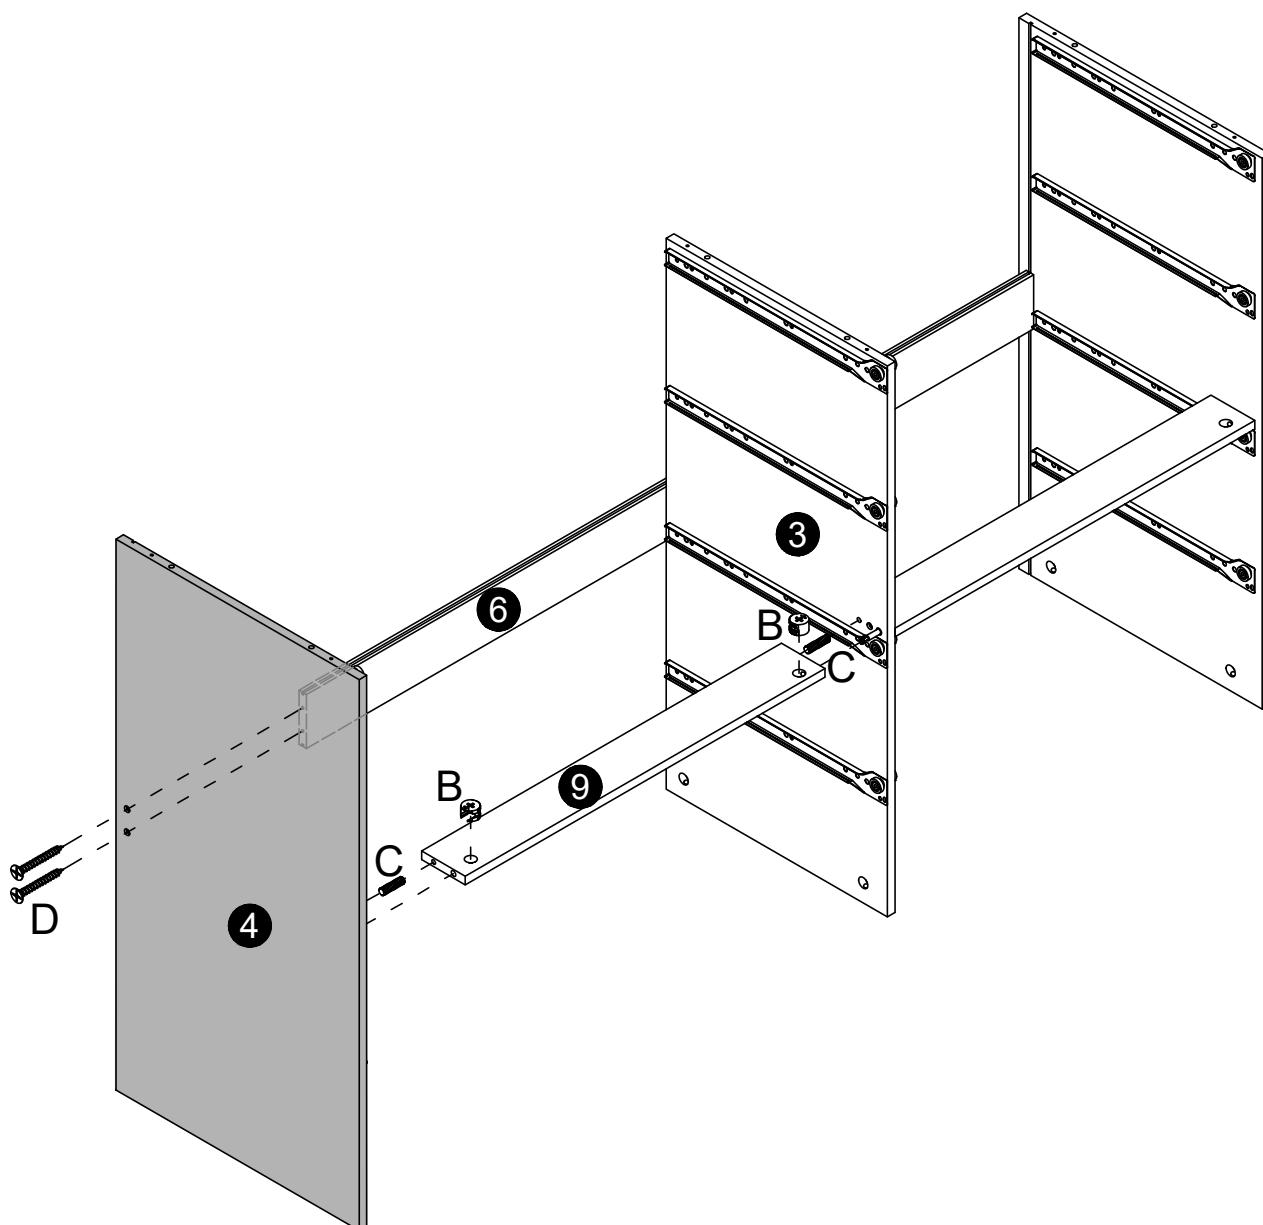

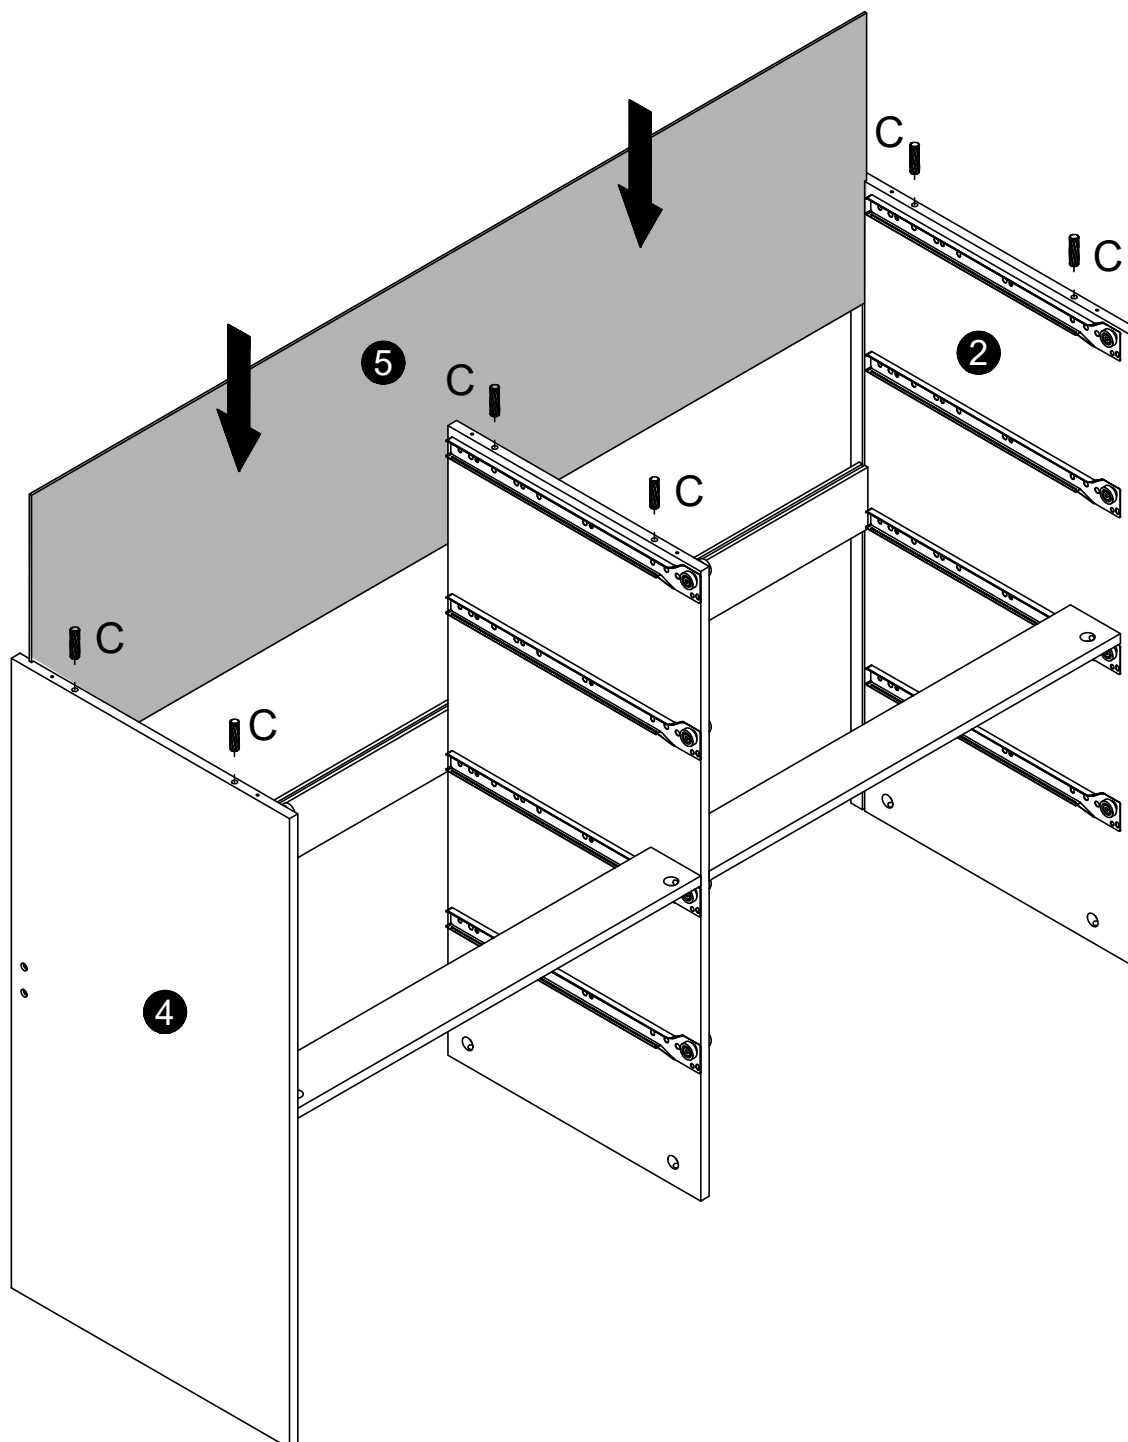


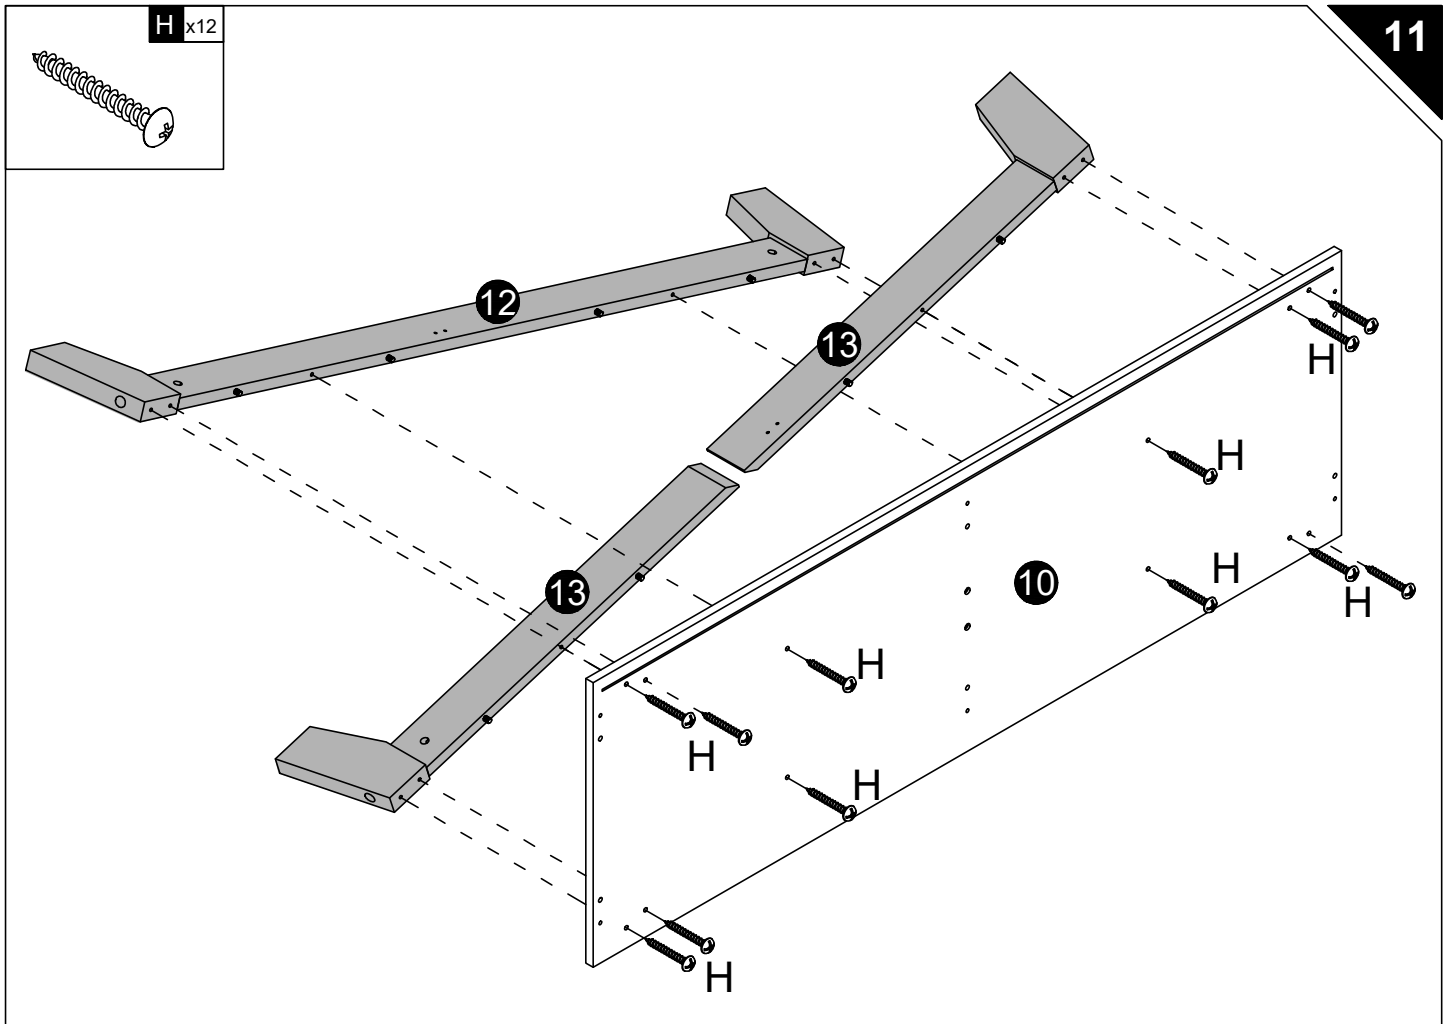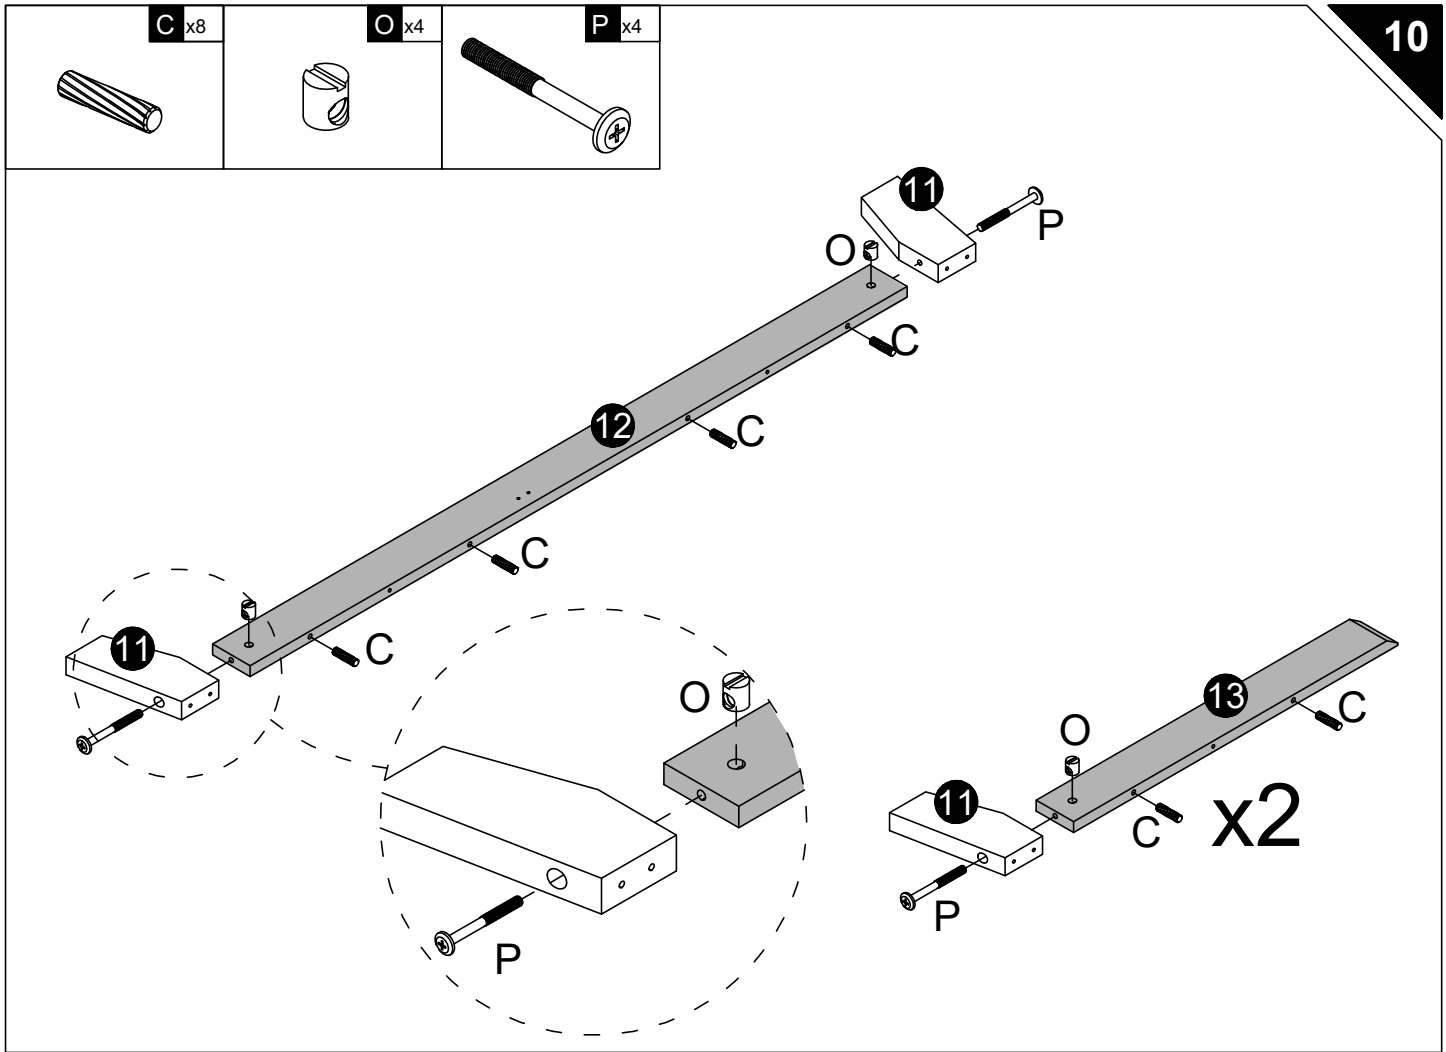

H x2




12

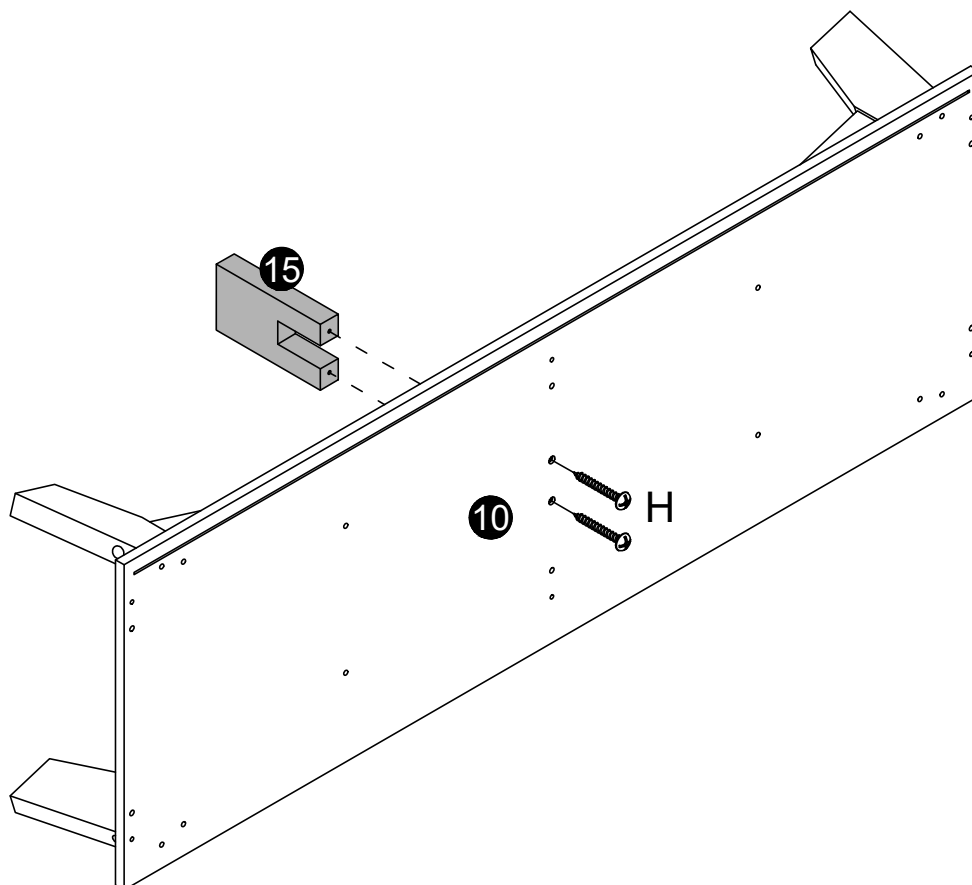

E x16




F x4





I x1




13


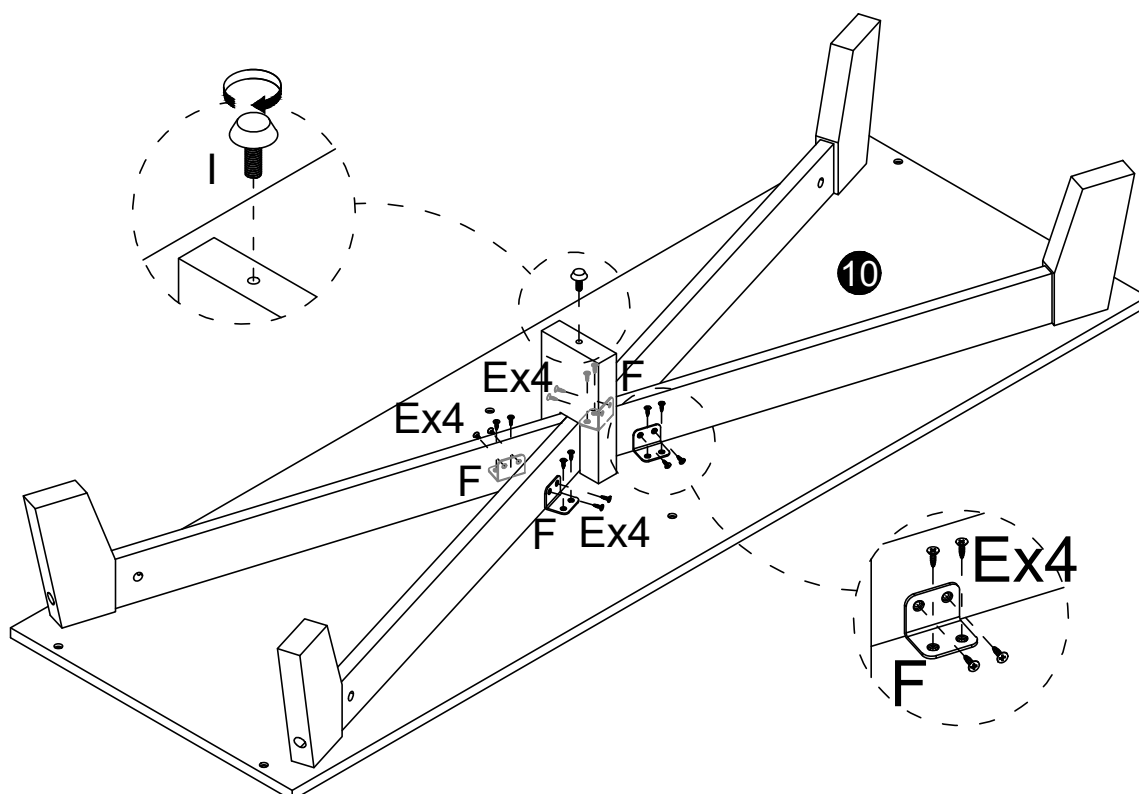


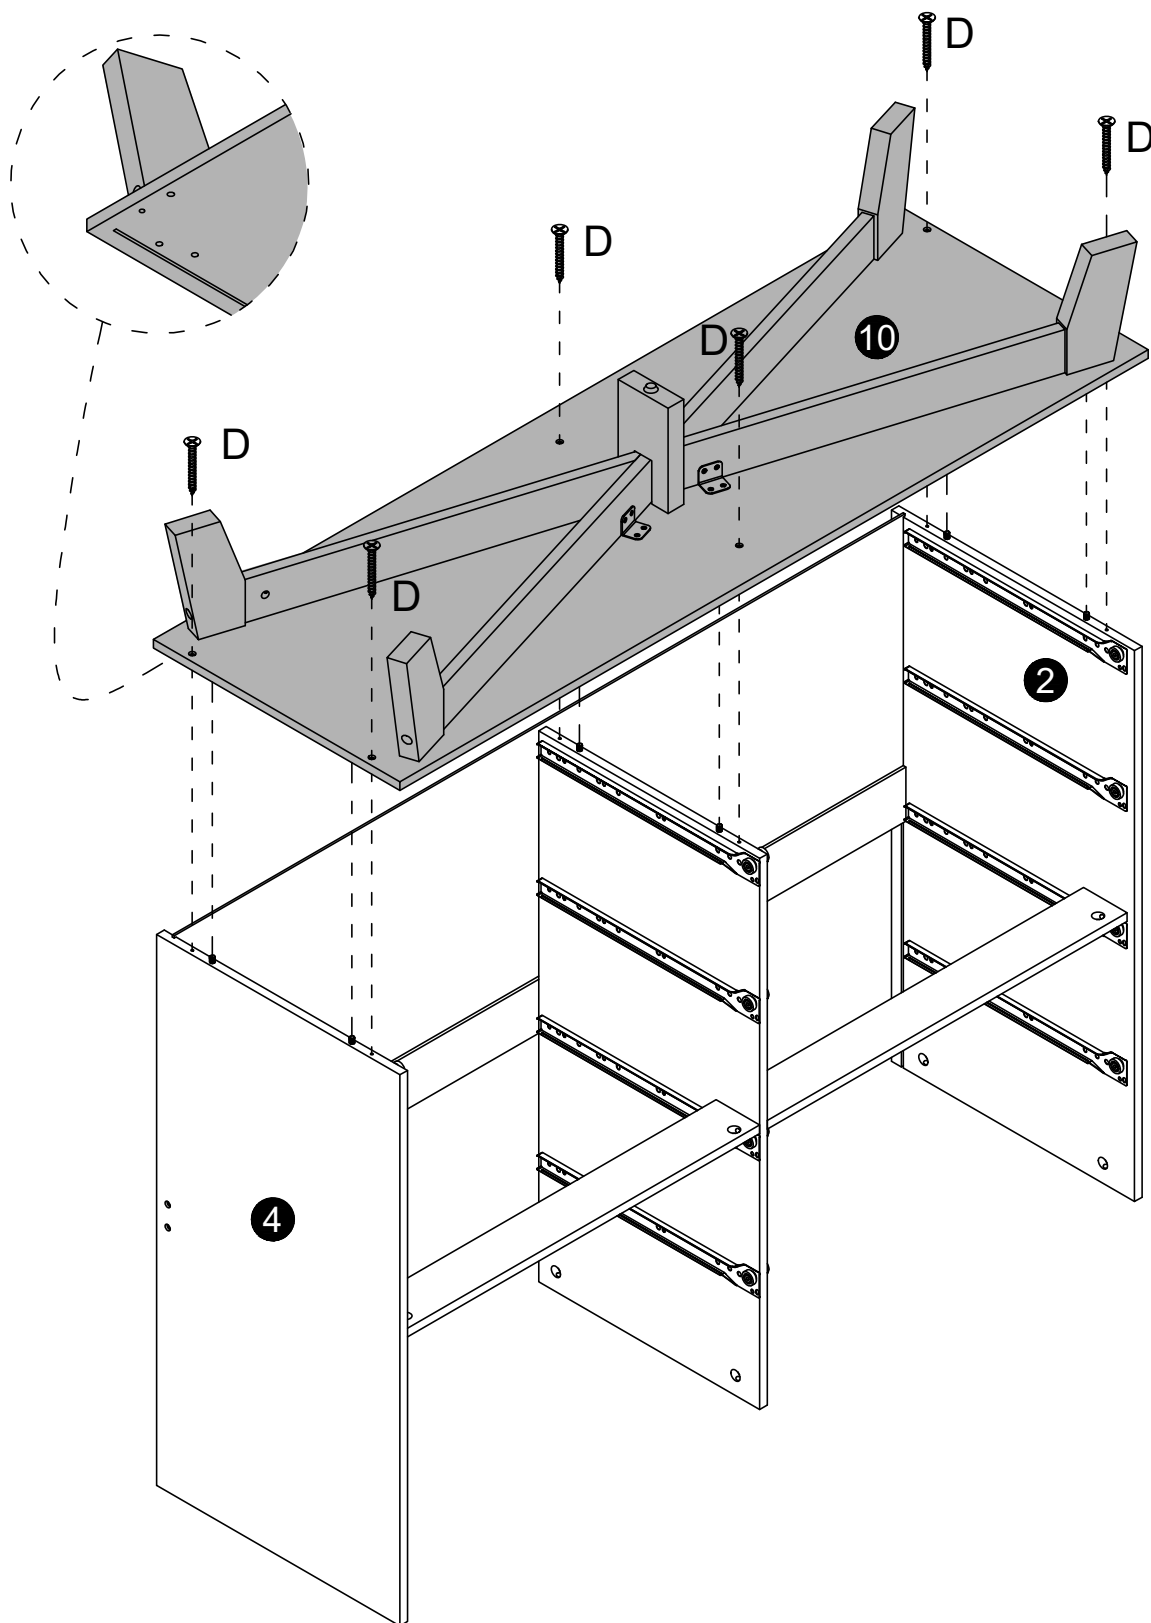





C x6


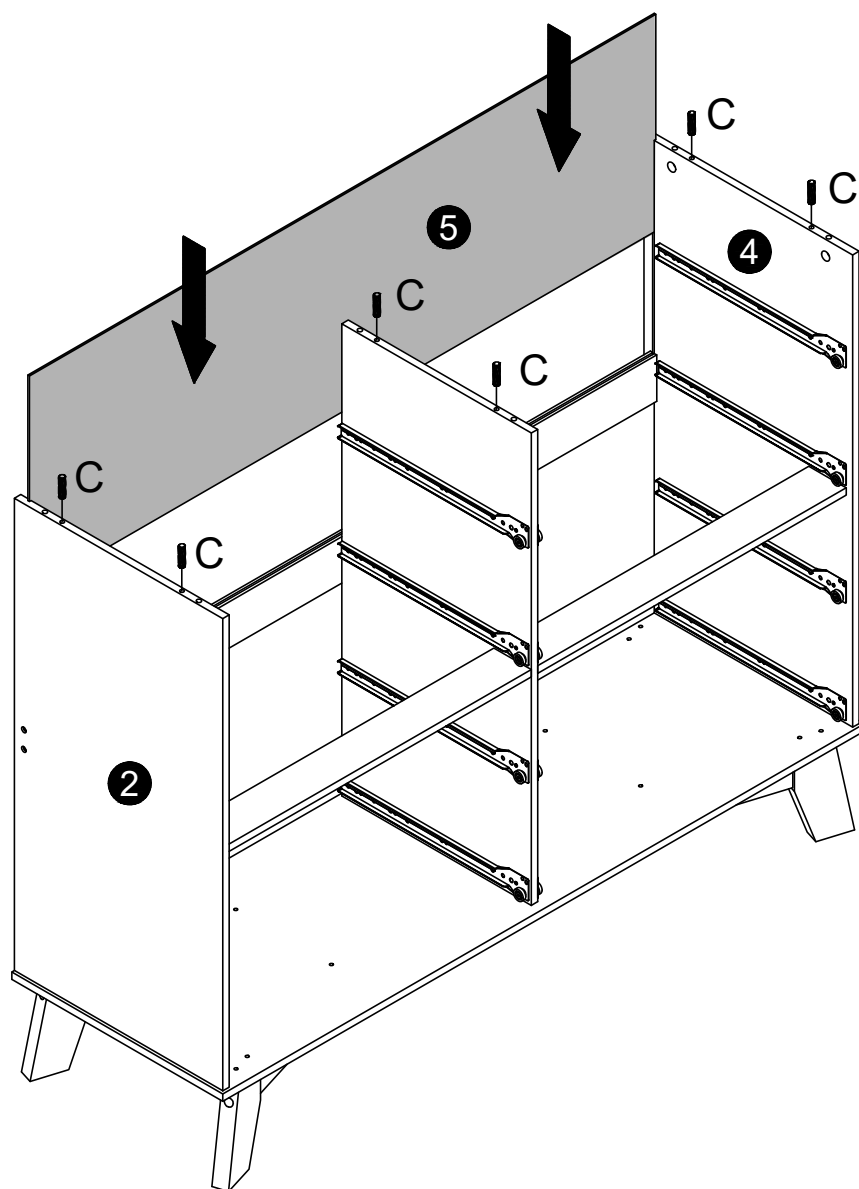


A x6

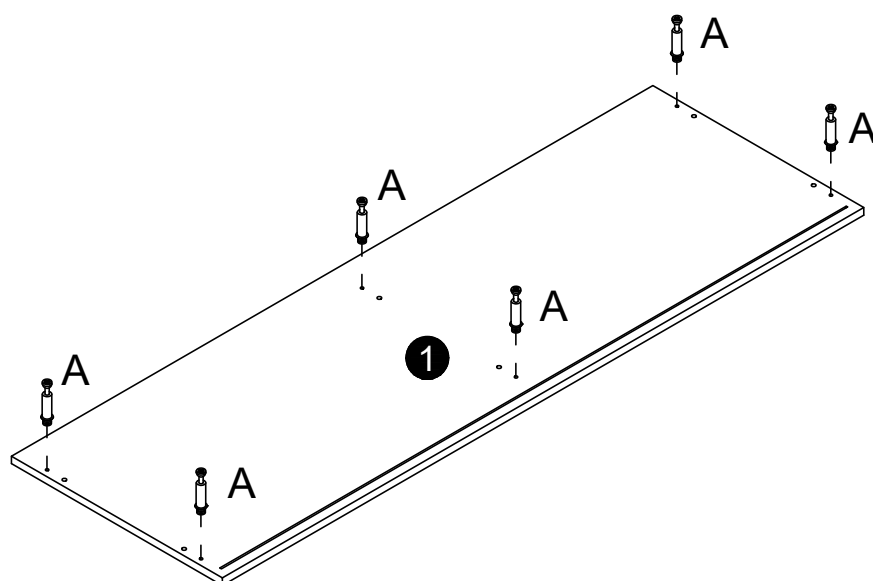

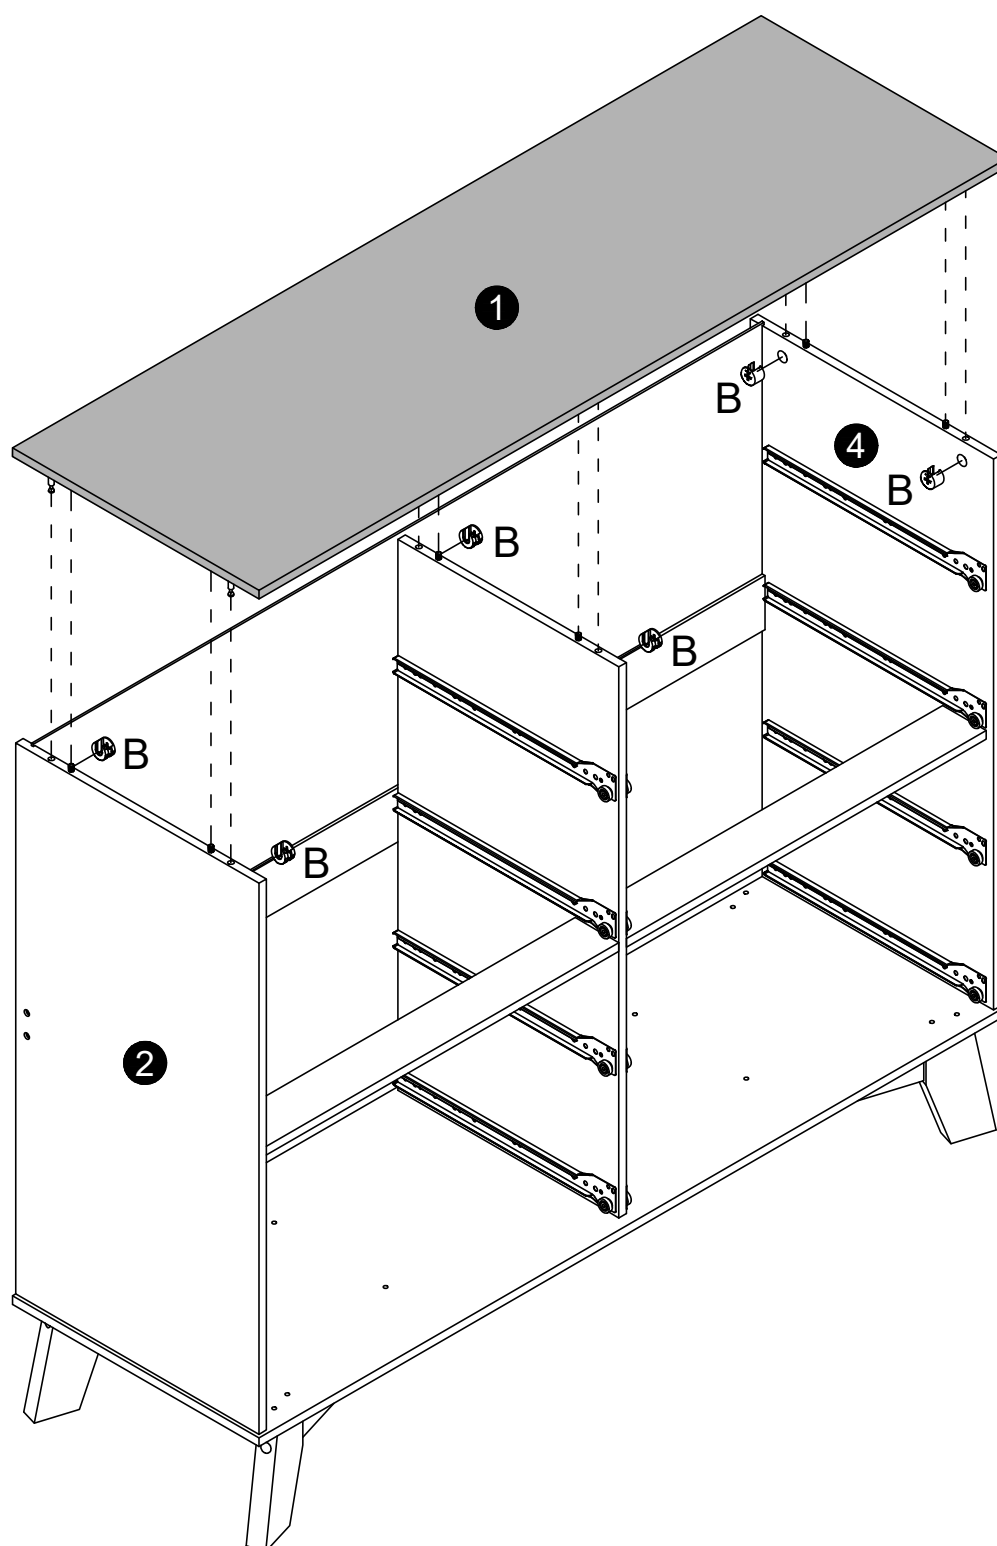

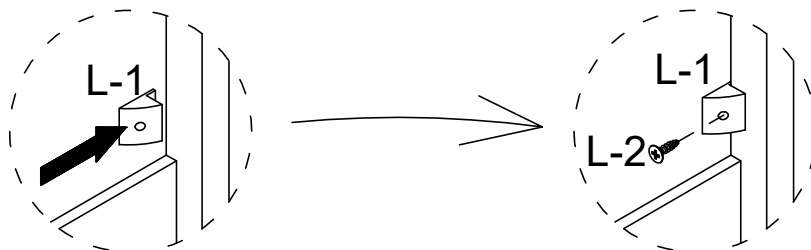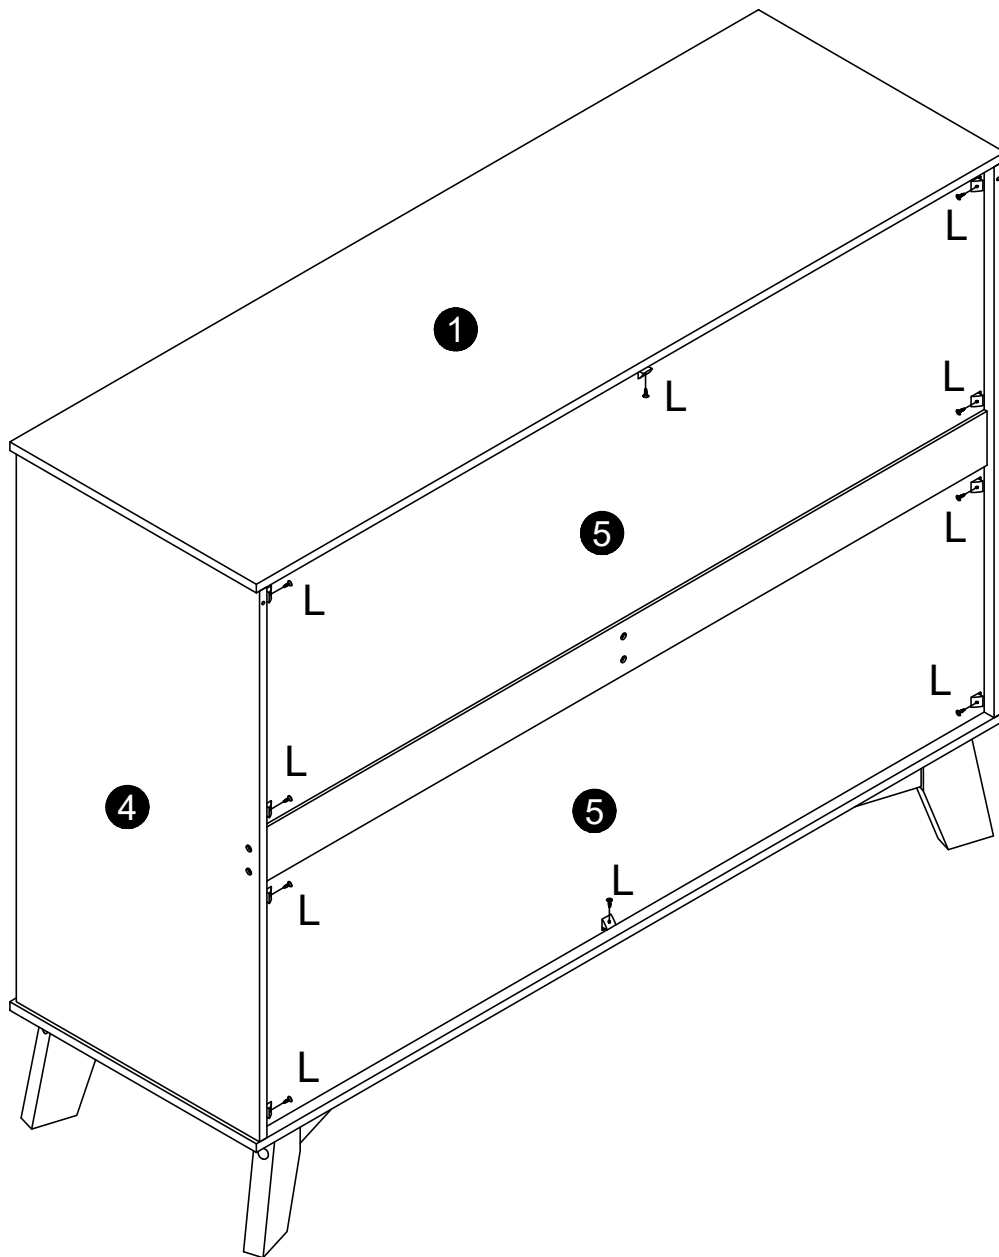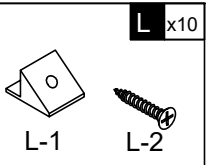


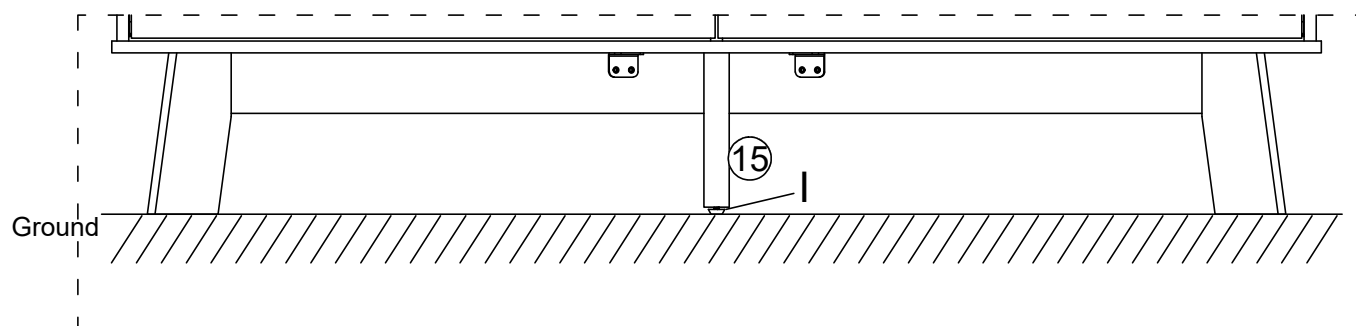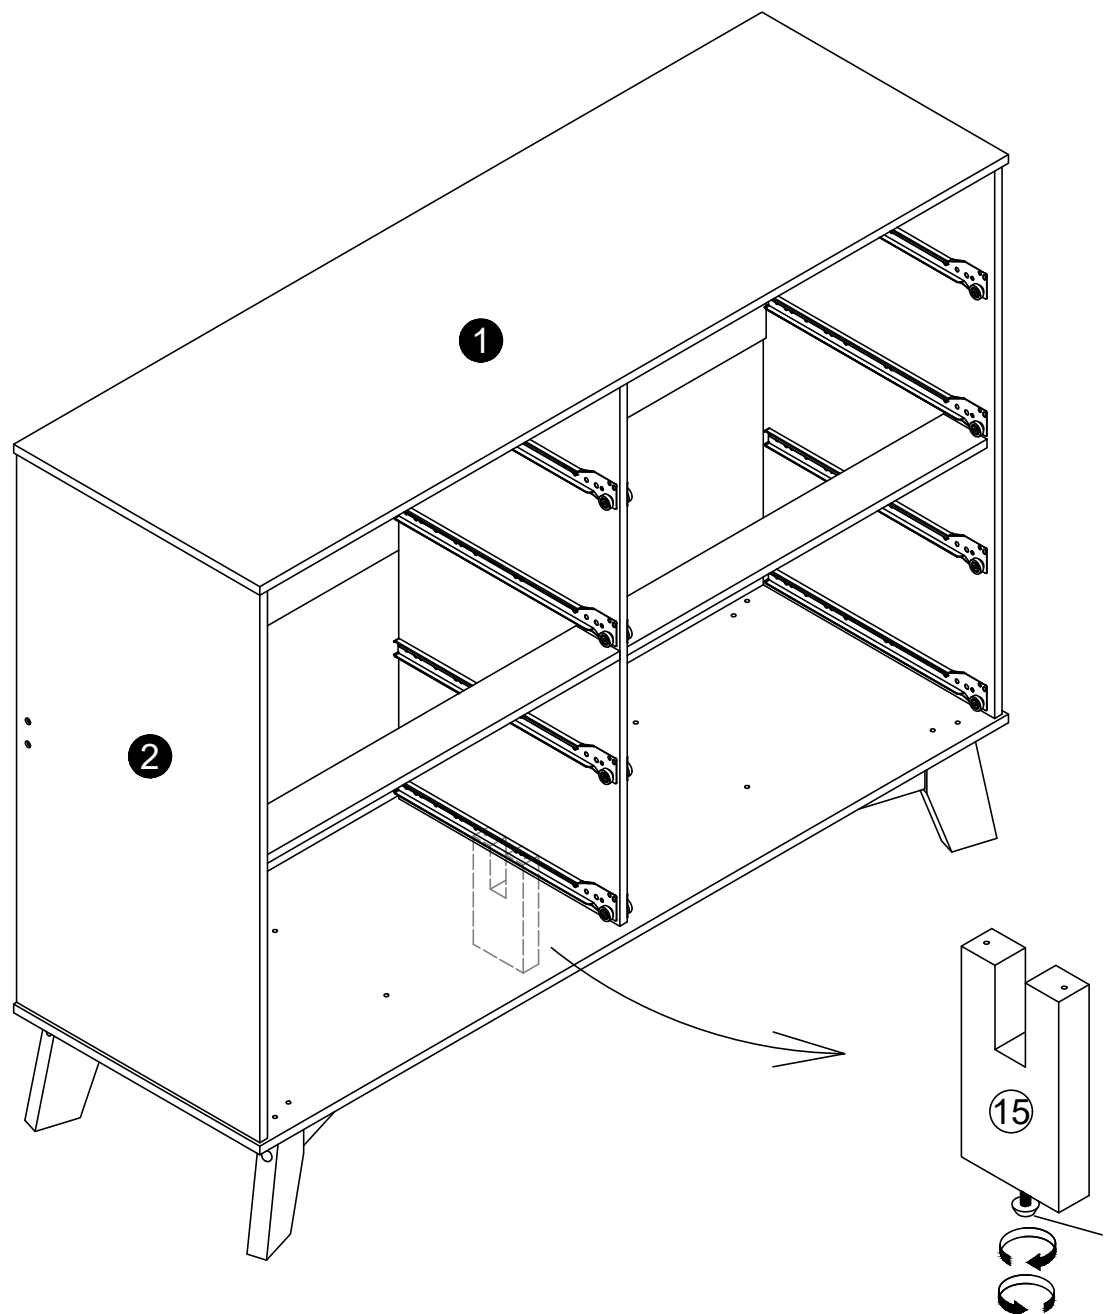




If the cabinet is unstable with the ground, please rotation control the foot fitting (I)




(1)

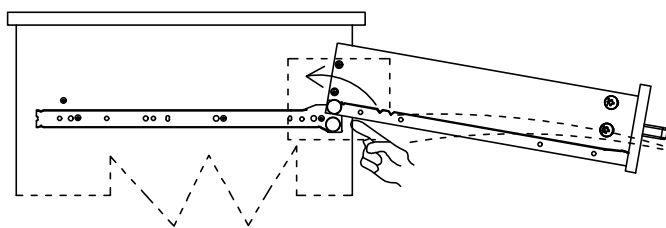


(2)

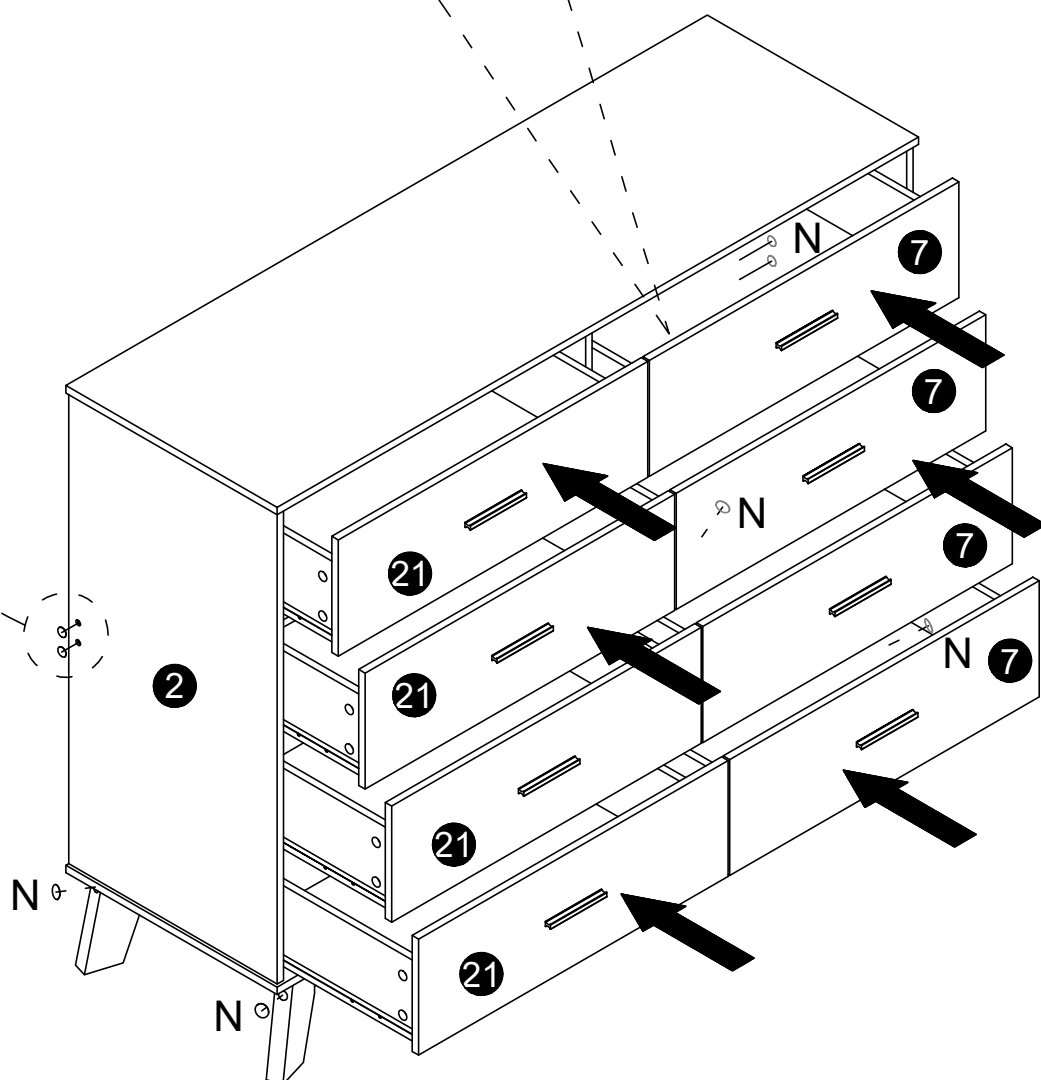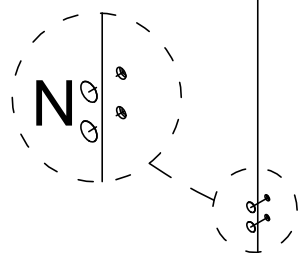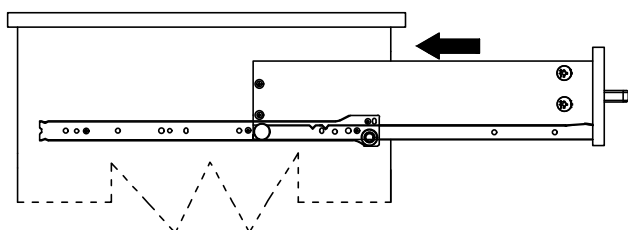


D x2



K x2



M x2




K-1

First fix the anti-rewind screw in the reserved hole of the product.

K-2

(1)x2

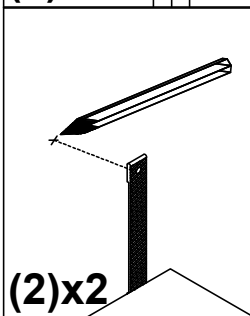

(2)x2

WALL

+
drilling hole
Ø6x30mm

(3)x2



then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL

M



(4)x2

WALL

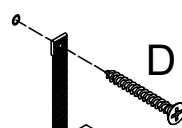



(5)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

WALL

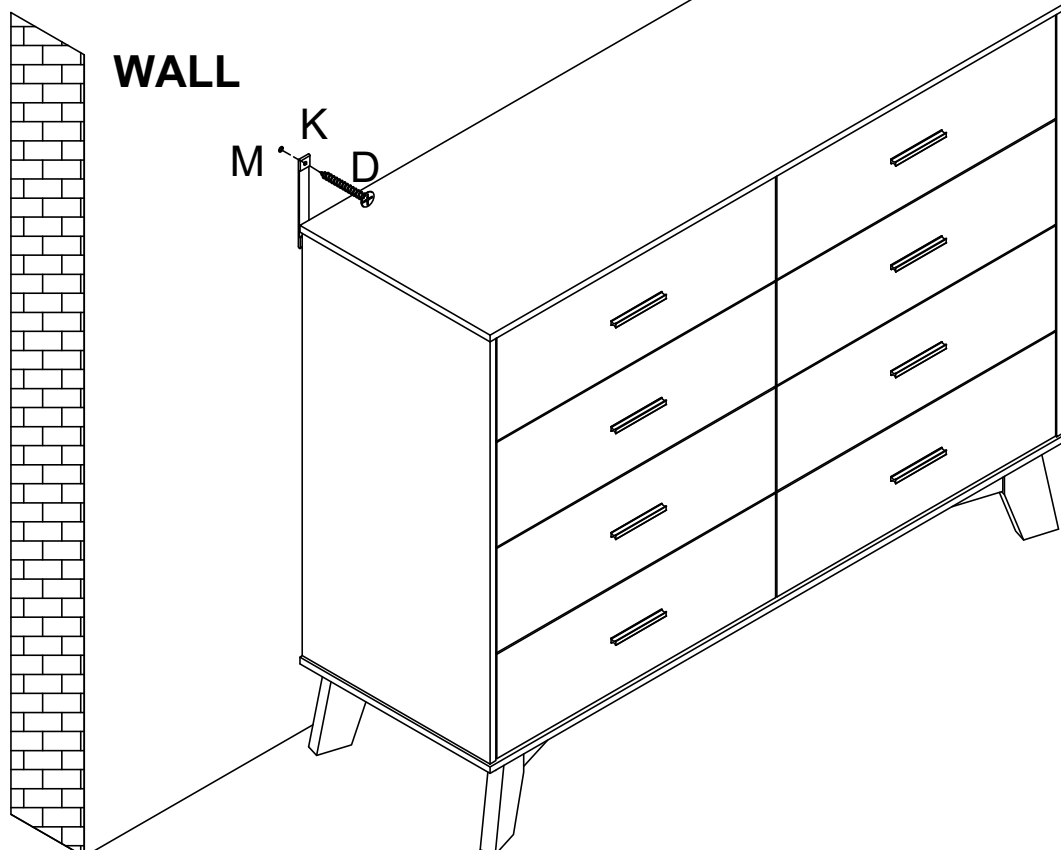

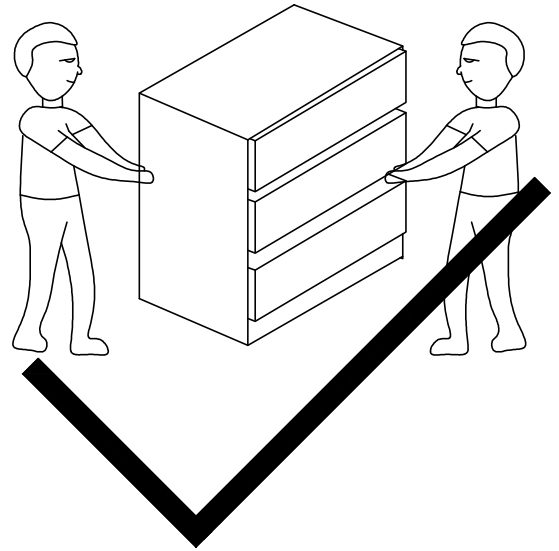

WARNING

Do not push the furniture violently during the moving process, otherwise there will be a risk of tipping and damage, which is unsafe behavior. Moving furniture after assembly requires two or more people to lift it.