

Silver Bronze Blue Purple

# Mirror Cabinet Assembly Instructions

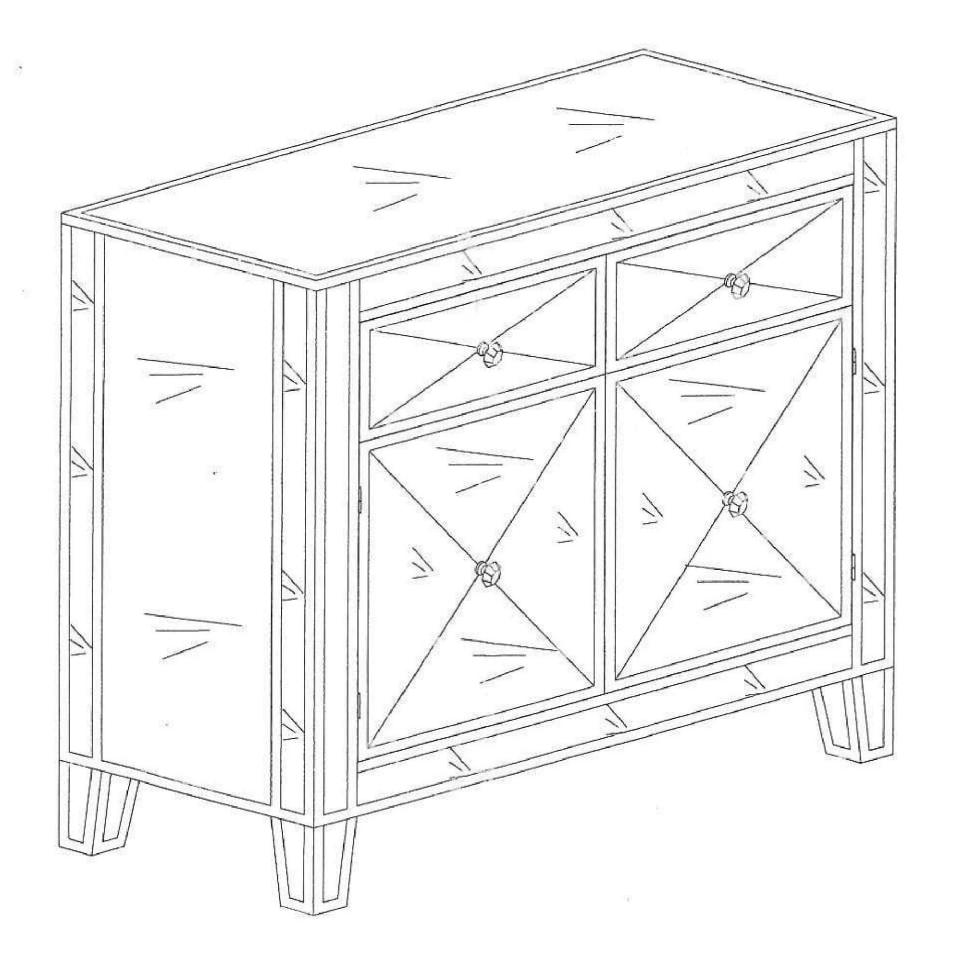

### Mirror Cabinet Parts List

Please review all parts and hardware before disposing of any packaging. Before beginning assembly, separate each type of hardware. Carefully study the diagrams below and check that you have all parts indicated. Call Customer Service if missing hardware. Using the incorrect hardware will cause damage.

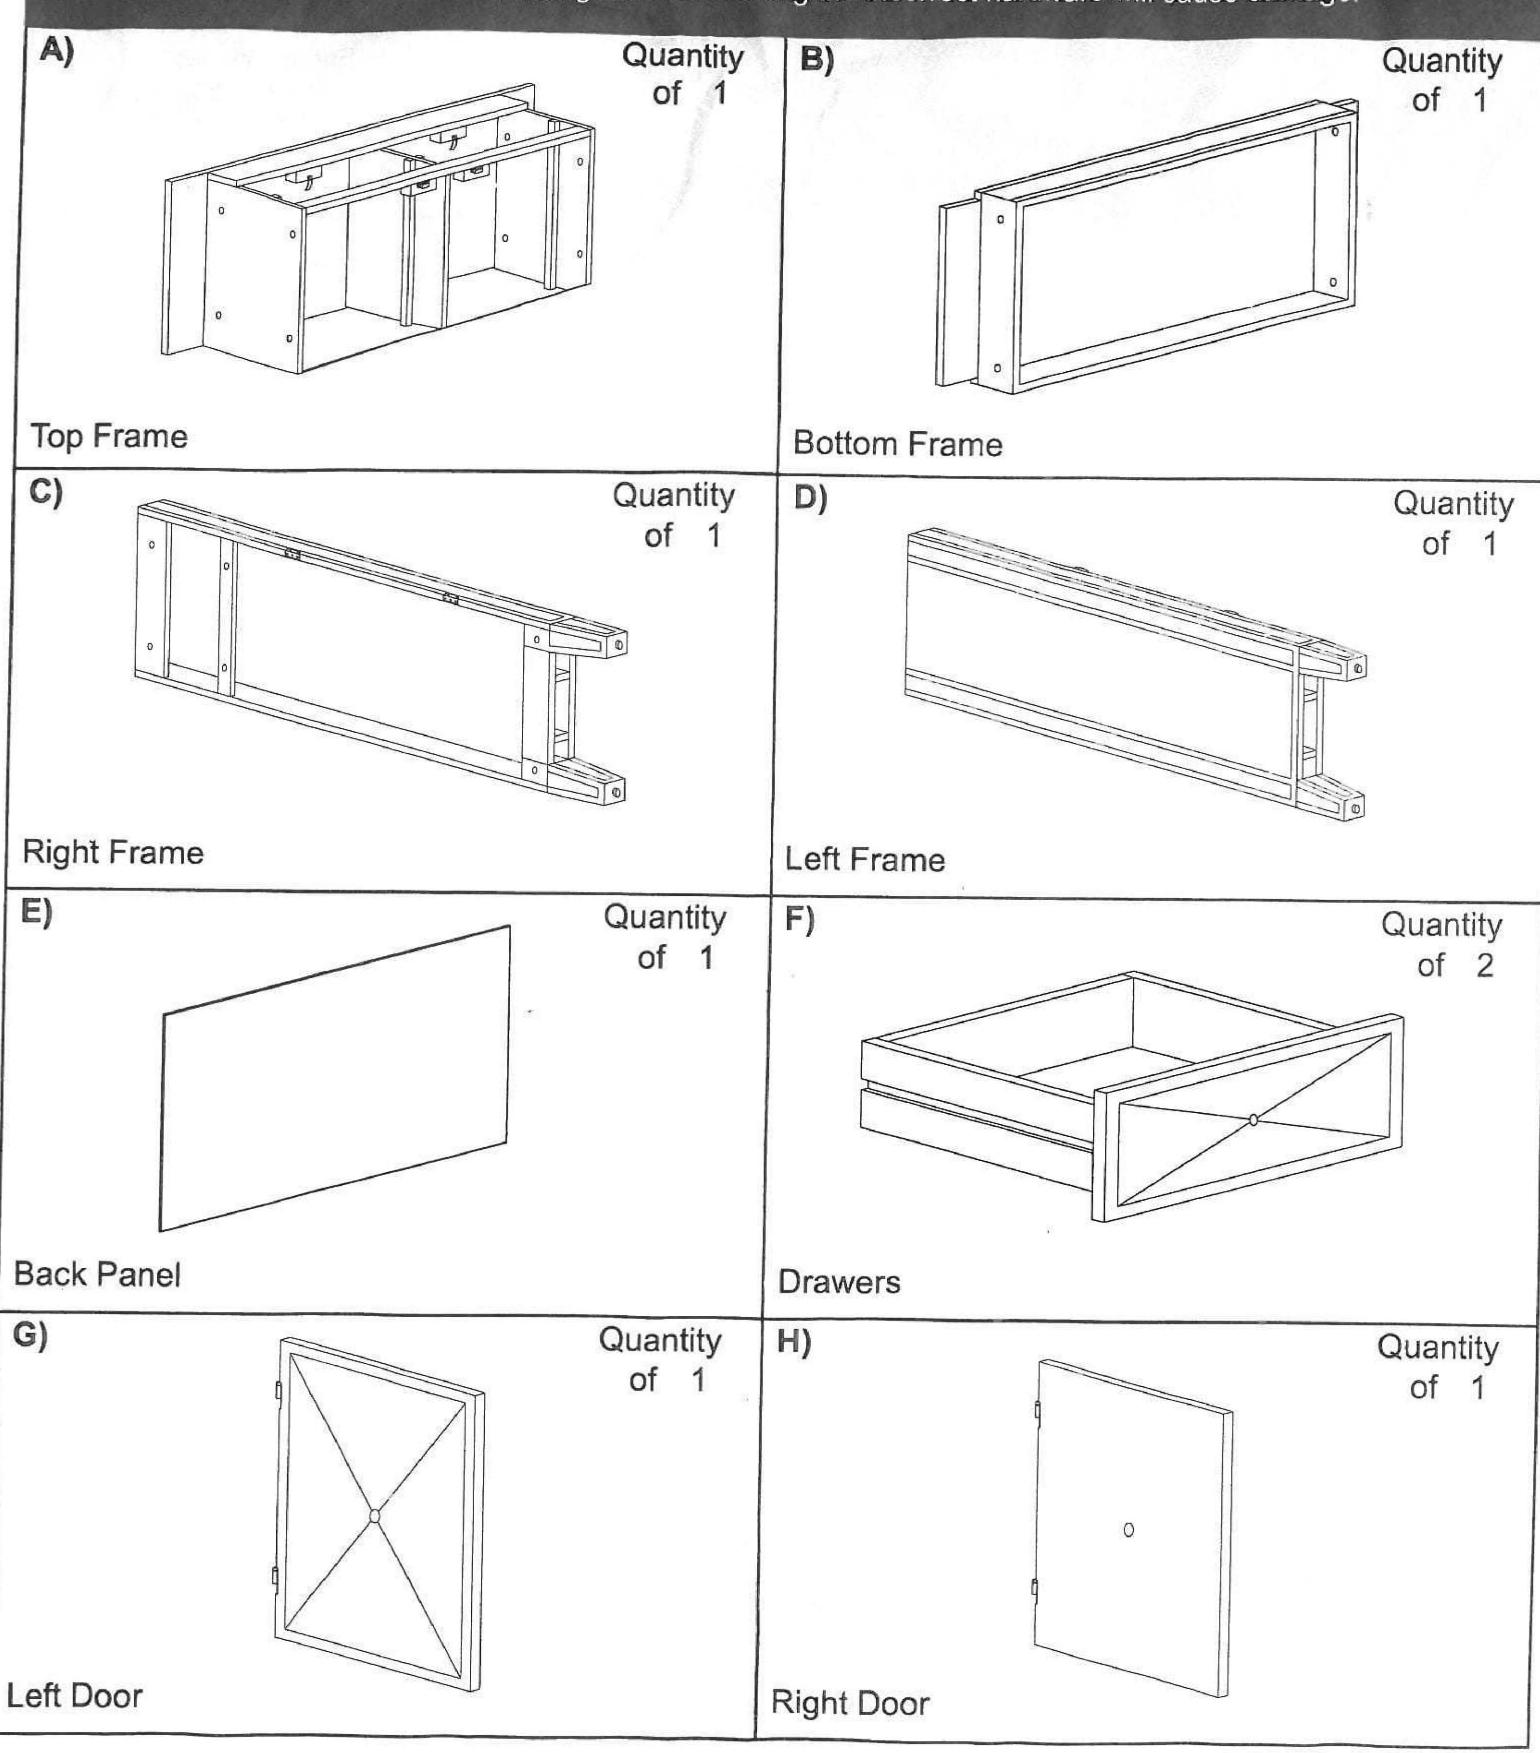


## Mirror Cabinet Parts List

Please review all parts and hardware before disposing of any packaging. Before beginning assembly, separate each type of hardware. Carefully study the diagrams below and check that you have all parts indicated. Call Customer Service if missing hardware. Using the incorrect hardware will cause damage.

1) (I)	Quantity of 12	2)		Quantity of 12
Bolts	(Dia5/16"x1-3/16"L)	Flat Washers		
3)	Quantity of 1	4)		Quantity of 2
Allen Wrench		Short Bolts	(Dia	5/32"x3/4"L)
5)	Quantity of 4	6)		Quantity of 4
Knobs		Plastic Washers		Ouantitu
7)	Quantity of 2	8)		Quantity of 12
Long Bolts	(Dia 5/32"x1"L)	Wood Screws (Dia 2.5mmx10mmL)		
9)	Quantity of 6			
Metal Catches				
Care and Cleaning Instructions:  Before using, wipe with a clean, dry cloth.  Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.		For replacement parts or questions, please call customer service		
Assembly Tool No.2 Phillips So (Not Include	6			

#### Mirror Cabinet

### **Assembly Instructions**

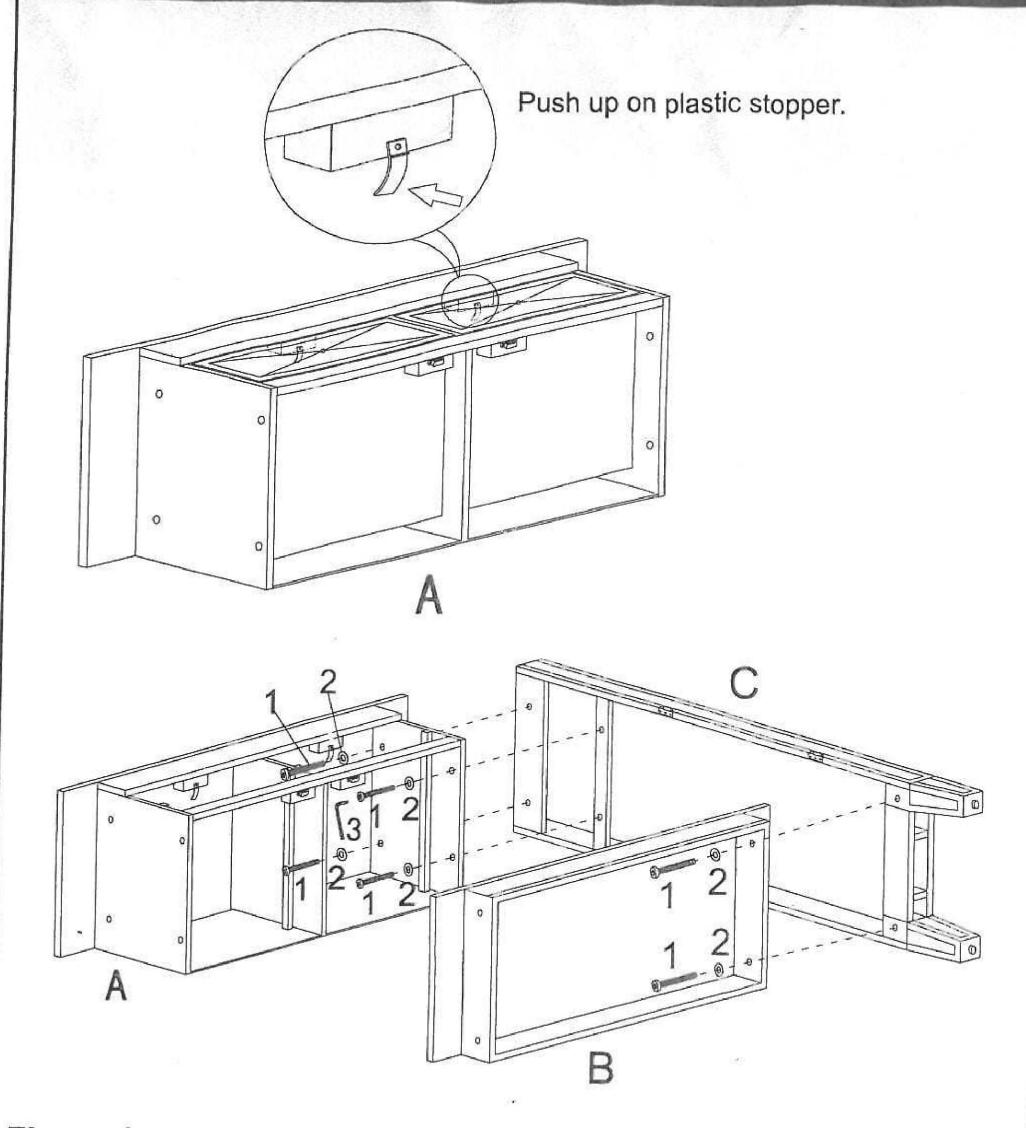

Start assembly with drawers removed. Push white stopper by hand, then remove drawers.

Attach Right Frame (C) to Top
Frame (A) and Bottom Fame (B)
with Bolts (1) and Flat Washers (2).

Tighten bolts with Allen Wrench (3).

Don't fully tighten bolts until Step 2 is complete.




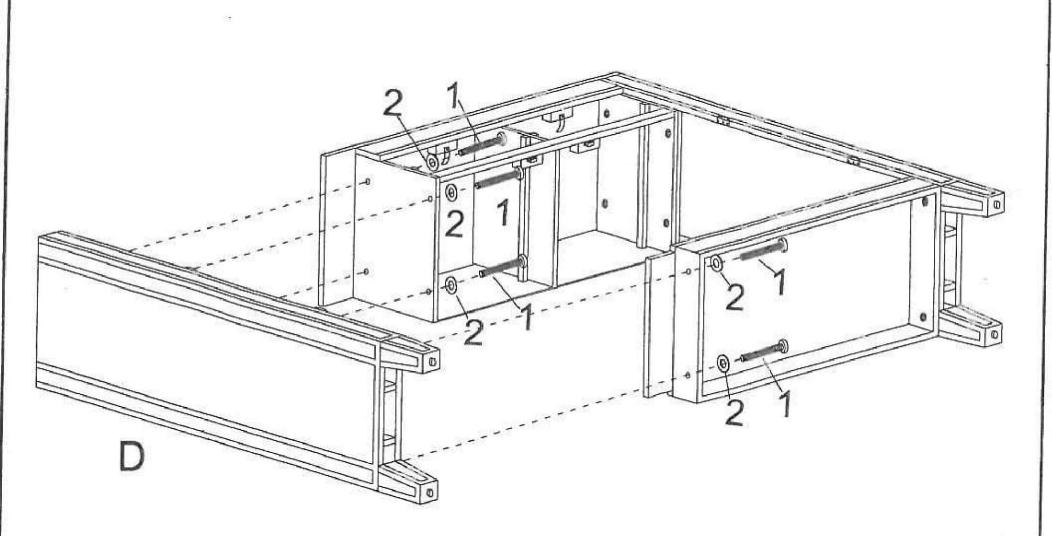


Figure 2

Attach Left Frame (D) to Top Frame (A) and Bottom Fame (B) with Bolts (1) and Flat Washers (2).

Tighten bolts with Allen Wrench (3).

Fully tighten all bolts. Be careful not to tighten too much as it may cause damage.

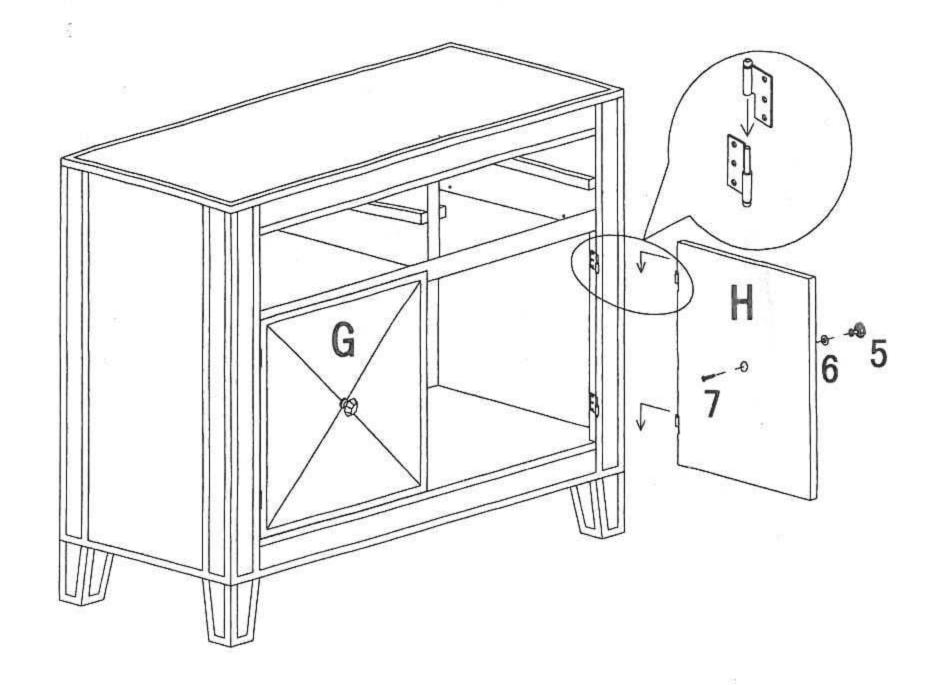


Attach Left Door (G) and Right Door (H) by aligning pre-installed male hinges on side panels with pre-installed female hinges on doors.

Attach Knobs (5) and Plastic Washers (6) to door with Long Bolts (7).

Tighten bolts with screwdriver.

Caution: Please do not over tighten knobs. Stop when they start to feel tight.

Figure 3

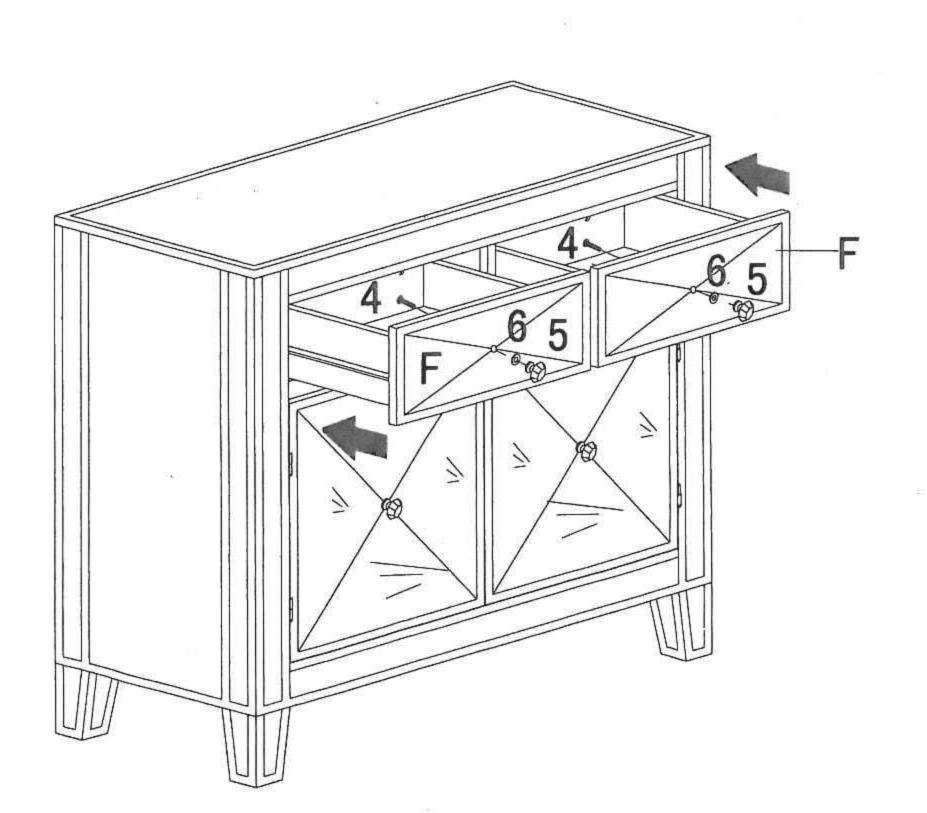


Insert drawers back into unit.

Attach Knobs (5) and Plastic
Washers (6) to drawers with Short
Bolts (4).

Tighten bolts with screwdriver.

Caution: Please do not over tighten knobs. Stop when they start to feel tight.

Figure 4

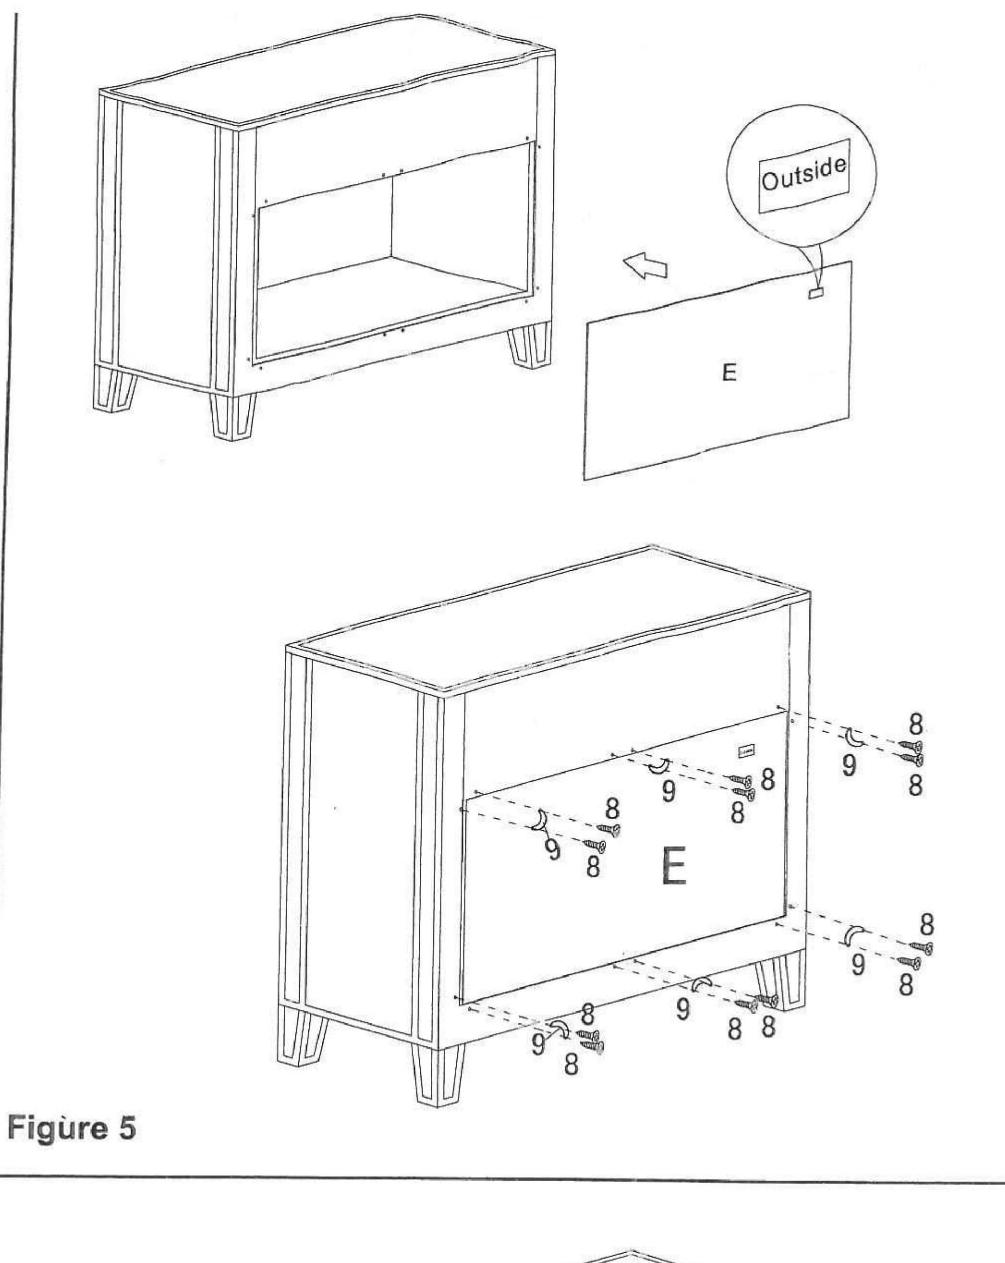

Place Back Panel (E) into opening in back of unit.

Attach Metal Catches (9) to Back Panel (E) with Wood Screws (8).

Tighten screws with screwdriver.

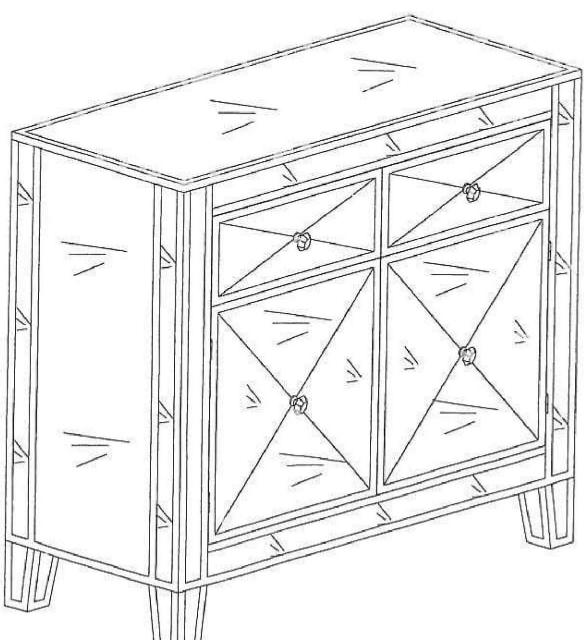


Figure 6

Now your new Mirror Cabinet is ready to use!