

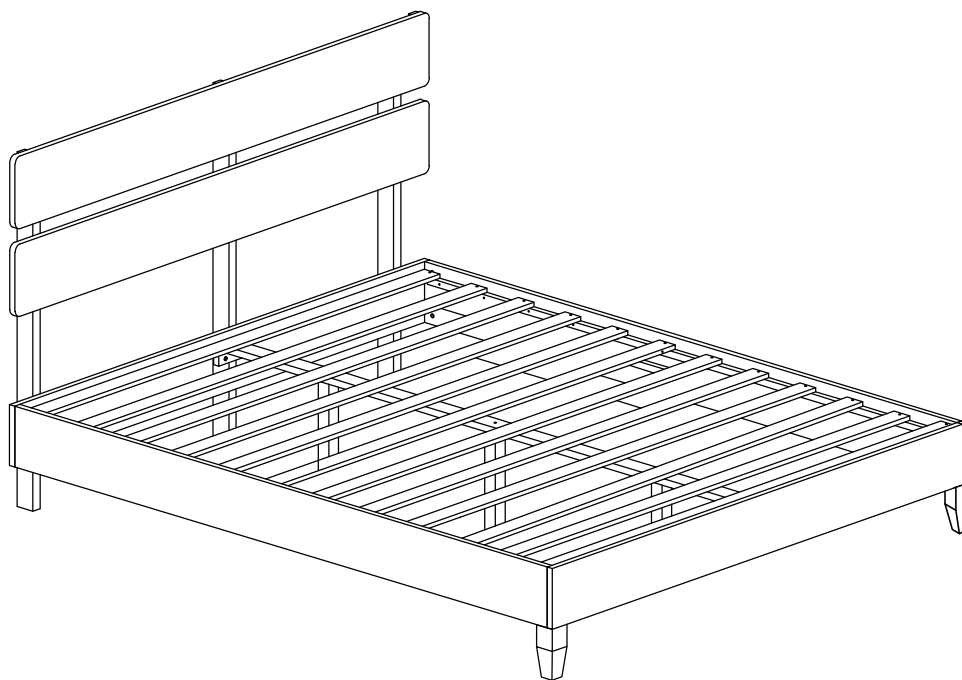











Assembly Instruction



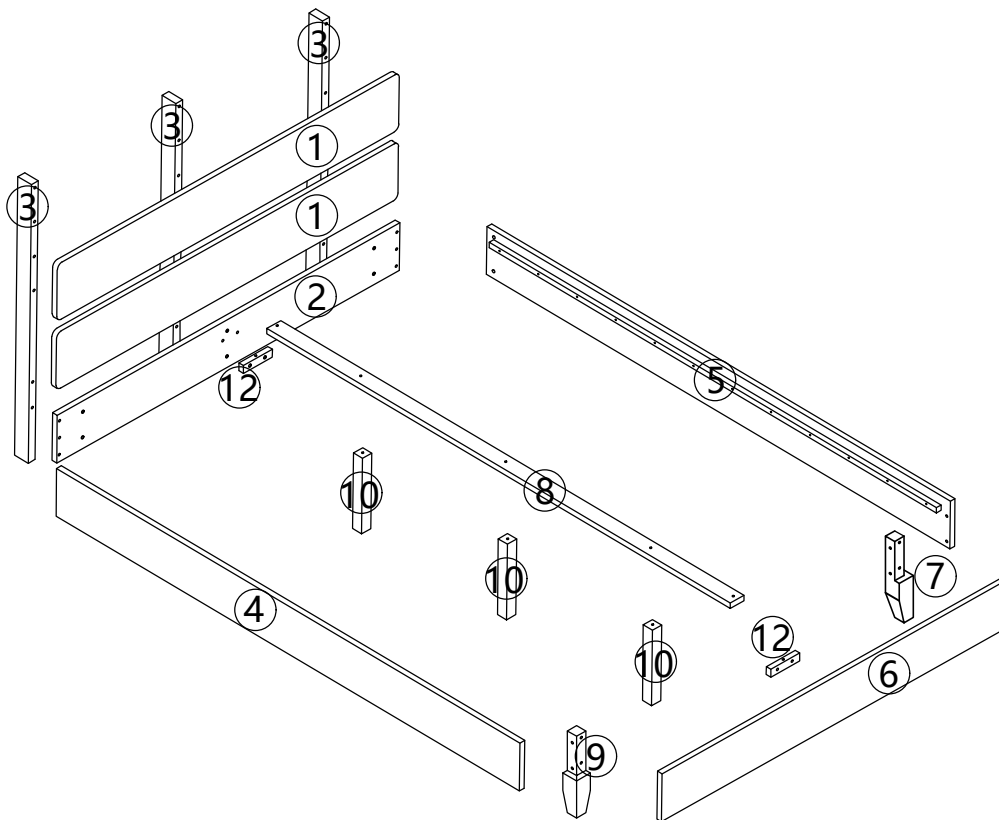


NOTE:


1. When receiving the goods, please confirm the product according to the instructions. Once you find less pieces, please provide relevant pictures to contact us. We will deal with it in the time.
2. Please install goods with the instruction manual.
3. It is recommended that the installation should not be too tight to adjust easily. After the structure is installed, firm the interface for more stability.
4. **Warning:** Do not jump off / on or hang from this loft/Bunk bed; The surface of the mattress must be at least 5" below the upper edge of the guardrails for safety reason

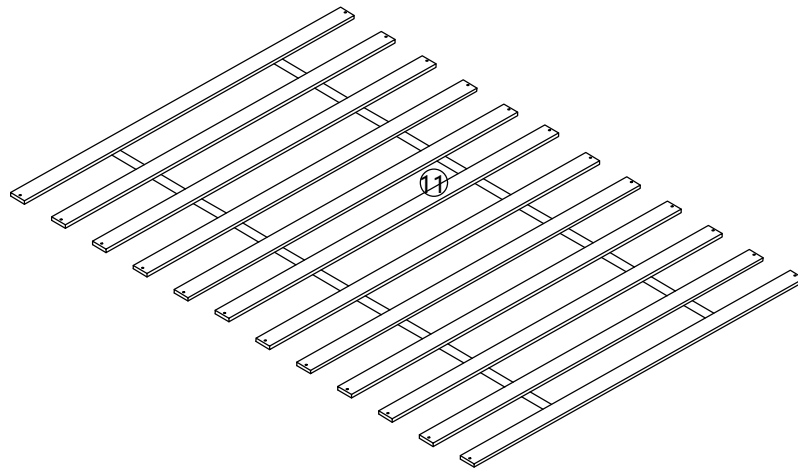

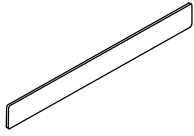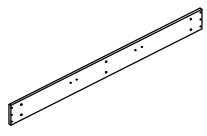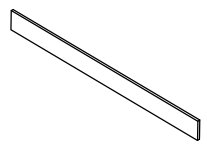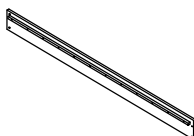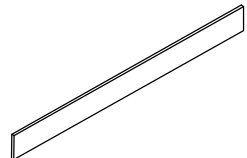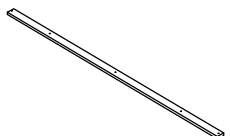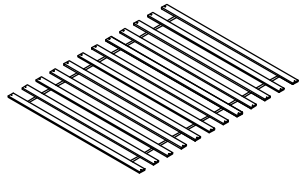①-2pcs  1560*215*20mm	②-1pc  1560*180*20mm	③-3pcs  1050*60*30mm	④-1pc  2030*180*40mm
⑤-1pc  2030*180*40mm	⑥-1pc  1562*180*20mm	⑦-1pc  308*60*60mm	⑧-1pc  2030*60*20mm
⑨-1pc  308*60*60mm	⑩-3pcs  285*40*40mm	⑪-12pcs  1518*60*13mm	⑫-2pcs  120*30*20mm

A-12pcs  M6*65mm	B-4pcs  10*13mm	C-6pcs  M6*15mm	D-2pcs  8*30mm
E-12pcs  M6*55mm	F-6pcs  M6*60mm	G-3pcs  M7*70mm	H-24pcs  M3. 5*25mm
I-4pcs  M6*30mm	J-2pcs  M4*60mm	K-1pcs  20*2mm	L-2pcs  M7*50mm


1

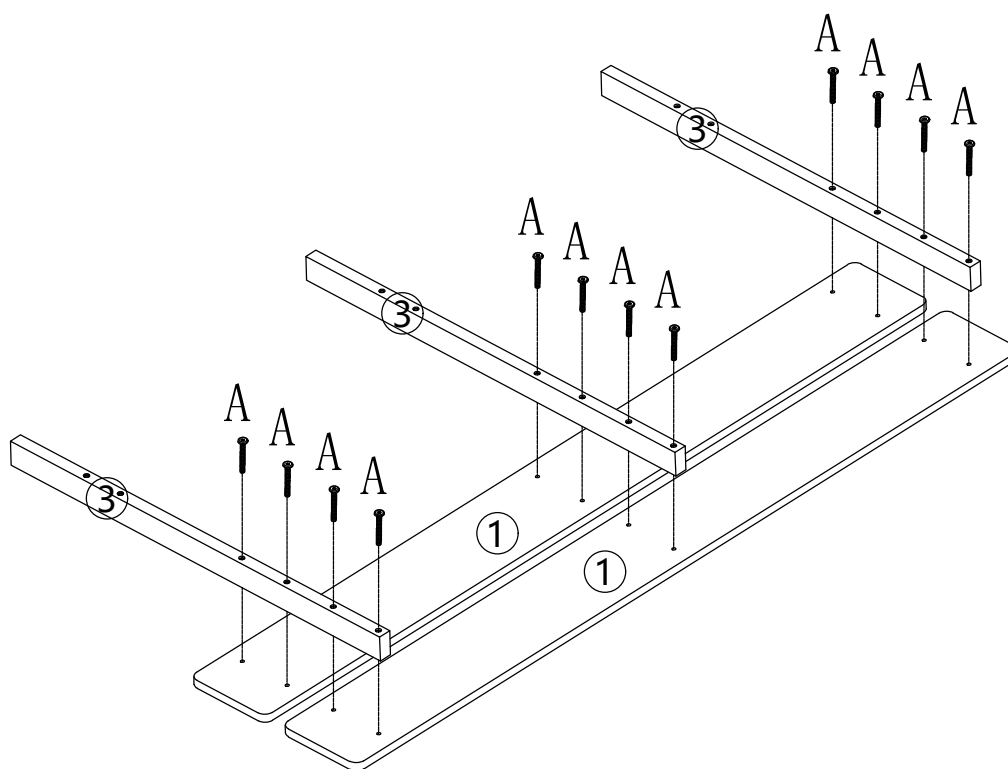

Ax12



2

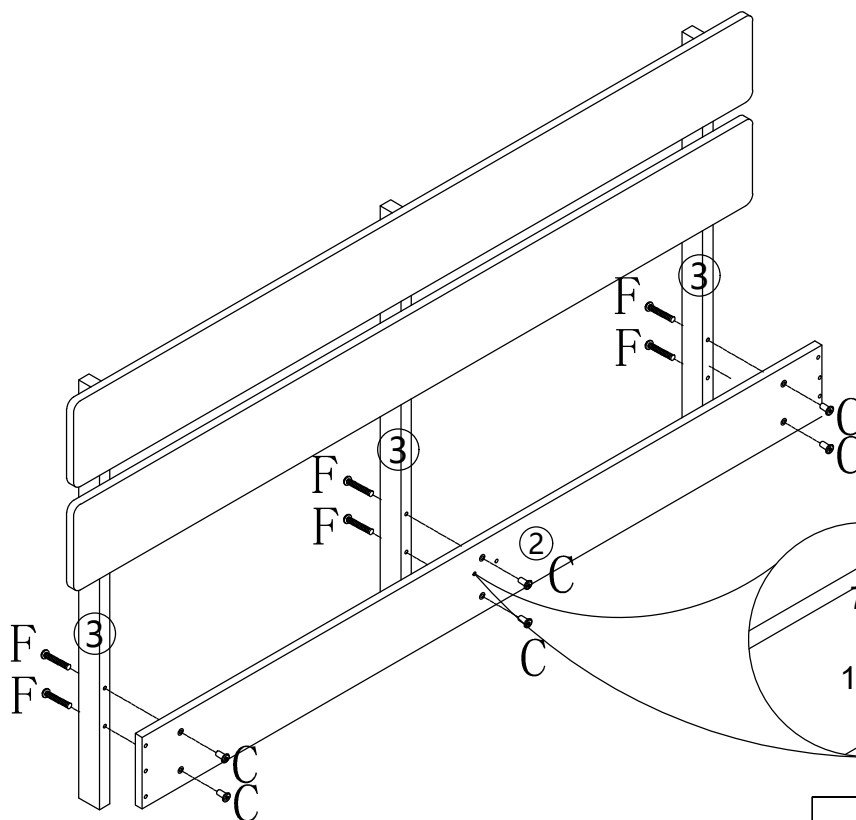

Fx6




Cx6



Note: This hole is closer to the edge on the top!

3

Note: This hole is closer to the edge on the top!

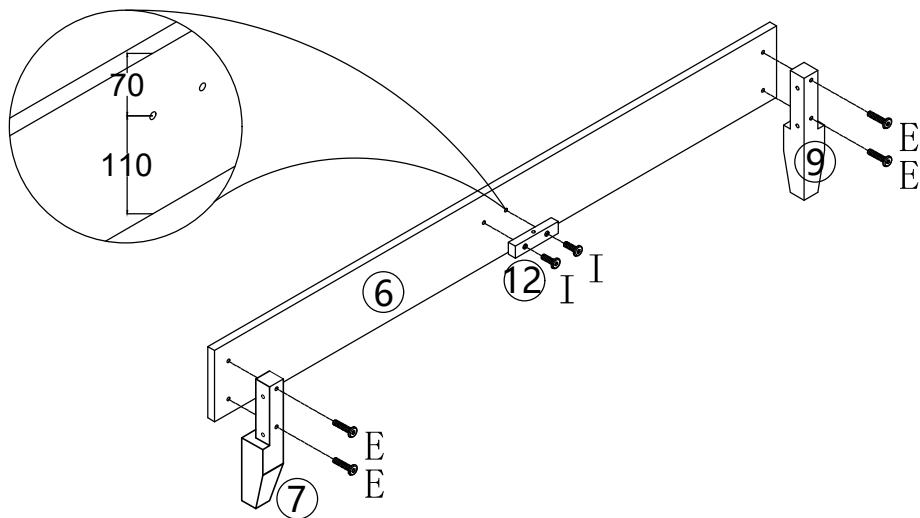


Ex4



Ix2




4

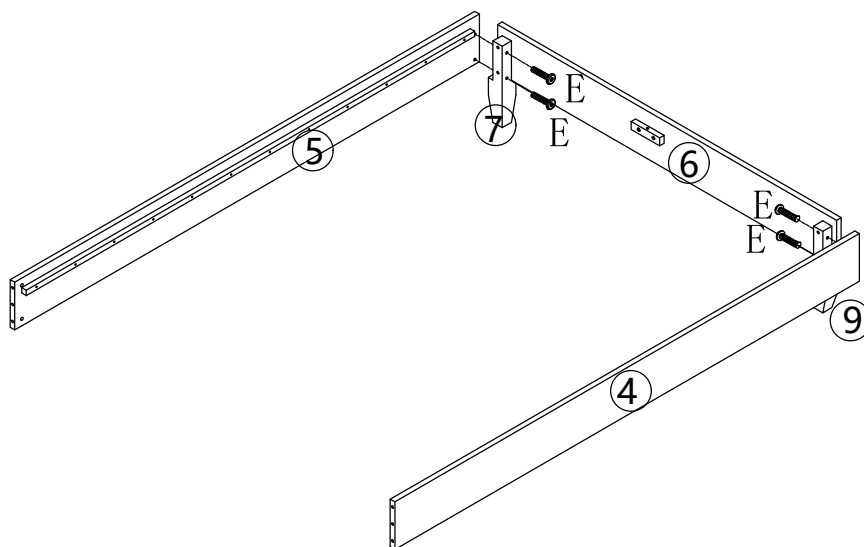


Ex4



5

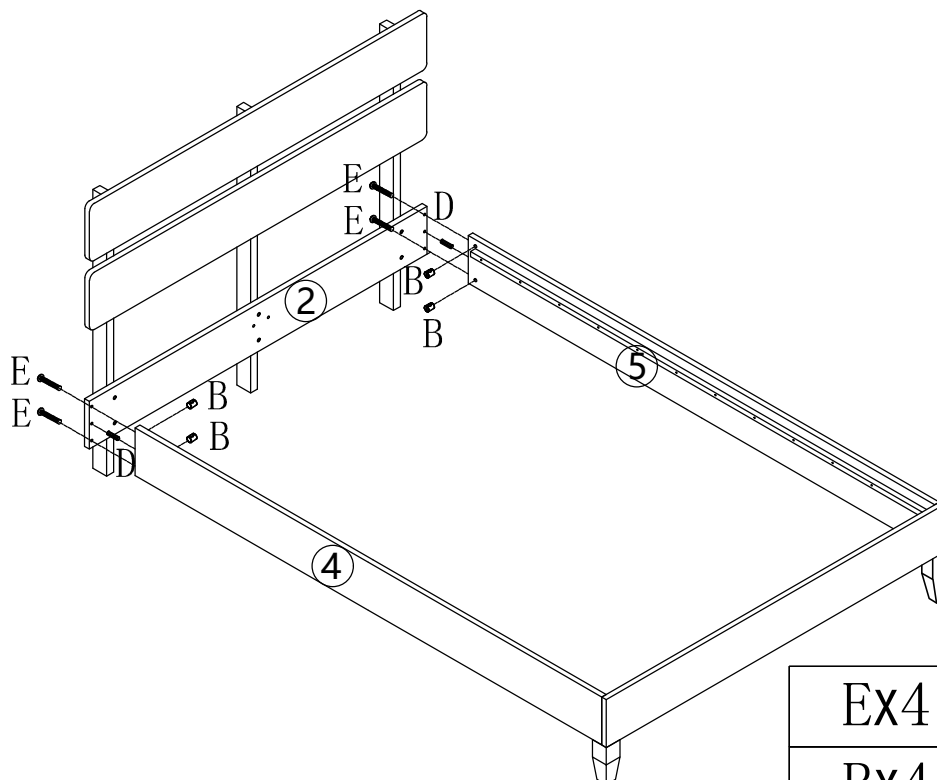

Ex4



Bx4




Dx2



5-9

6

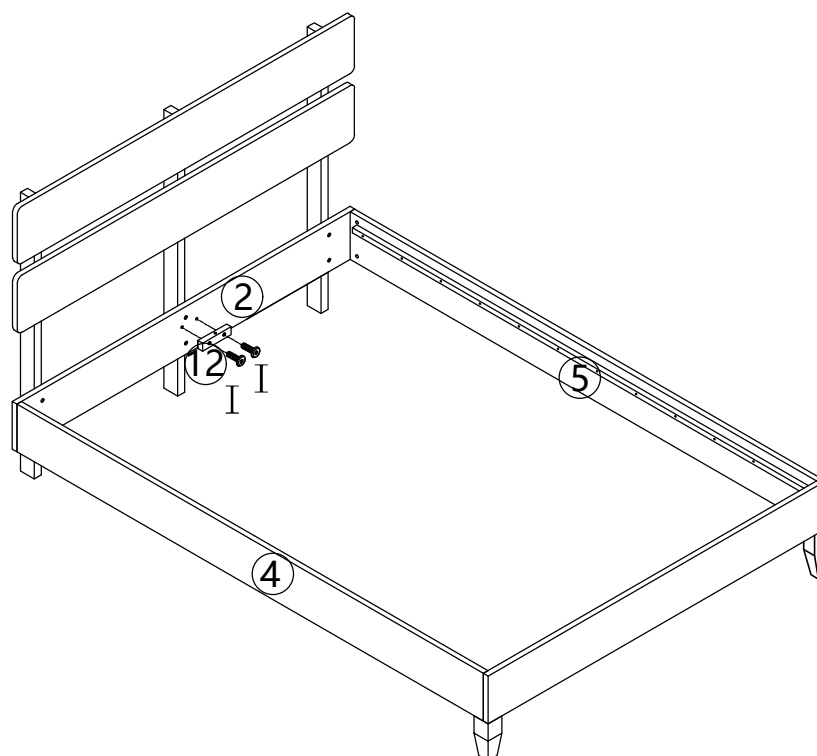


Ix2



6-8

7

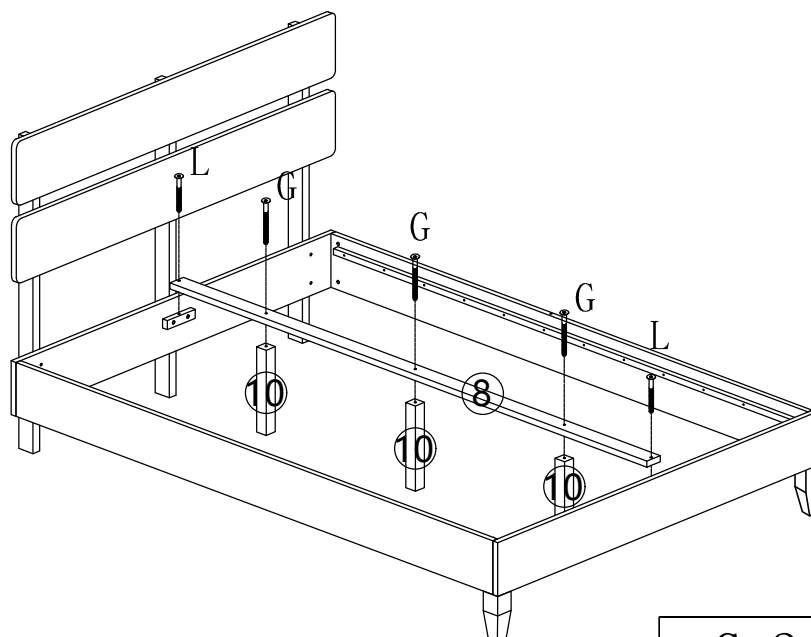


Gx3



Lx2




8

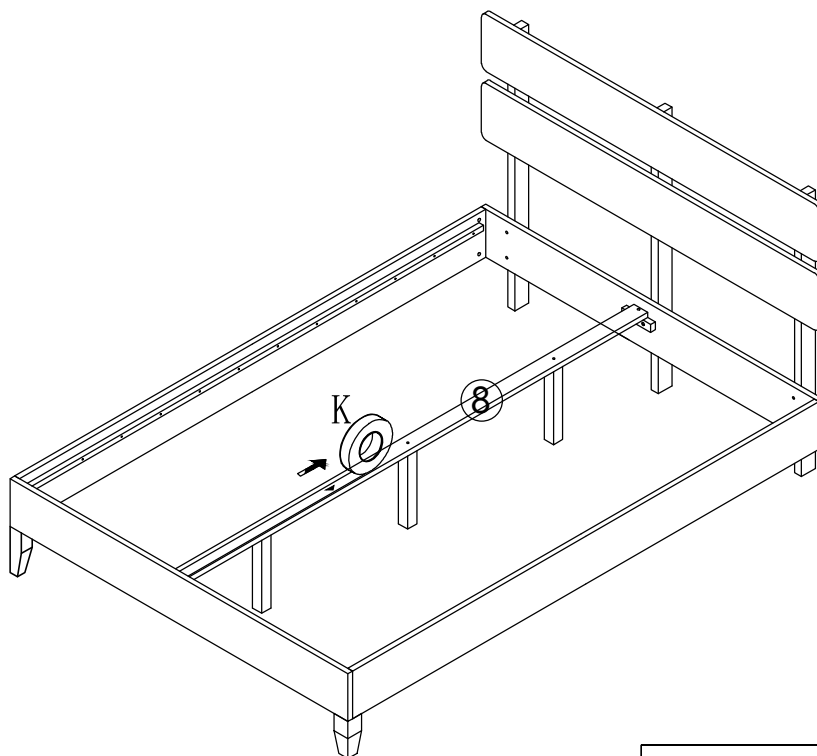

Kx1



9

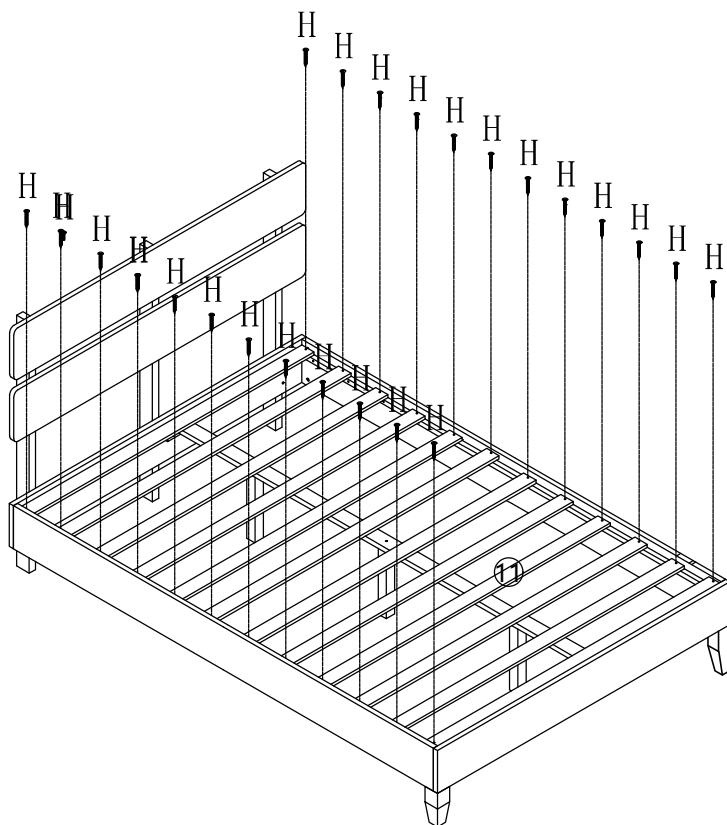

Hx24



10

