



# ASSEMBLY INSTRUCTION

## Hall Tree

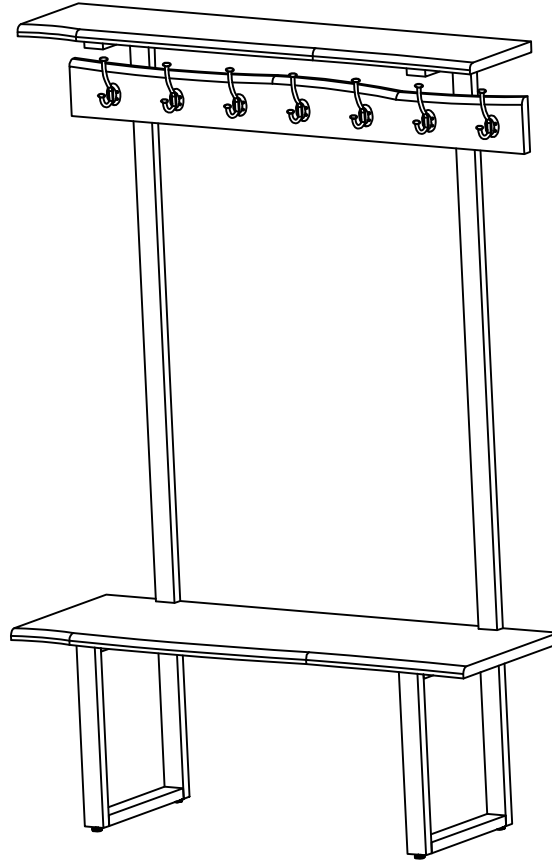


### REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.  
Order replacement parts and hardware at " [www.boltonfurniture.com](http://www.boltonfurniture.com) "


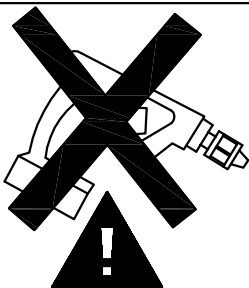


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!

. Please assemble on a clean soft surface to avoid damage.

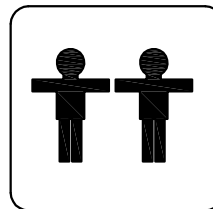


### Tools Required

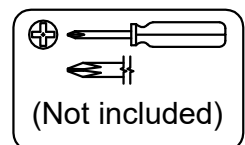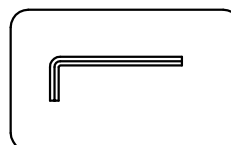


[www.boltonfurniture.com](http://www.boltonfurniture.com)

# Part list - Hall Tree

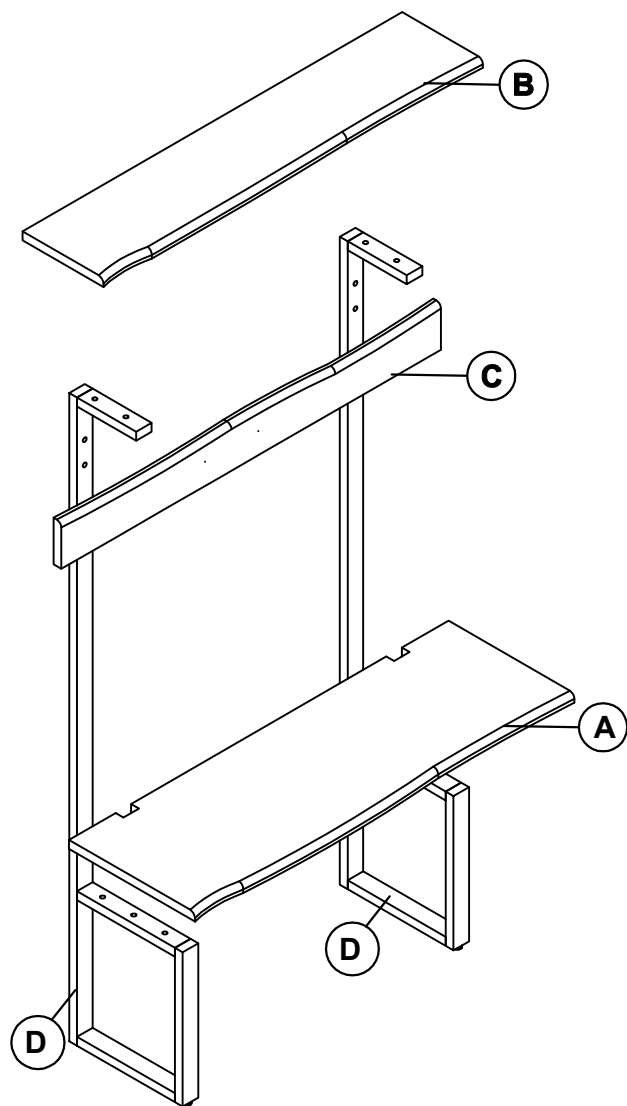


**Identifying the hardware**-Identify the hardware using the illustrations below

E

  
M6x40MM BOLT


14

F




14

G




01

H




07

I






28


J

  
ANTI-TIP




01


## Step 01
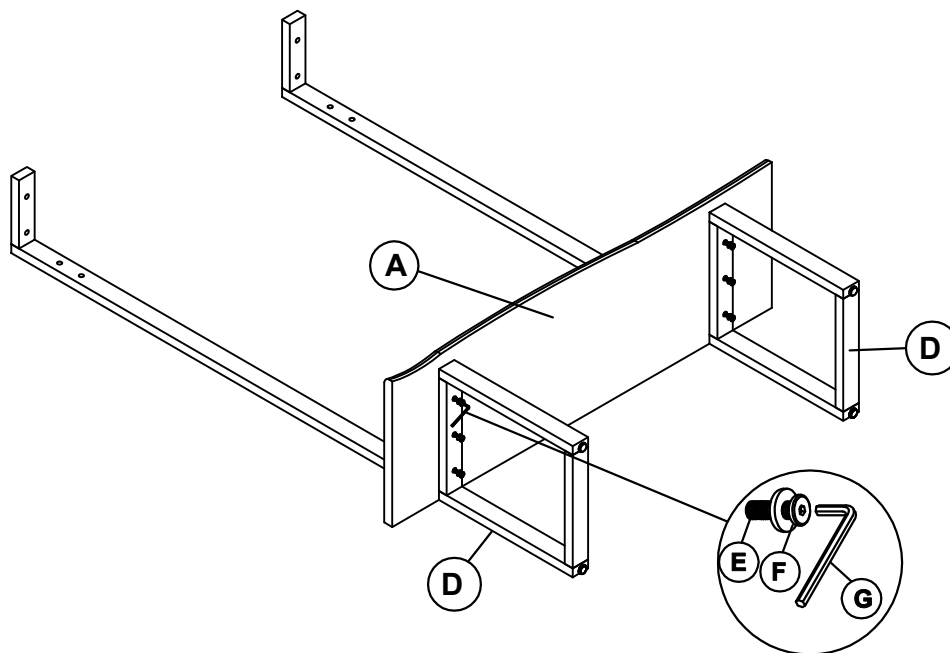
|   |   |    |
|---|---|----|
| E |  | 06 |
| F |  | 06 |
| G |  | 01 |







## Step 02
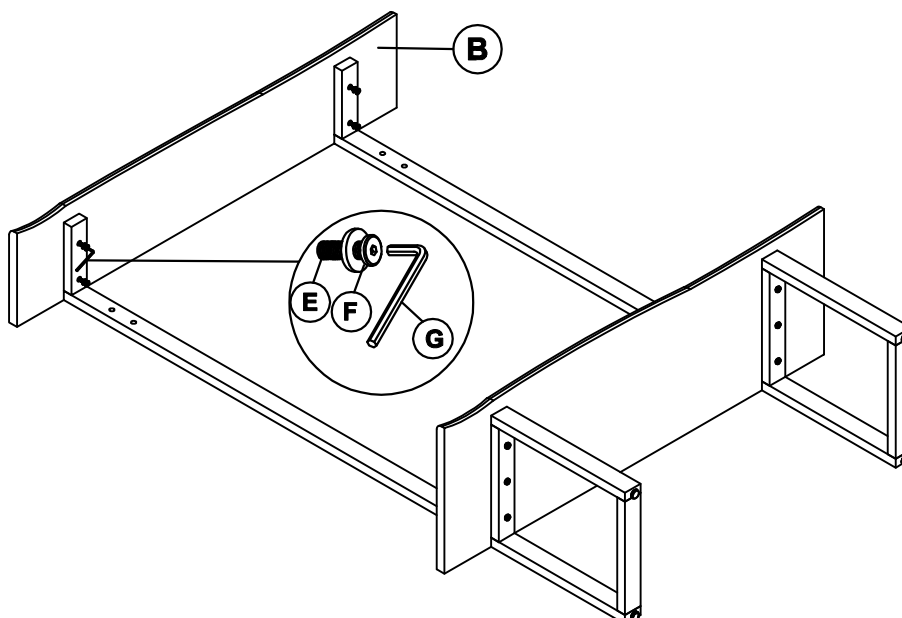
|   |   |    |
|---|---|----|
| E |  | 04 |
| F |  | 04 |
| G |  | 01 |




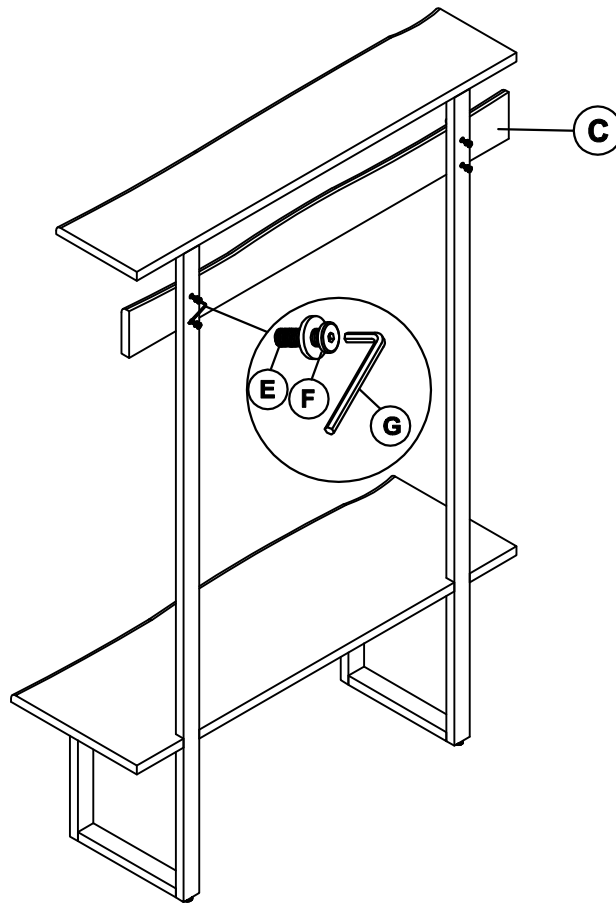


## Step 03






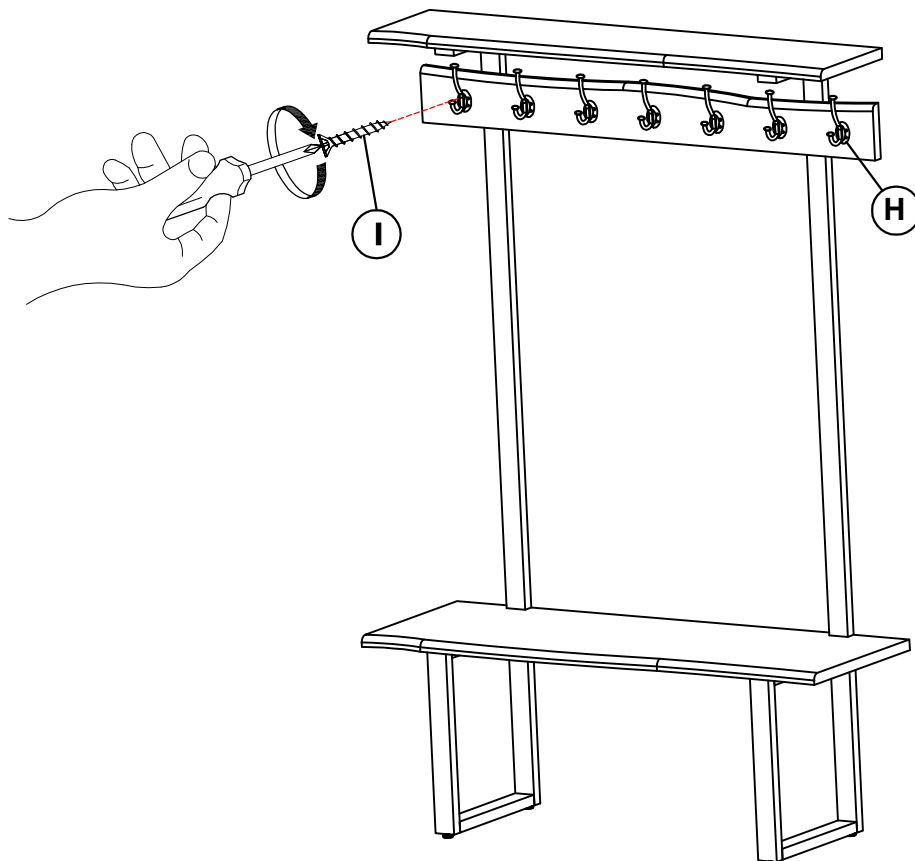
|   |   |    |
|---|---|----|
| E |  | 04 |
| F |  | 04 |
| G |  | 01 |

## Step 04







|   |   |    |
|---|---|----|
| H |                    | 07 |
| I |                    | 28 |
|   | <br>(Not included) | 01 |


## "J" Anti-Tip

|          |   |           |          |   |           |
|----------|---|-----------|----------|---|-----------|
| <b>A</b> | <br>4x14 Screw | <b>02</b> | <b>C</b> | <br>Plastic wall bracket | <b>02</b> |
| <b>B</b> | <br>4x35 Screw | <b>02</b> | <b>D</b> | <br>Nylon strap 140mm     | <b>01</b> |

### Secure to Stud behind Wallboard.

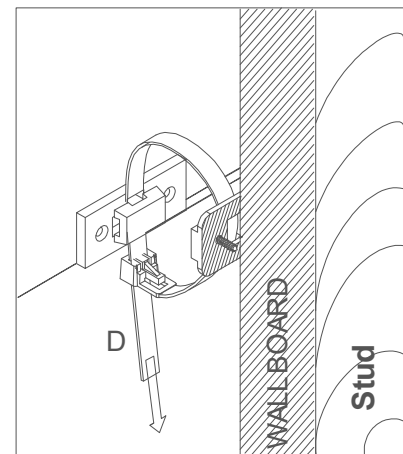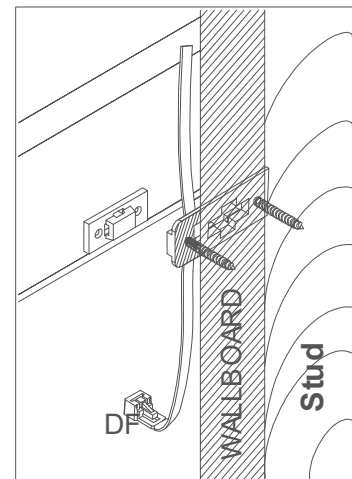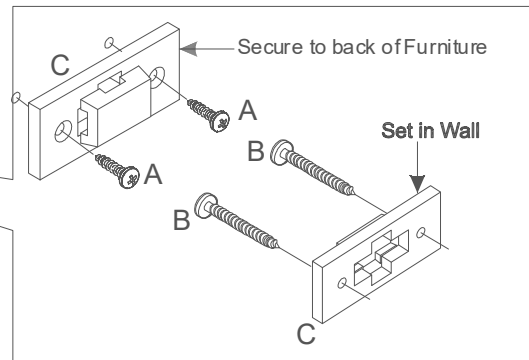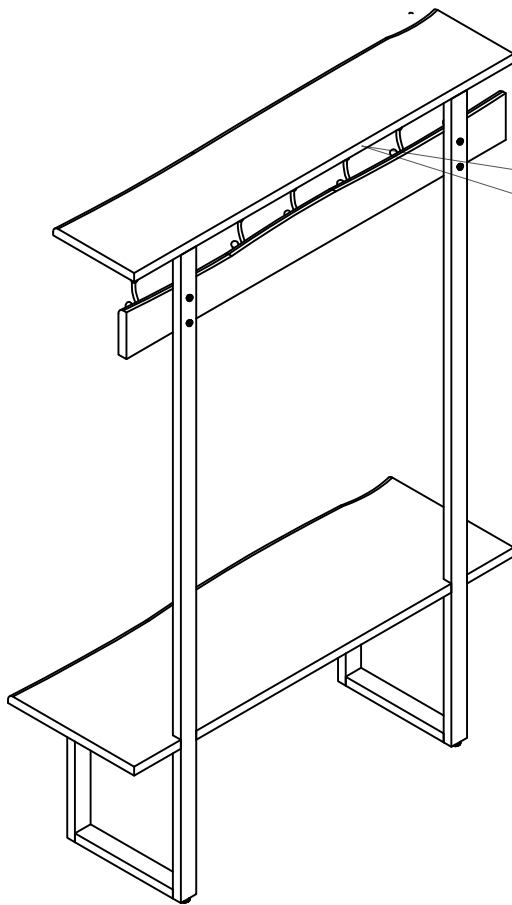

Secure to Stud behind Wallboard!

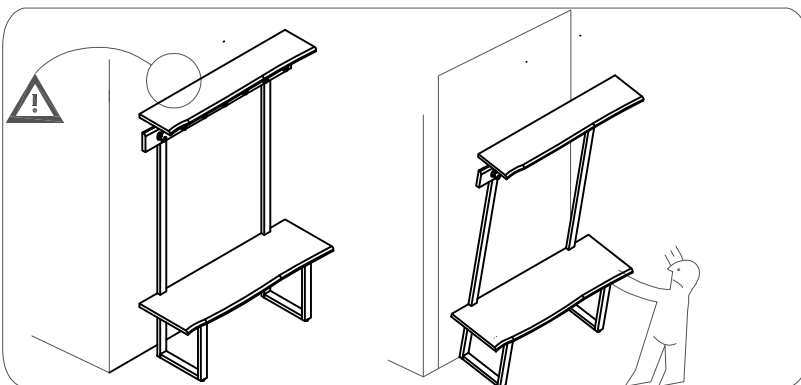

[www.boltonfurniture.com](http://www.boltonfurniture.com)