


ASSEMBLY INSTRUCTIONS

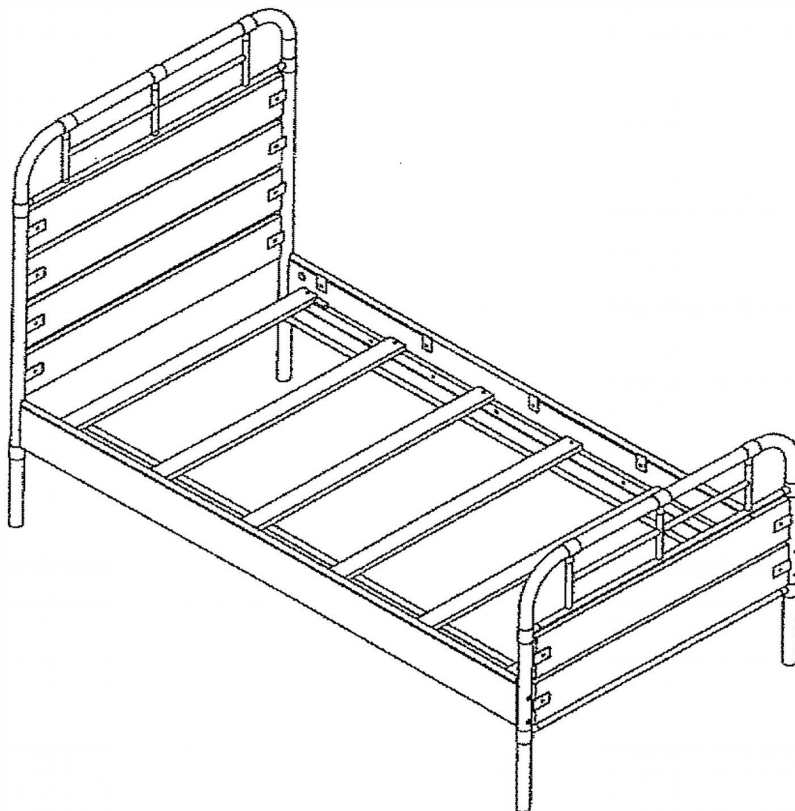



*** Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with parts list below.

*** Assemble product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.








IMPORTANT: Do not tighten bolts completely until all bolts are completely lined up and inserted into holes

PARTS LIST



NO.	DIAGRAM	PART NAME	Q'Ty
1		Headboard	1 pc
2		Footboard	1 pc
3		Front, Back Rail	2 pcs
4		Completed Twin Slat (6pcs/1set)	1 pc


HARDWARE LIST

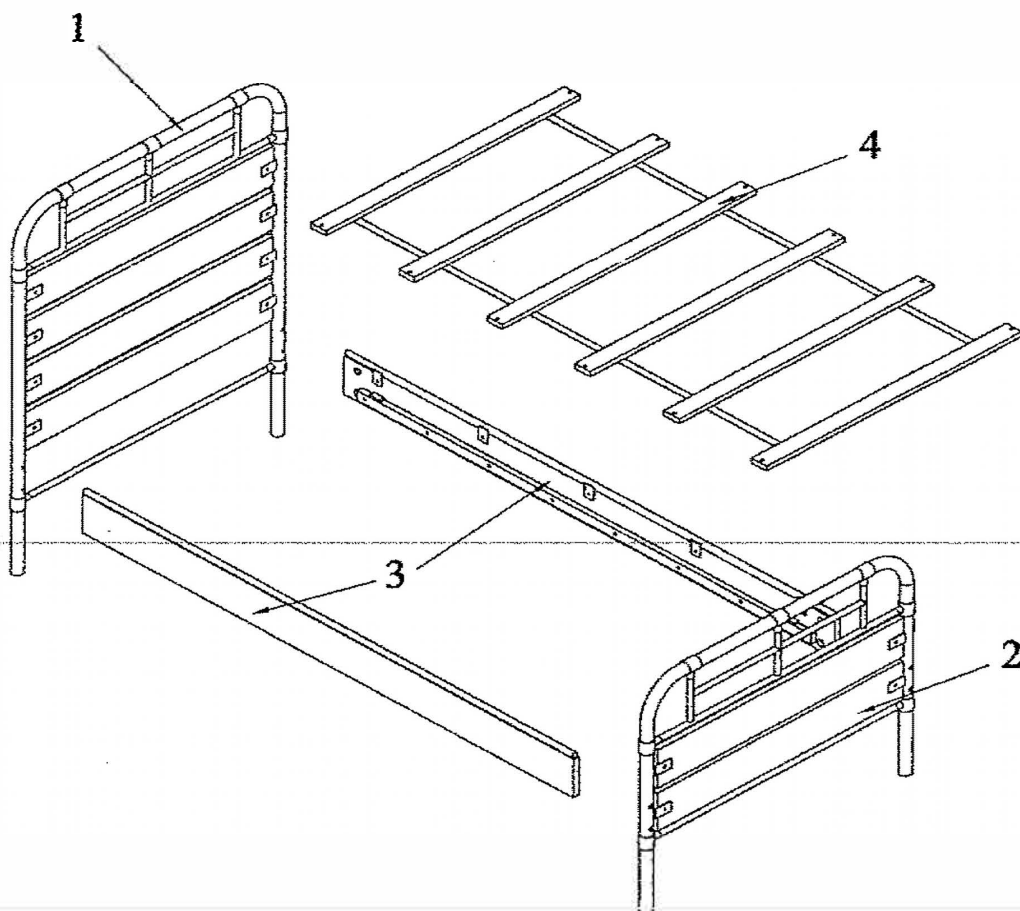NO.	DIAGRAM	PART NAME	Q'Ty
A		Bolt: 6.3 * 80 (mm) Half Round Nut	8 sets
B		Screw: 4 * 30 (mm)	12 pcs
C		Wood Dowel: 10 * 40 (mm)	4 pcs
D		Allen Key (M4)	1 pc




STEP 1: HEADBOARD & FOOTBOARD ASSEMBLY

- A**  8 set
C  4 pcs

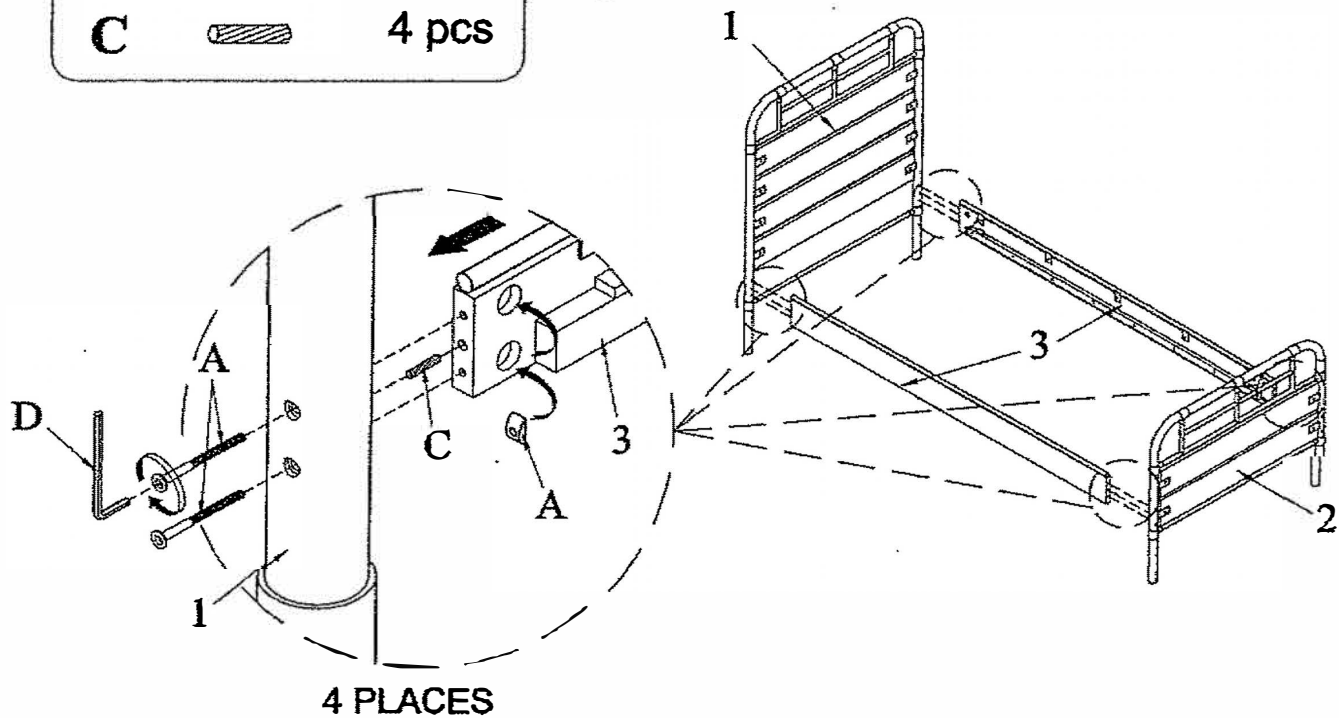


STEP 2: COMPLETED TWIN SLAT ASSEMBLY

- B**  12 pcs

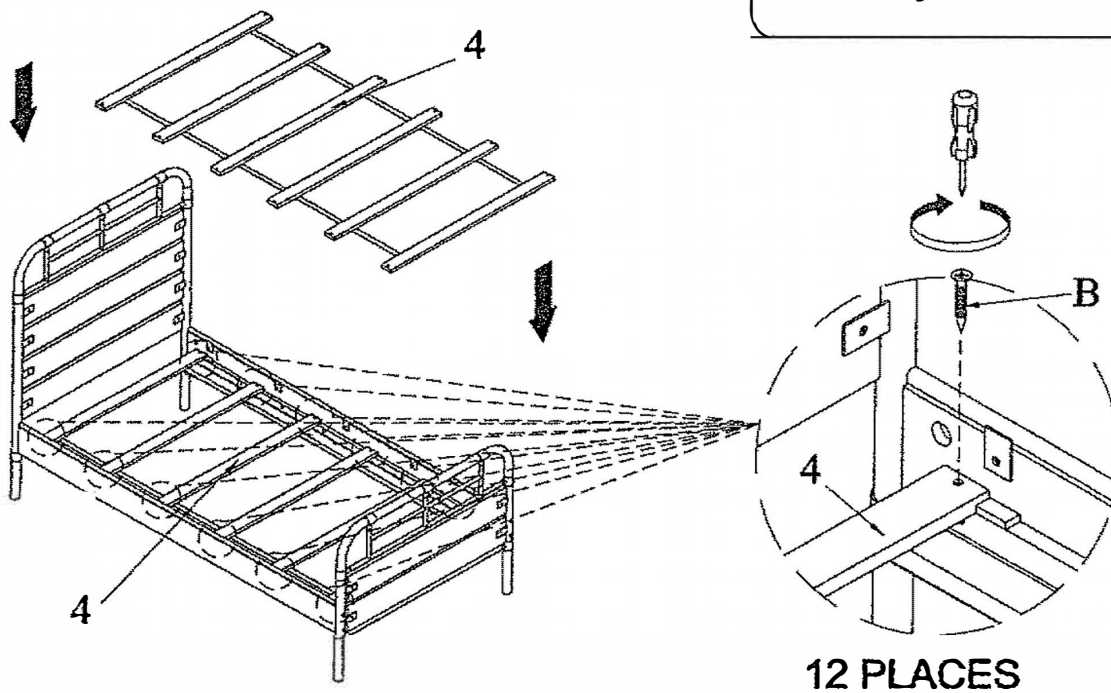

STEP 3:

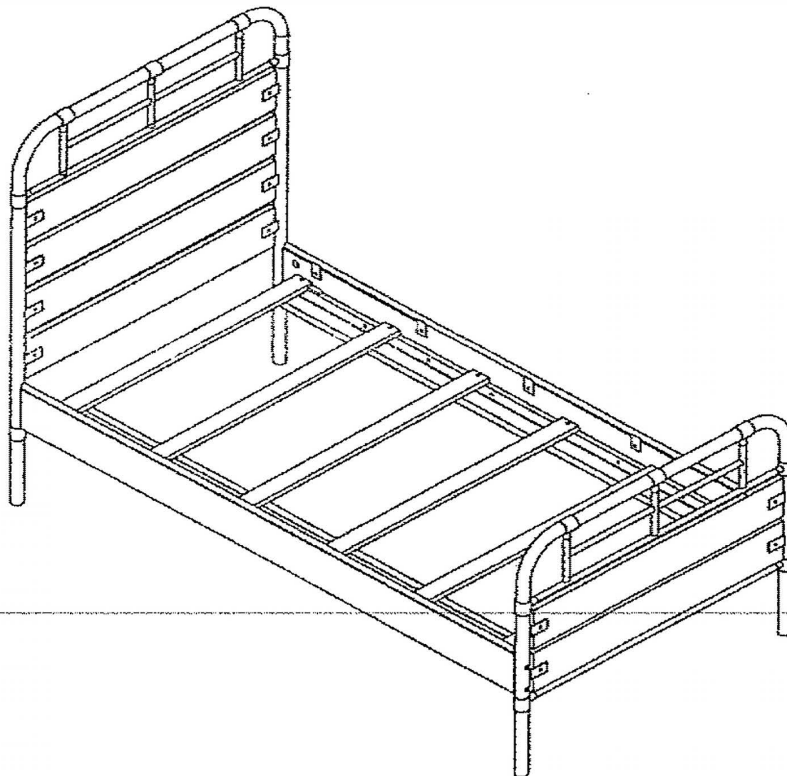

ASSEMBLY IS COMPLETED