

Instruction Manual

Please save this manual for future reference.
















Product Name: Black and Brown Wood 5-Drawer Chest


Thank you for purchasing this product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.















Hardware:



Ⓐ x36	Ⓑ x36	Ⓒ x8	Ⓓ x20	Ⓔ x10	Ⓕ x20	Ⓖ x 6
			 3x12mm	 3.5x12mm	 4x30mm	 4x35mm
Ⓕ x10	Ⓖ x5	Ⓖ x10	Ⓚ x 12	Ⓛ x2	Ⓜ x2	Ⓝ x2
 4x10mm		 4x10mm		 4x12mm		 4x12mm
Ⓞ x12						
 3x14mm						

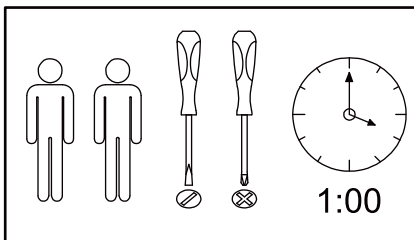


Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)

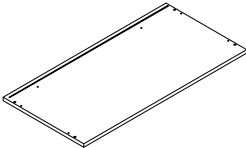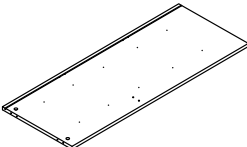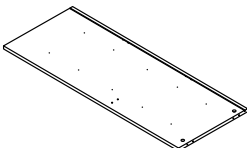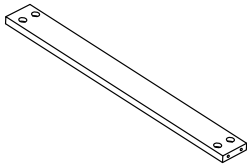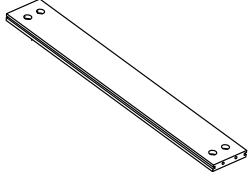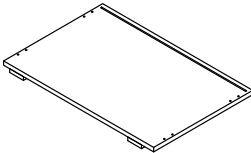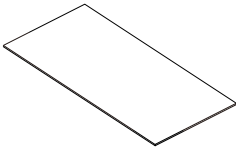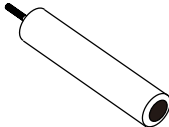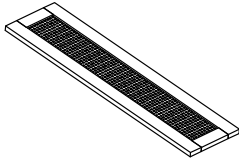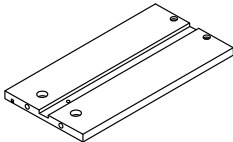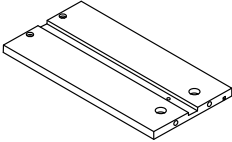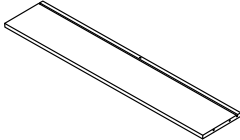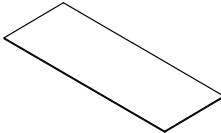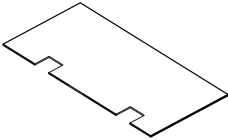Panels:

① x1	② x1	③ x1	④ x1	⑤ x2
				
⑥ x1	⑦ x2	⑧ x4	⑨ x5	⑩ x5
				
⑪ x5	⑫ x5	⑬ x5	⑭ x1	
				

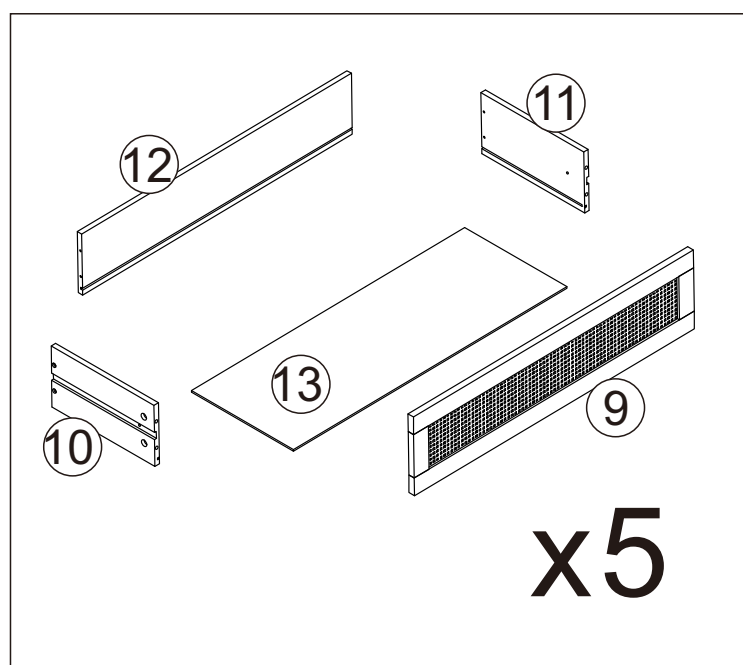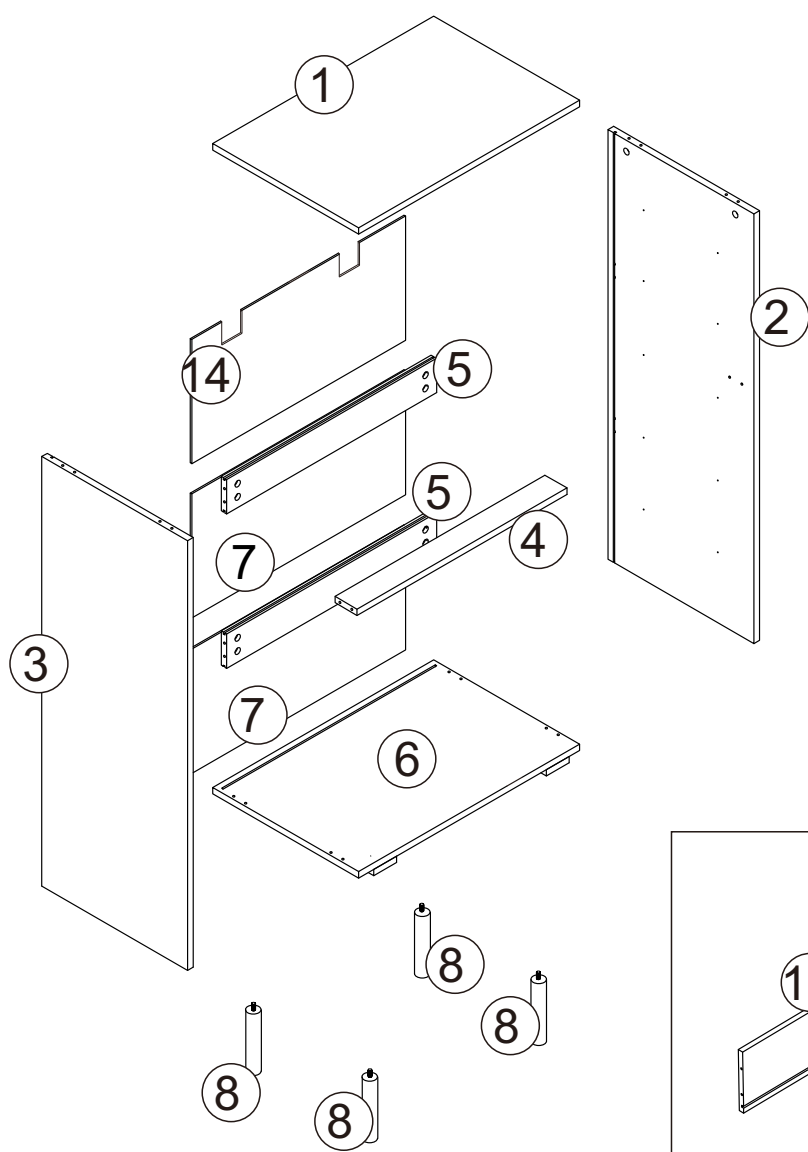

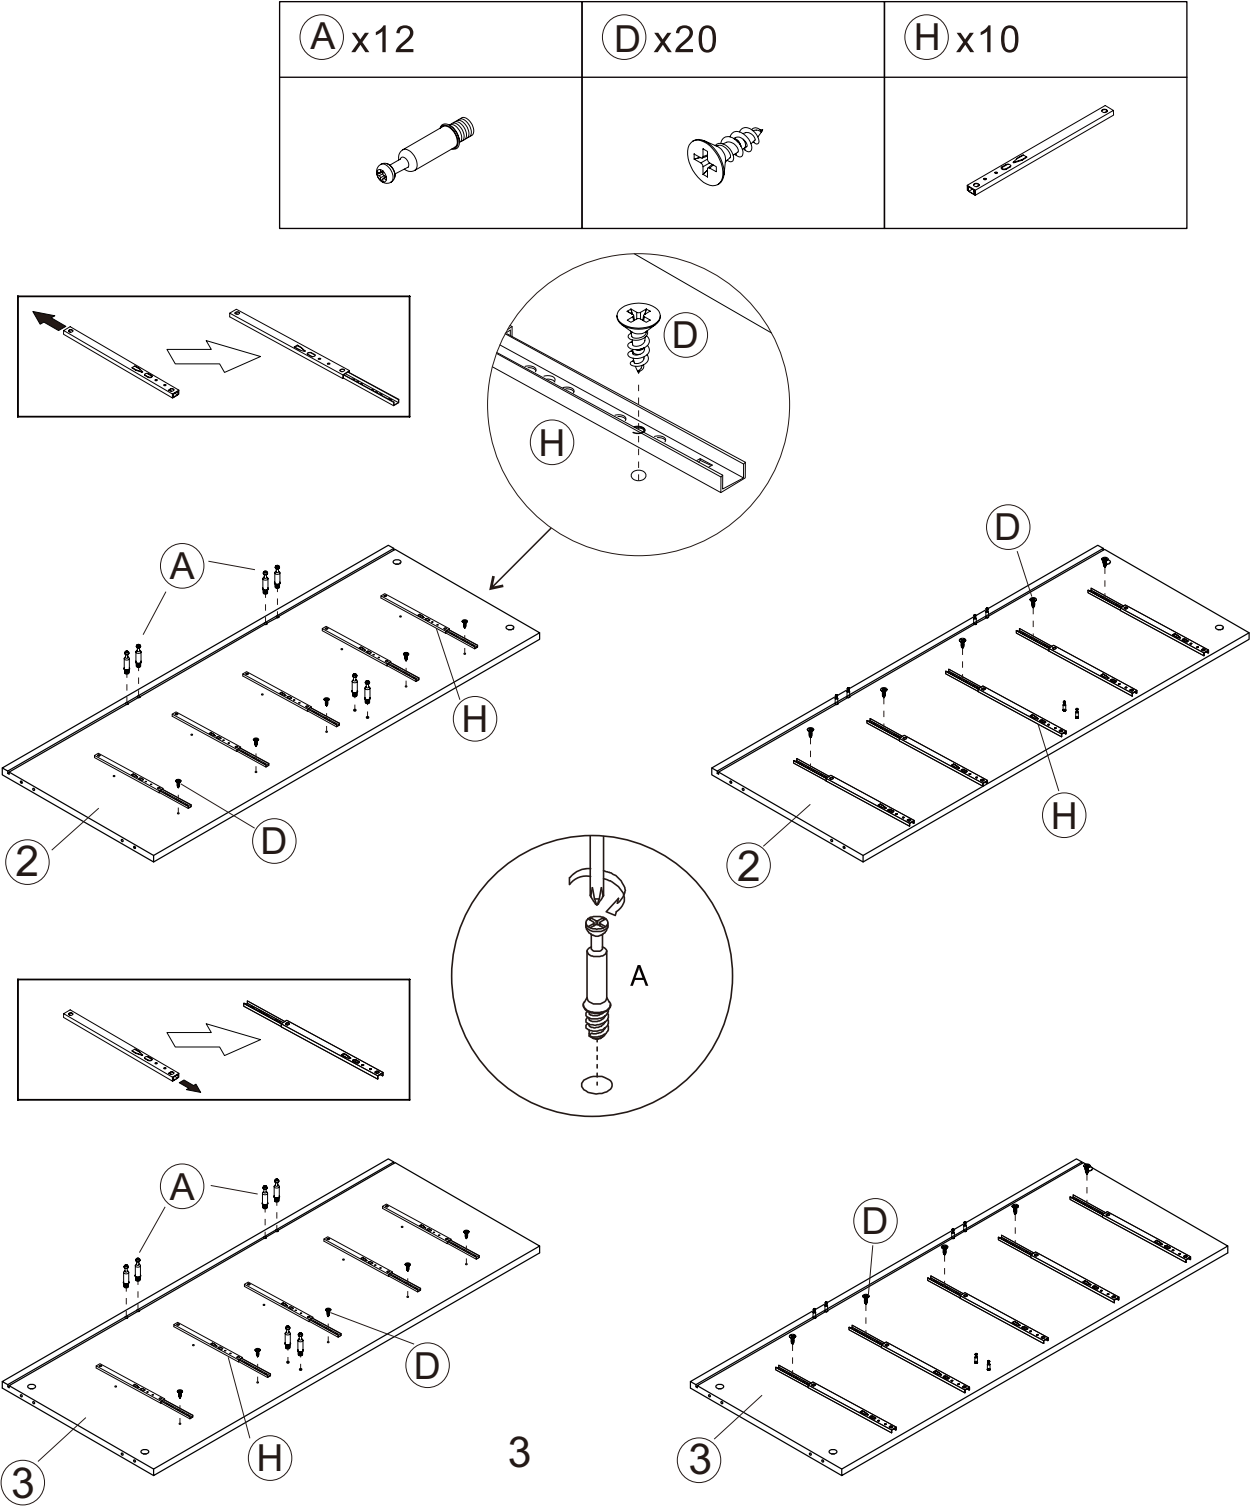
Step 1




Stretch Hardware H And Fix It to Panel 2&3
with Hardware D
Fix Hardware A to Panel 2&3

Step 2

THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS

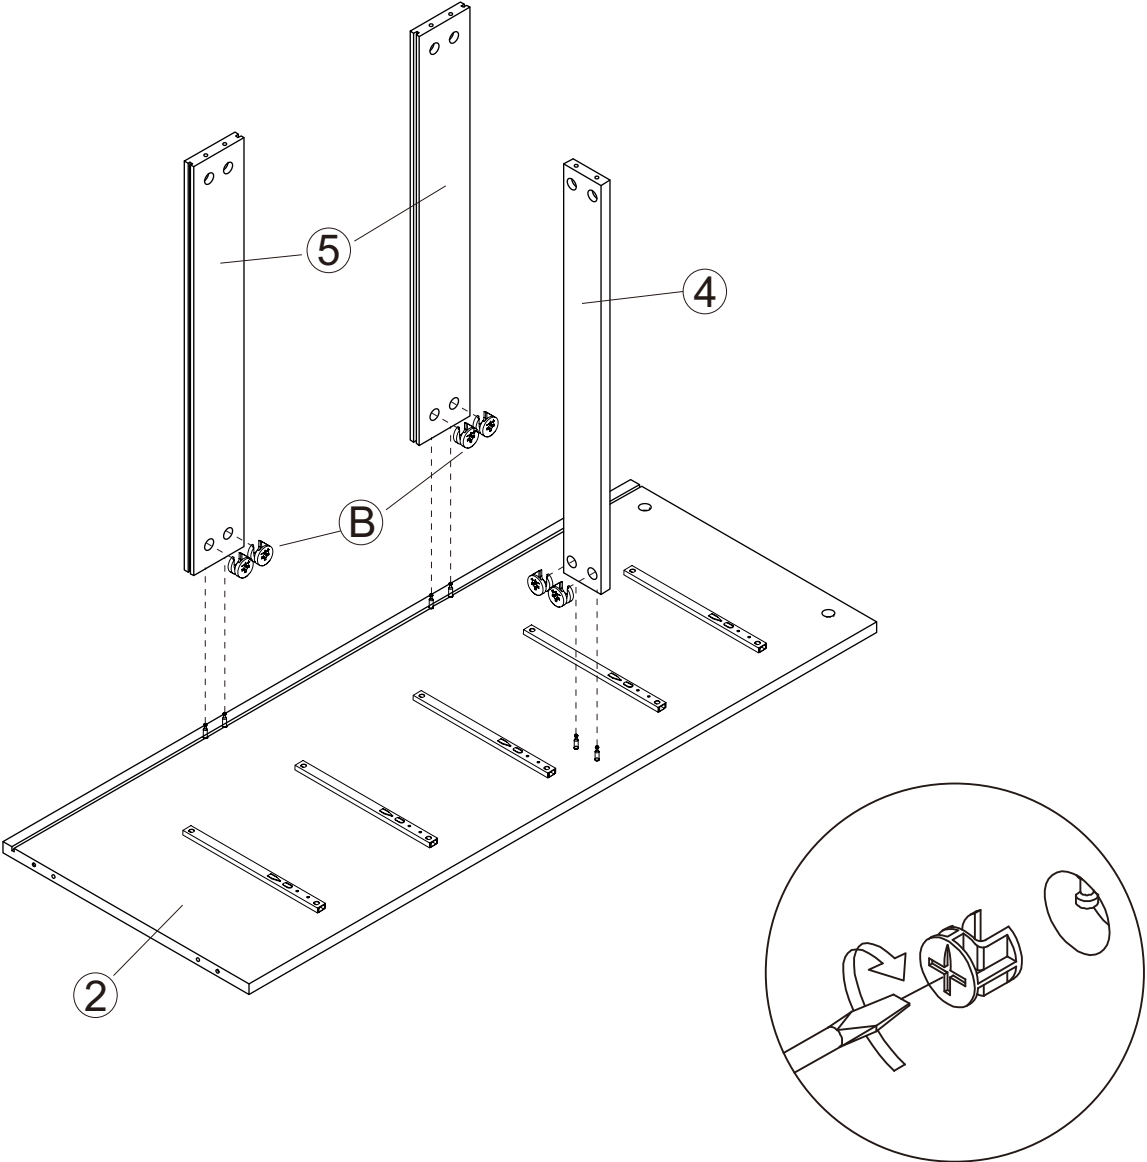B x6


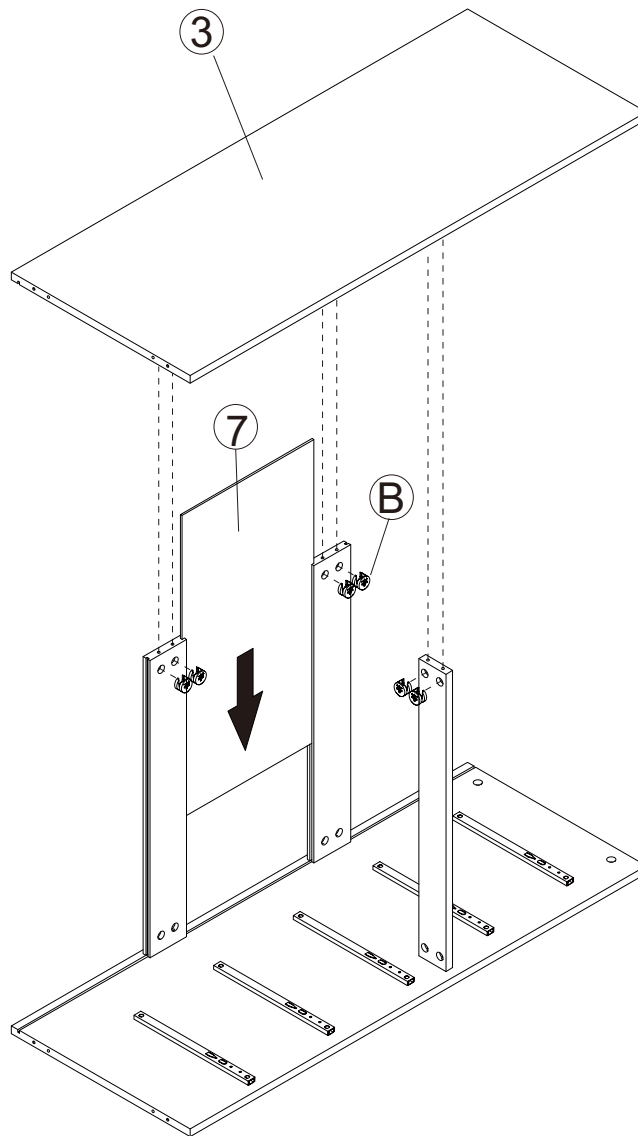


Connect Panel 4&5 to 2 with Hardware B

Step 3

THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS

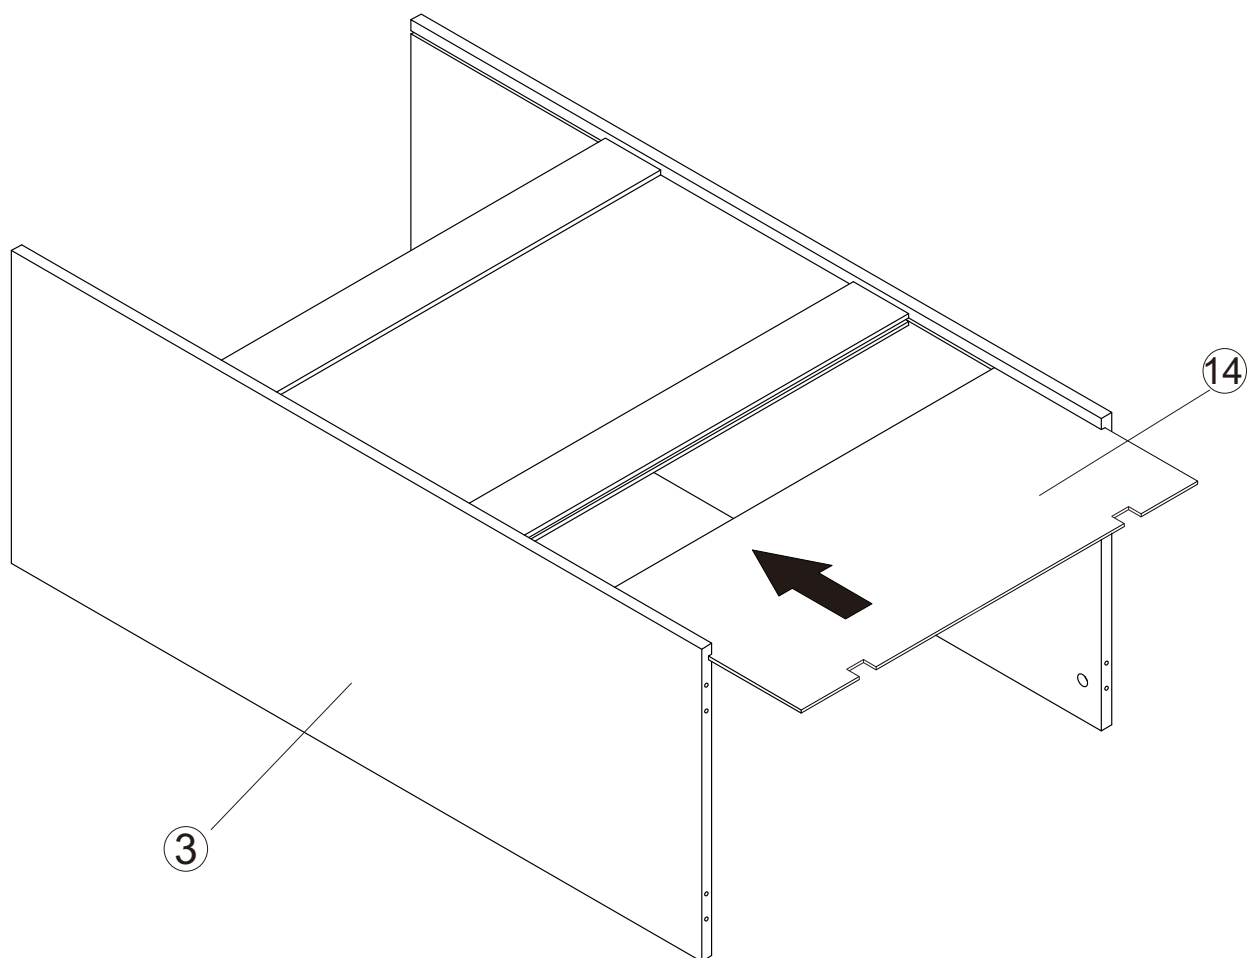
Ⓑ x6



Insert Panel 7 into the Slots of Panel 5
Connect Panel 3 to 5&4 with Hardware B

Step 4


**THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS**




Insert Panel 14 into the Slots of 2&3

Step 5

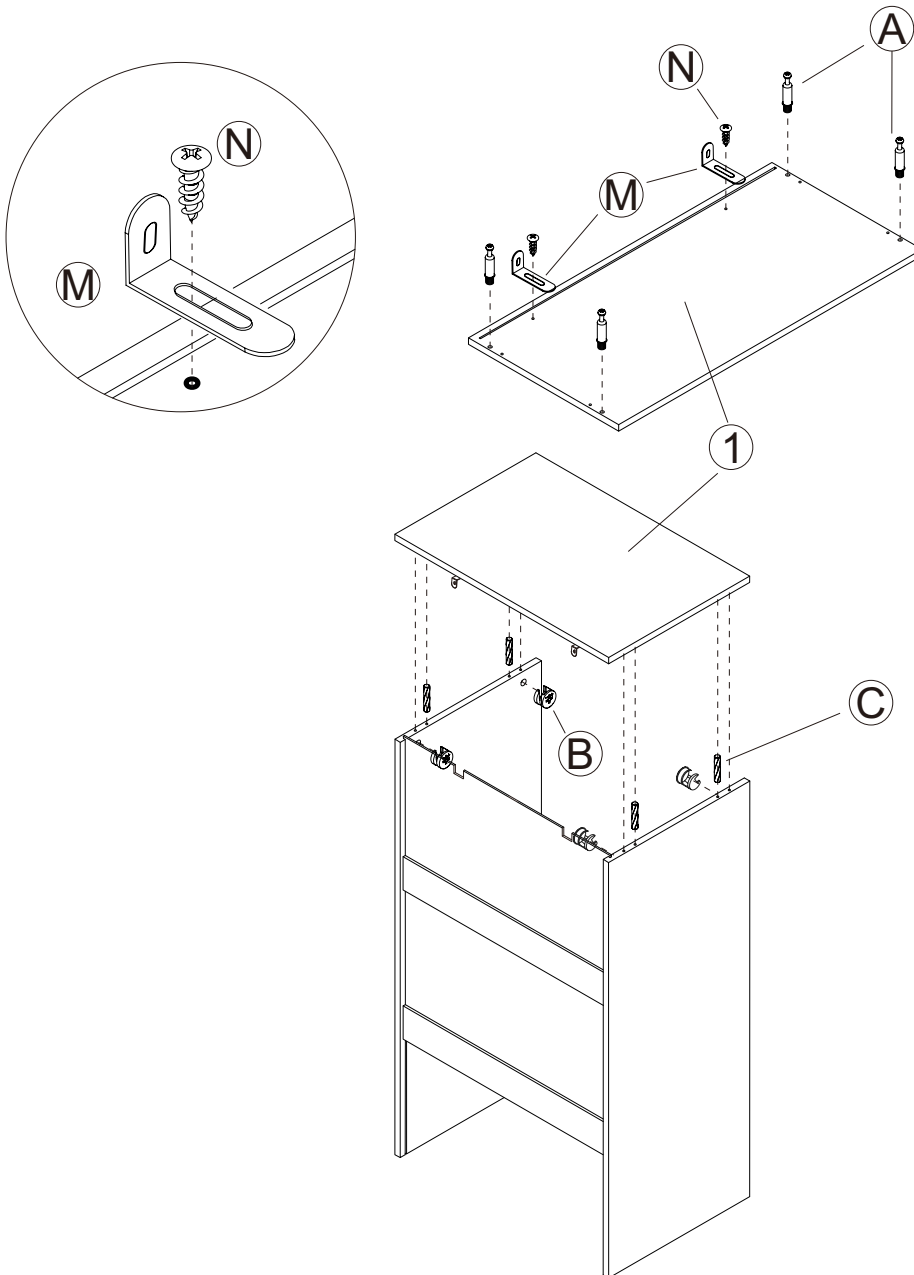THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS




A x4



B x4



C x4



M x2



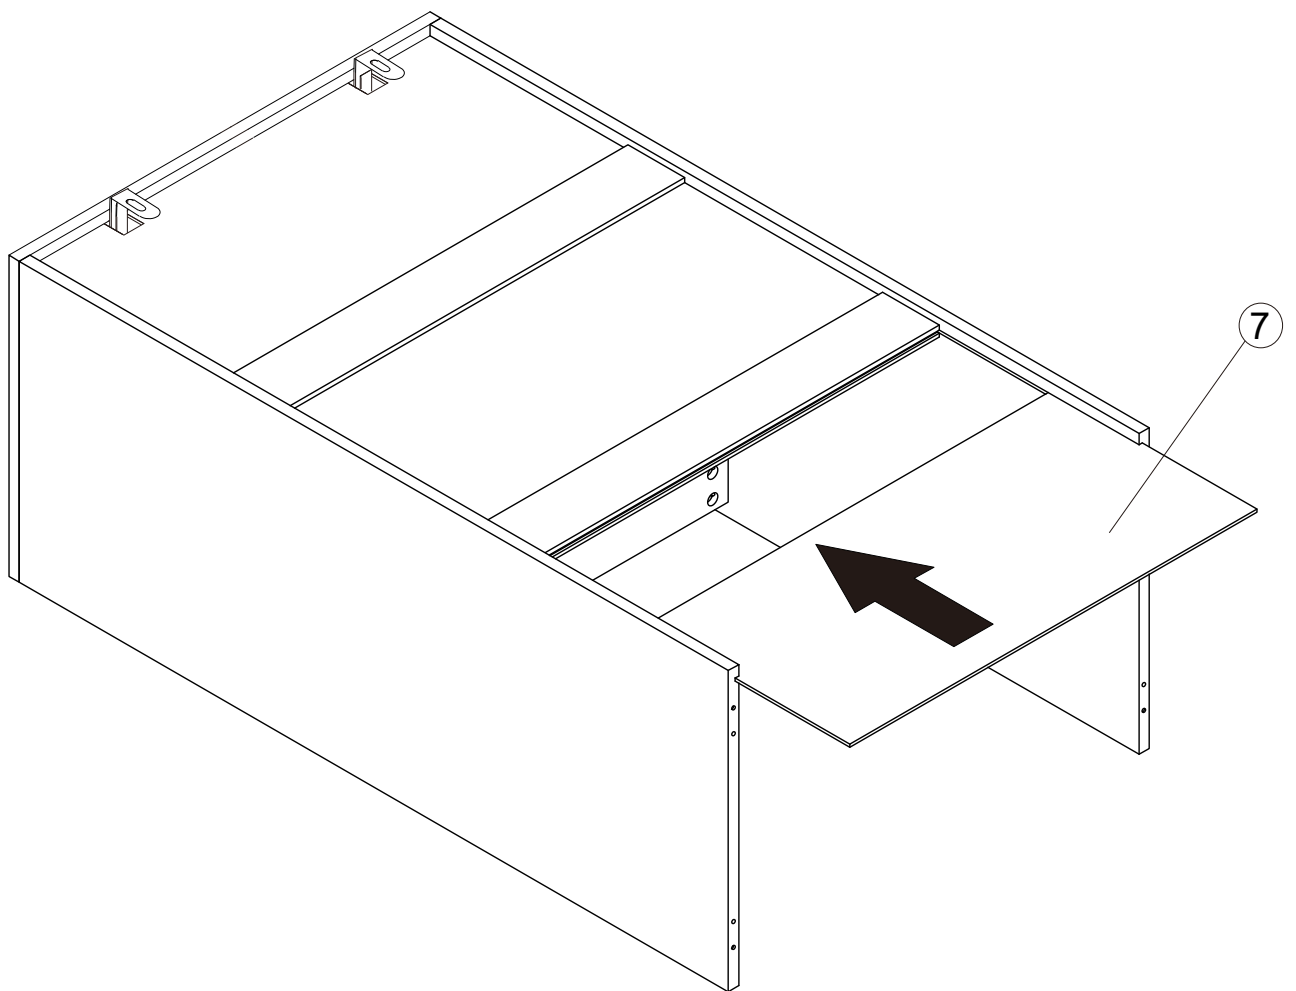
N x2



Fix Hardware M to Panel 1 with Hardware N
Fix Hardware A to Panel 1
Lock Panel 1 to 2&3 with Hardware B/C

Step 6


**THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS**





Insert Panel 7 into the Slots of 2&3

Step 7

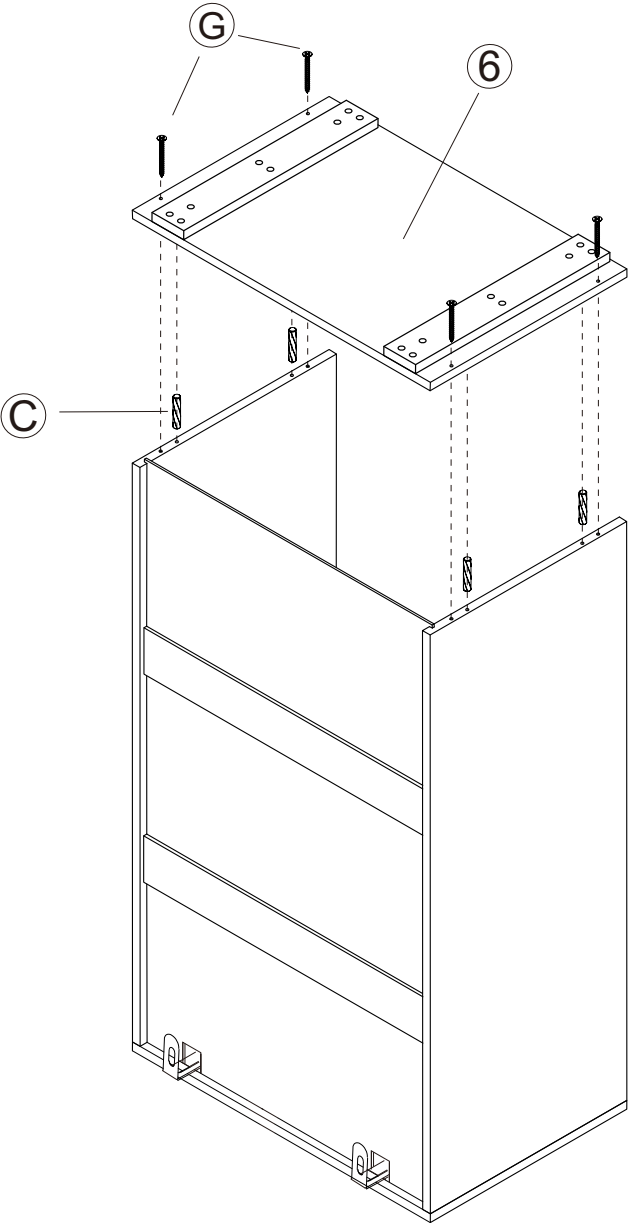
THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS



Ⓒ x4

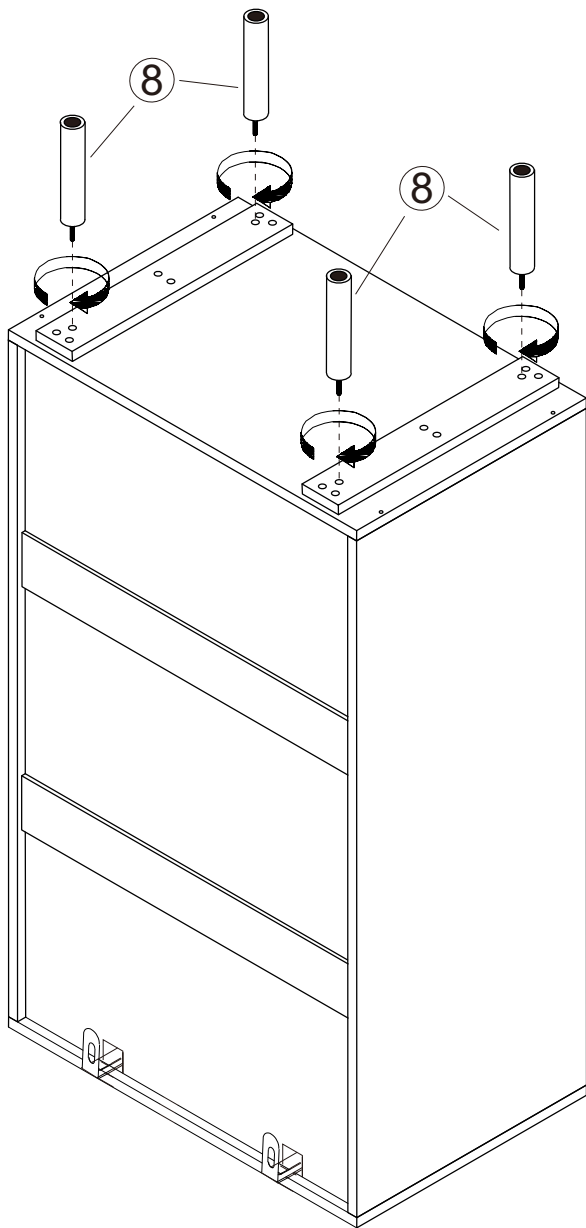Ⓔ x4




Lock Panel 6 to 2&3 with Hardware C/G



Step 8



Install Leg 8 on Panel 6

Step 9


⊙ x12	Ⓚ x12
	

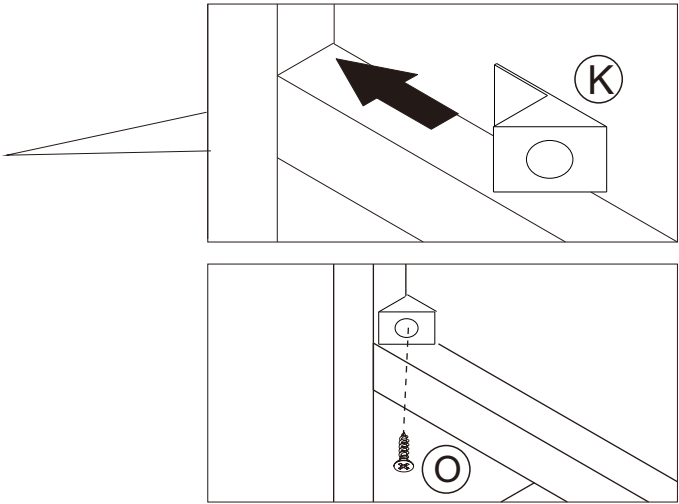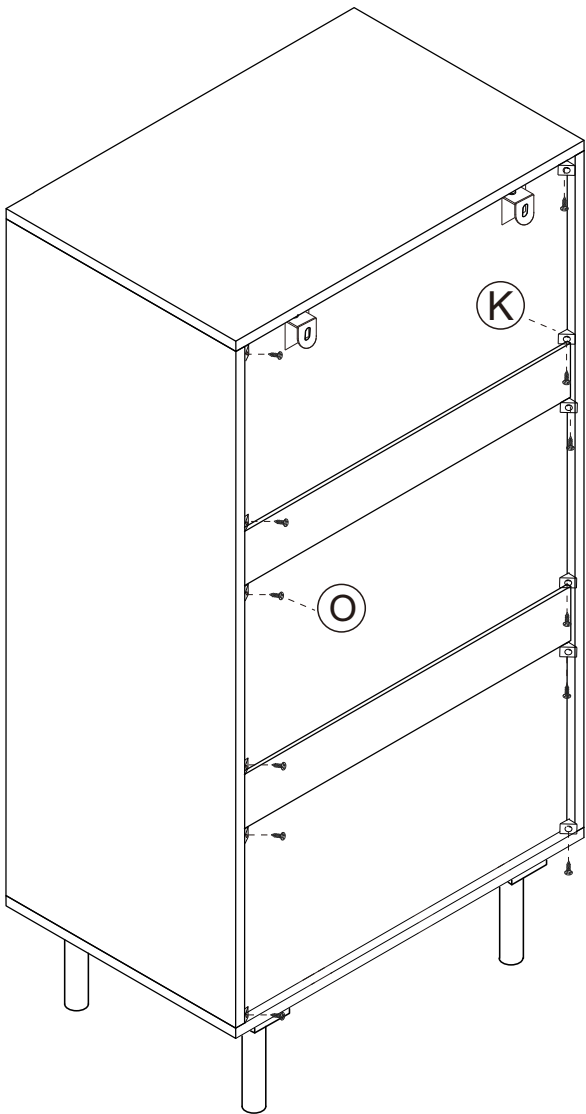

Lock Hardware K at O Corners of Backboard

Step 10

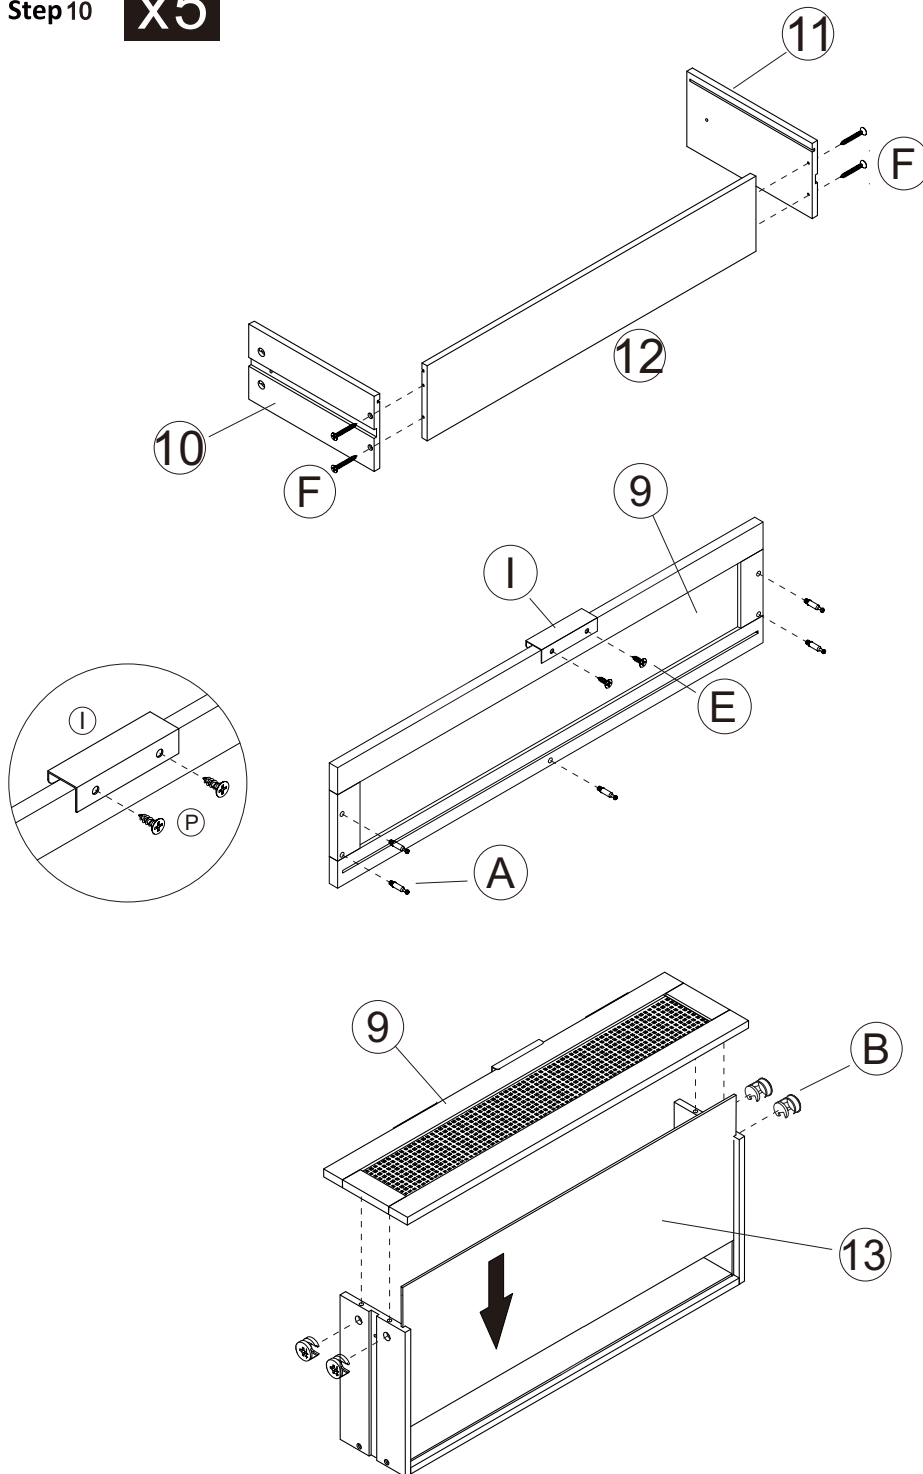
x5






A x20
B x20
E x10
F x20
I x5

Connect Panel 12 to 10&11 with Hardware F
 Install Hardware 9 on Panel 11 with Hardware E
 Fix Hardware I to Panel 11
 Insert Panel 13 into the Slots of Panel 10&11
 Lock Panel 9 to 10&11 with Hardware B
 Repeat the Above Operation 5 times

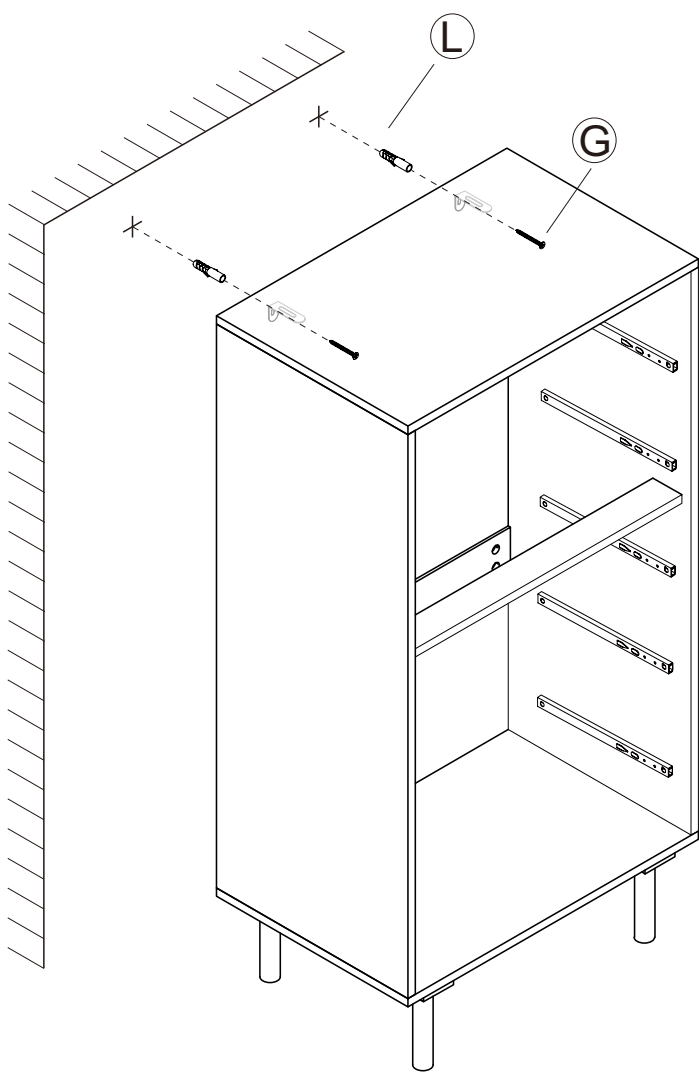Step 11




G x2

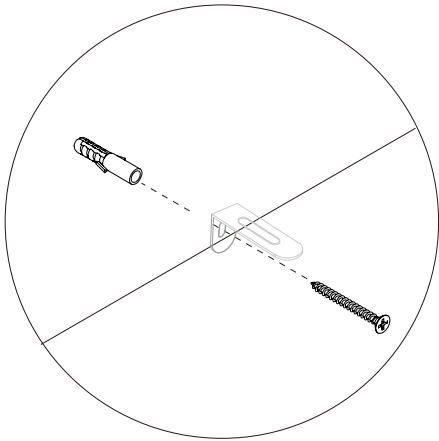L x2



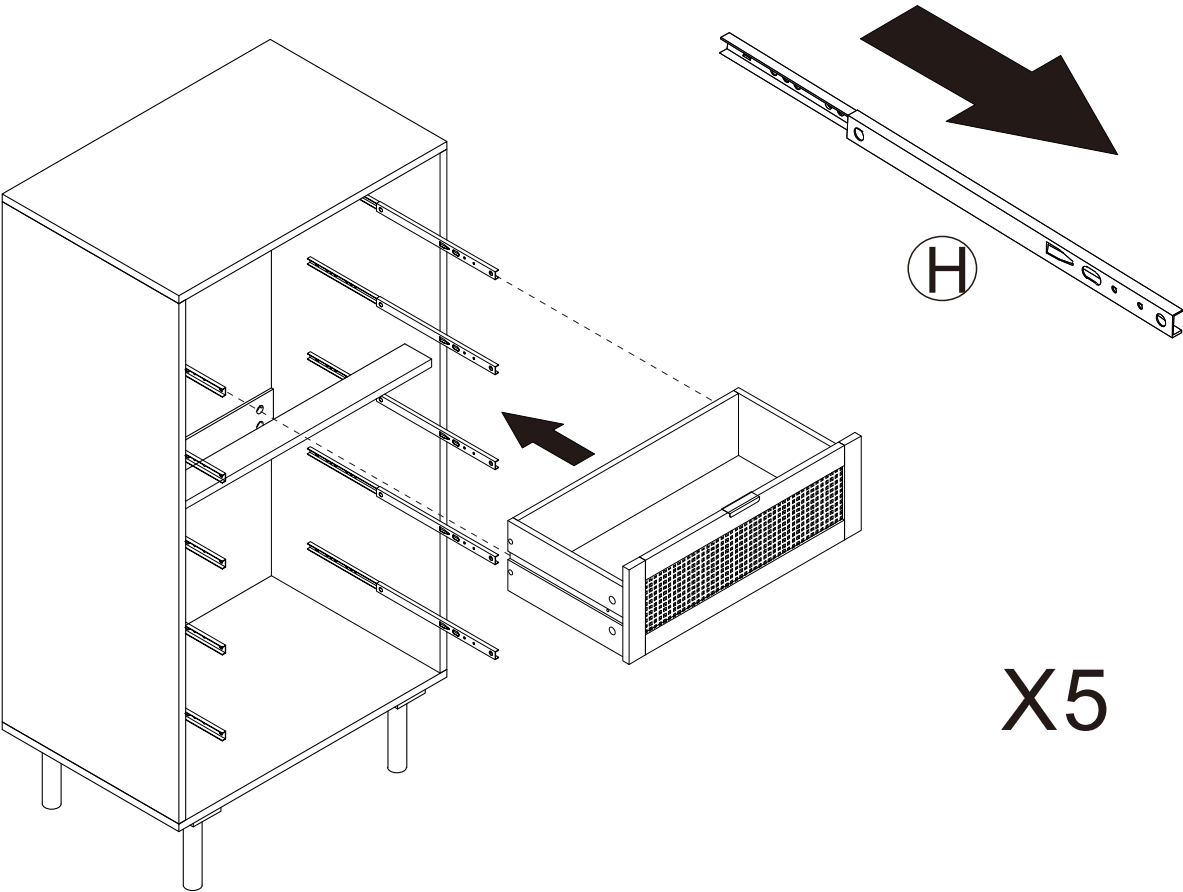
Lock the Cabinet to the Wall with Hardware G/L




Step 12



X5

Pull Hardware H out

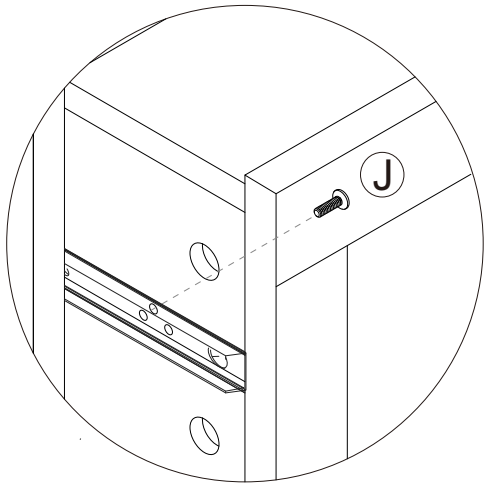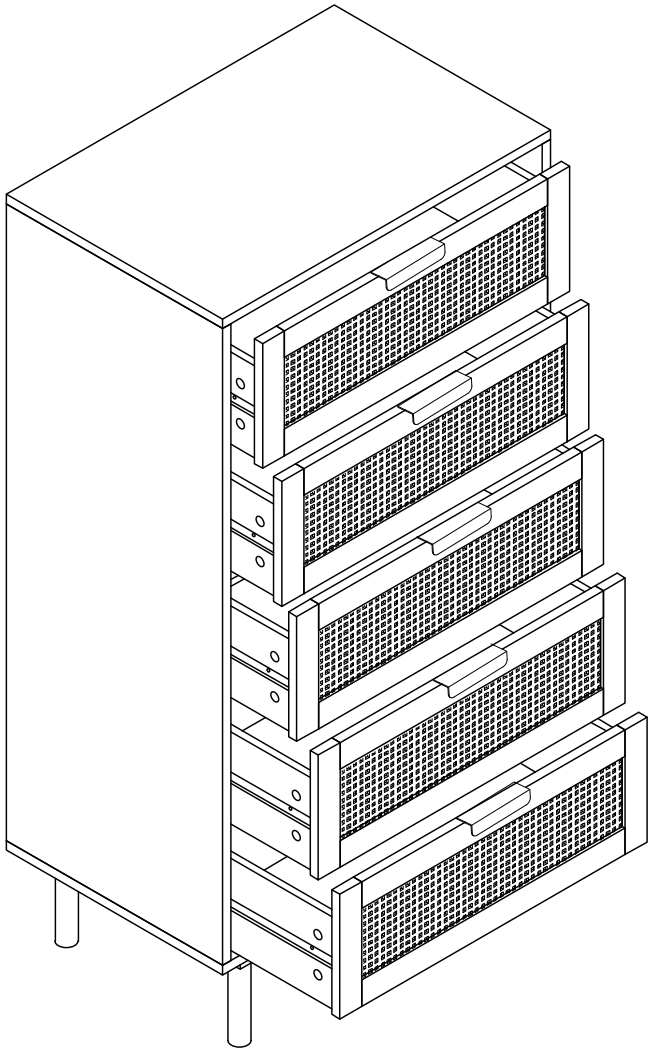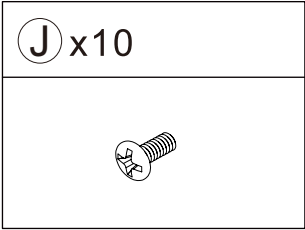Step 13



Lock Hardware H on 5 Drawers with Hardware J