


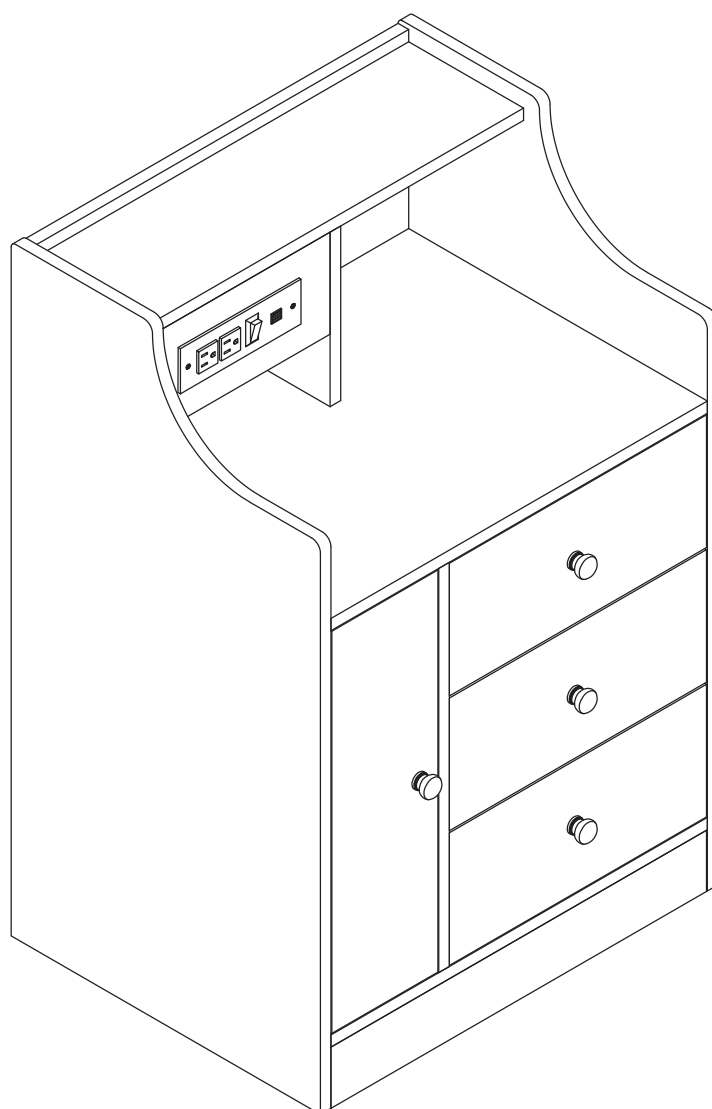
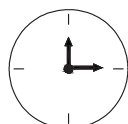
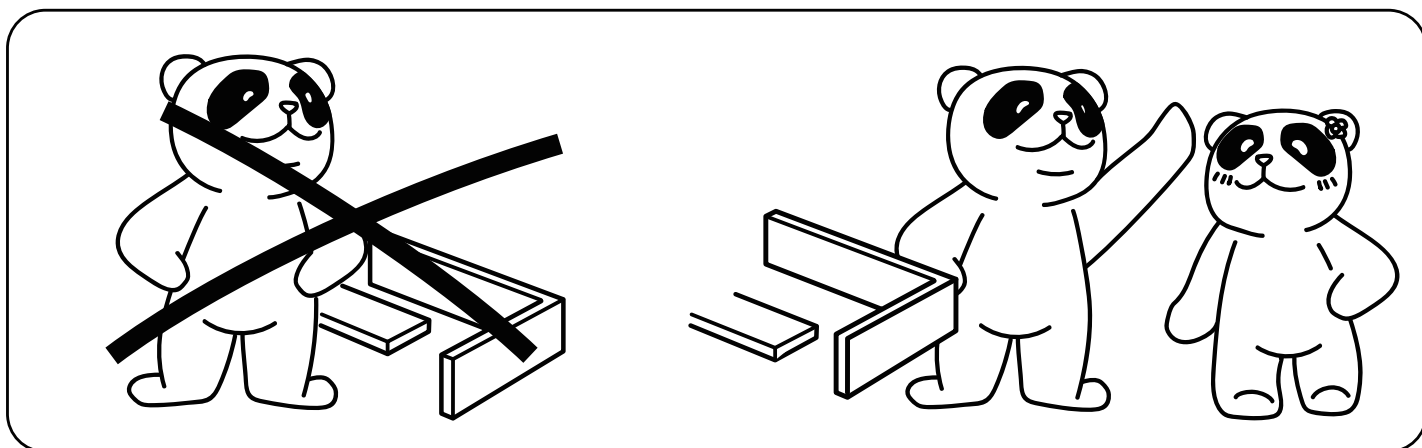



2 PERS.

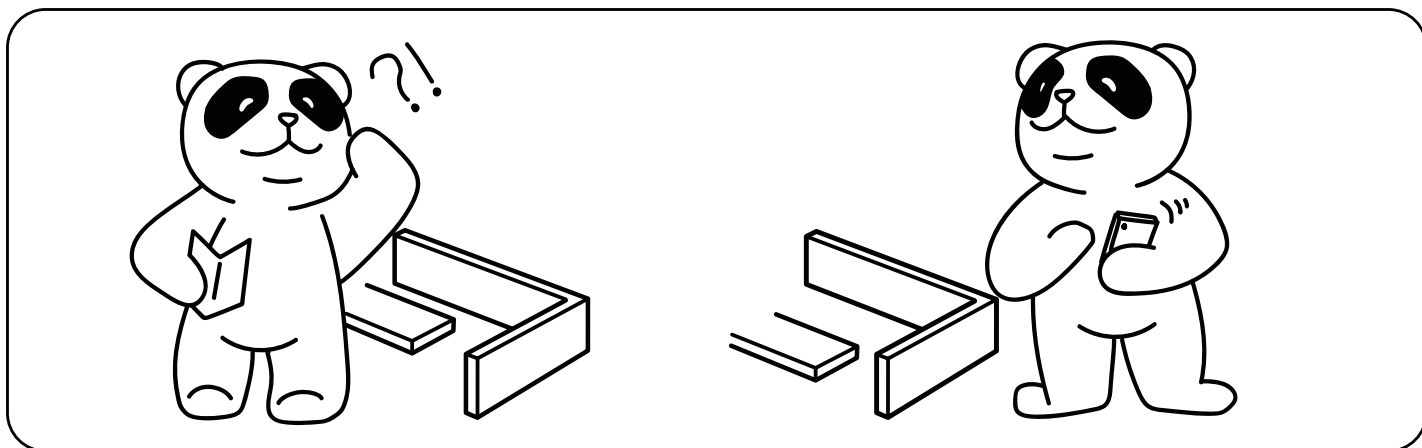

60 MIN

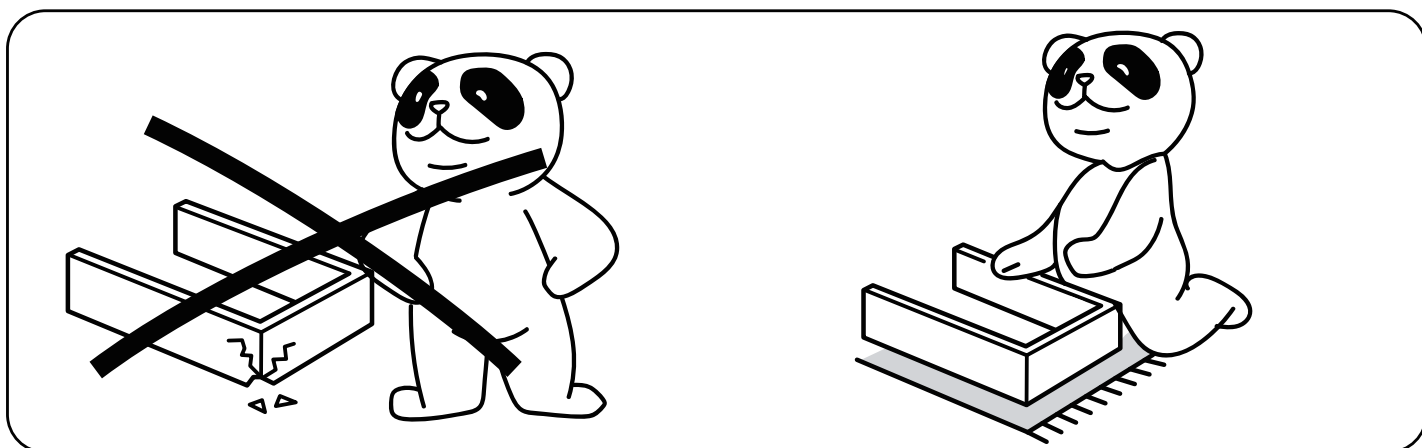

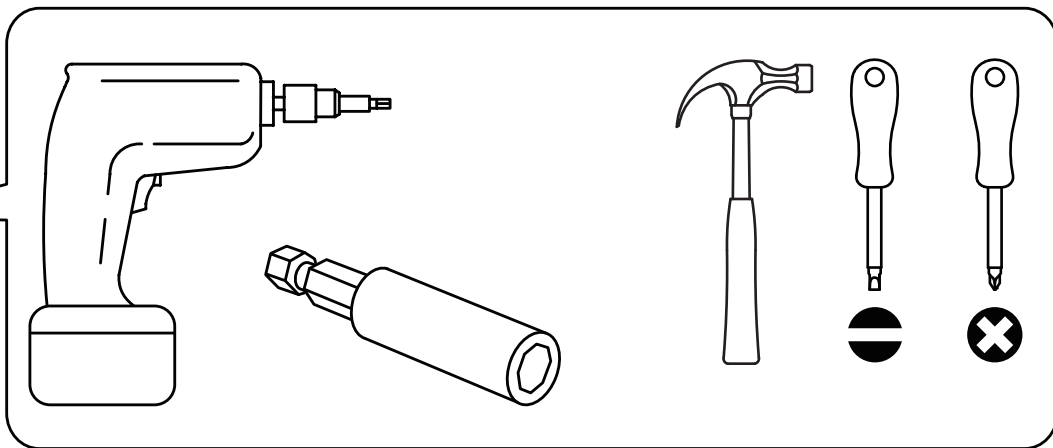




A

x26(+2)

Ø6x35mm

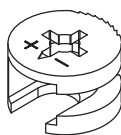

B

x26(+2)


Ø15x10mm



C

x26(+2)

Ø6x30mm



D

x30(+2)

Ø4x35mm



E

x37(+3)


Ø3x12mm



F


x2

Ø3.5x12mm

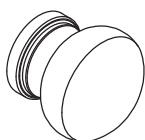


G

x4



H

x4

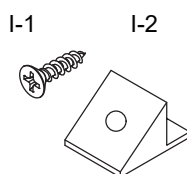

I

x8




J

x10(+1)



K

x1

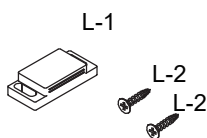

L

x1



M

x1



N

x2




O

x2



P


x2



CL

x3


L300mm



CR

x3


L300mm



DL

x3

L300mm




DR


x3

L300mm

Mounting frame

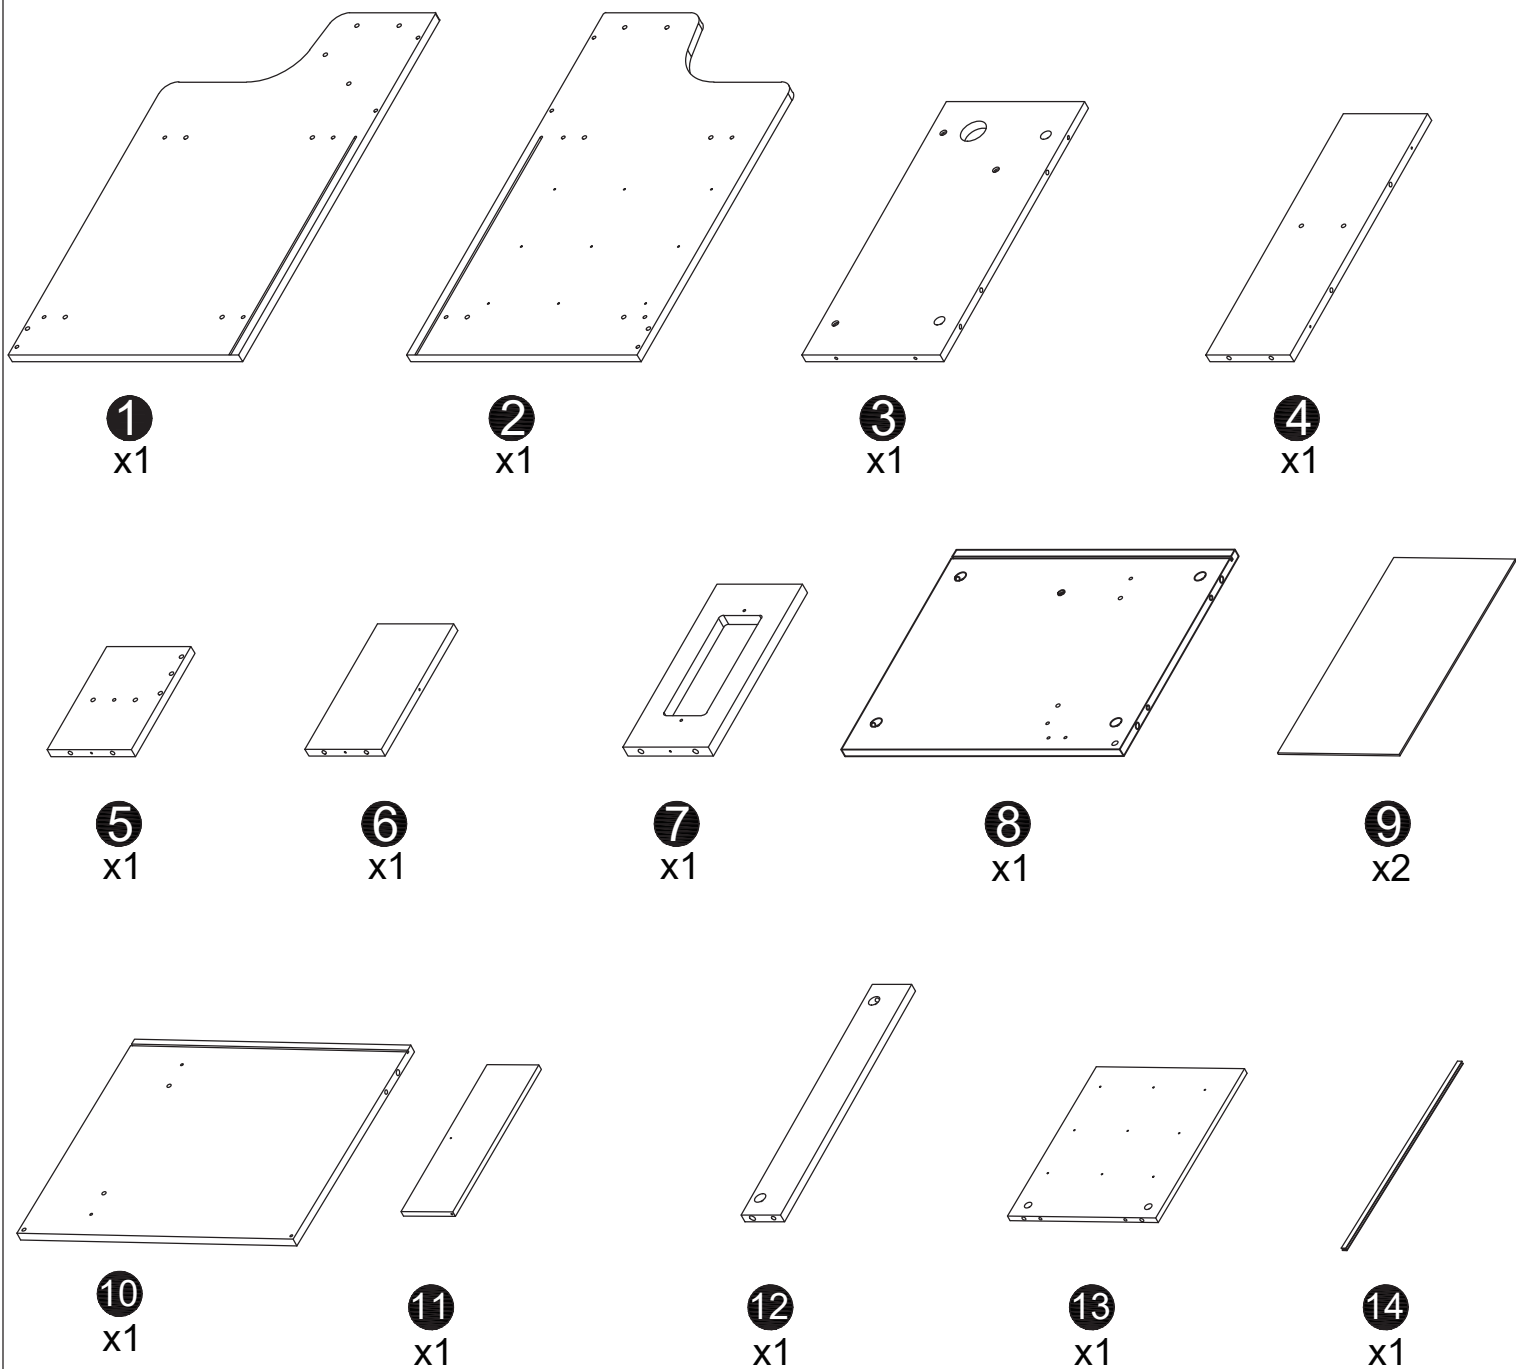


Drawer

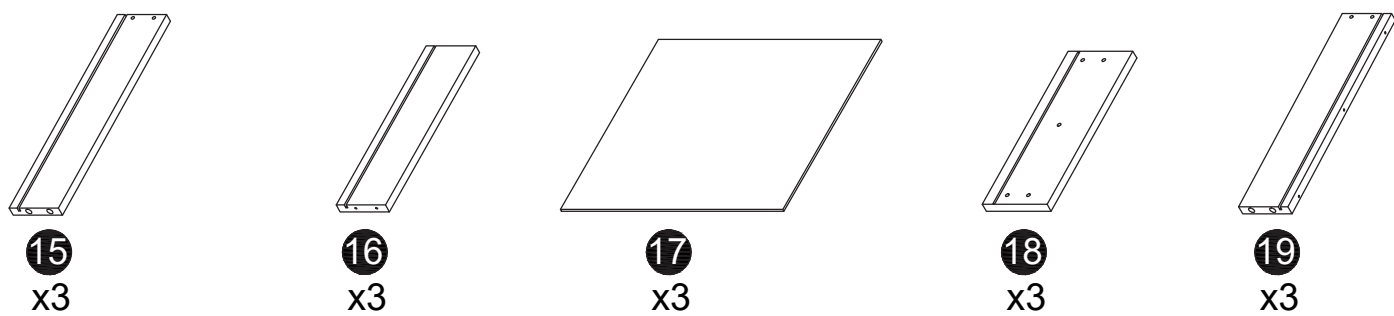

Mounting frame




A
x14

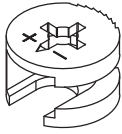

B
x14



C
x26




D
x16




E
x19




F
x2



G
x1



H
x1

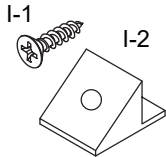


I
x8



J
x10



K
x1

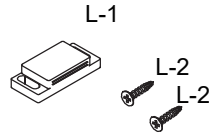


L
x1



M
x1




N
x2




CL
x3




CR
x3

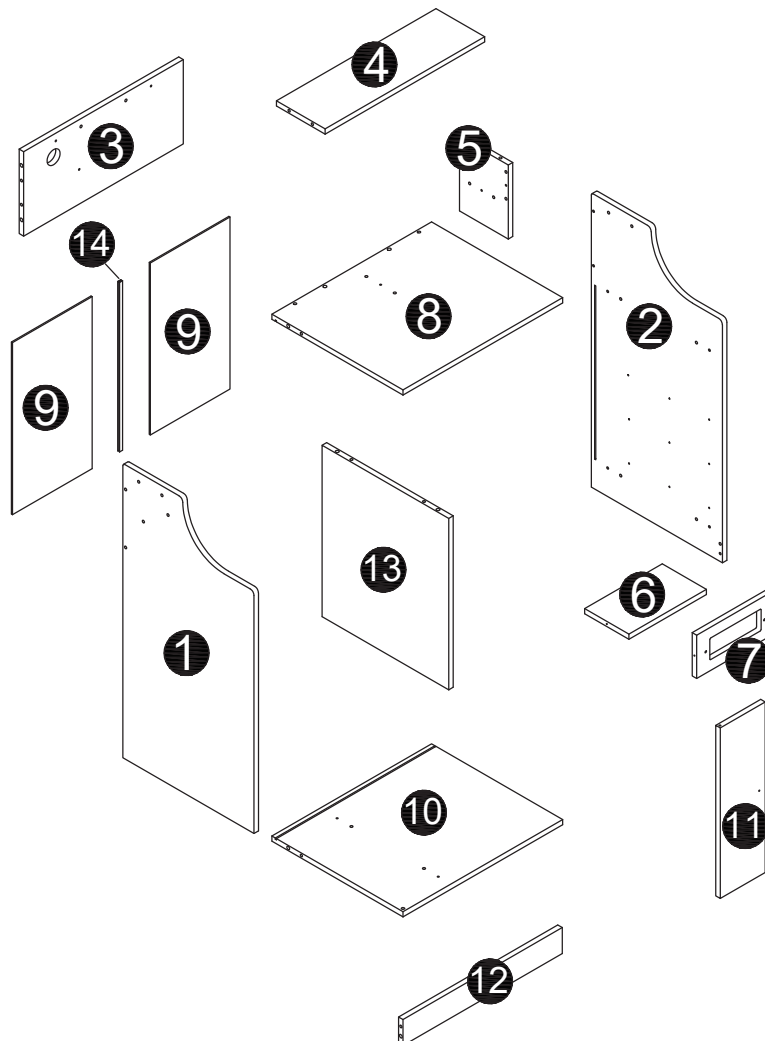



1

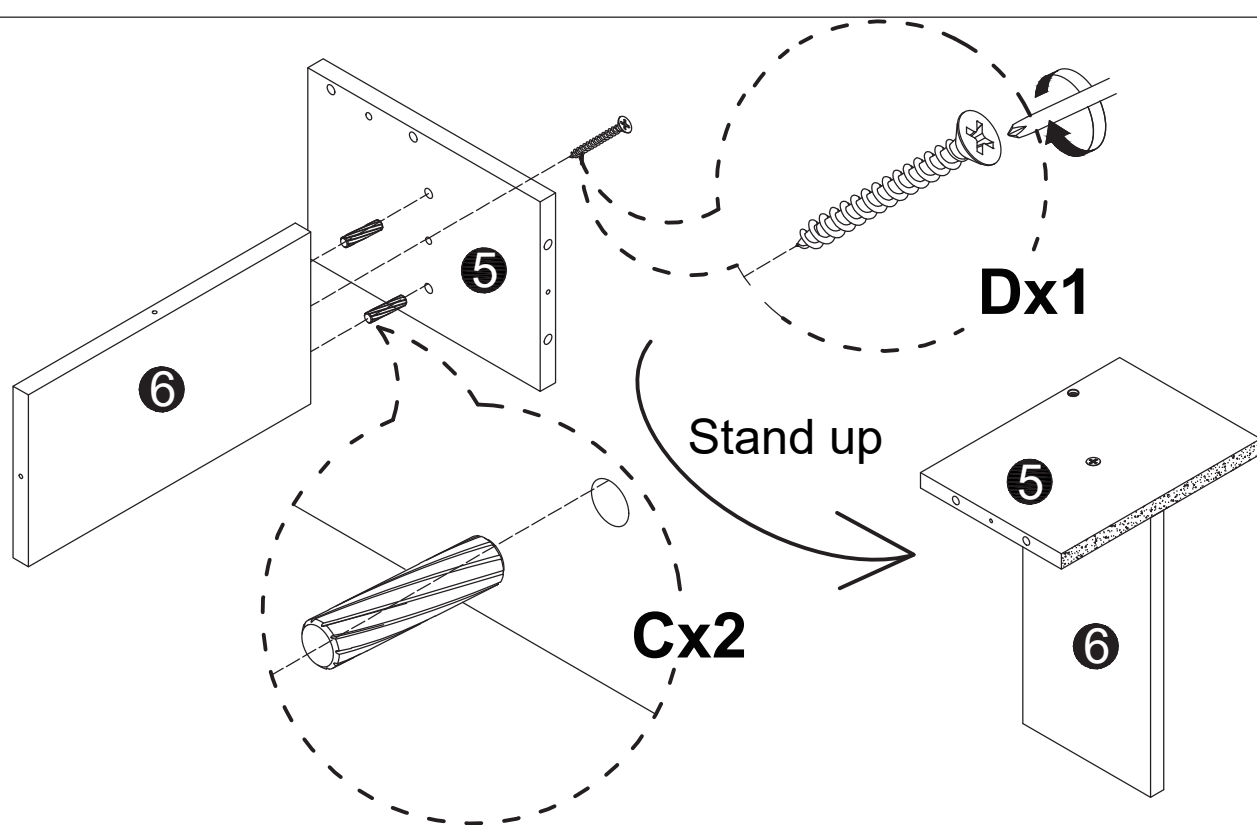


2

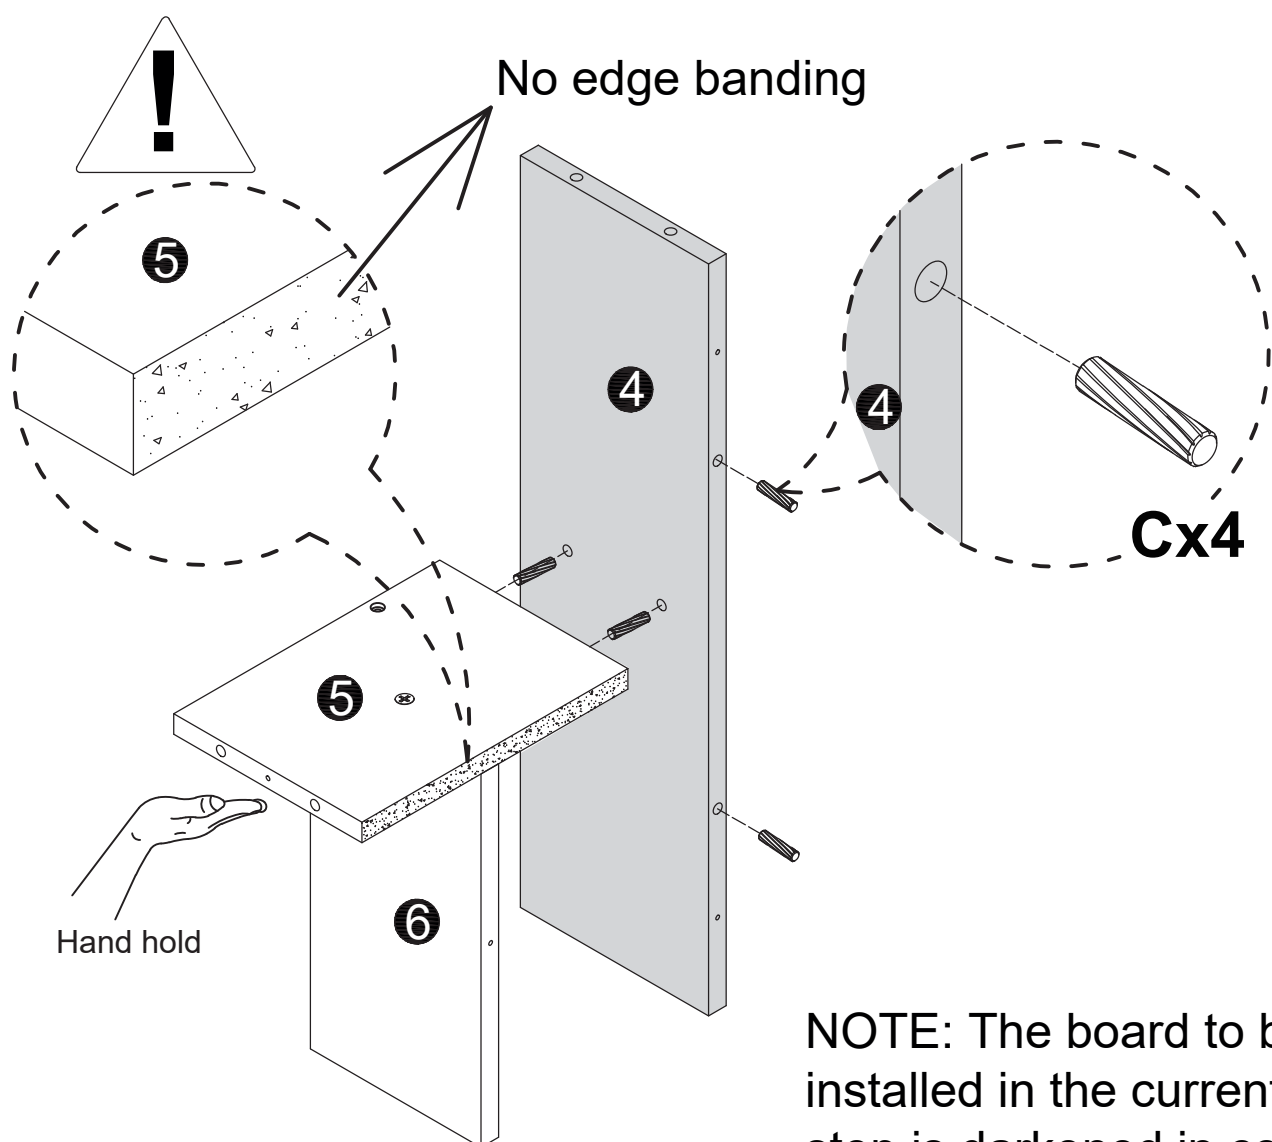


NOTE: The board to be installed in the current step is darkened in color.

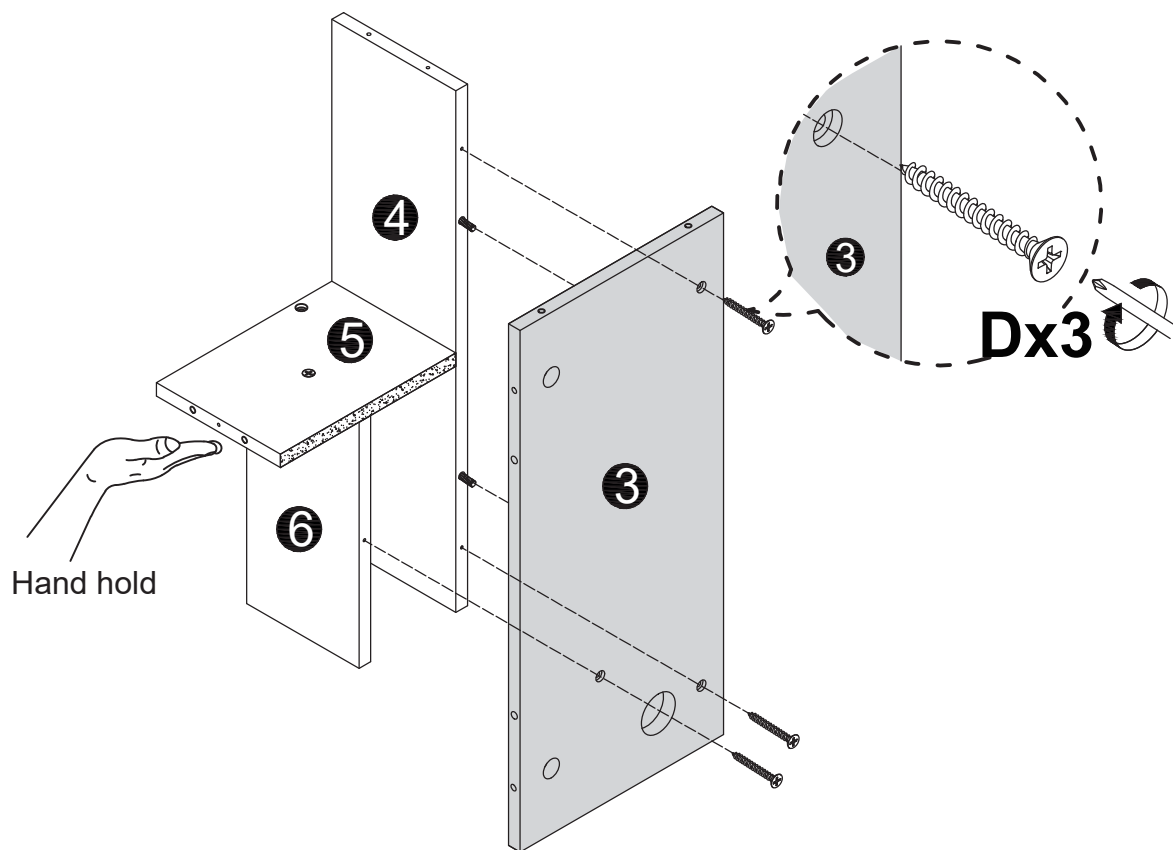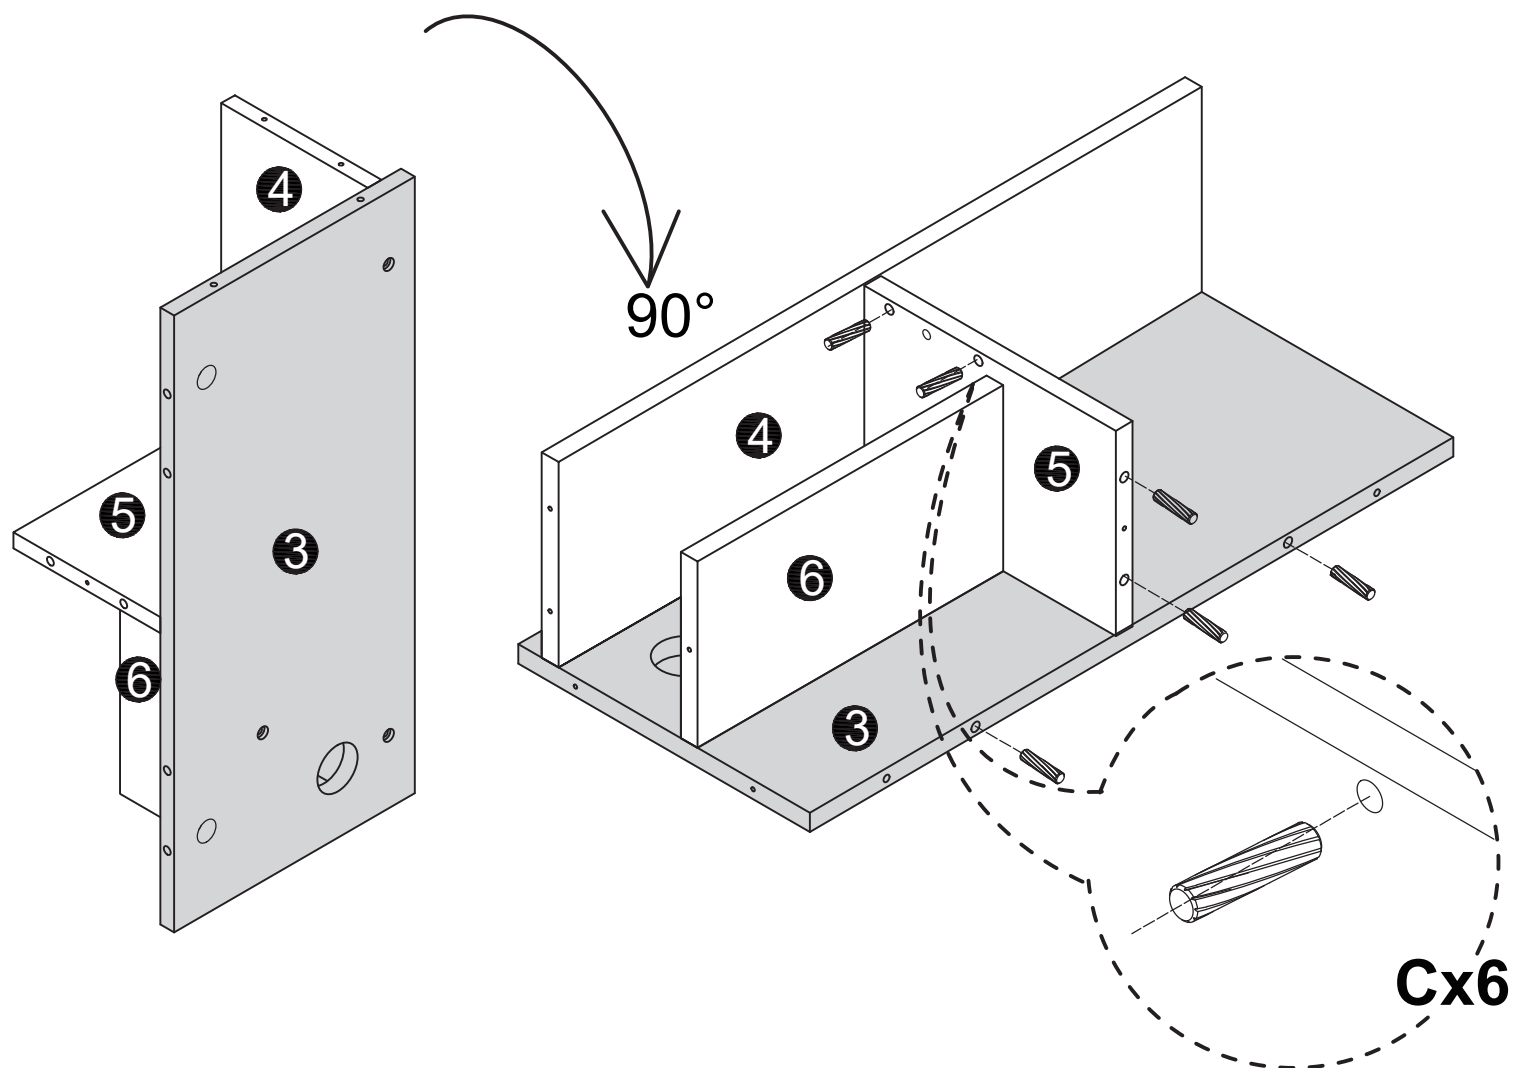3**4**


5

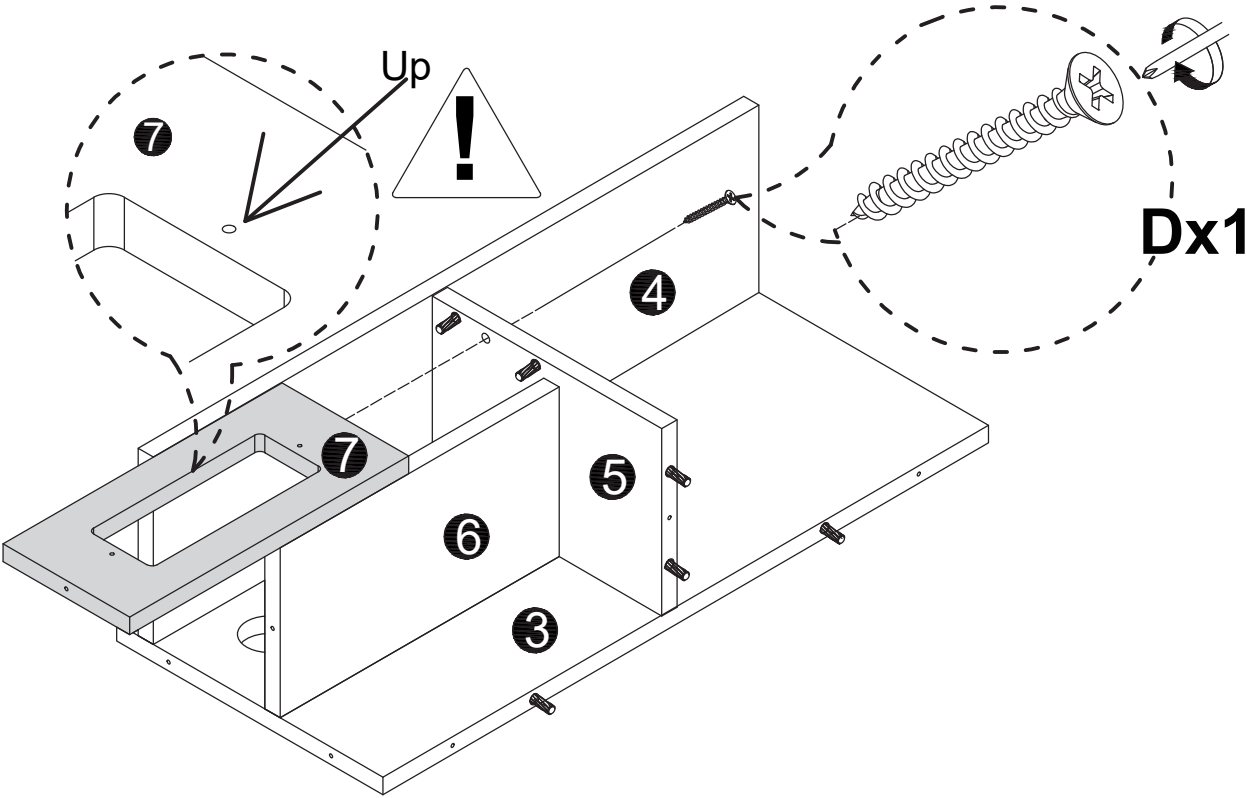


6

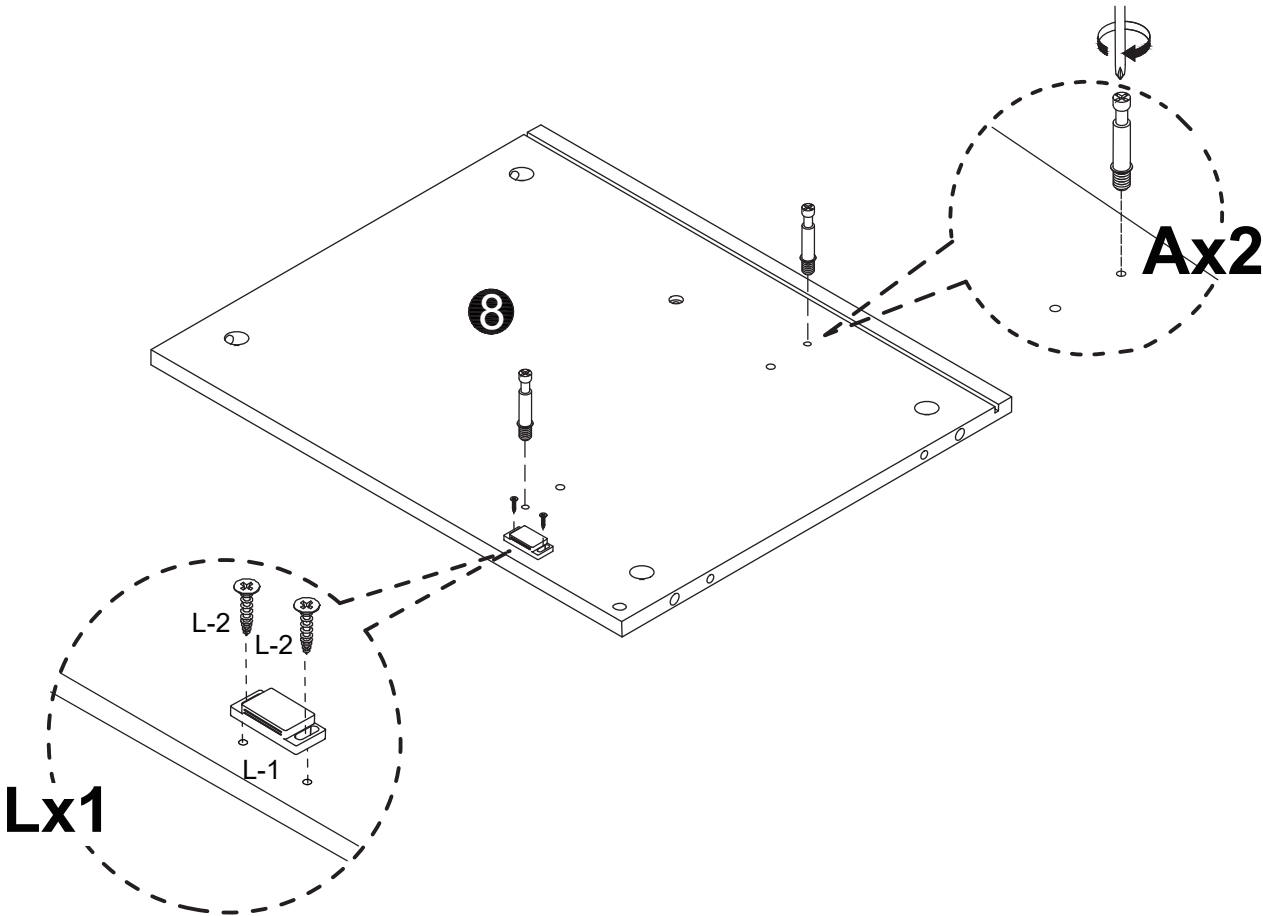


7

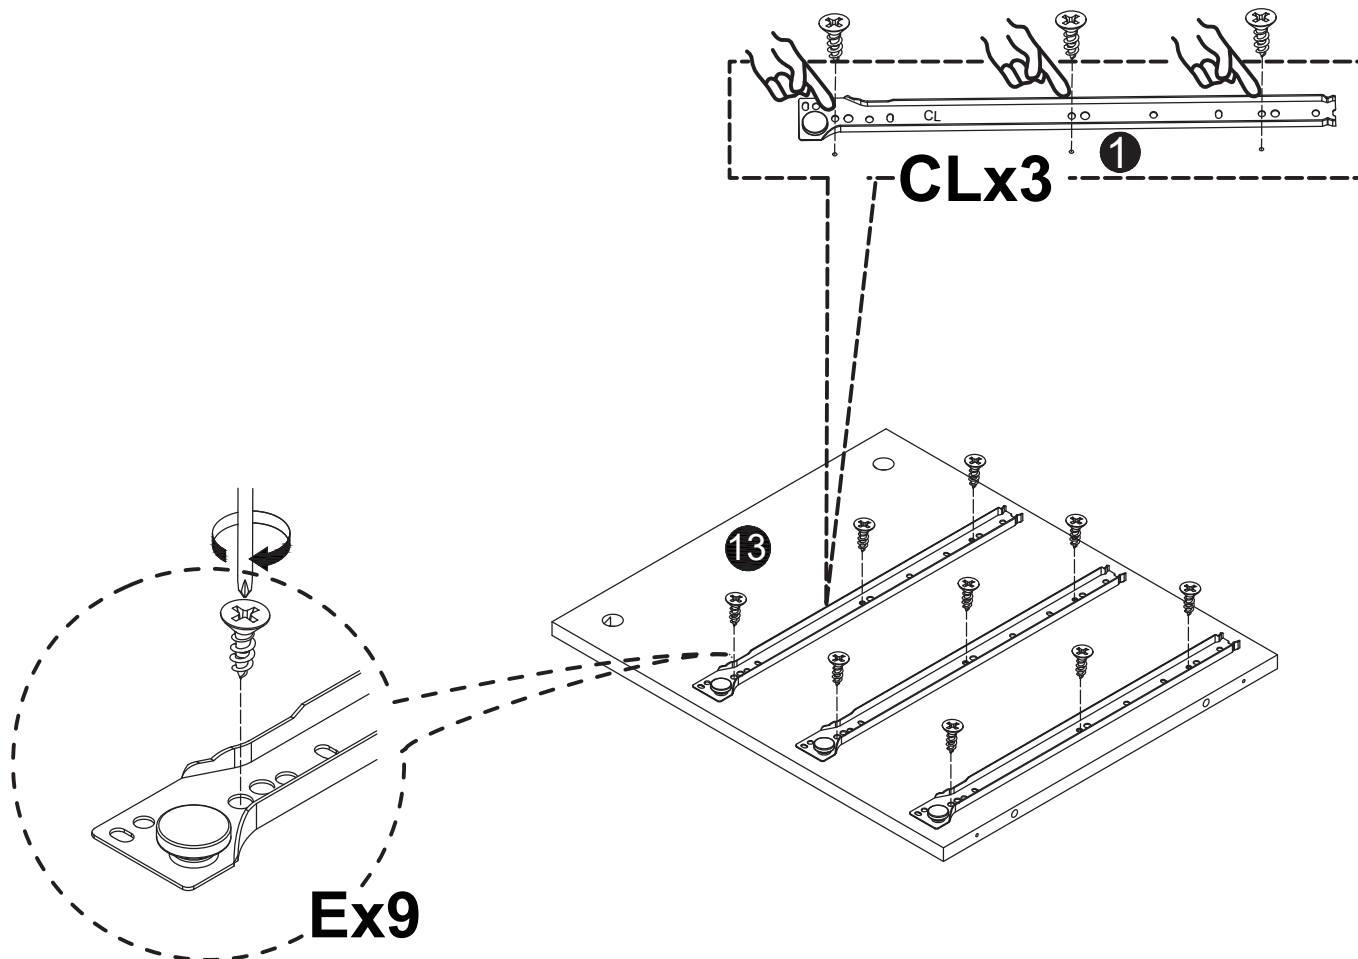


8

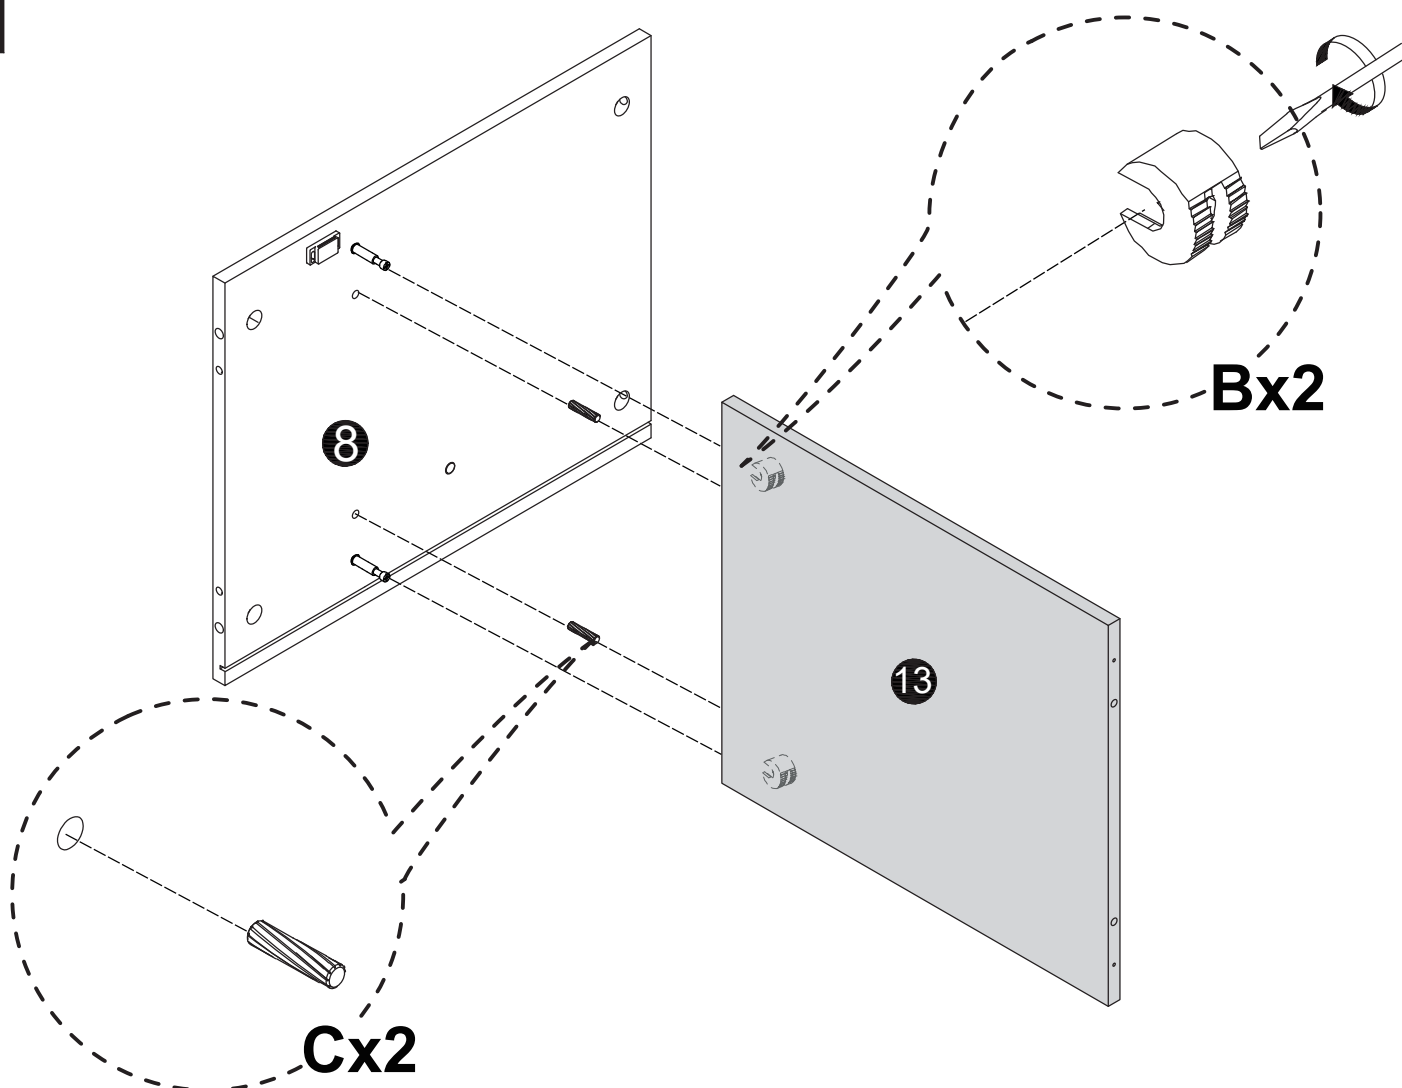


9

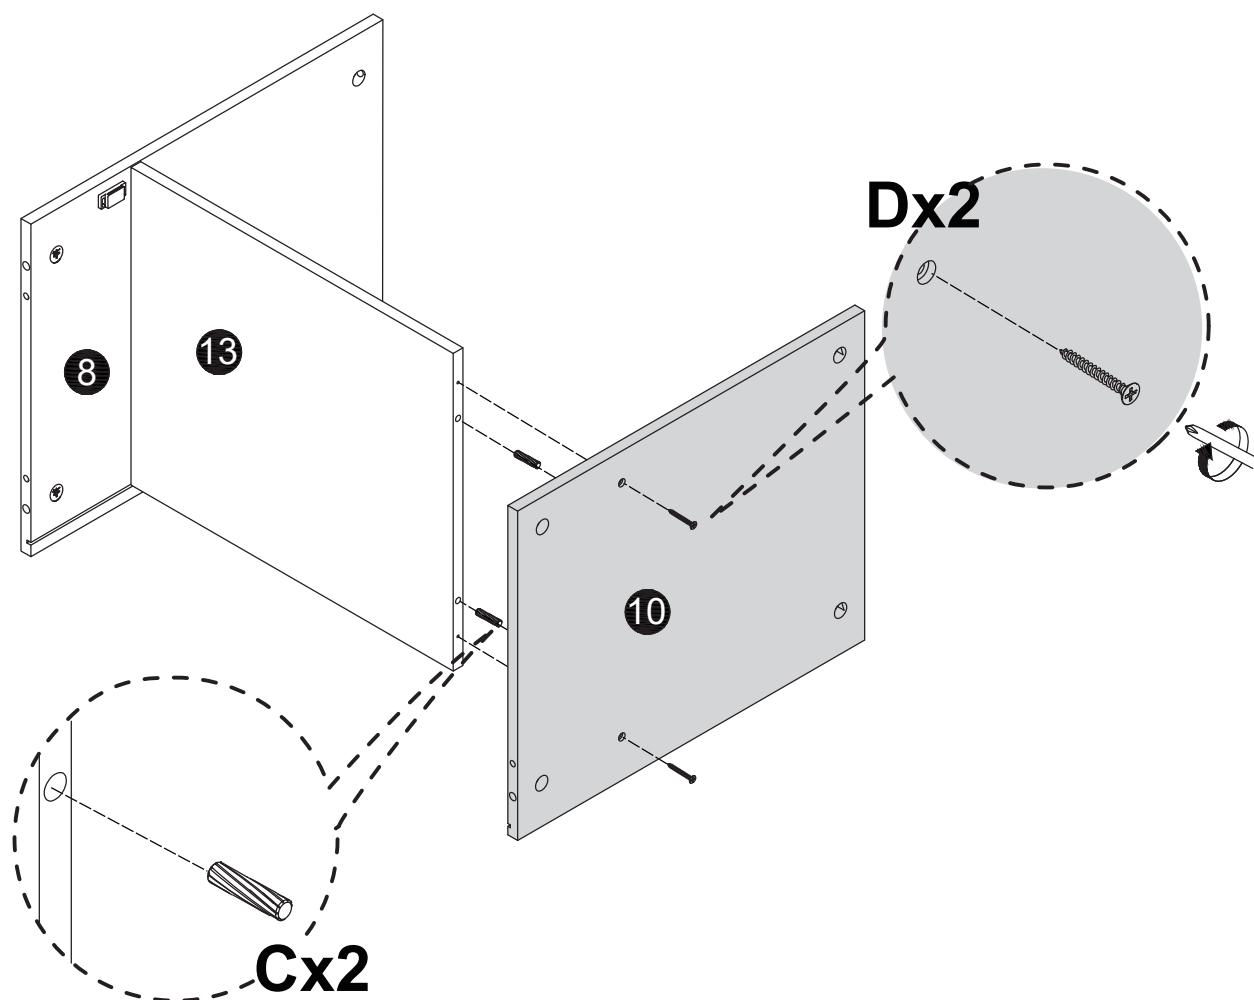


10

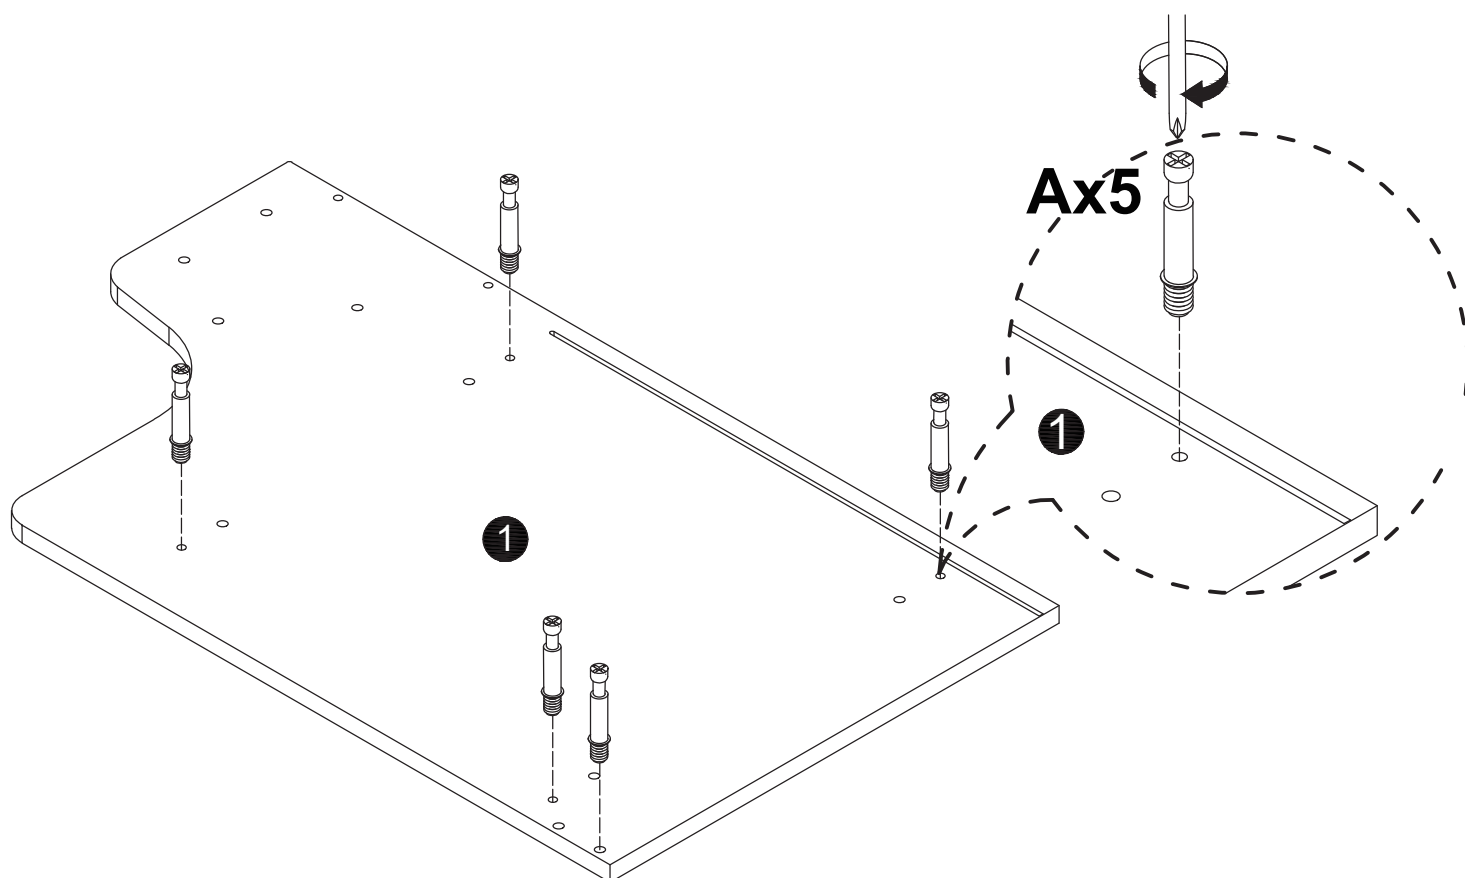


11

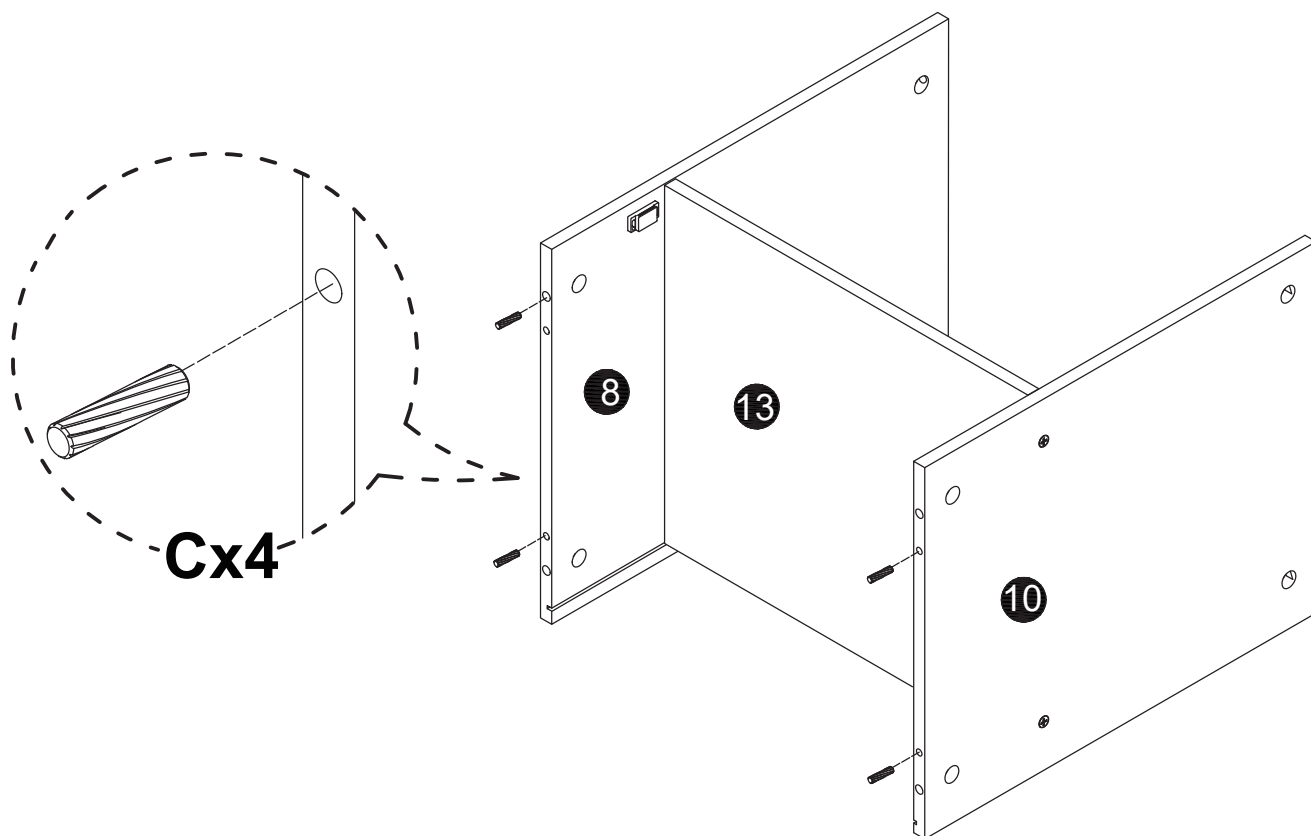


12

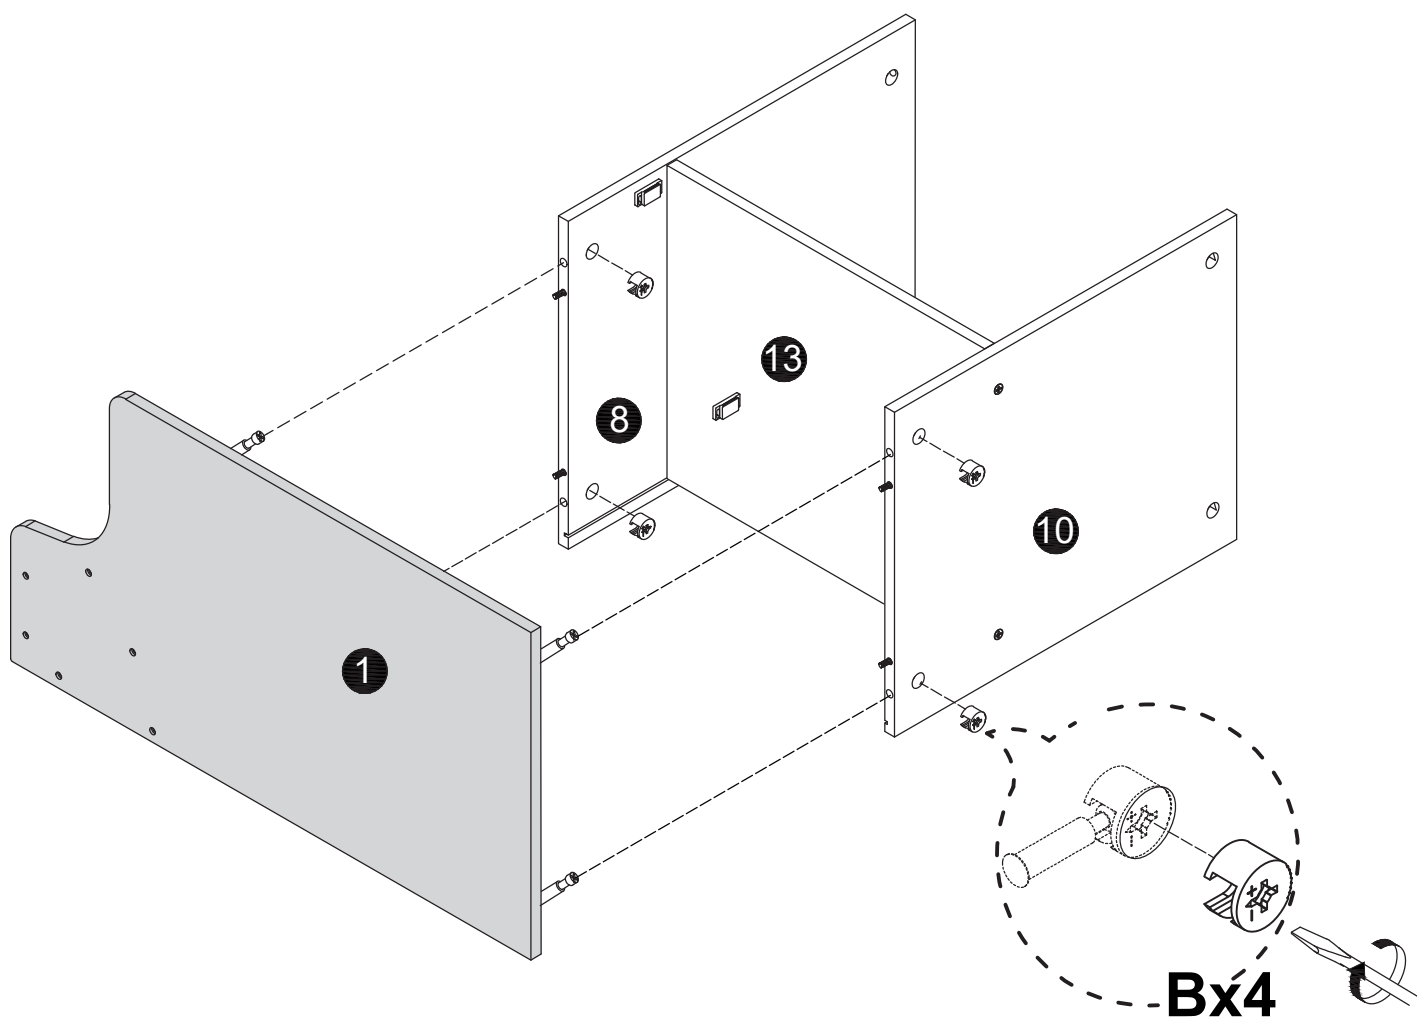


13

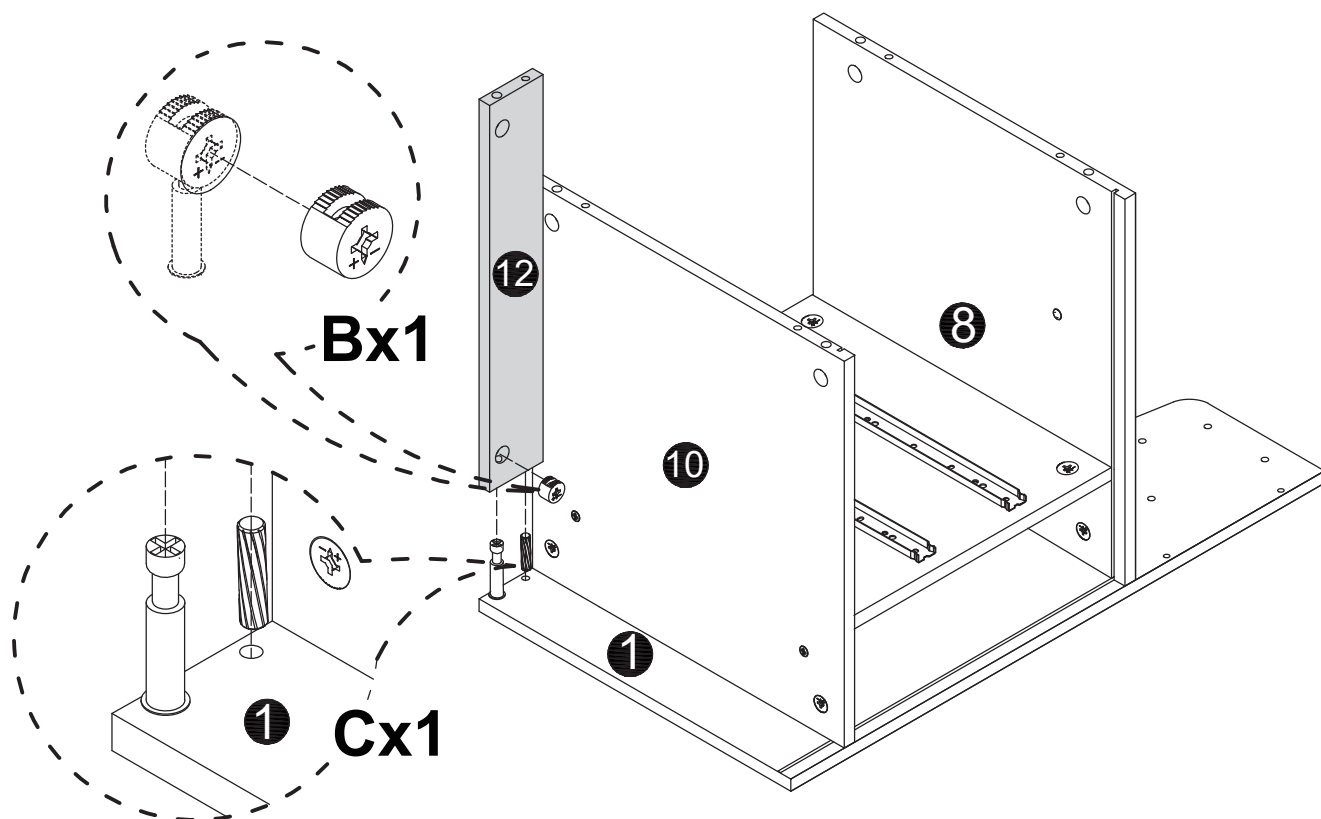


14


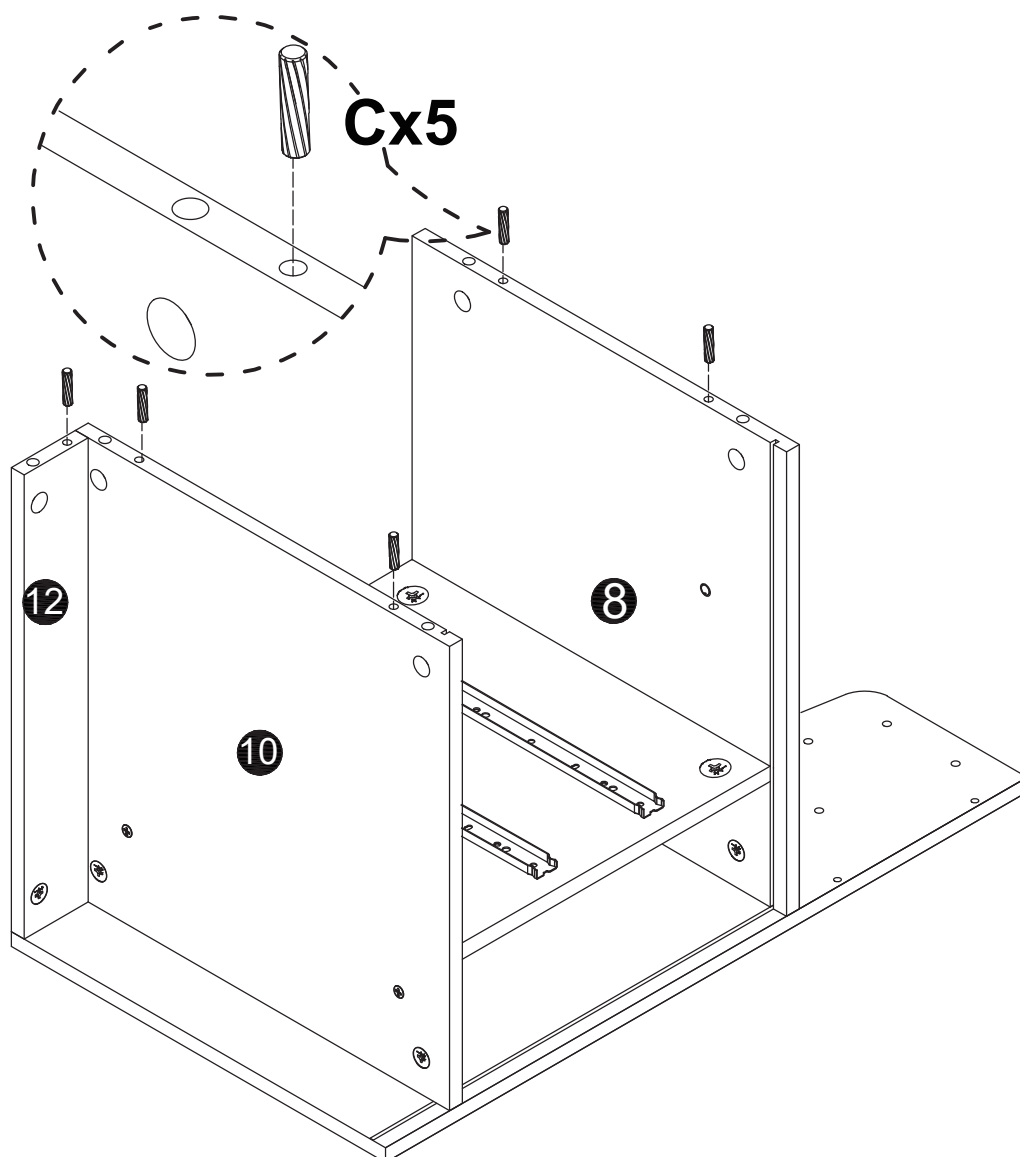


15

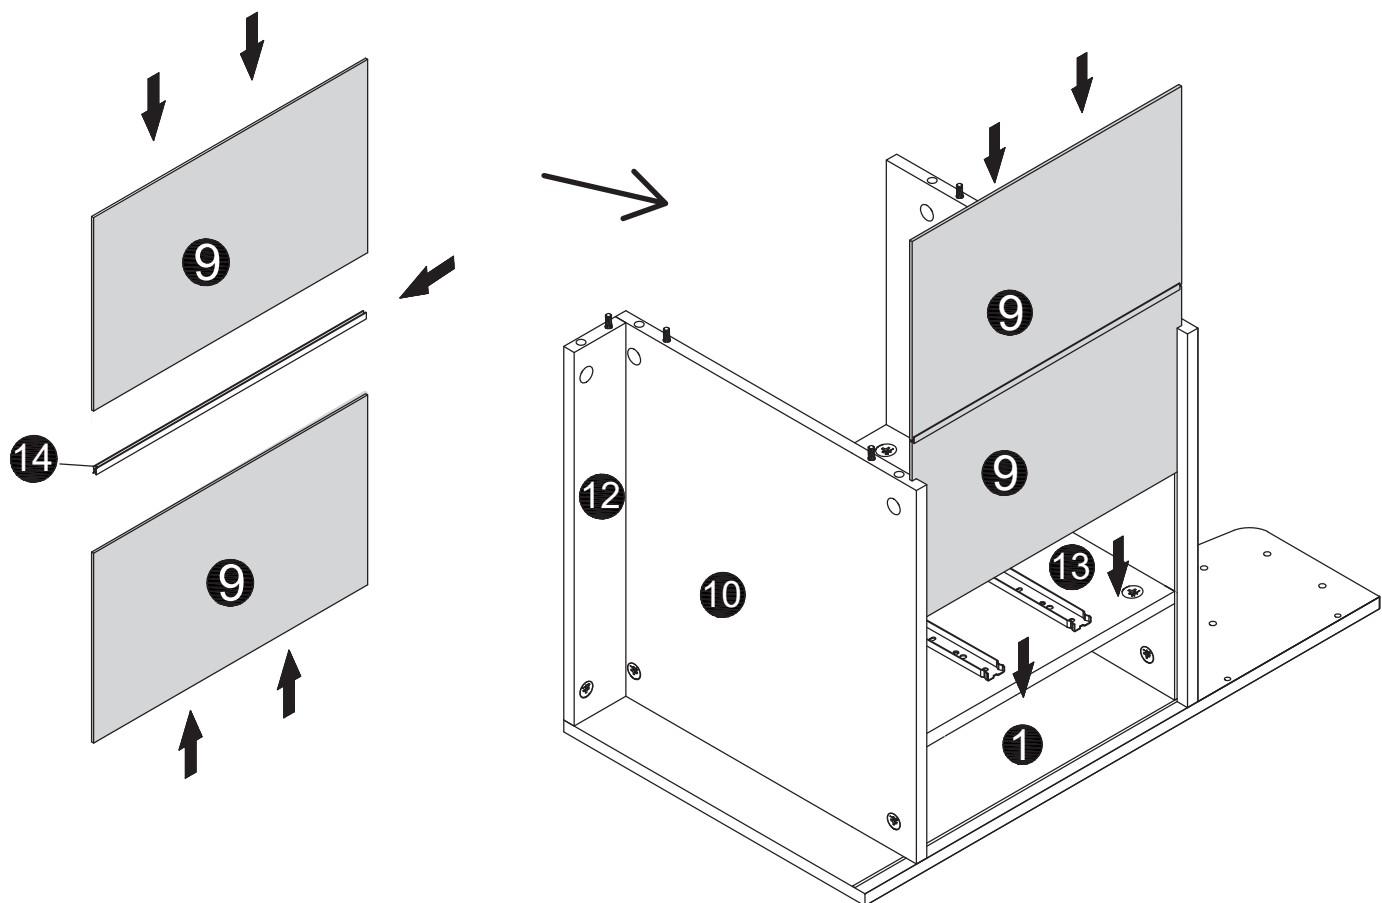


16

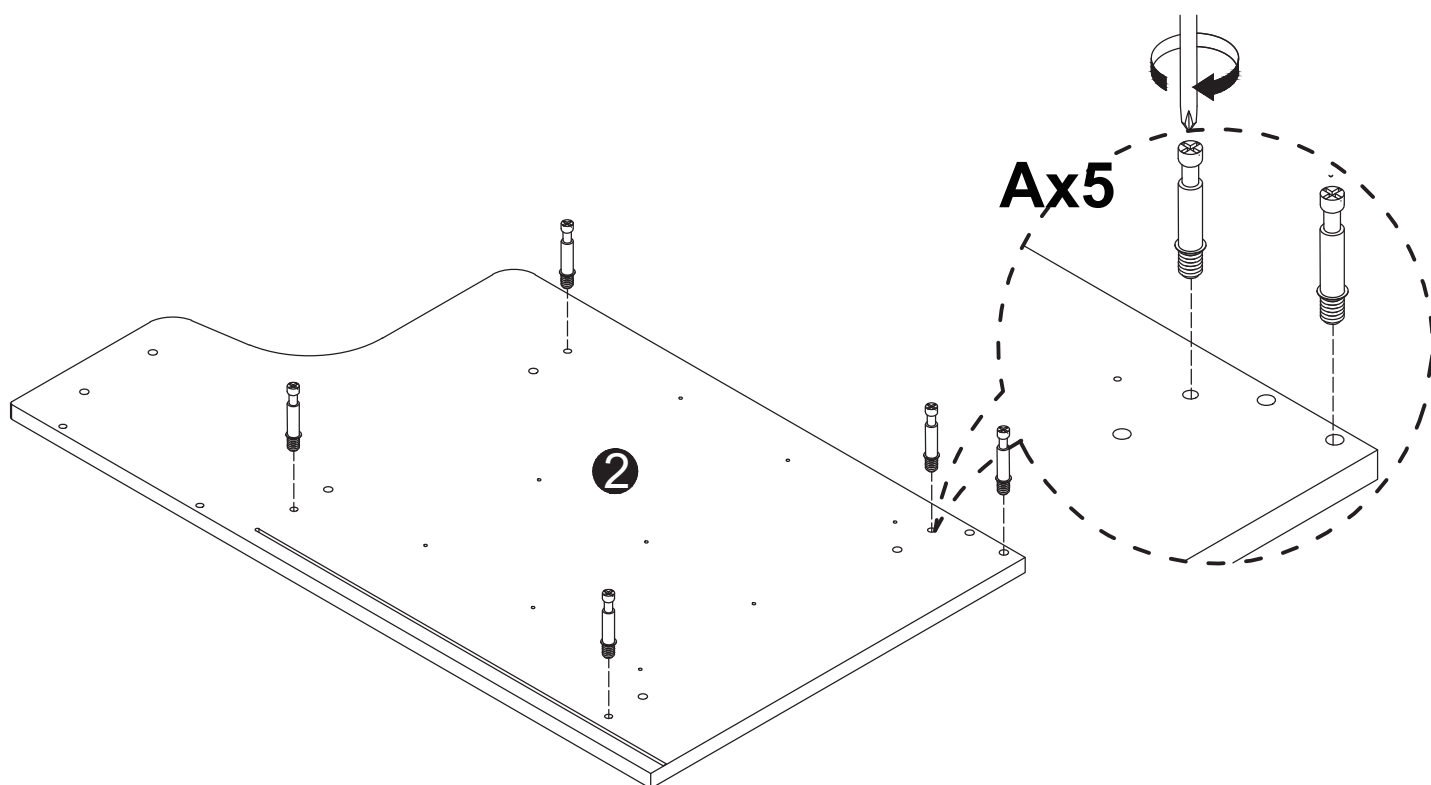


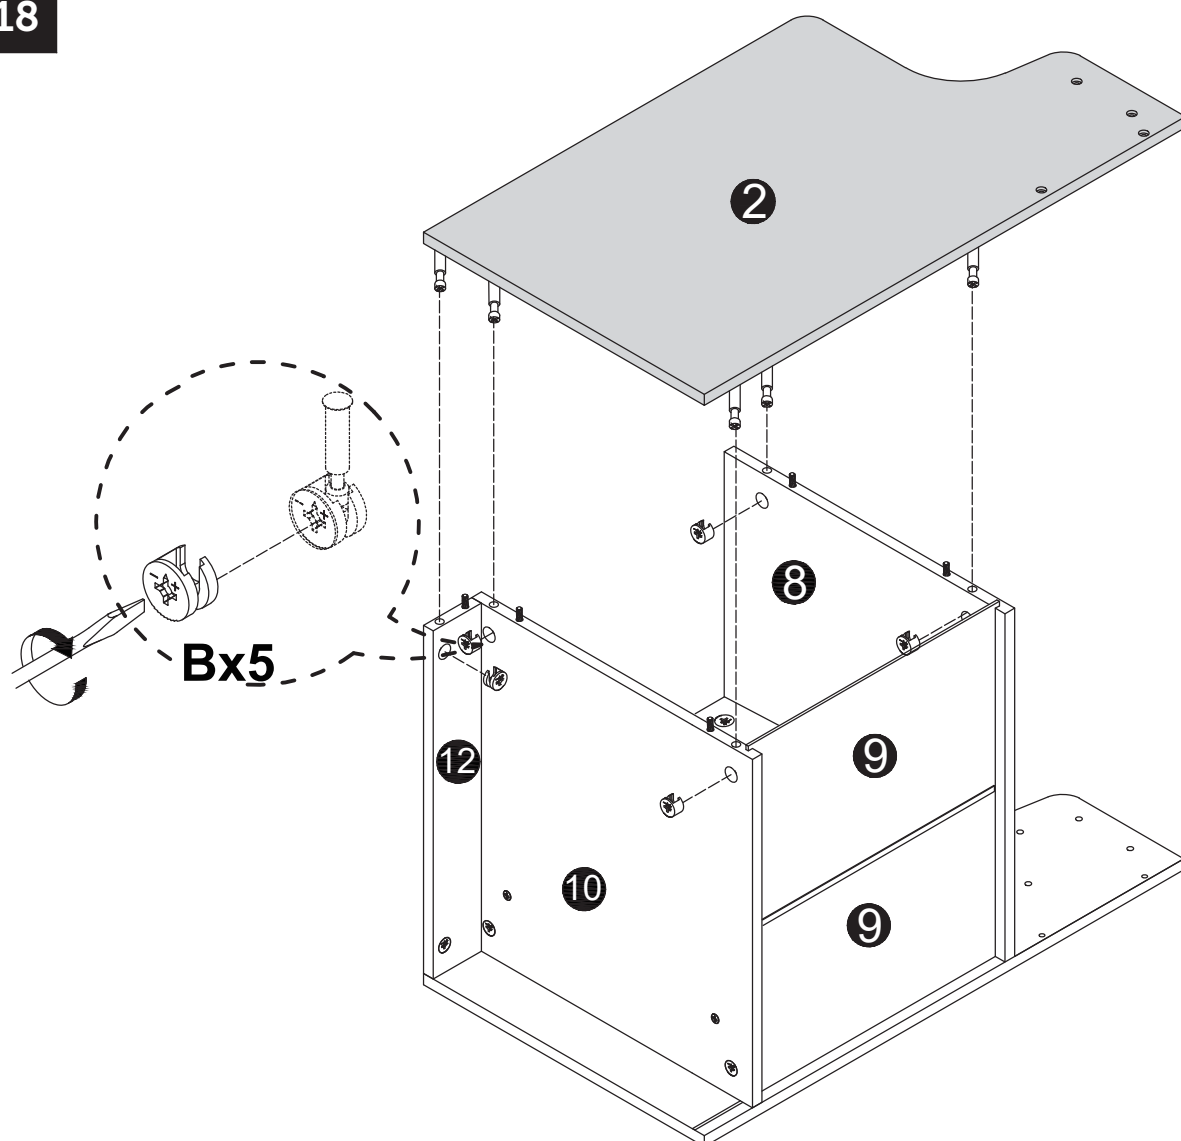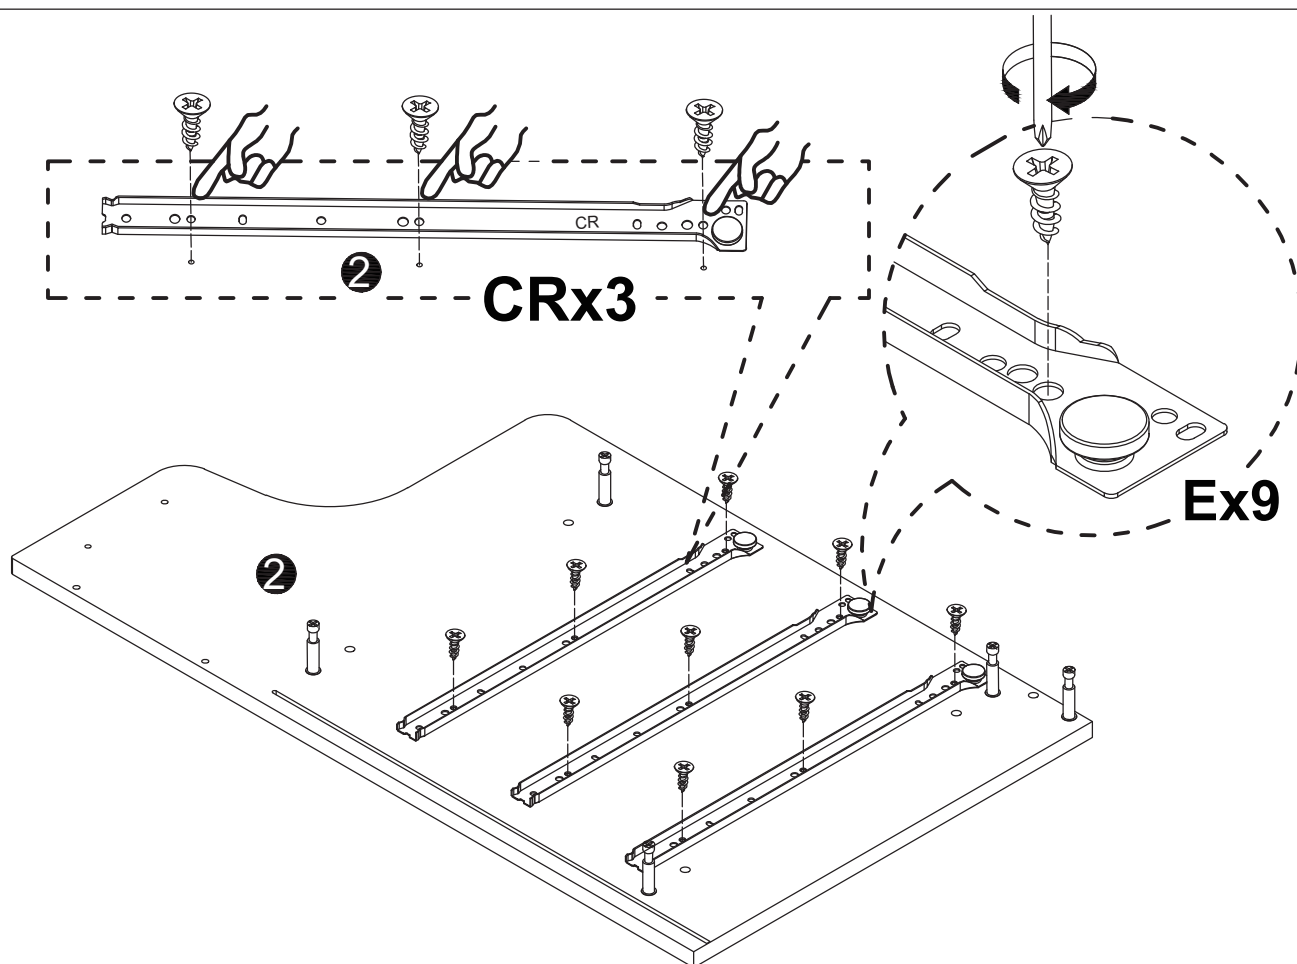


19

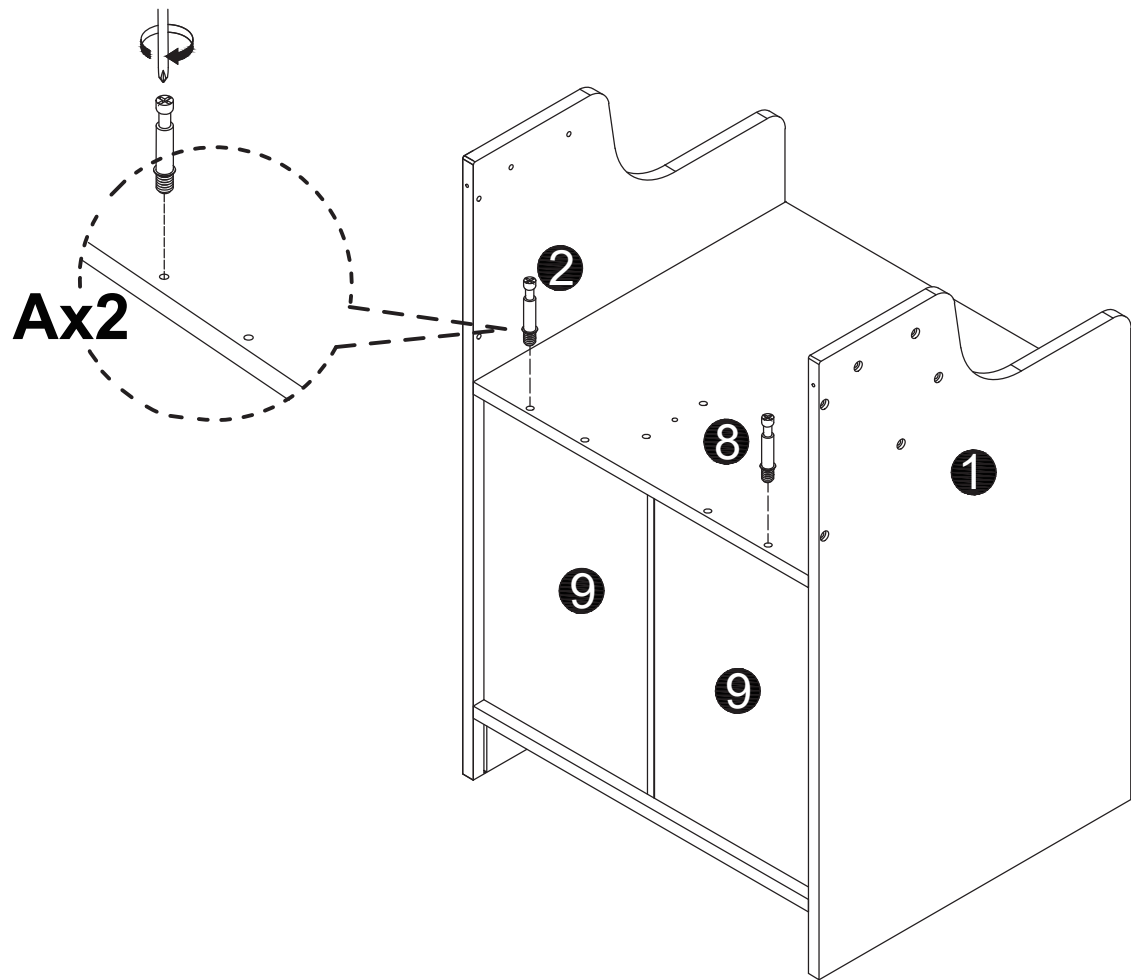


20

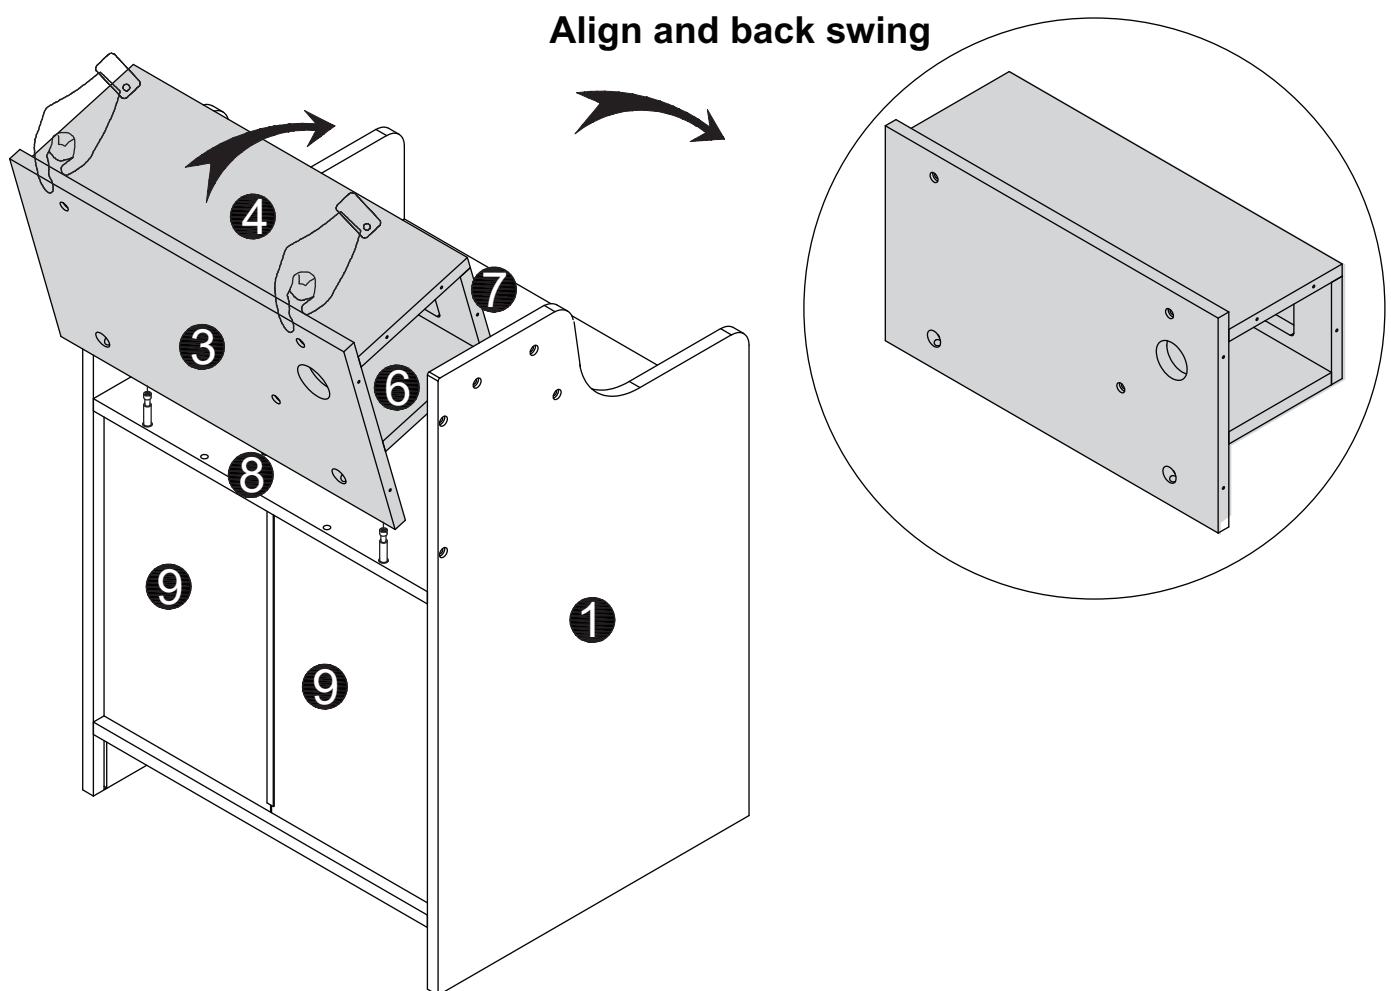


21

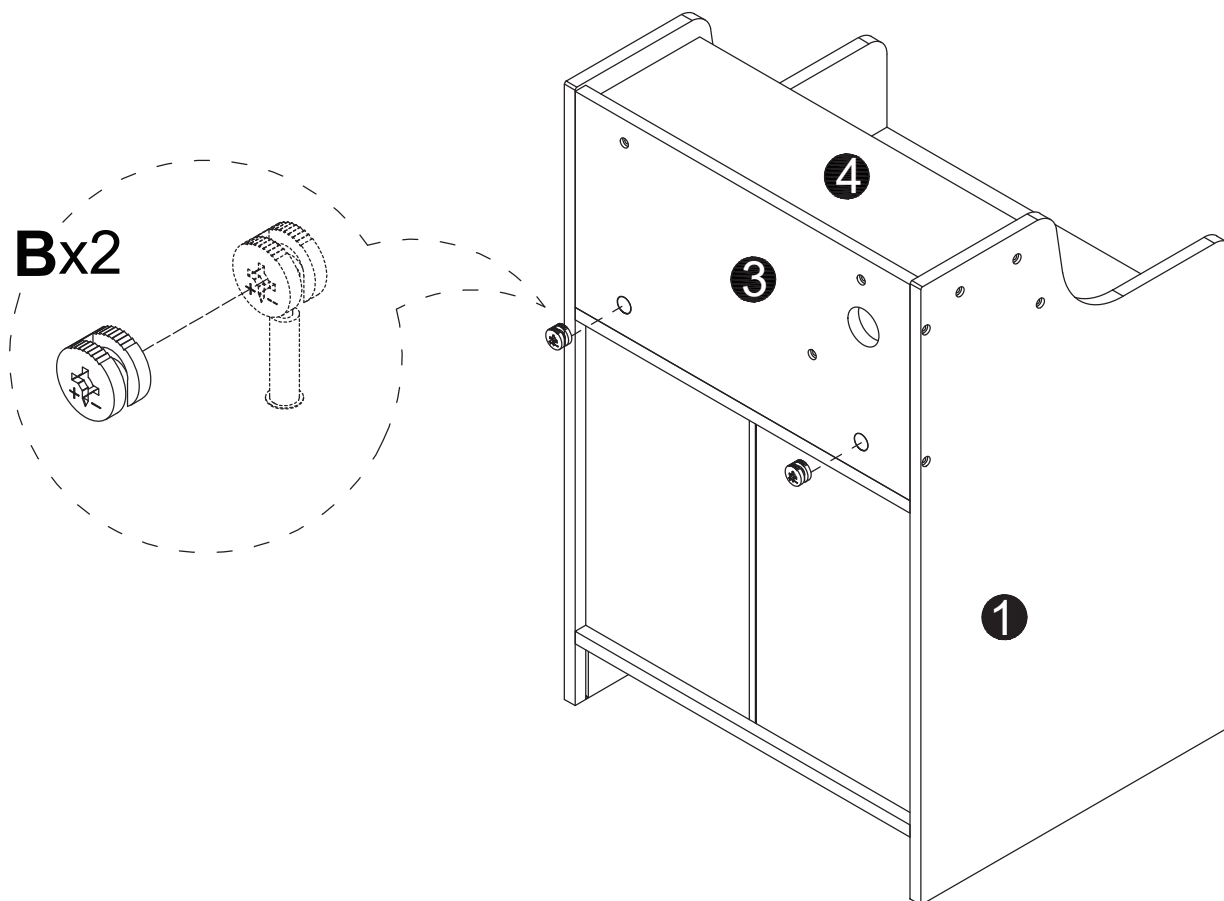


22

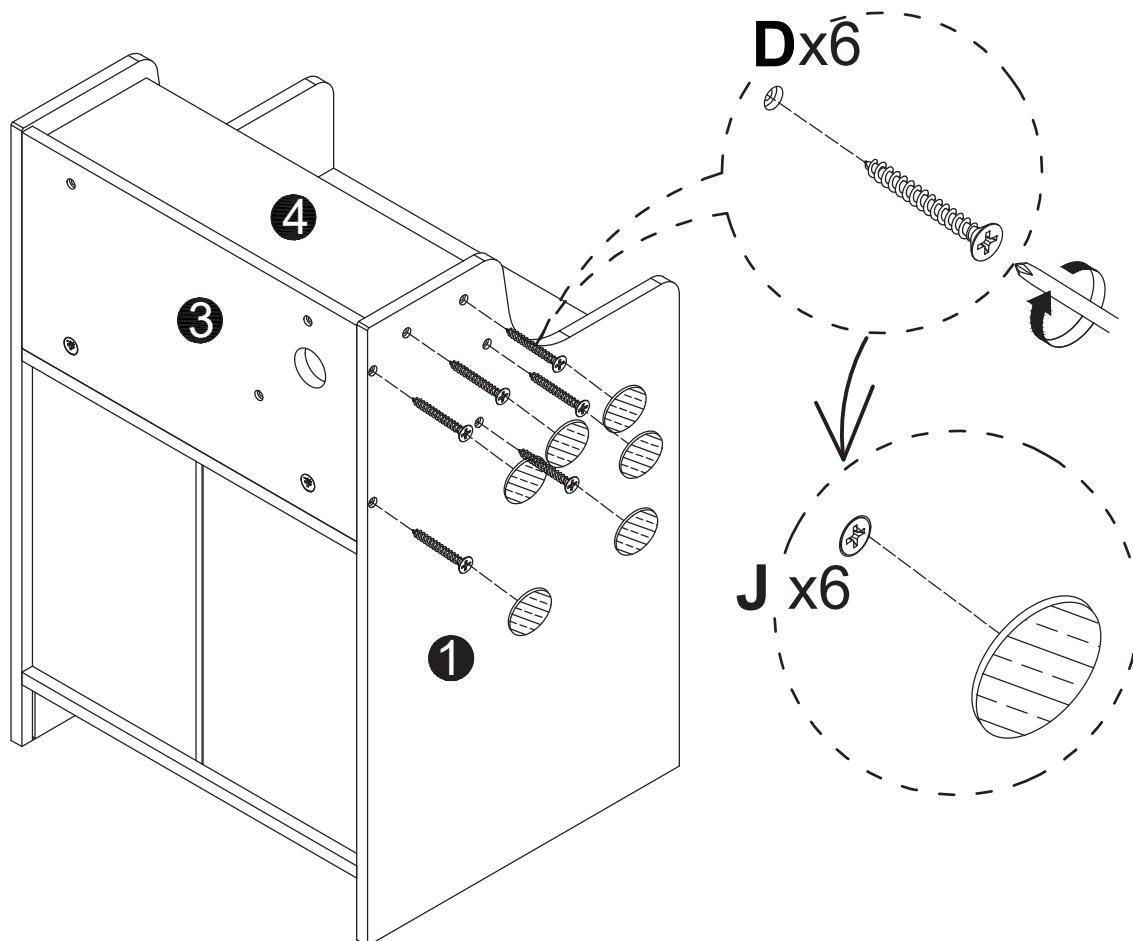


23

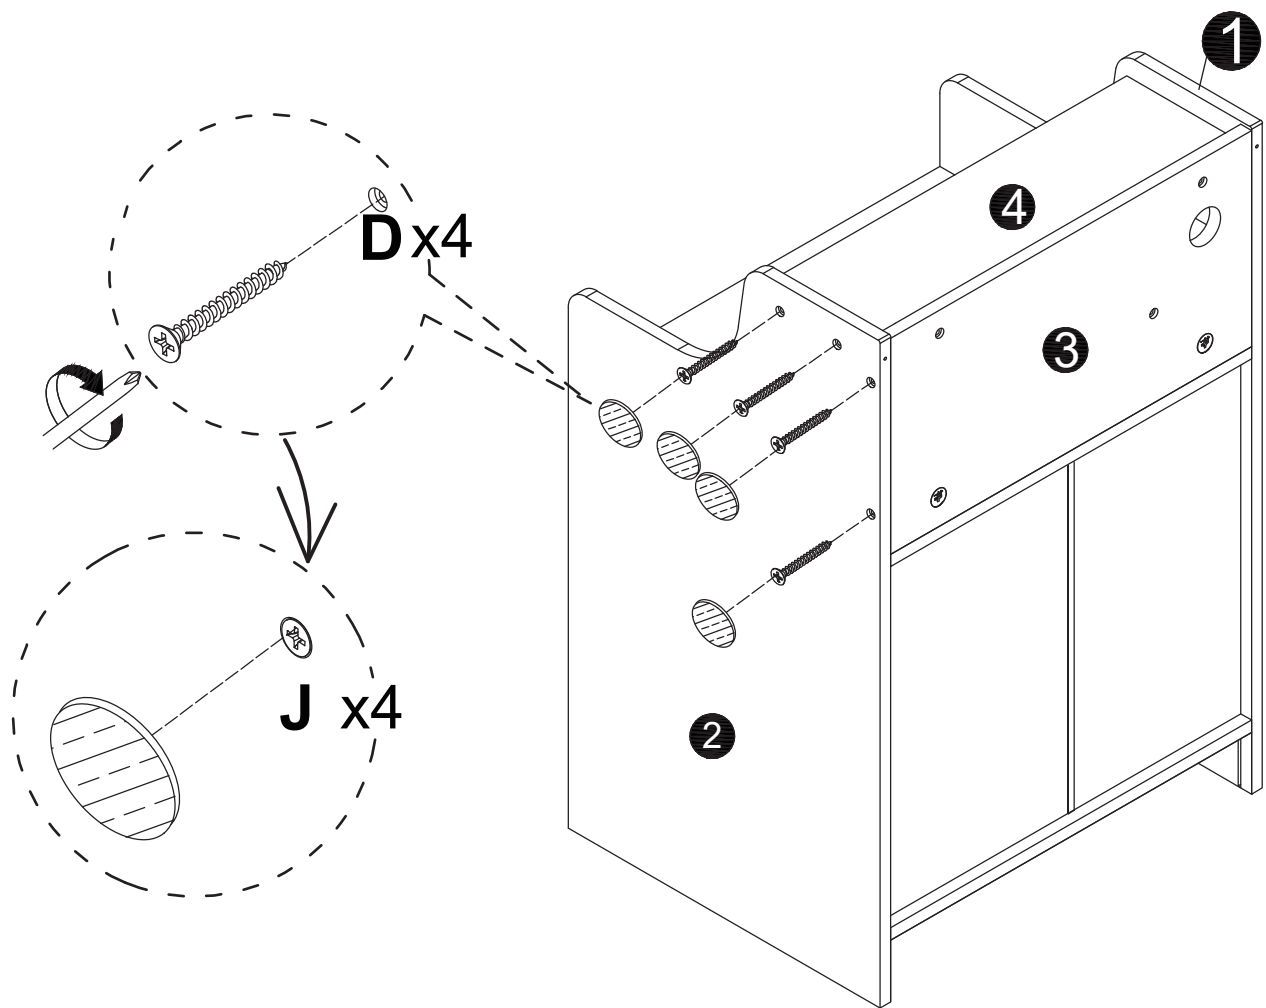


24

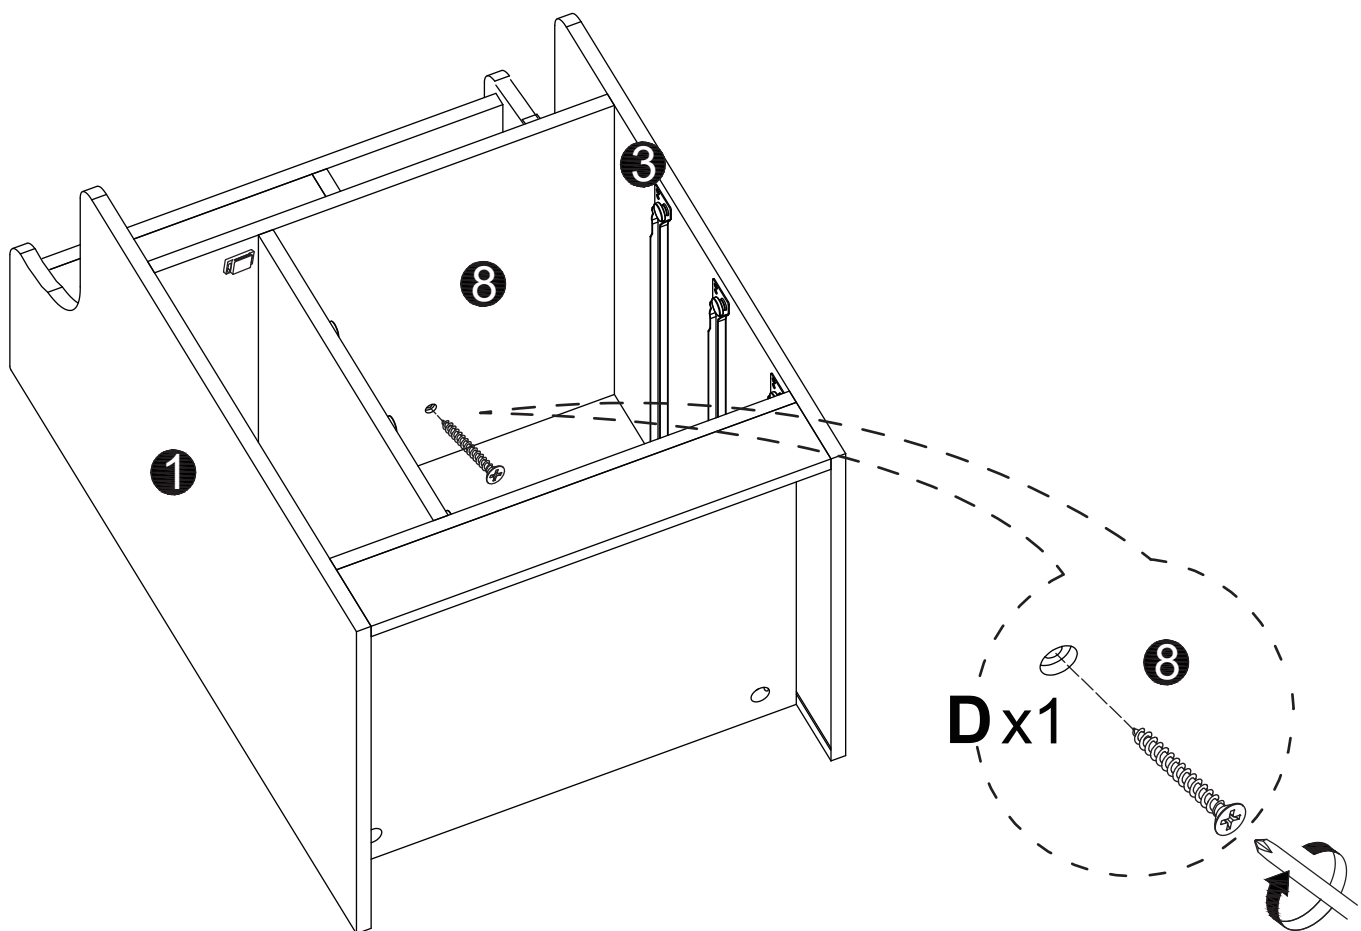


25


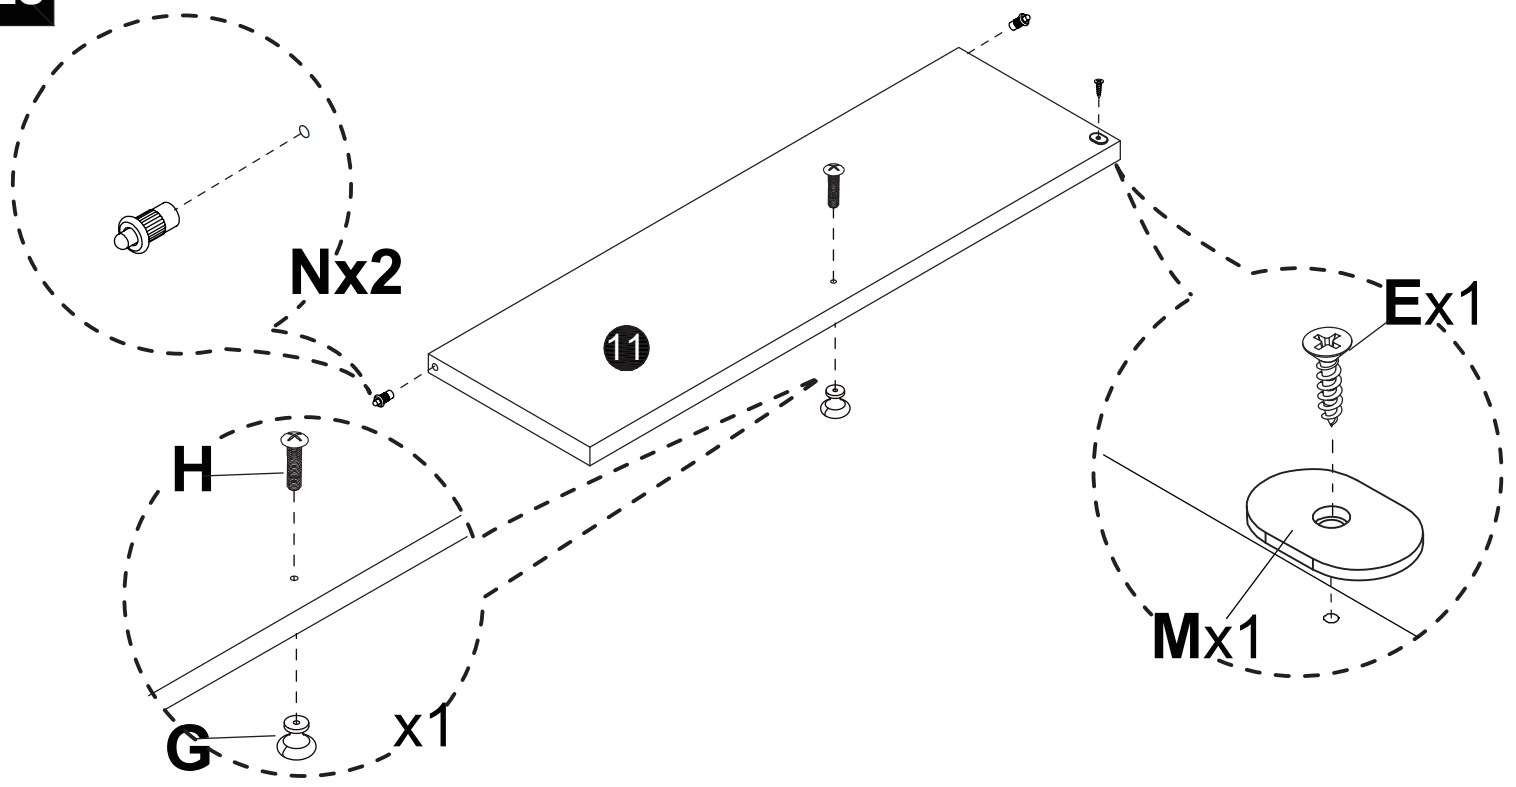


26

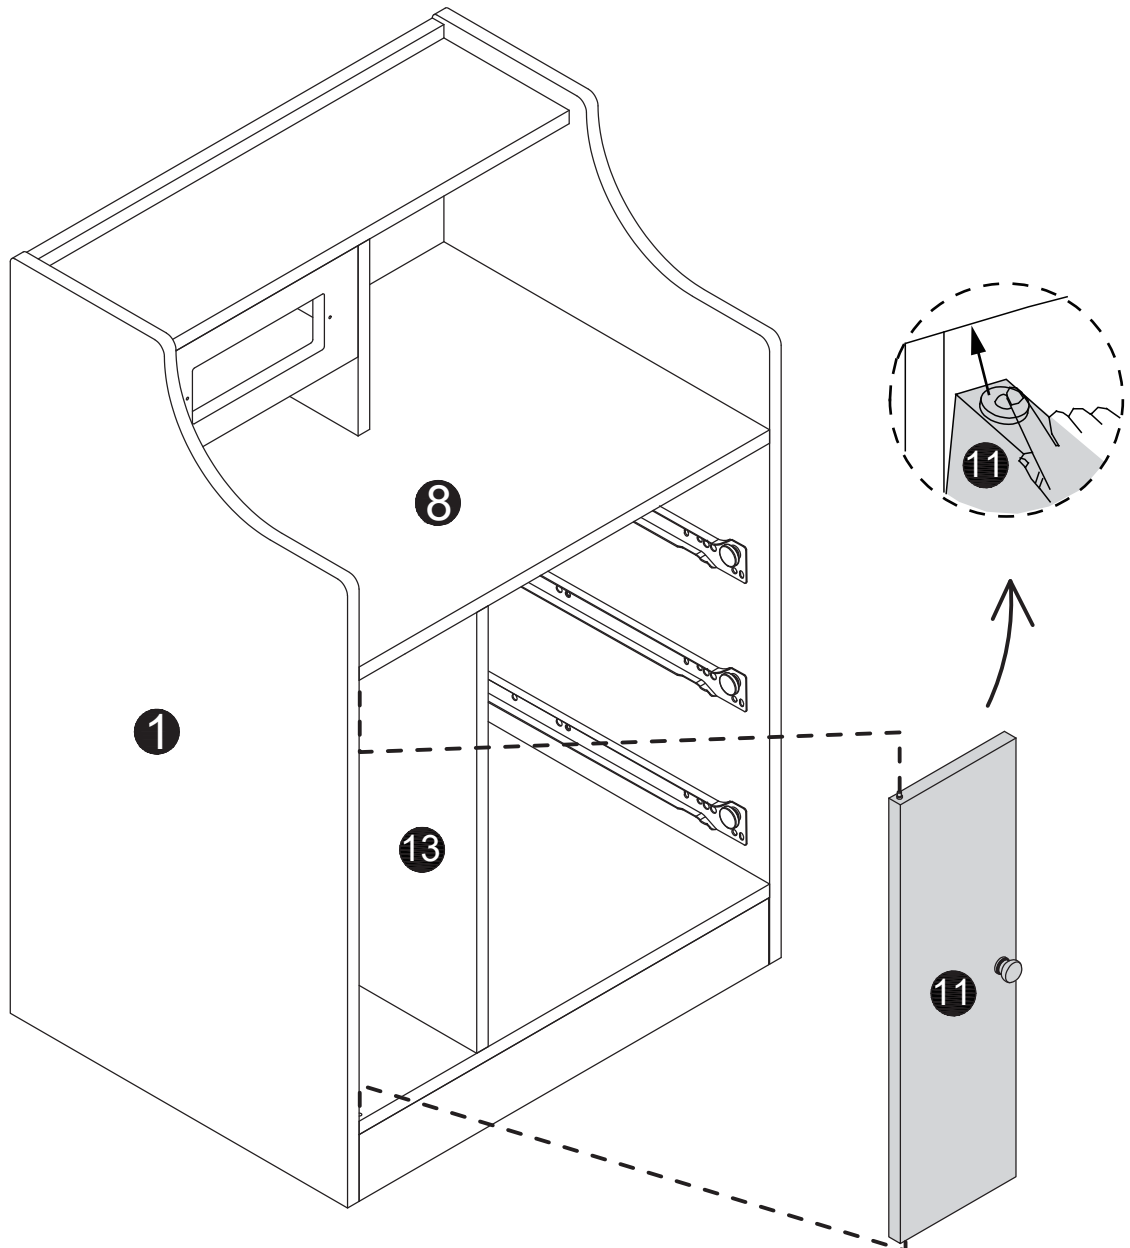


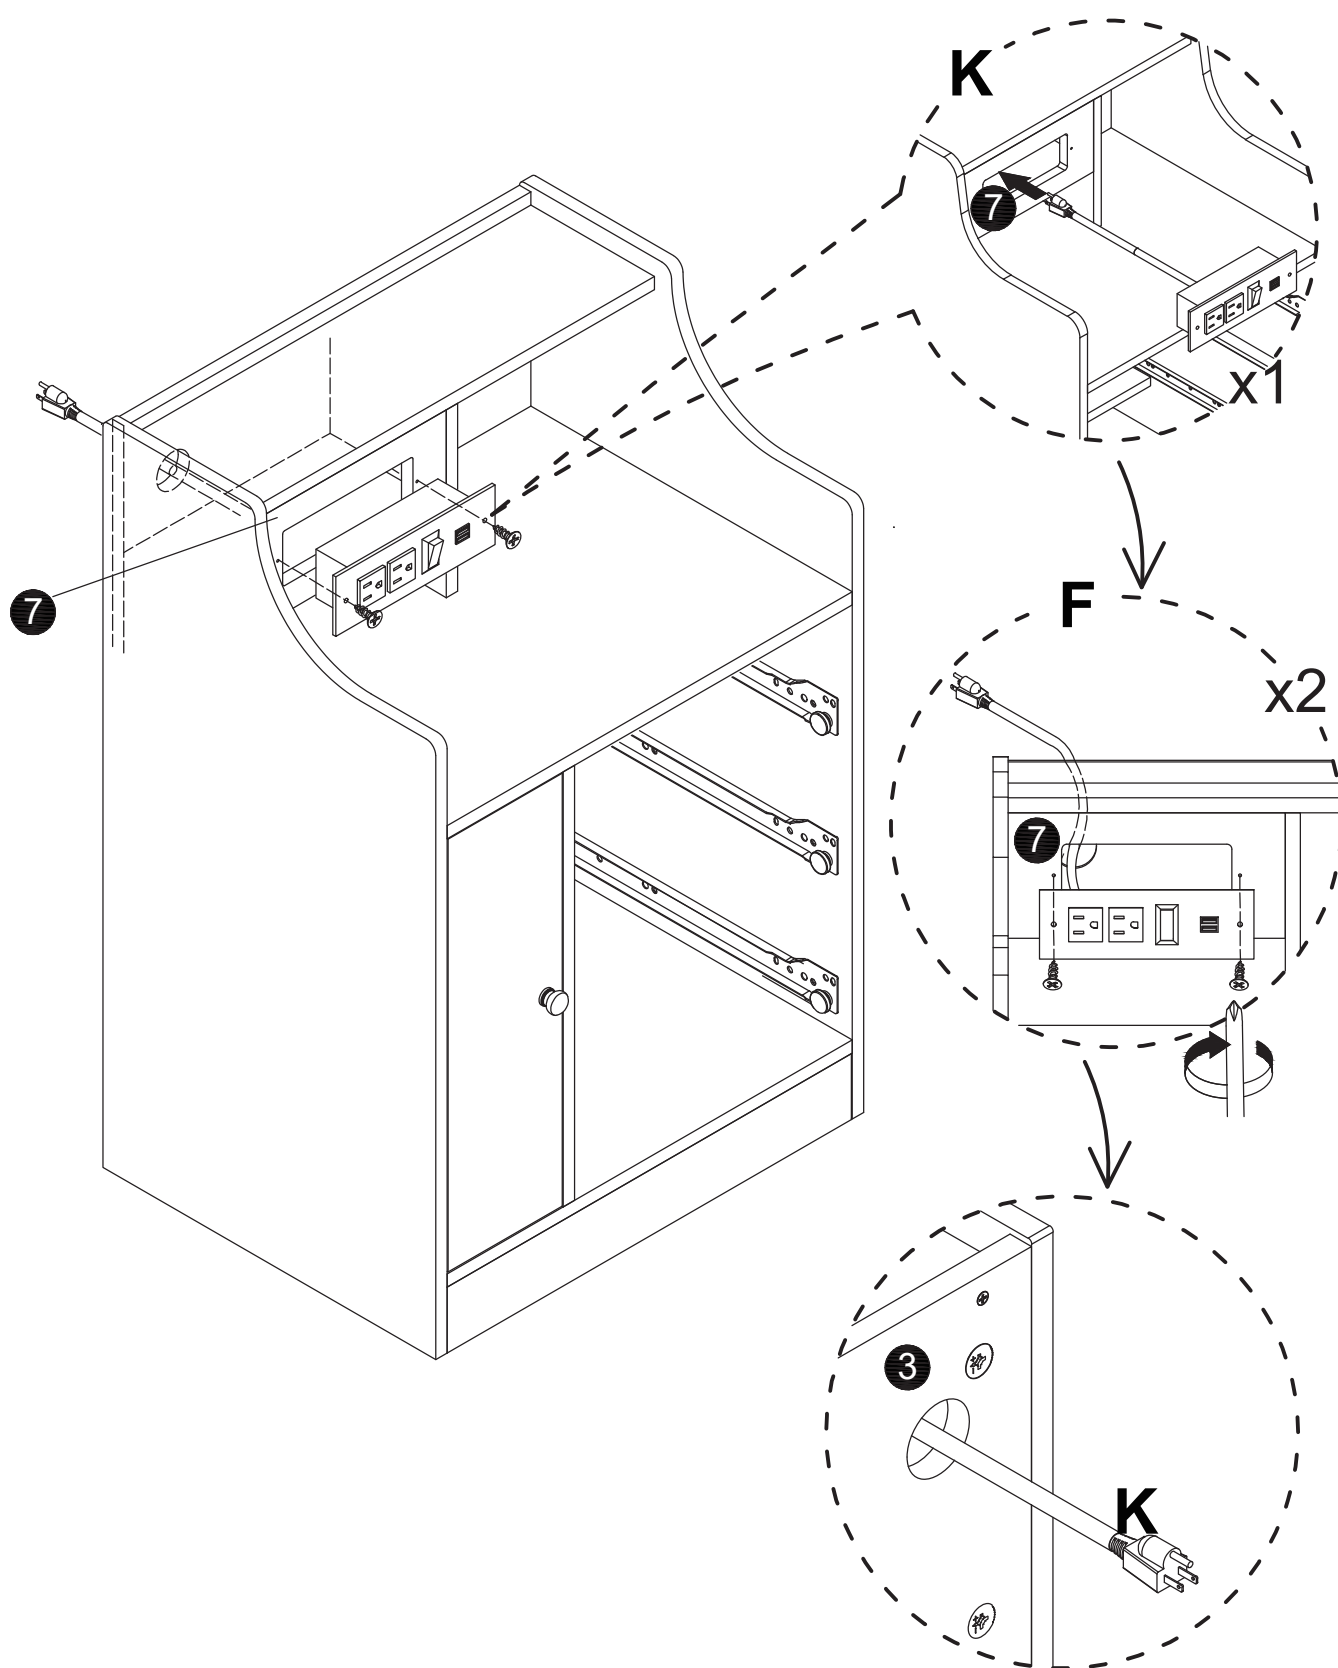


Drawer

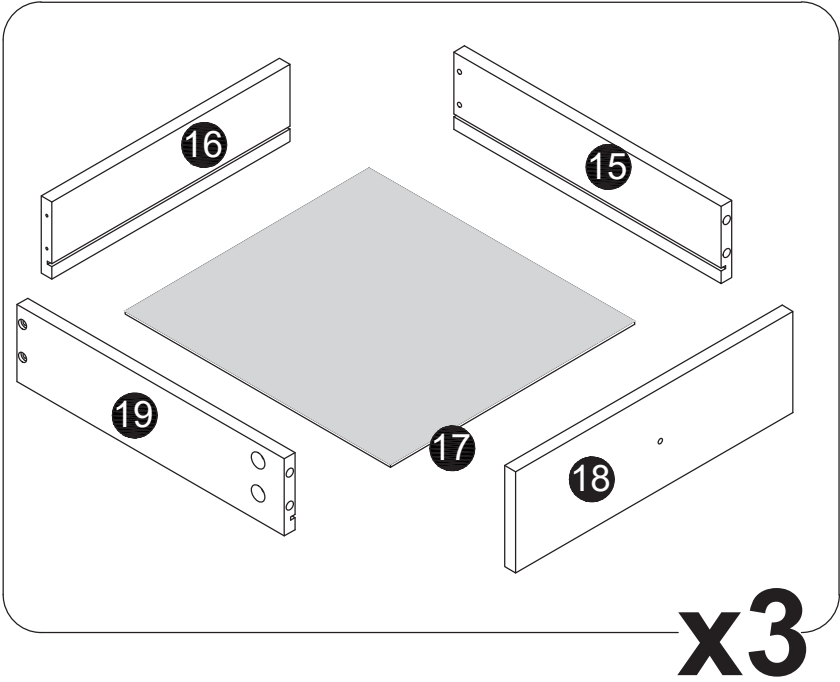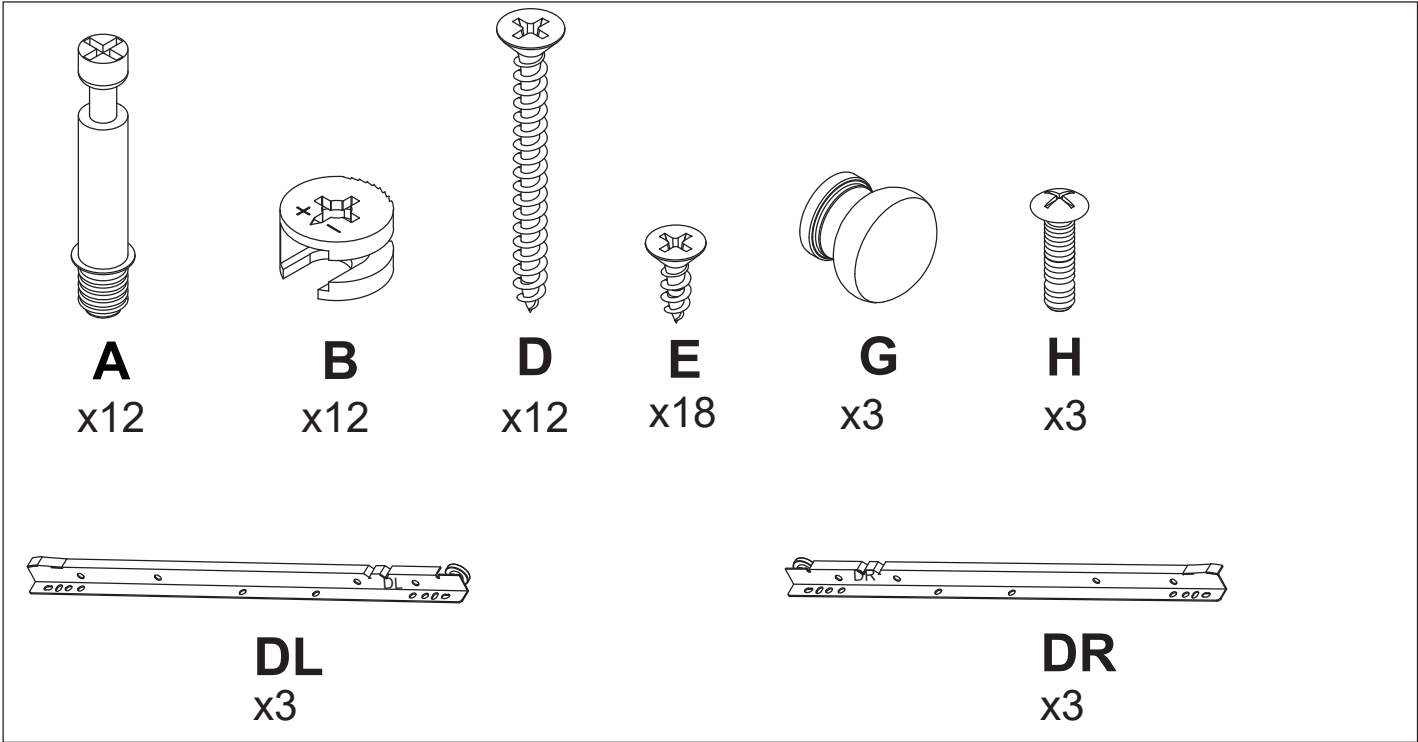


28 x3

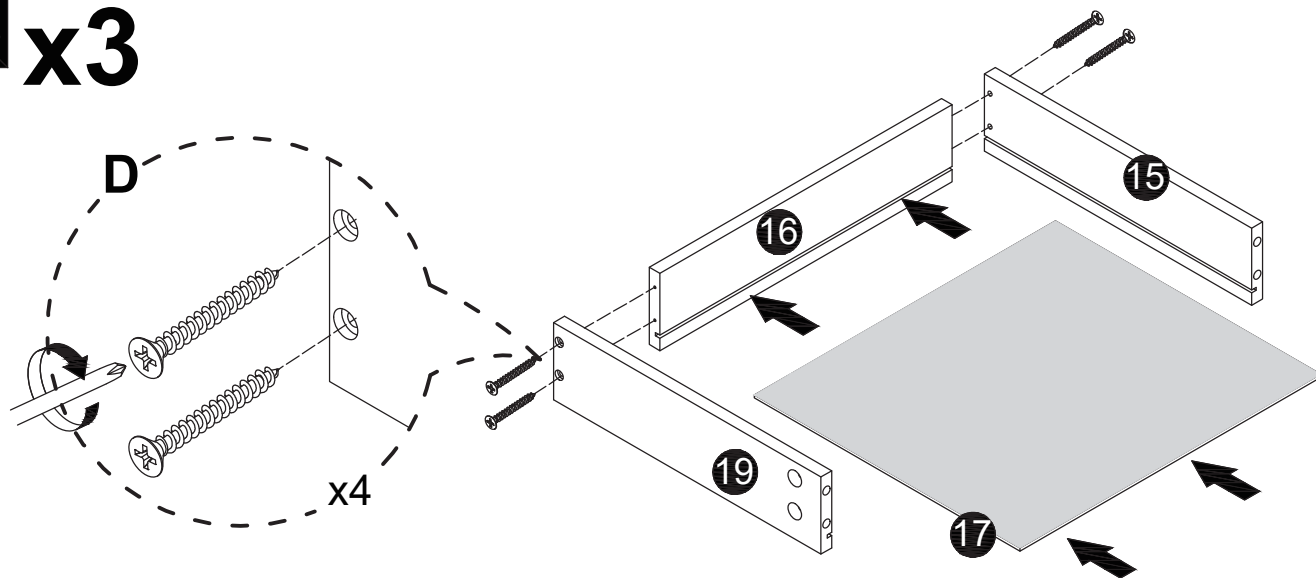


29 x3

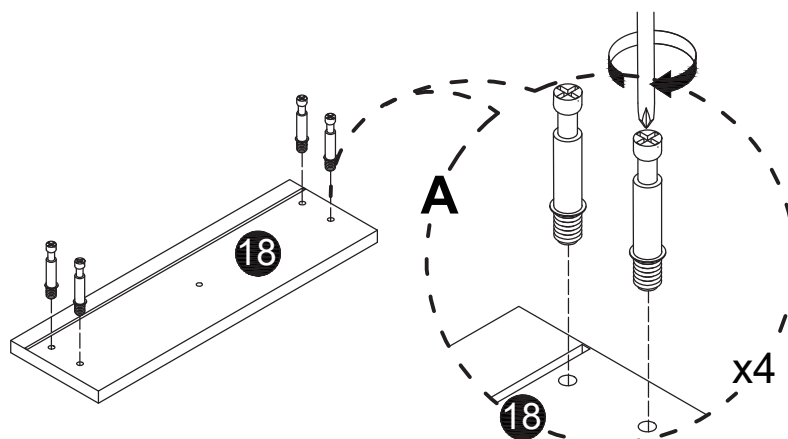


30 x3




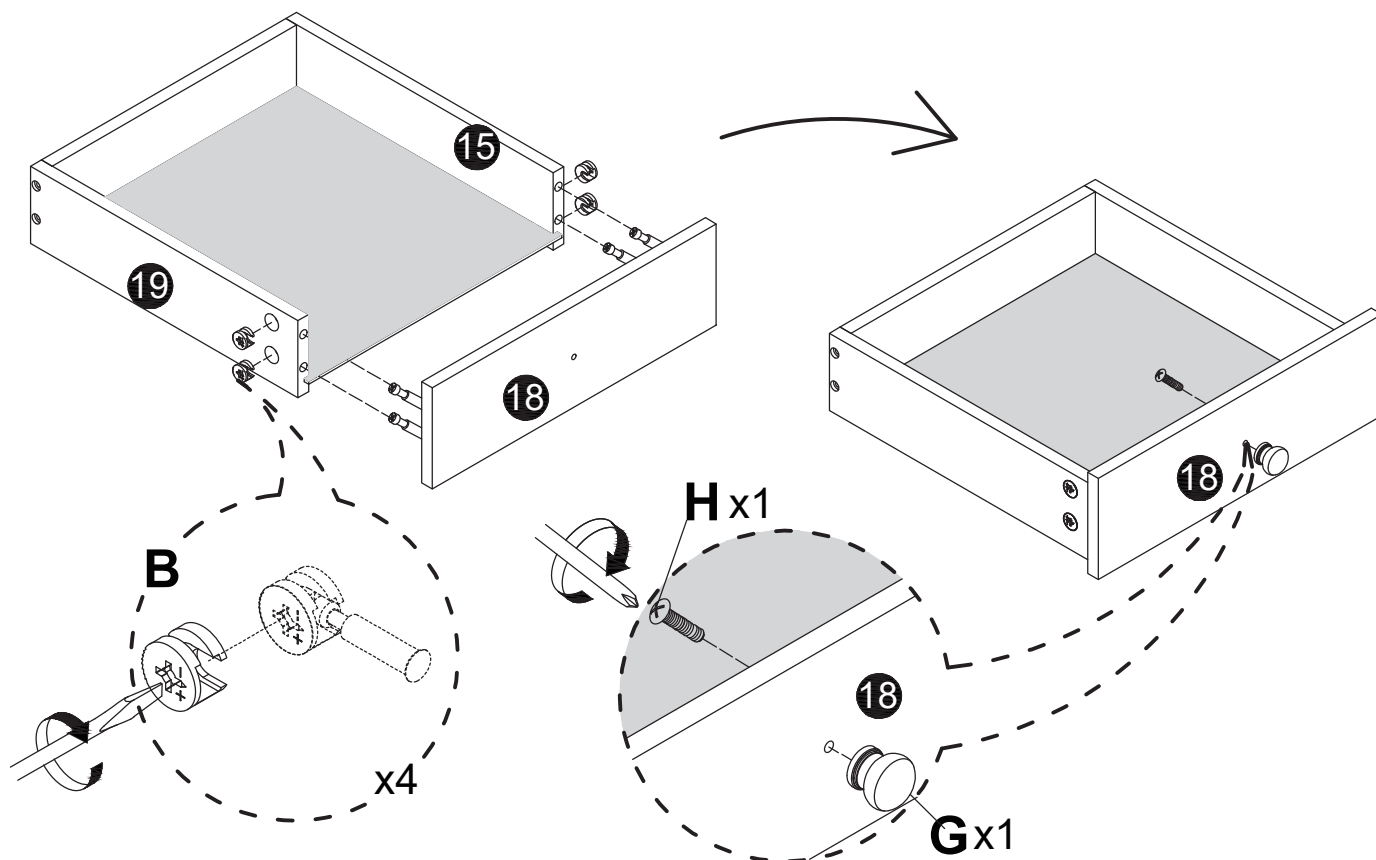


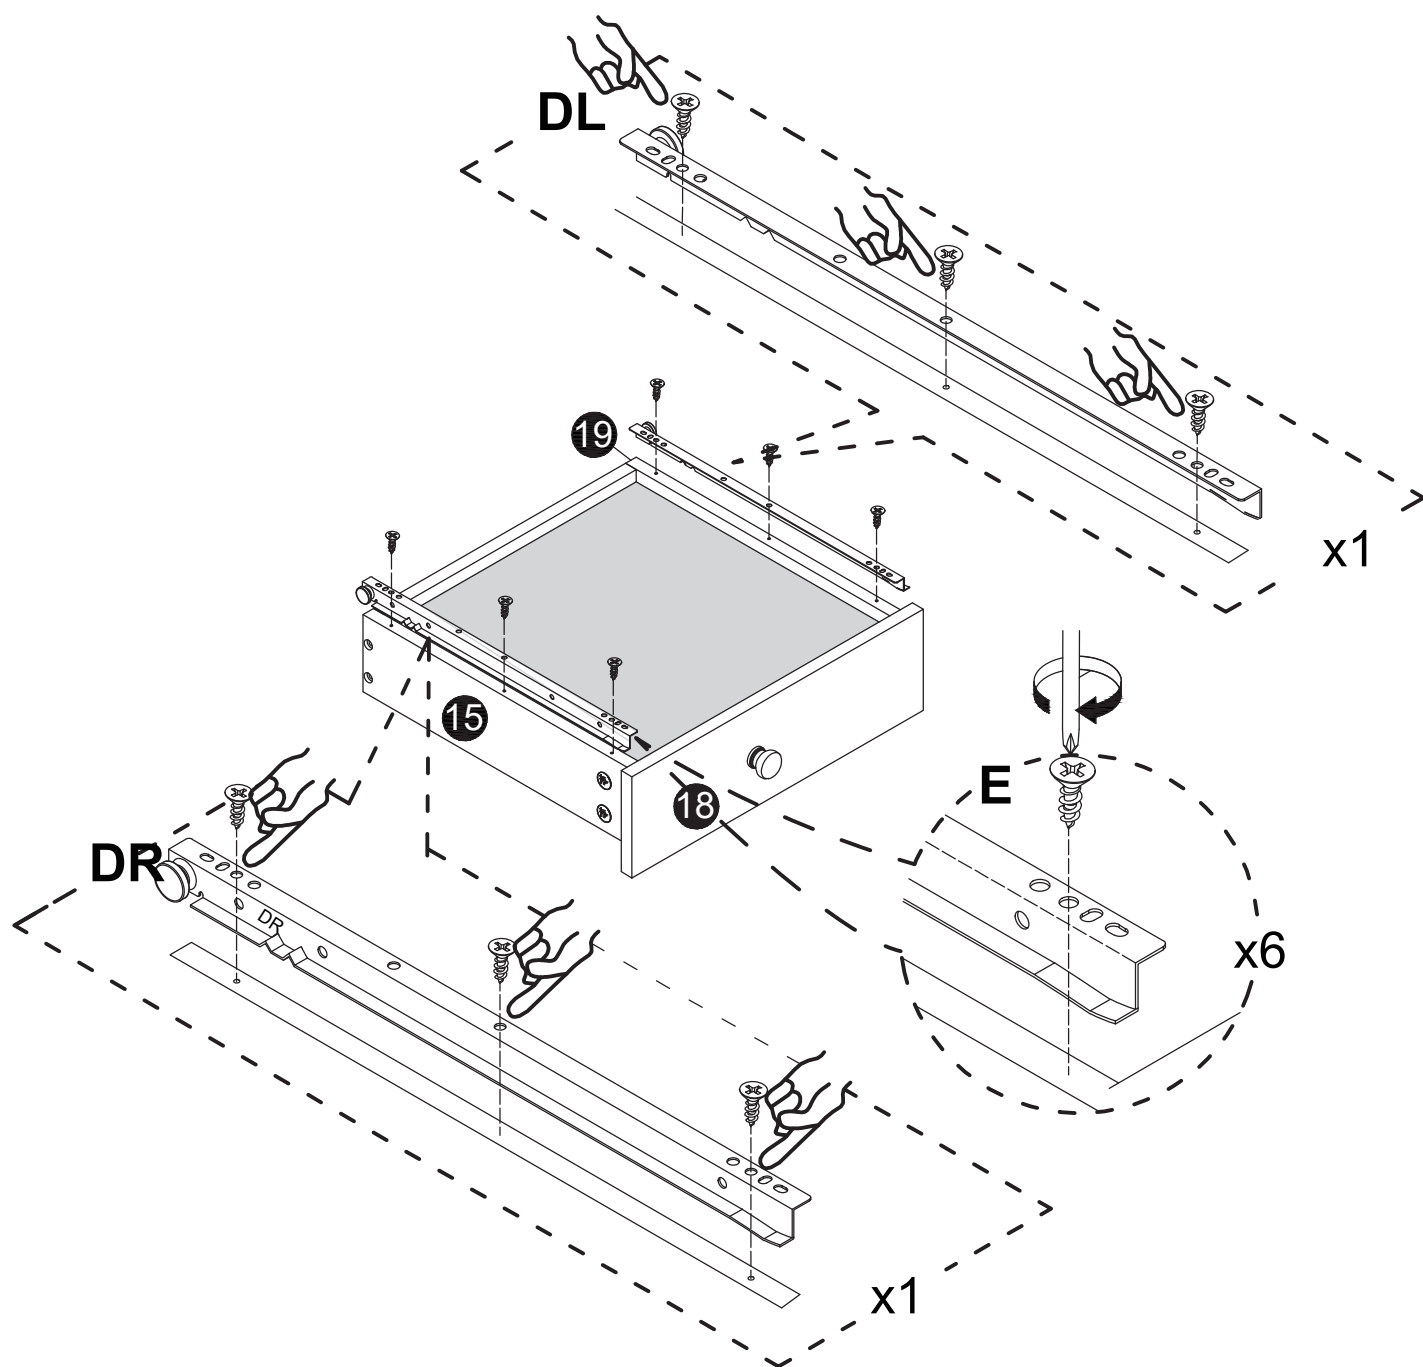


(1)

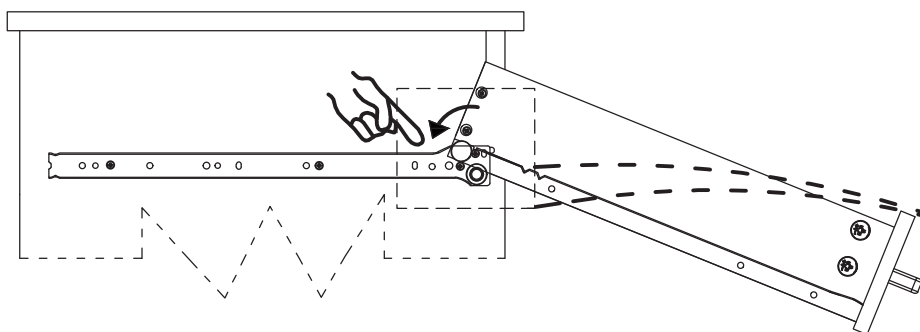

(2)

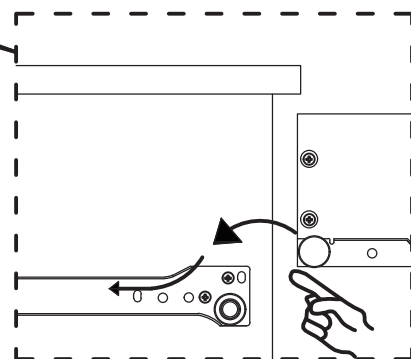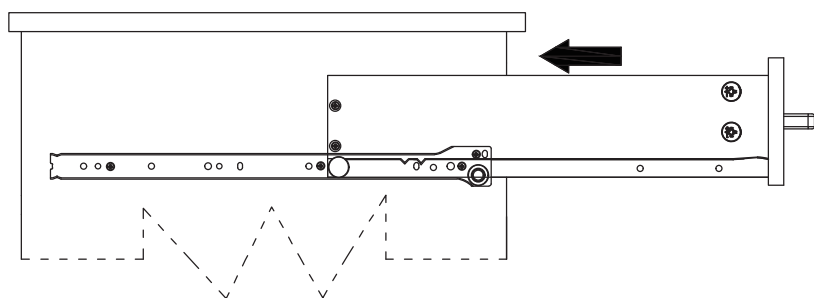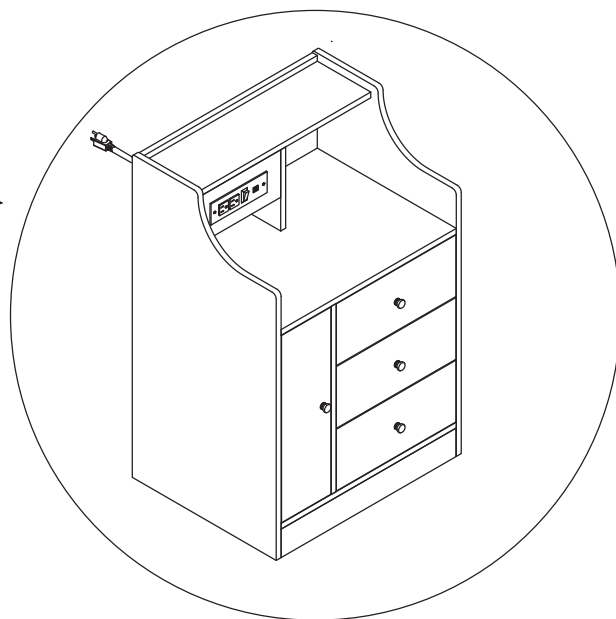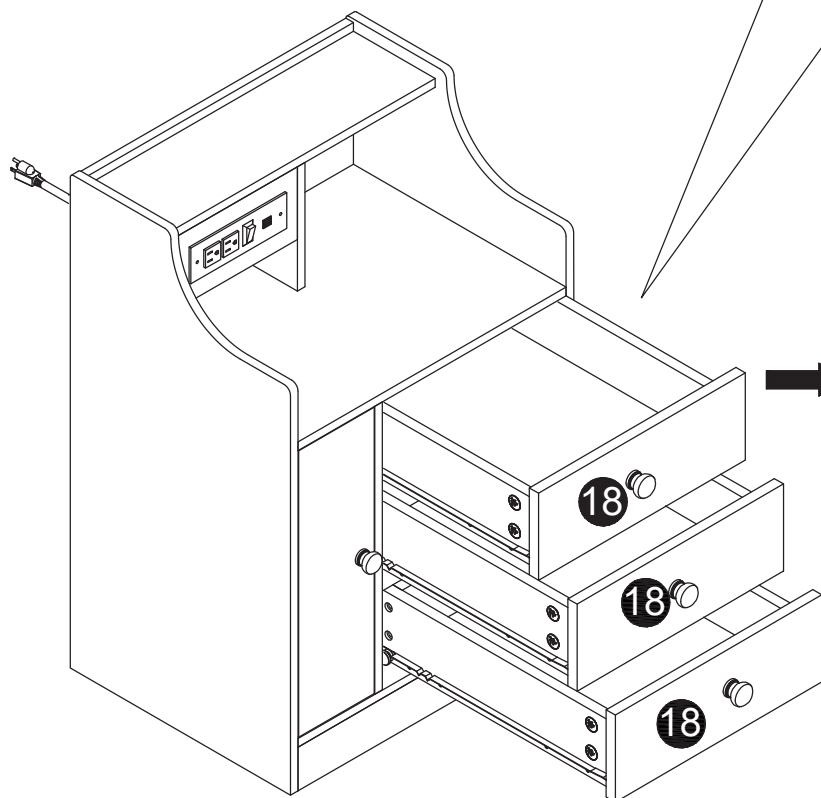**x3**

33

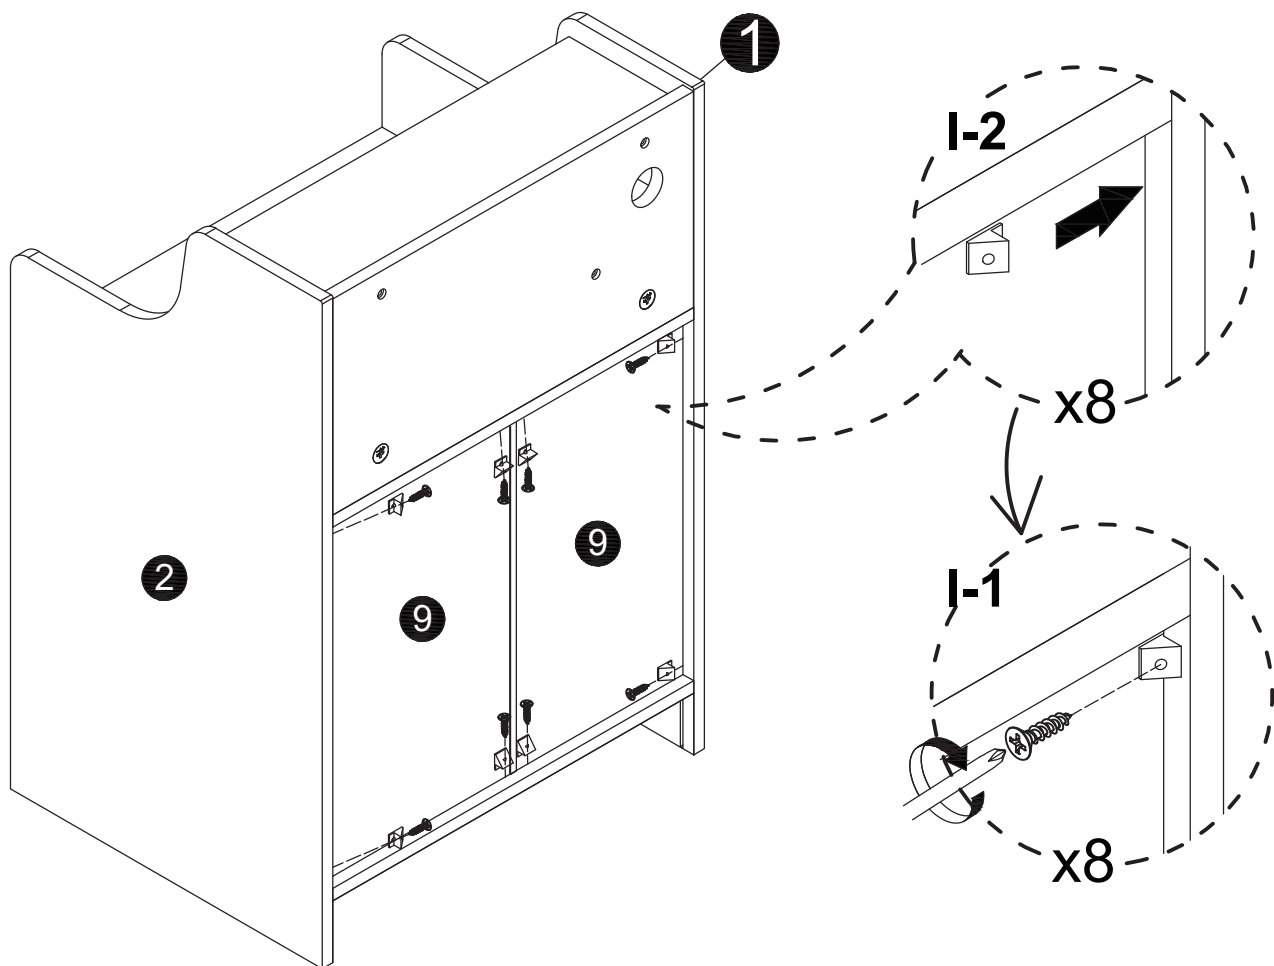

34

