


ITEM NO: M7021

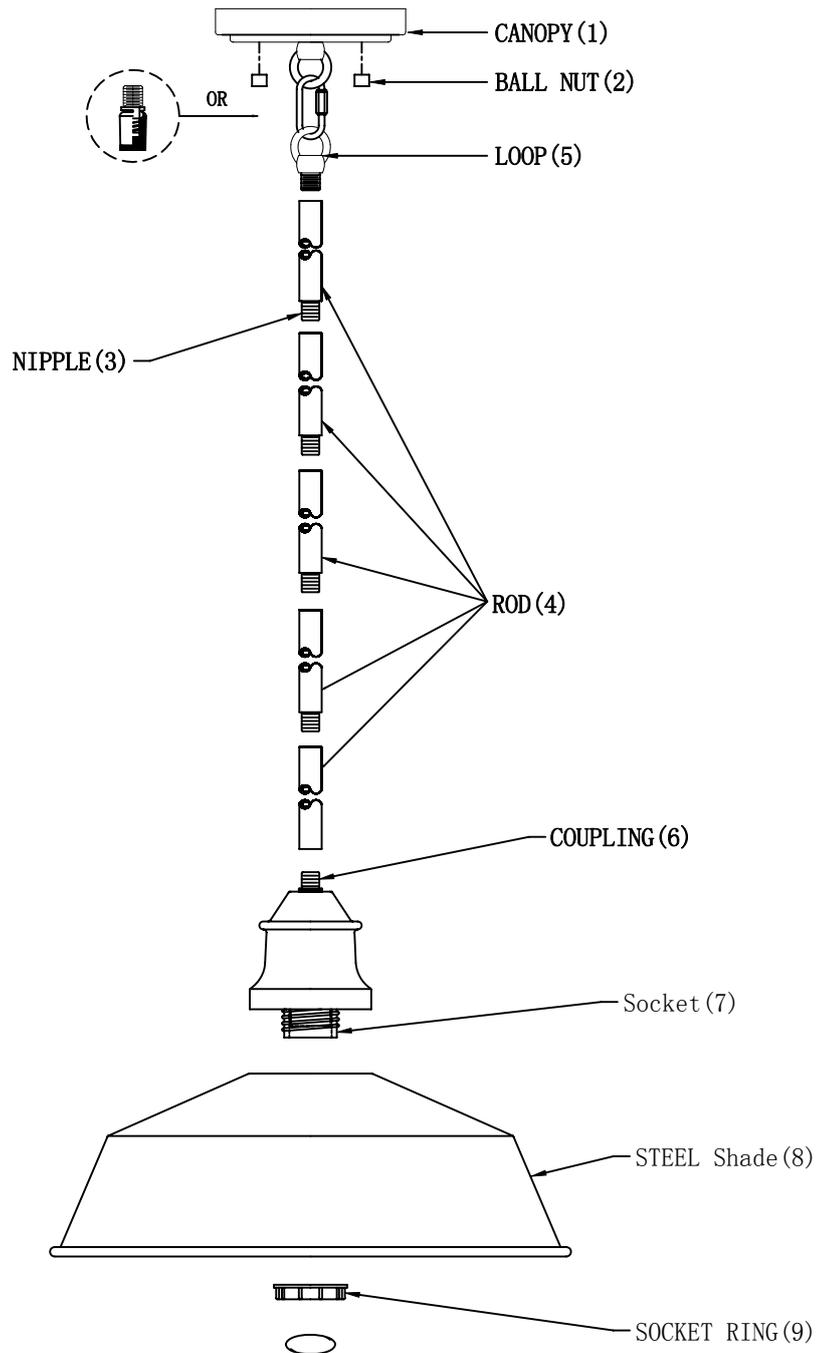

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. While threading wire through, assemble the rods(4) together using the nipples(3), then attach the bottom end of bottom rod(4) into the coupling(6) until hand tight.
4. Secure the loop(5) onto the top tube(4).
5. Install the steel shade(8), over the socket(7), Use socket ring (9) locking.
6. Use quick link to connect loop(5) to the loop on the canopy(1) and twist the locking mechanism to secure.
7. Refer to the additional installation instructions included with the product for wiring and installation.
8. Install proper bulbs(not included) into socket referring to the markings and/or labels on the fixture for maximum wattage.
9. Restore power to the installation point and retain this sheet for future reference.