




INSTALLATION

Product Manual

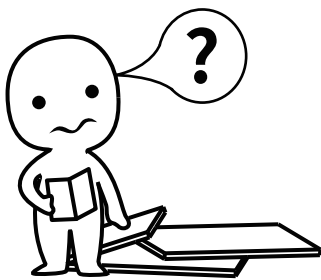


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

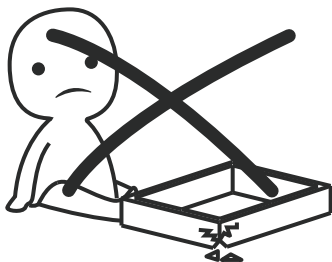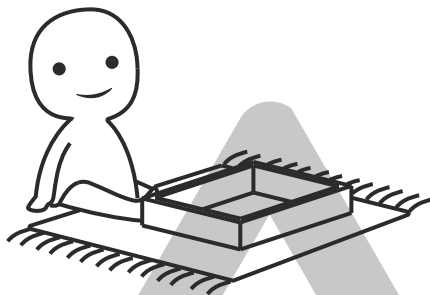



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

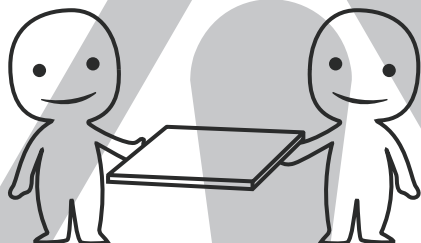

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

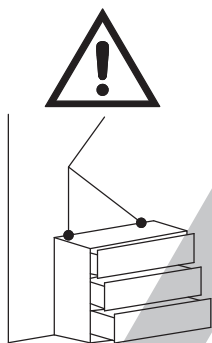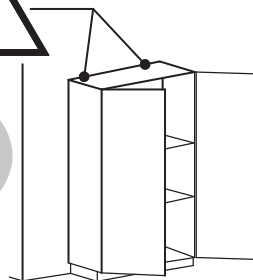

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

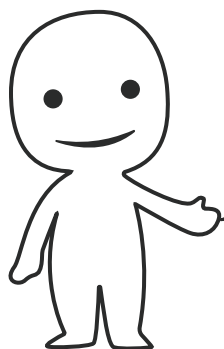


Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 118



M6 x 40 mm

B x 177




Ø15 x 9 mm

C x 303




M3.5 x 12 mm


D x 5

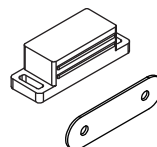


E x 4

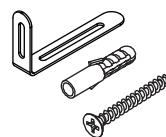


F x 4



G x 4




H x 20




M4 x 20 mm


J x 3

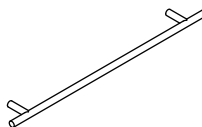

K x 7




L x 26

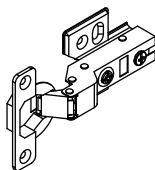

M x 101



N x 1

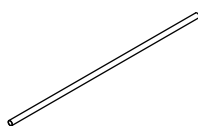


O x 2




P x 10




R x 2




S x 1

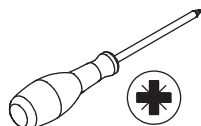

T x 51



M6 x 40 mm

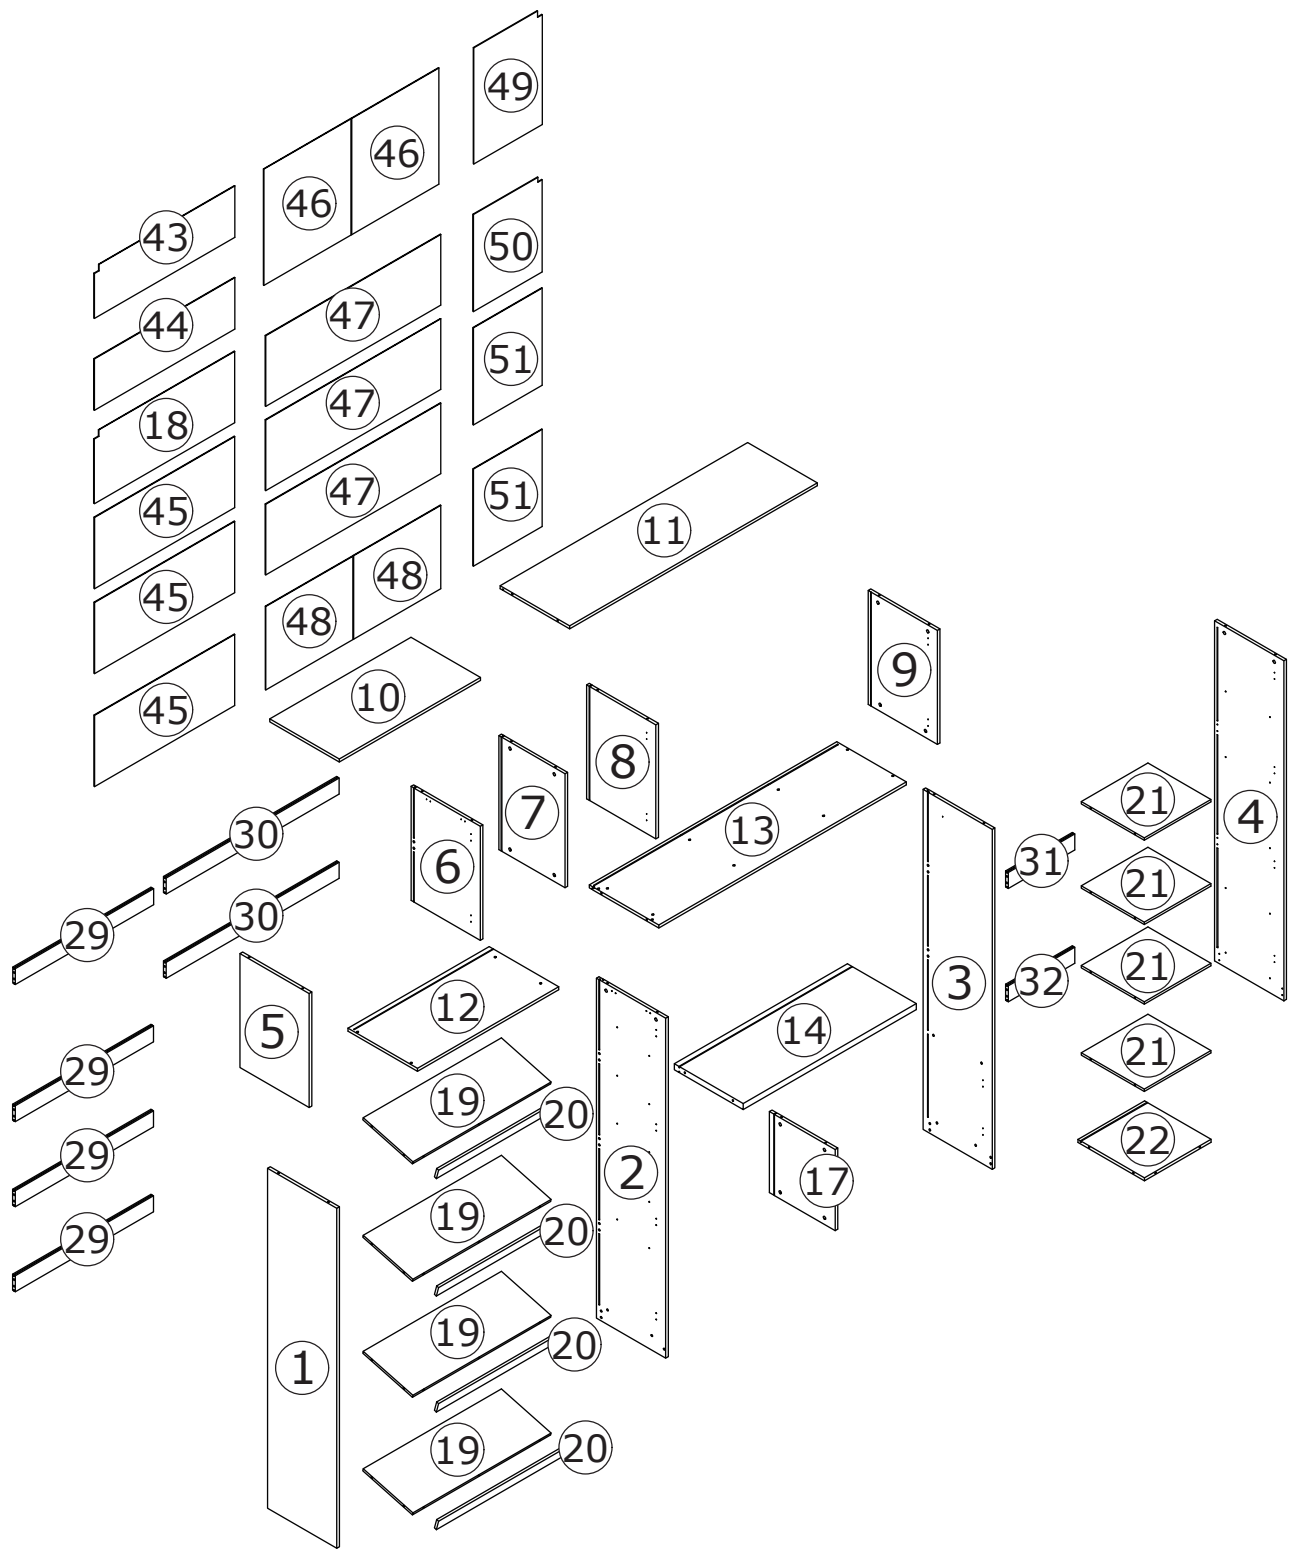


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

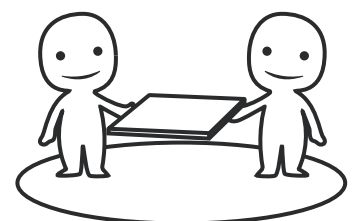

ASSEMBLED BY 2 ADULTS

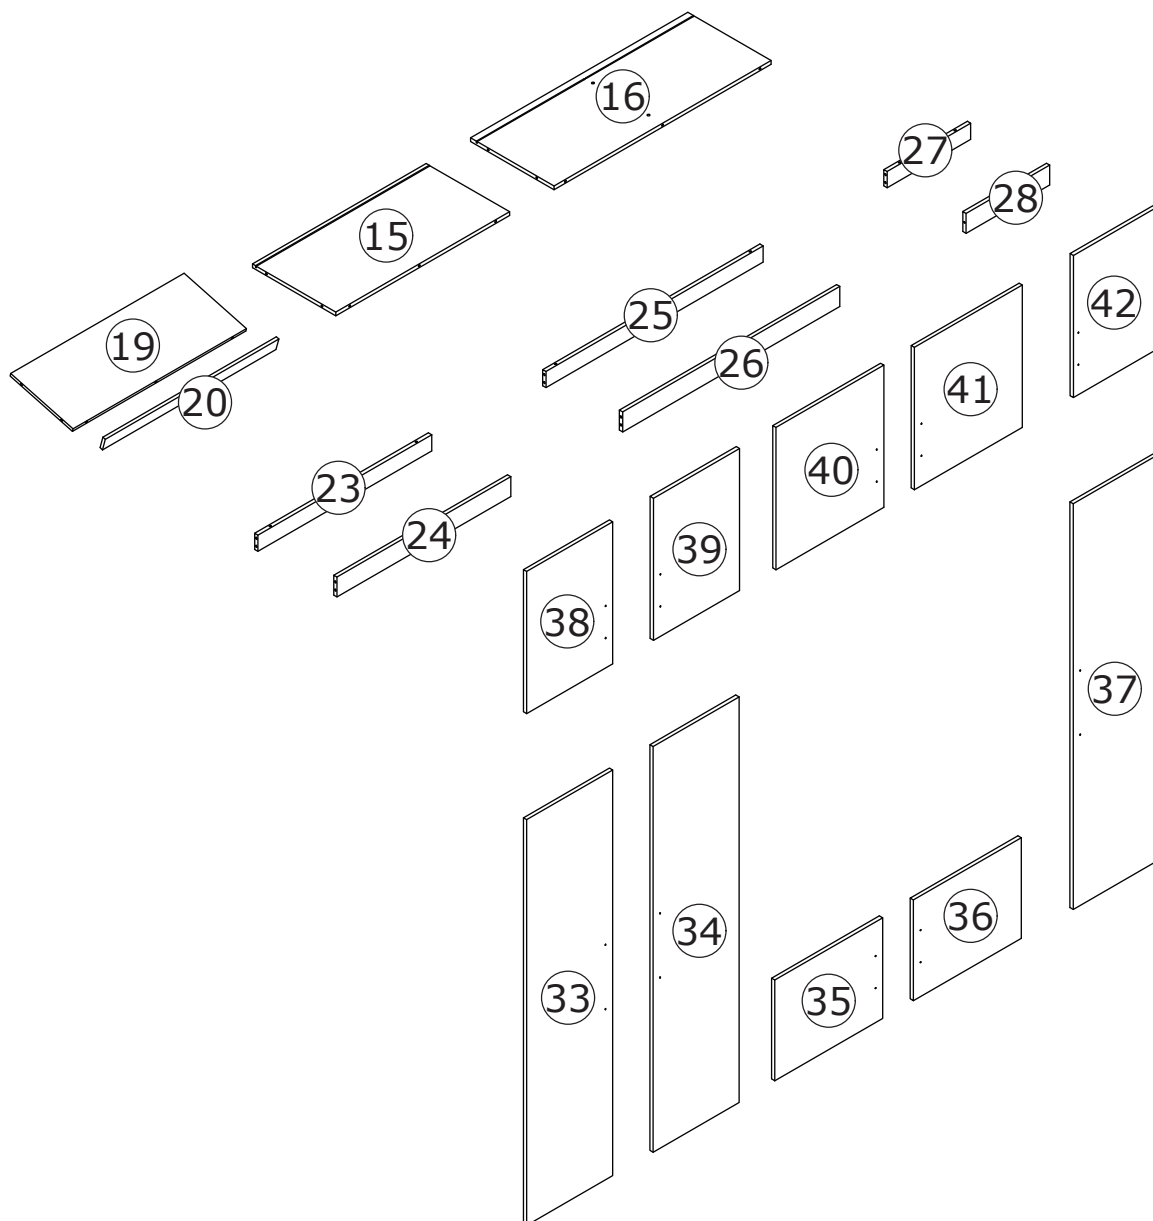


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*


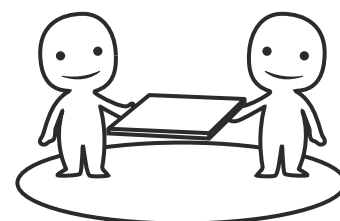


ASSEMBLED BY 2 ADULTS

1

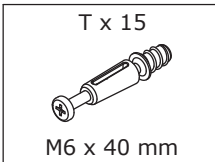



Screw eccentric rod (T) to part 20.

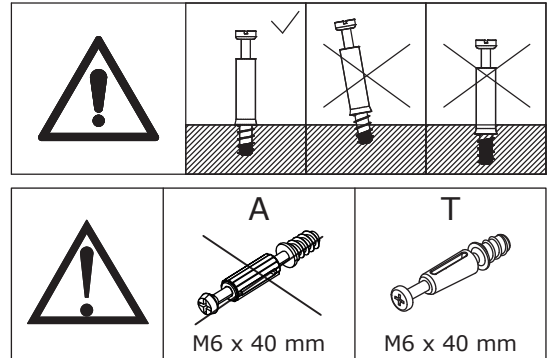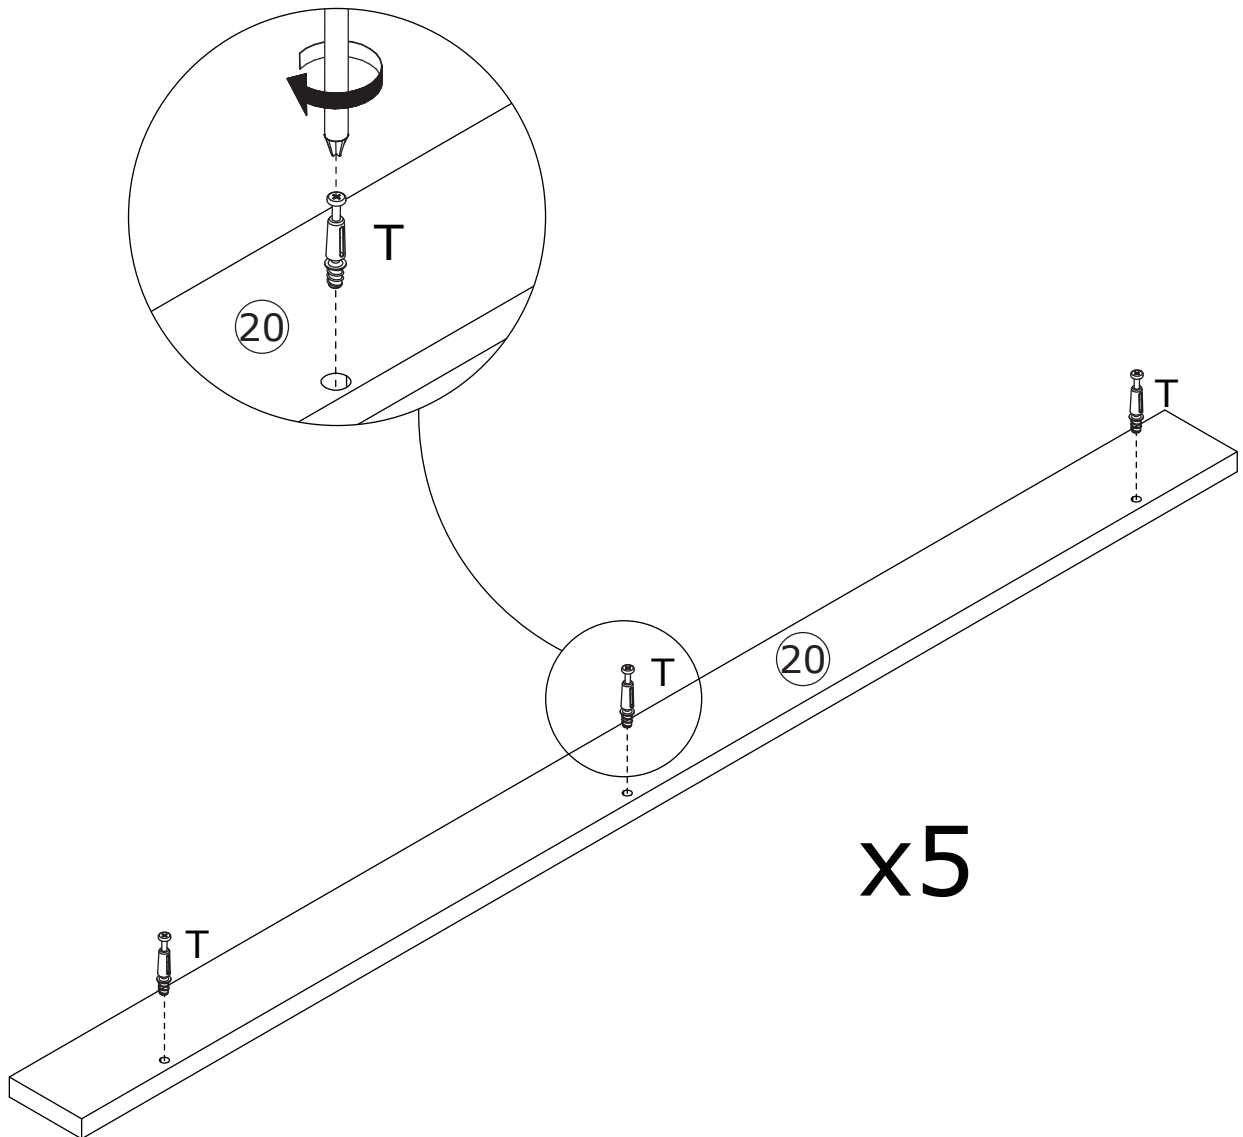


2

B x 15


 Ø15 x 9 mm

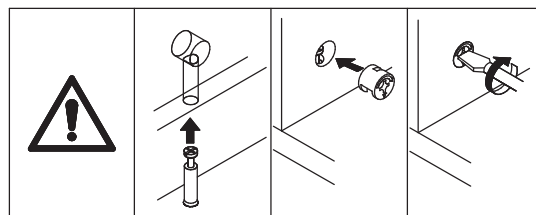


Connect parts 19 and 20, then tighten by turning cam lock (B) clockwise.

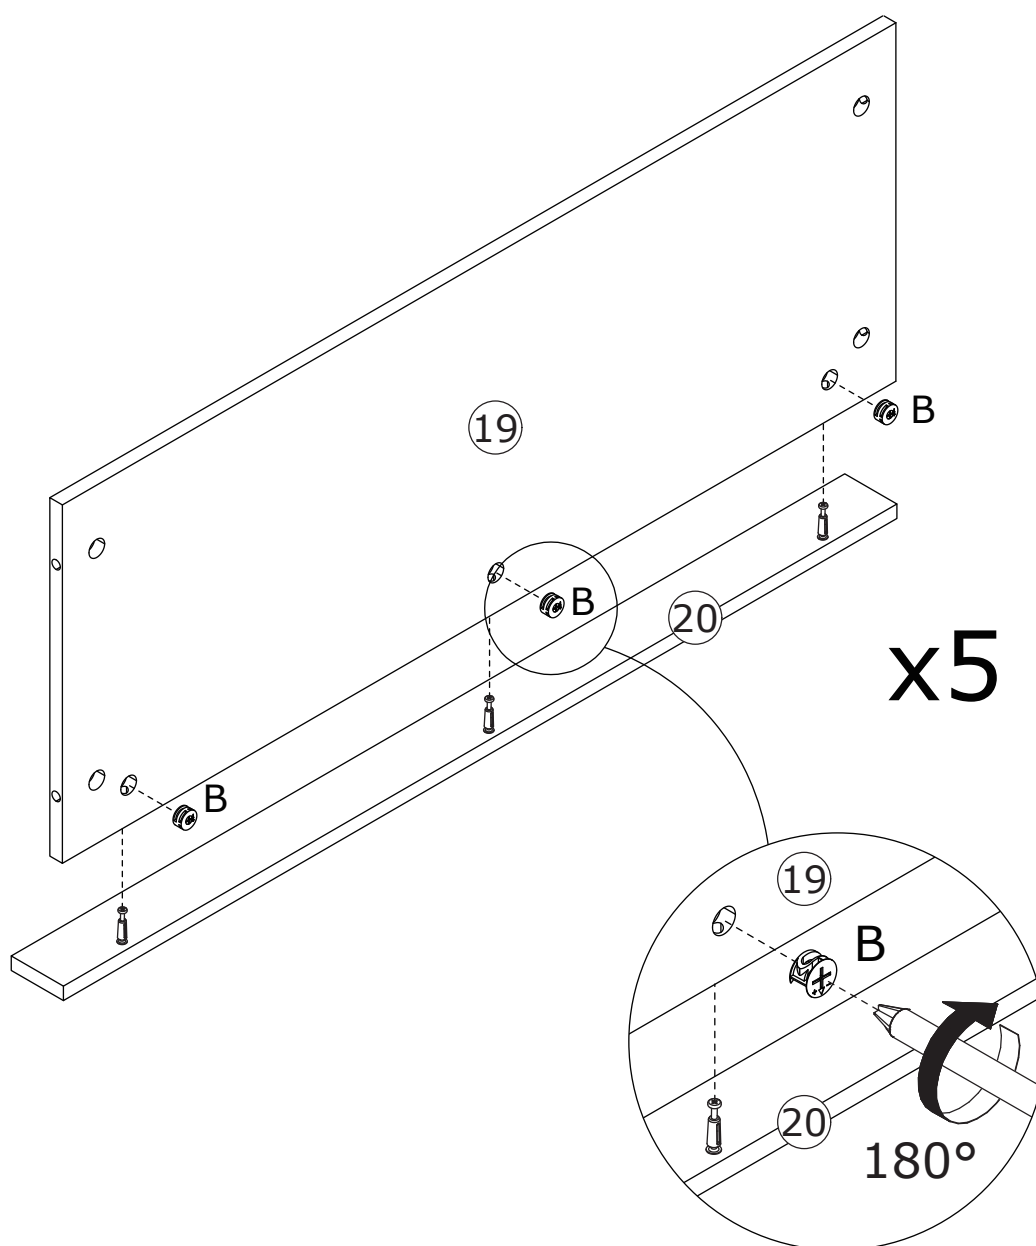

3

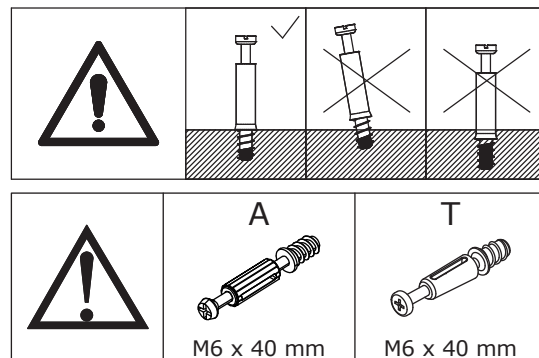

Screw eccentric rod (T) and (A) (be sure their corresponding holes)




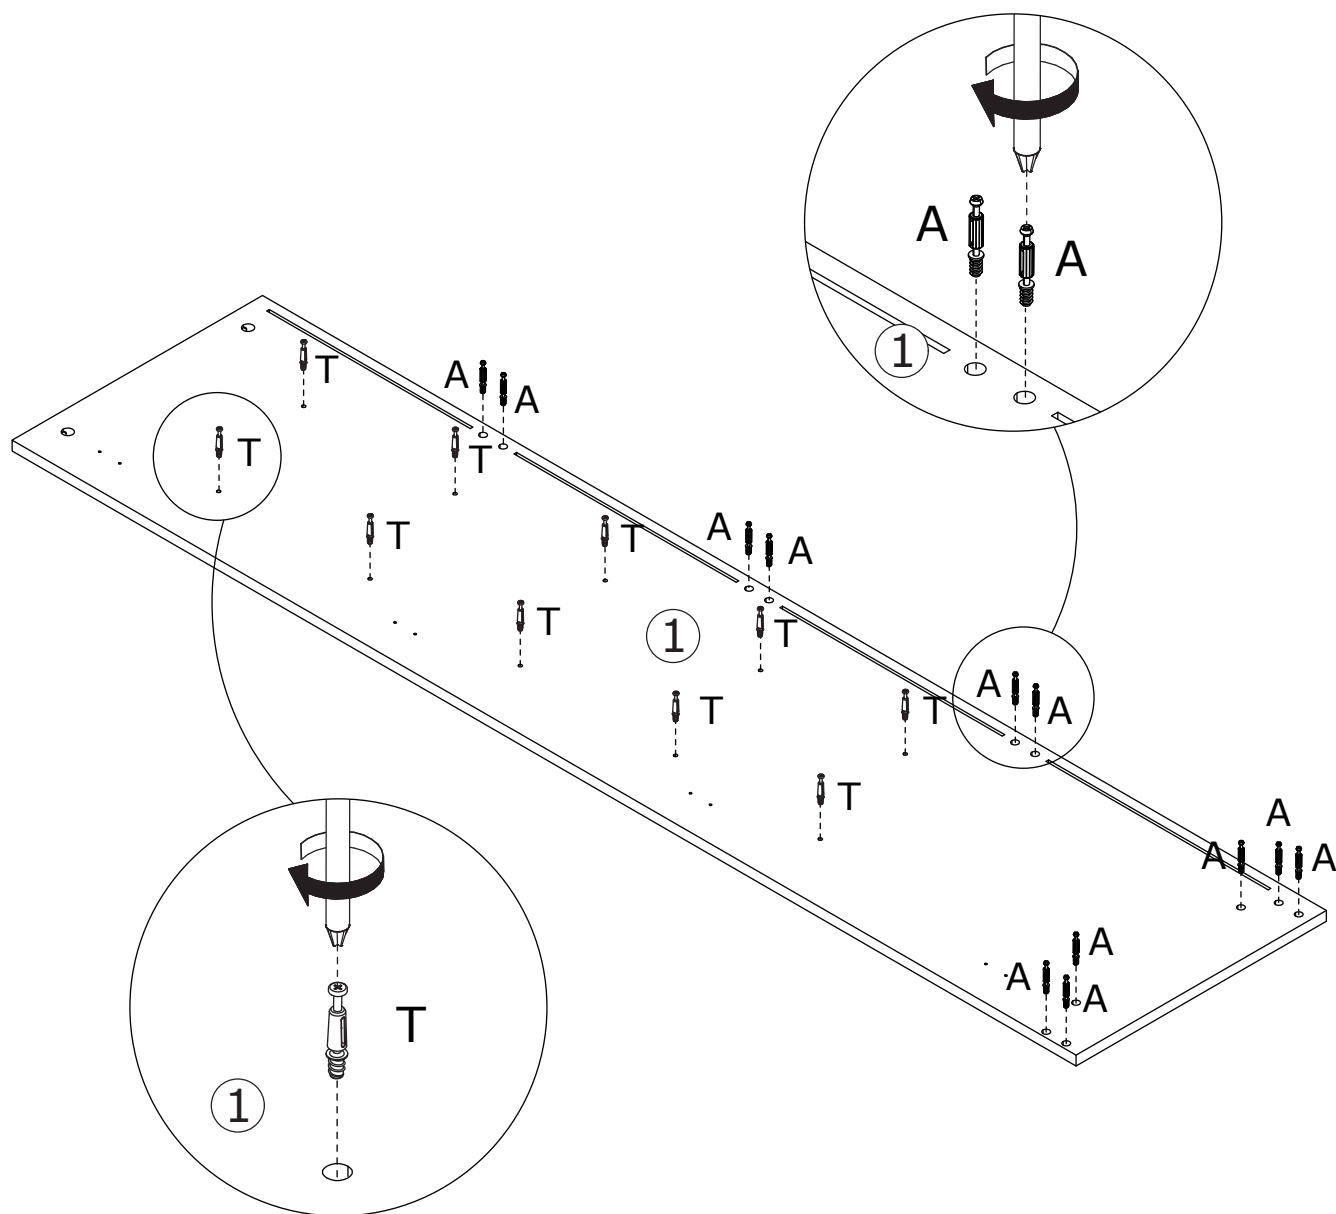


4


B x 10



Ø15 x 9 mm

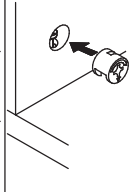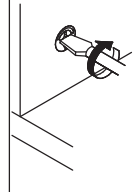

Connect parts 19 and 20 to part 1, then tighten by turning cam lock (B) clockwise.

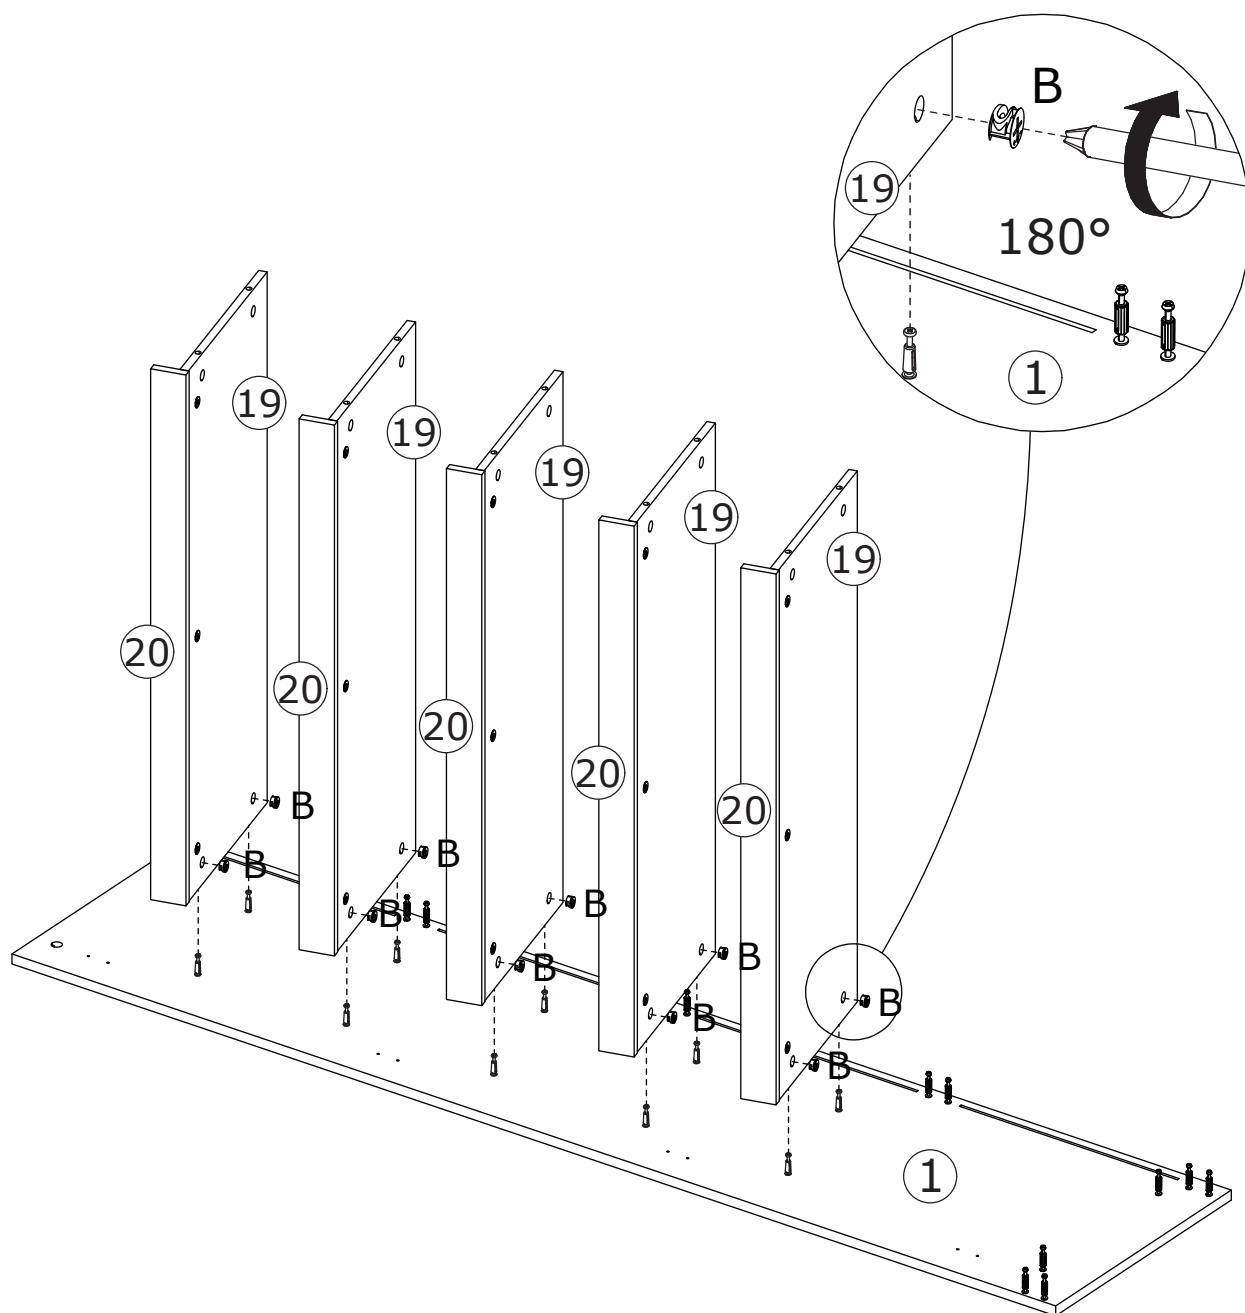


5


B x 6





Ø15 x 9 mm



Connect parts 29 and 1, then tighten by turning cam lock (B) clockwise.


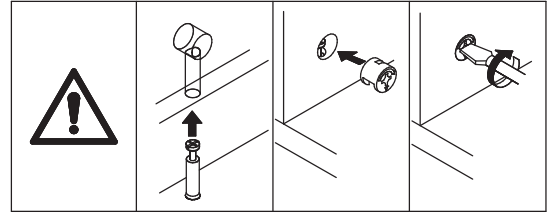


To make installation easier and prevent overhanging panels from breaking, you can use this foam or panel as a spacer at the points where the panels will be installed overhanging, and then secure them in place.

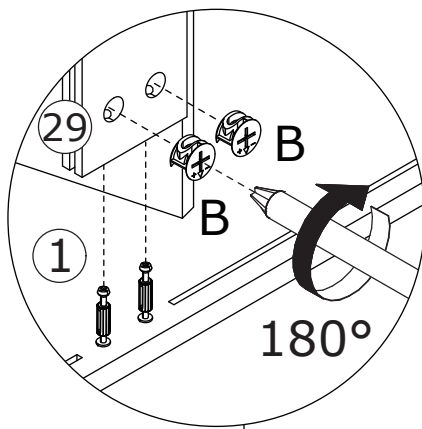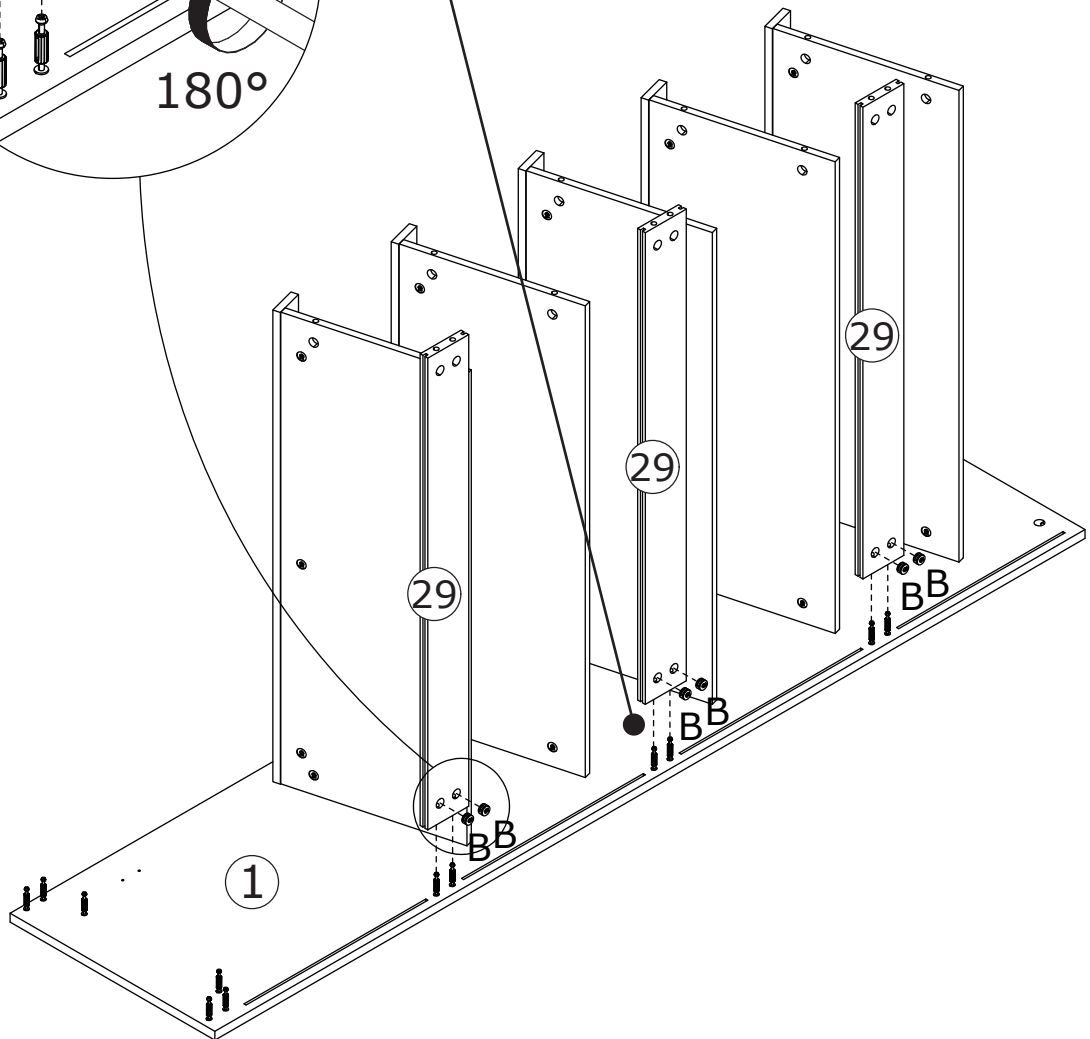


6

A x 3
M6 x 40 mm



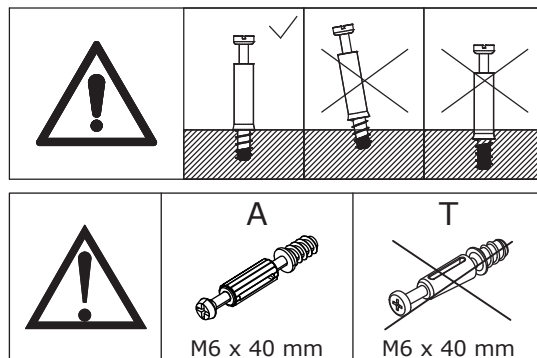


Screw eccentric rod (A) to part 24.

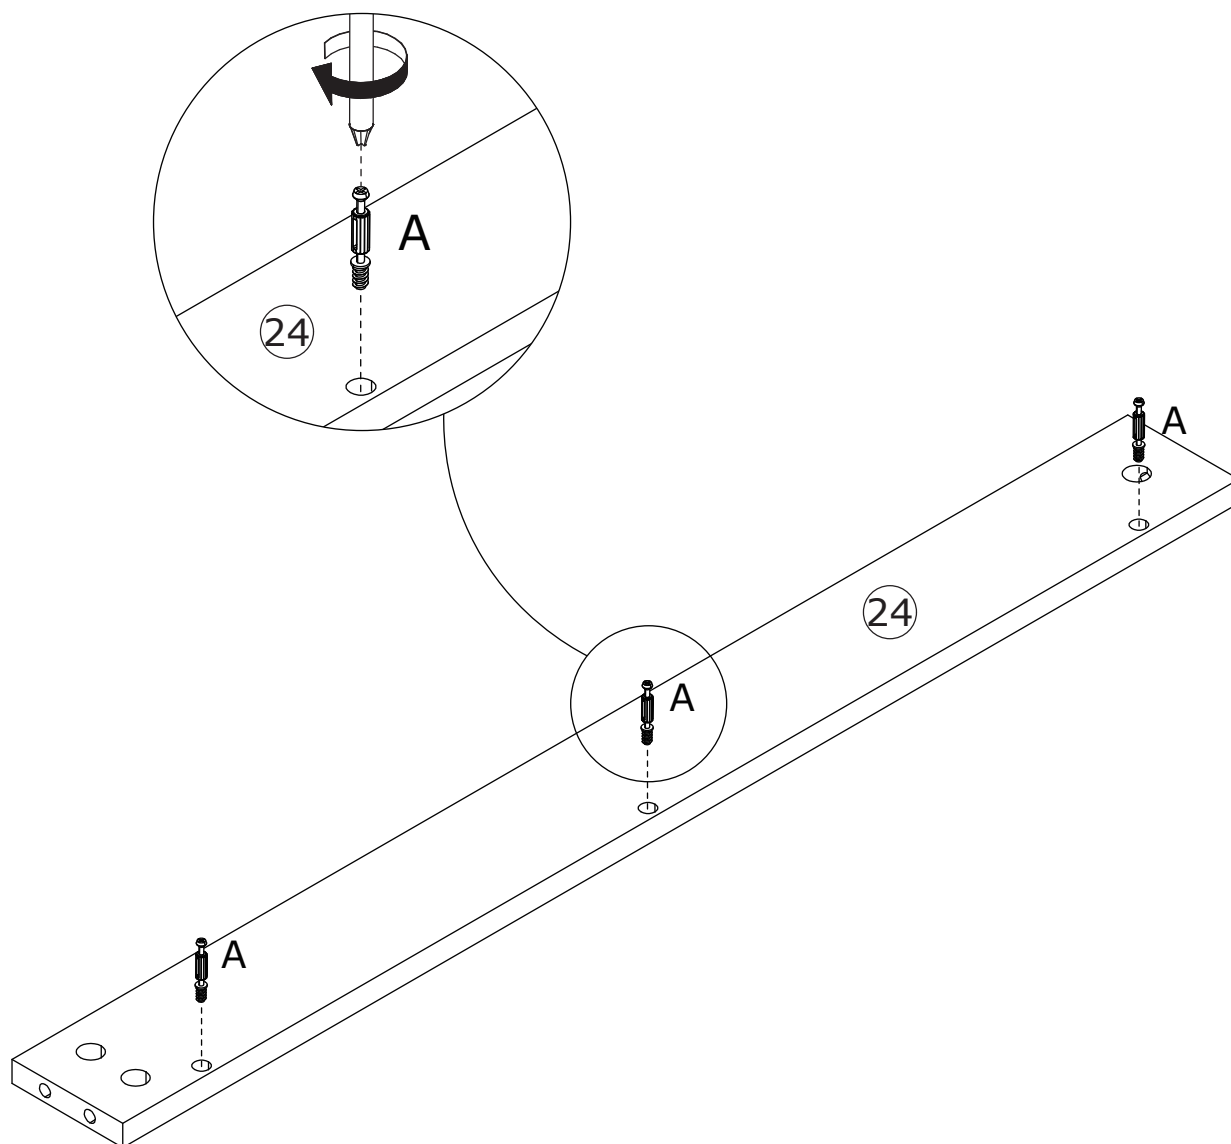


7

A x 3
M6 x 40 mm

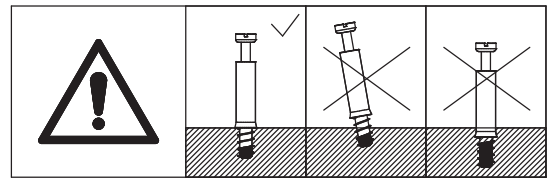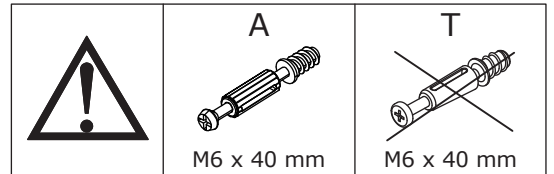



Screw eccentric rod (A) to part 15.

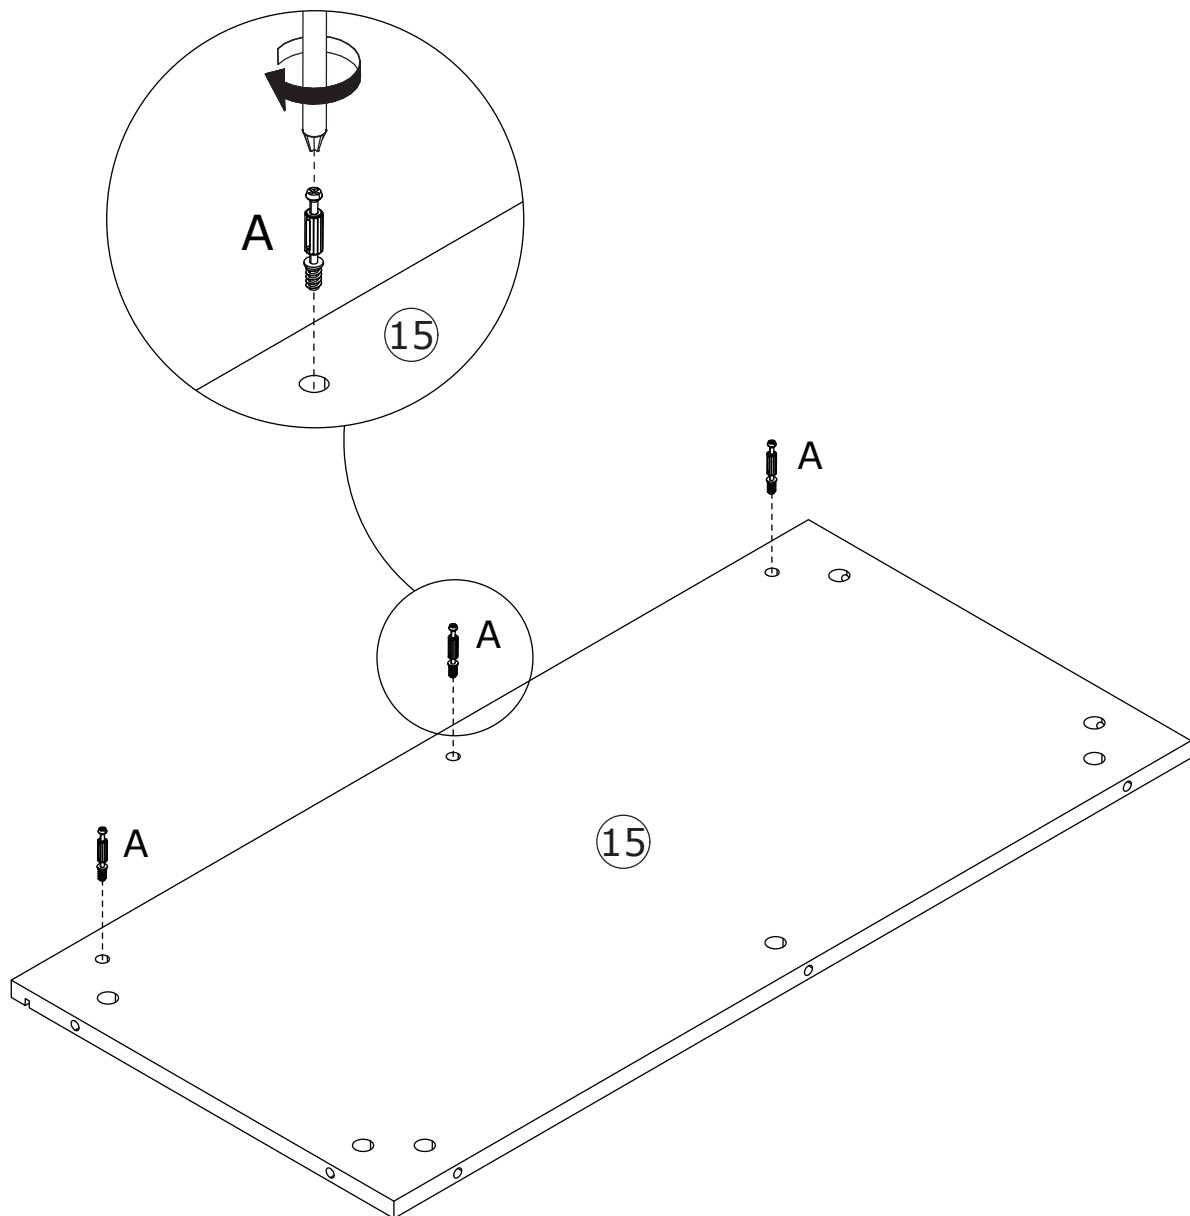


8

B x 6



 Ø15 x 9 mm

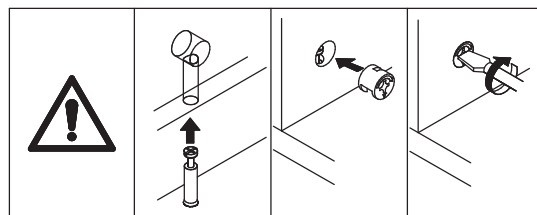


Connect parts 24 and 23 to part 15, then tighten by turning cam lock (B) clockwise.

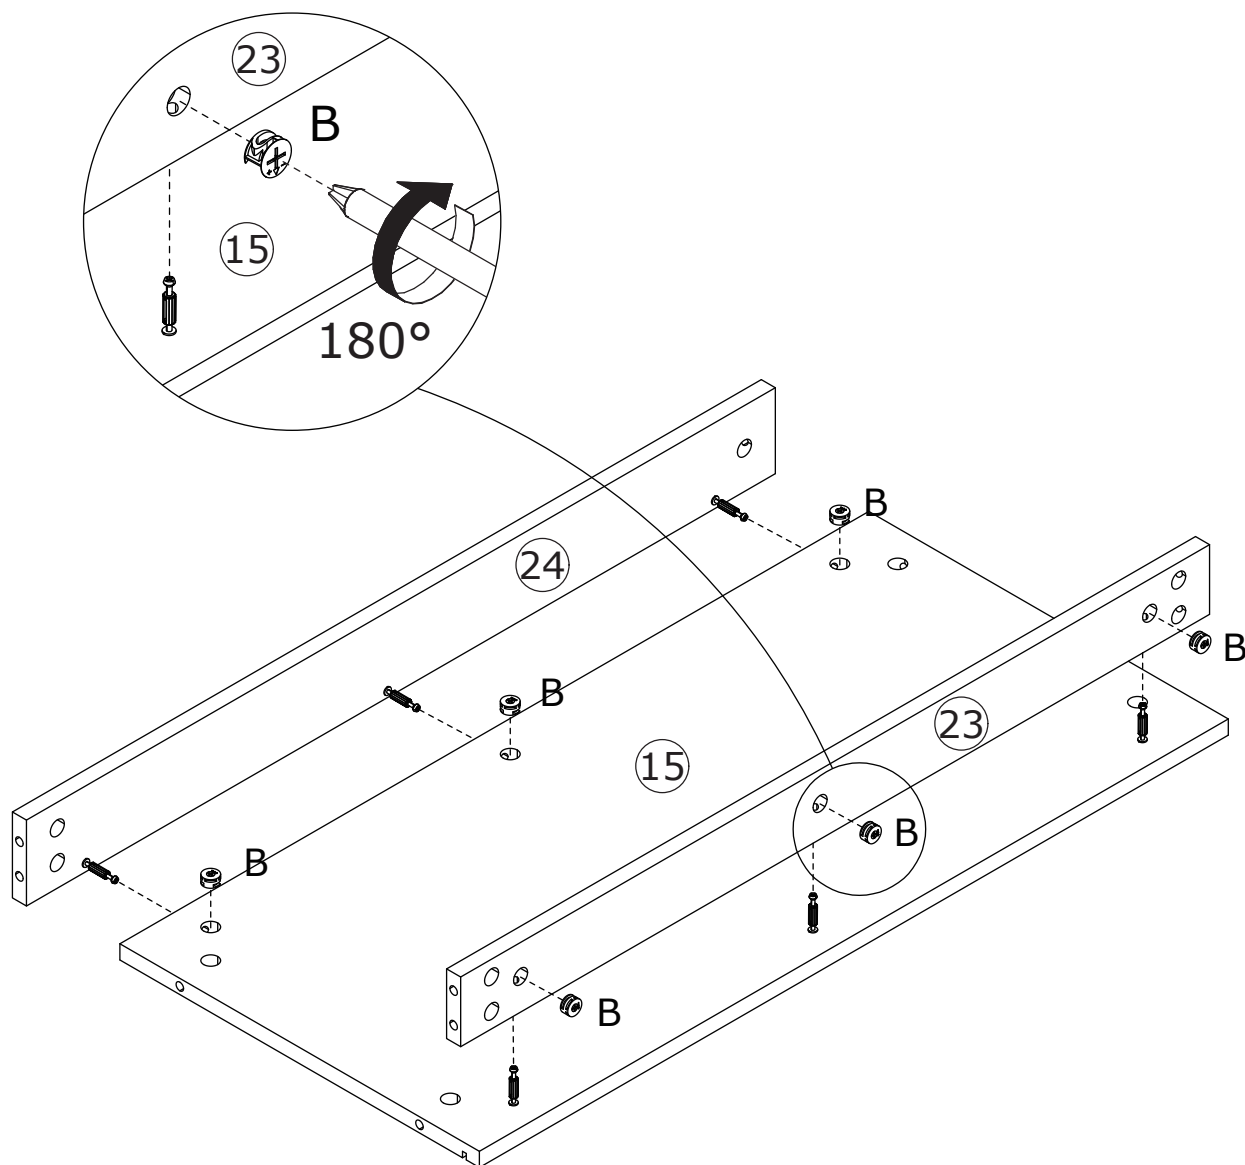


9

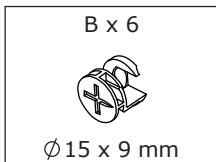

Connect parts 24, 23, and 15 to part 1,
then tighten by turning cam lock (B)
clockwise.

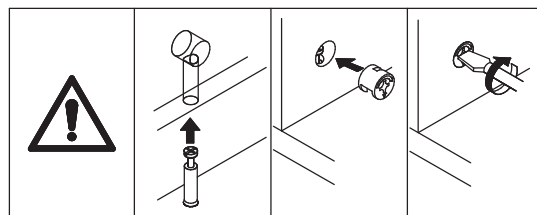


To make installation easier and prevent overhanging
panels from breaking, you can use this foam or panel
as a spacer at the points where the panels will be
installed overhanging, and then secure them in place.

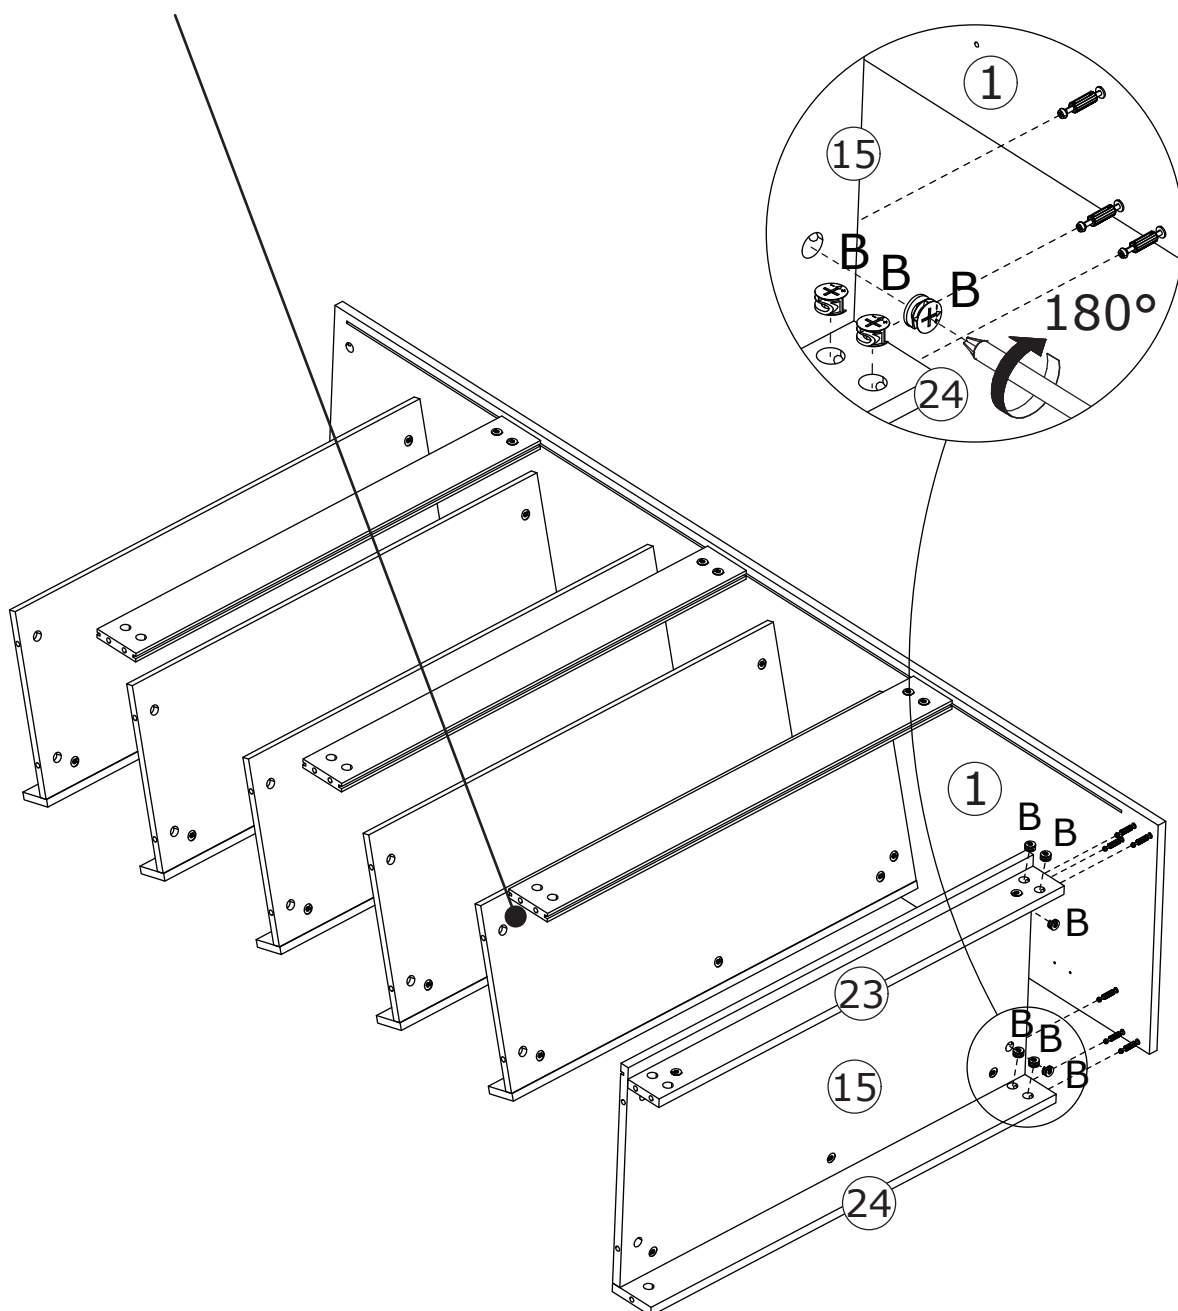




10

Insert part 15 along the available grooves.


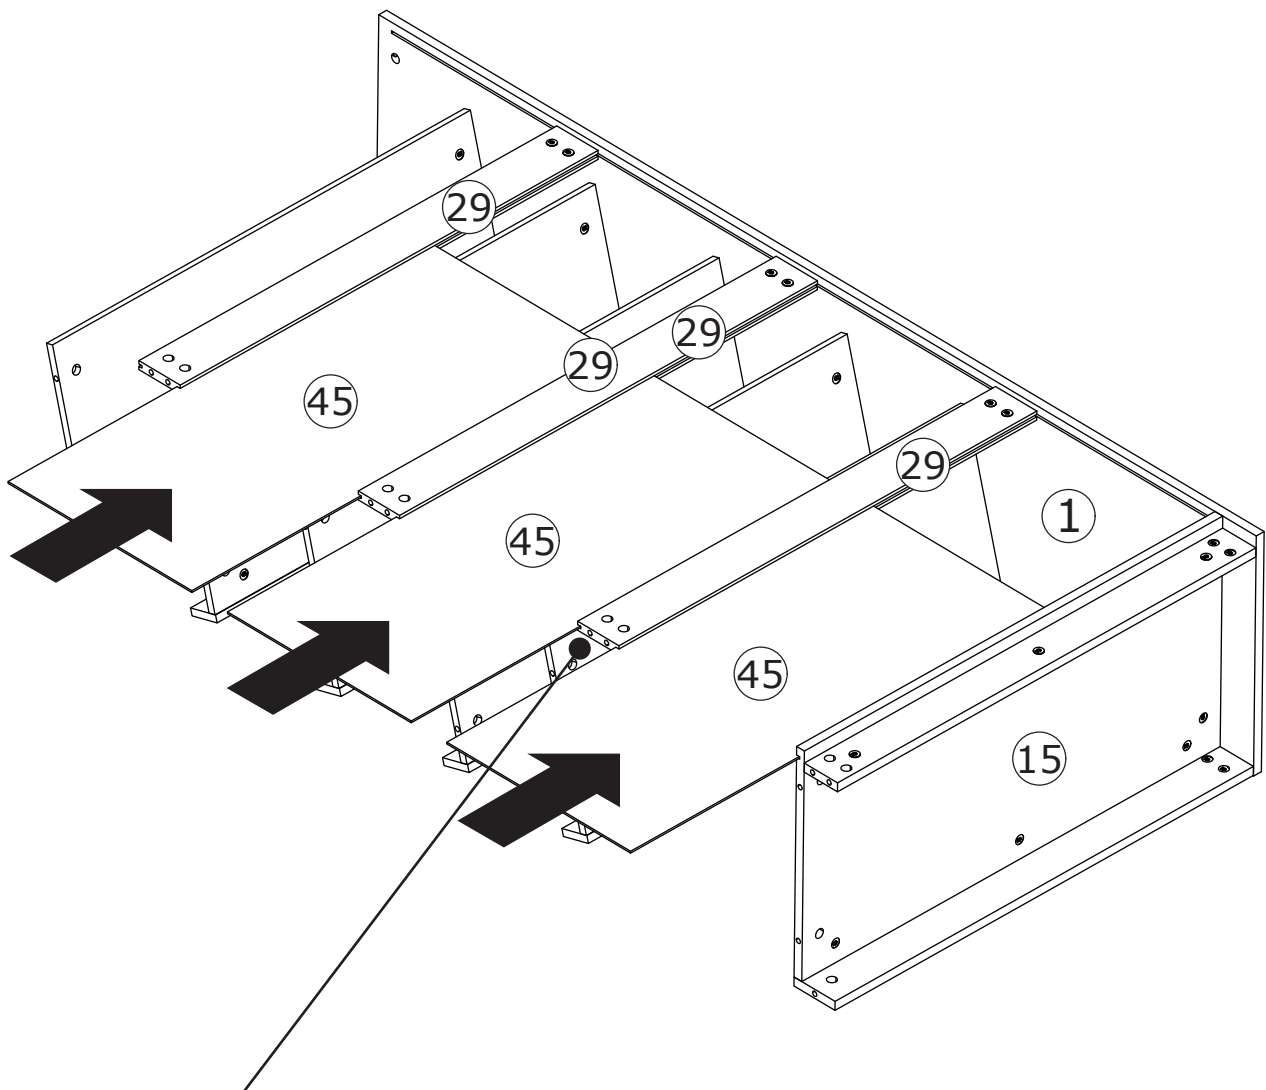


To make installation easier and prevent overhanging panels from breaking, you can use this foam or panel as a spacer at the points where the panels will be installed overhanging, and then secure them in place.

11

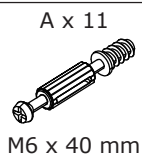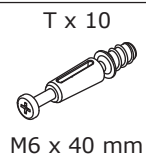



Screw eccentric rod (T) and (A) (be sure their corresponding holes) to part 2.

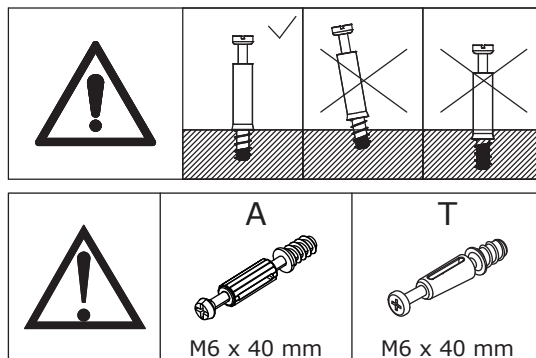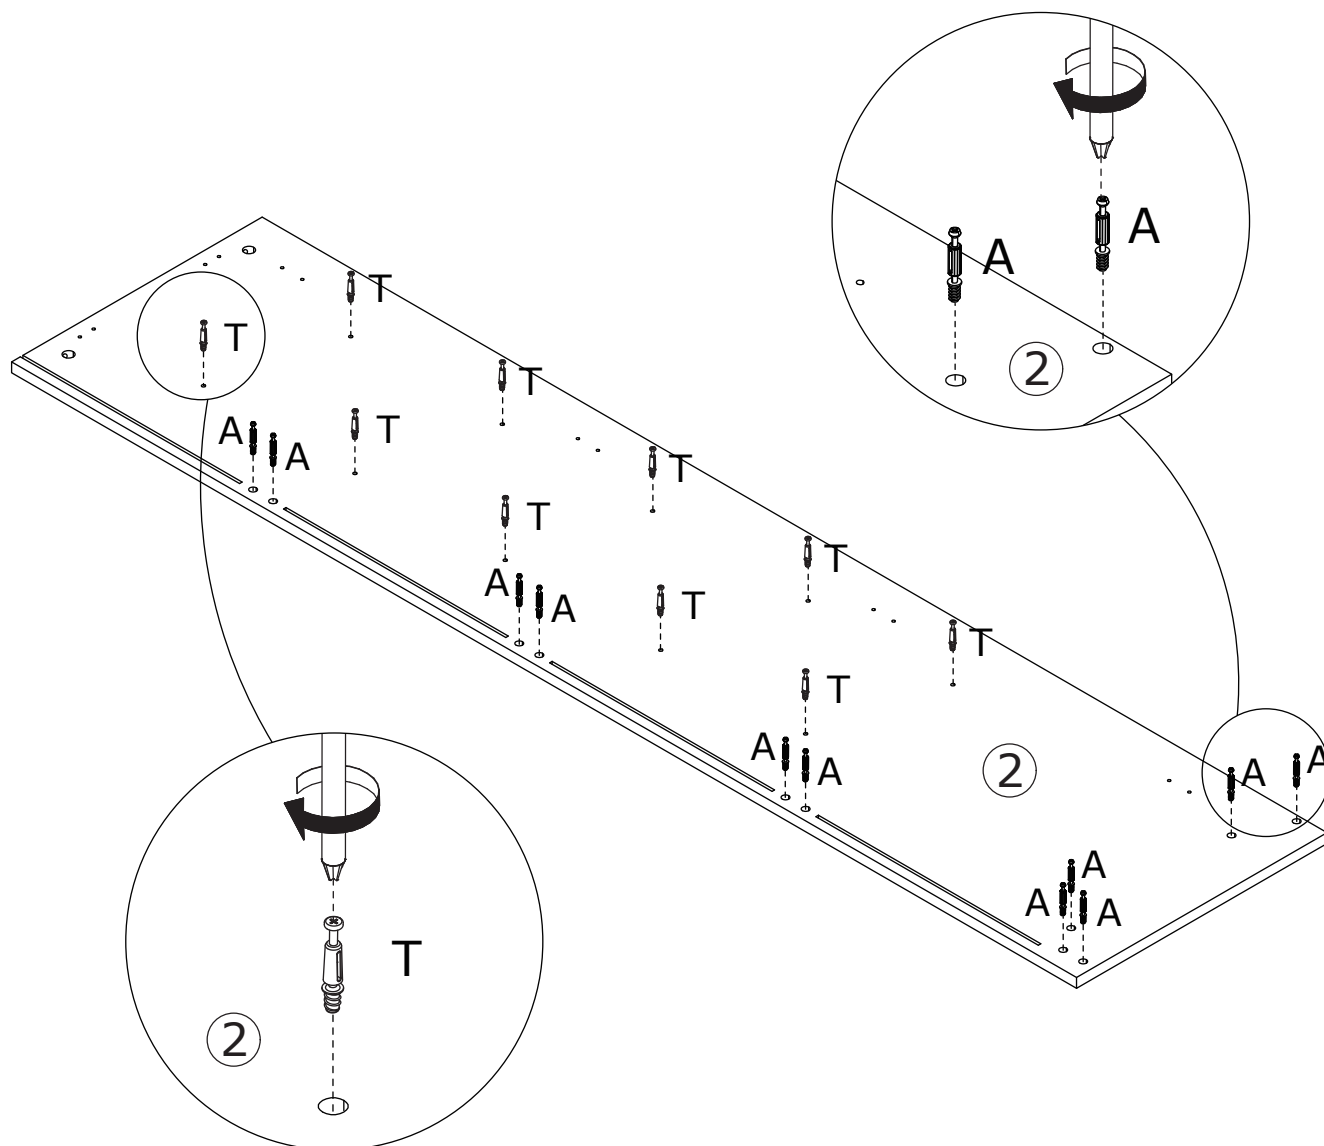


12

A x 12
M6 x 40 mm

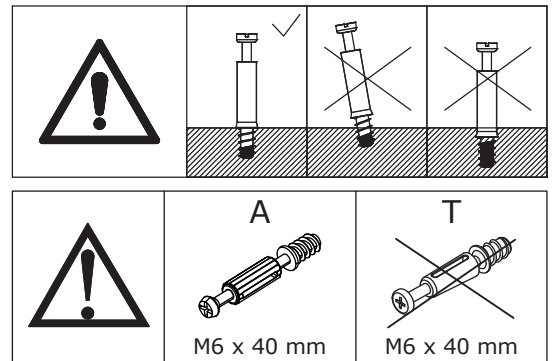

Flip the same part 2 to the other side,
and screw eccentric rod (A) to part 2.




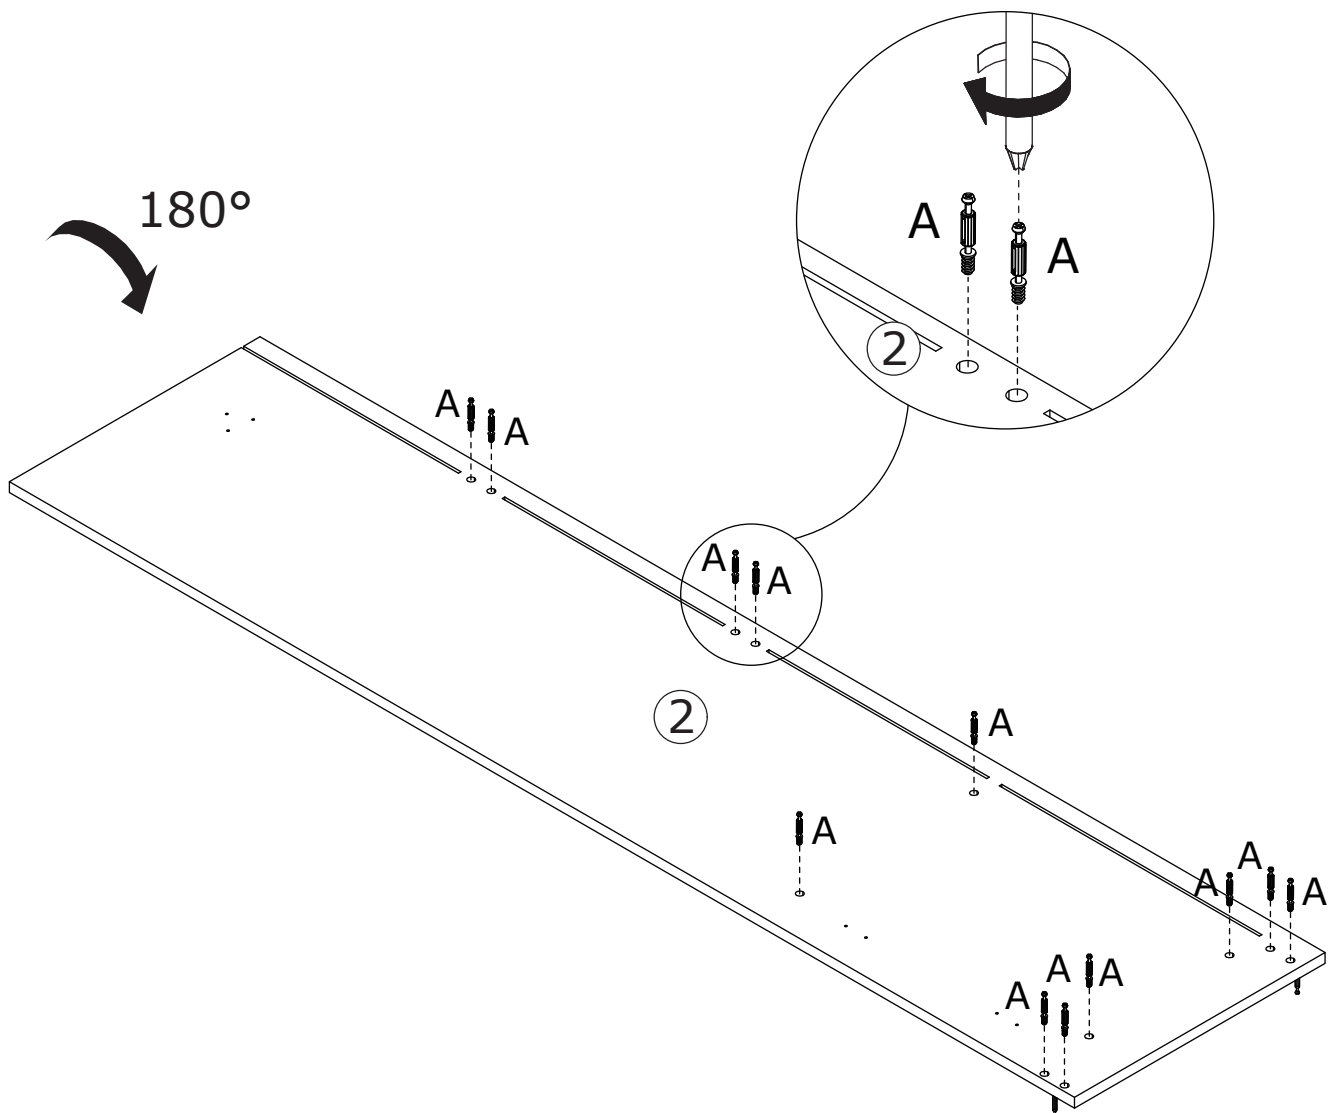


13

B x 21





Ø15 x 9 mm

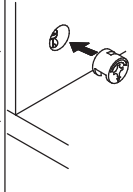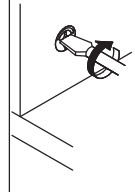



Connect parts 19, 29, 23, 24, and 15 to part 2, then tighten by turning cam lock (B) clockwise.

(when tightening part 19, wait until the other parts in front are installed; the product must be upright before tightening).

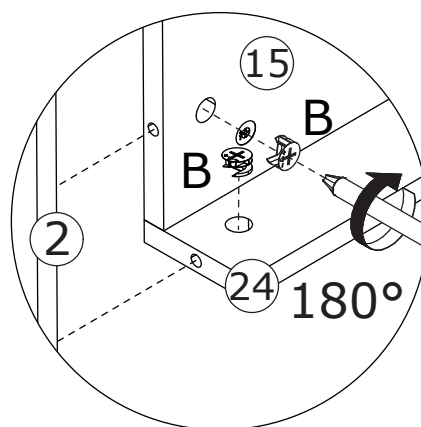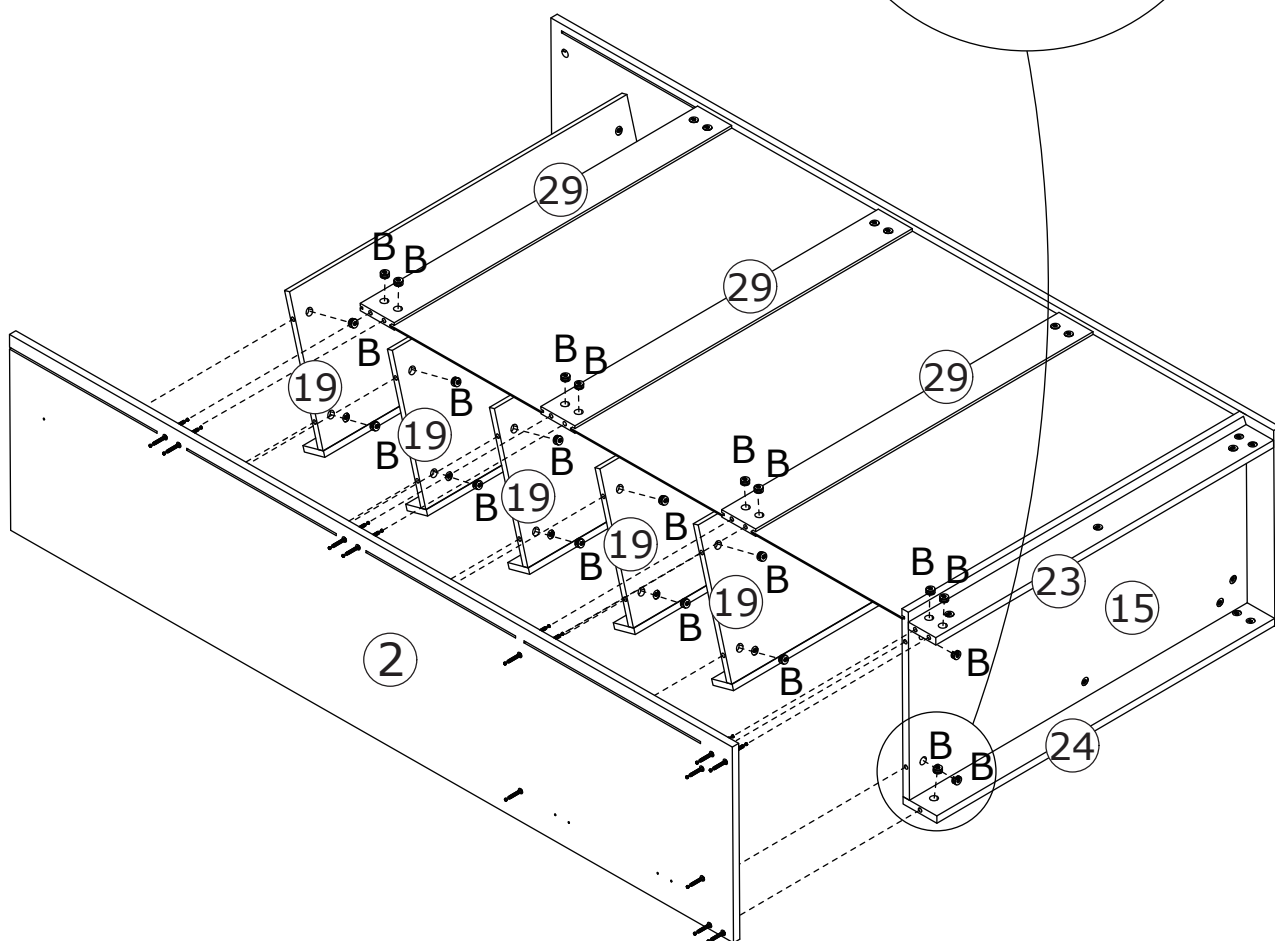


14

A x 3
M6 x 40 mm


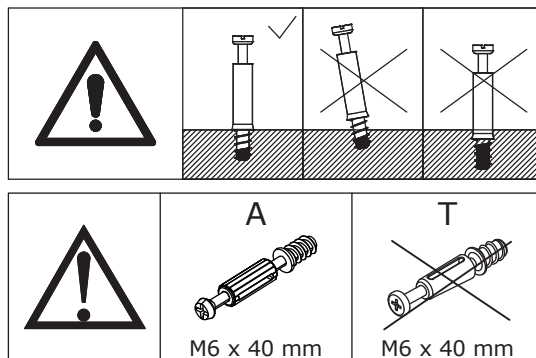


Screw eccentric rod (A) to part 26.

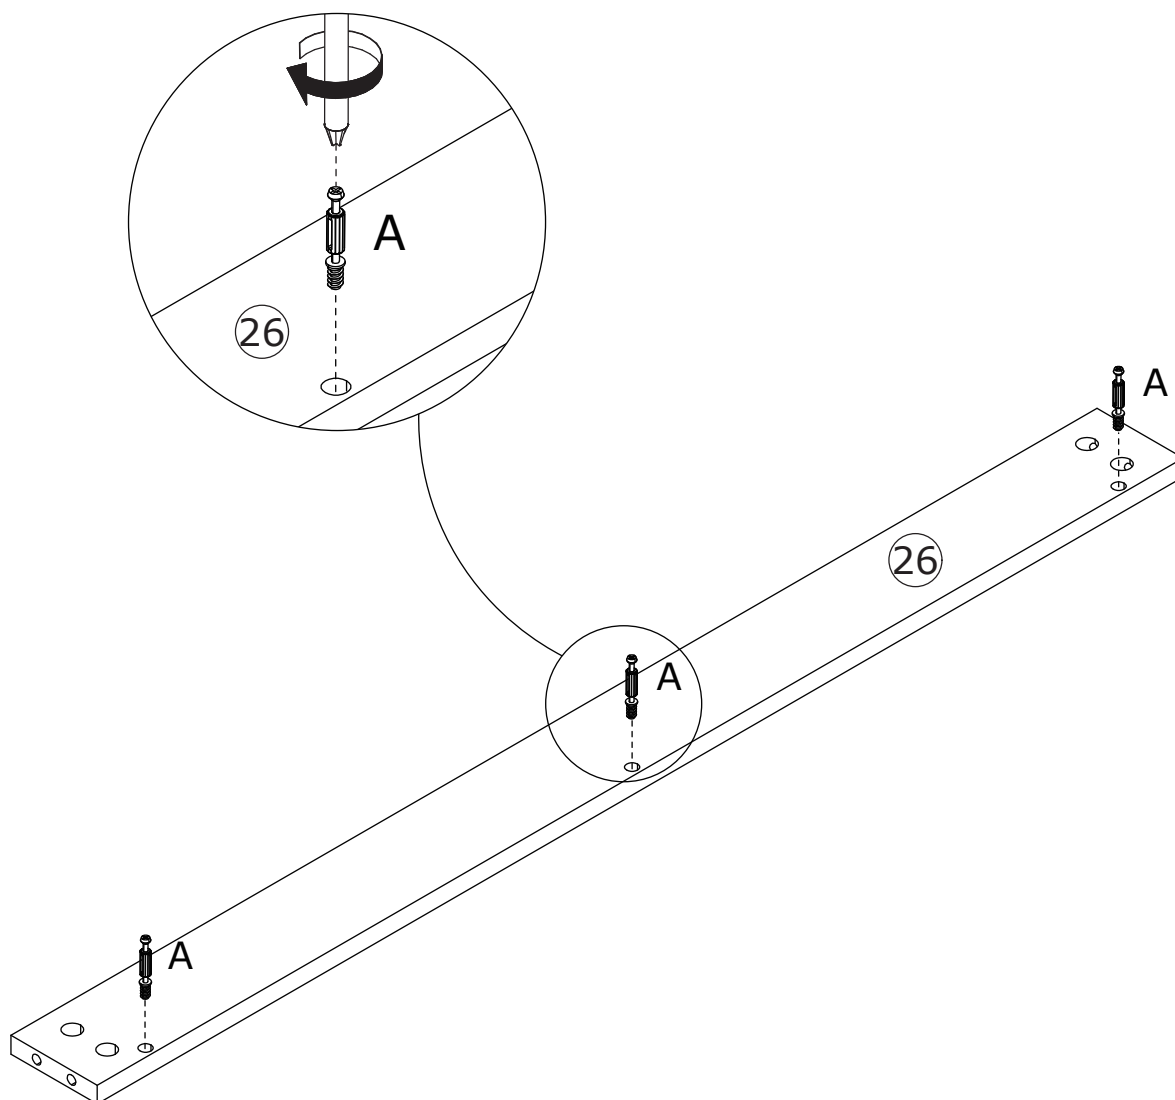


15

A x 5
M6 x 40 mm

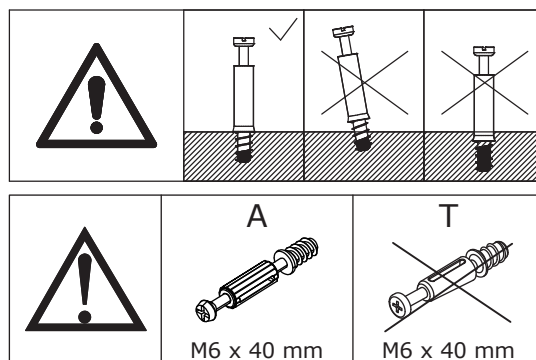

Screw eccentric rod (A) to **both sides** of part 16.




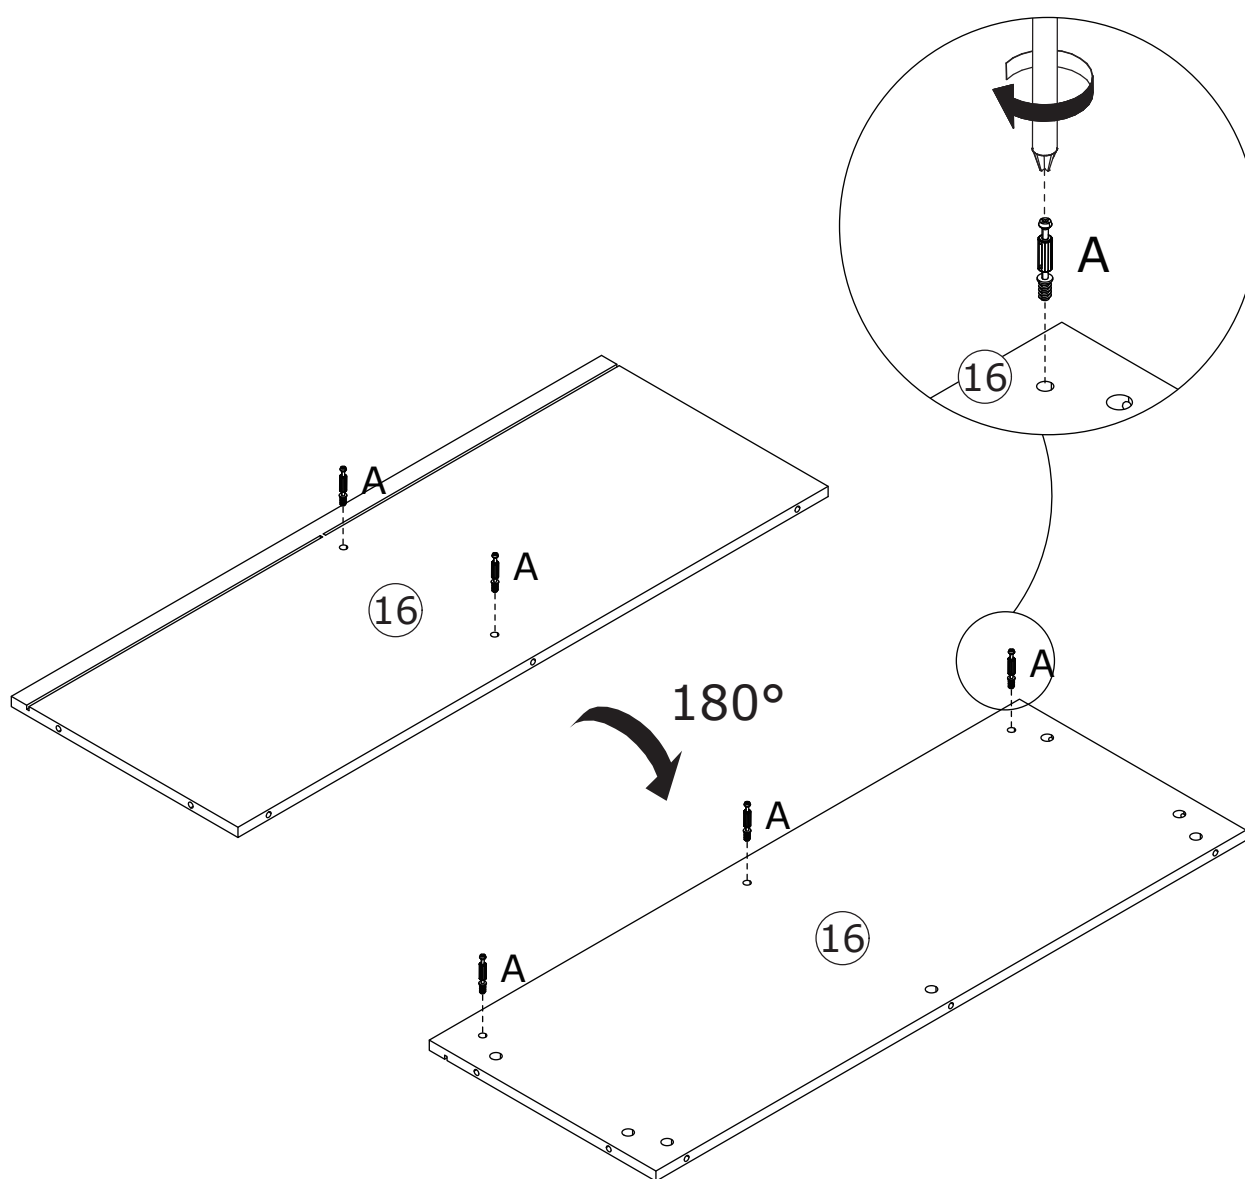


16



B x 6



Ø15 x 9 mm

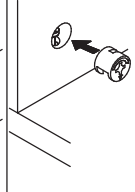
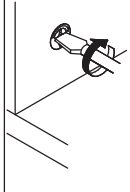


Connect parts 25 and 26 to part 16, then tighten by turning cam lock (B) clockwise.

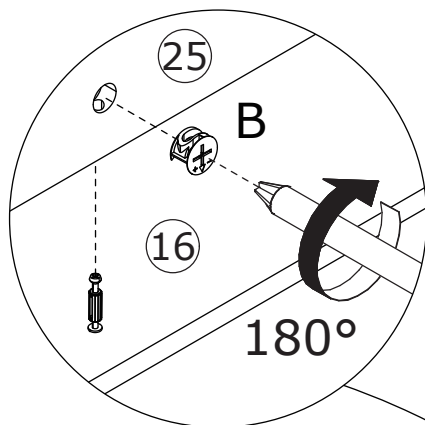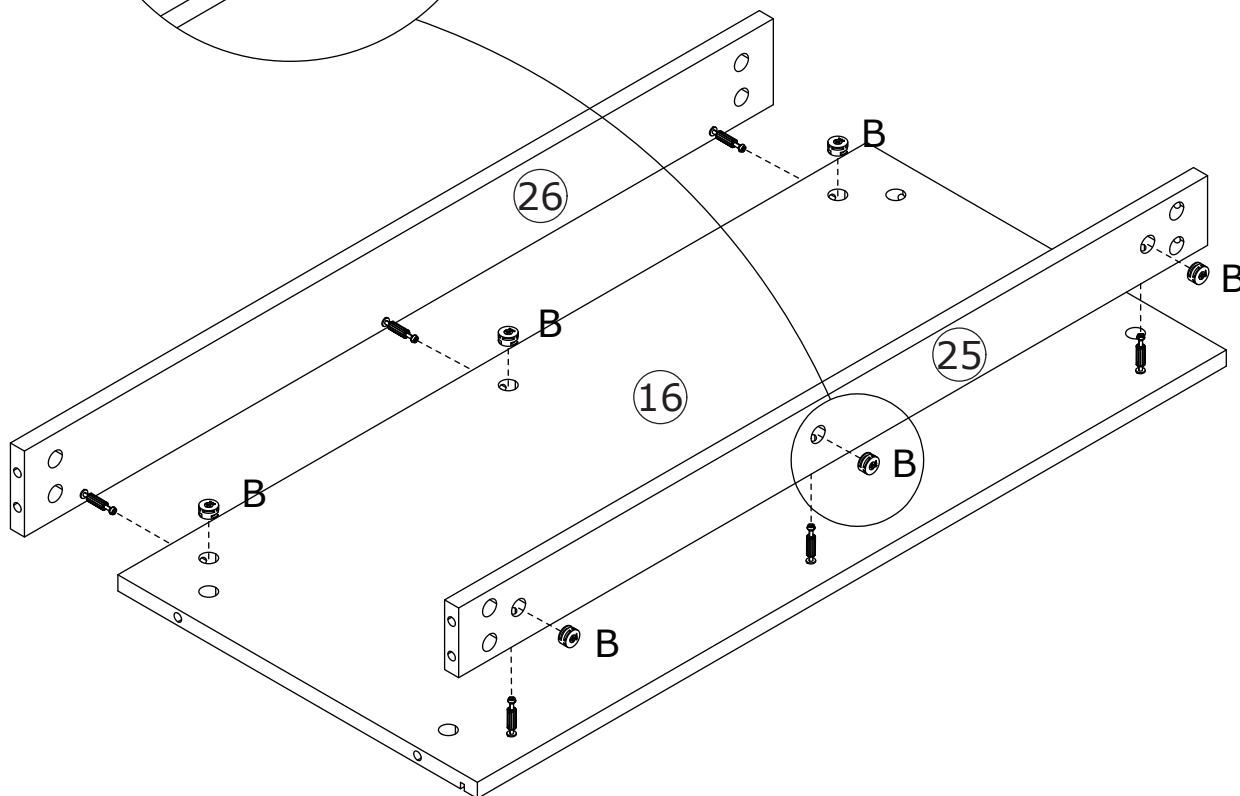


17

A x 2
M6 x 40 mm

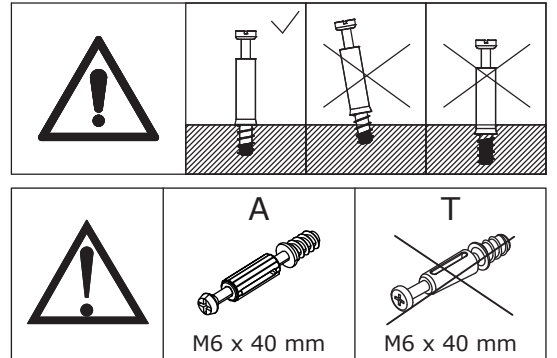

Screw eccentric rod (A) to part 14.




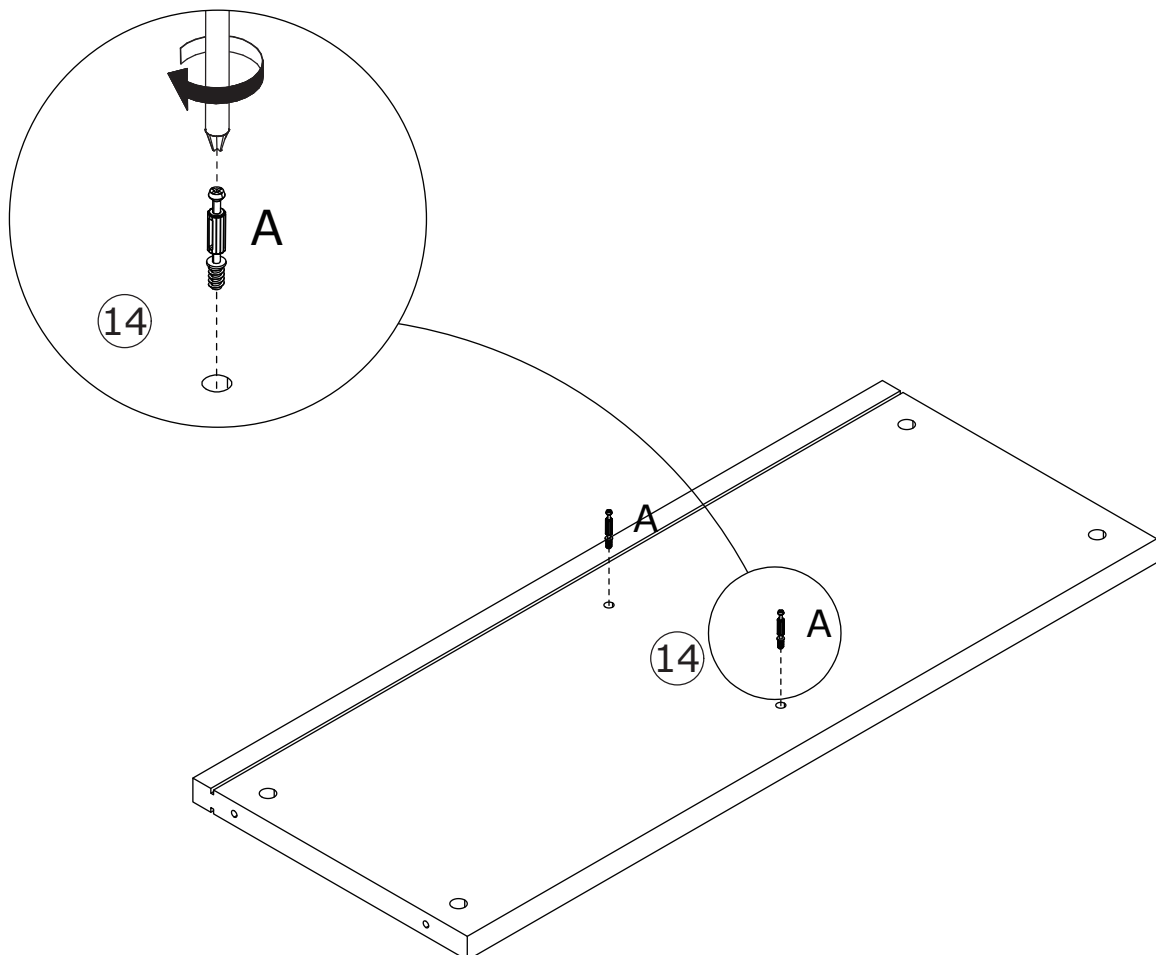


18


B x 4




Ø15 x 9 mm

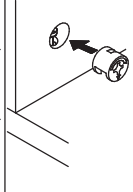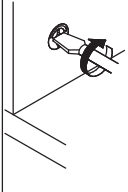

Connect parts 14 and 16 to part 17,
then tighten by turning cam lock (B)
clockwise.

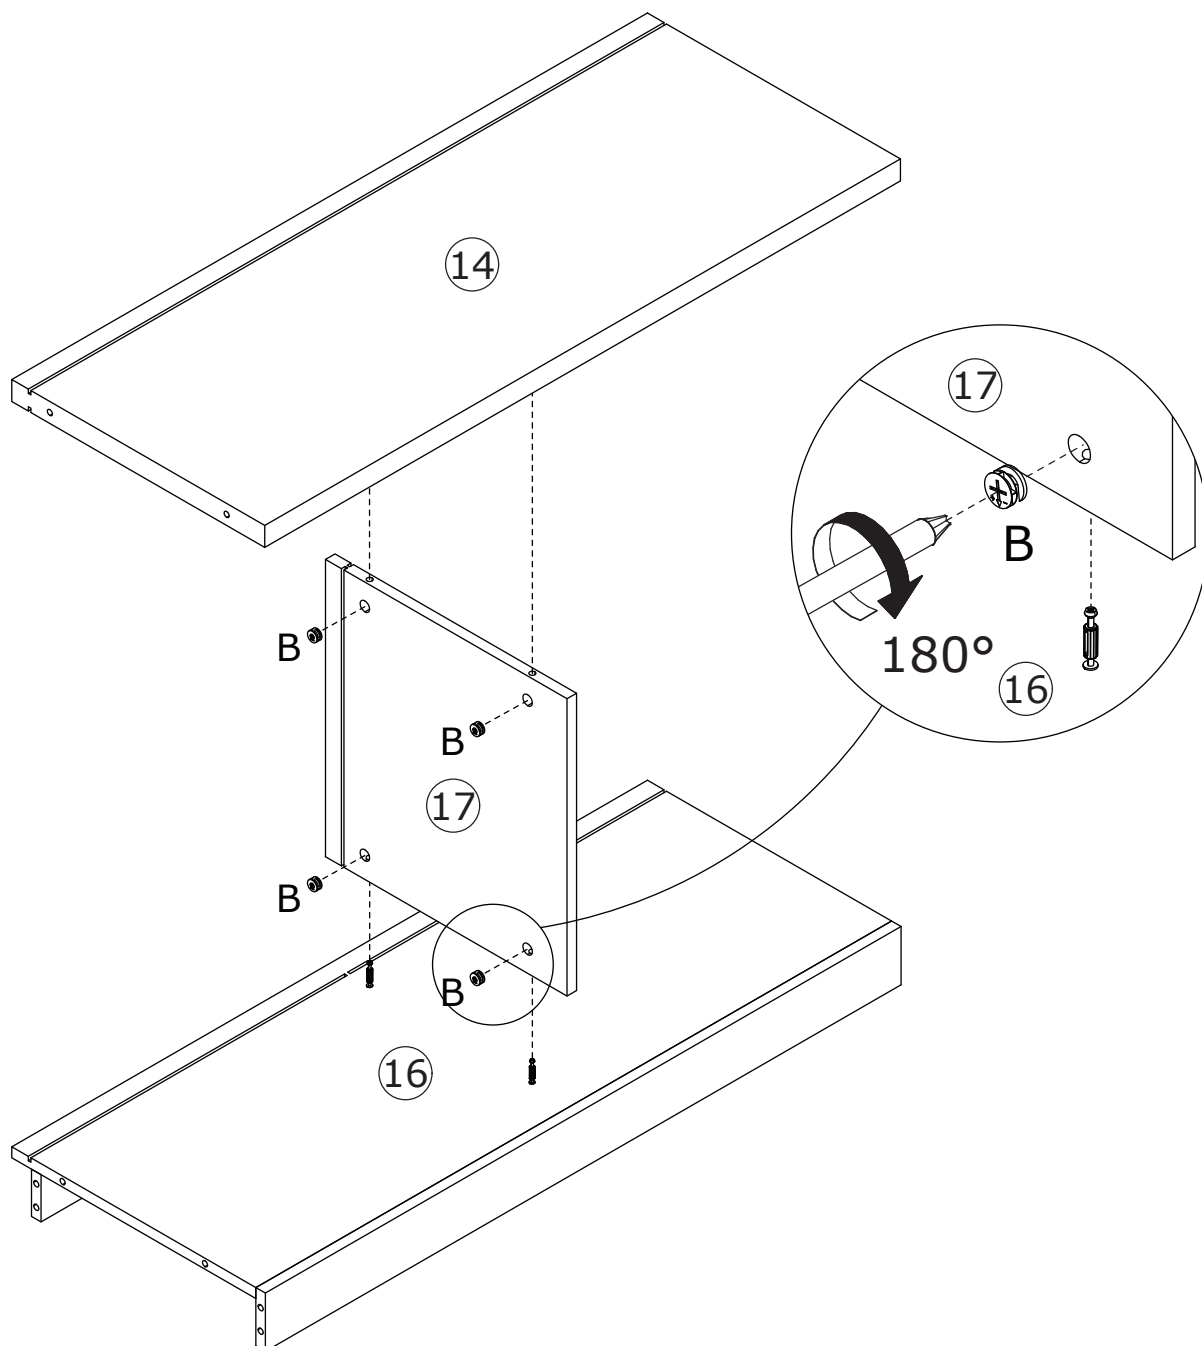

Insert parts 48 along the
available grooves.


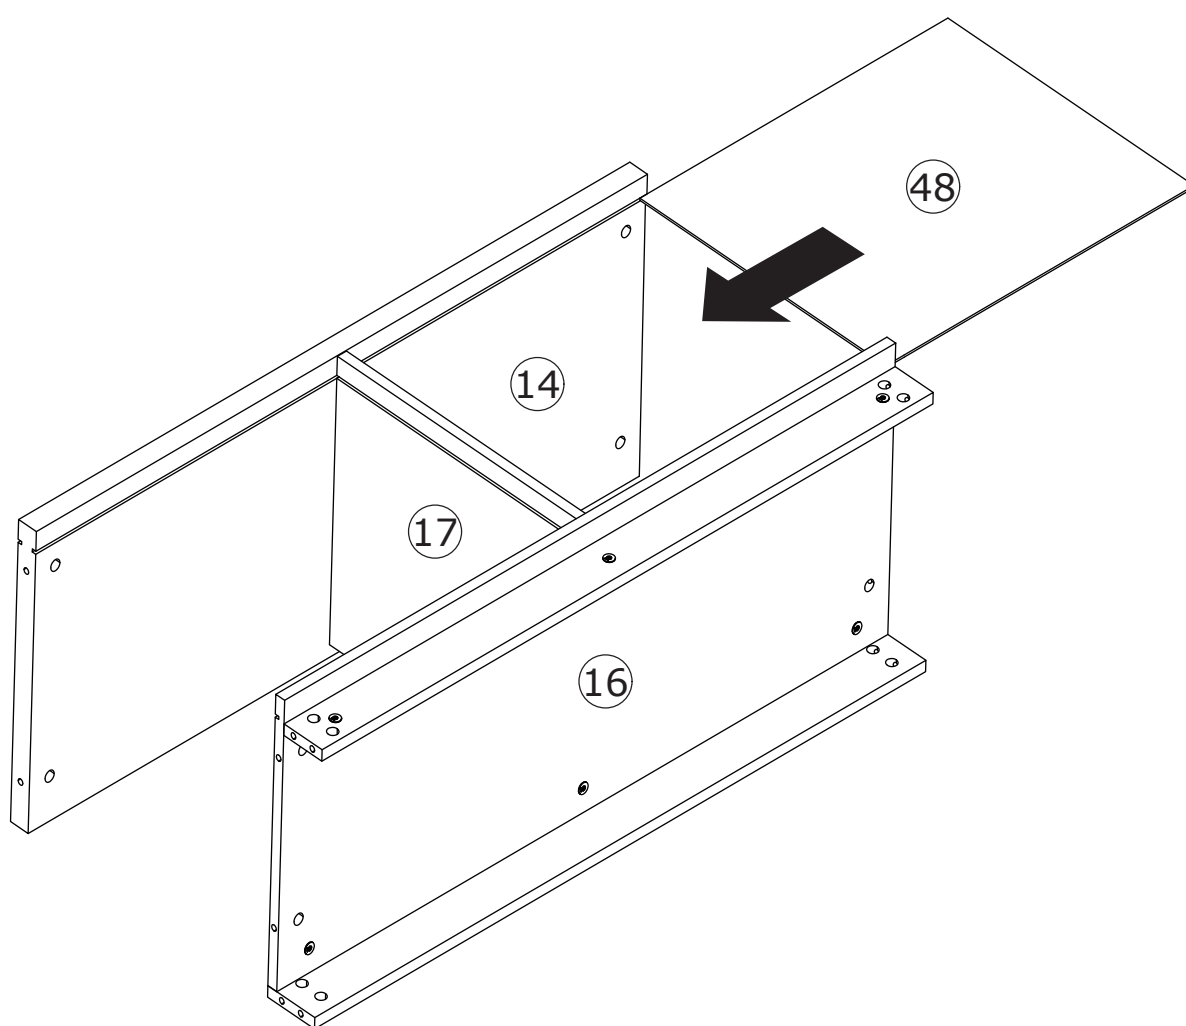


20


B x 8



Ø15 x 9 mm

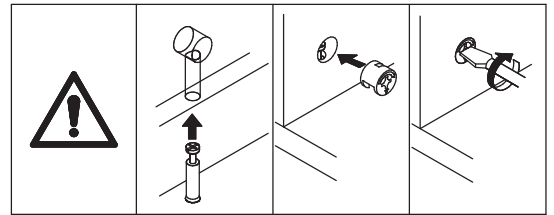

Connect parts 14, 16, 25, and 26 to part 2, then tighten by turning cam lock (B) clockwise.

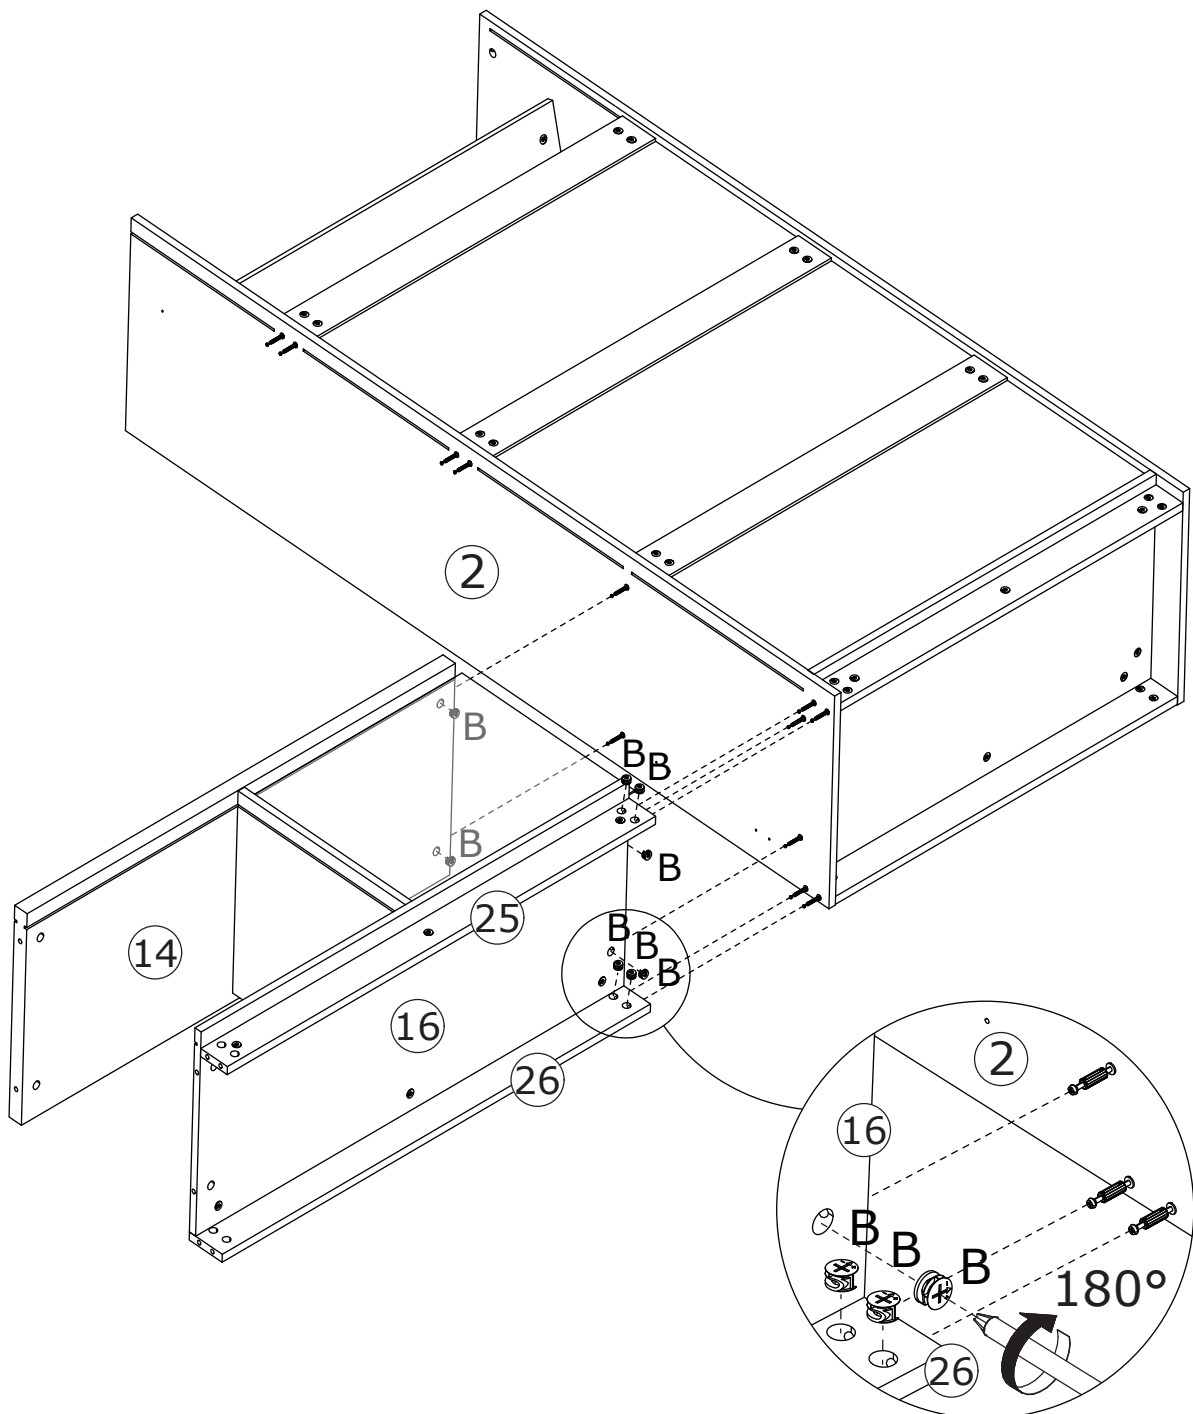


21


B x 4




Ø15 x 9 mm




Connect the two parts 30 to part 2,
then tighten by turning cam lock (B)
clockwise.

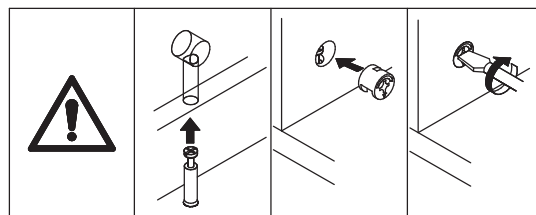


To make installation easier and prevent overhanging
panels from breaking, you can use this foam or panel
as a spacer at the points where the panels will be
installed overhanging, and then secure them in place.

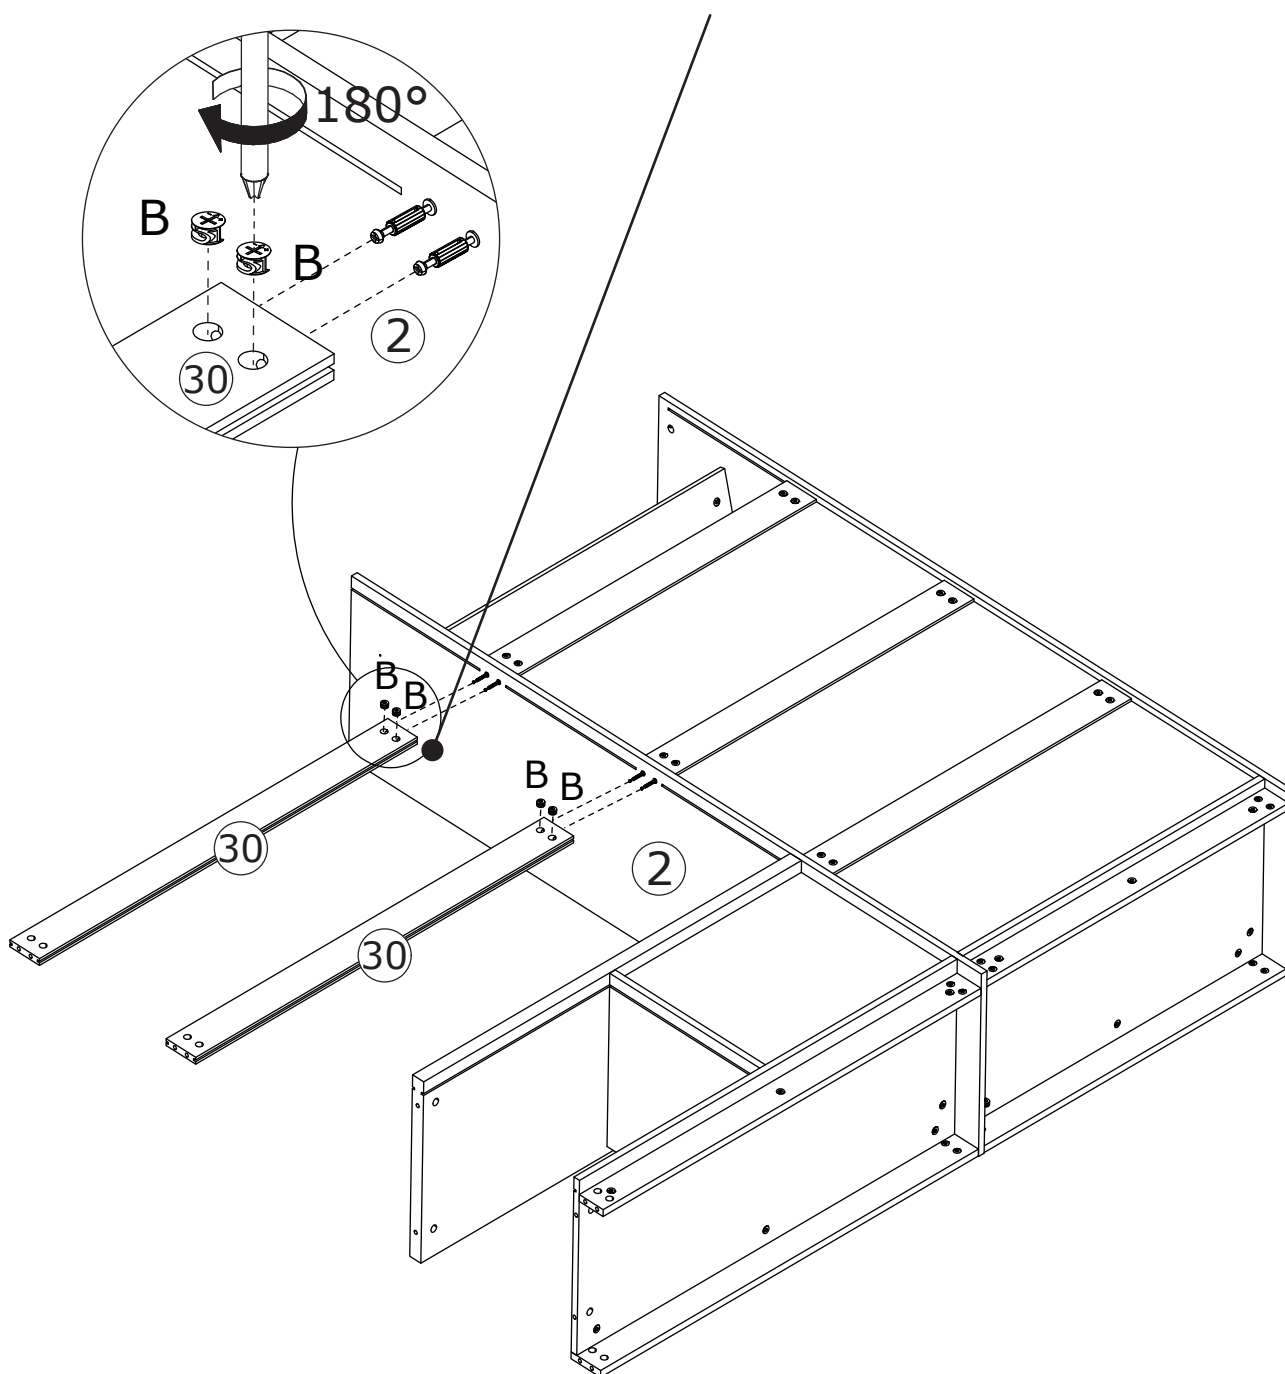

Insert part 47 along the available grooves.


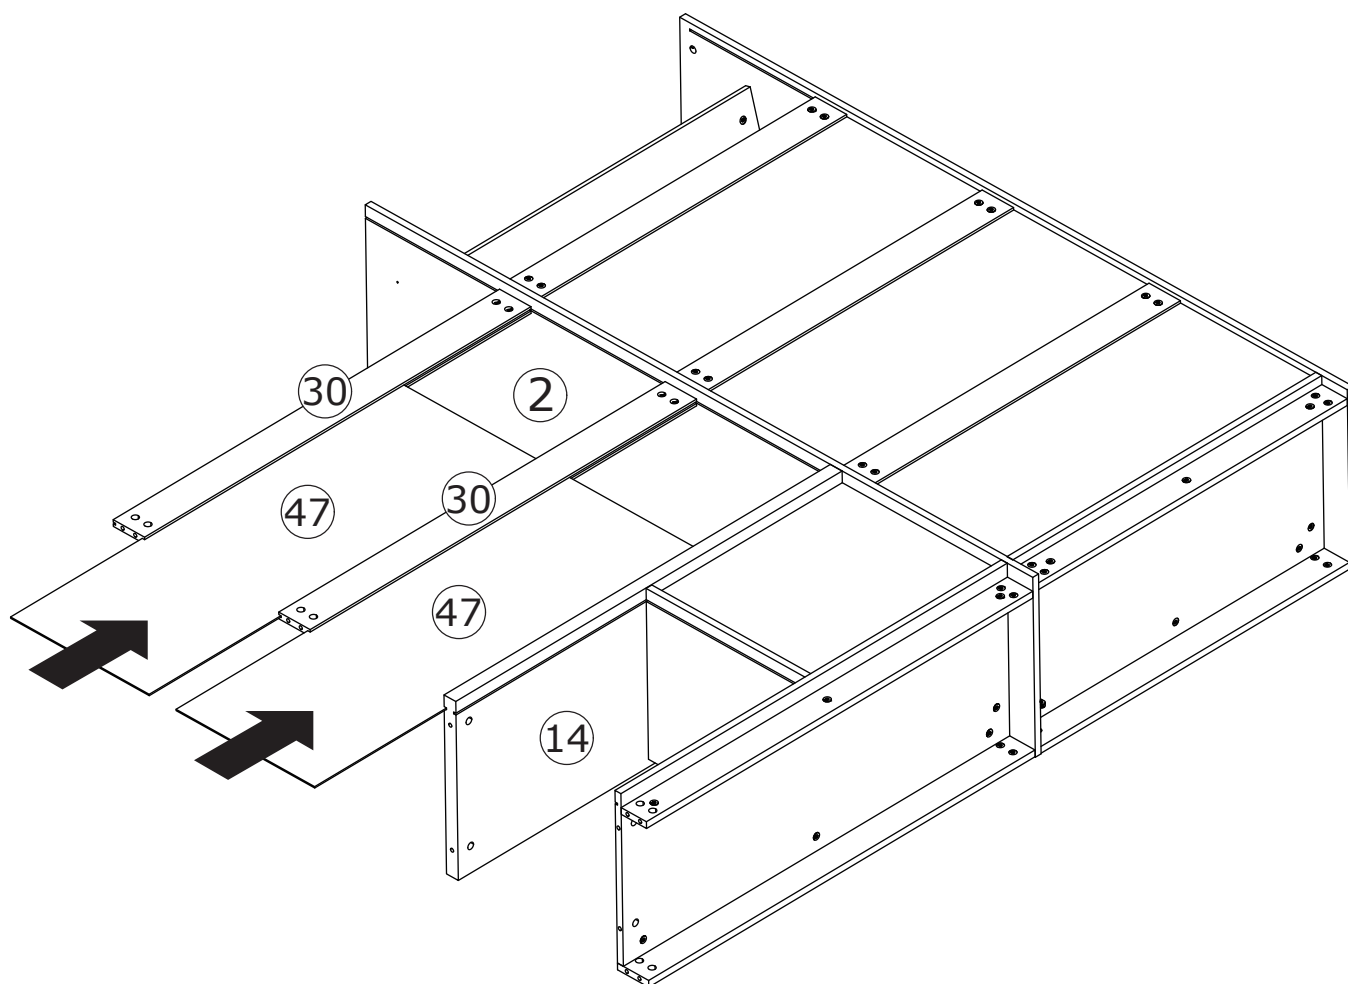


Insert part 48 along the
available grooves.

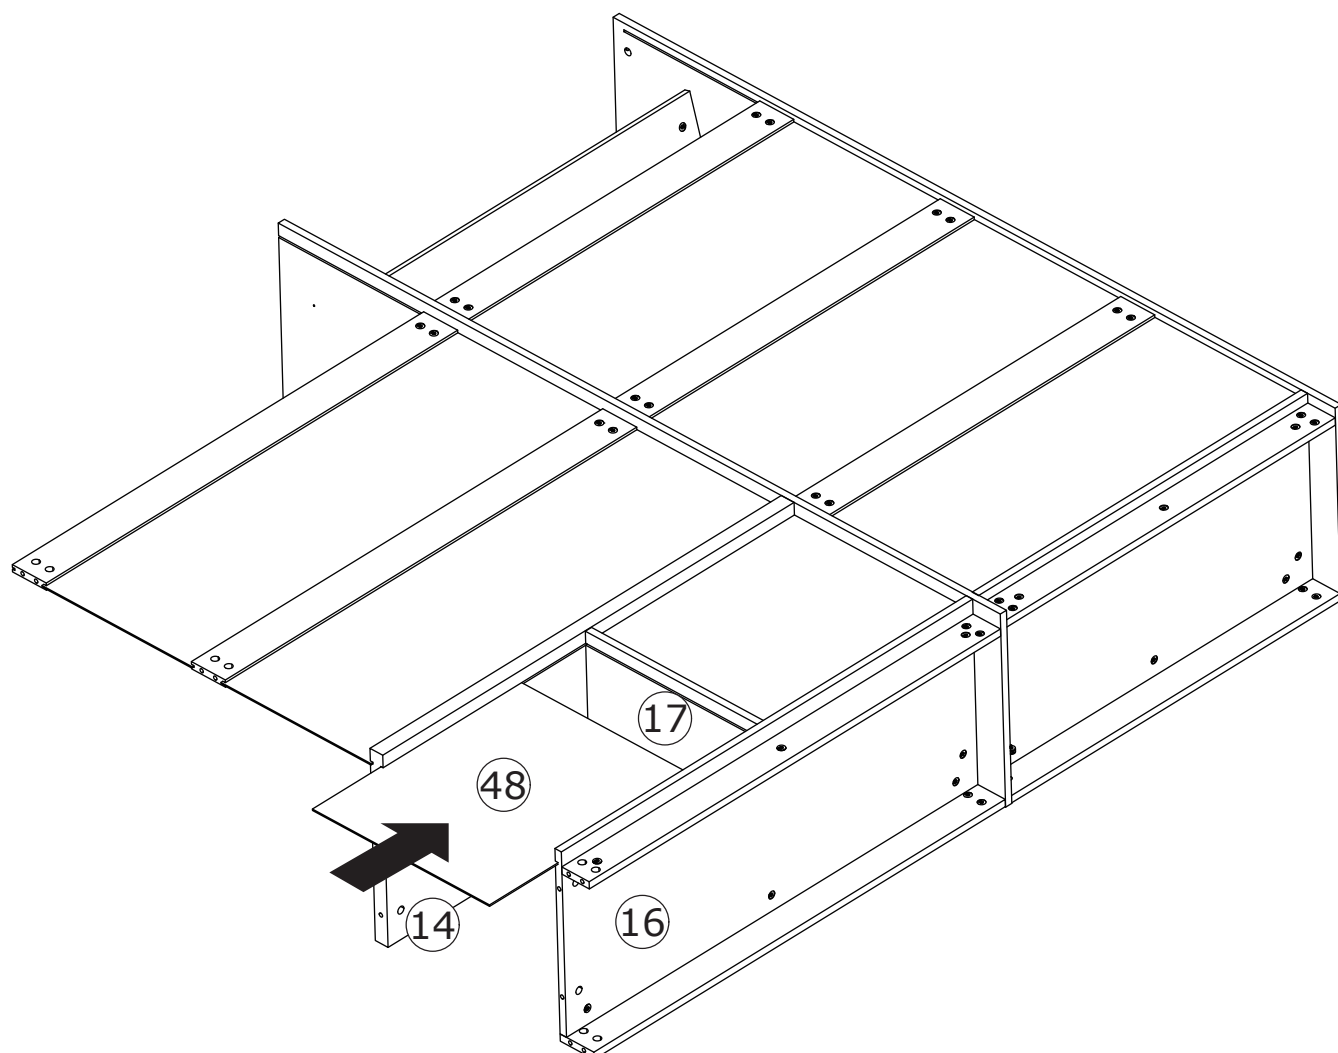


24





A x 12
M6 x 40 mm

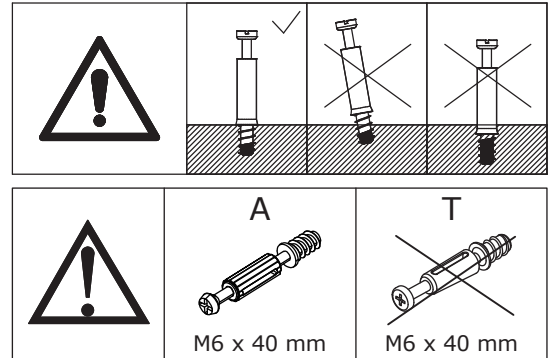

Screw eccentric rod (A) to part 3.

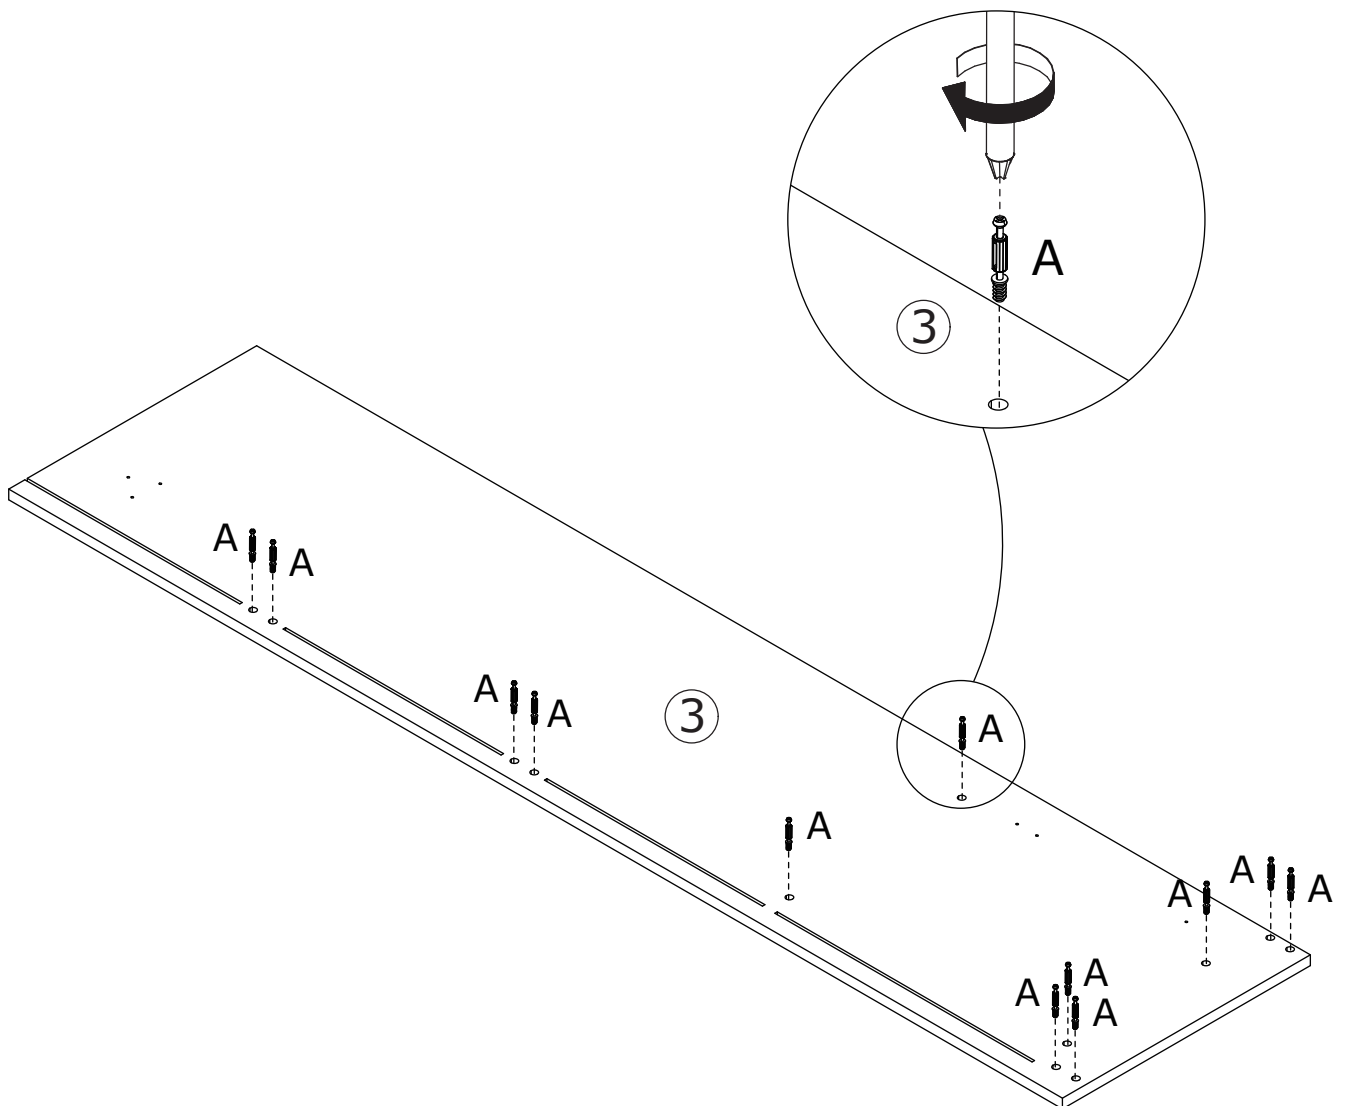

25

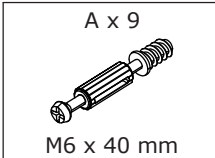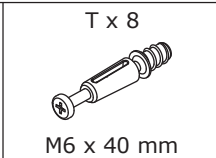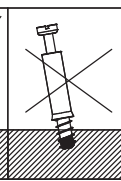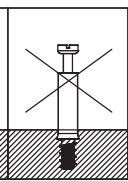

A



M6 x 40 mm




T



M6 x 40 mm

Flip the same part 3 to the other side, screw eccentric rod (T) and (A) (be sure their corresponding holes) to part 3.


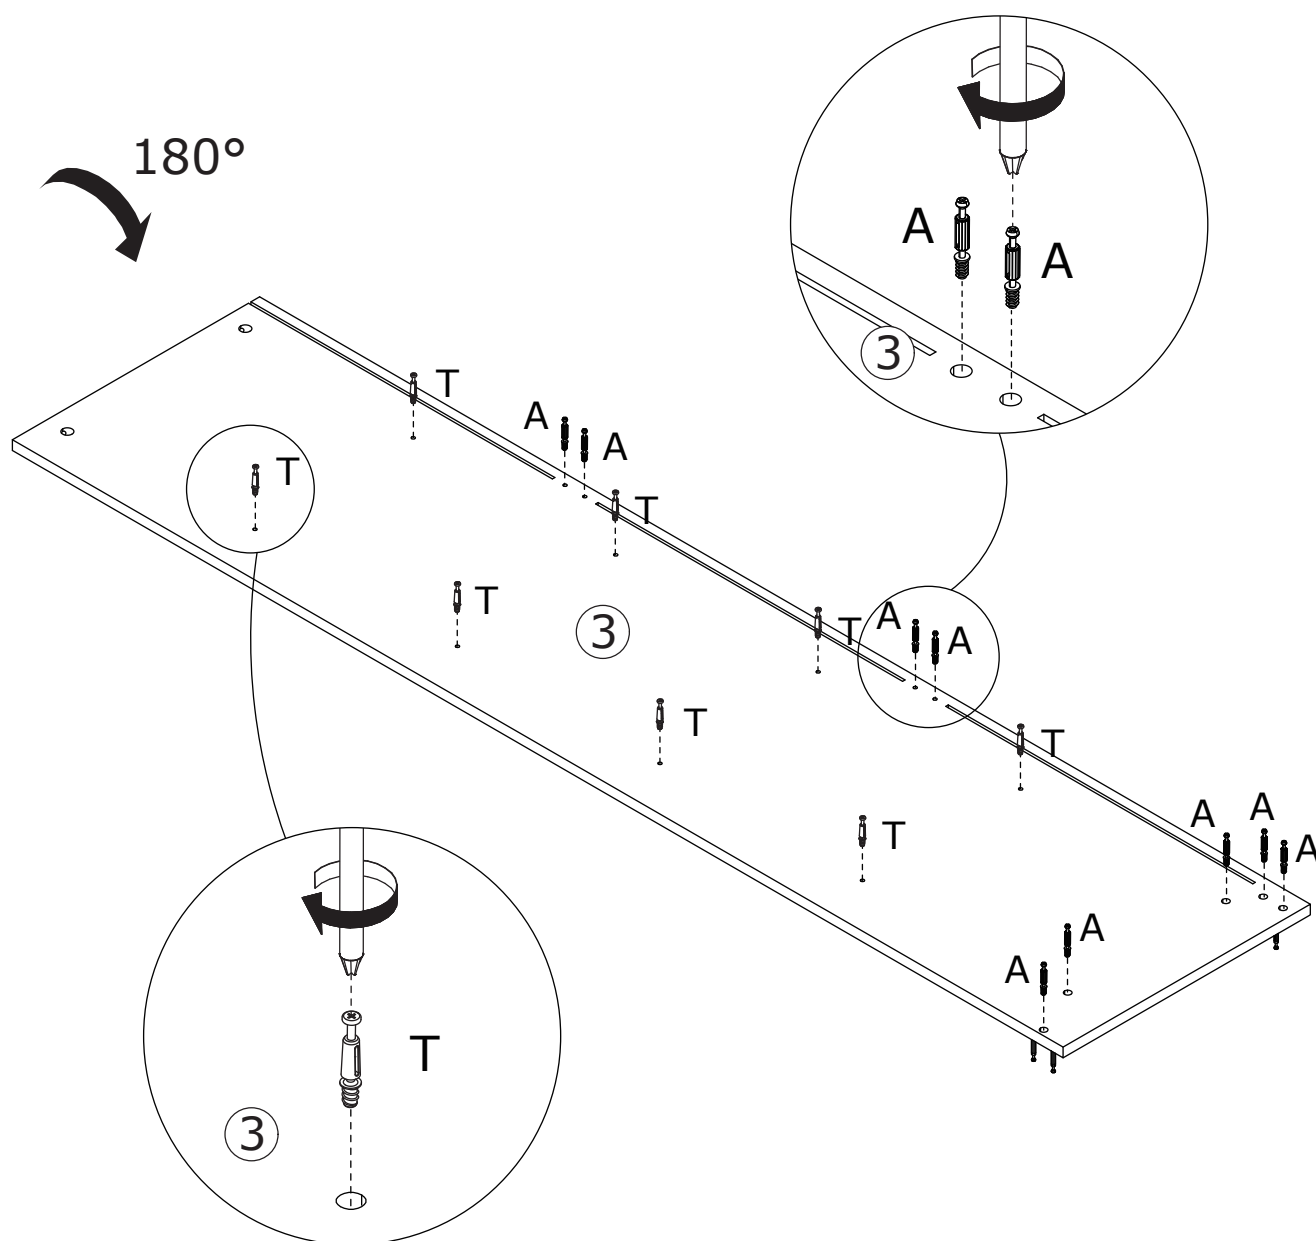


26



B x 12



Ø15 x 9 mm


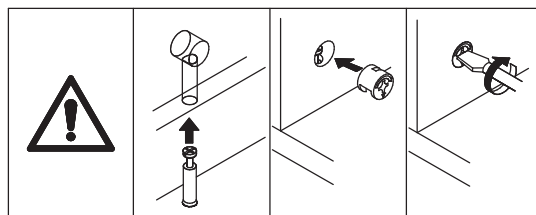


Connect parts 30, 14, 16, 25, and 26 to part 3 then tighten by turning cam lock (B) clockwise. (when tightening part 14, wait until the other parts in front are installed; the product must be upright before tightening).

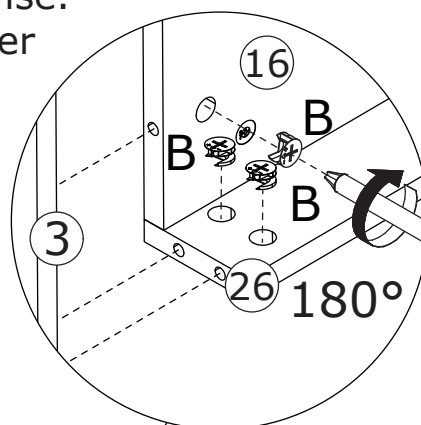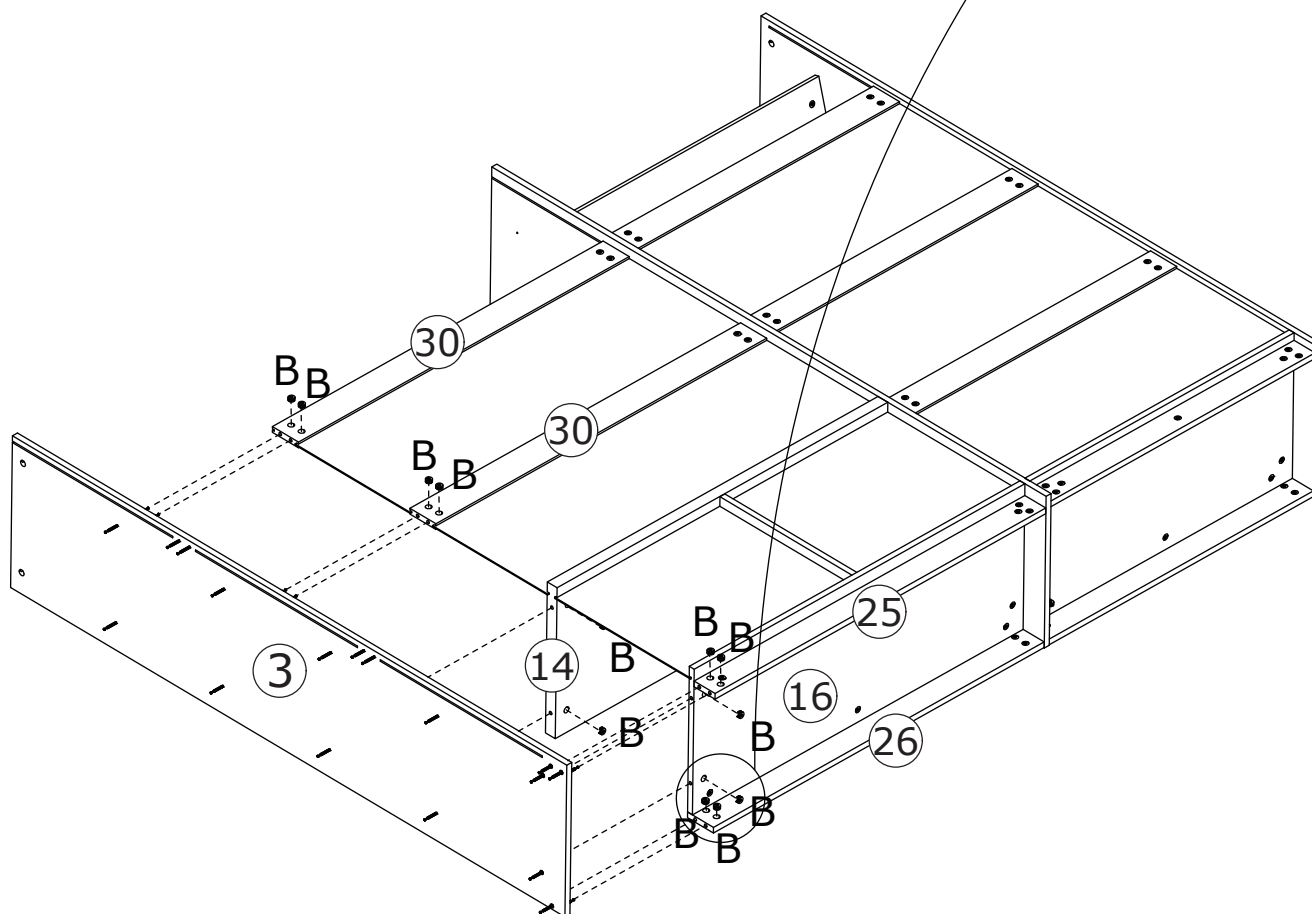


27

A x 4
M6 x 40 mm

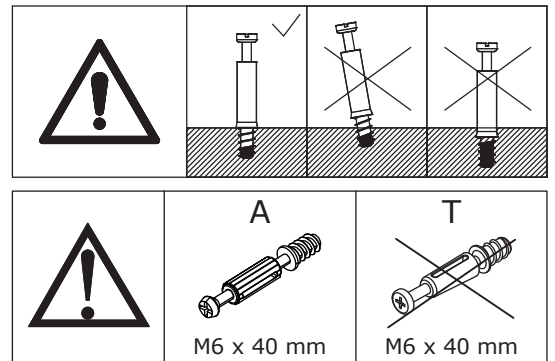

Screw eccentric rod (A) to parts 22 and 28.


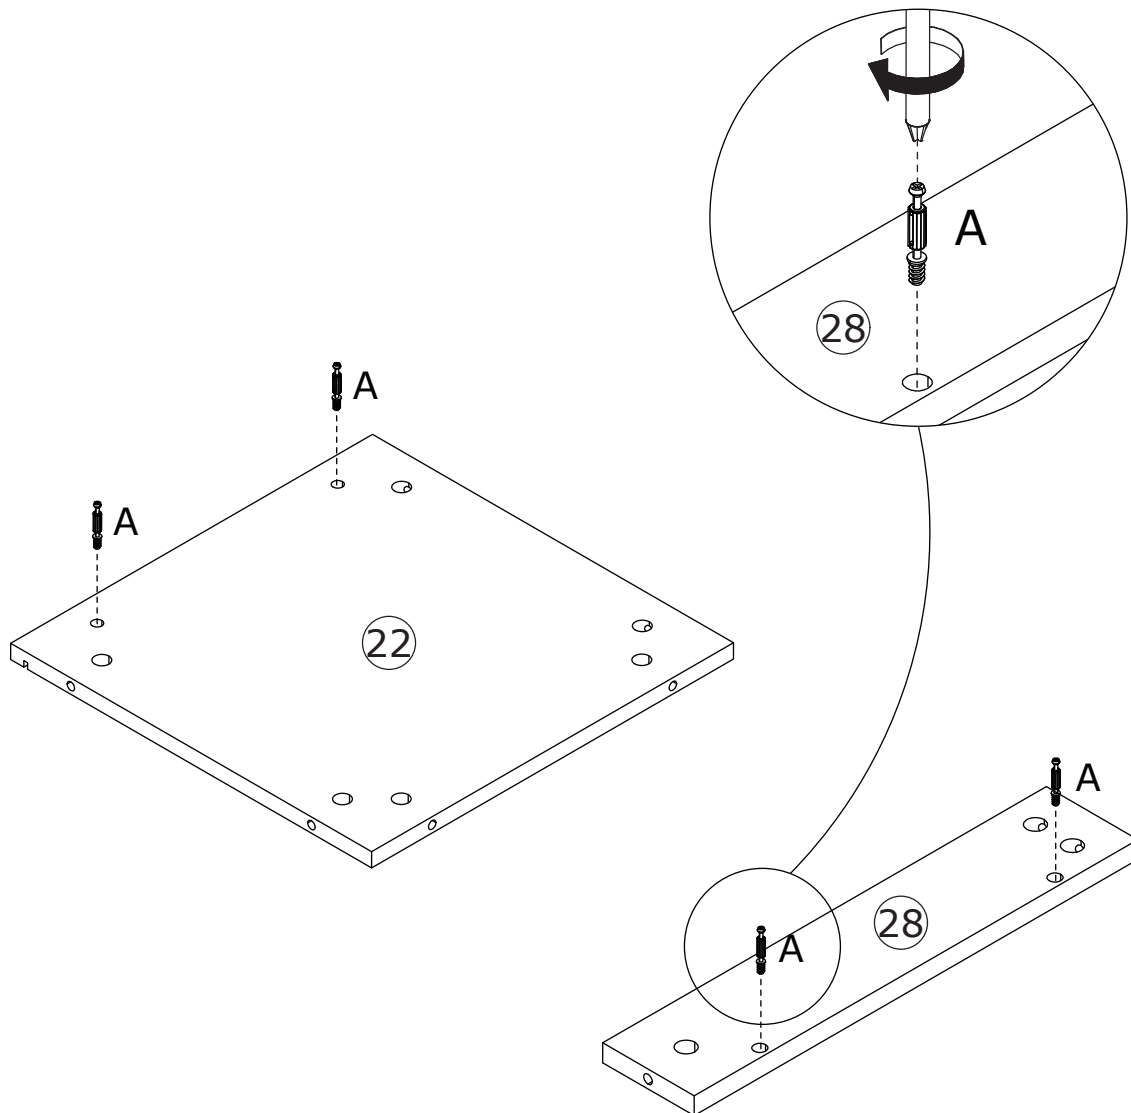


28


B x 4



Ø15 x 9 mm

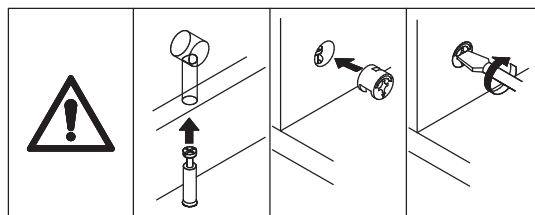

Connect parts 27 and 28 to part 22, then tighten by turning cam lock (B) clockwise.

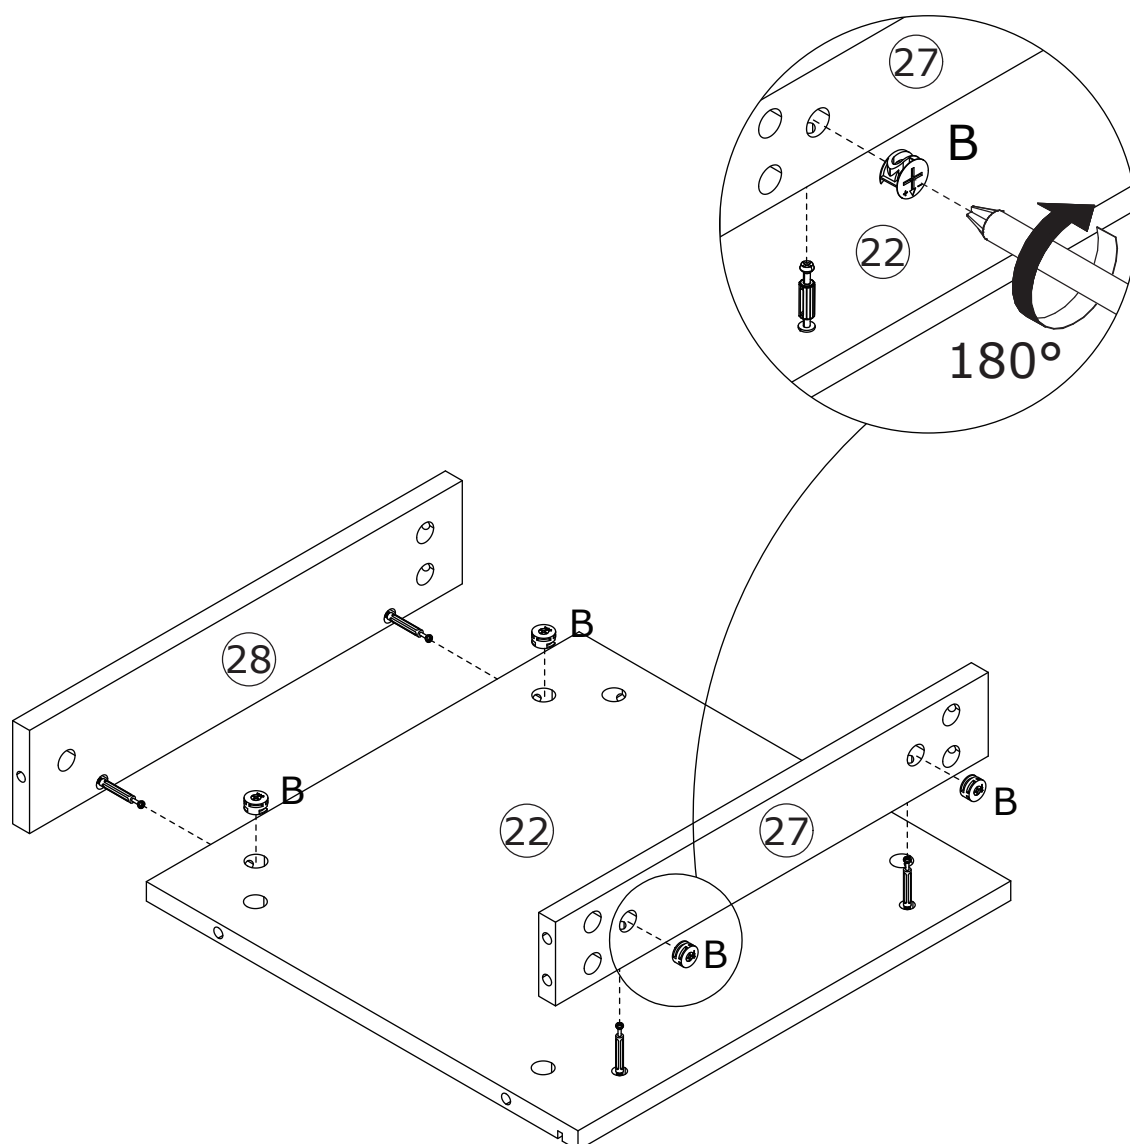


29



B x 5





Ø15 x 9 mm





Connect parts 22, 27, and 28 to part 3,
then tighten by turning cam lock (B)
clockwise.

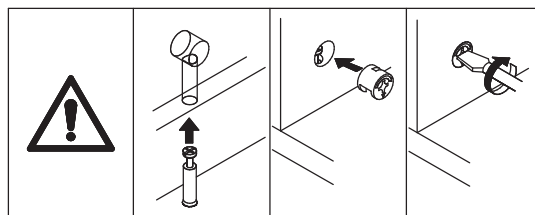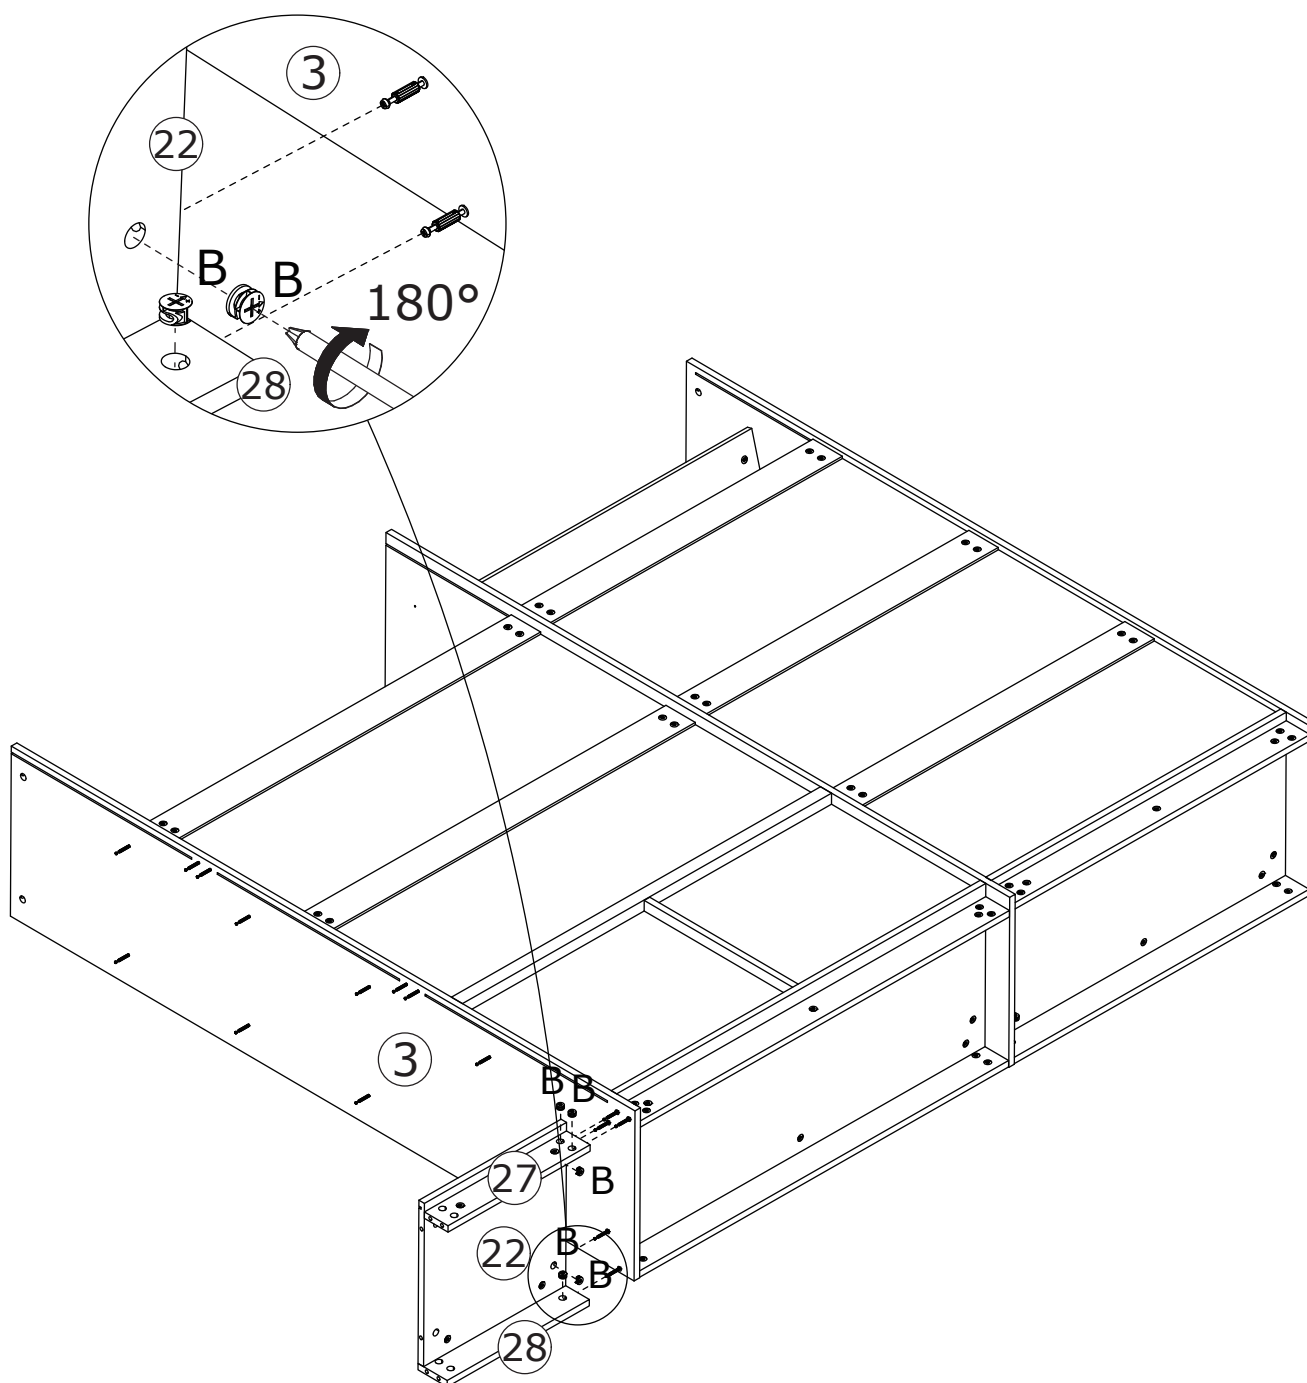



30

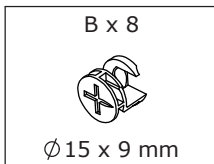


Connect part 21 to part 3, then tighten by turning cam lock (B) clockwise.

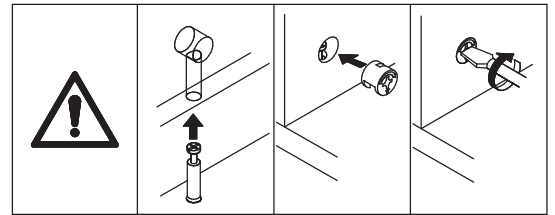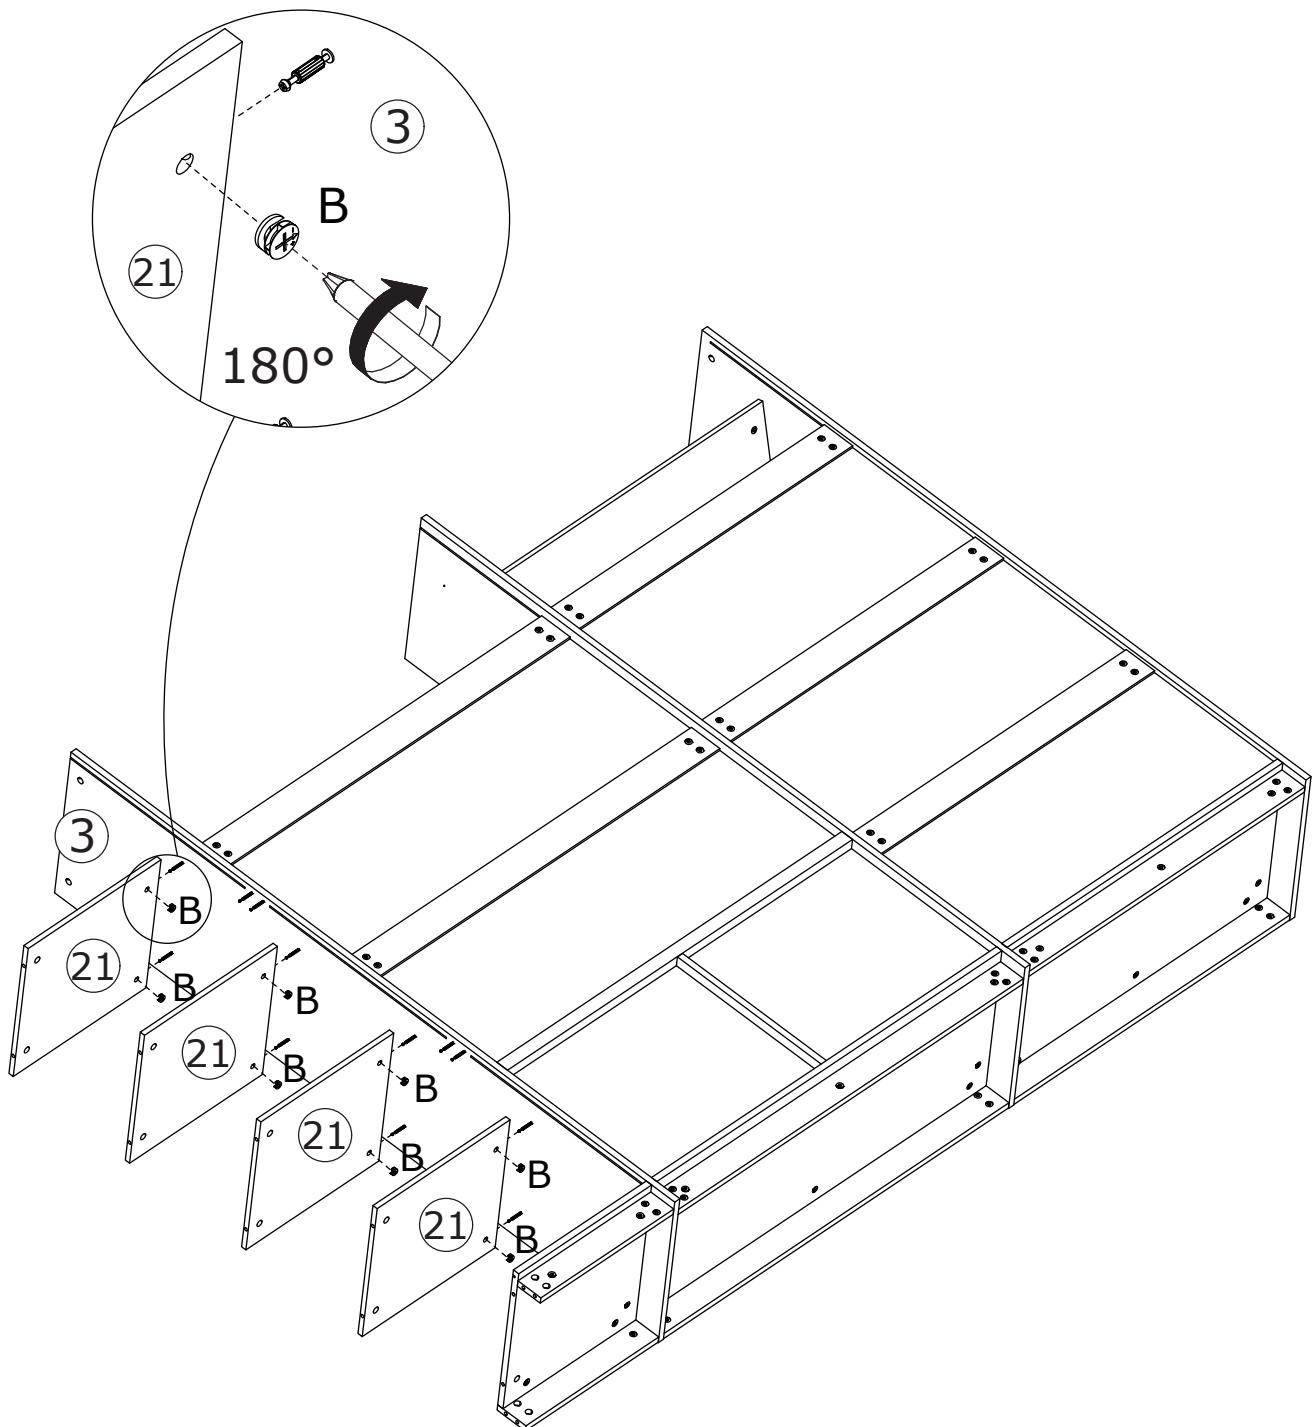


31

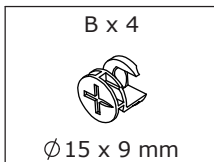


Connect parts 31 and 32 to part 3, then tighten by turning cam lock (B) clockwise.

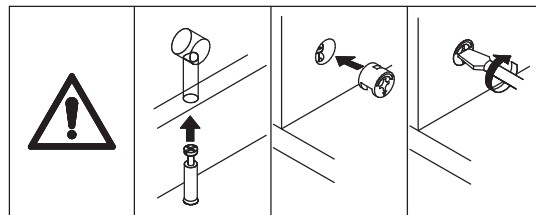


To make installation easier and prevent overhanging panels from breaking, you can use this foam or panel as a spacer at the points where the panels will be installed overhanging, and then secure them in place.

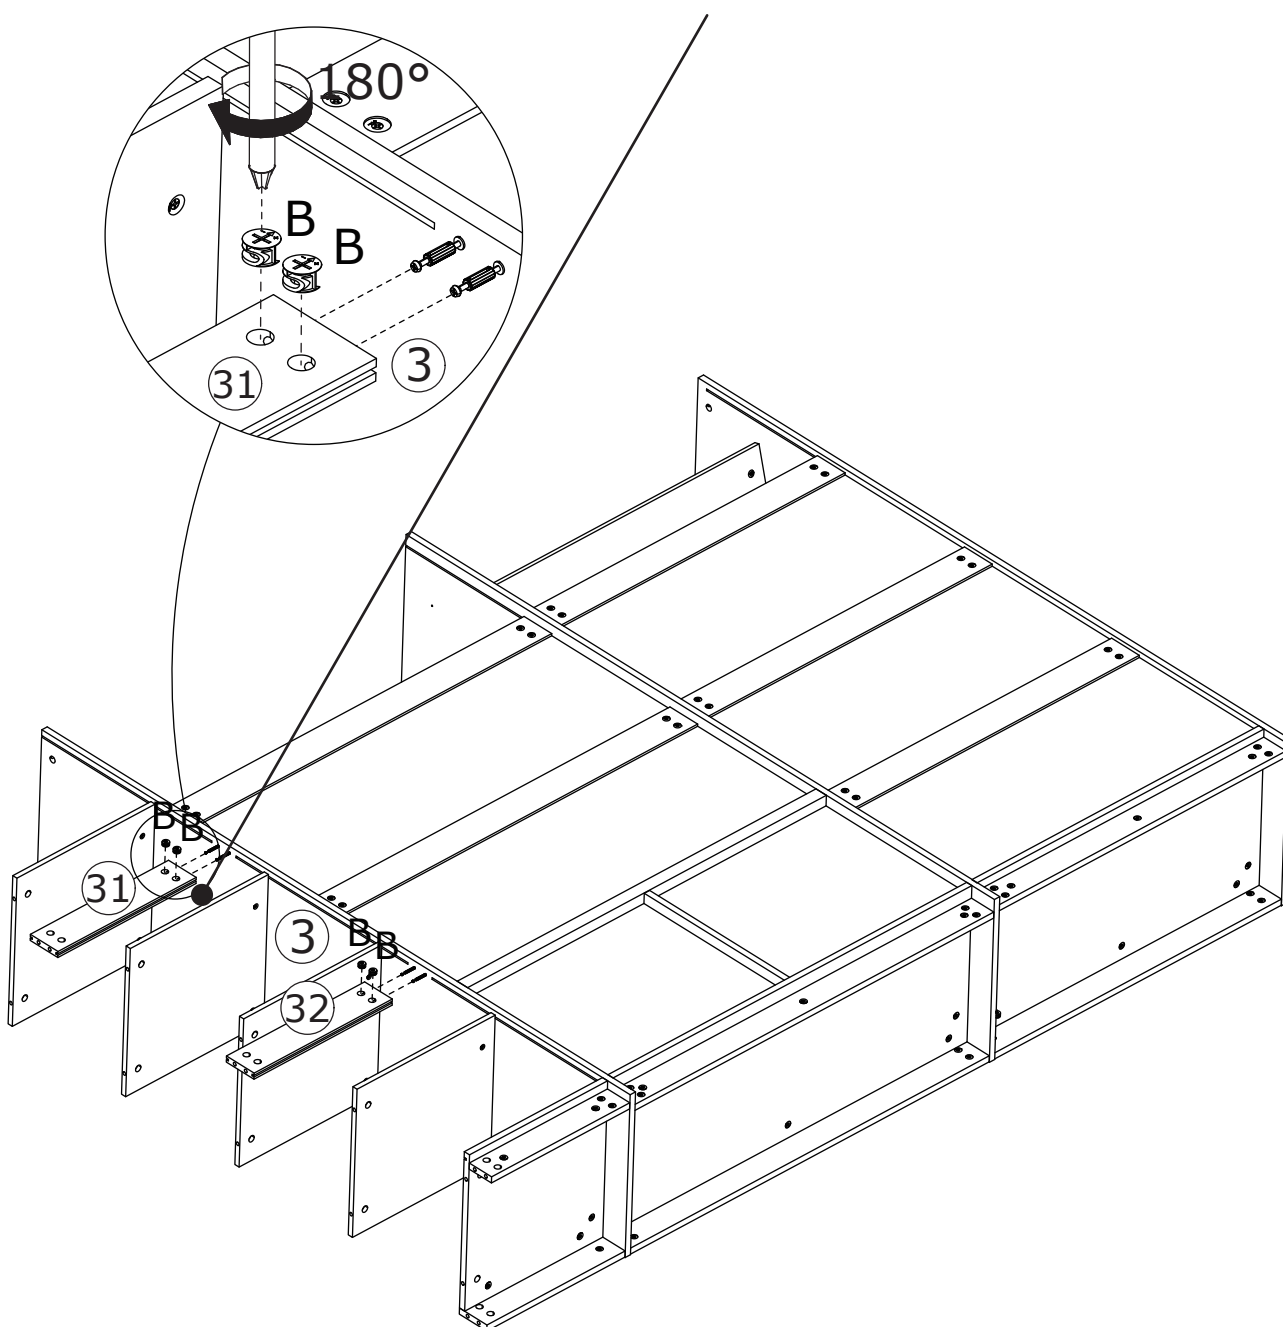


Insert part 51 along the available grooves.

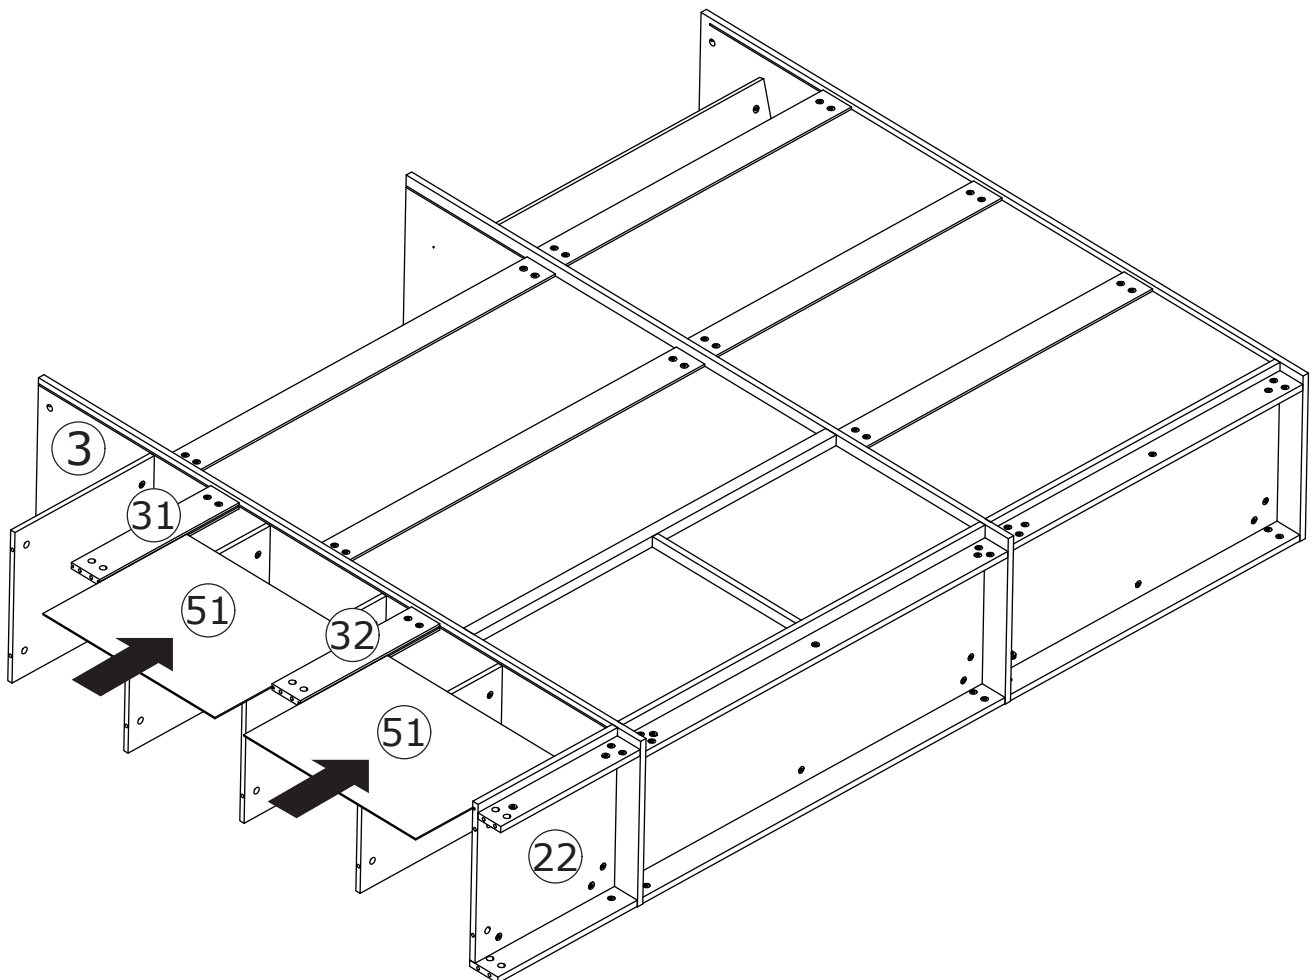

33

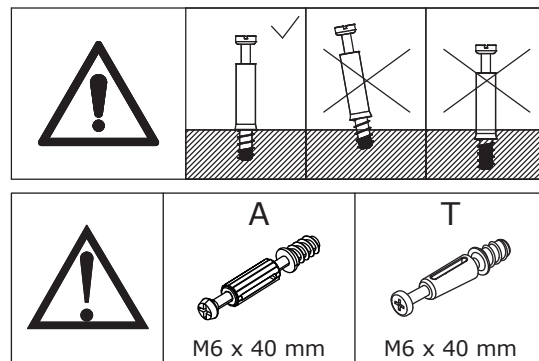

Screw eccentric rod (T) and (A) (be sure their corresponding holes) to part 4.


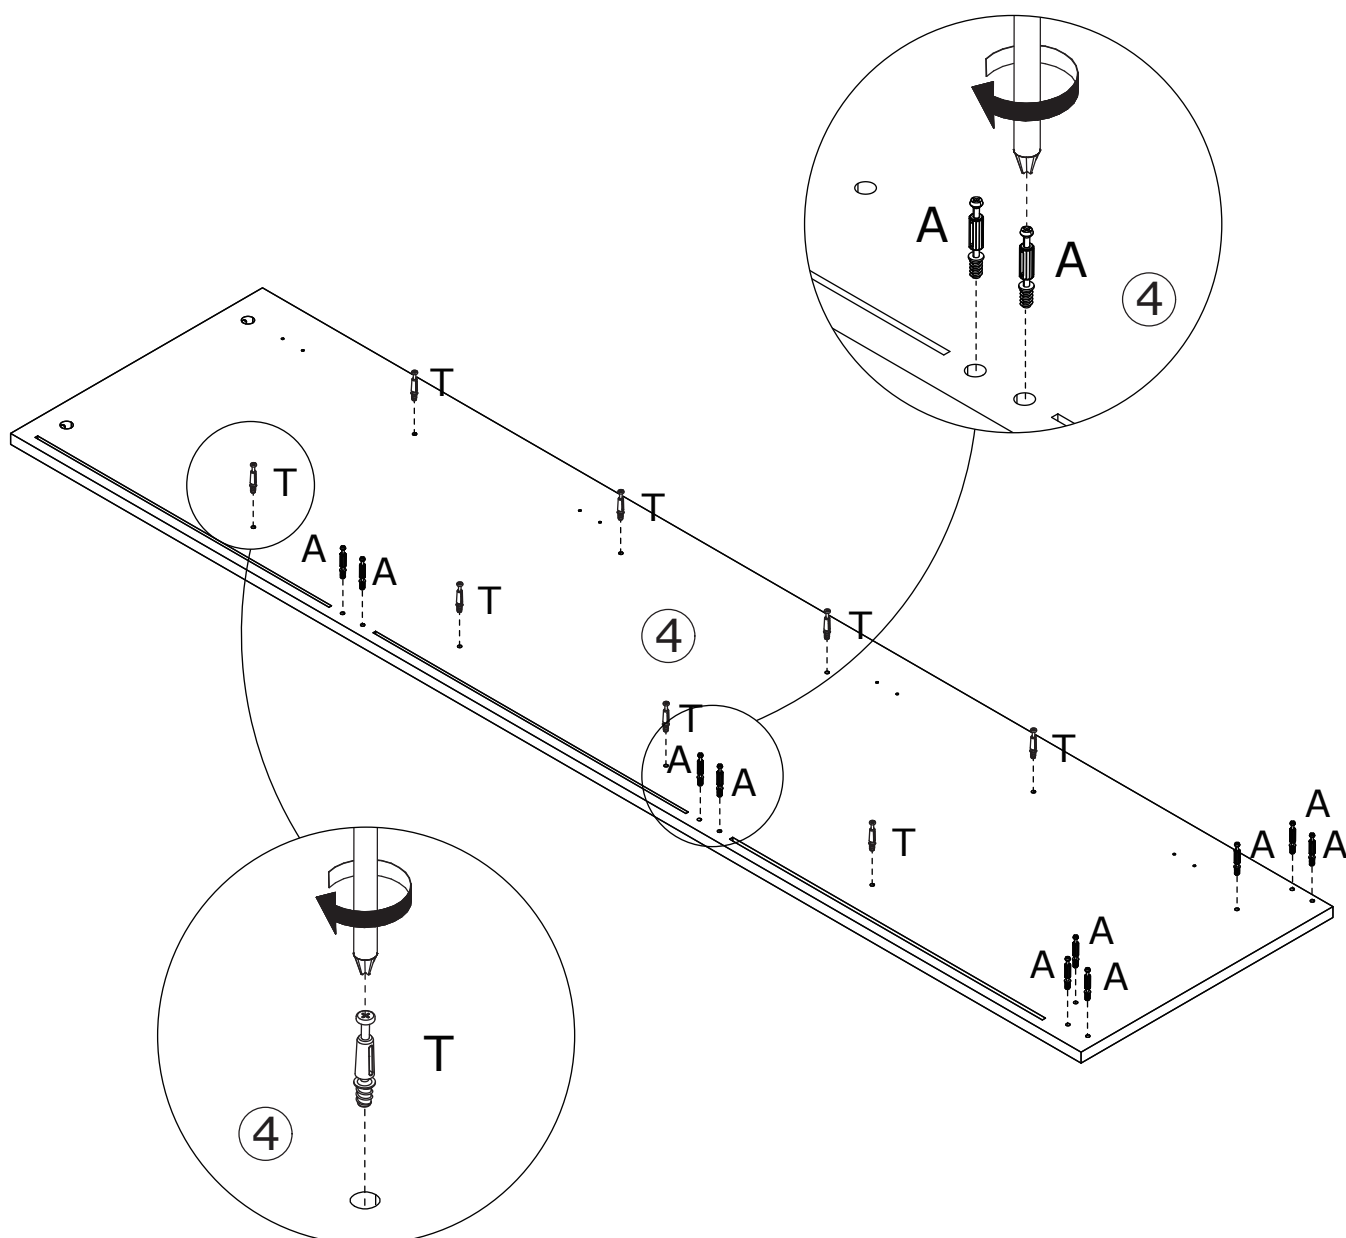


34

B x 18





Ø15 x 9 mm


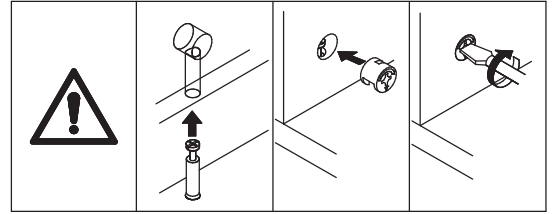


Connect parts 31, 32, 27, 28, 22, and 21 to part 4, then tighten by turning cam lock (B) clockwise.



(when tightening part 21, wait until the other parts in front are installed; the product must be upright before tightening).

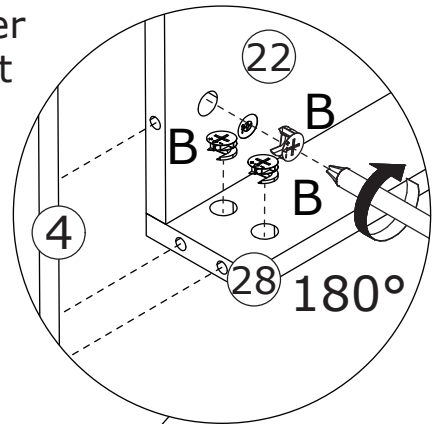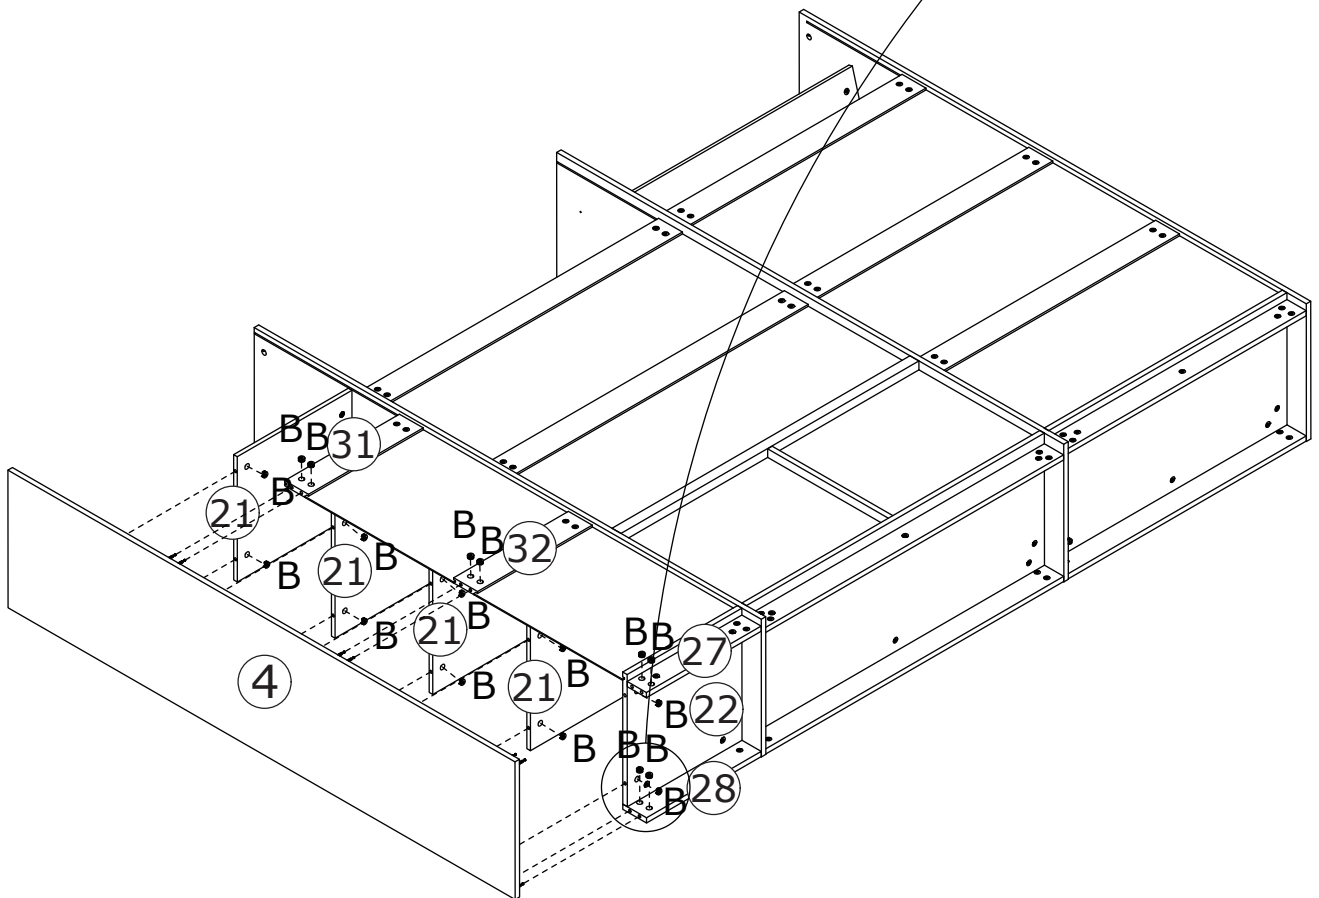

35



<p>C x 6</p>  <p>M3.5 x 12 mm</p>	<p>N x 1</p> 	<p>O x 2</p> 	<p>P x 10</p> 	
--	--	--	--	---

Insert parts 18, 47, and 50 along the available grooves. Connect part (O) to rod (N), and secure the component to parts 2 and 3 using screw (C).
(Note: The product should be upright at this stage.)

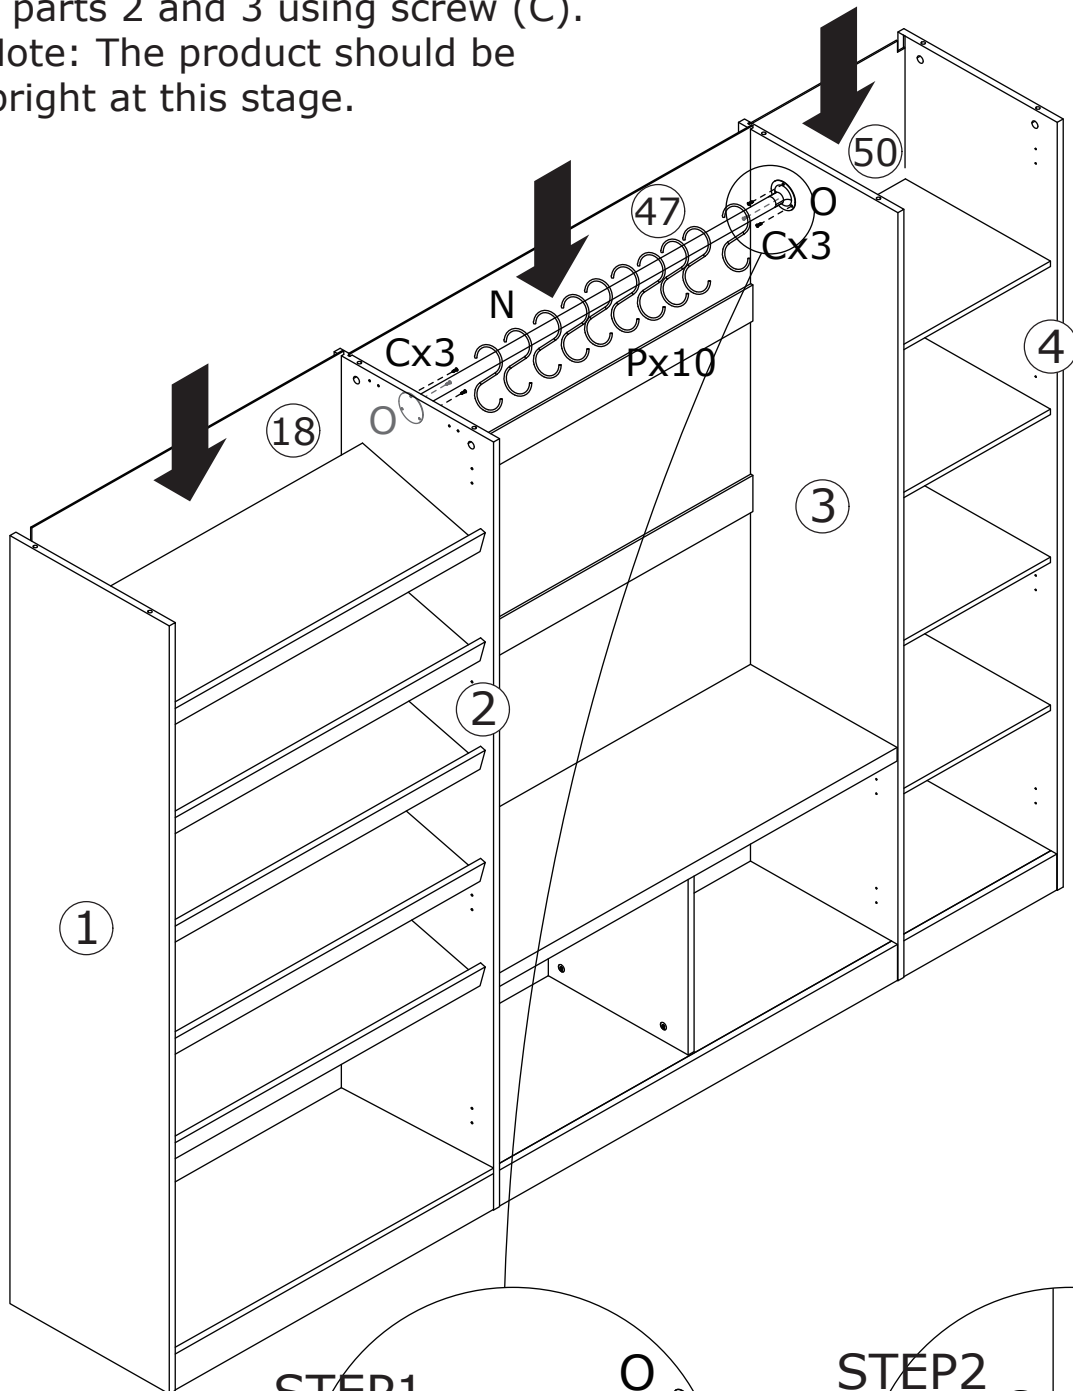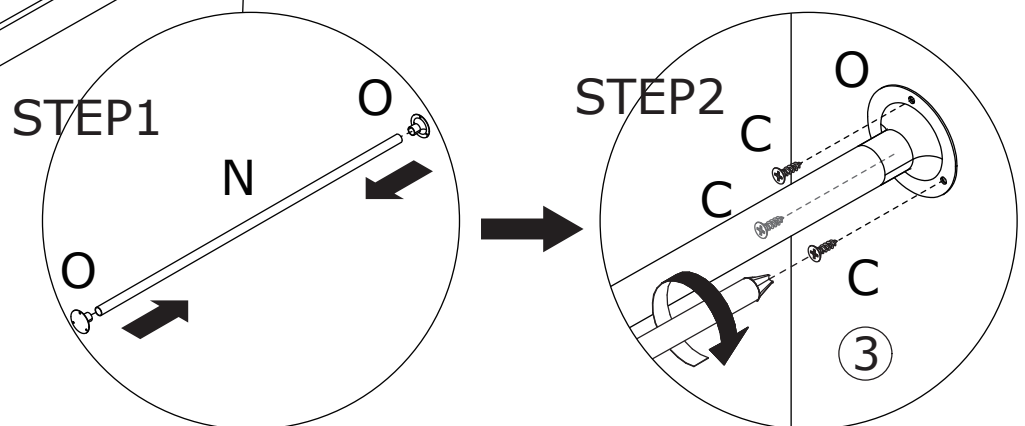


36

A x 2
M6 x 40 mm


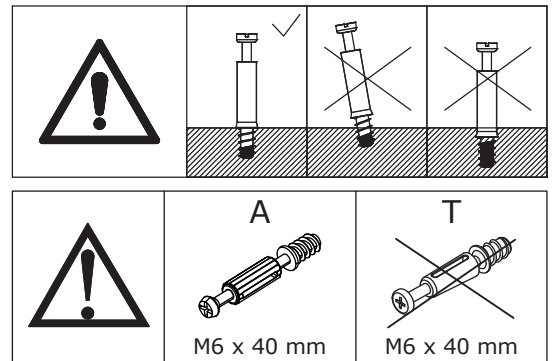


Screw eccentric rod (A) to part 5.

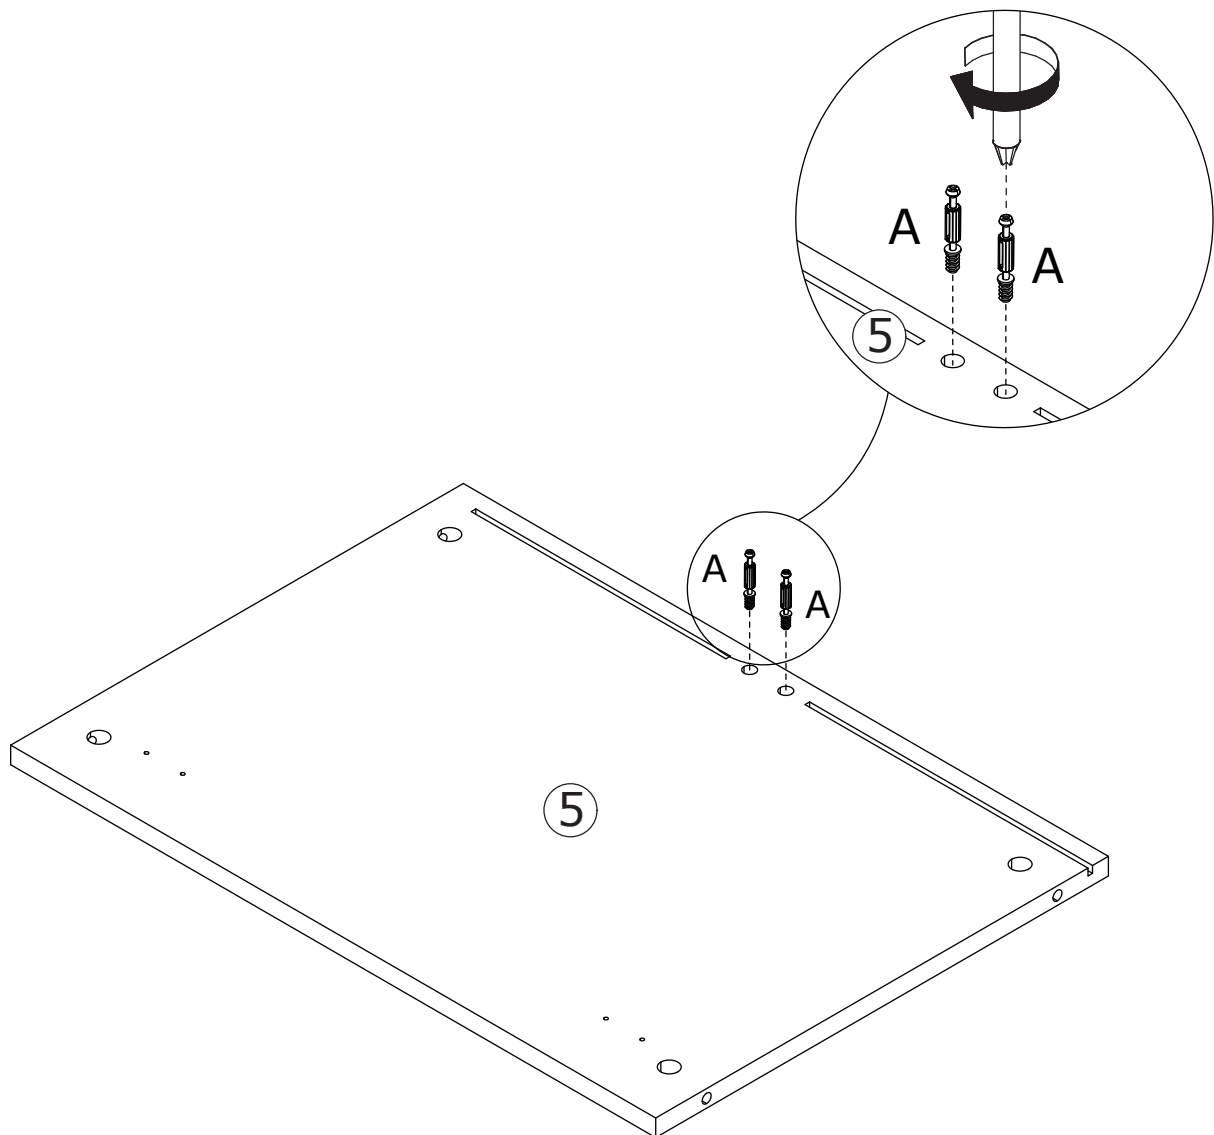


37

A x 2
M6 x 40 mm

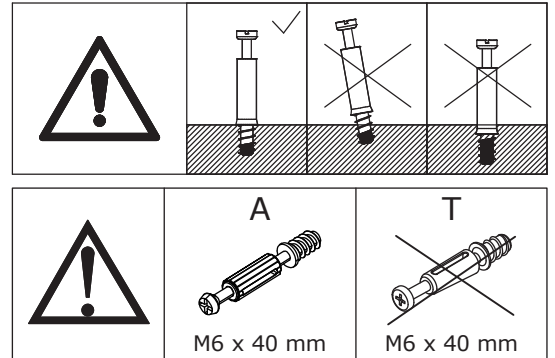

Screw eccentric rod (A) to part 6.


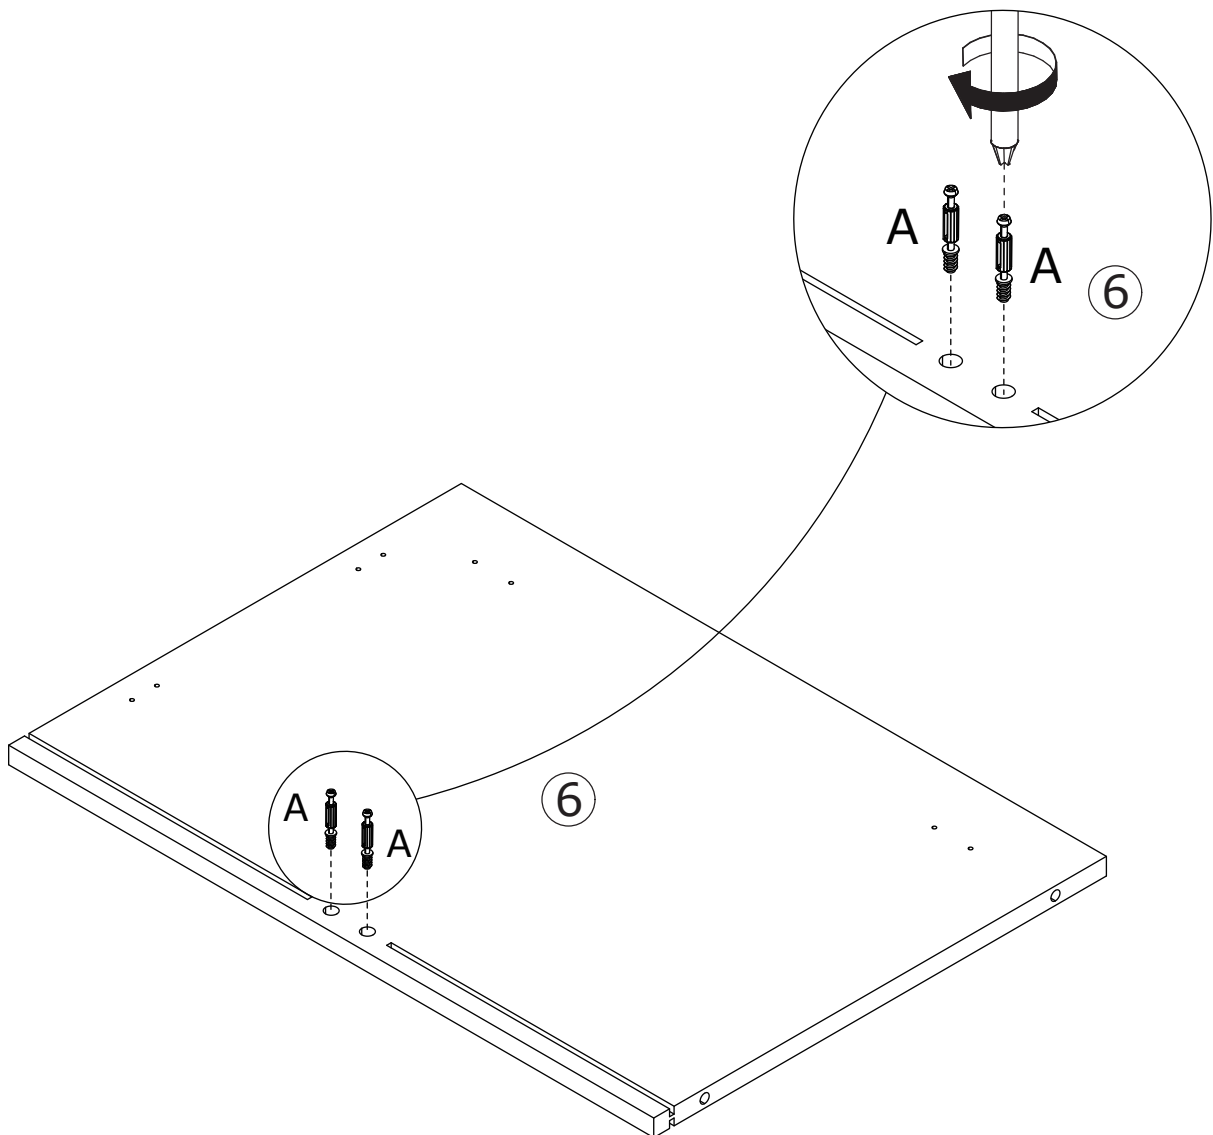


38


B x 4




Ø15 x 9 mm

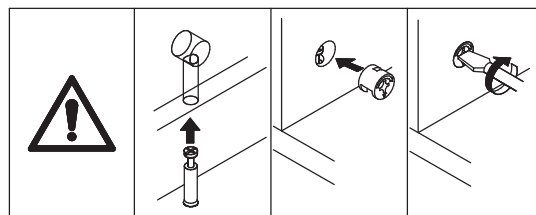




Connect parts 5 and 6 to part 29, then tighten by turning cam lock (B) clockwise.

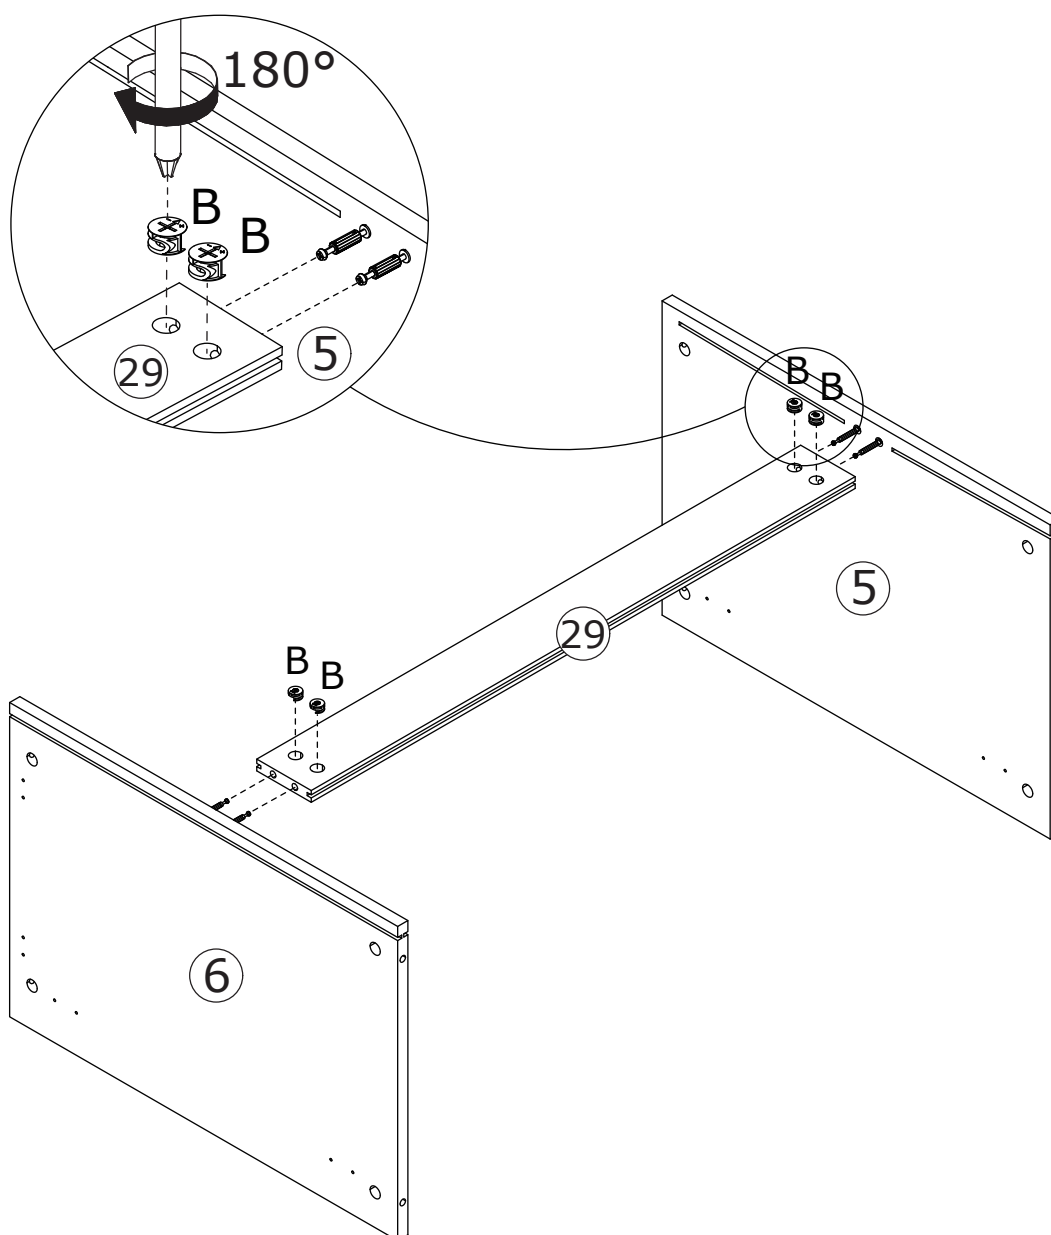



Insert part 44 along the available grooves.

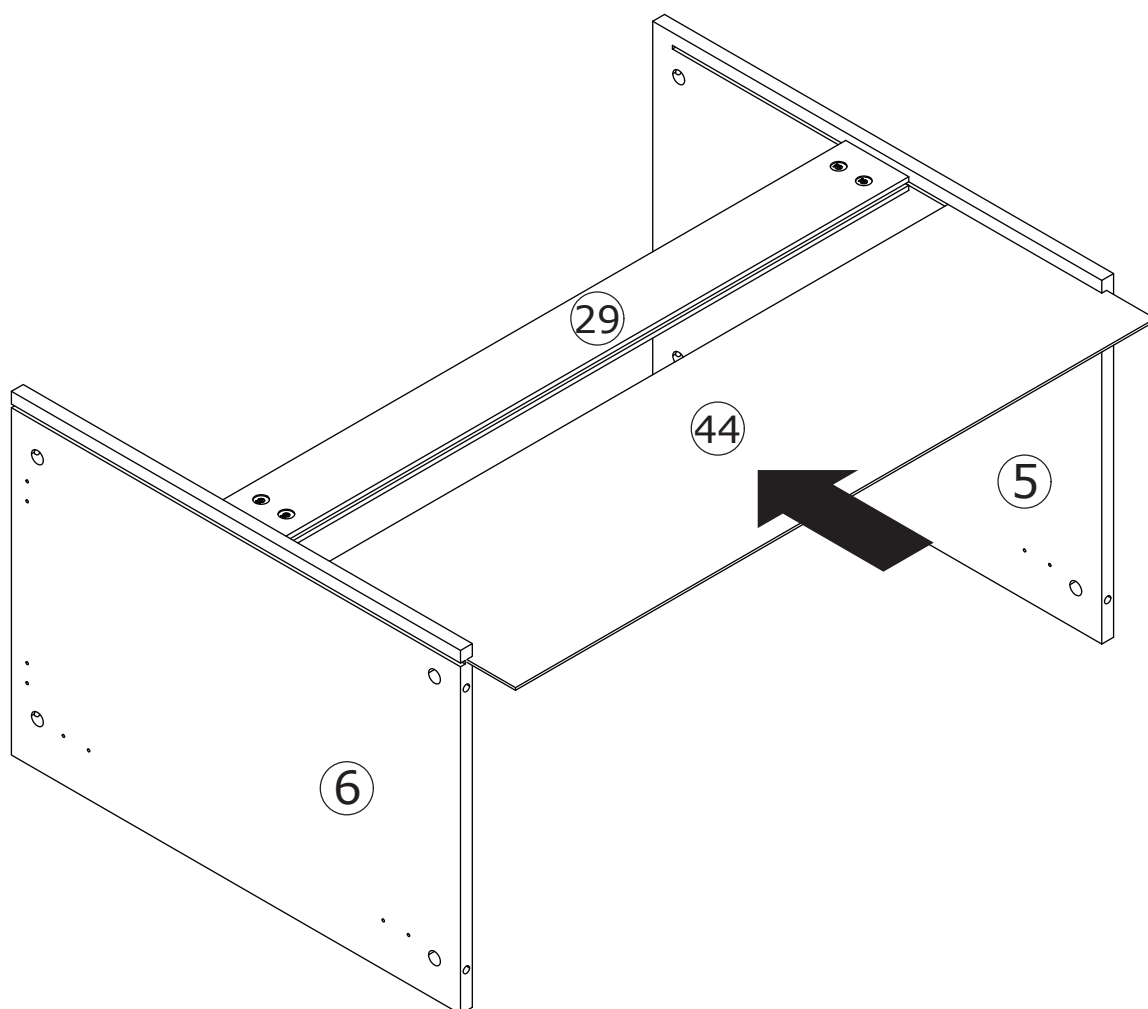



40

<p>A x 2</p>  <p>M6 x 40 mm</p>	<p>C x 5</p>  <p>M3.5 x 12 mm</p>	<p>D x 2</p> 	<p>E x 1</p> 	
--	--	--	---	---



Screw eccentric rod (A) to part 10.
Secure part (D) and (E) to part 10
using screw (C).

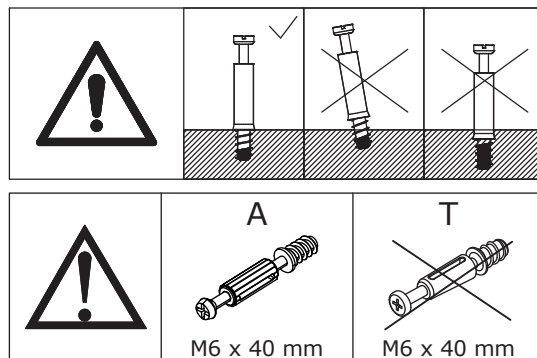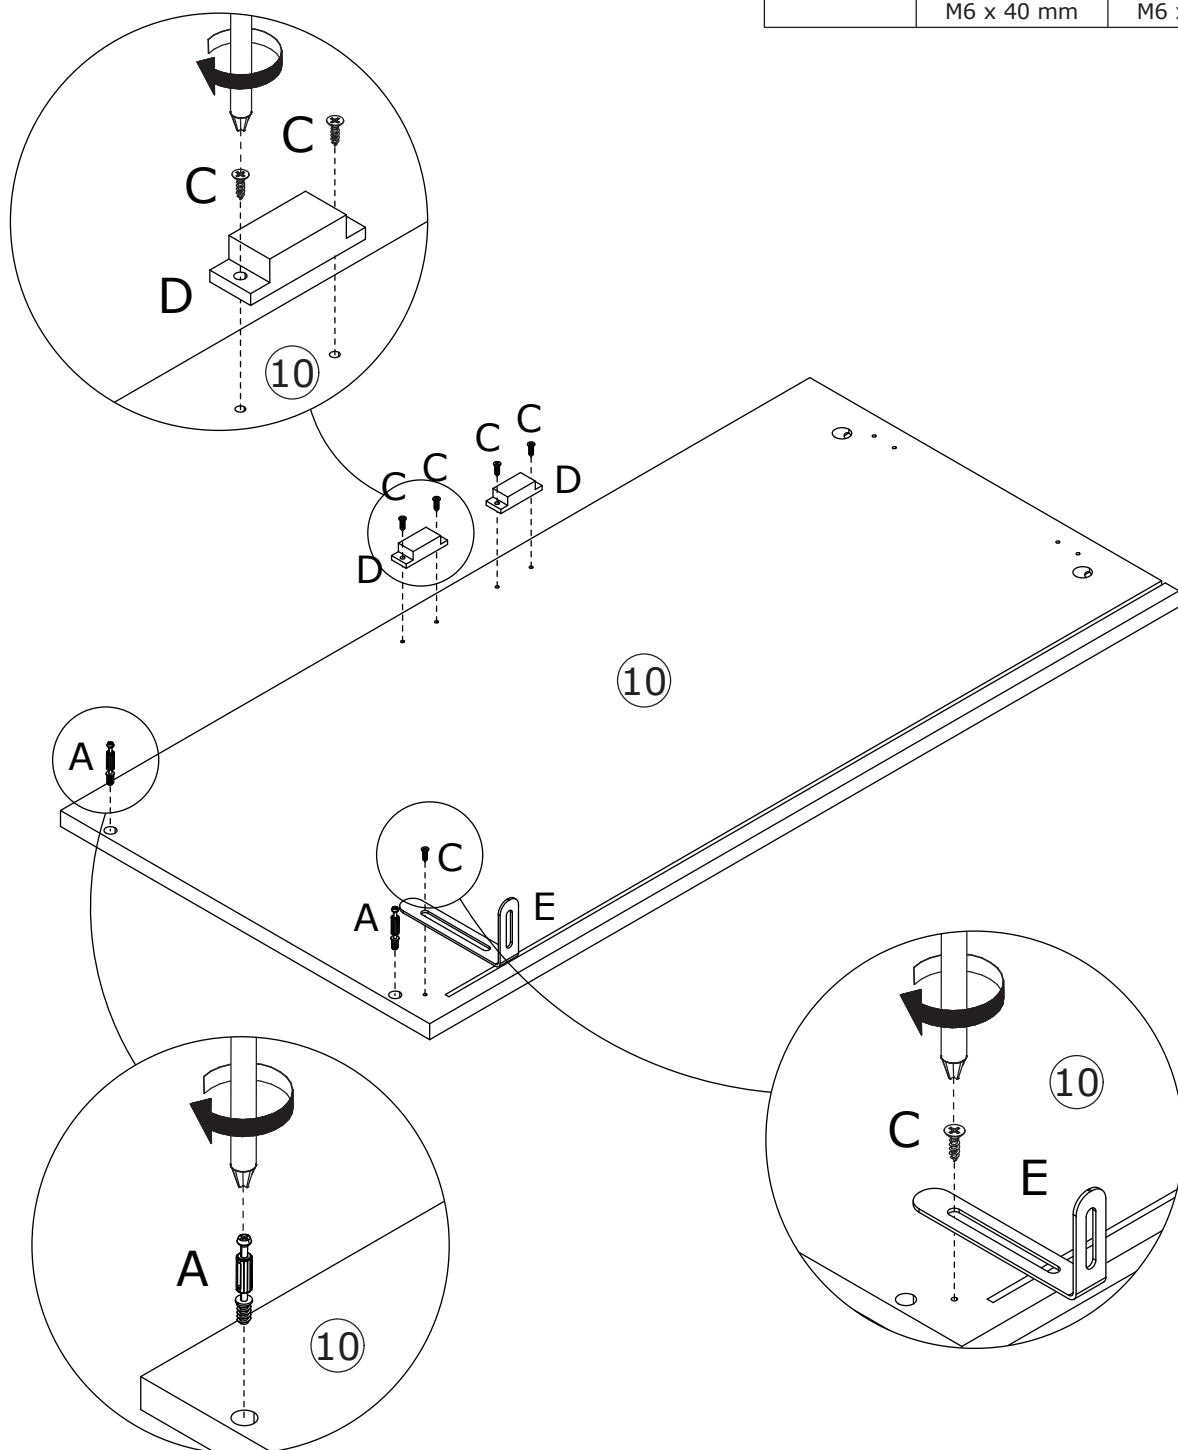



41



<p>A x 8</p>  <p>M6 x 40 mm</p>	<p>C x 3</p>  <p>M3.5 x 12 mm</p>	<p>D x 1</p> 	<p>E x 1</p> 	
--	--	--	---	---

Screw eccentric rod (A) to part 11.
Secure part (D) and (E) to part 11
using screw (C).

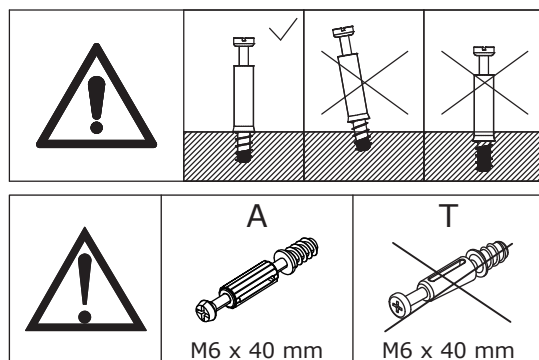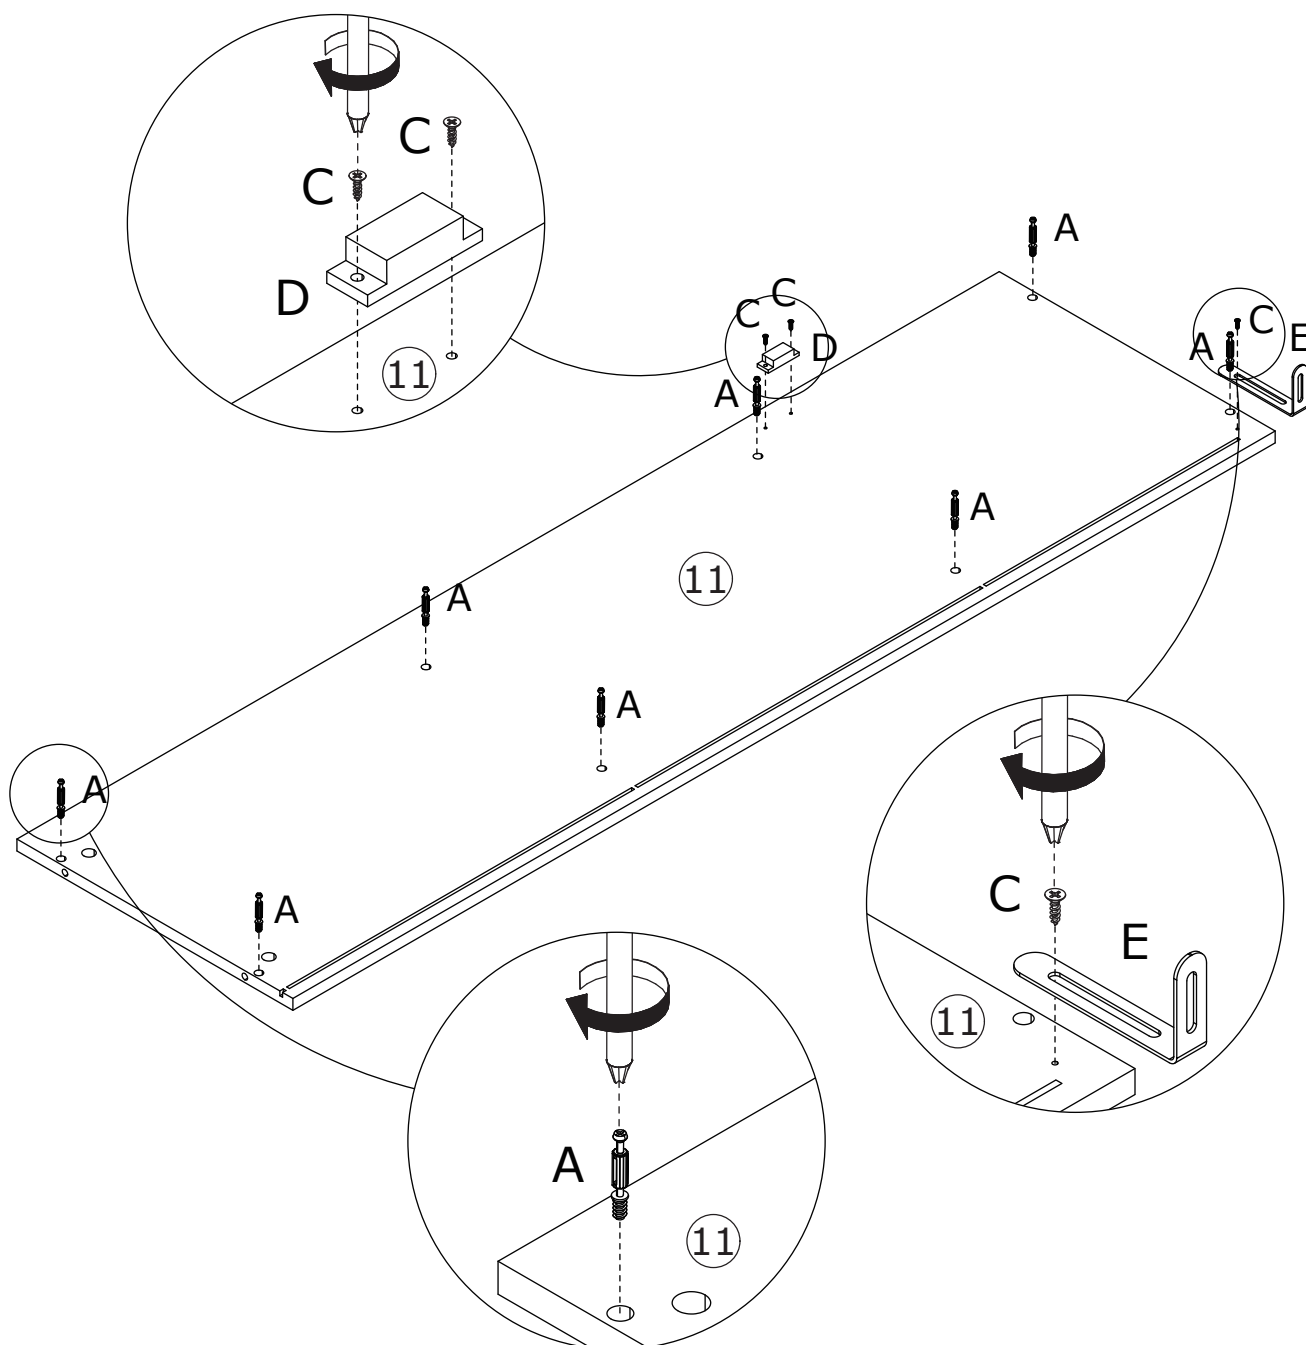


42

<p>A x 4</p>  <p>M6 x 40 mm</p>	<p>C x 5</p>  <p>M3.5 x 12 mm</p>	<p>D x 2</p> 	<p>E x 1</p> 	
--	--	--	---	---

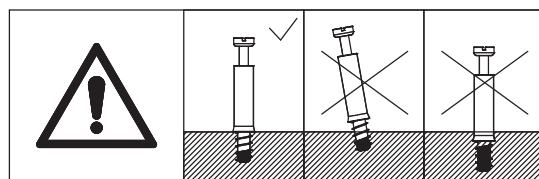
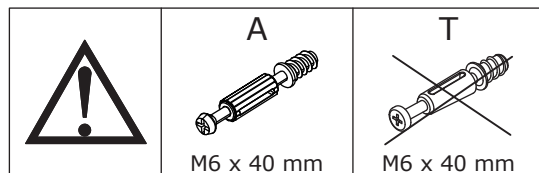


Screw eccentric rod (A) to **both sides** of part 12.



Secure part (D) and (E) to part 12 using screw (C).

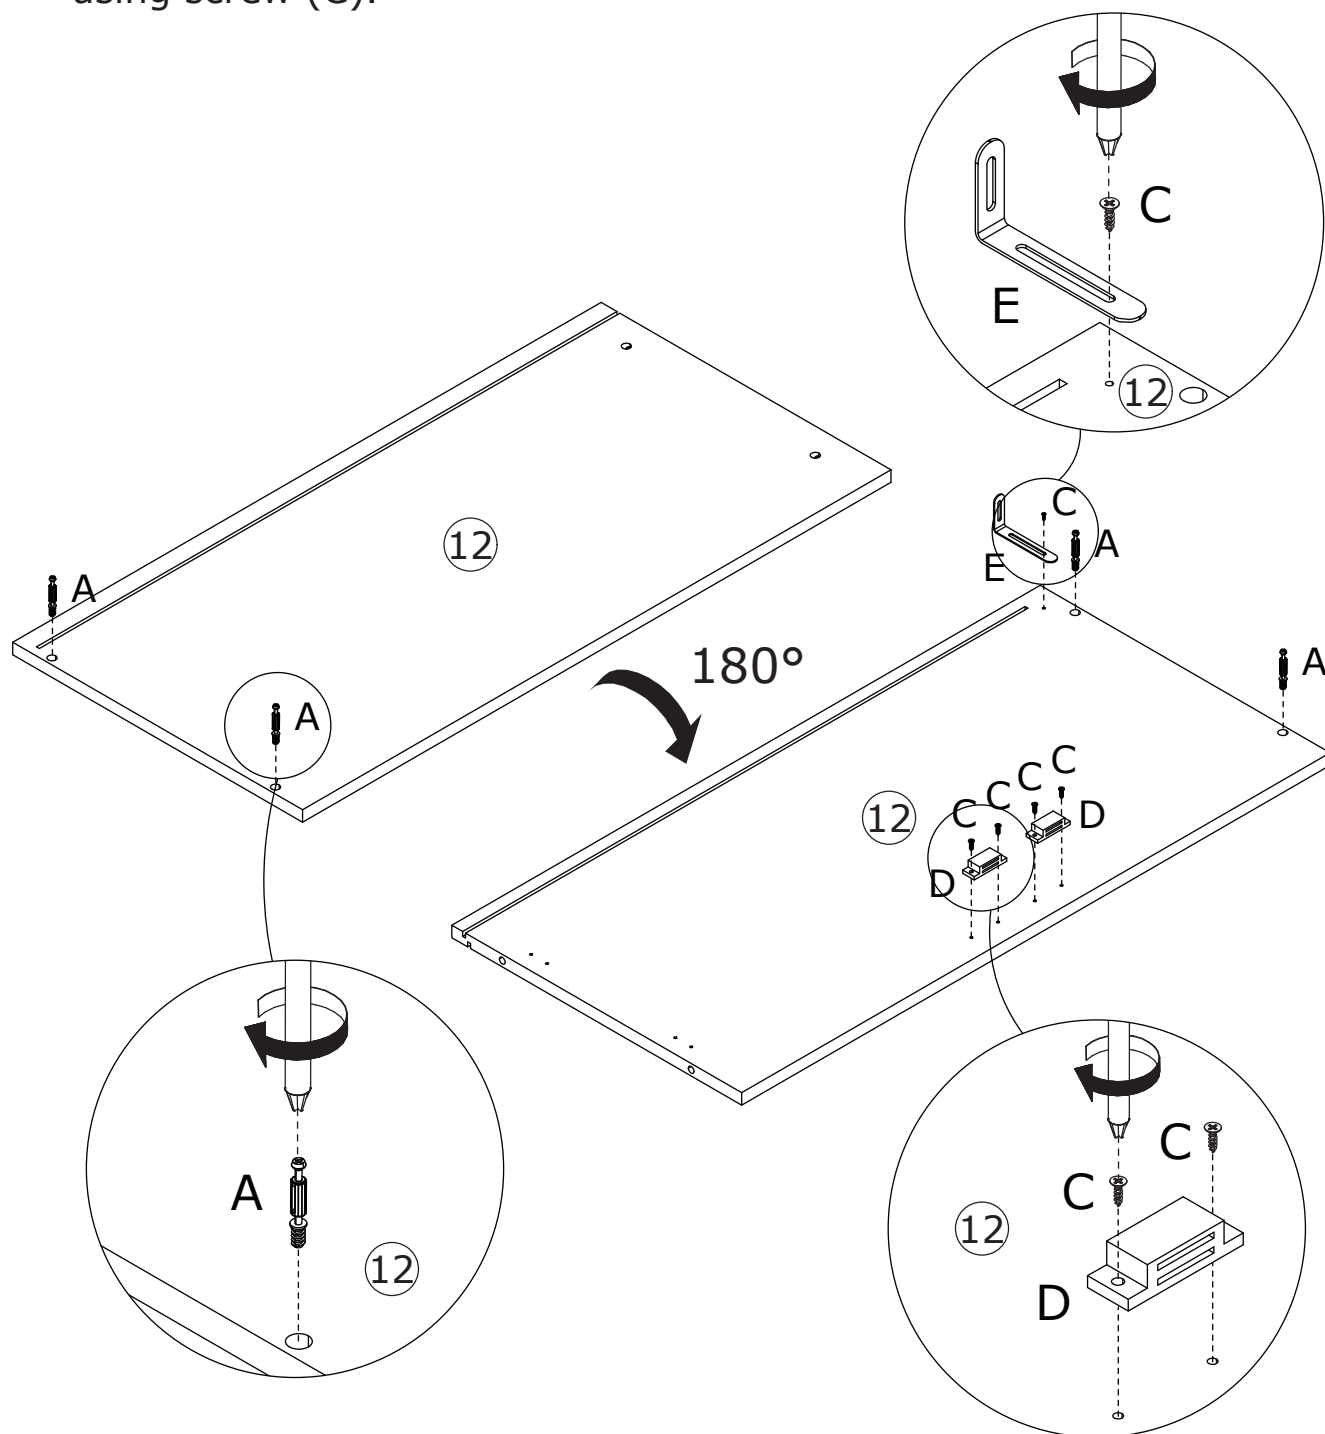

43

<p>A x 14</p>  <p>M6 x 40 mm</p>	<p>C x 1</p>  <p>M3.5 x 12 mm</p>	<p>E x 1</p> 	
---	--	--	---

Screw eccentric rod (A) to **both sides** of part 13.
Secure part (E) to part 13 using screw (C).

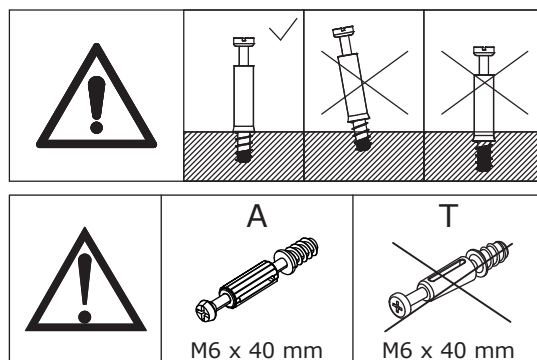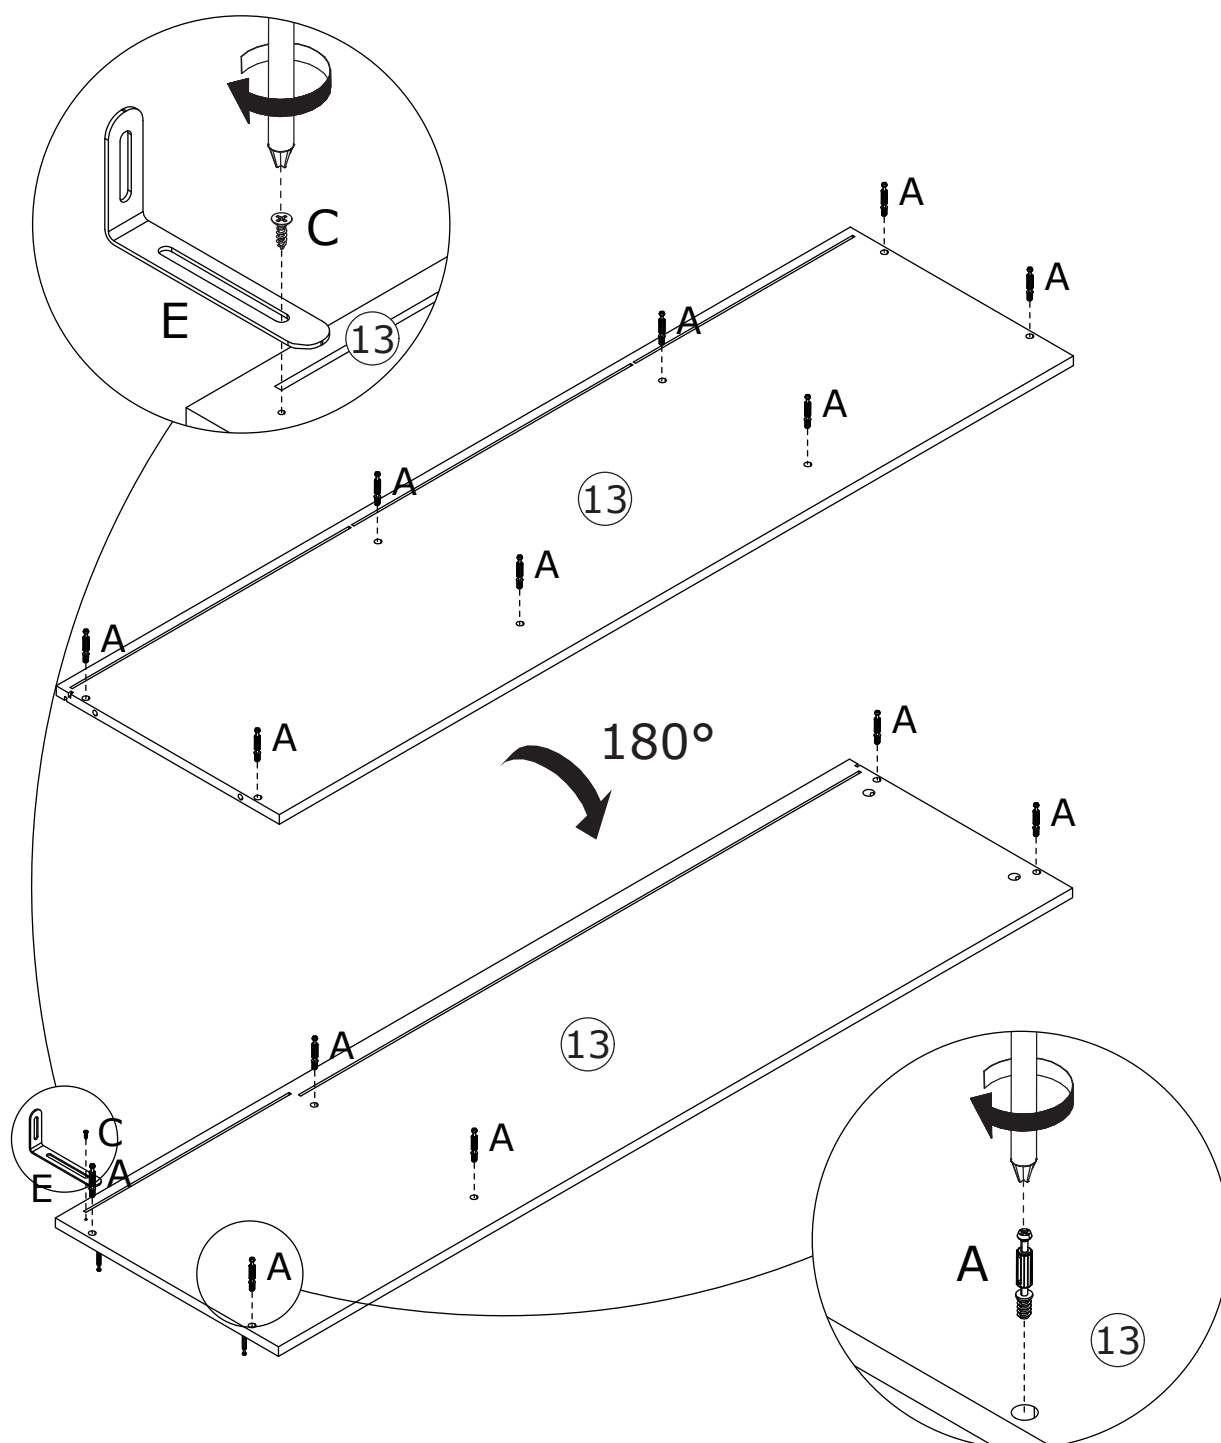






44

B x 4




Ø15 x 9 mm

F x 2

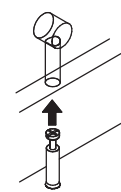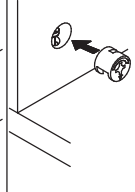
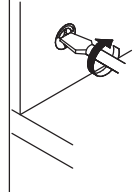


Connect part 10 to part 11 using eccentric rod (F), then tighten by turning cam lock (B) clockwise.

STEP1

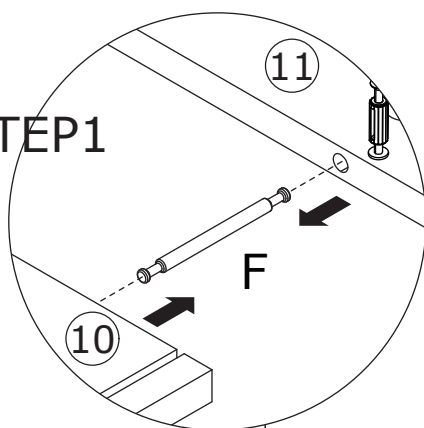

STEP2

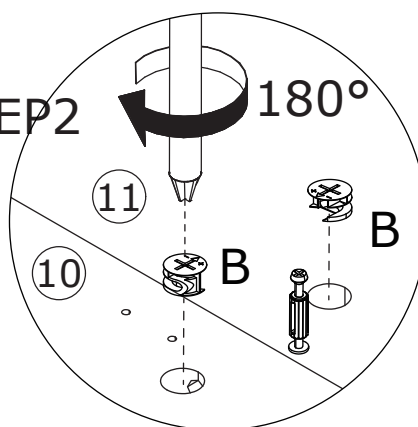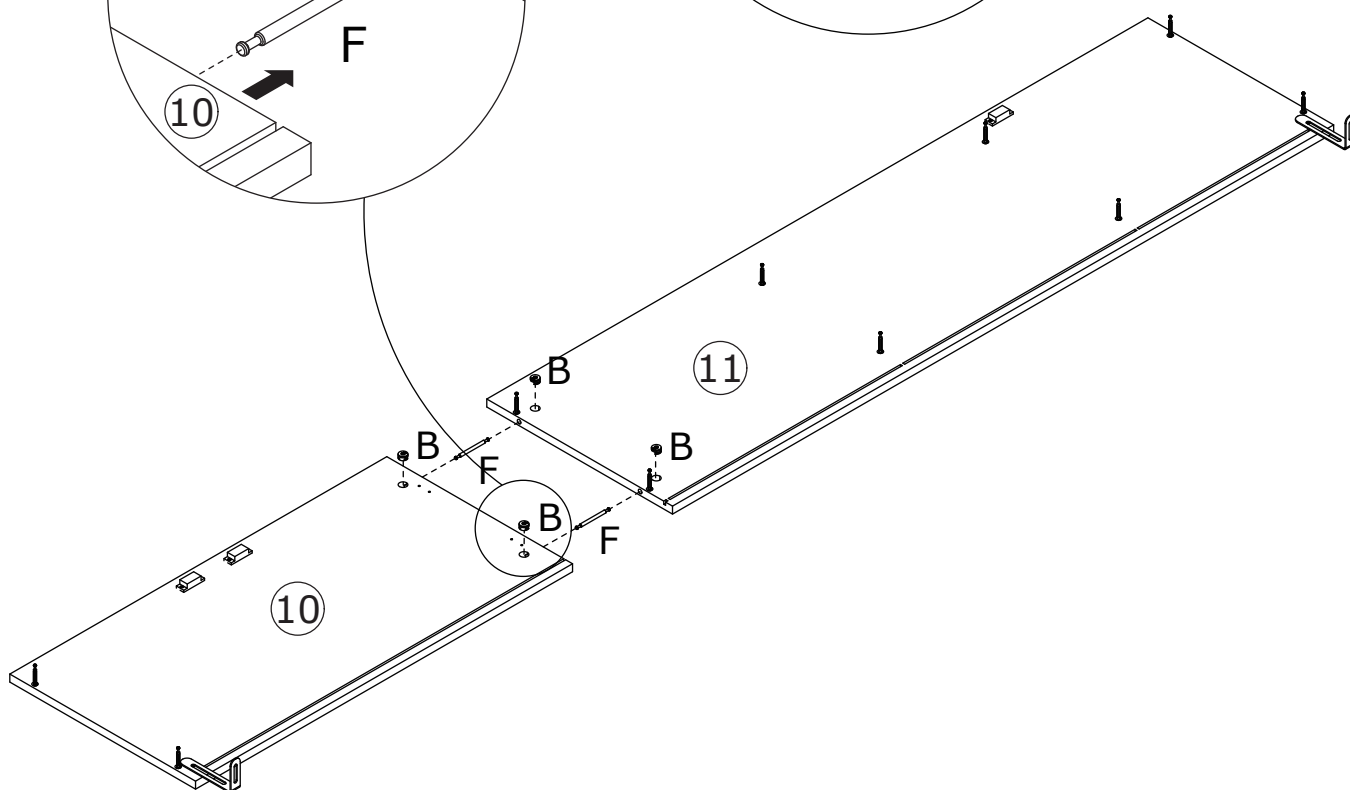






45

B x 4




Ø15 x 9 mm

F x 2

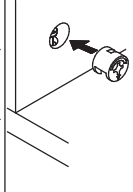
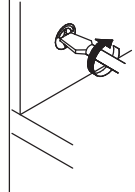


Connect part 12 to part 13 using eccentric rod (F), then tighten by turning cam lock (B) clockwise.

STEP1

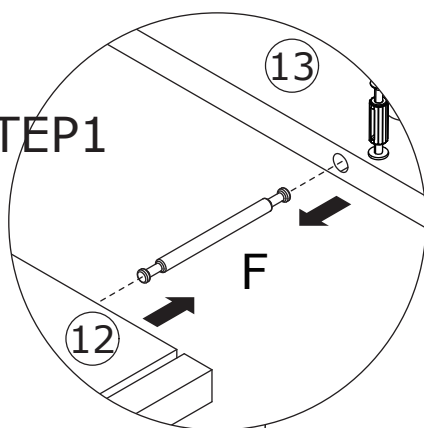

STEP2

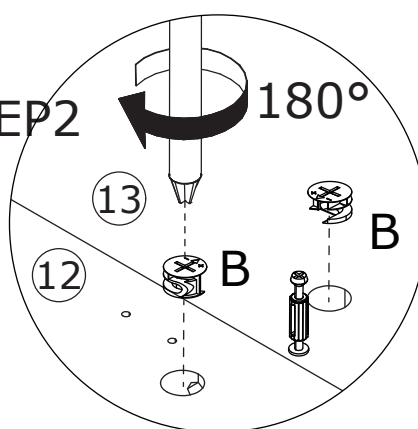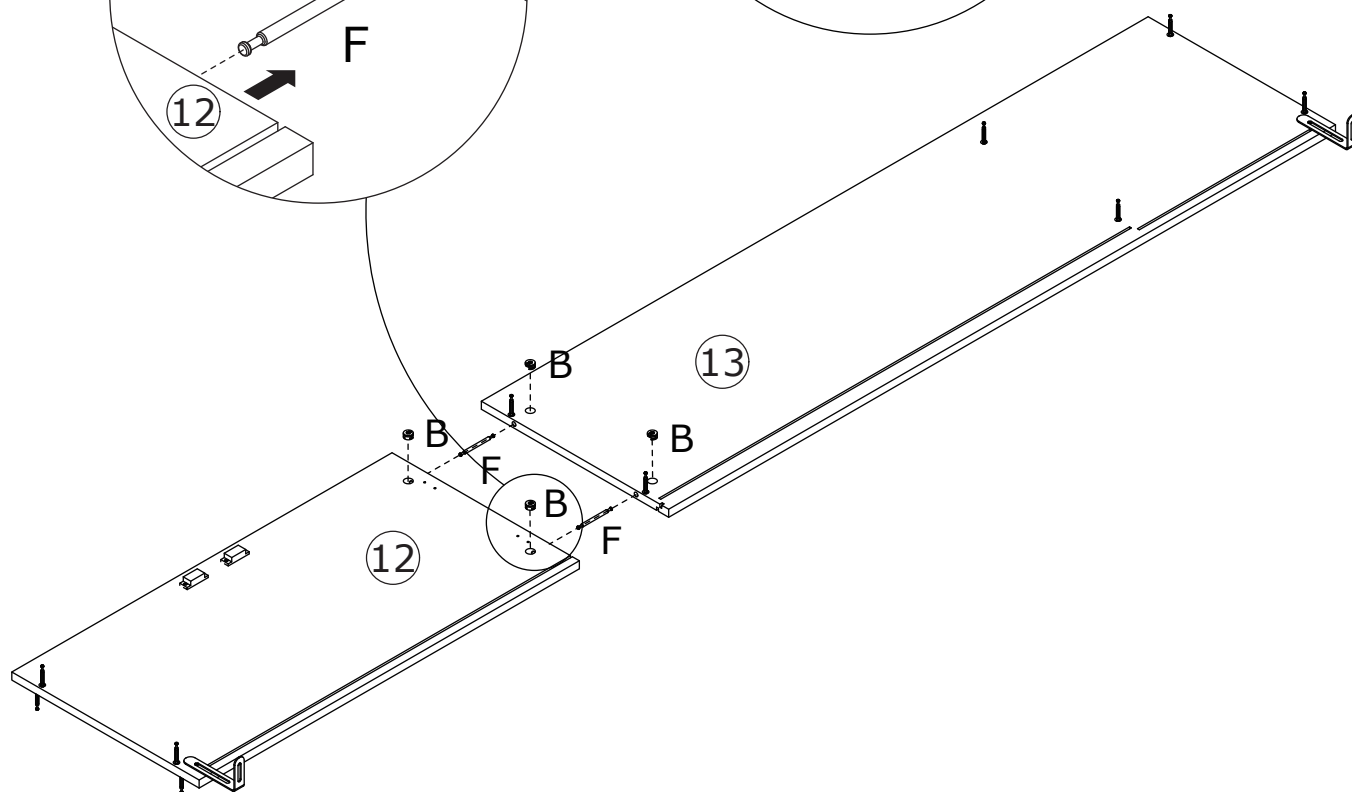



46

C x 4




M3.5 x 12 mm

G x 2



Secure bracket (G) to part 12 using screw (C).




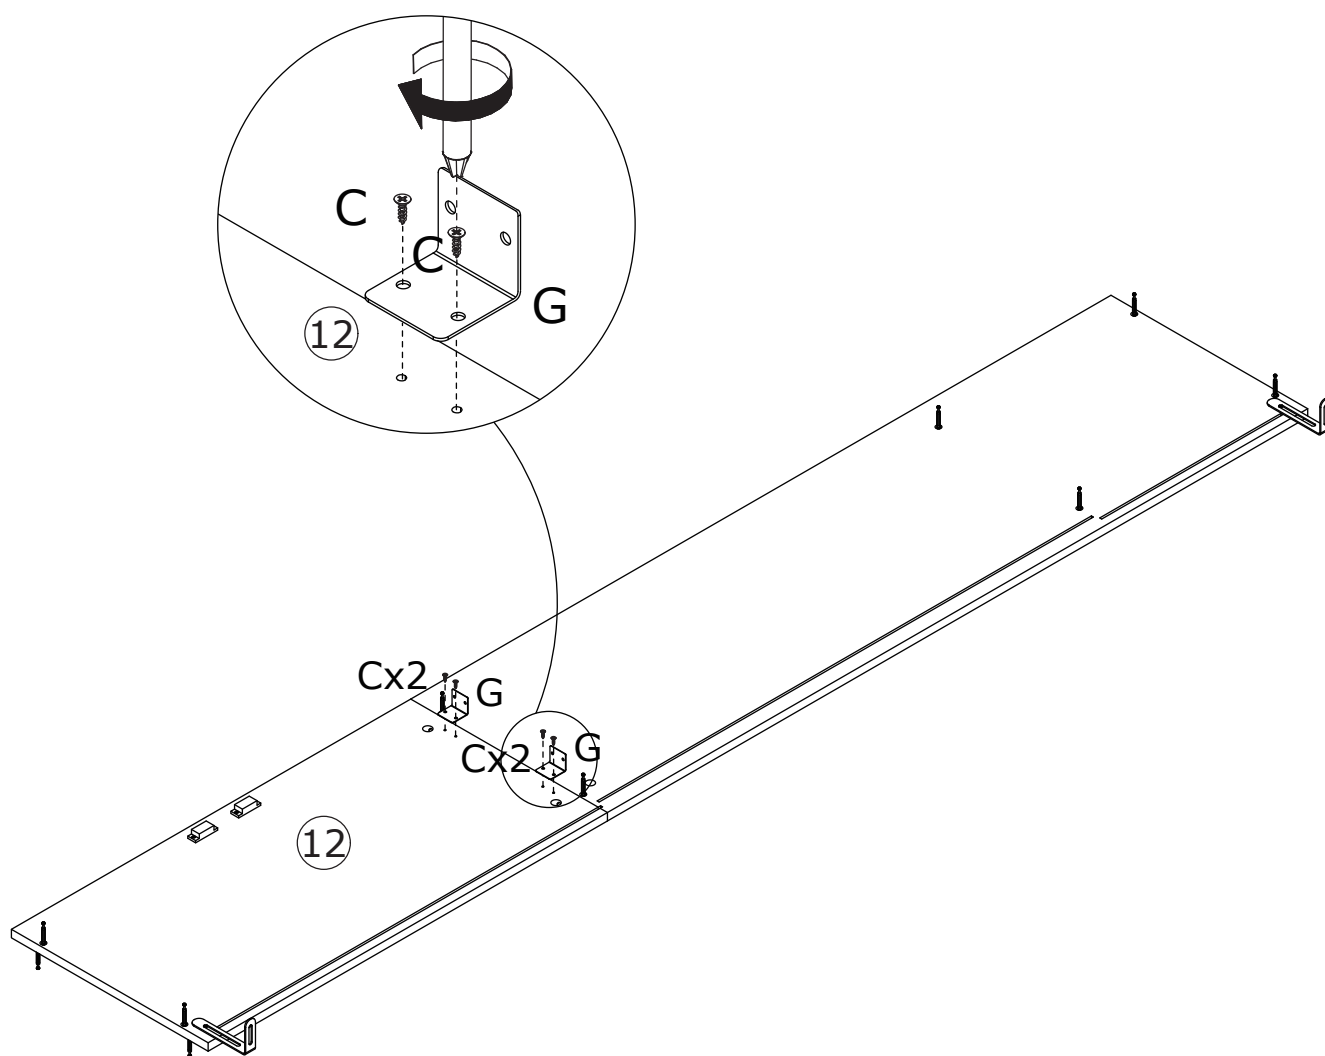


47



B x 10




Ø15 x 9 mm

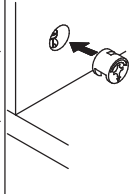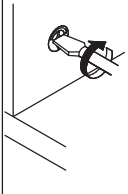

Connect parts 5, 6, 7, 8, and 9 to parts 12 and 13, then tighten by turning cam lock (B) clockwise.

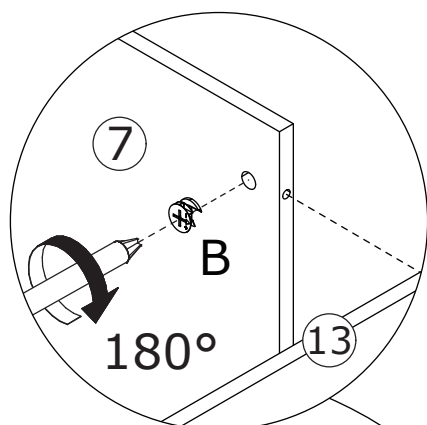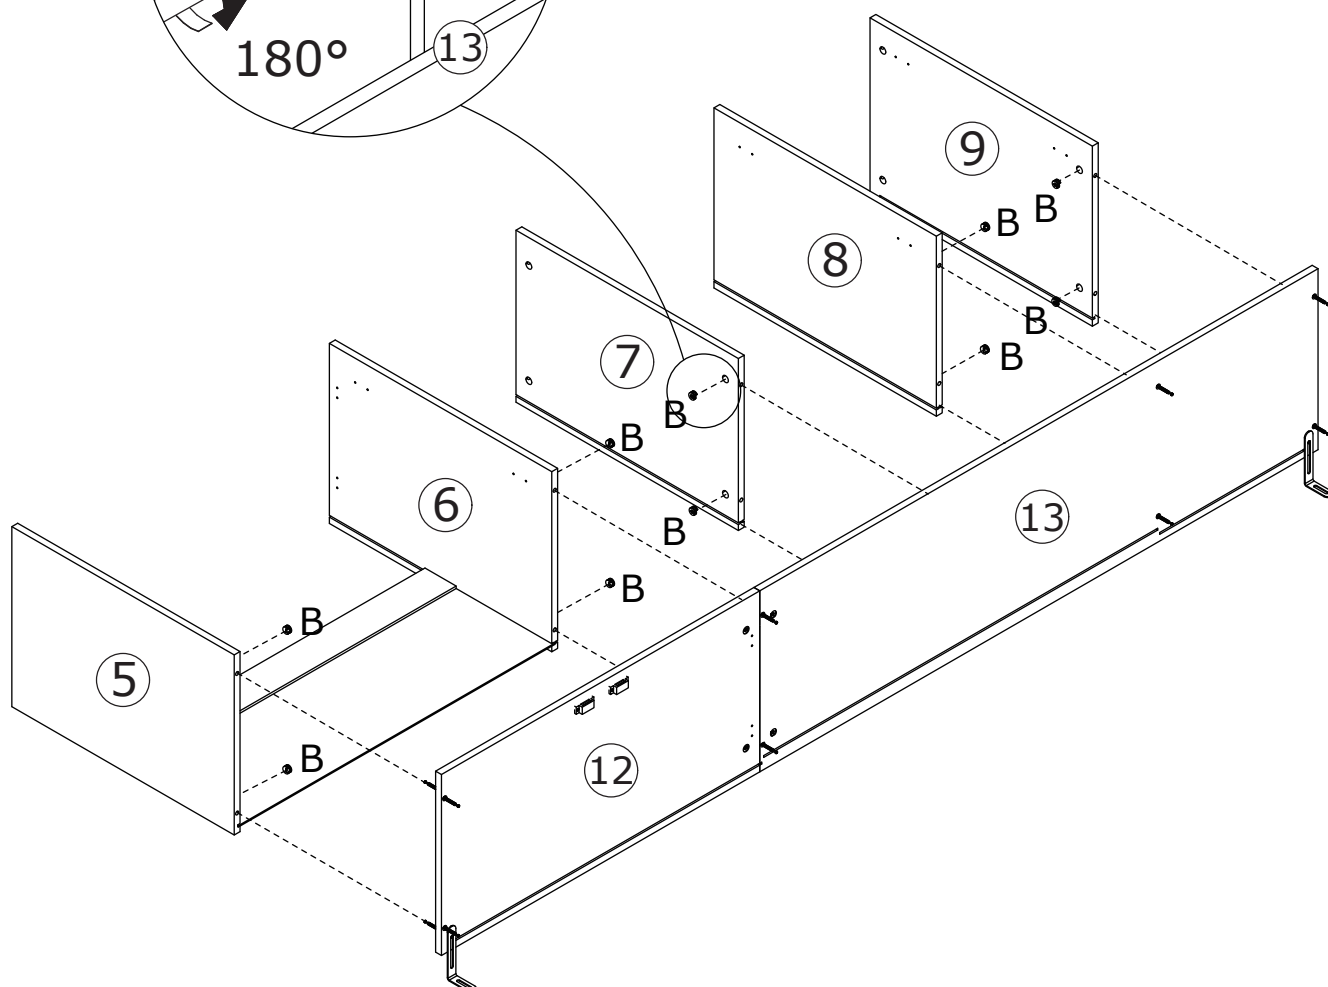

Insert parts 43, 46, and 49 along the available grooves.

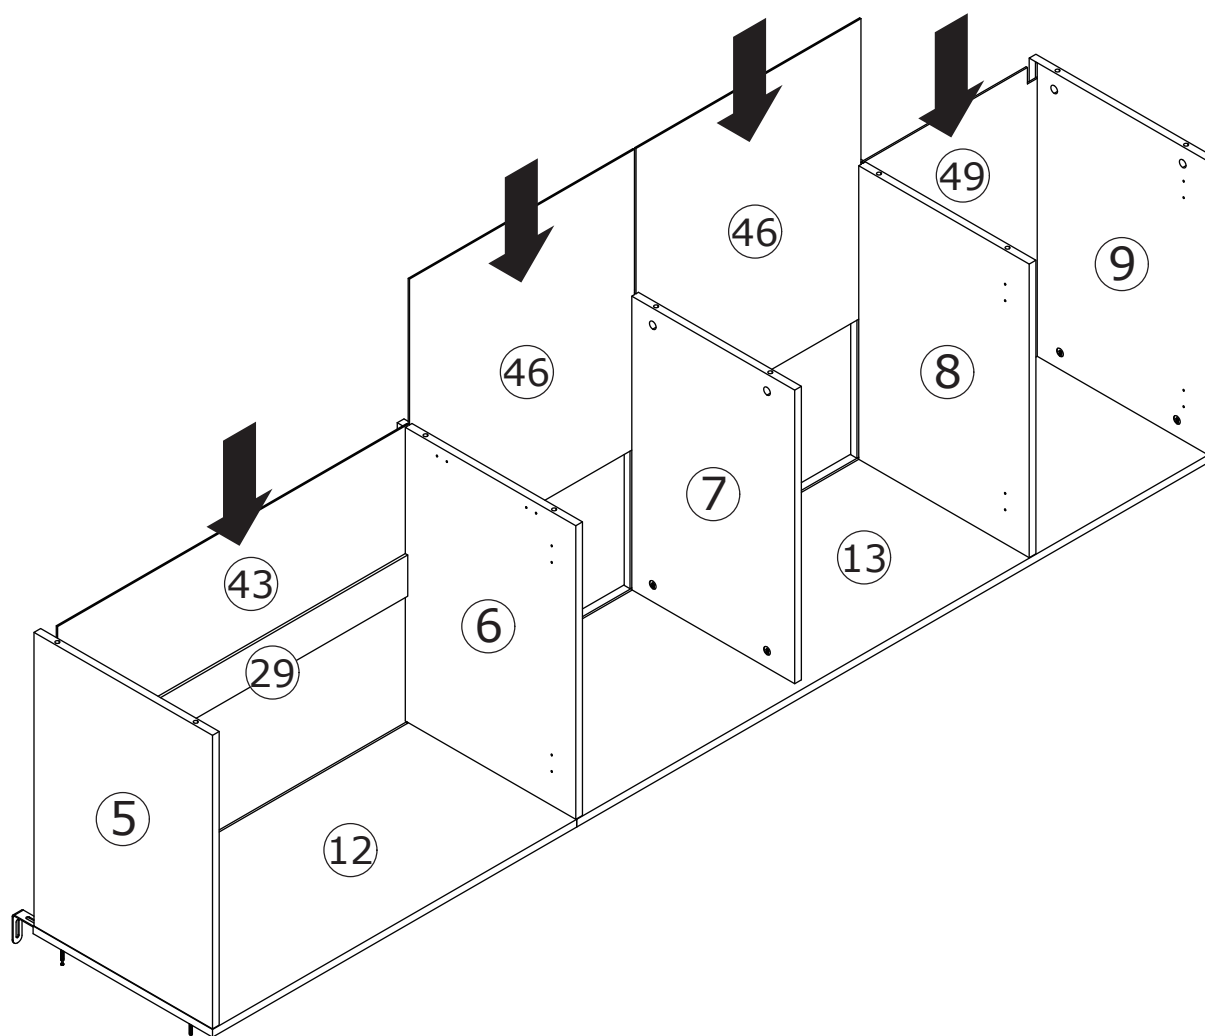


49



B x 10



Ø15 x 9 mm



Connect parts 10 and 11 to parts 5, 6, 7, 8, and 9, then tighten by turning cam lock (B) clockwise.

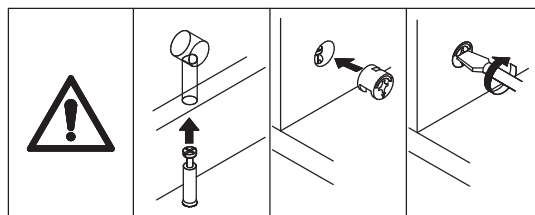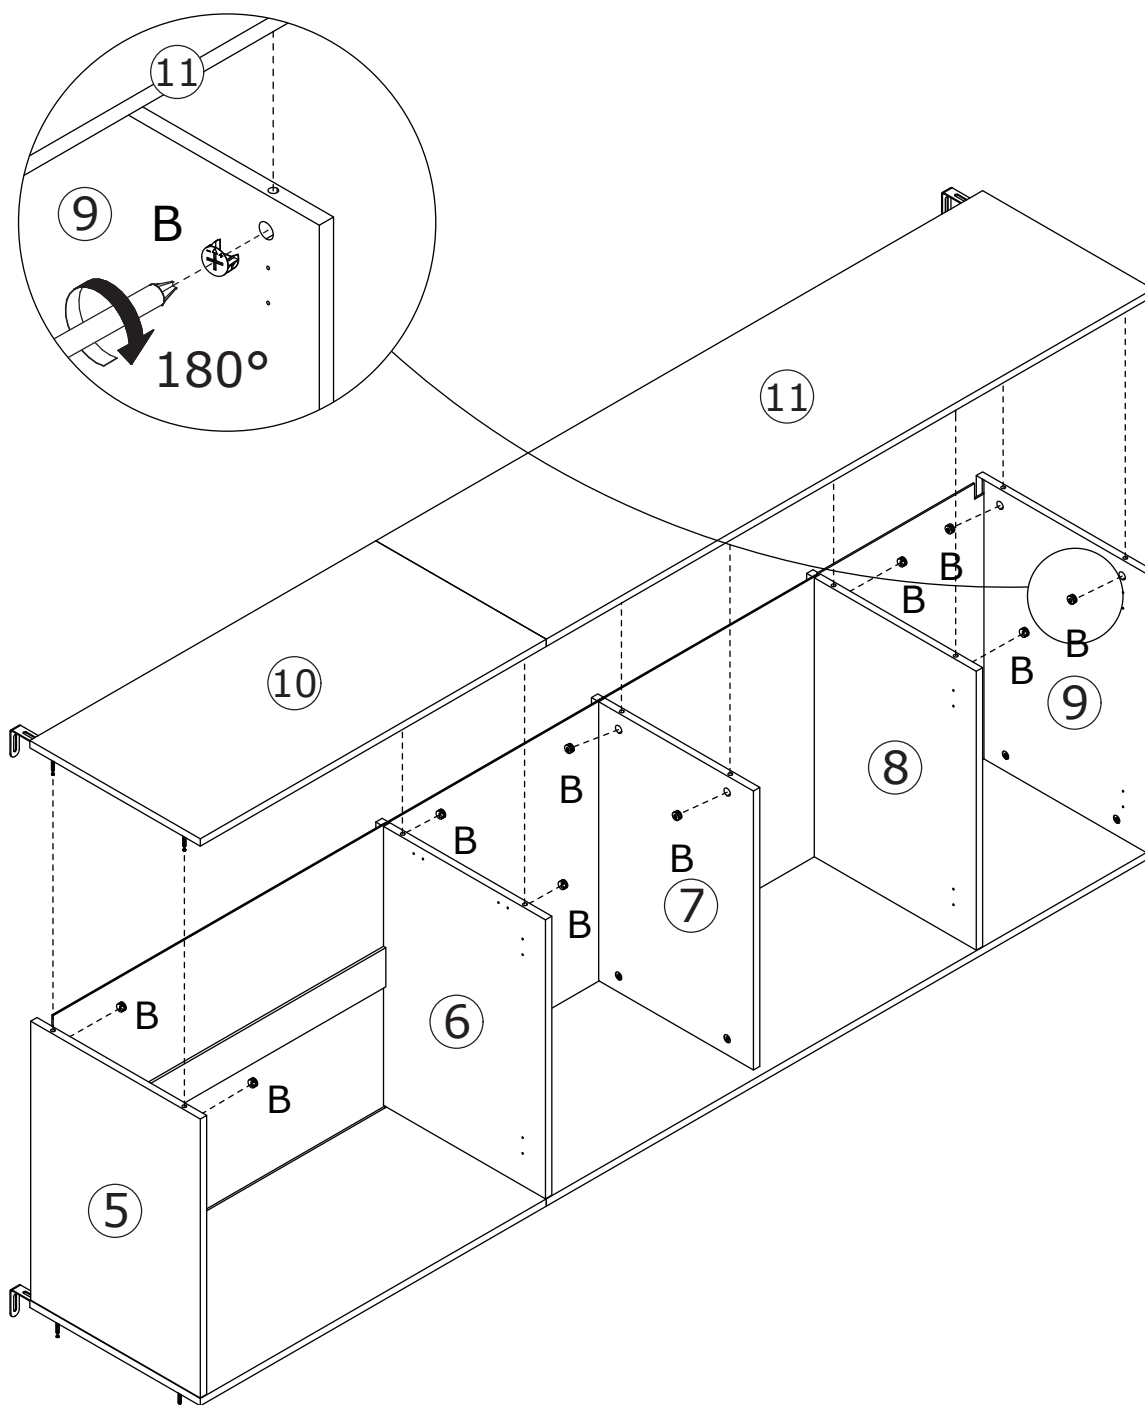



50

C x 8




M3.5 x 12 mm

G x 2



Secure bracket (G) to parts 10 and 6 using screw (C).

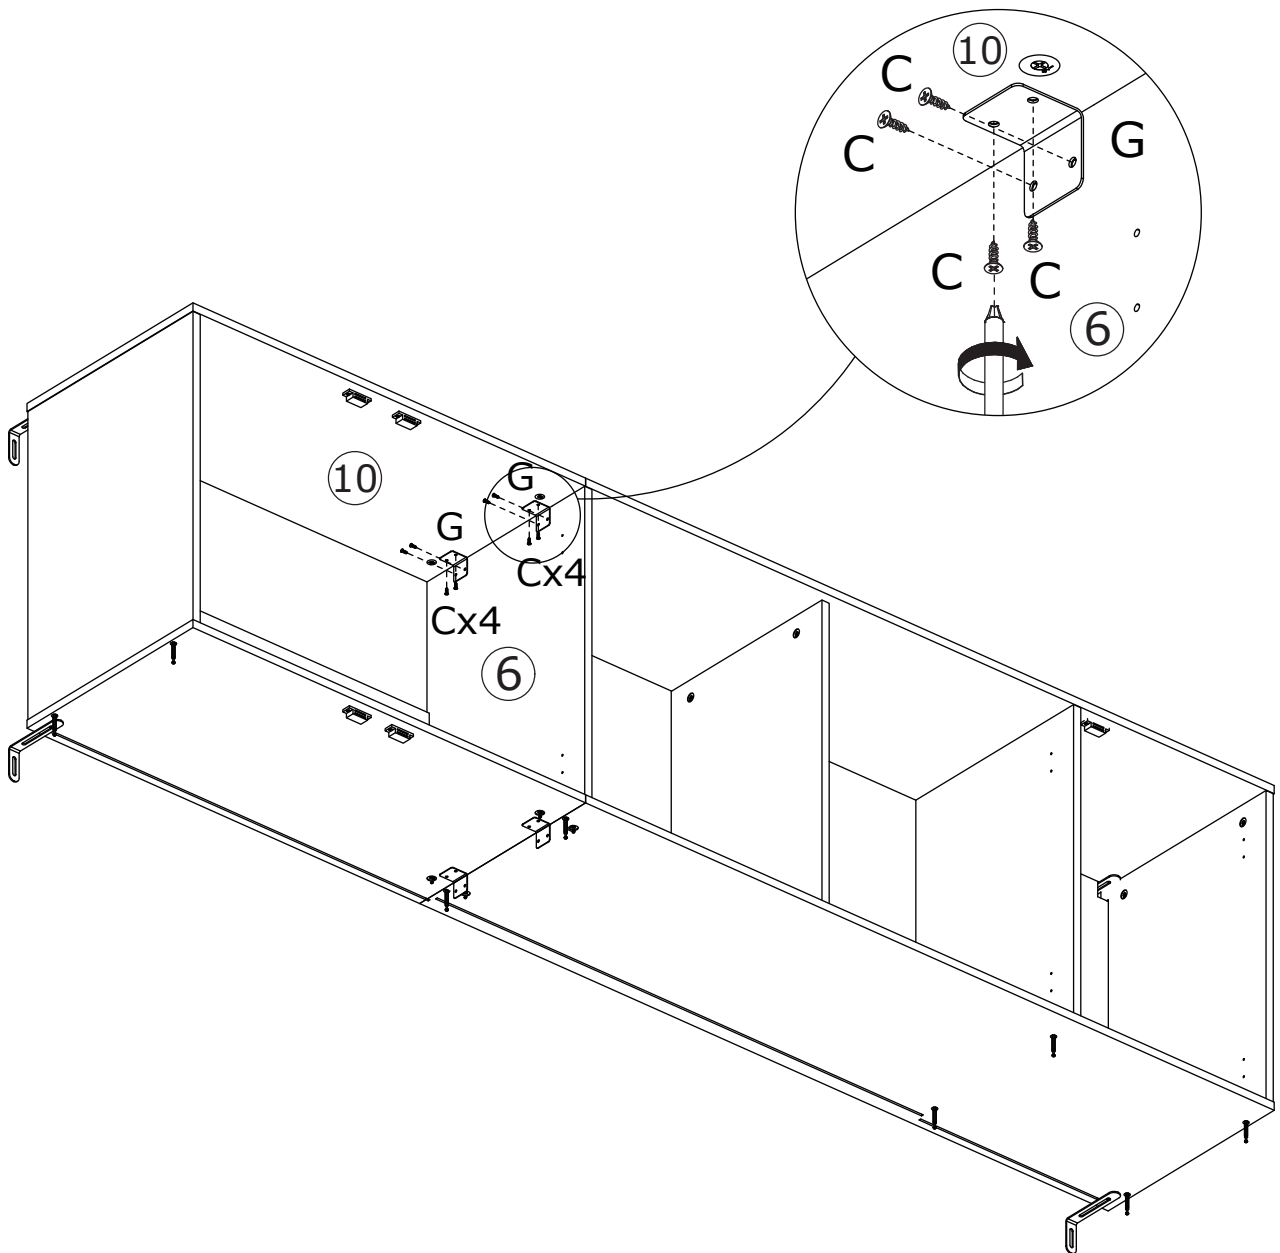


51




B x 8



Ø15 x 9 mm



Connect the two assembled units,
then tighten by turning cam lock (B)
clockwise.

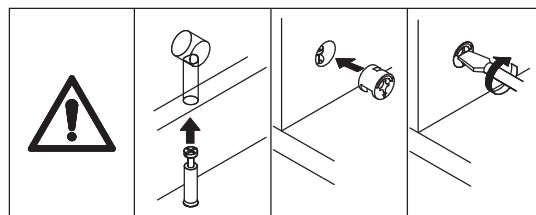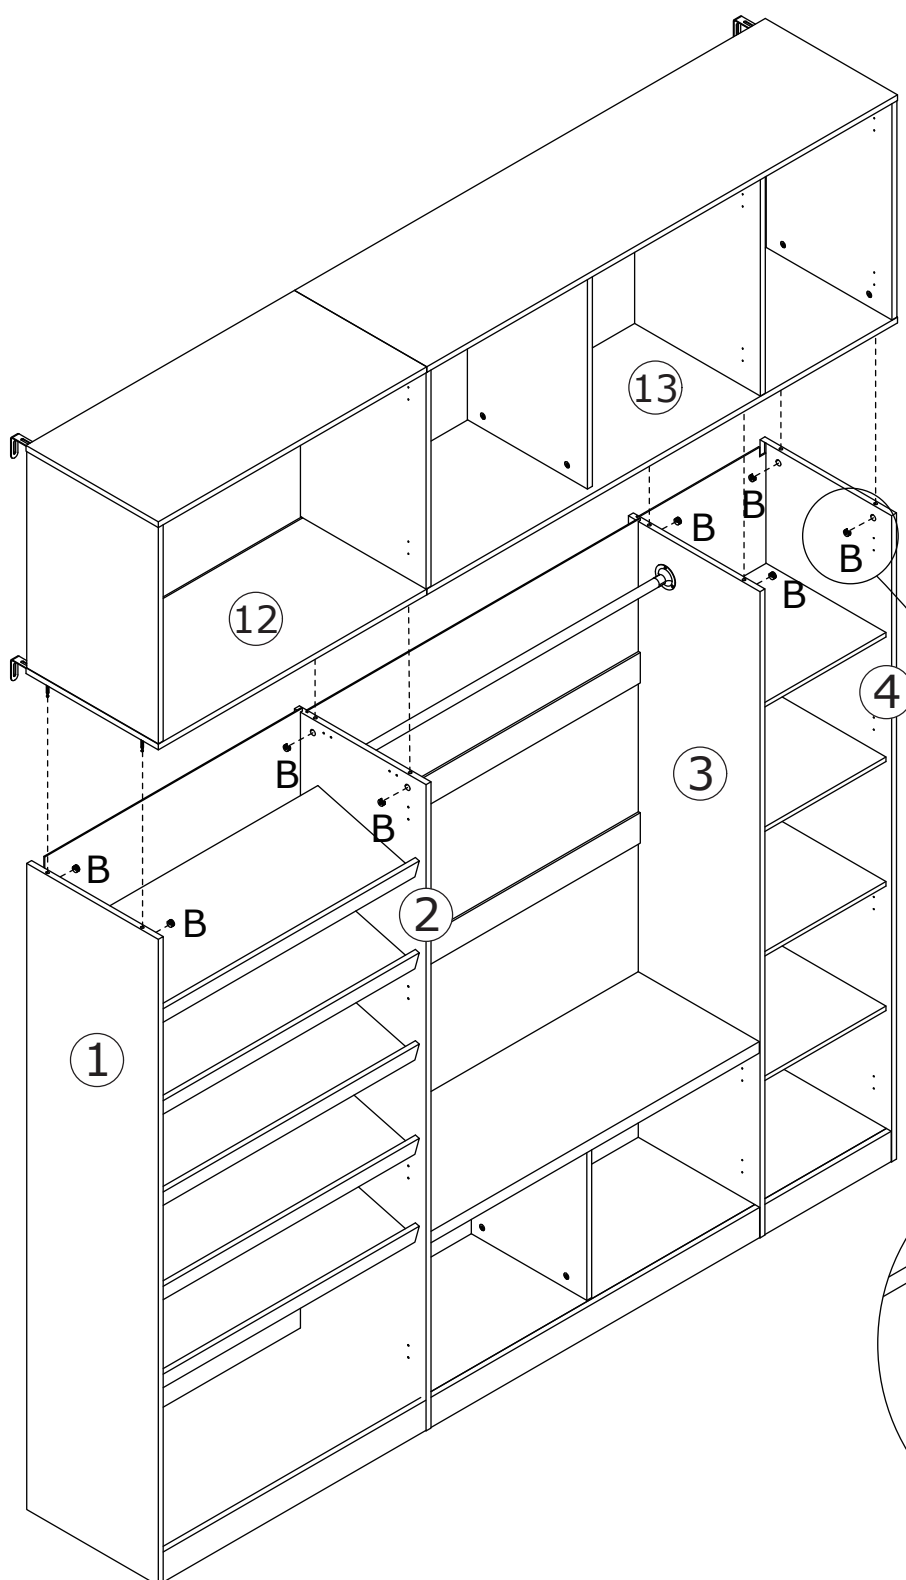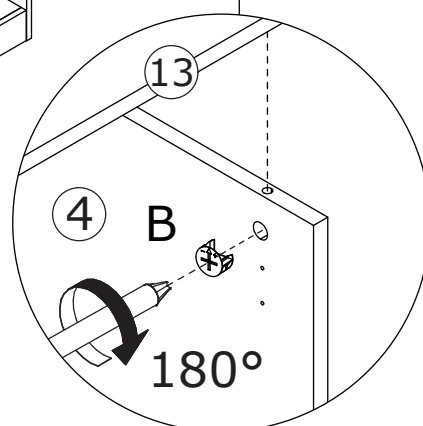


52



C x 4



M3.5 x 12 mm



Secure the assembled brackets to part 2 using screw (C).

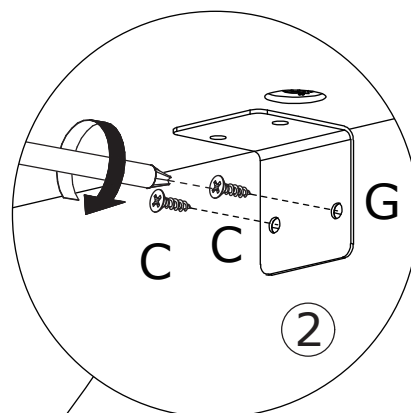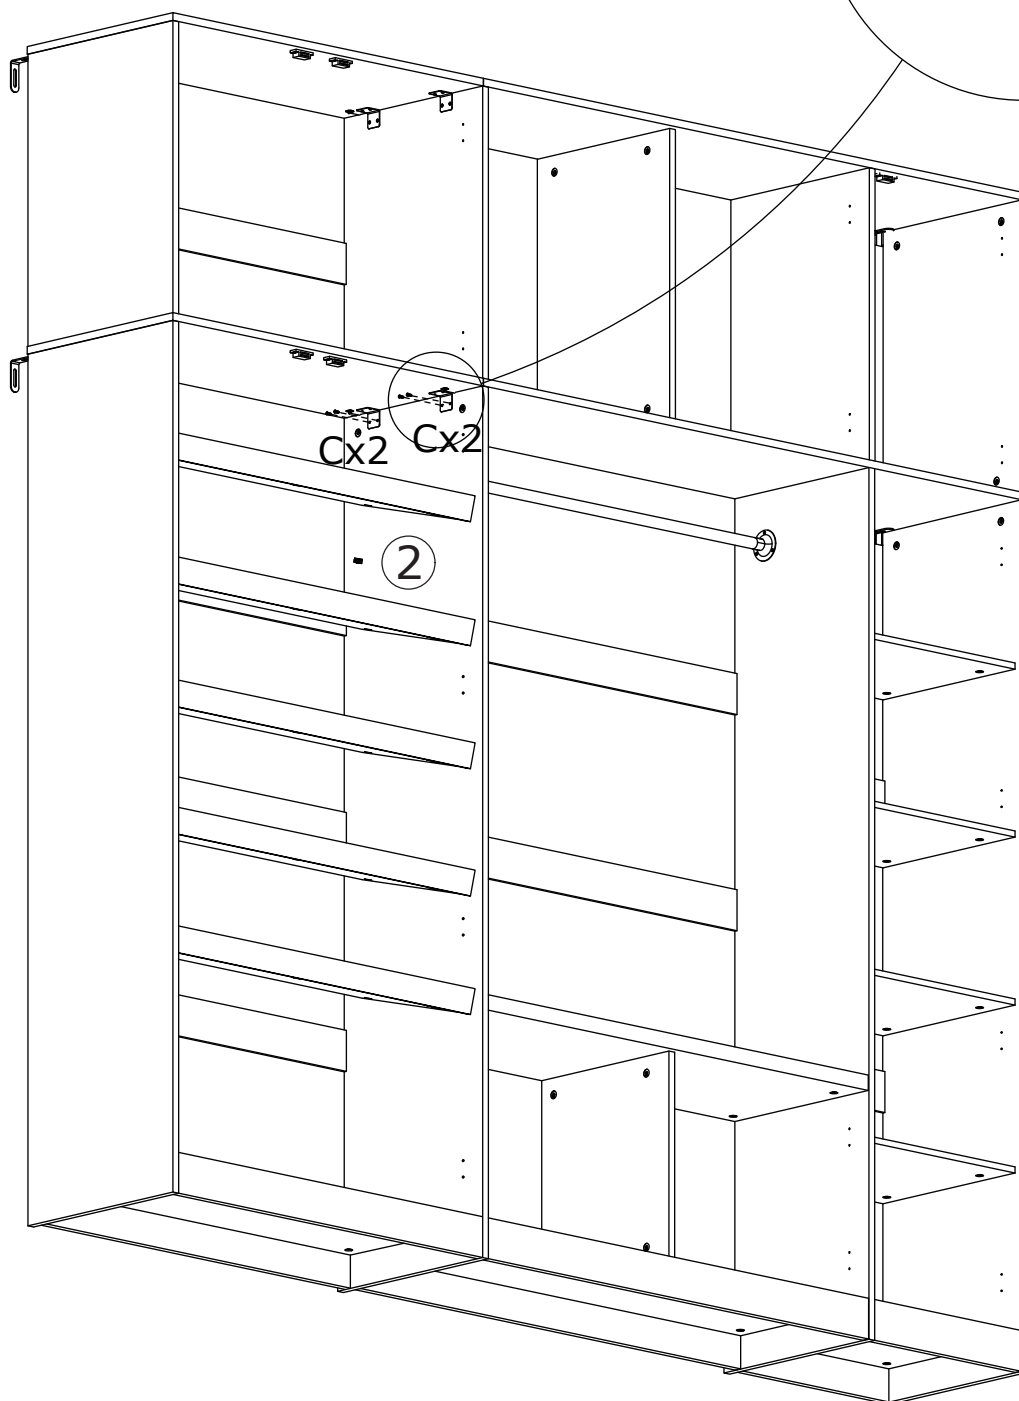


53

C x 101




M3.5 x 12 mm

M x 101





Insert clip (M) to the slots of the back panels and secure them using screw (C).
(For your safety, please install the backplate clips according to the instructions to ensure the product is more stable.)

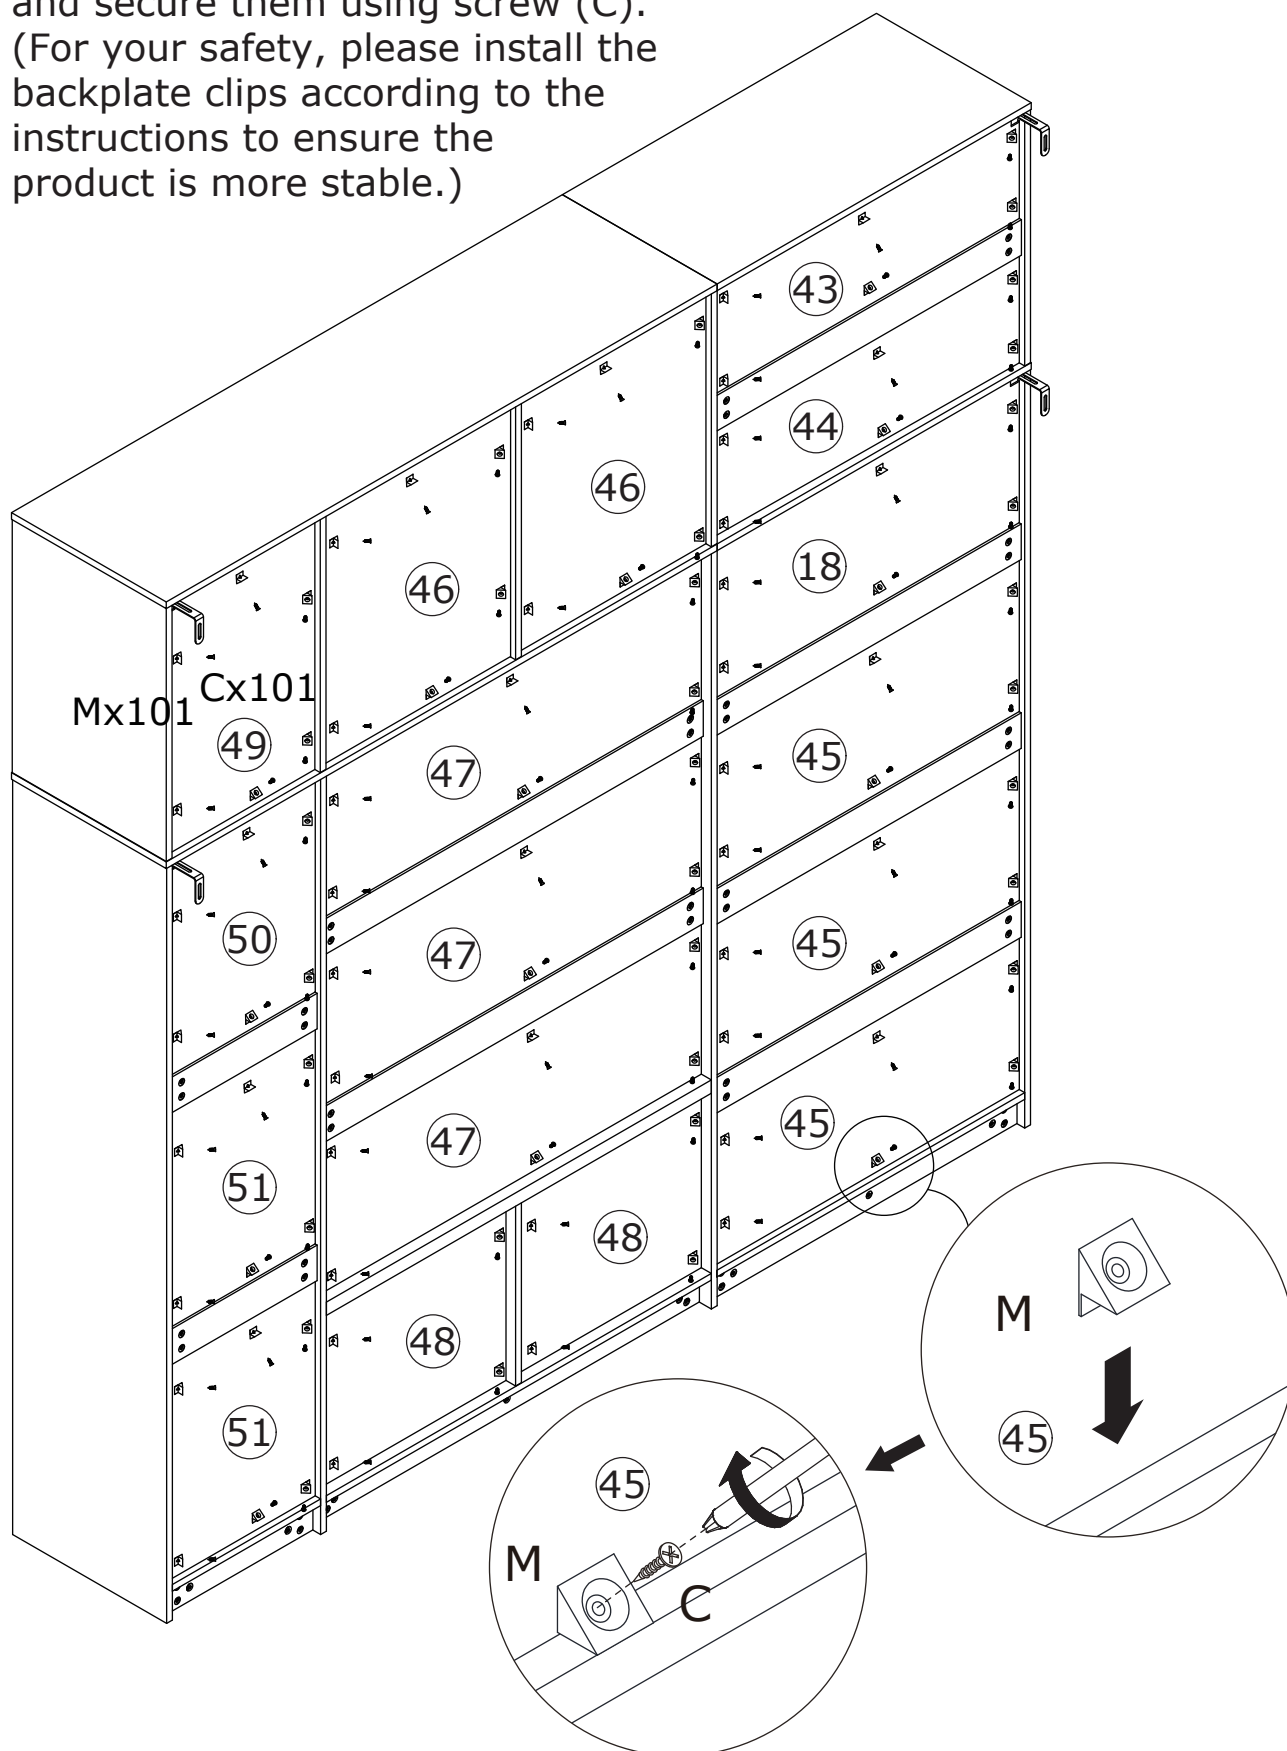


54


E x 4




Mark the positions, drill holes using an electric drill, drive accessory (E) into the wall, and use accessory (E) to secure the product to the wall, as shown. Please secure the anti-tip hardware to the studs in a solid wall or drywall.

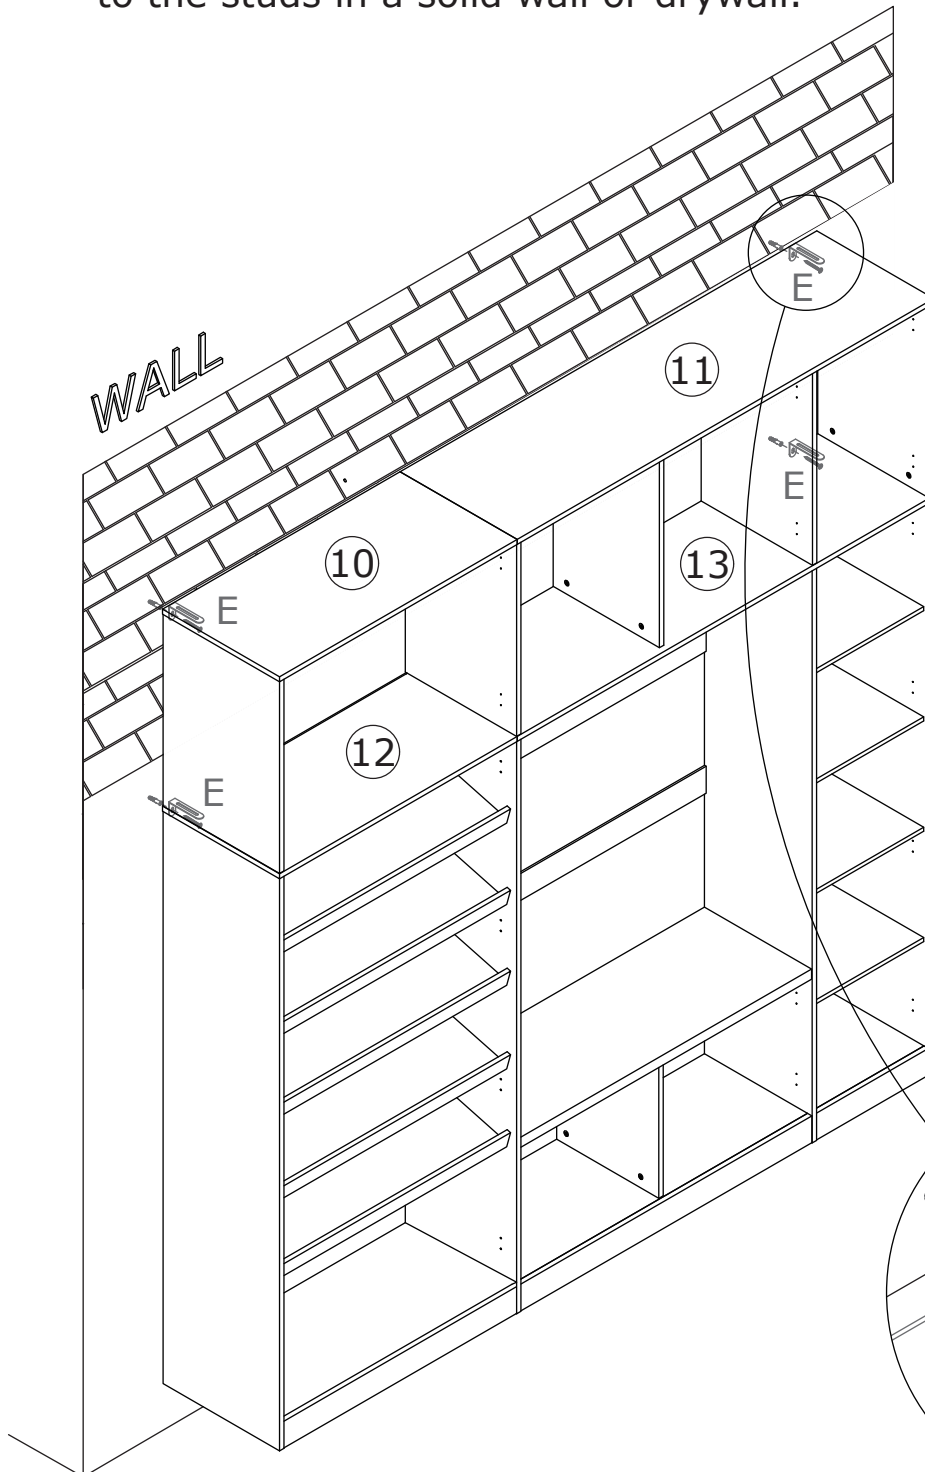


1.

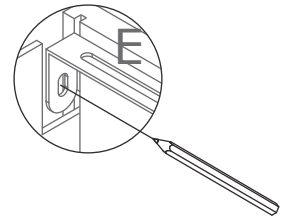



2.

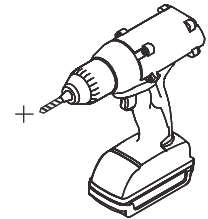




3.

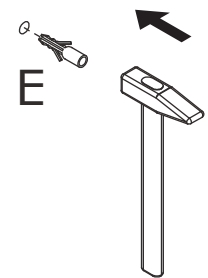


4.

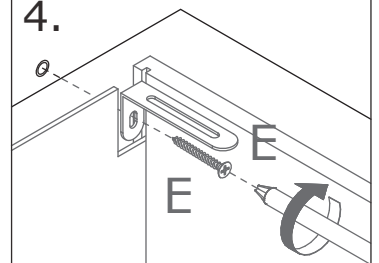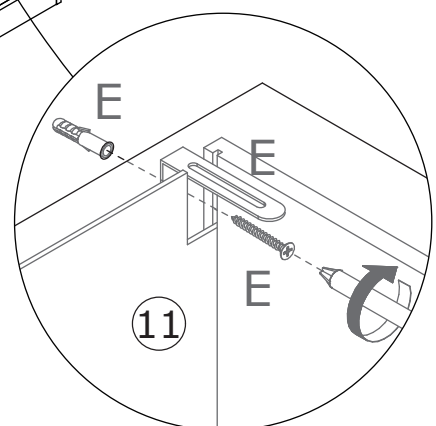


55

<p>C x 16</p>  <p>M3.5 x 12 mm</p>	<p>D x 2</p> 	<p>H x 4</p>  <p>M4 x 20 mm</p>
<p>J x 1</p> 	<p>K x 1</p> 	<p>L x 6</p> 



Secure hinge (L) and iron plate (D) to parts 39 and 34 using screw (C).
Secure handle (J) and (K) to parts 34 and 39 using screw (H).

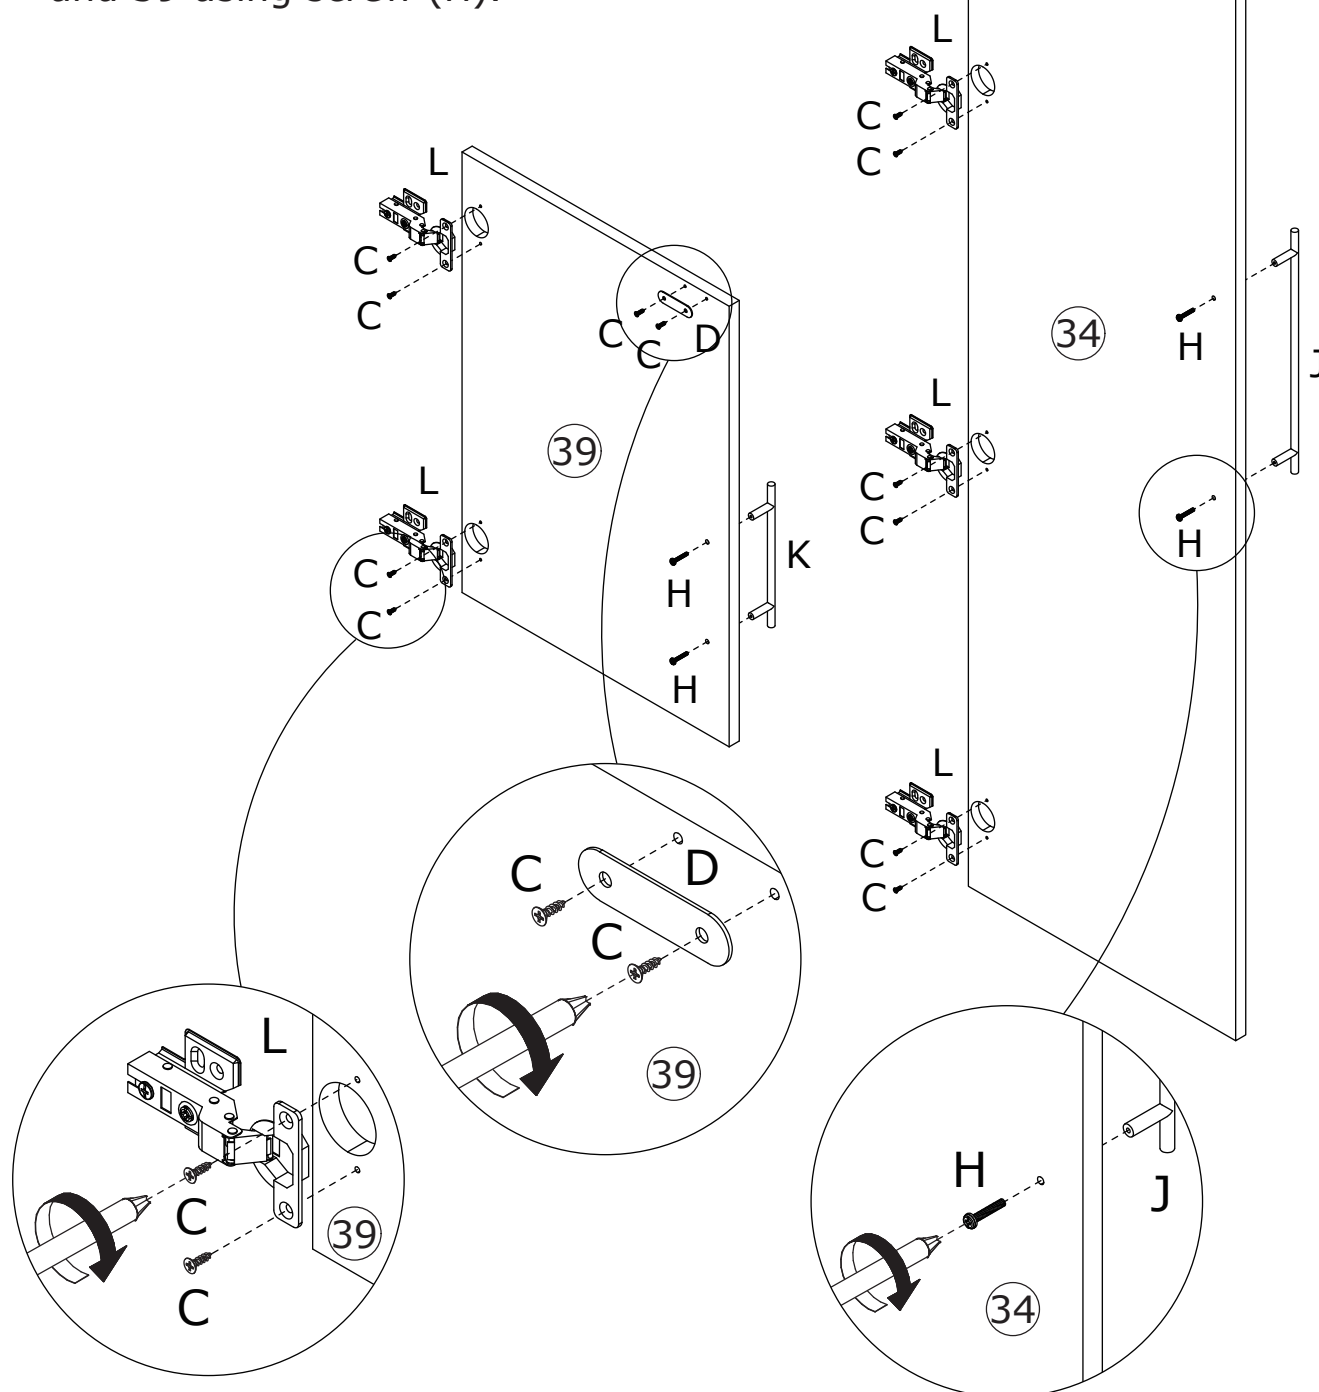

56

C x 8




M3.5 x 12 mm

H x 4





M4 x 20 mm


K x 2






L x 4




Secure hinge (L) to parts 41 and 36 using screw (C).
Secure handle (K) to parts 41 and 36 using screw (H).

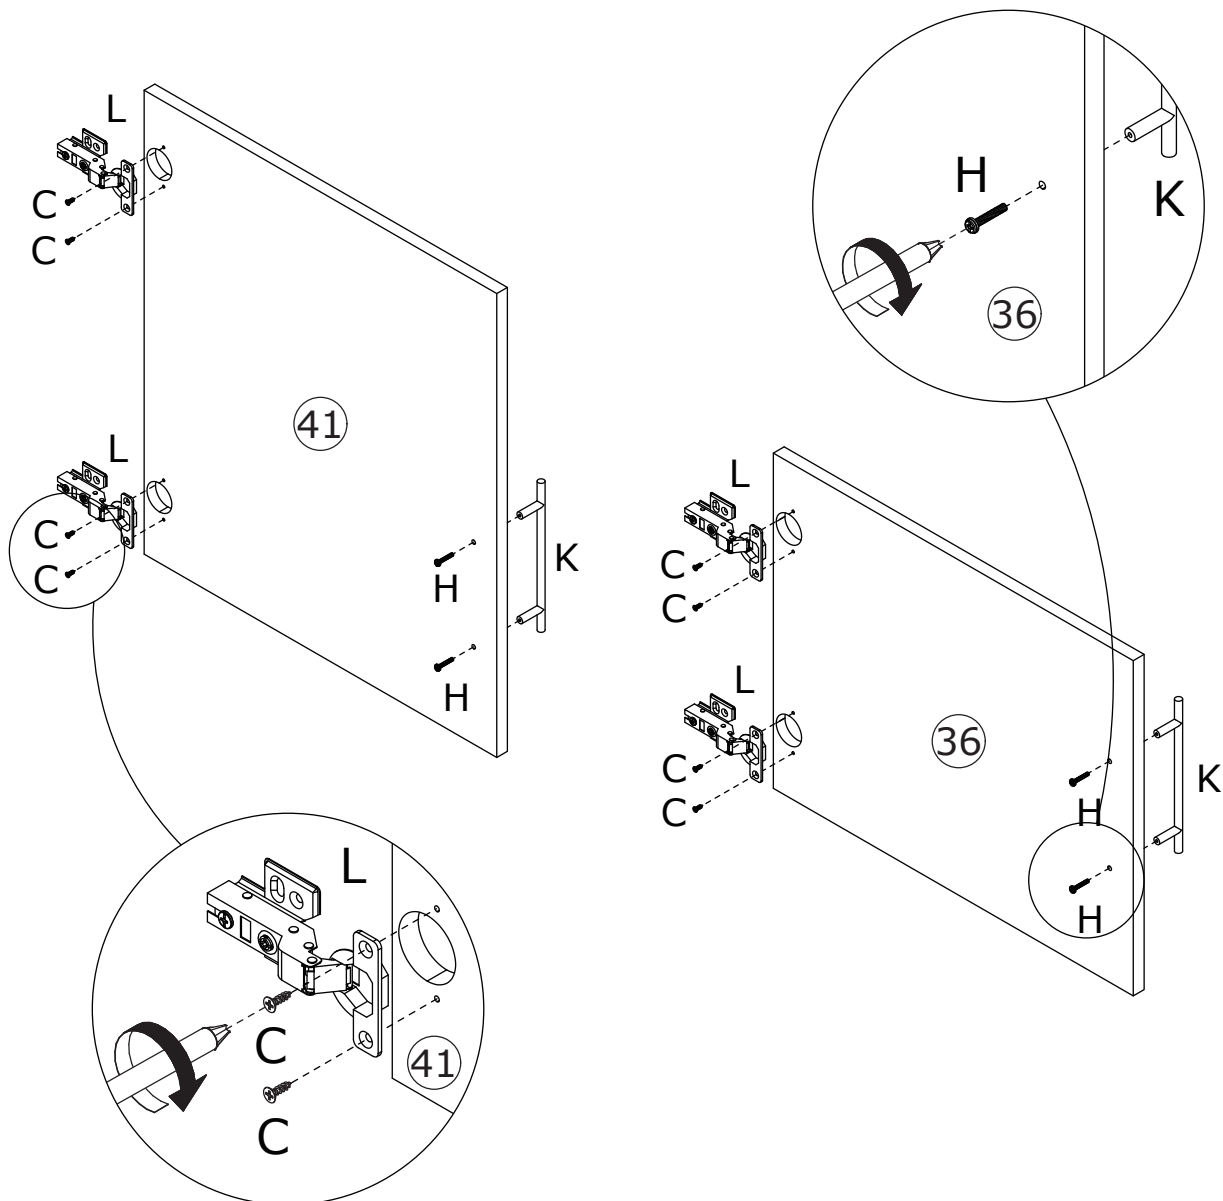


57

<p>C x 14</p>  <p>M3.5 x 12 mm</p>	<p>D x 1</p> 	<p>H x 4</p>  <p>M4 x 20 mm</p>
<p>J x 1</p> 	<p>K x 1</p> 	<p>L x 6</p> 



Secure hinge (L) and iron plate (D) to parts 37 and 42 using screw (C).
Secure handle (J) and (K) to parts 37 and 42 using screw (H).

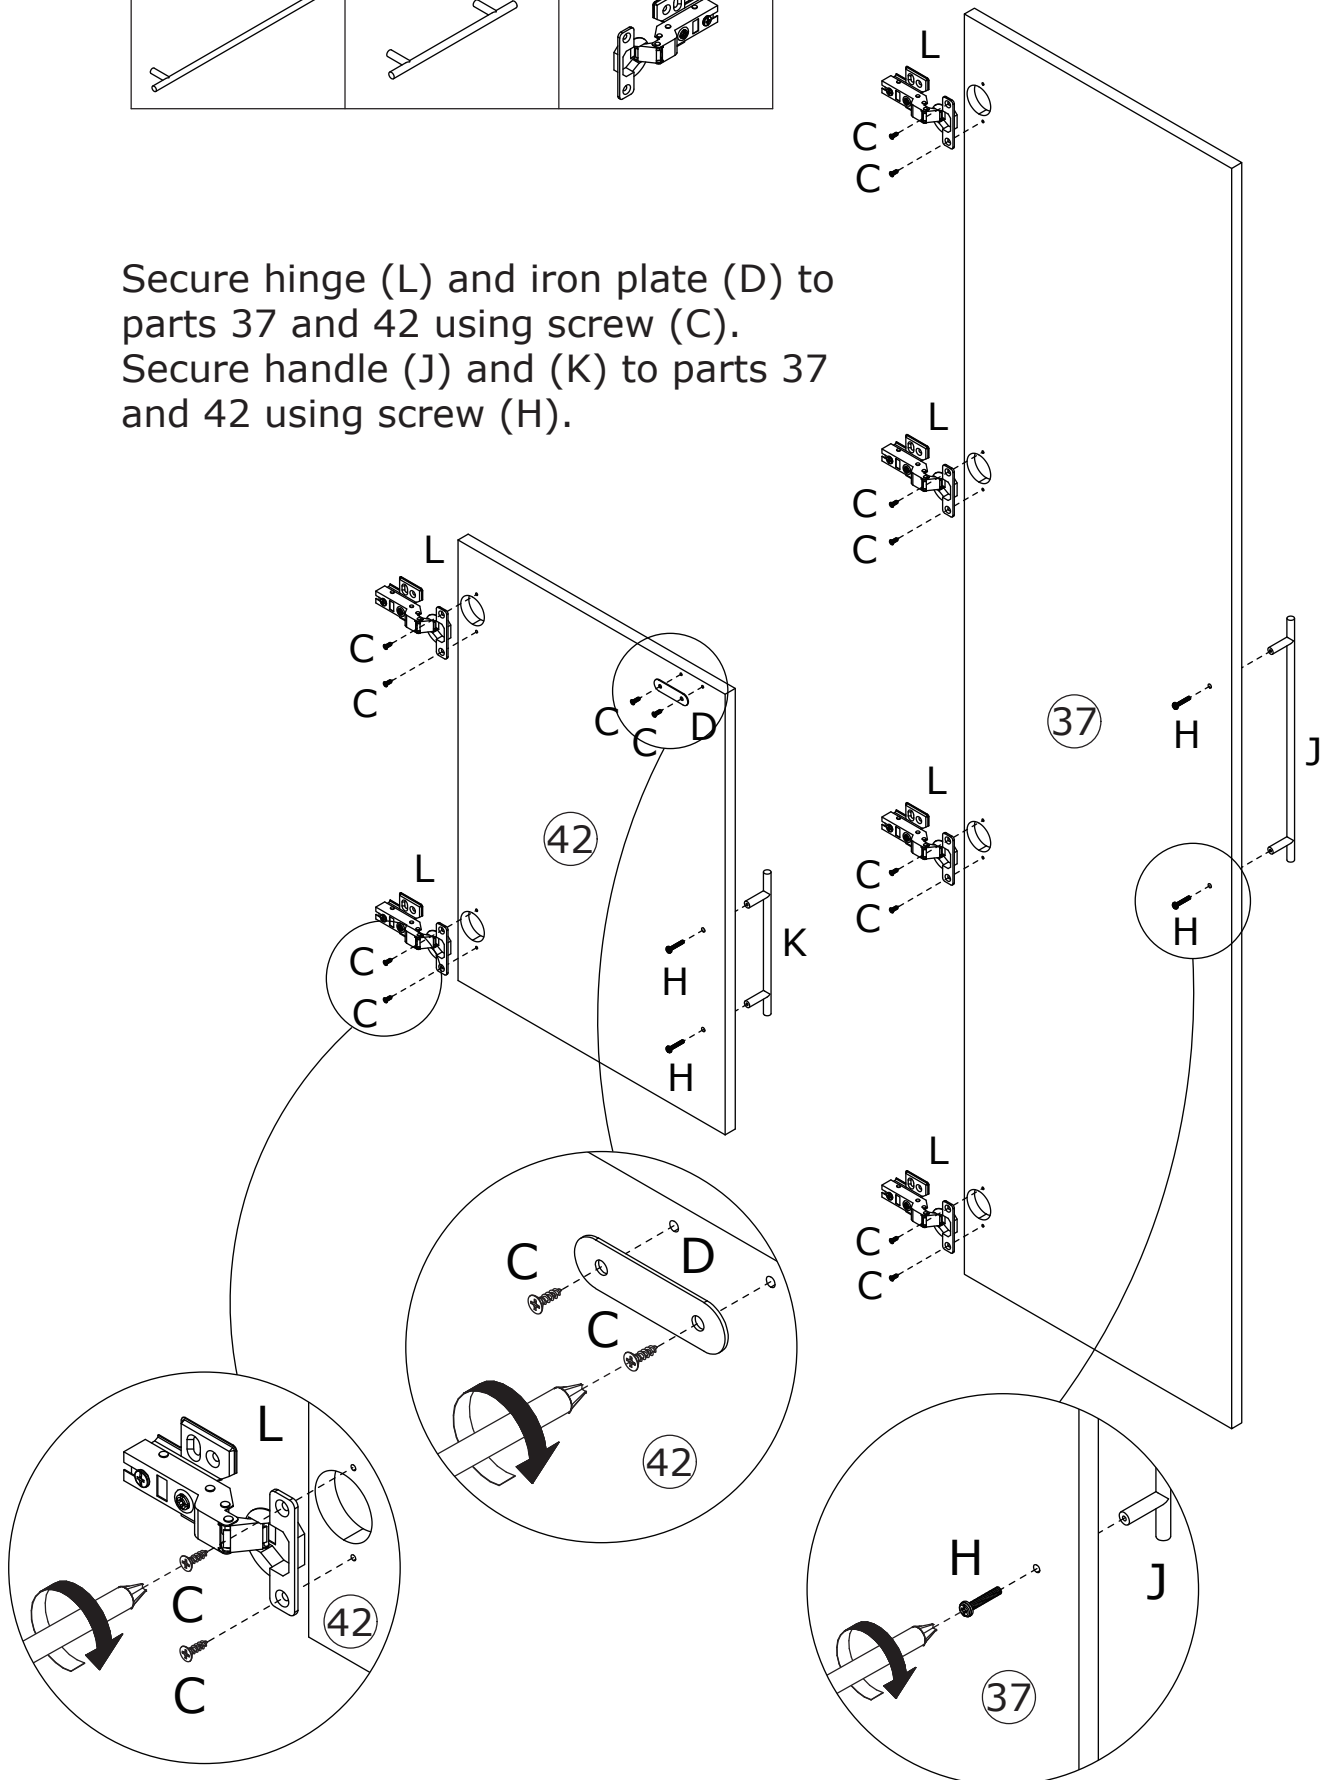


58


C x 64








M3.5 x 12 mm



Connect part 39 to part 6, part 34 to part 2, part 41 to part 8, part 36 to part 3, part 42 to part 9, and part 37 to part 4 via hinges using screw (C).

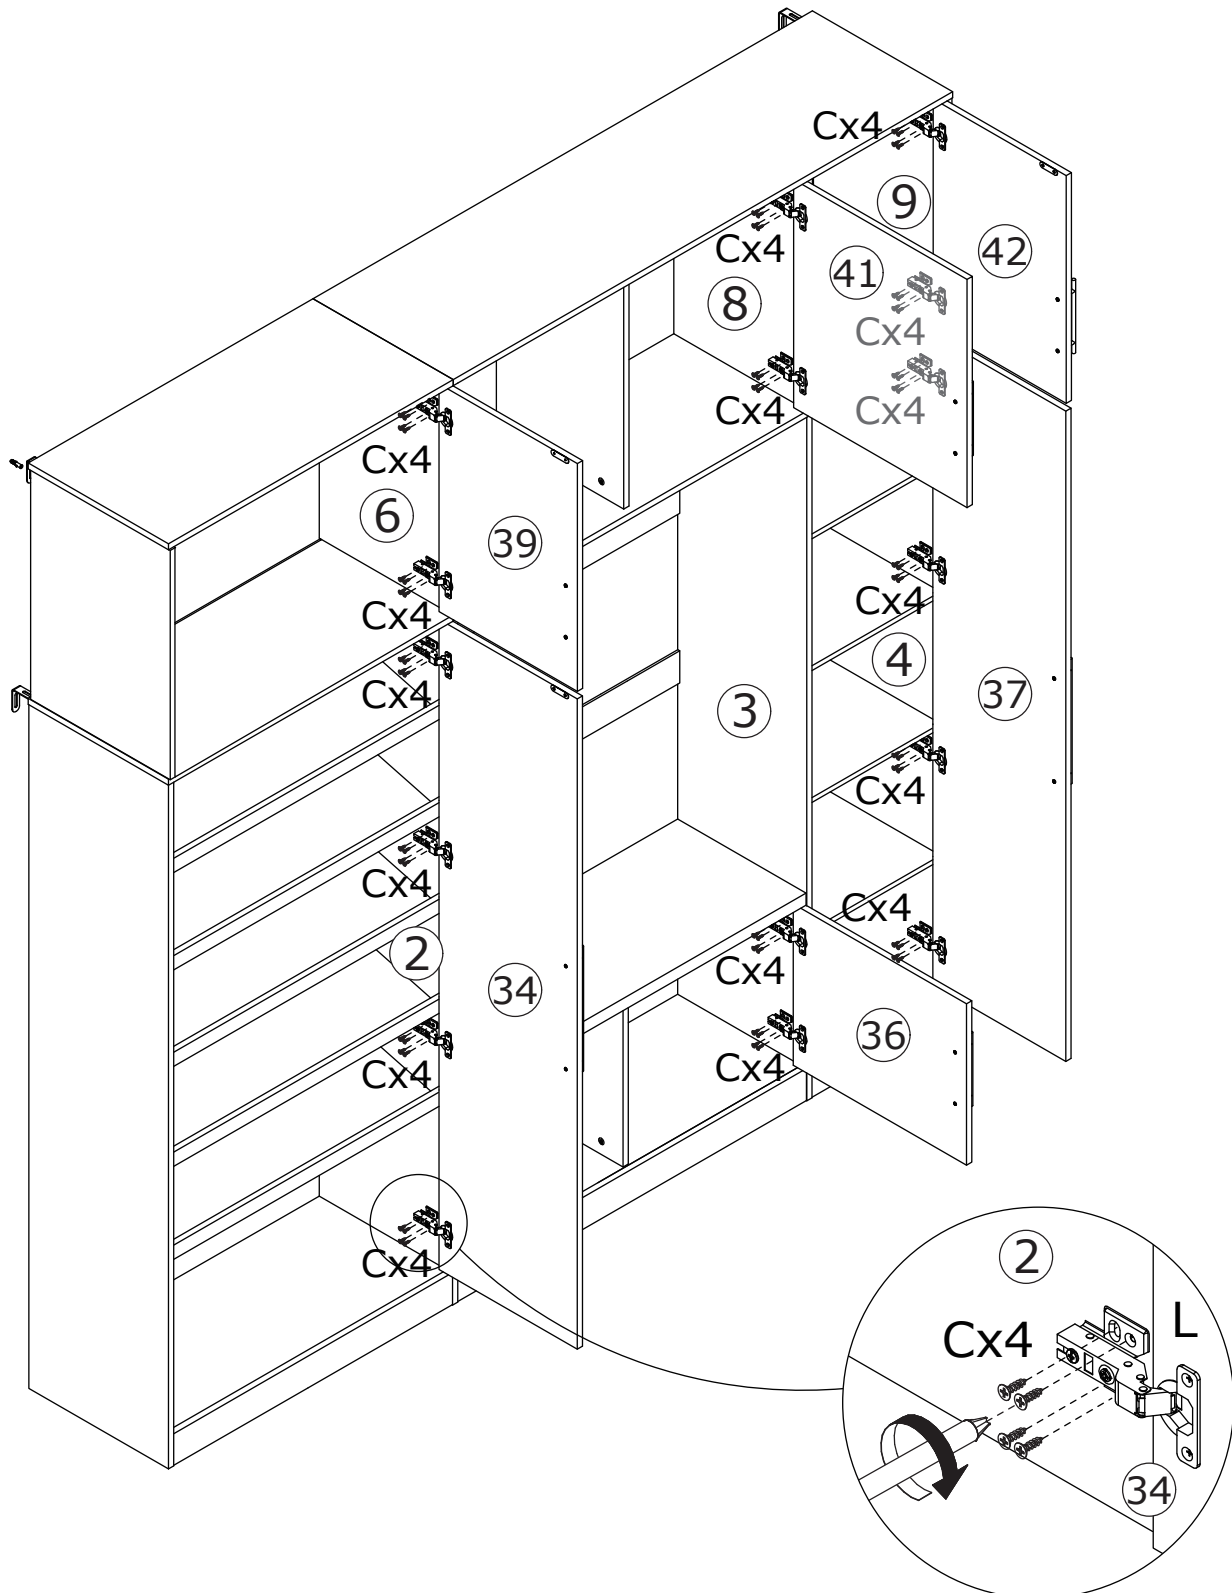


59

<p>C x 16</p>  <p>M3.5 x 12 mm</p>	<p>D x 2</p> 	<p>H x 4</p>  <p>M4 x 20 mm</p>	
<p>J x 1</p> 	<p>K x 1</p> 	<p>L x 6</p> 	

Secure hinge (L) and iron plate (D) to parts 33 and 38 using screw (C).

Secure handle (J) and (K) to parts 33 and 38 using screw (H).

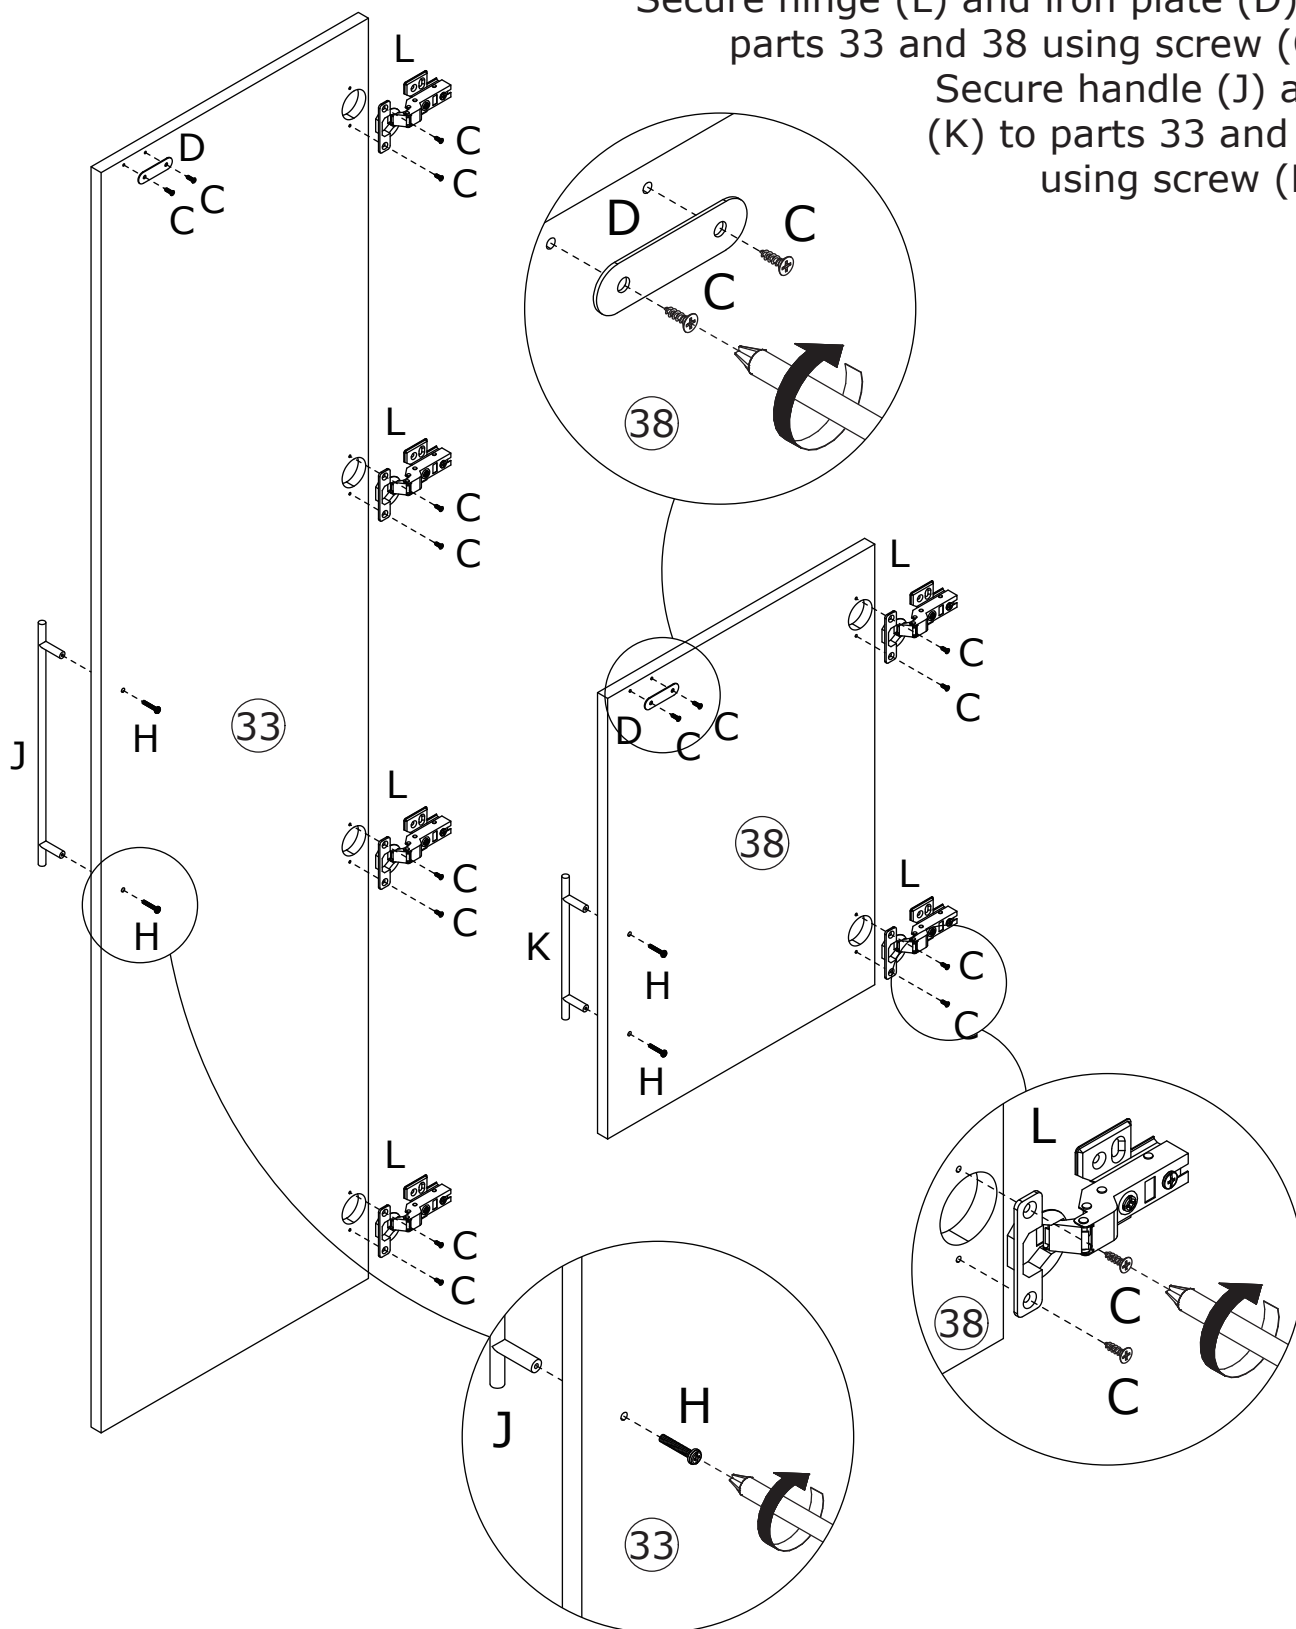

60

C x 8




M3.5 x 12 mm

H x 4





M4 x 20 mm


K x 2



L x 4



Secure hinge (L) to parts 35 and 50 using screw (C).
Secure handle (K) to parts 35 and 50 using screw (H).

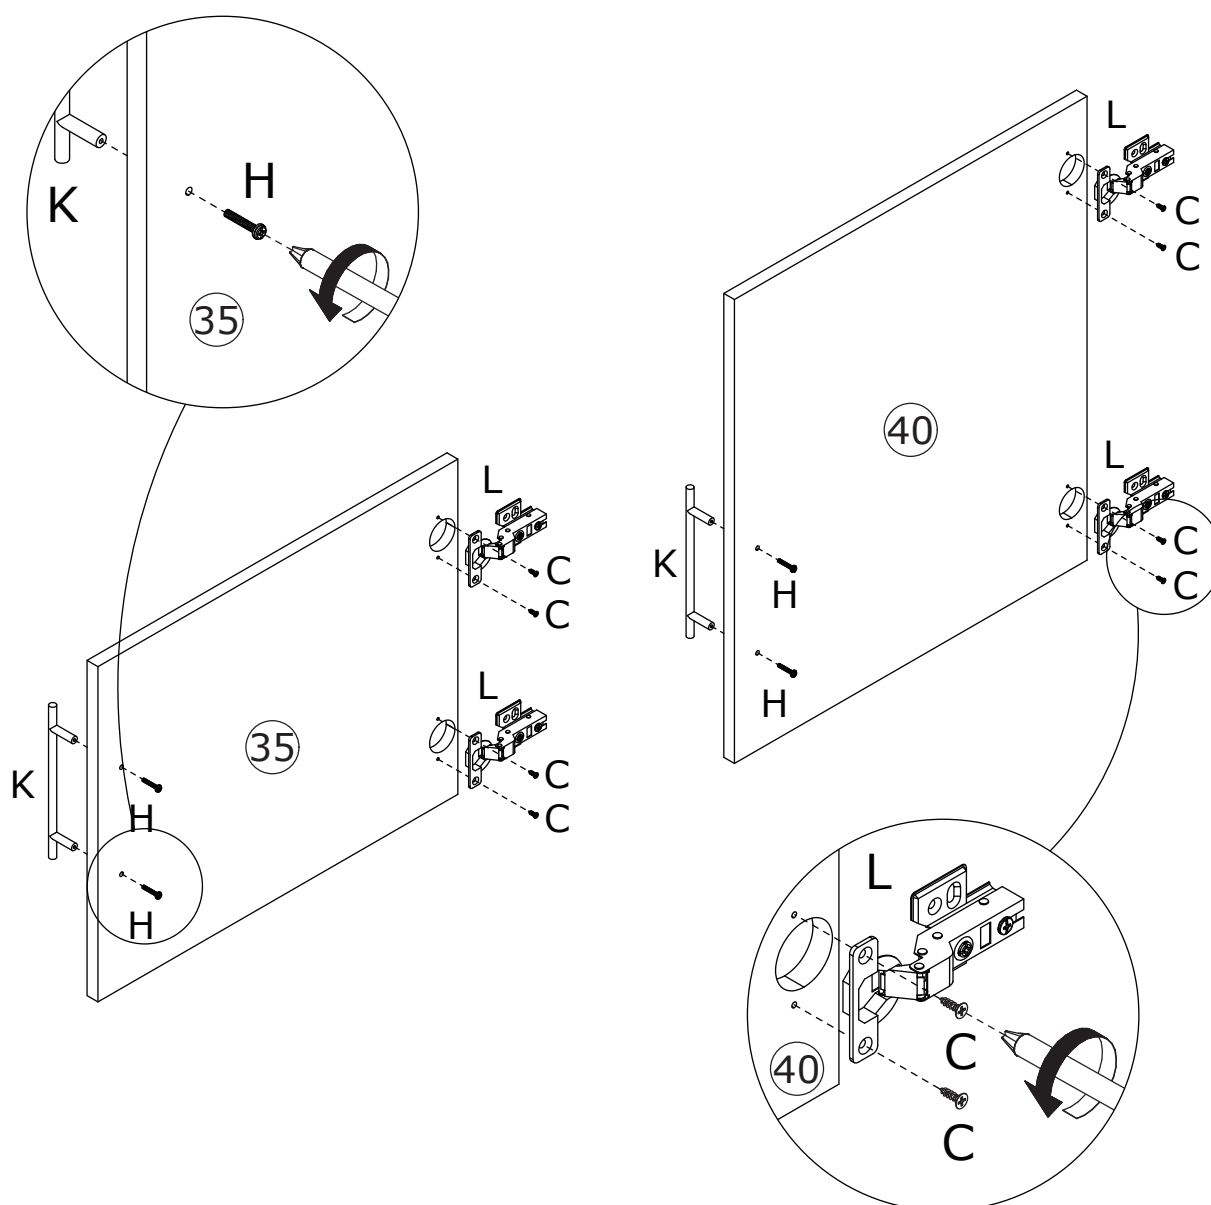


61


C x 40



M3.5 x 12 mm




Connect part 38 to part 5, part 33 to part 1, part 40 to part 6, part 35 to part 2 via hinges using screw (C).



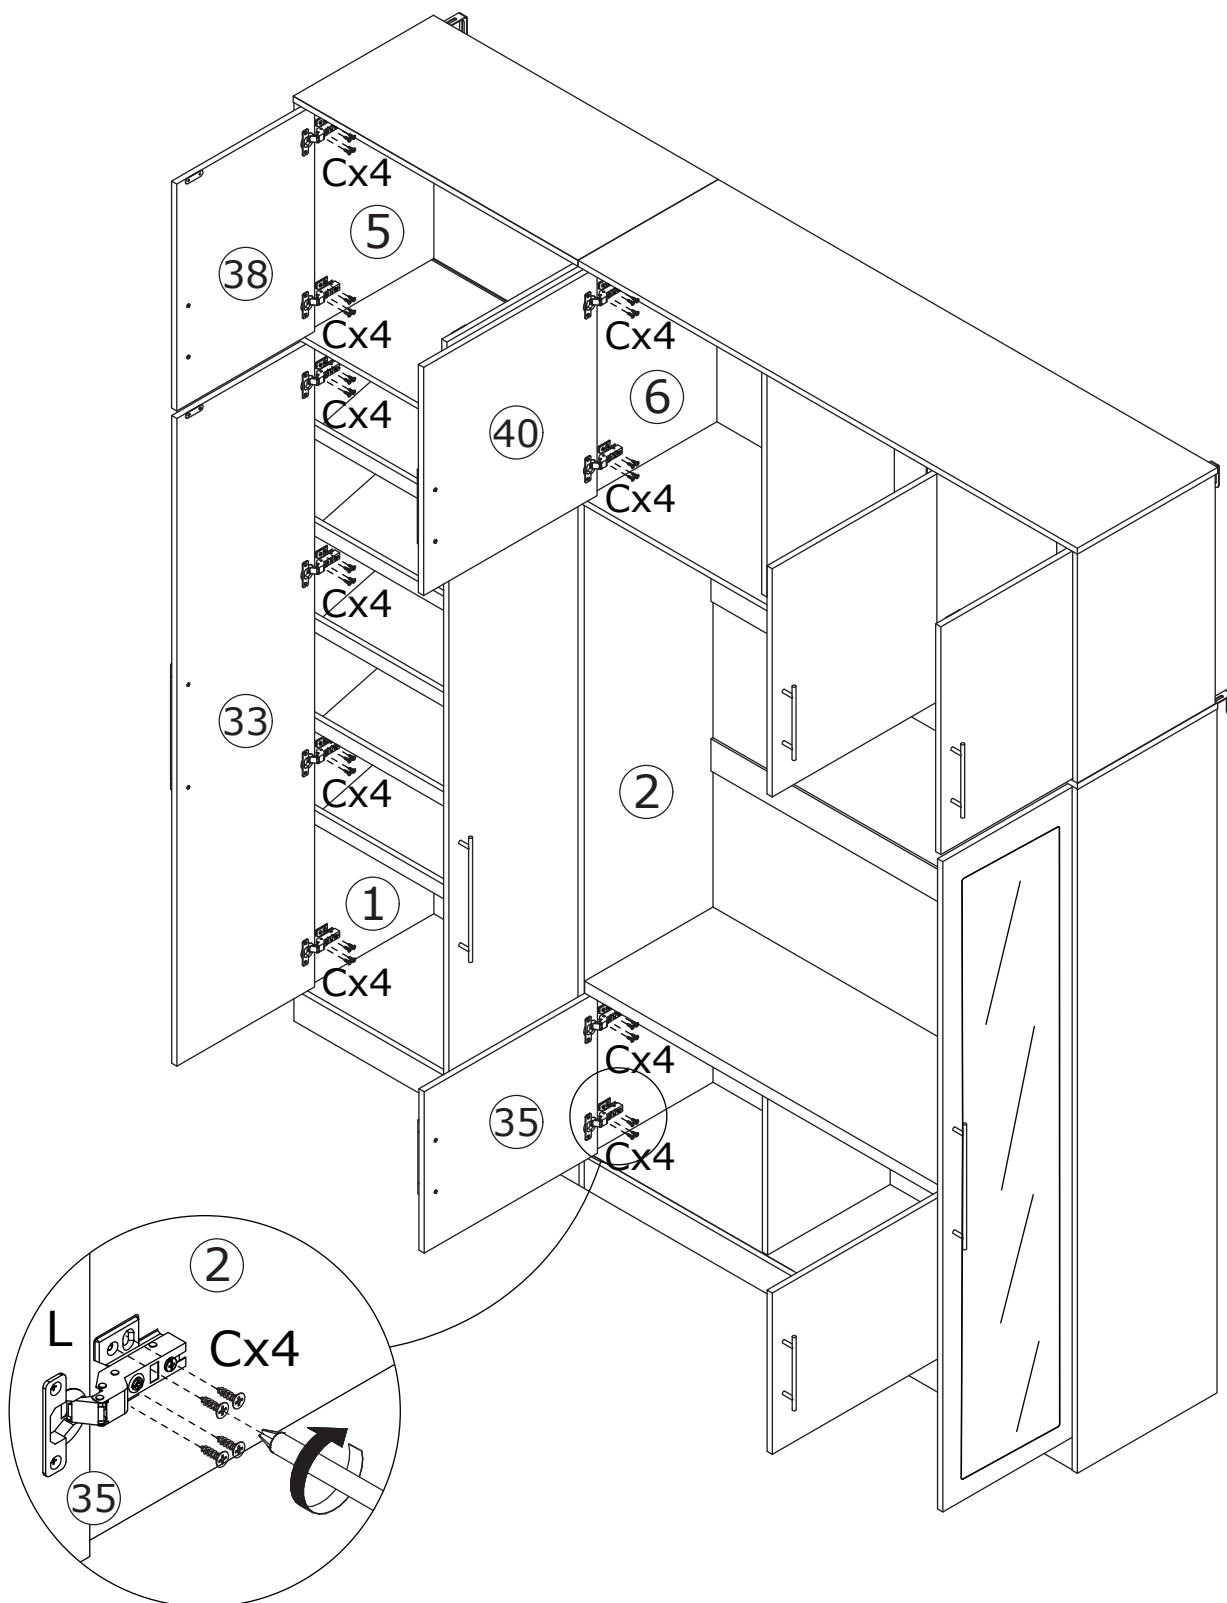





62

R x 2




Attach sticker (R) to cam lock holes.

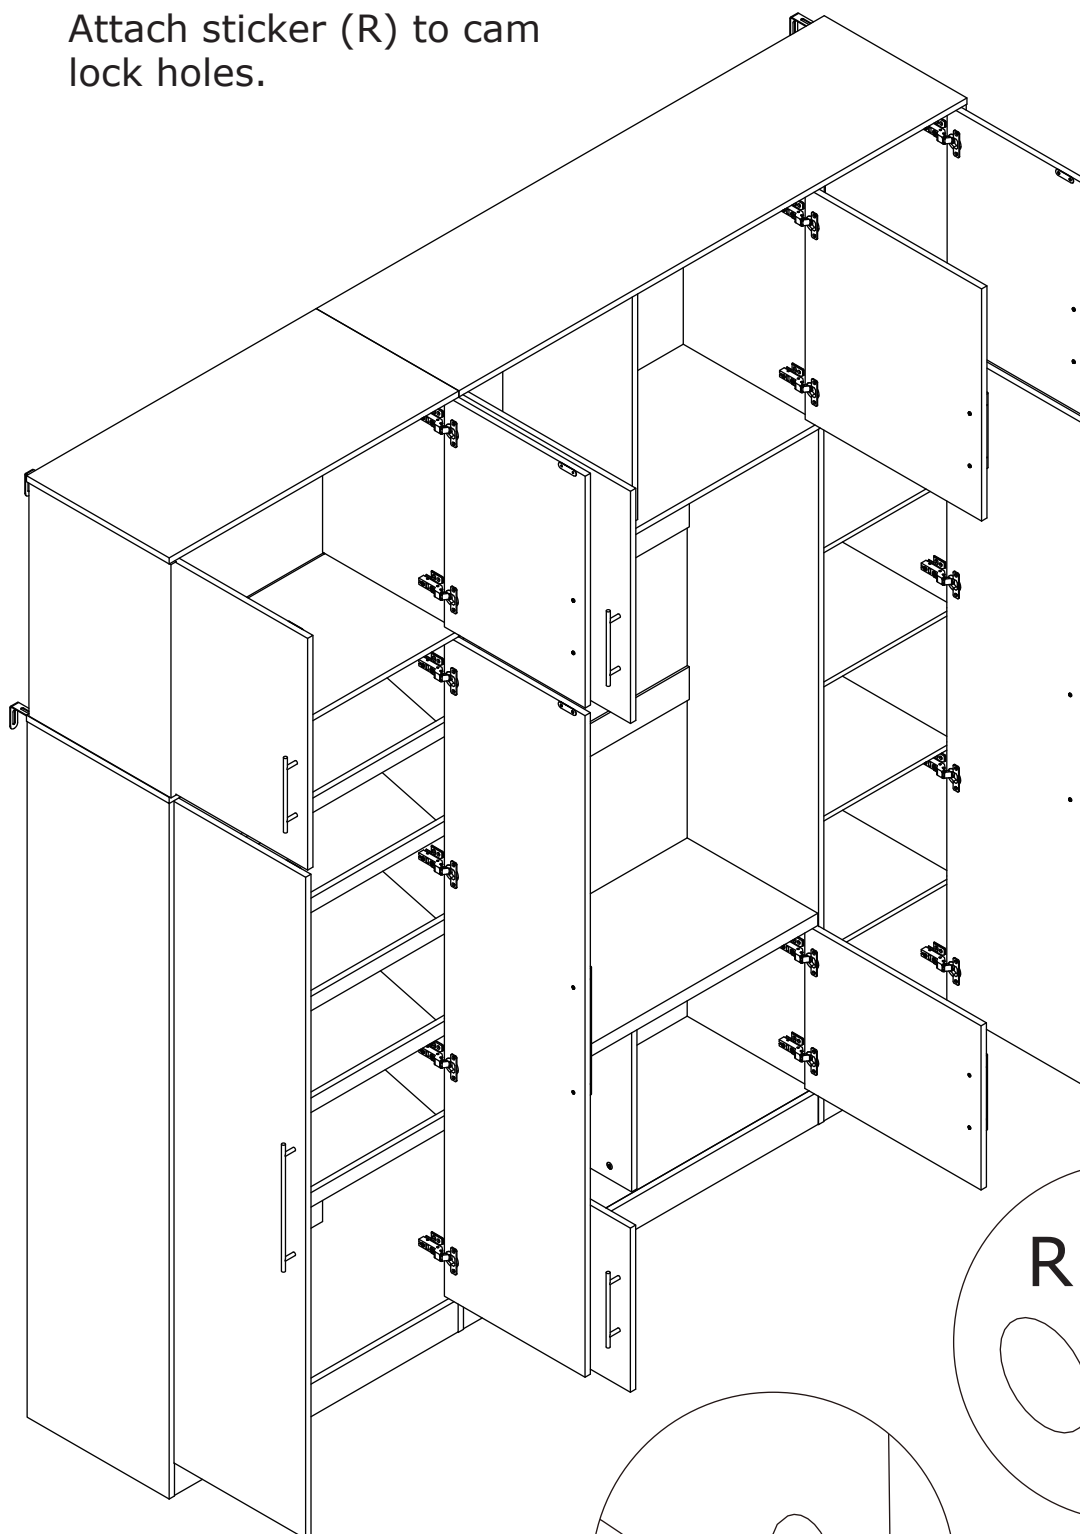
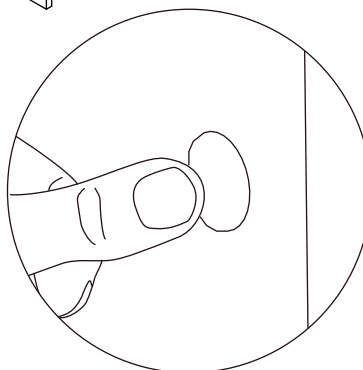
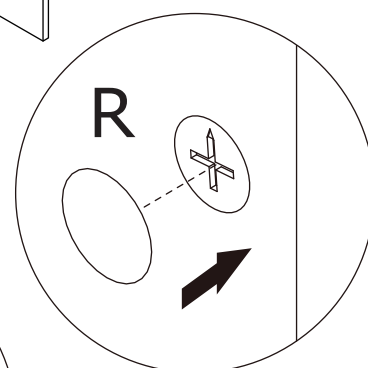


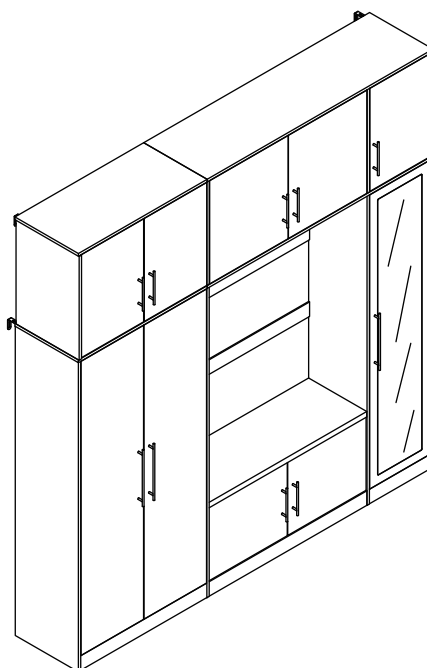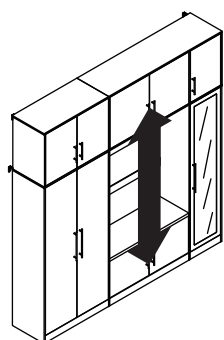


①

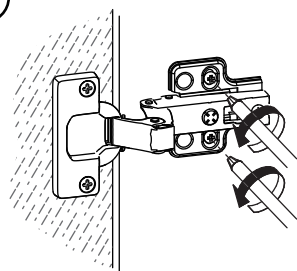






②

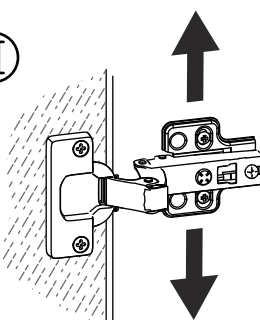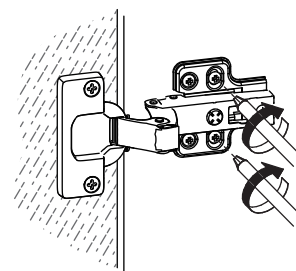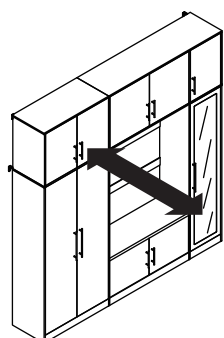

①

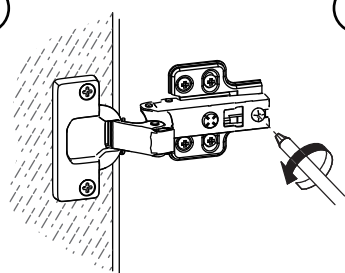

②

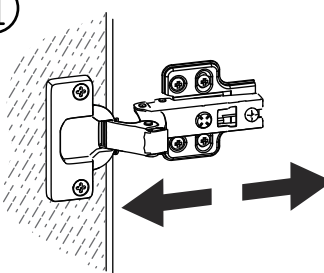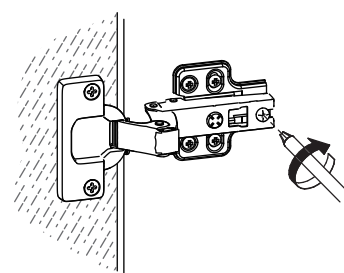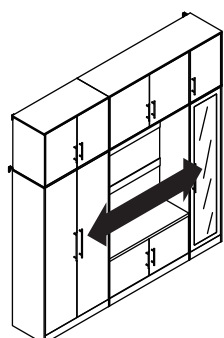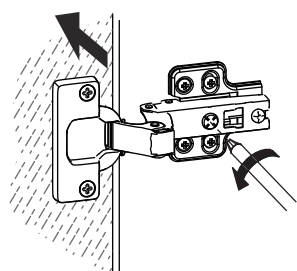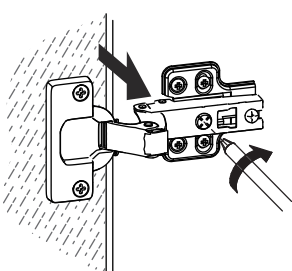

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.