



Installation & Assembly

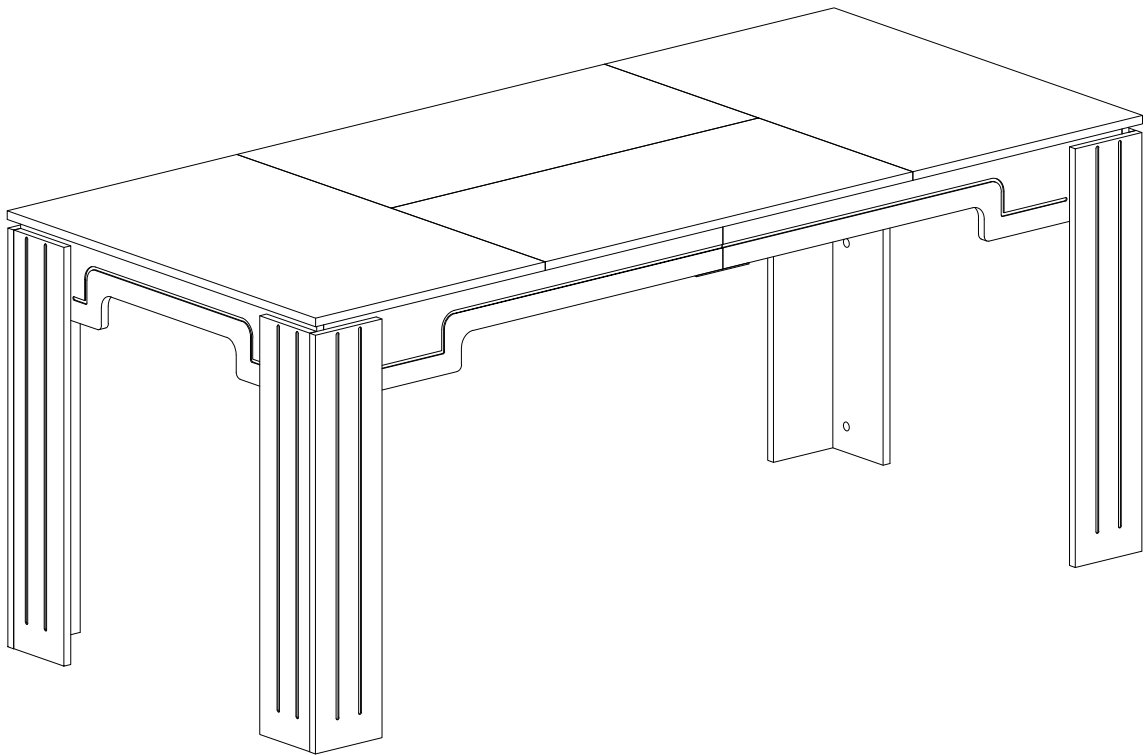


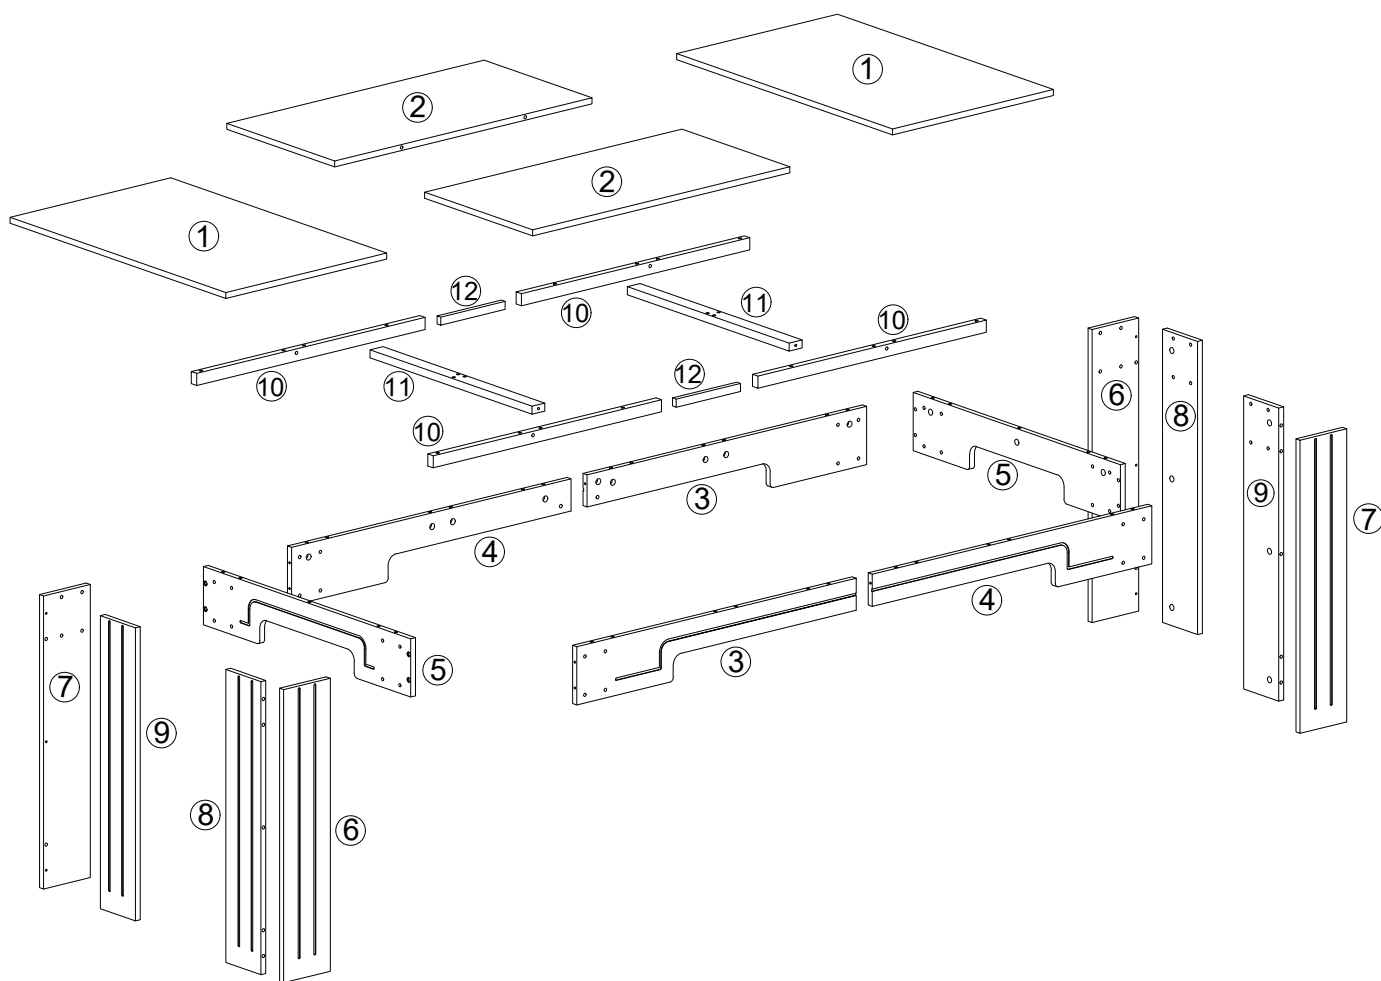

A	X36	B	X36	C	X22	D	X16	E	X1
Ø6X43mm		Ø15X12mm		Ø8X30mm		Ø7X37mm		M4X64mm	


F	X12	G	X38	H	X20	I	X2
M6X12mm		M6X30mm		M6X40mm		114X30X17mm	

STEP 1

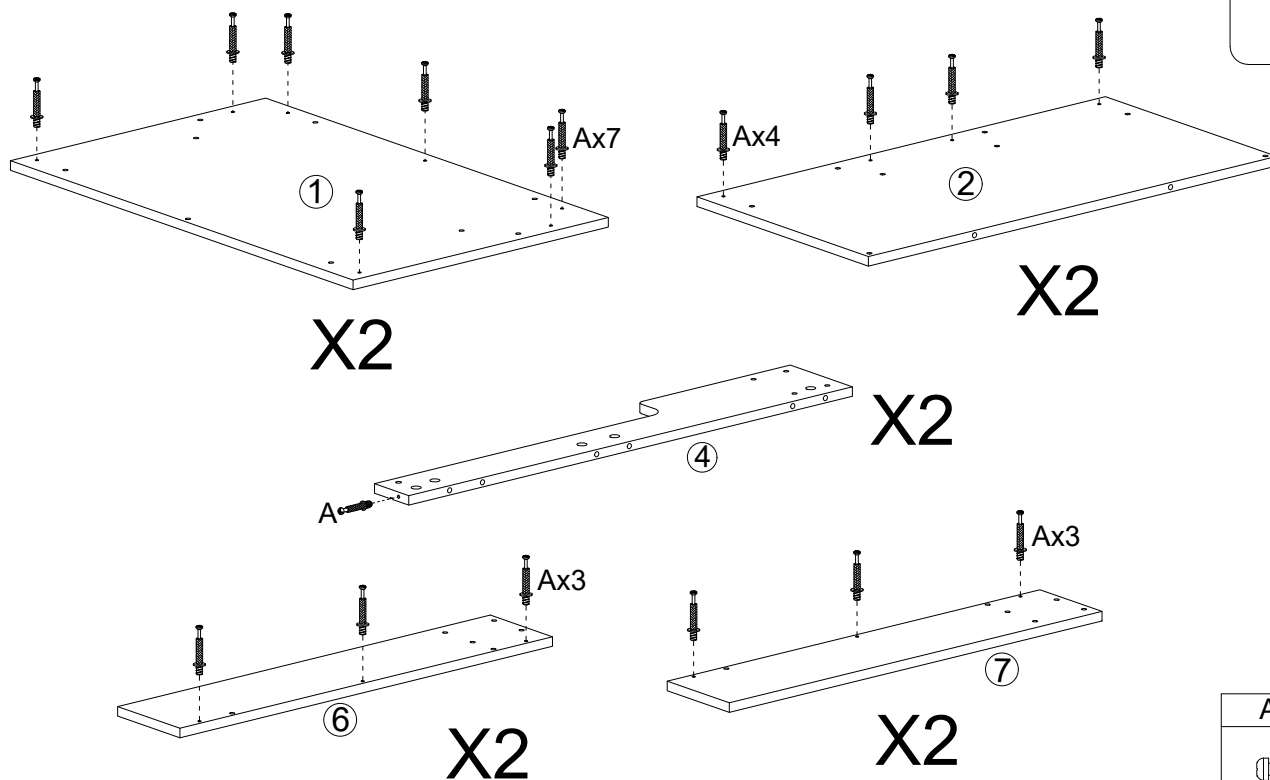


A	X36
	
Ø6X43mm	

STEP 2

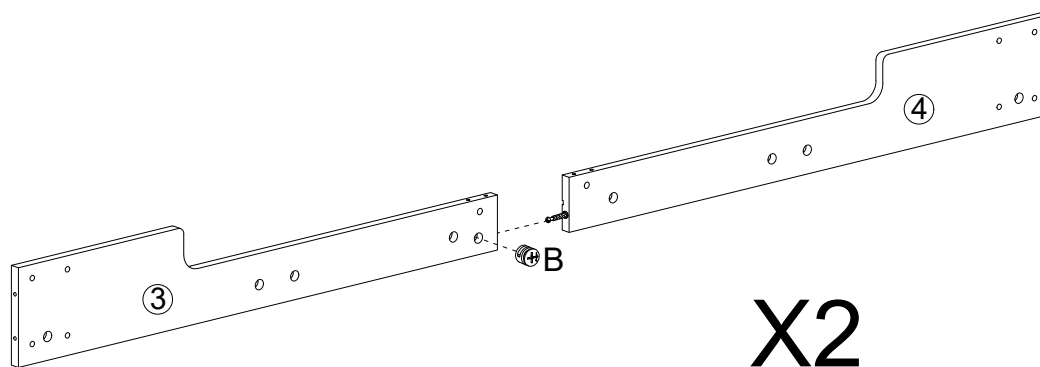


B	X2
	
Ø15X12mm	

STEP 3

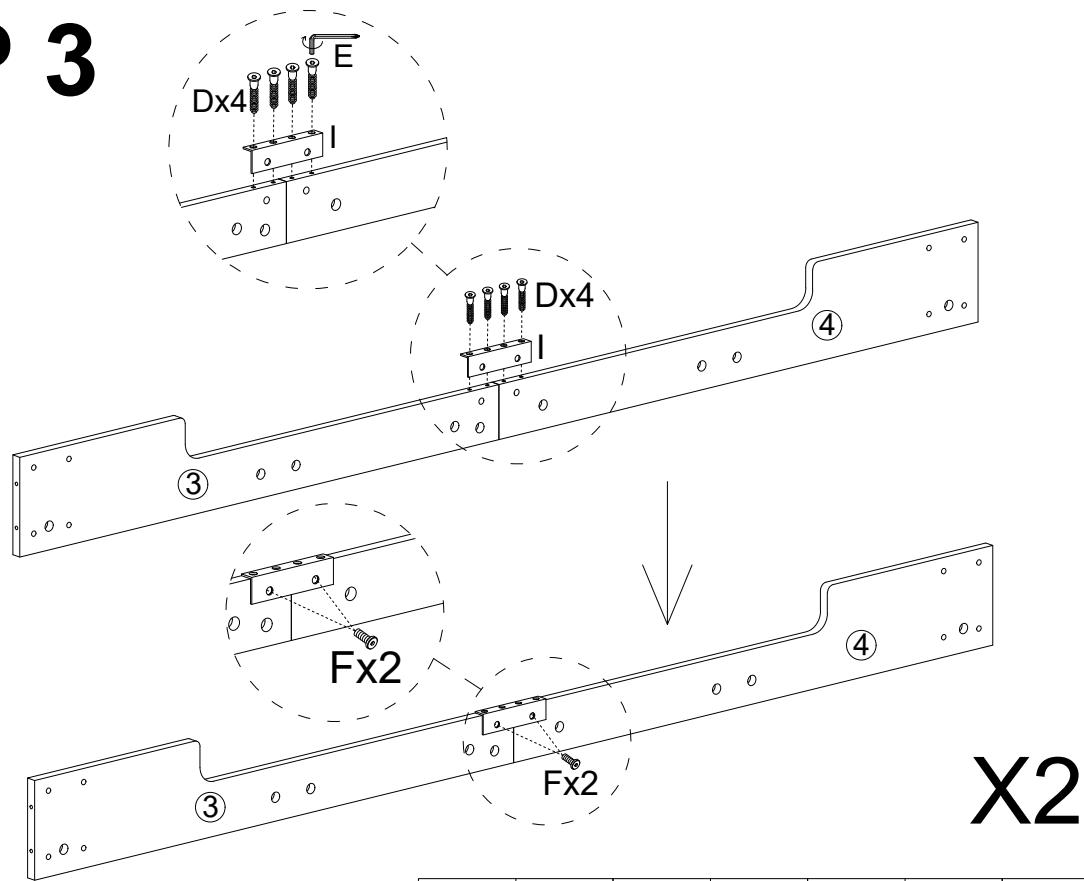



D	X8	E	X1	F	X4	I	X2
Ø7X37mm		M4X64mm		M6X12mm		114X30X17mm	

STEP 4

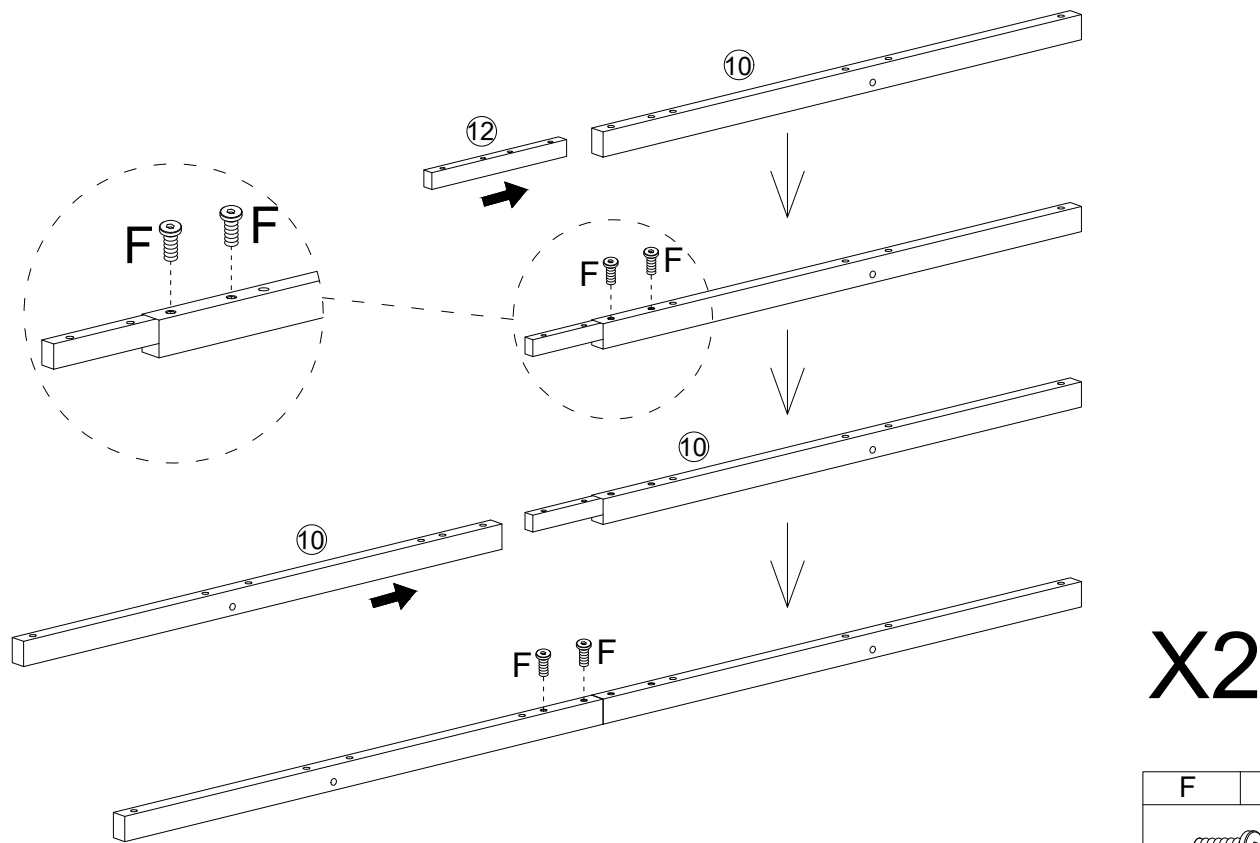


F	X8
M6X12mm	

STEP 5

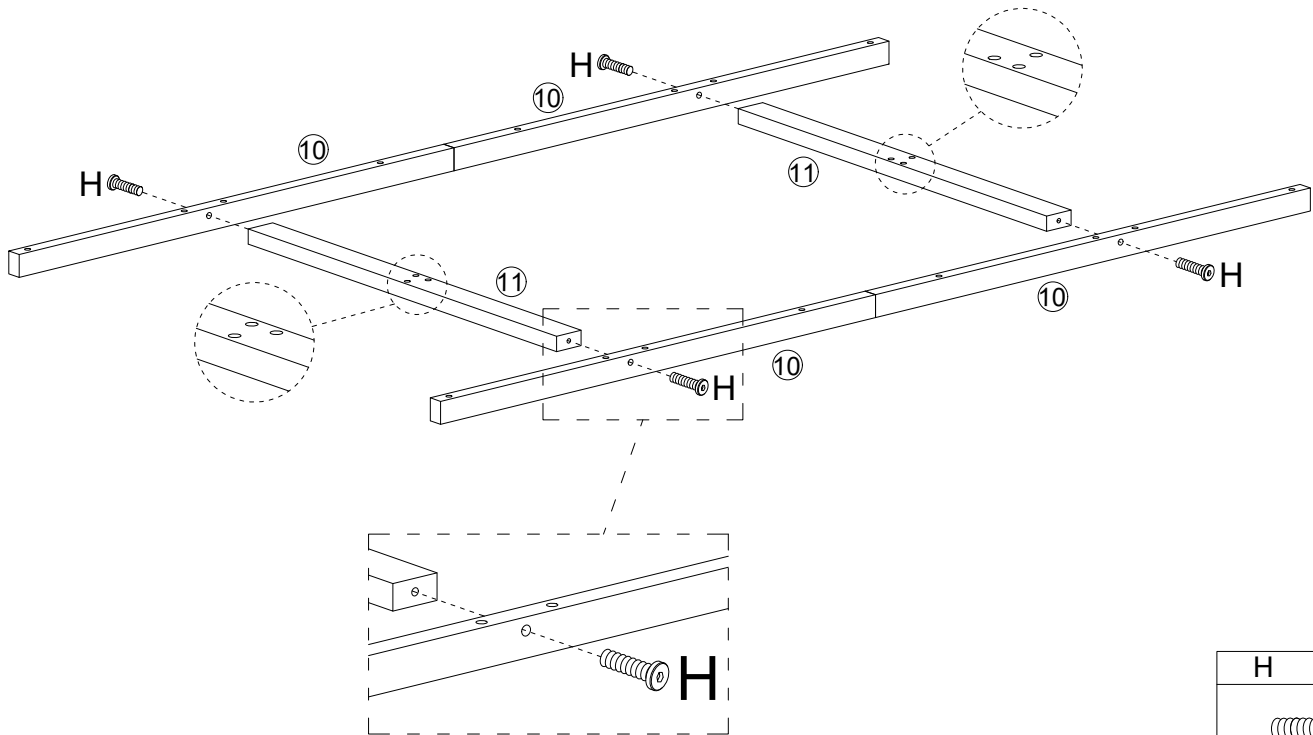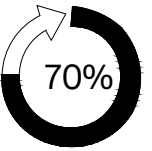



H	X4
	
M6X40mm	

STEP 6

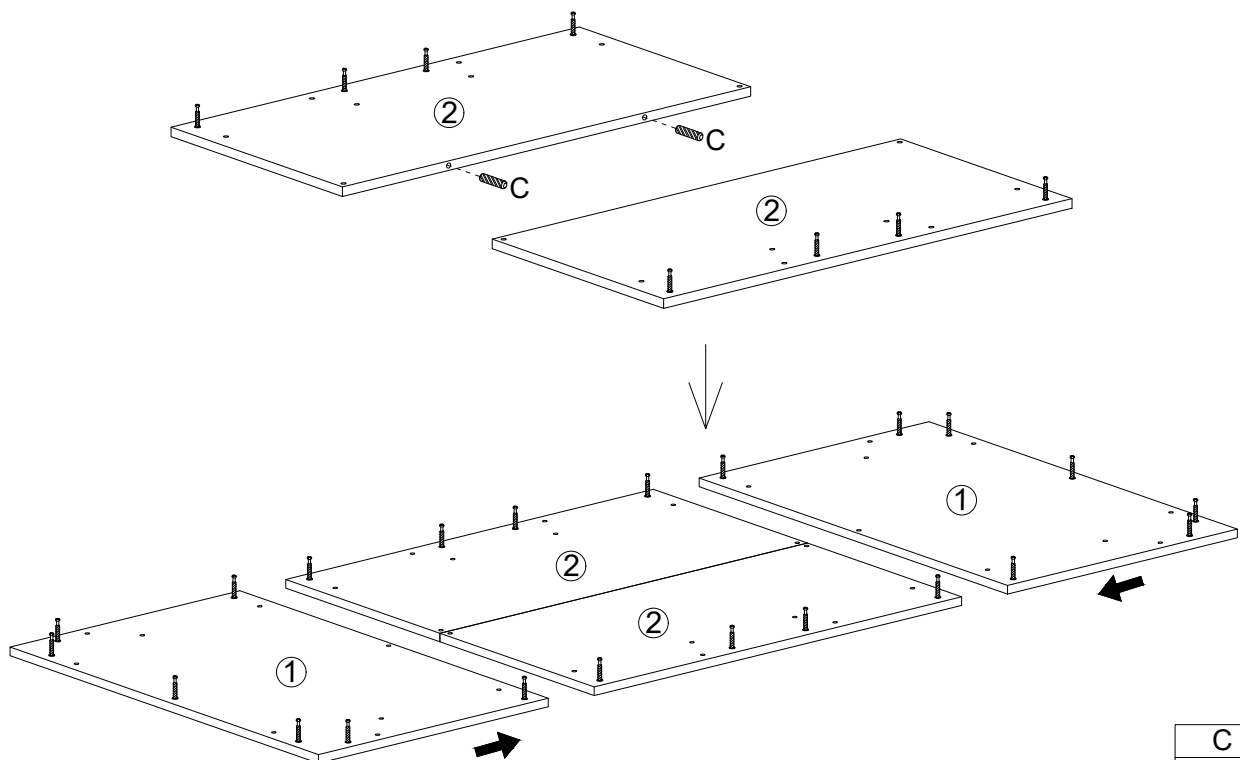


C	X2
	
Ø8X30mm	

STEP 7

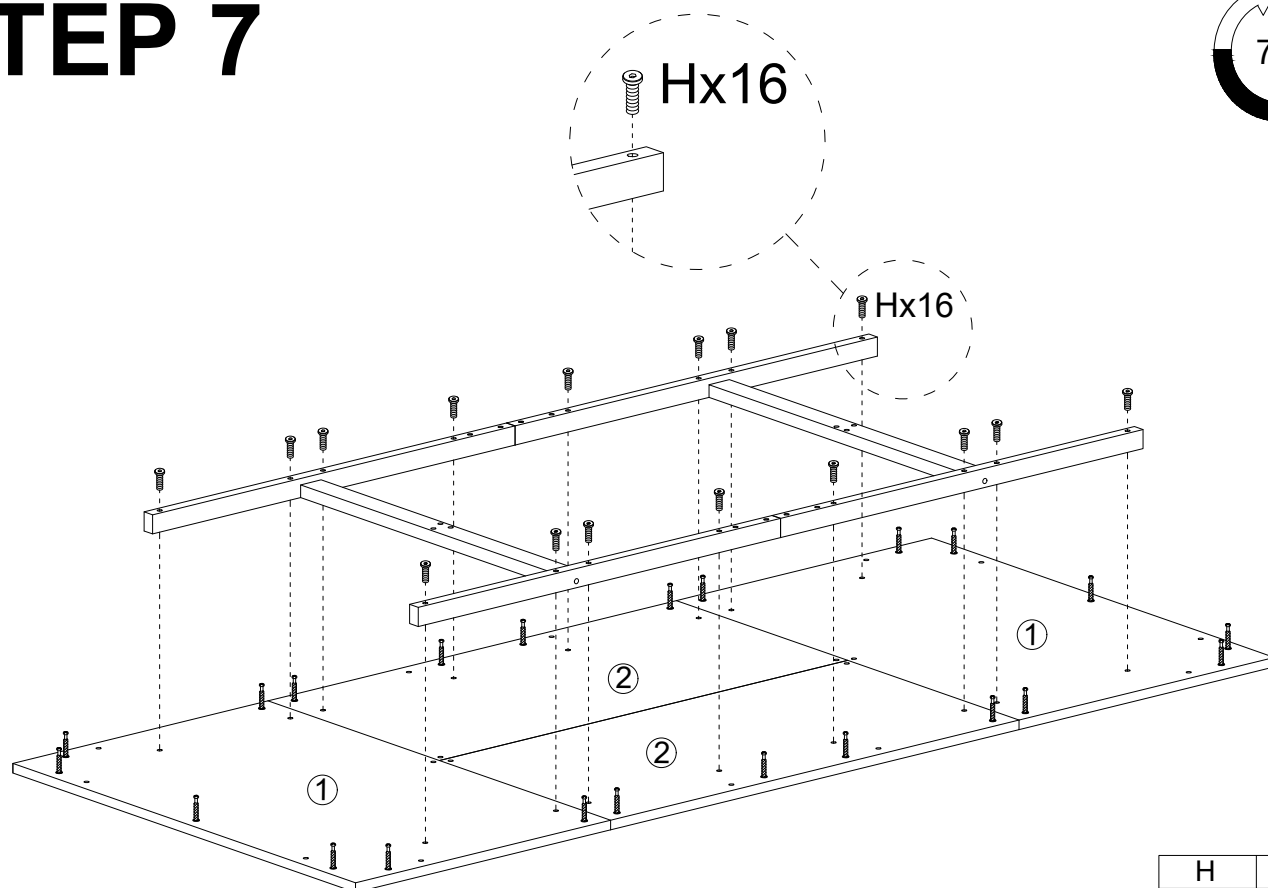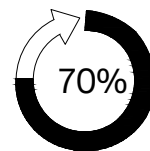


H	X16
	
M6X40mm	

STEP 8

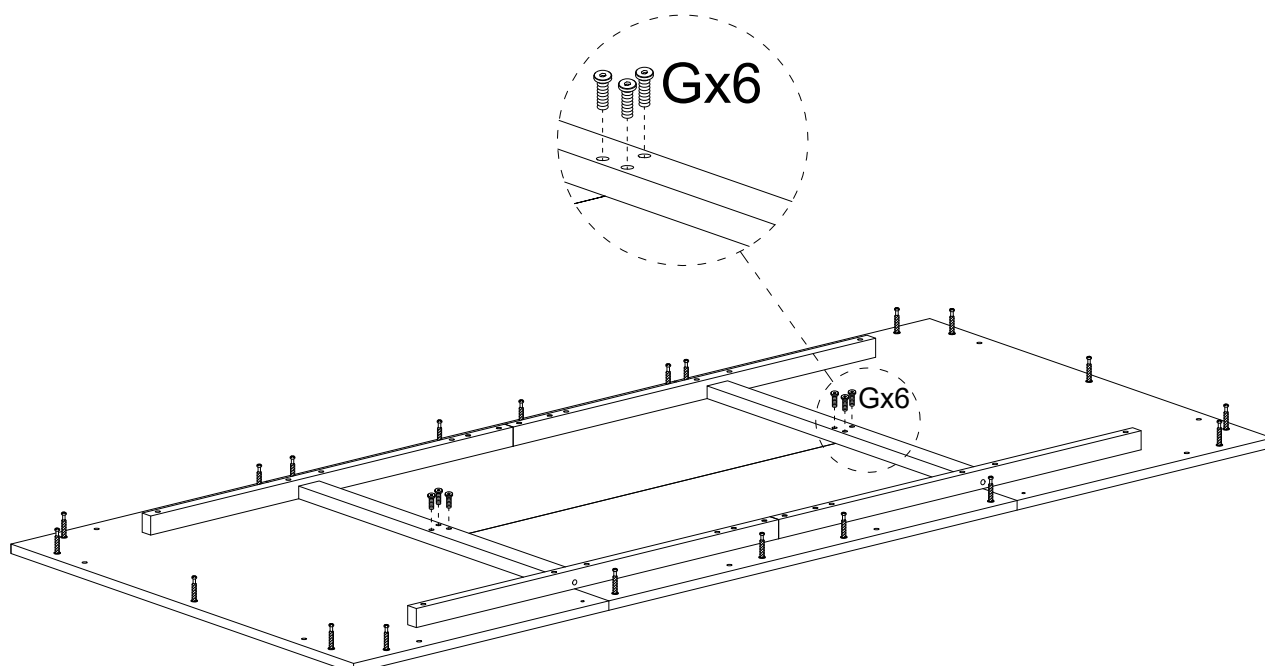


G	X6
	
M6X30mm	

STEP 9

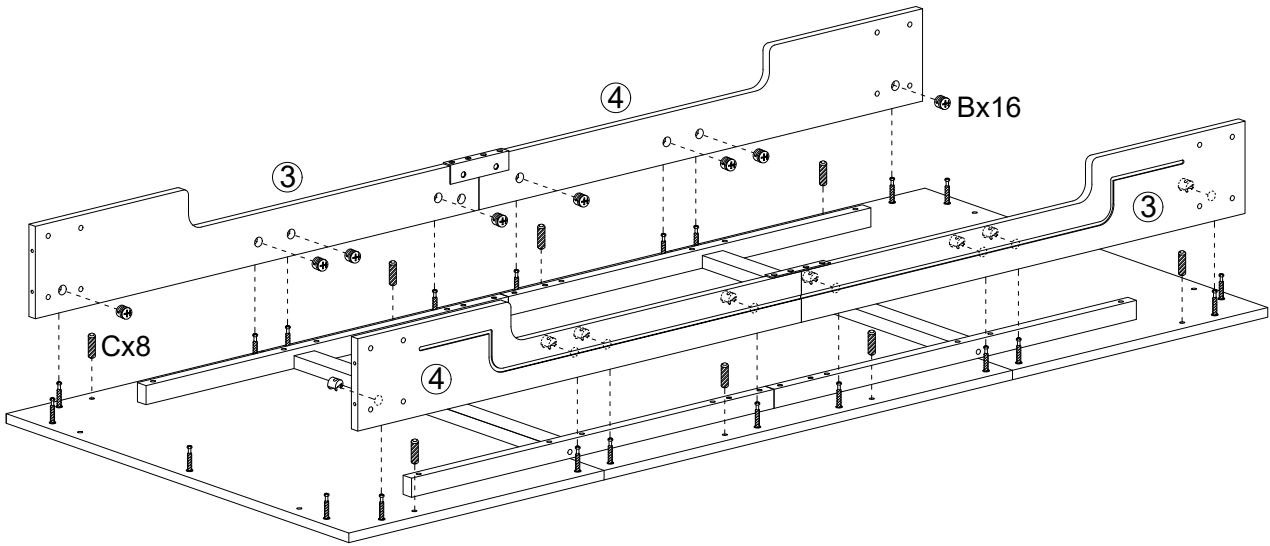


B	X16	C	X8
			
Ø15X12mm		Ø8X30mm	

STEP 10

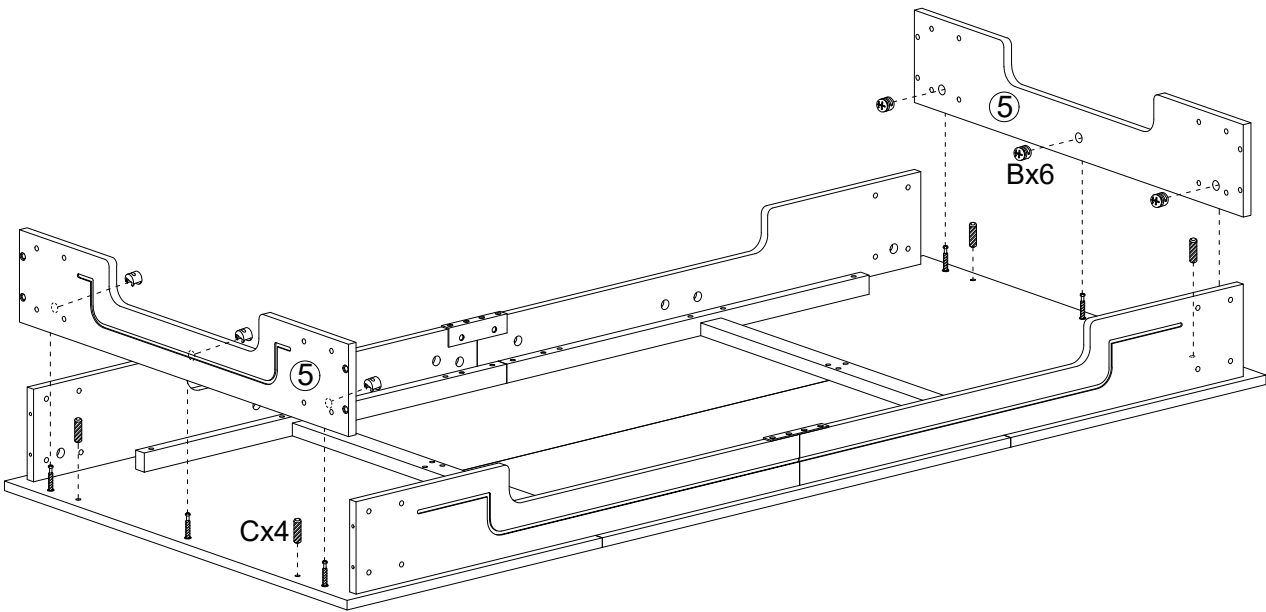



B	X6	C	X4
			
Ø15X12mm		Ø8X30mm	

STEP 11

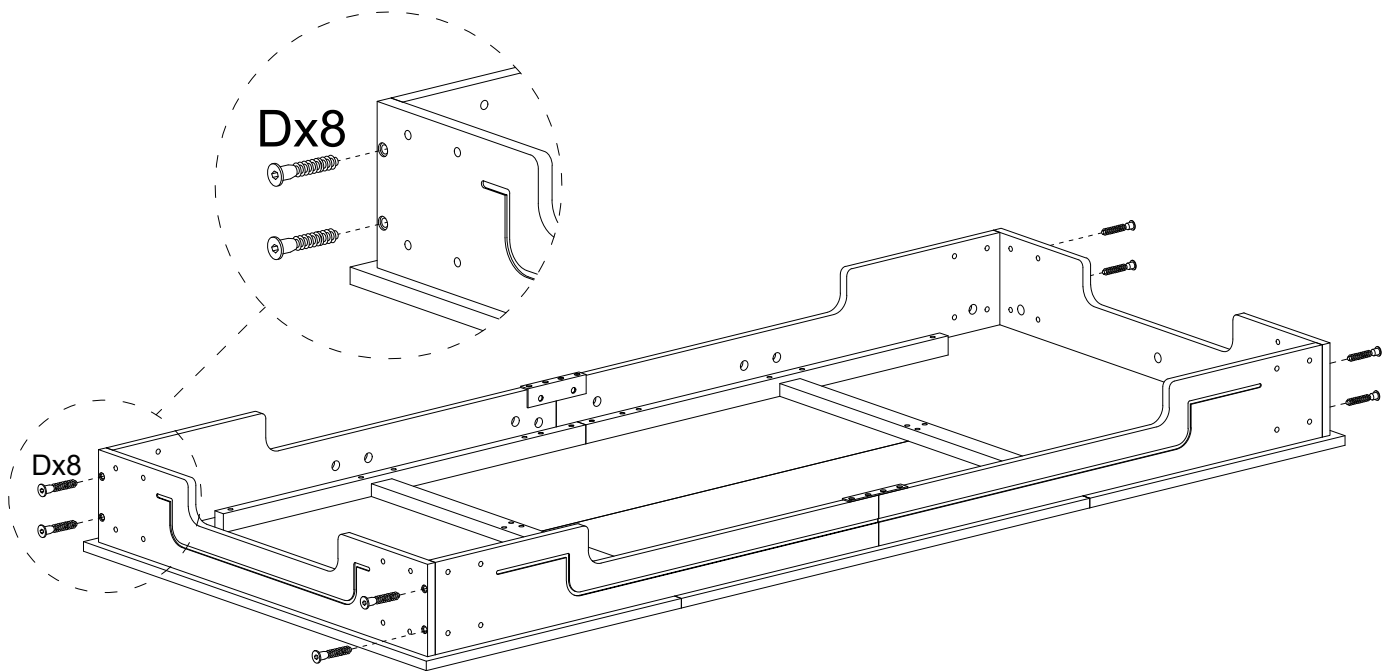


D	X8
	
Ø7X37mm	

STEP 12

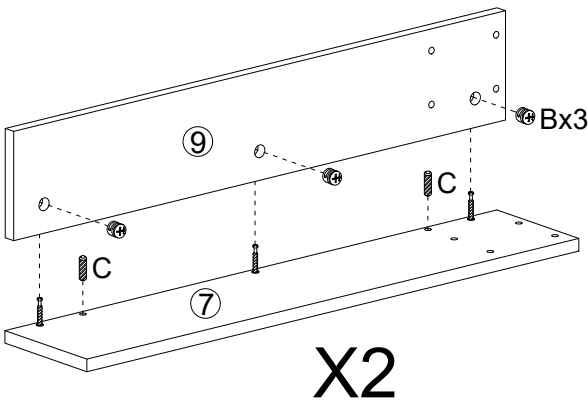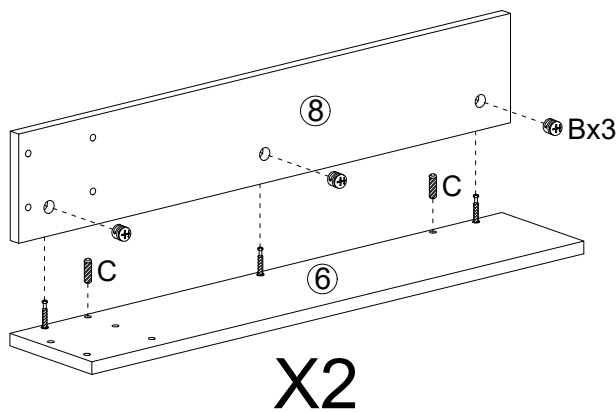

B	X12	C	X8
			
Ø15X12mm		Ø8X30mm	

STEP 13

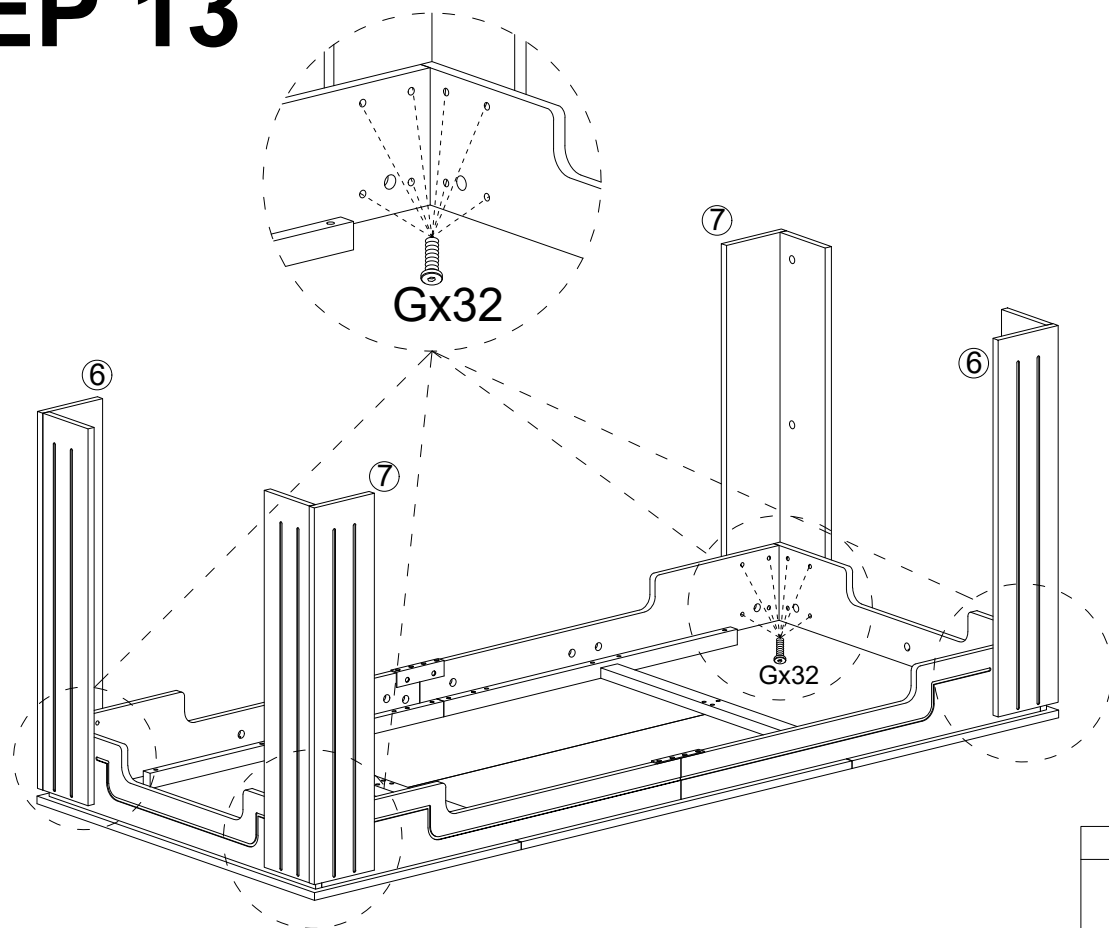

G	X32
	
M6X30mm	

STEP 14

