



Pantry Cabinet






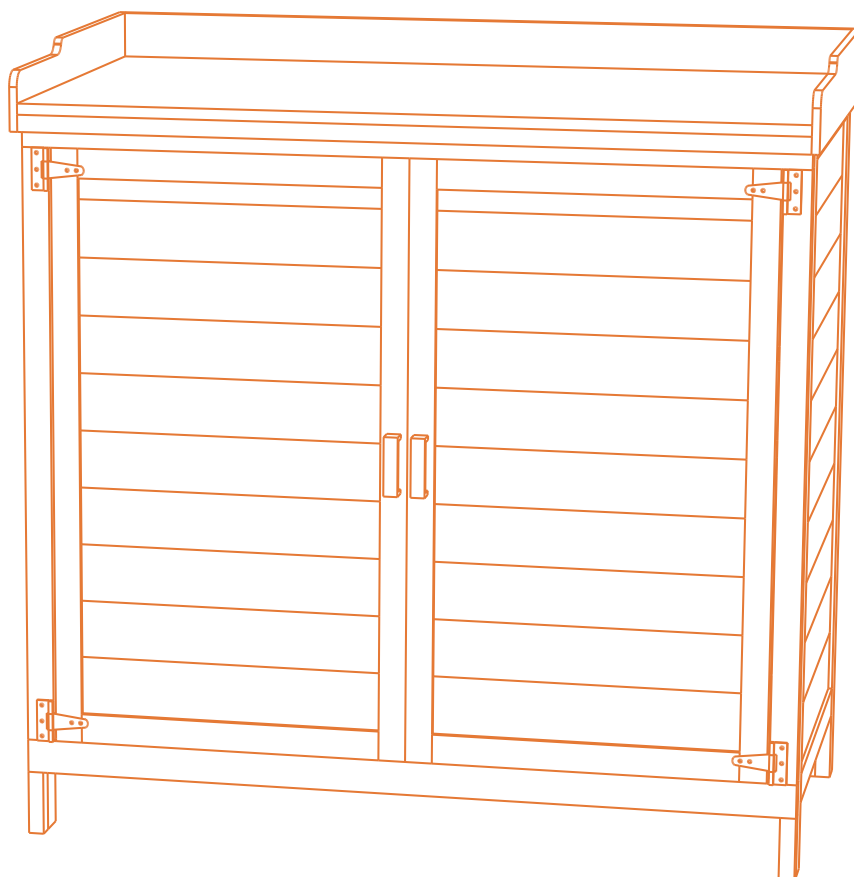





















x2










Pay attention not to step or press hard on the board when assembly.

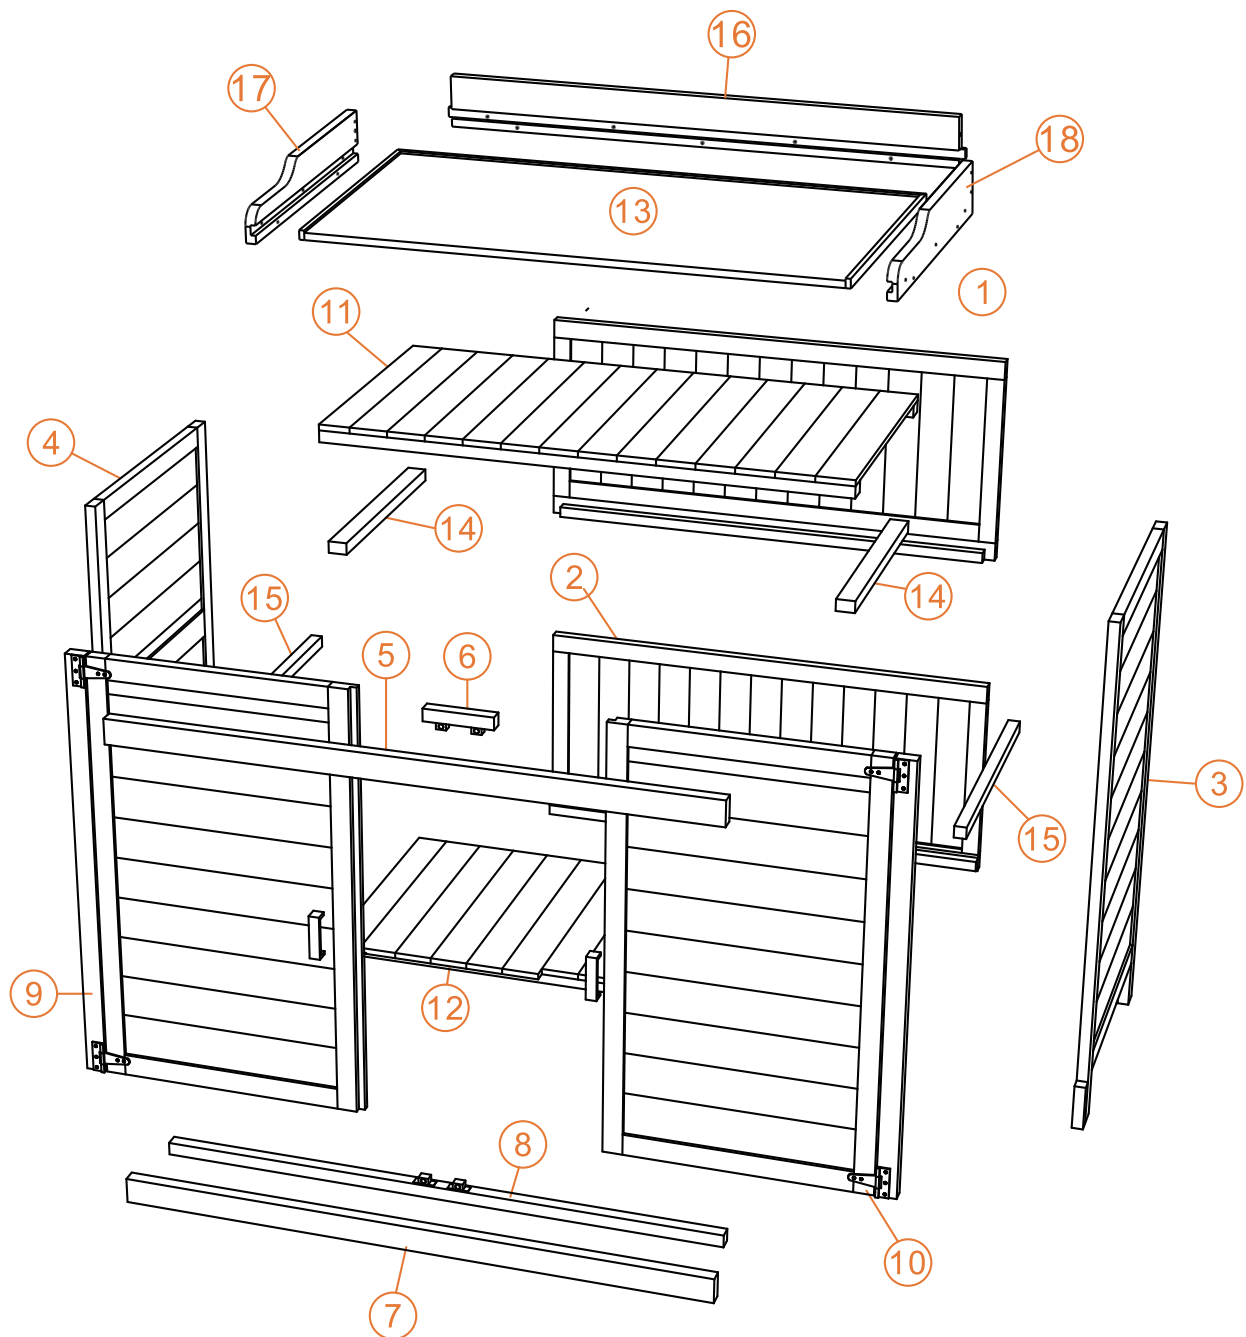

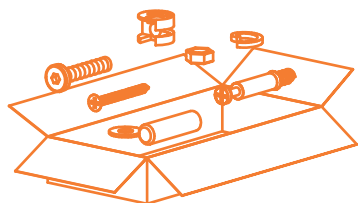



**A x26+2** $\varnothing 3.5 \times 40 \text{ mm}$ **B x10+1** $\varnothing 3.5 \times 35 \text{ mm}$ **C x23+2** $\varnothing 3.5 \times 30 \text{ mm}$ **D x6+1** $\varnothing 3.0 \times 28 \text{ mm}$ **E x2****F x4**

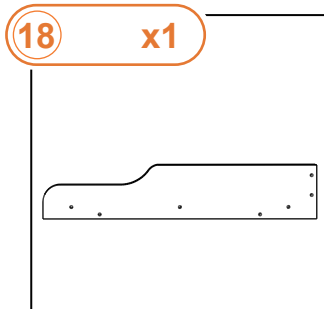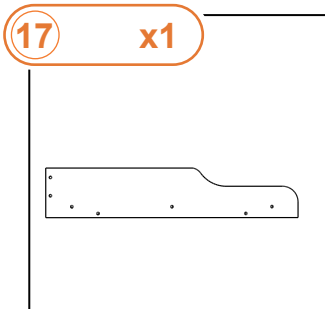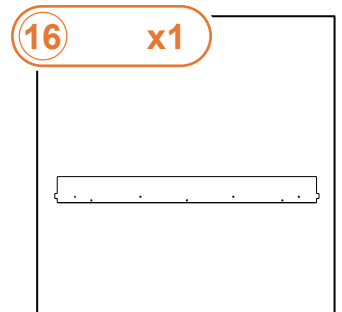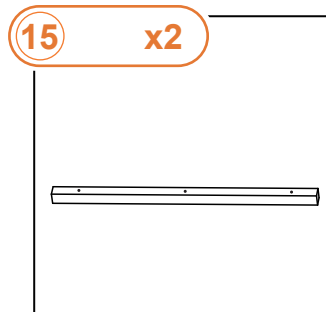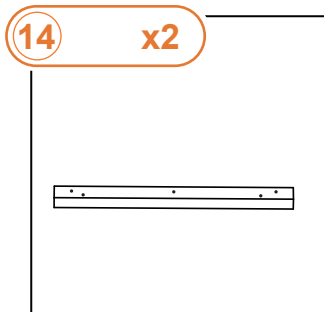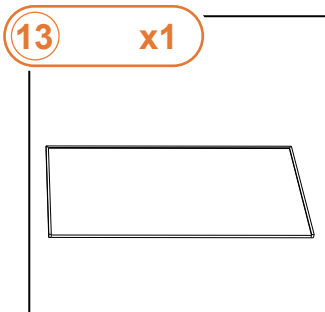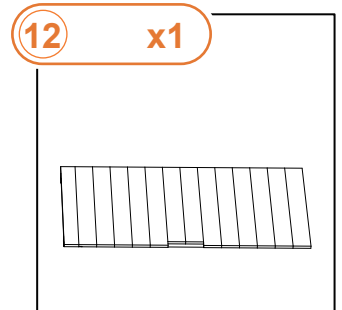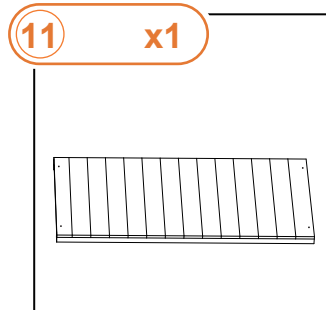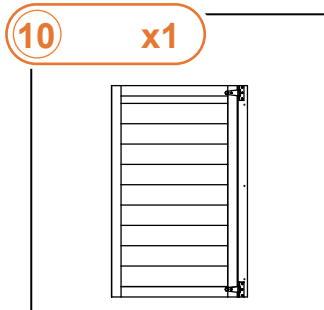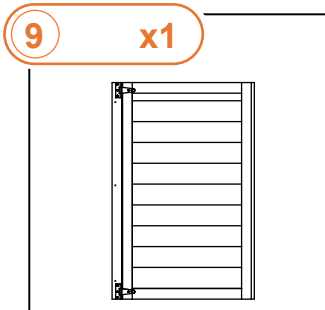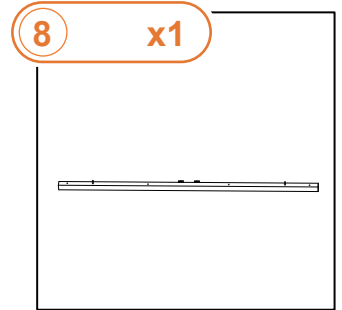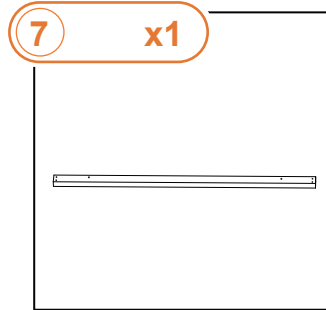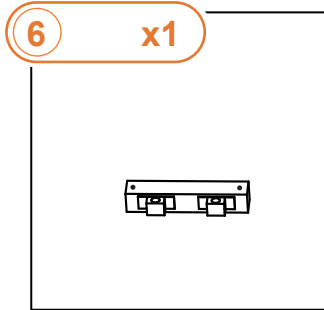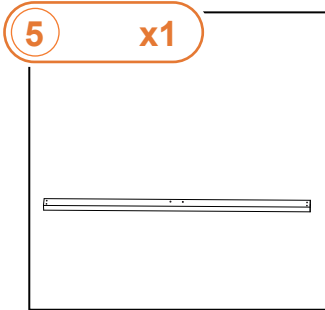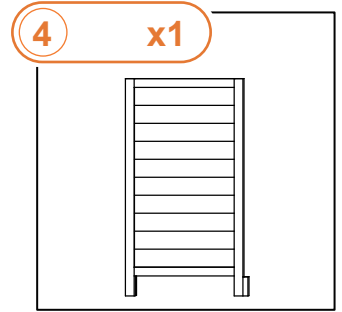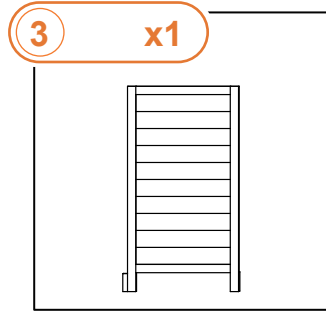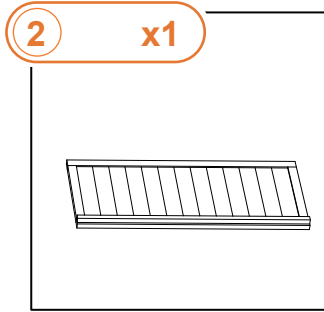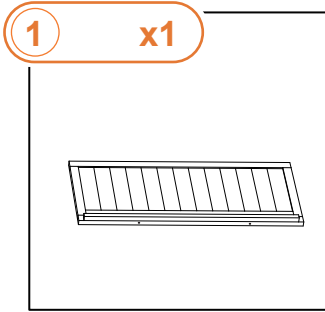







Step1

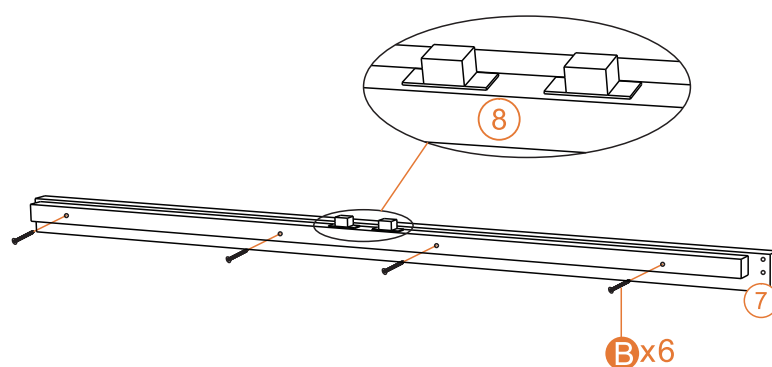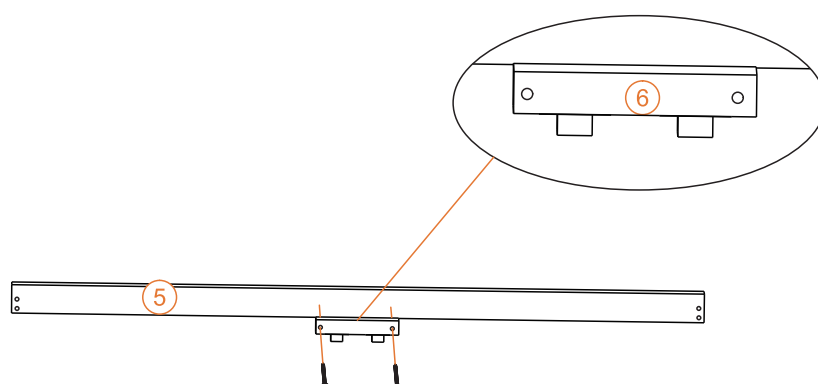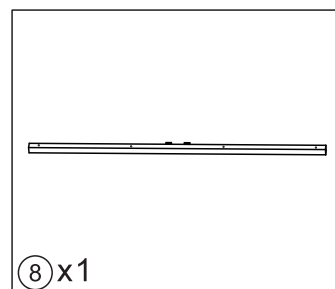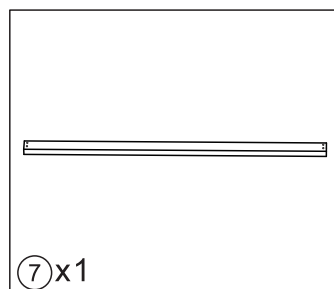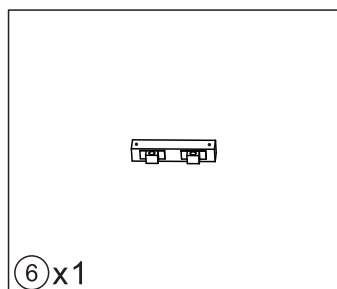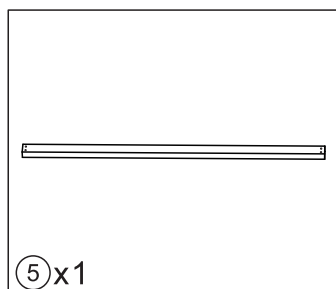






Step2

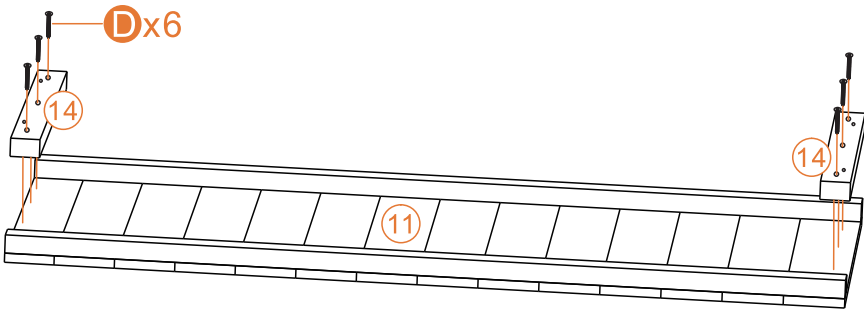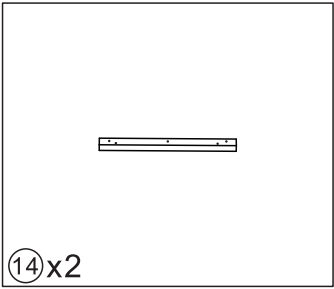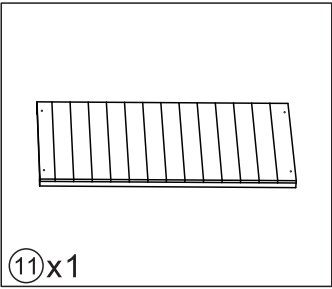



Step3

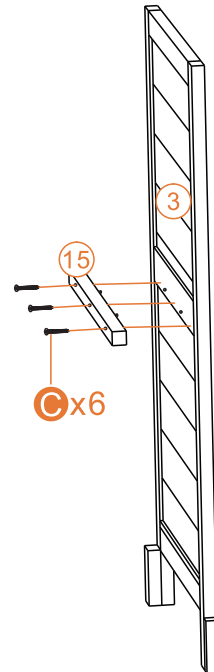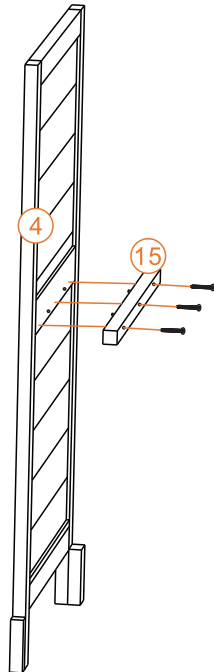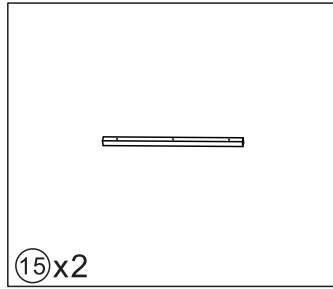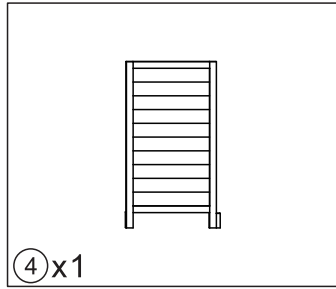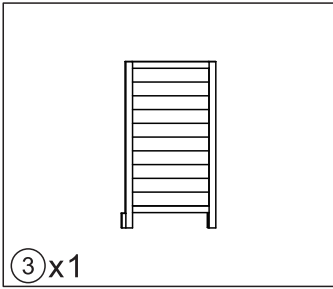



Step4

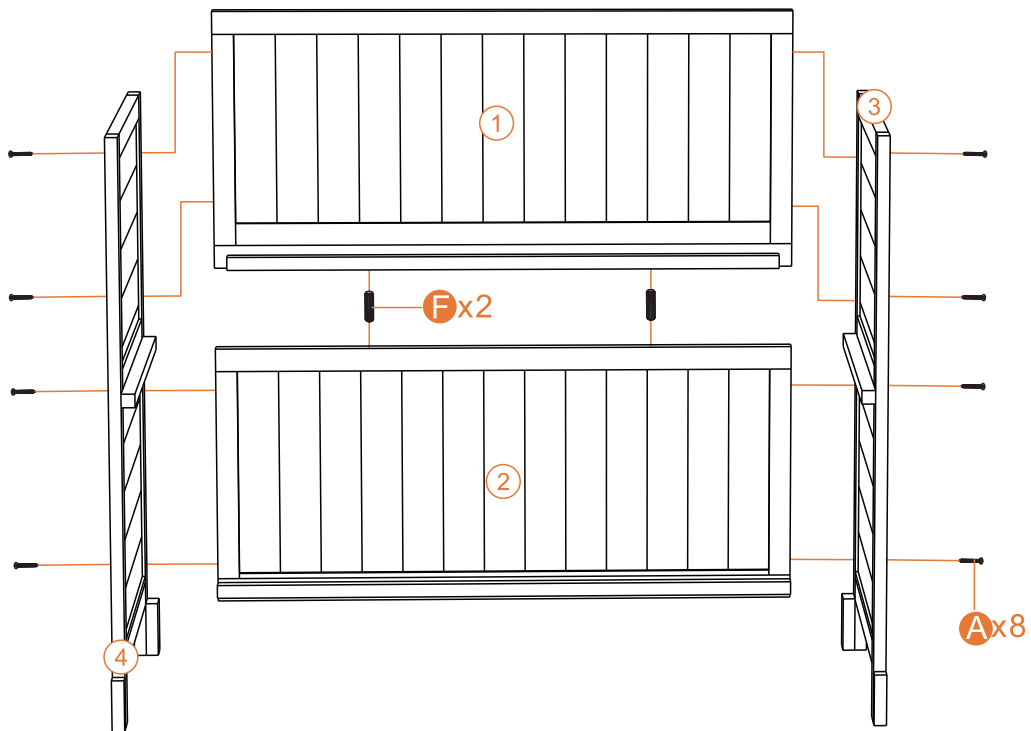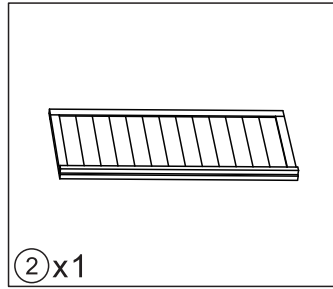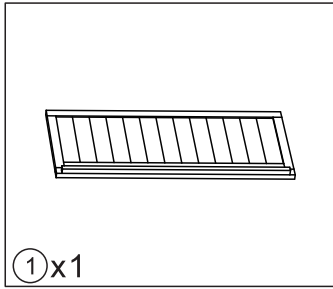

Step5

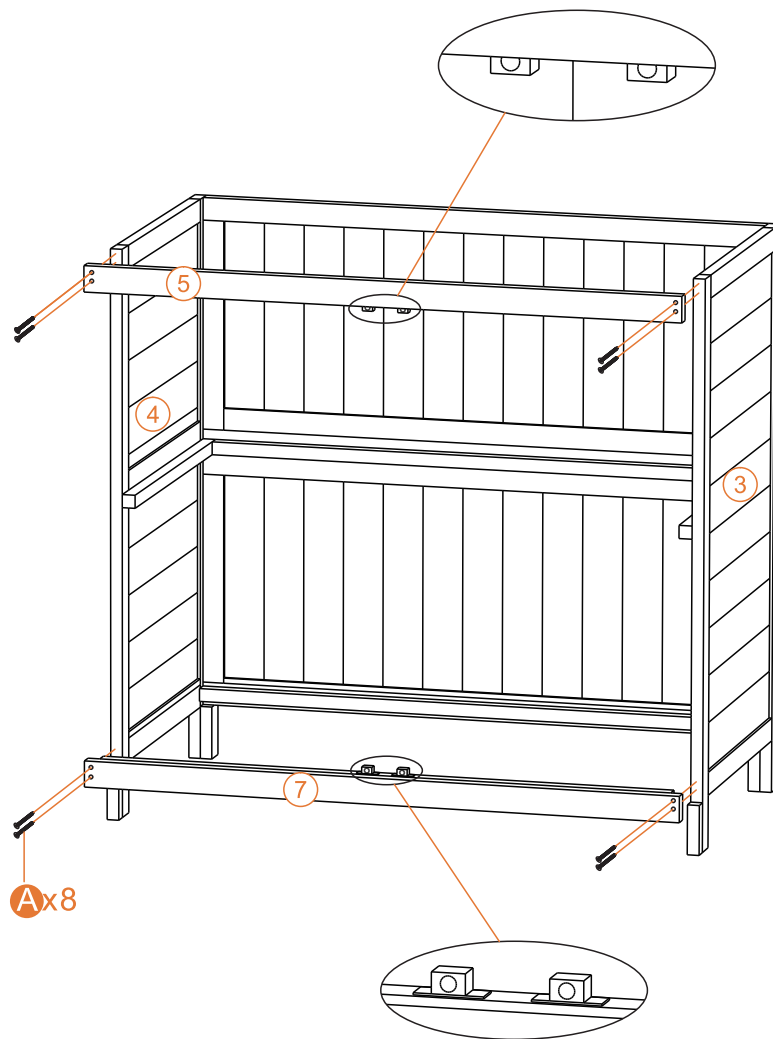


Step 6

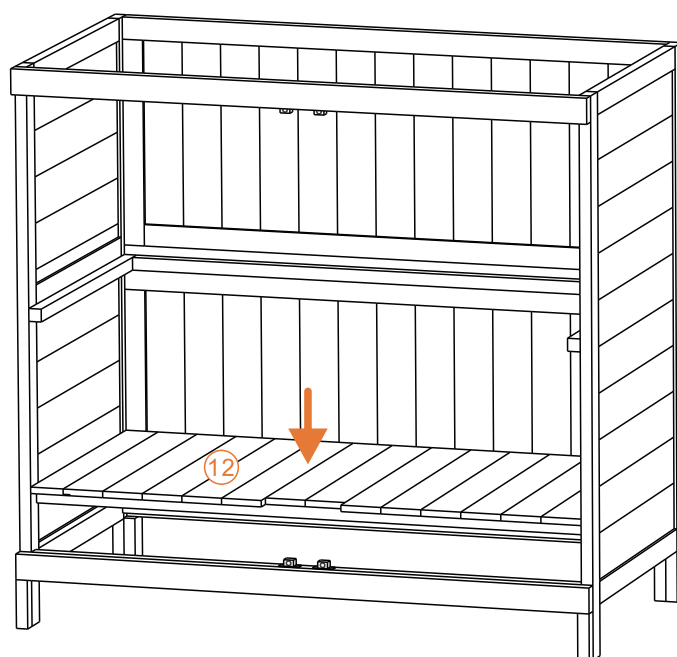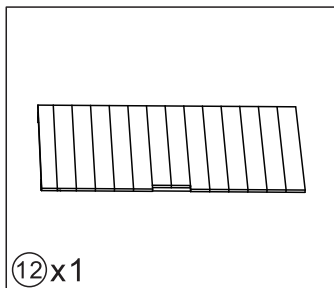





Step7











Ax4
 $\varnothing 3.5 \times 40 \text{ mm}$

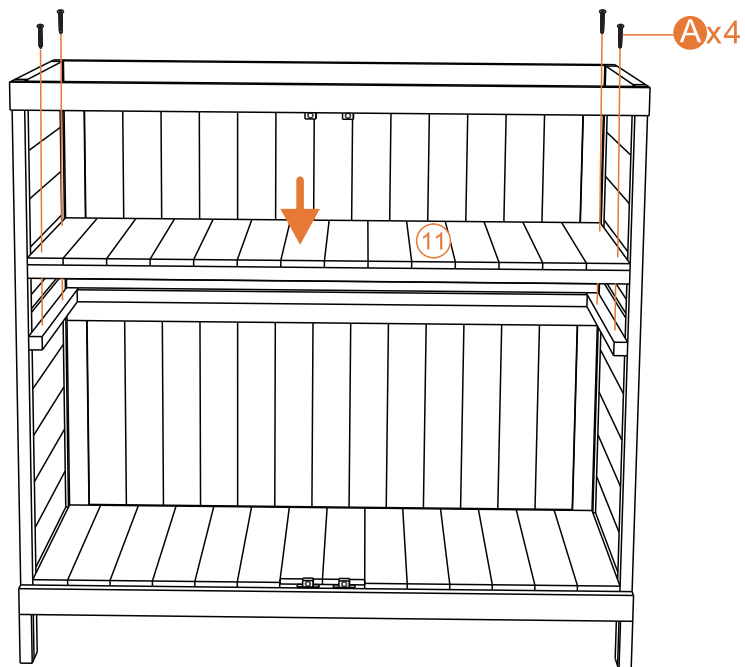

Step 8

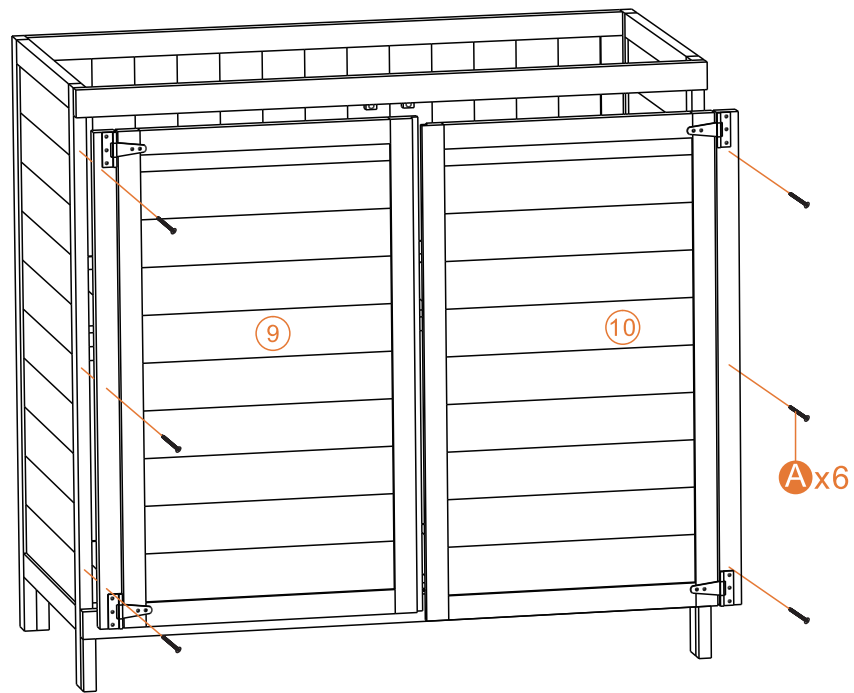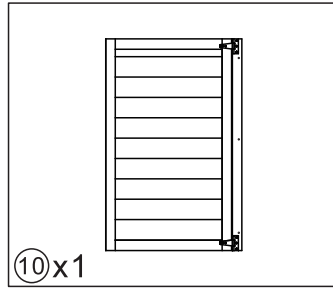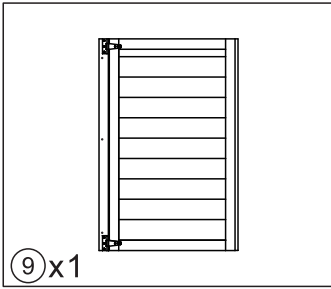



Step9

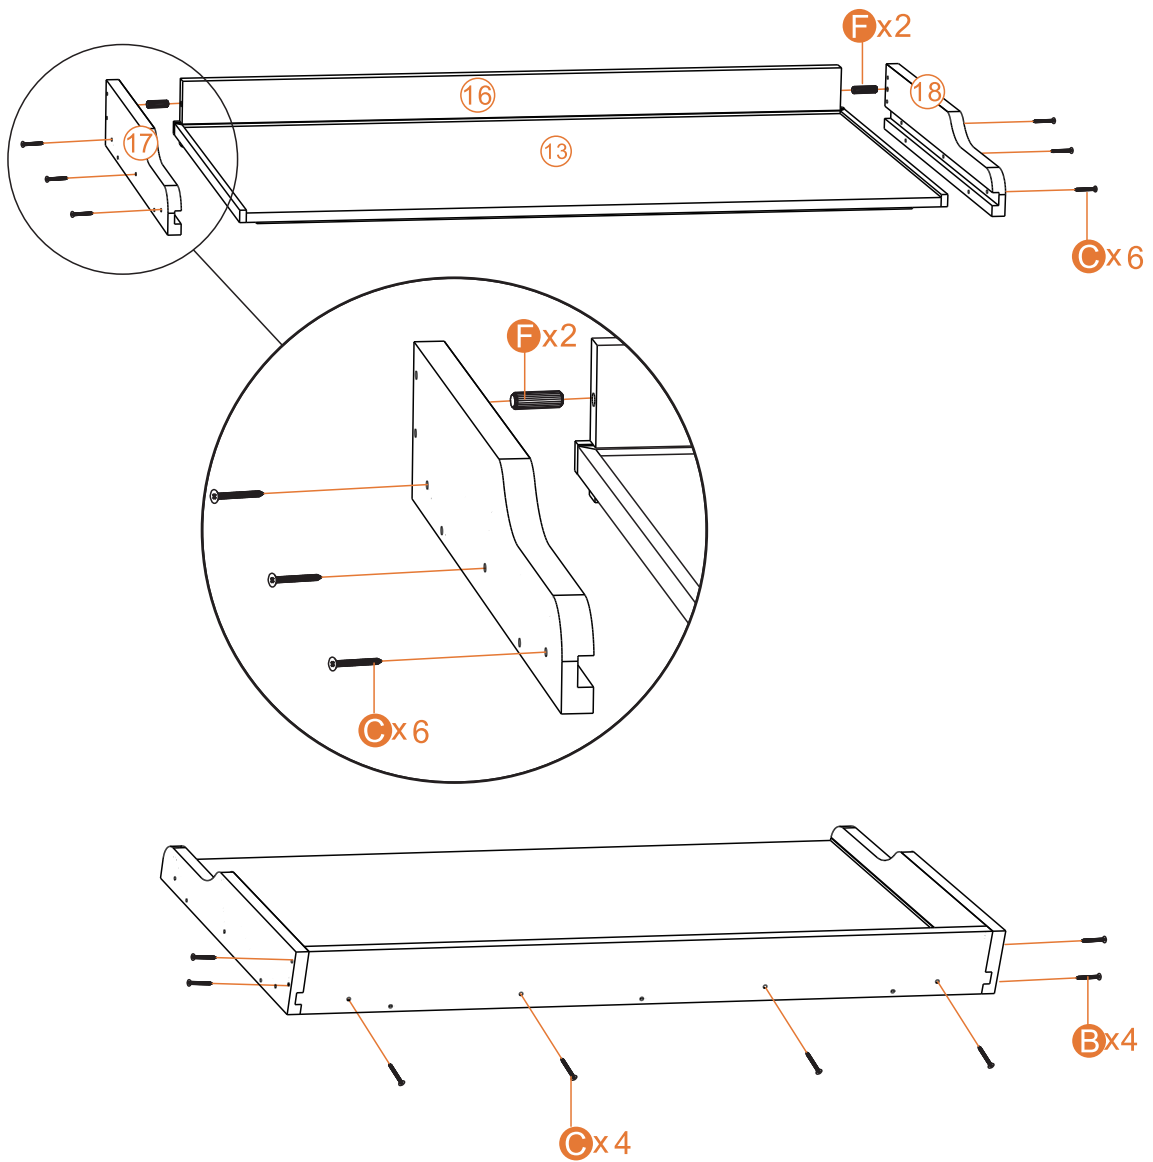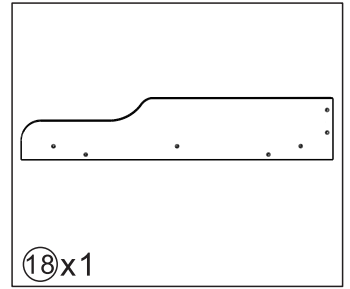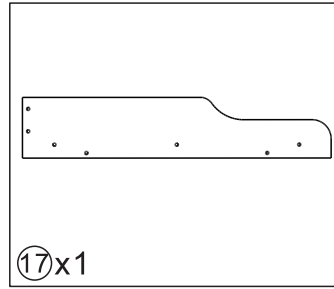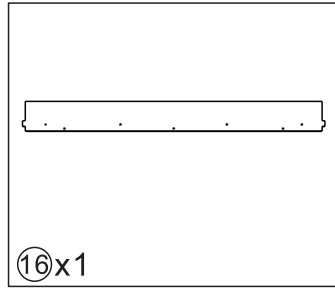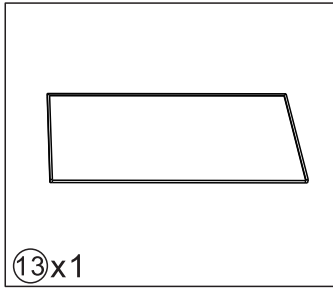

Step10



Cx7
φ3.5x30mm

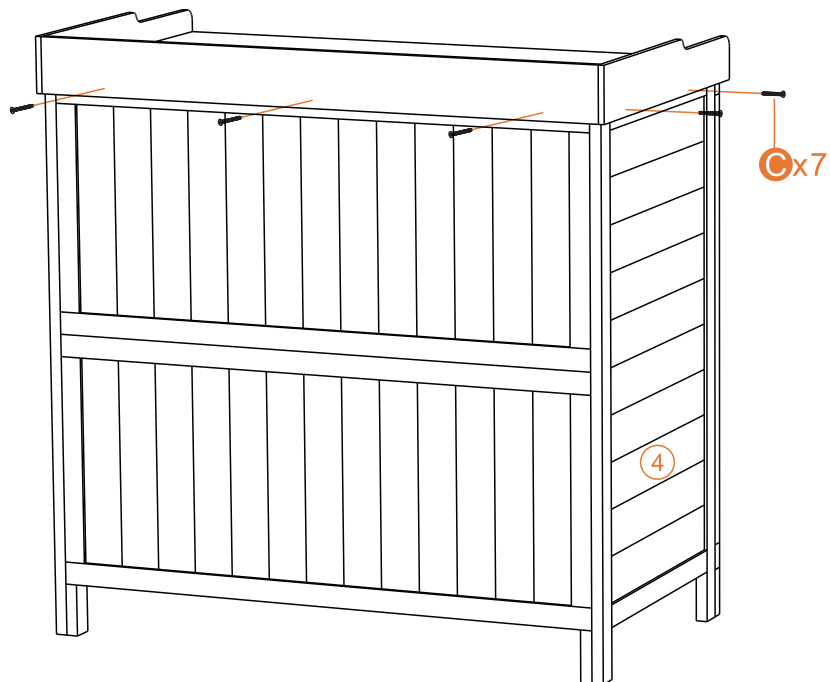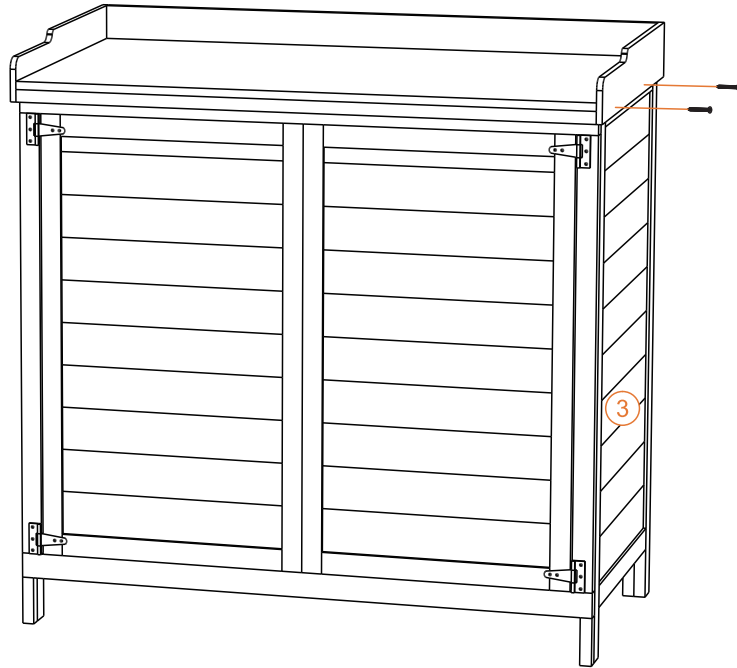

Step11

