



ASSEMBLY INSTRUCTIONS

TWIN BED WITH 2 DRAWERS




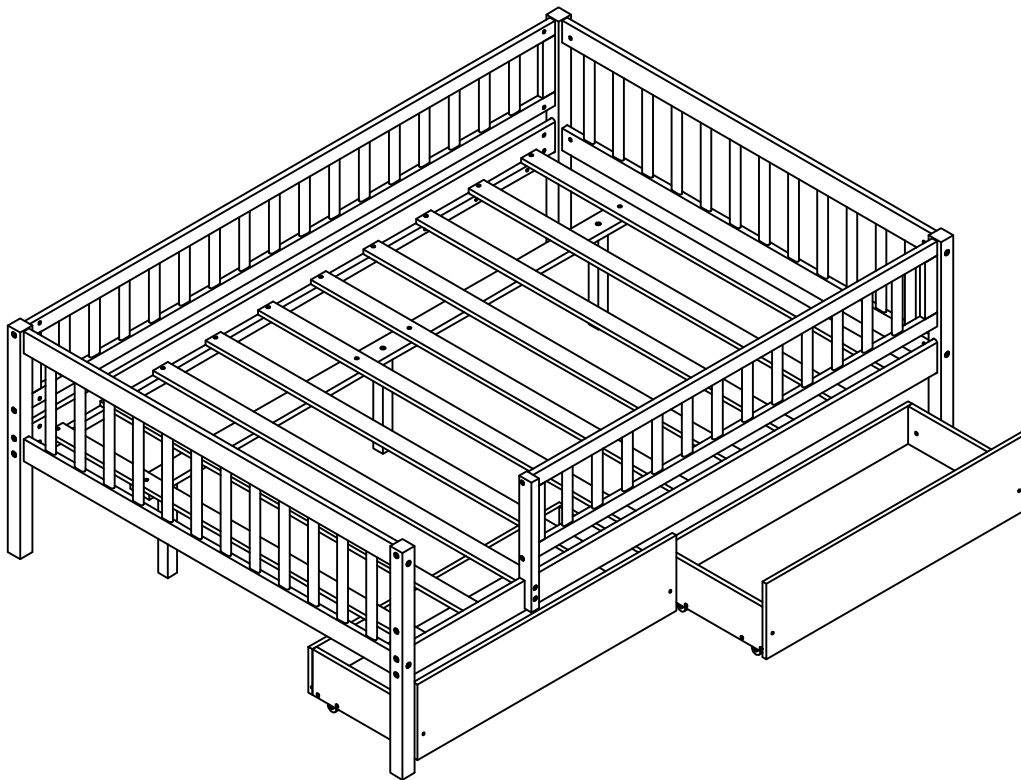














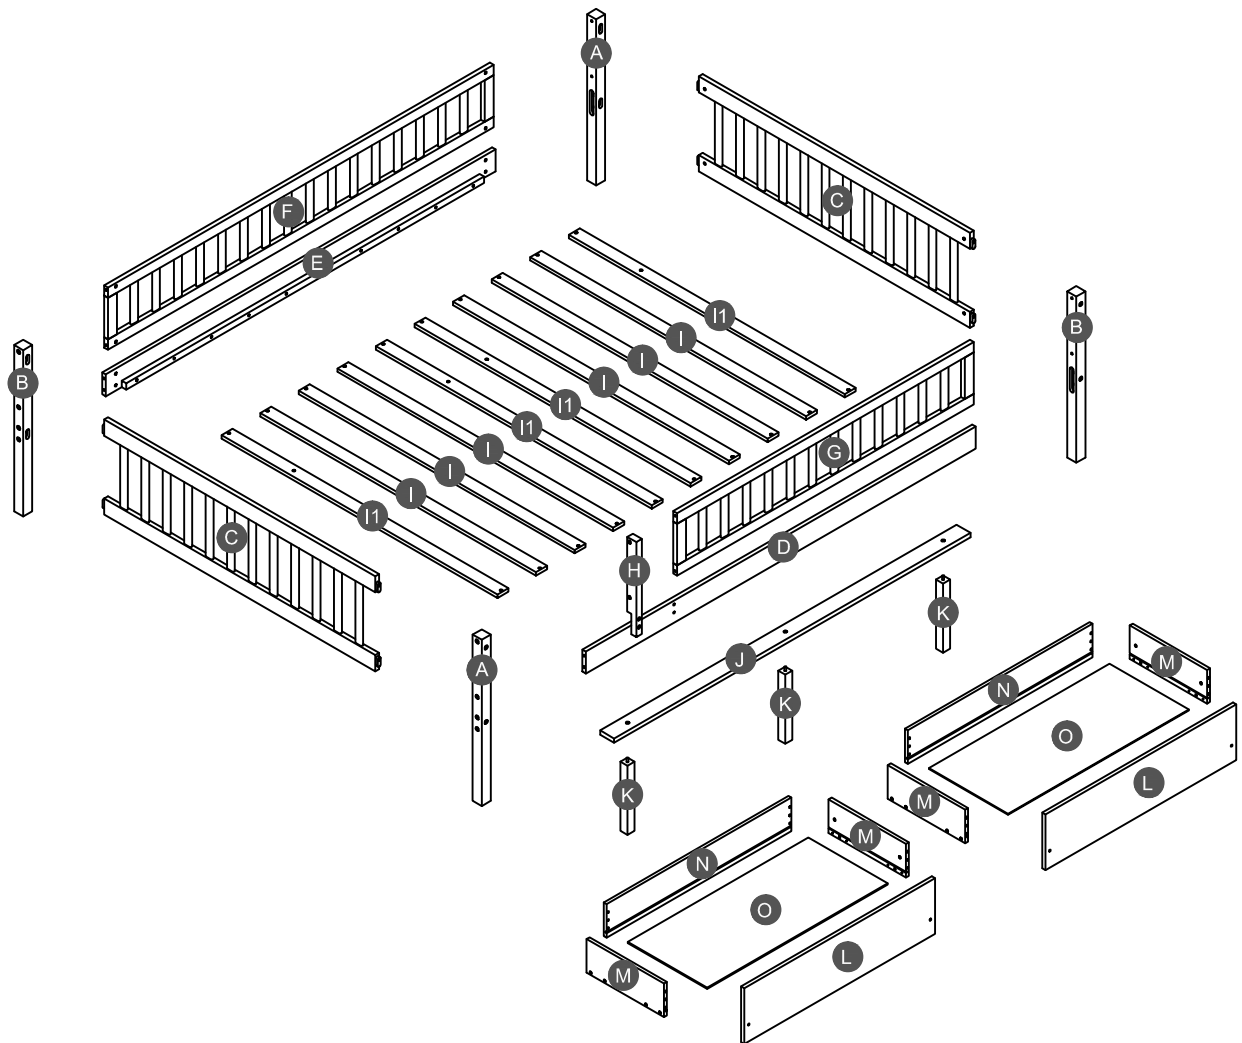WF301868












Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Frame HB/FB - 2pcs
D  Side rail (Front) - 1pc	E  Side rail (Back) - 1pc	F  Long guard rail (Back) - 1pc
G  Short guard rail (Front) - 1pc	H  Support guard rail(Left) - 1pc	I  Slats - 6pcs
I1  Slats - 4pcs	J  Lower support slat - 1pc	K  Leg support - 3pcs
L  Front drawer panel - 2pcs	M  Left / right drawer panel - 4pcs	N  Back drawer panel - 2pcs
O  Drawer bottom - 2pcs		

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)	3  (Ø15)1/4"*60mm Hex-Head bolts (8pcs)
4  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(32pcs)	6  Ø4*30mm Wood screws (46pcs)
7  (1/4")4.5*58mm Allen key (1pc)	8  100*54*20 mm Wheels (8pcs)	9  70*35*19 mm Drawer stopper (3pcs)
10  Ø8*30mm Wood dowel (16pcs)	11  Ø10*20mm Wood dowel (8pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

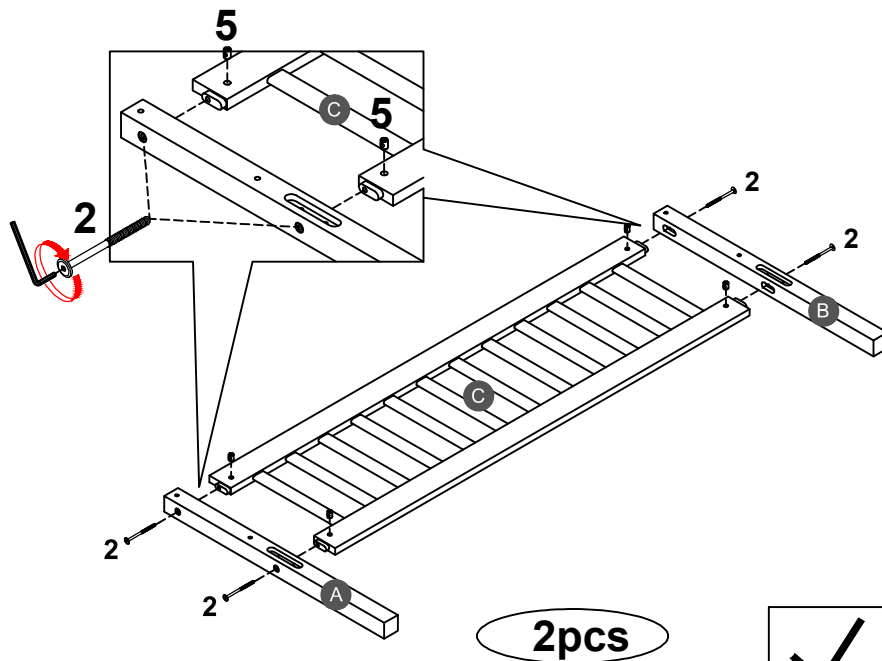


2	
8PCS	
5	
8PCS	

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

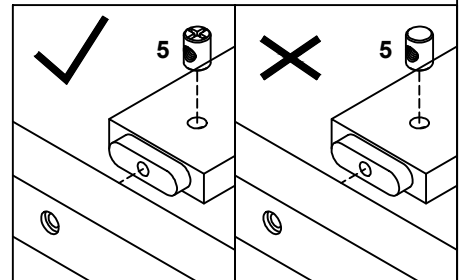


STEP 2:

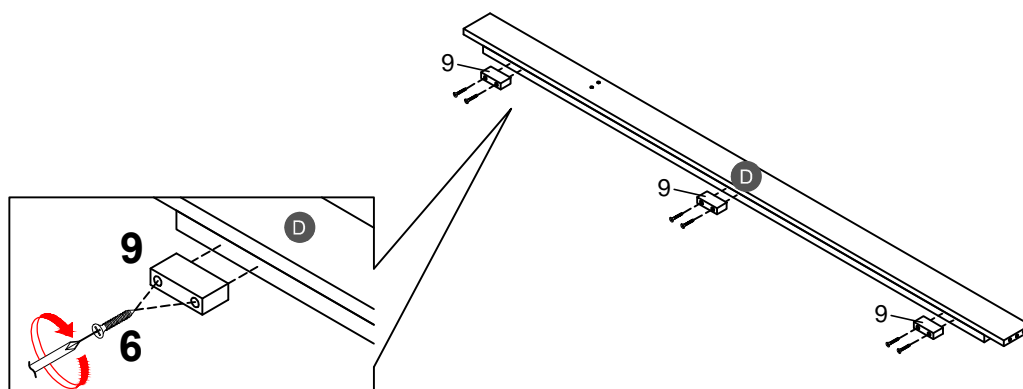


6		9	
6PCS		3PCS	

Drawer stopper (9) with lower side rail front (D) by using screw (6).

STEP 3:

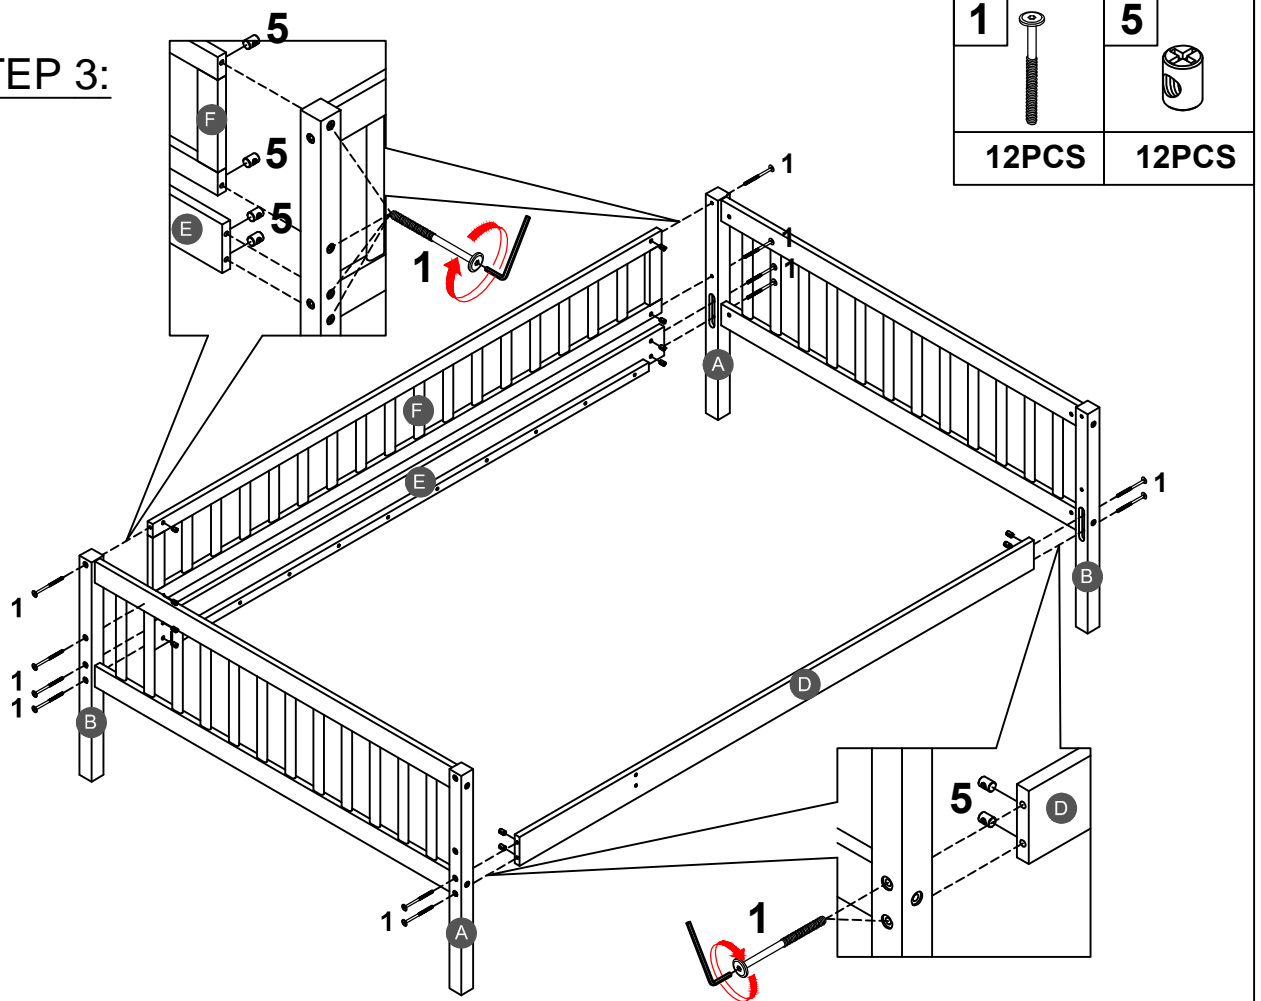


STEP 4:

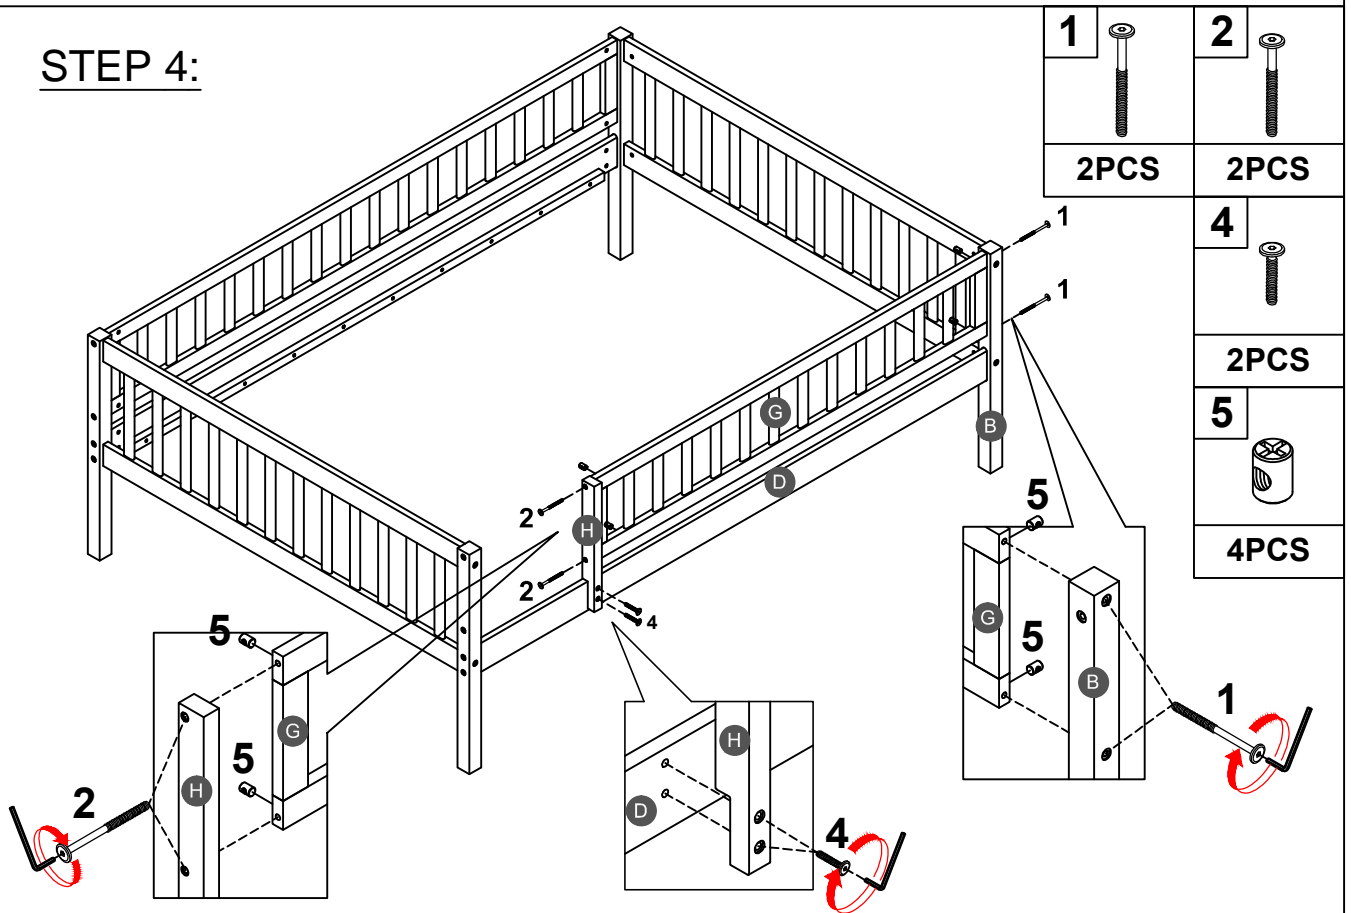

EP 5:


(J) later

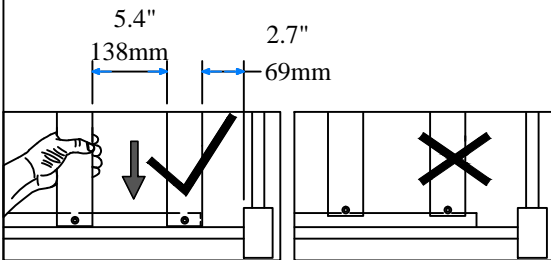

7

STEP 7:


3		5		10	
4PCS		4PCS		8PCS	

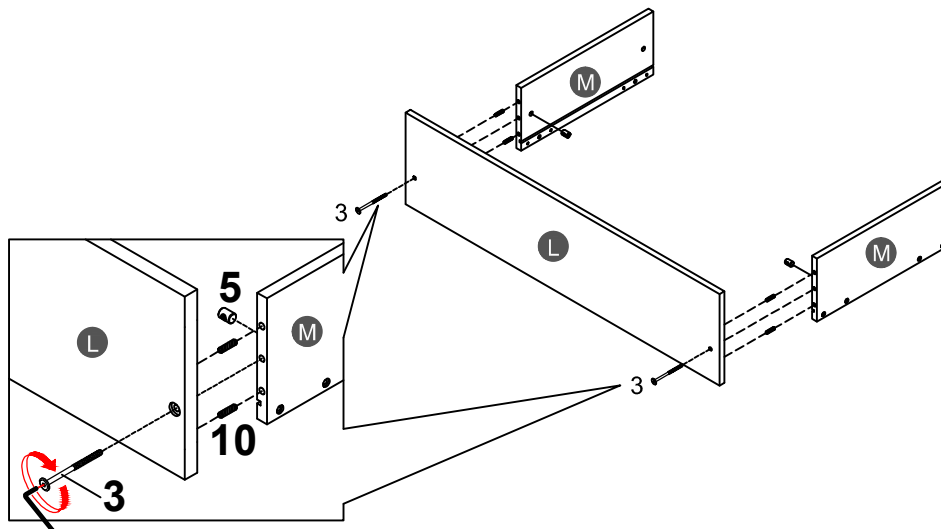

x 2




STEP 8:


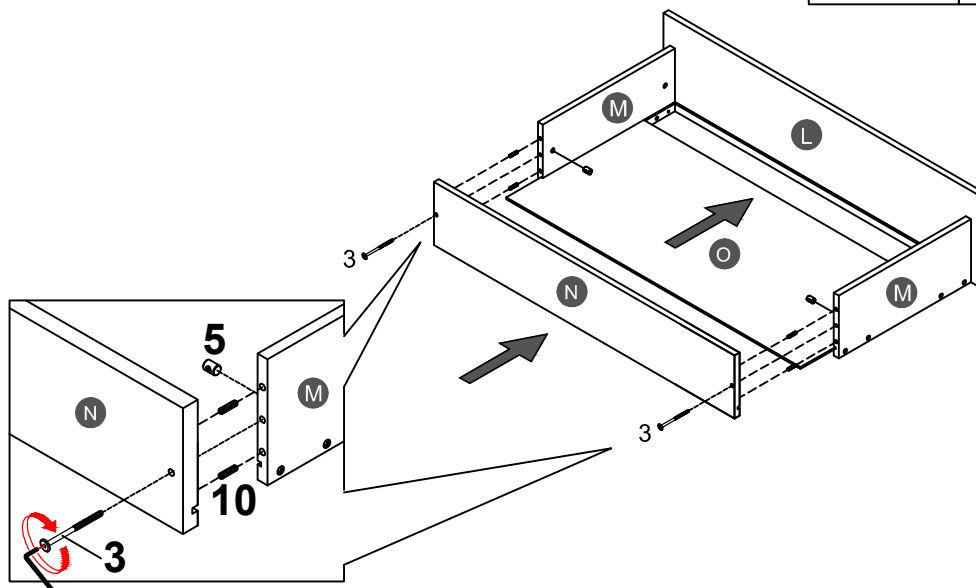
3		5		10	
4PCS		4PCS		8PCS	




x 2

STEP 9:

6		8		11	
16PCS		8PCS		8PCS	

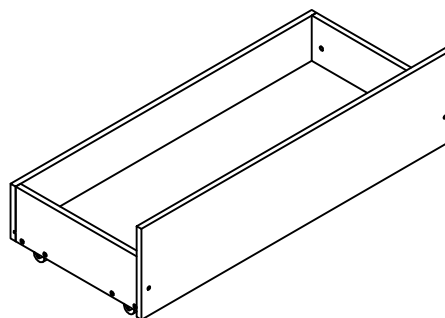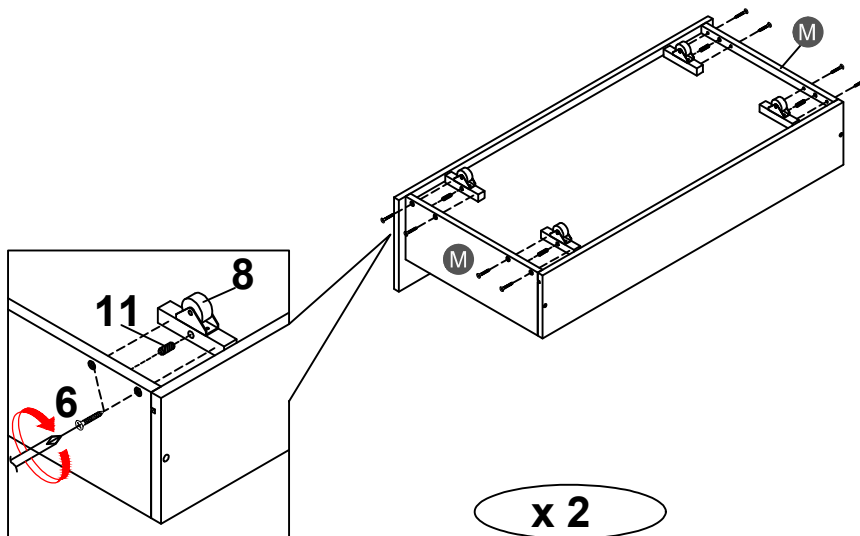

STEP 10:

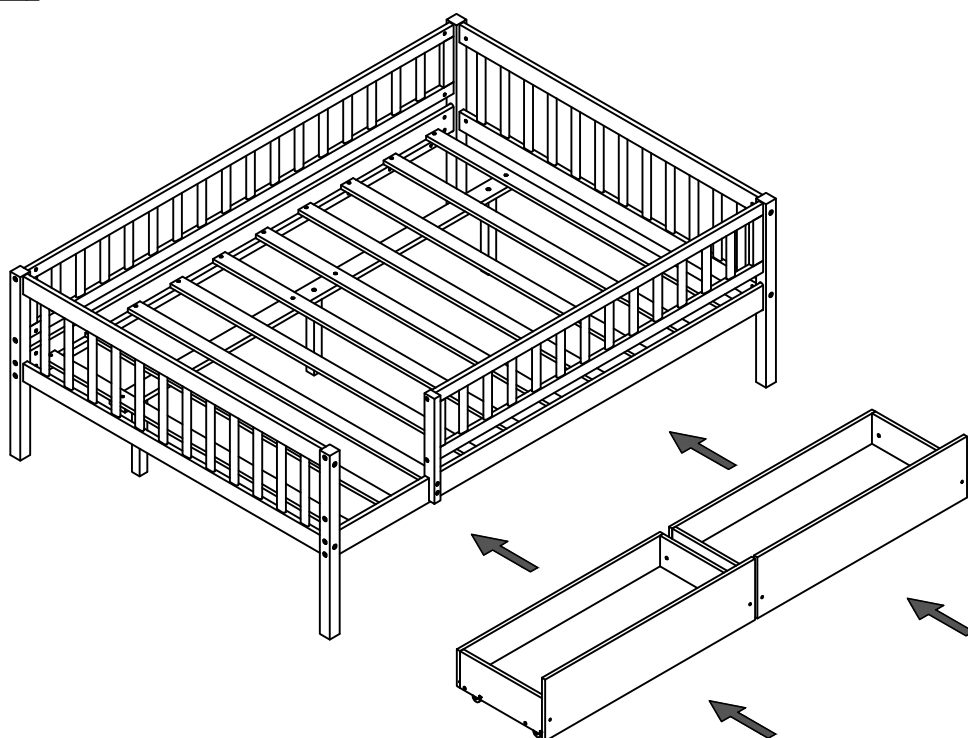

Push Trundle and Drawer under the bottom of Bunkbed.

