

ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

"DO NOT OVERTIGHT ANY HARDWARE"

WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.

TABLE OF CONTENTS

HARDWARES LIST

PAGE 2 - 3

PARTS LIST

PAGE 4 - 5

PARTS' LOCATION

PAGE 6

ASSEMBLY STEPS

PAGE 7 - 19

ASSEMBLY COMPLETED


PAGE 20

ANTI-TIPPING INSTALLMENT
INSTRUCTIONS


PAGE 21

ASSEMBLY TOOLS REQUIRED


1. Screwdriver (not provide)








2. Hammer (not provide)

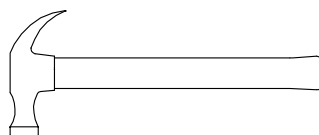

Skip the power trip this time.



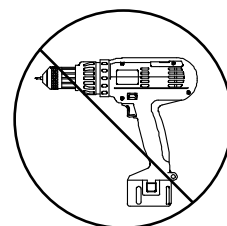


HARDWARES LIST






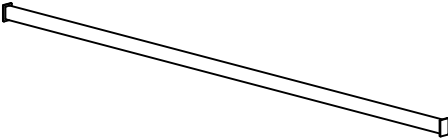
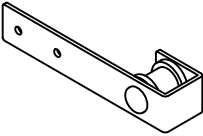


ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		32 PCS
B	MINIFIX CAM BOLT		32 PCS
C	WOOD DOWEL (M8 x 25MM)		30 PCS
D	SHELF SUPPORT (M5 x 16mm)		12 PCS
E	JCBC SCREW M6 x 30MM		6 PCS
F	FLAT WASHER M6 x 19MM		6 PCS
G	METAL TUBE		1 PC
H	DOOR METAL HANGER		4 PCS
I	DOOR LEG		4 PCS
J	PANHEAD SCREW M4 x 16mm		22 PCS

MORE HARDWARES DETAIL IN NEXT PAGE...

HARDWARES LIST





ITEM	DESCRIPTION	DRAWING	QTY
L	6/8" NAIL		30 PCS
M	METAL TUBE HANGER (L SHAPE)		3 PCS
N	M4 ALLEN KEY (65MM)		1 PC
R	PLASTIC STRIP (H SHAPE)		1 PC
S	CSK C/B SCREW (M3 x 10MM)		6 PCS
T	BOTTOM SUPPORT PLASTIC (WHITE)		6 PCS

PARTS LIST

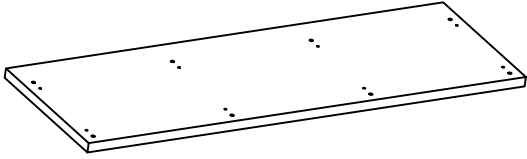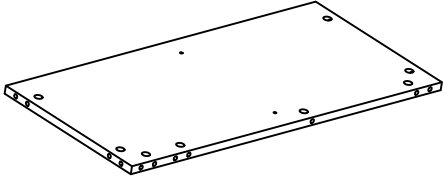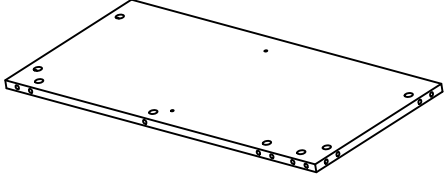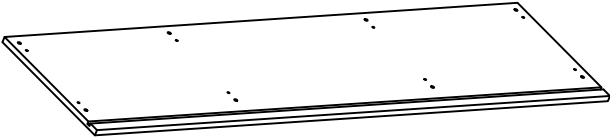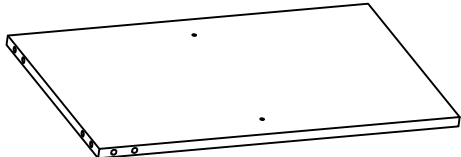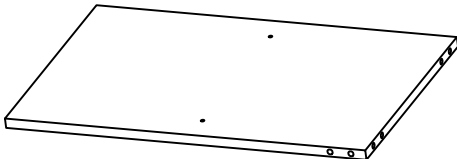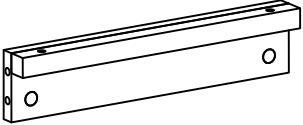ITEM	DESCRIPTION	DRAWING	QTY
1	TOP PANEL		1 PC
2	LEFT PANEL		1 PC
3	RIGHT PANEL		1 PC
4	SIDE SUPPORT RAIL		2 PCS
5	BOTTOM PANEL		1 PC
6	LEFT MIDDLE PANEL		1 PC
7	RIGHT MIDDLE PANEL		1 PC
8	FRONT TOP SUPPORT RAIL		1 PC
22	LEG (i)		3 PCS


MORE PARTS DETAIL IN NEXT PAGE...

PARTS LIST

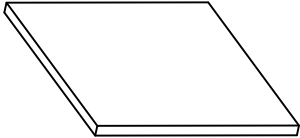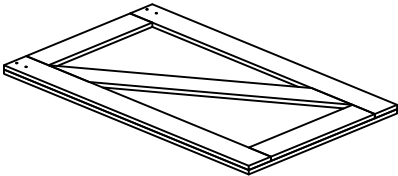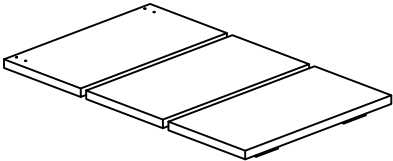ITEM	DESCRIPTION	DRAWING	QTY
10	LEG (ii)		2 PCS
11	SHELF PANEL		3 PCS
12	BACK PANEL		2 PCS
13	DOOR (i)		1 PC
14	DOOR (ii)		1 PC

PARTS ' LOCATION


SIDEBOARD x 1 PC

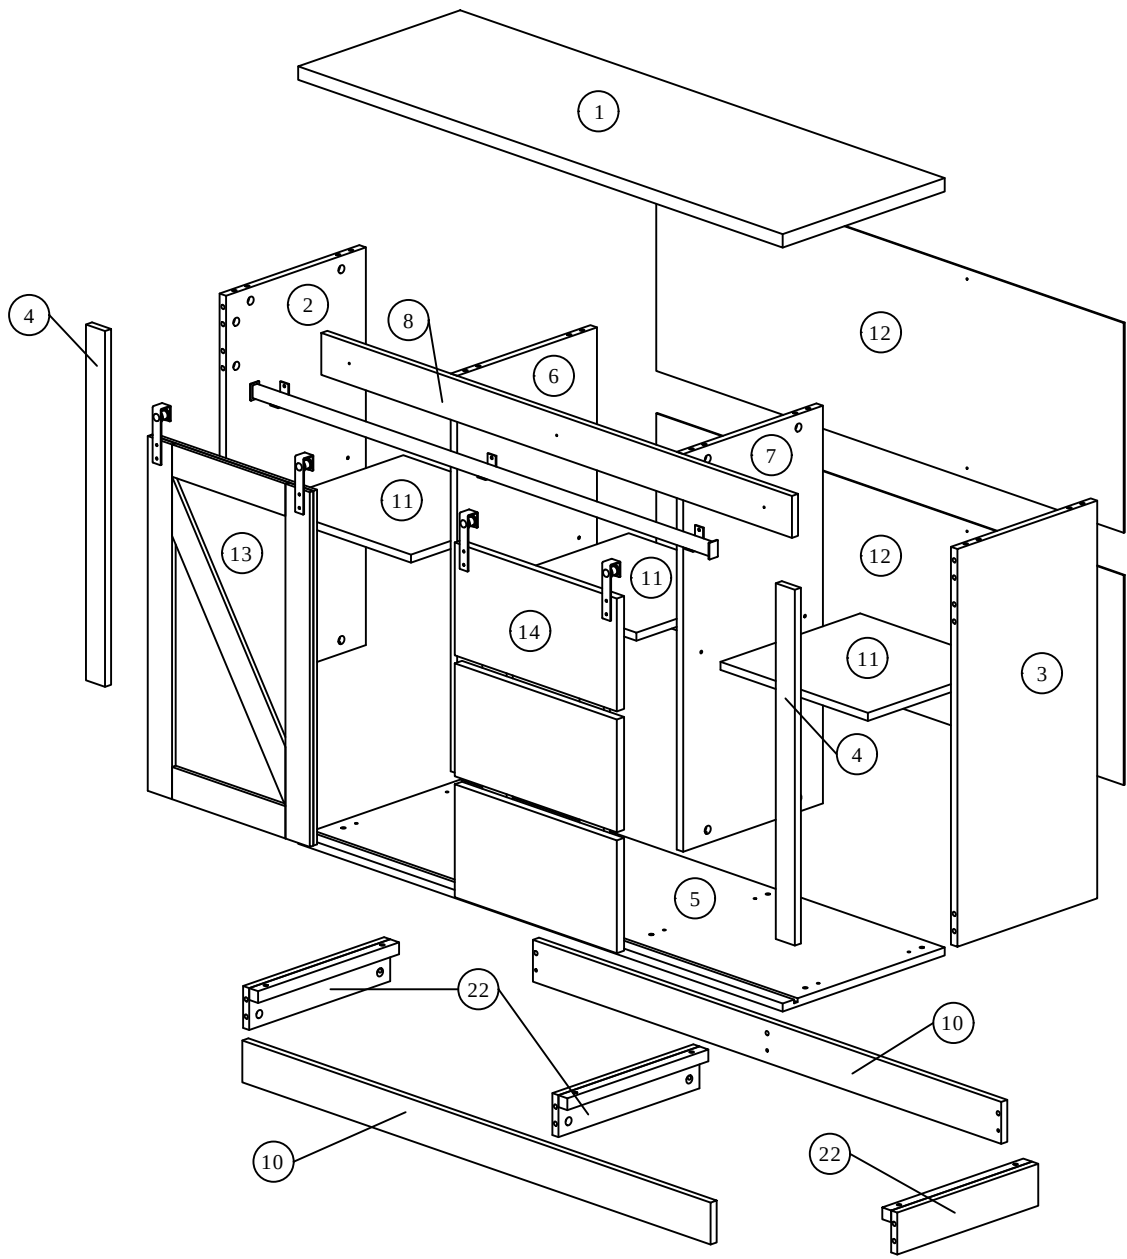

ASSEMBLY STEPS


STEP 1

Insert 8 pieces (A) and 2 pieces (D) to the (2) as shown.

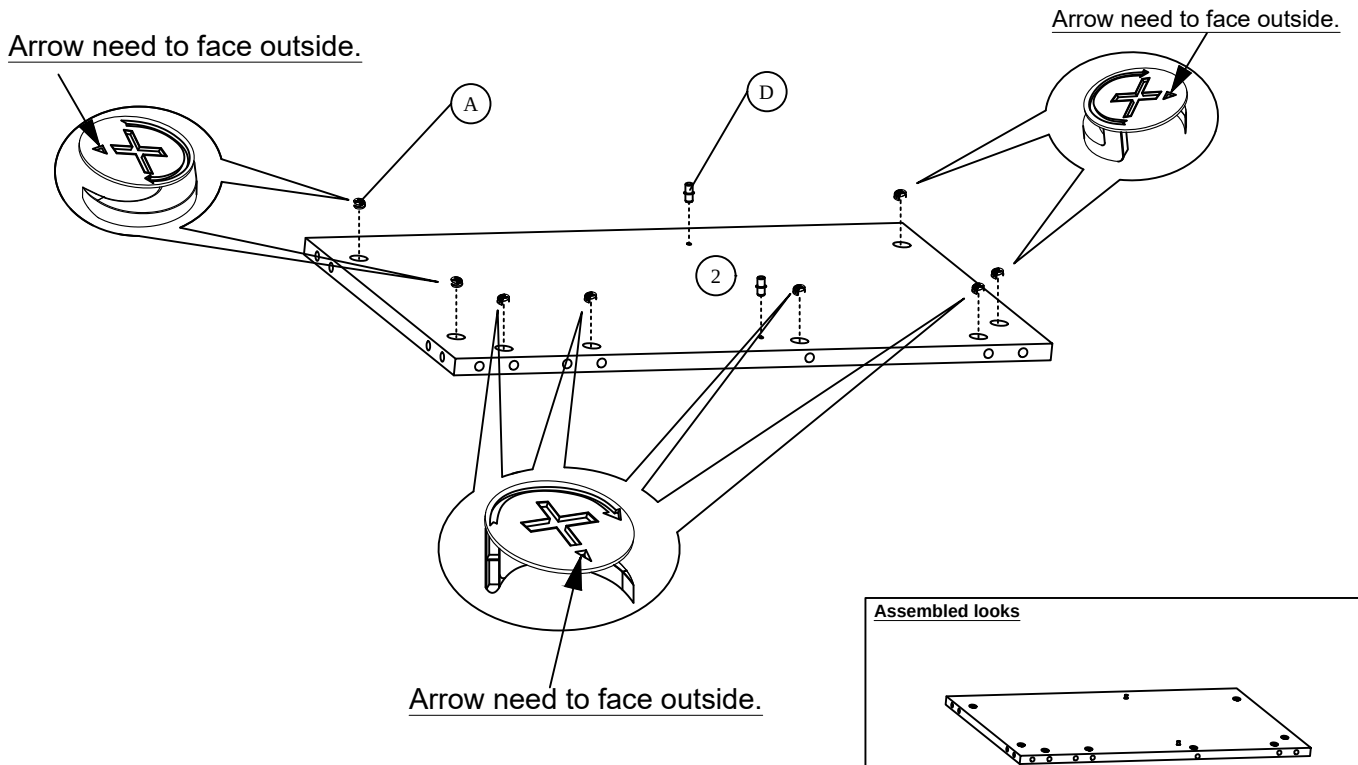


STEP 2

Insert 8 pieces (A) and 2 pieces (D) to the (3) as shown.

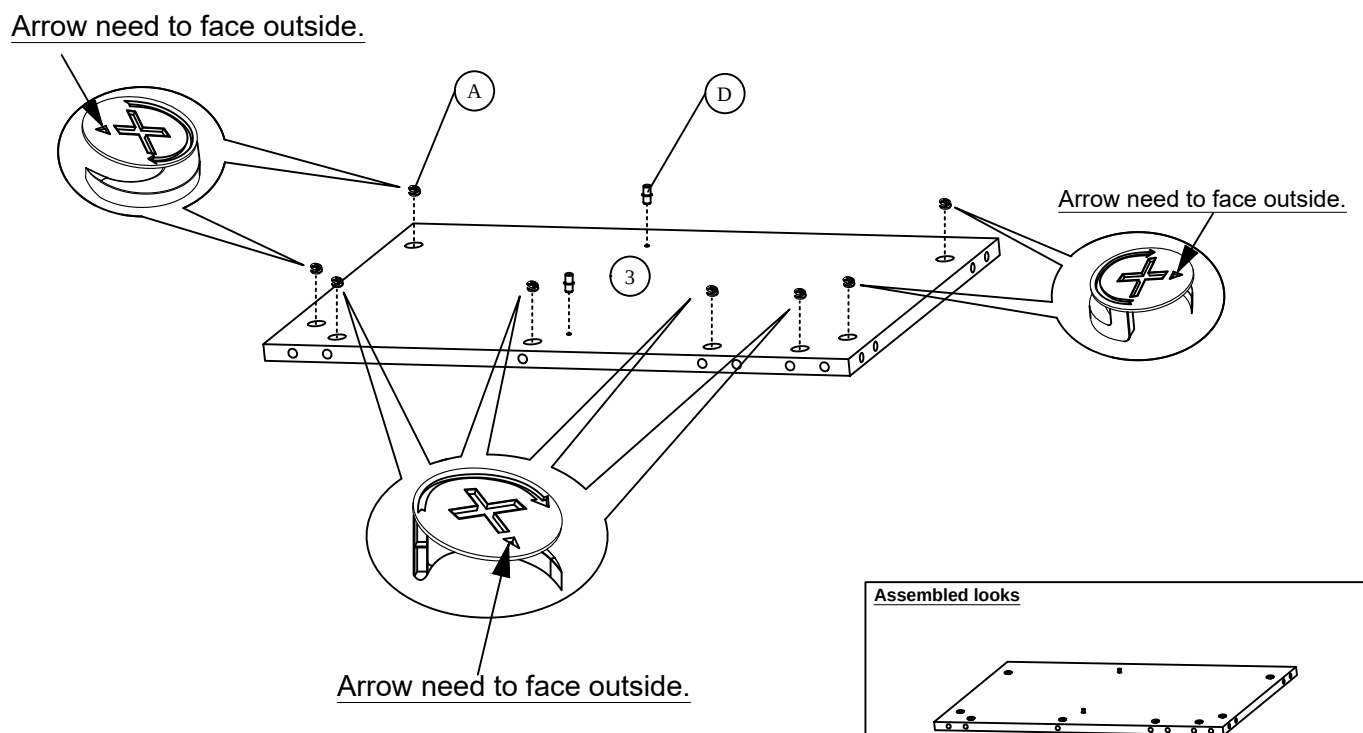


STEP 3

Insert 3 pieces (B), 2 pieces (C) and to the (4) as shown. This step needs to be **done twice**.

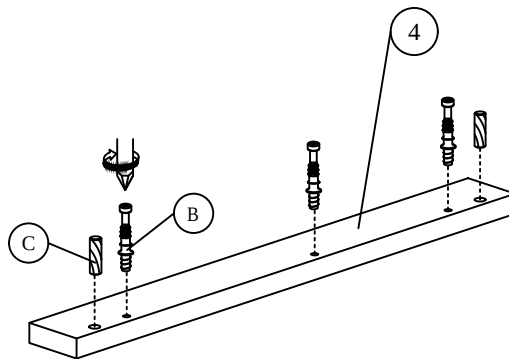


Assembled looks

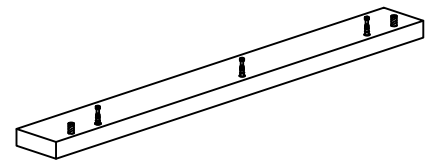


STEP 4

Combine (4) to the (2) then tighten the 3 pieces (A)-(pre insert in step 1) as shown.

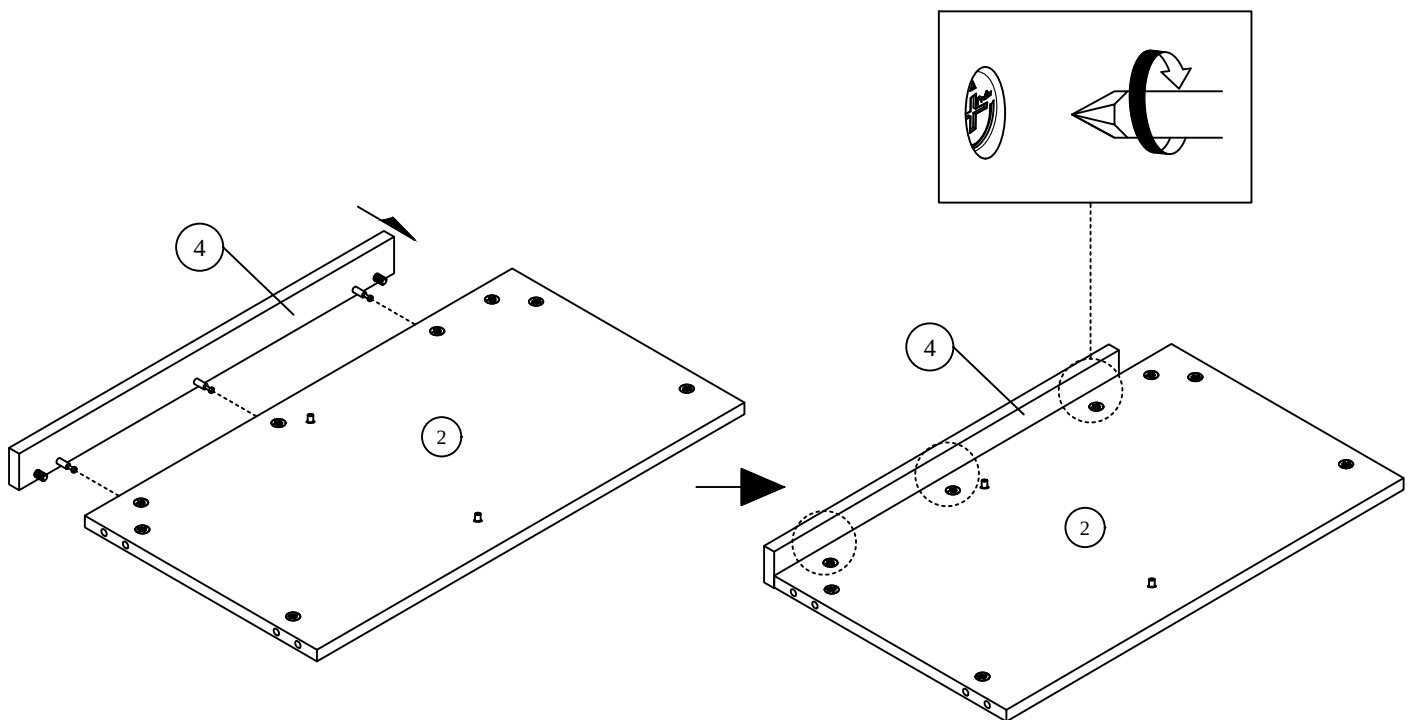

STEP 5


Combine (4) to the (3) then tighten the 3 pieces (A)-(pre insert in step 2) as shown.

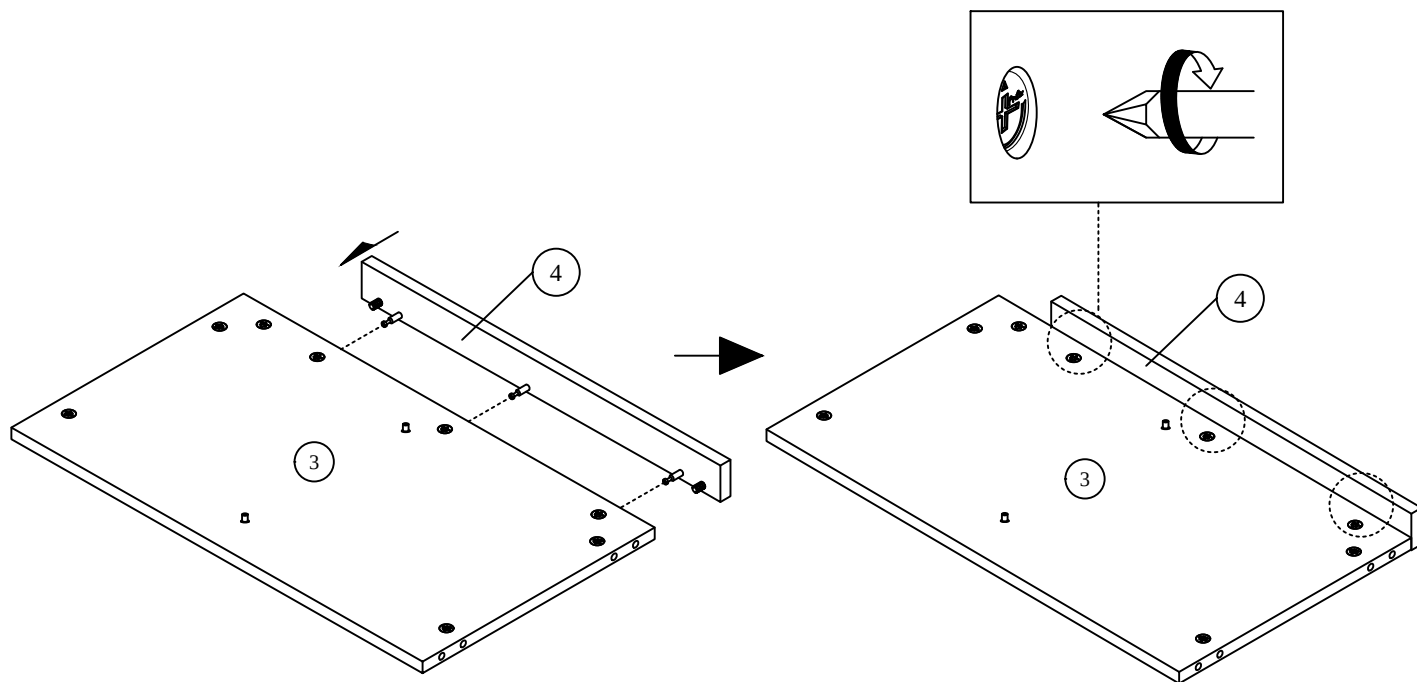


STEP 6

Insert 2 pieces (A) to (22) as shown. This step needs to be **done three times**.


Arrow need to face outside.

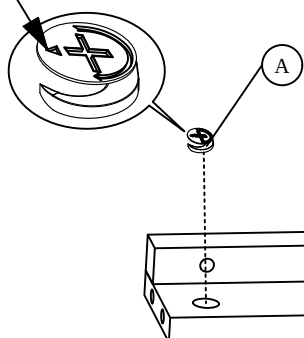

Arrow need to face outside.

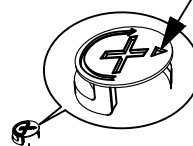


Assembled looks

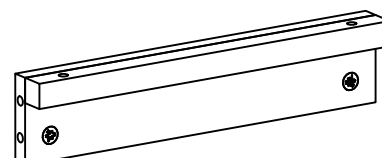


STEP 7

Insert 3 pieces (B) and (C) to the (10) as shown. This step needs to be **done twice**.

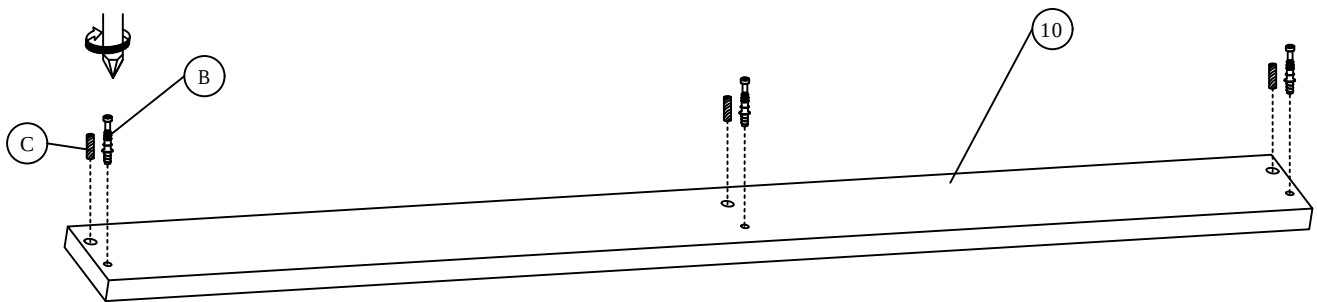


Assembled looks

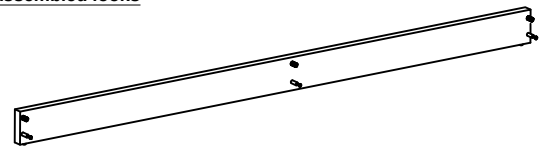


STEP 8

Combine the (22) to the (10) and tighten the 3 pieces (A)-(pre insert in step 6) as shown.

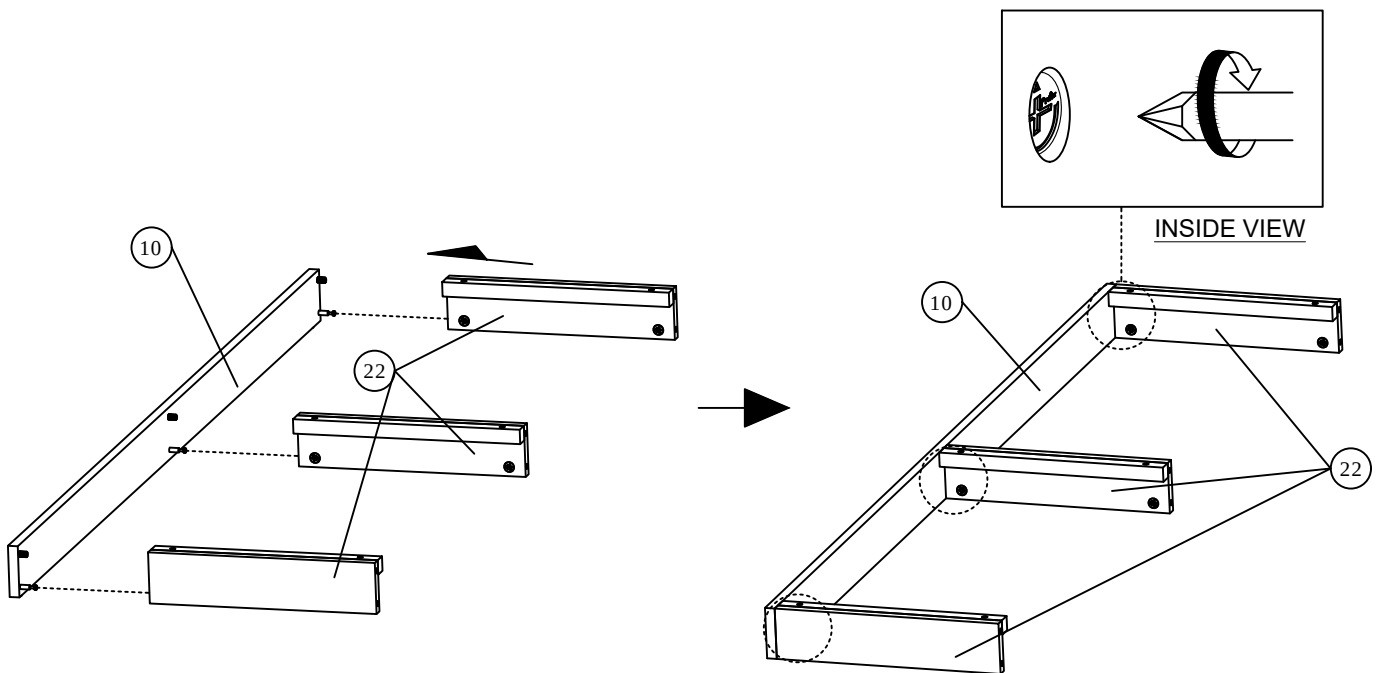


STEP 9

Combine the (10) to the (22) and tighten the 3 pieces (A)-(pre insert in step 6) as shown.

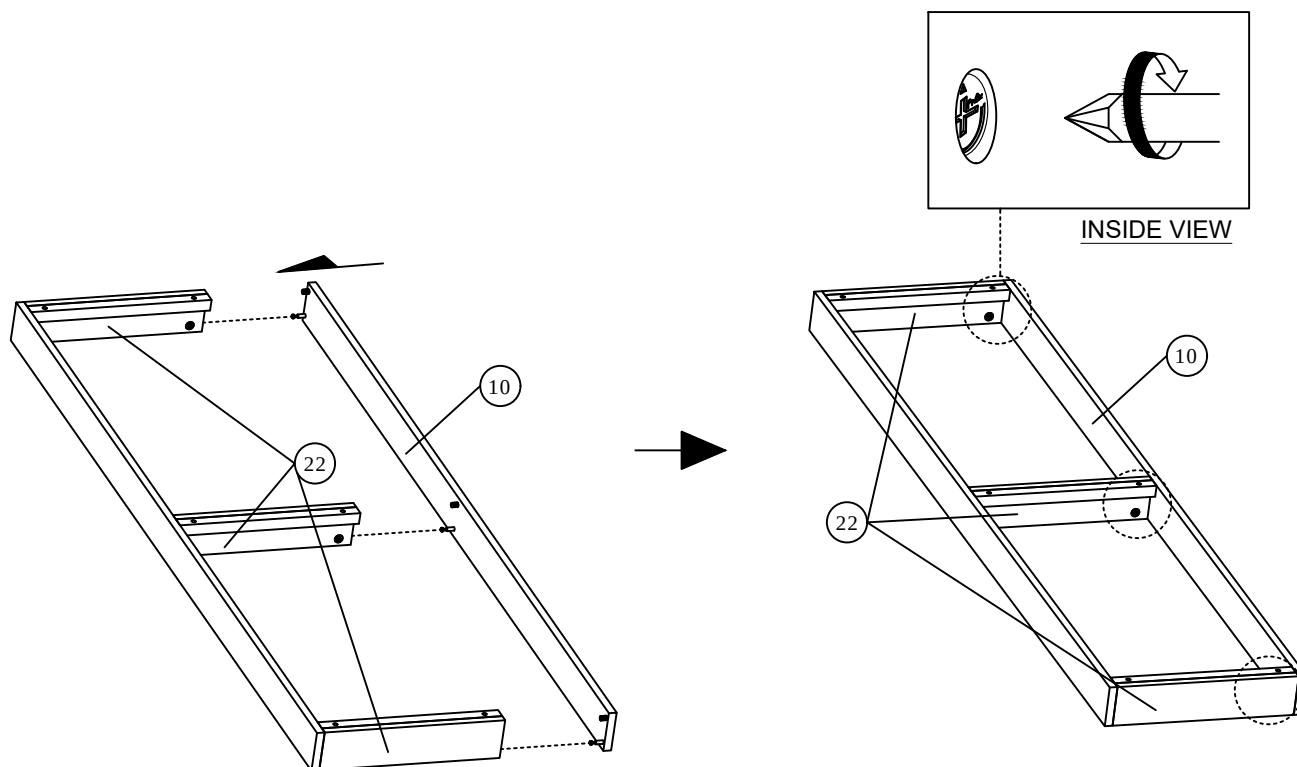


STEP 10

Insert 6 pieces (E),(F) to combine the (22)-(pre combine in step 8,9) to the (5) as shown.

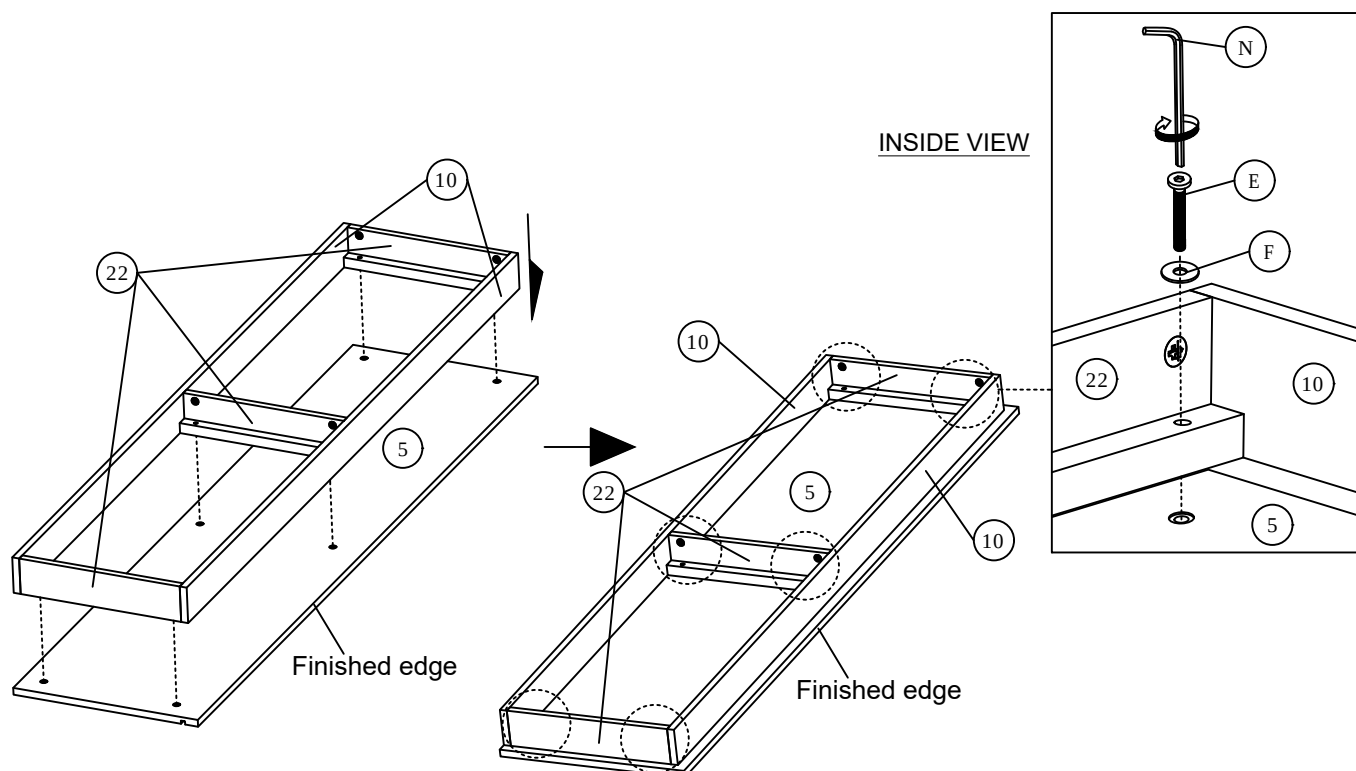


STEP 11

Insert 8 pieces (B) and (C) to the (5)-(pre finished in step 10) as shown.

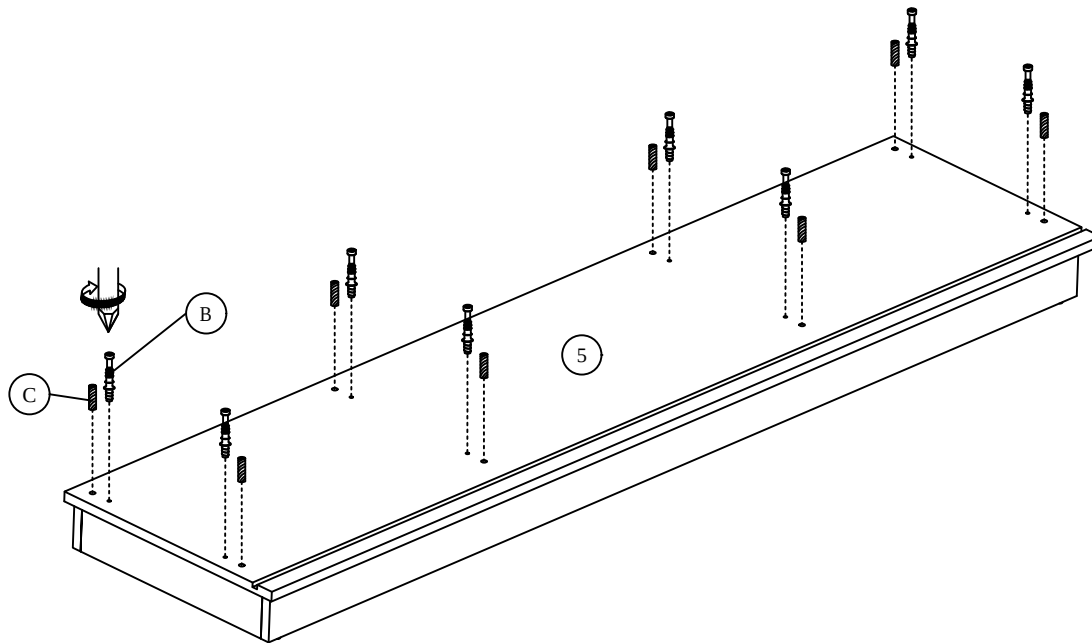


Assembled looks

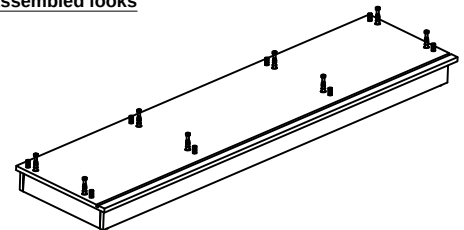


STEP 12

Insert 2 pieces (D) to the right side of (6), then insert 2 pieces (D) and 5 pieces (A) to the left side of (6) as shown.

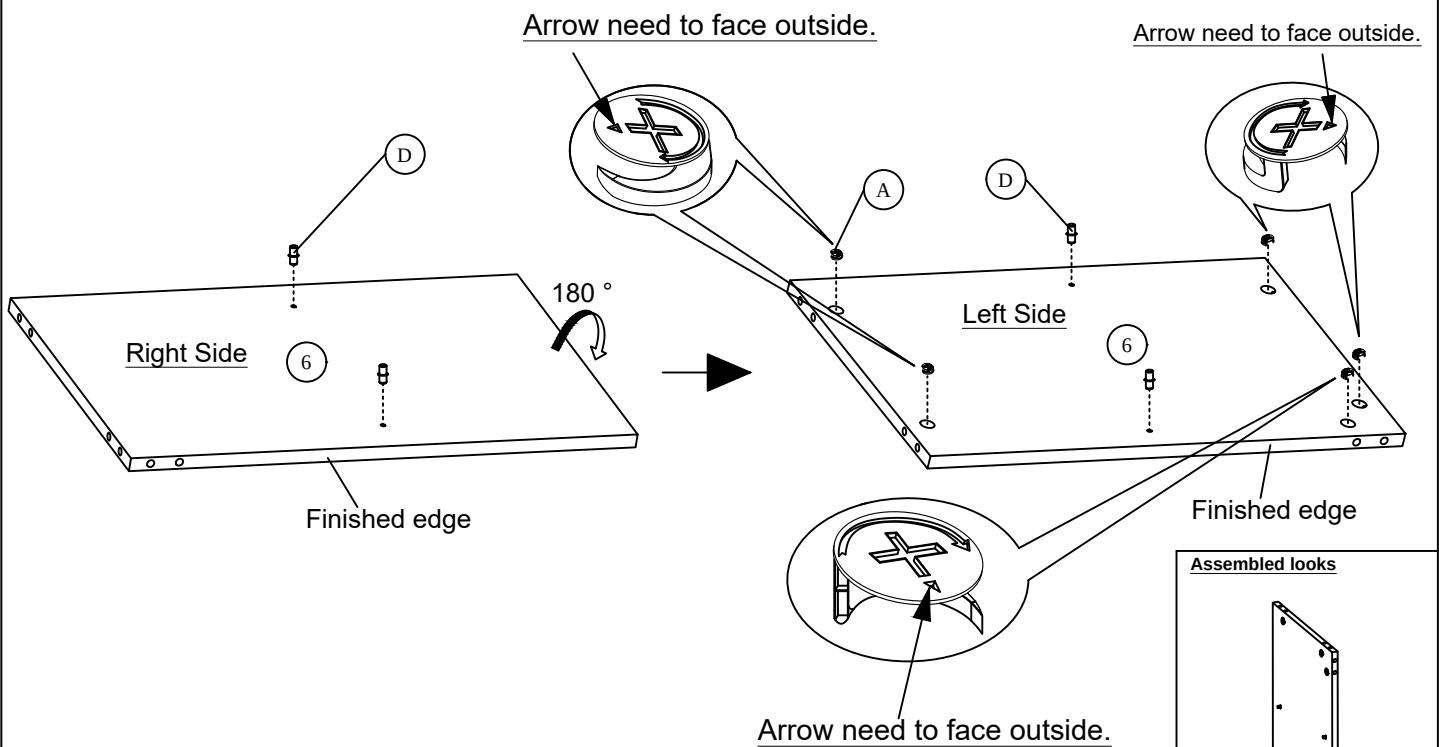


Assembled looks




STEP 13

Insert 2 pieces (D) to the left side of (7), then insert 2 pieces (D) and 5 pieces (A) to the right side of (7) as shown.

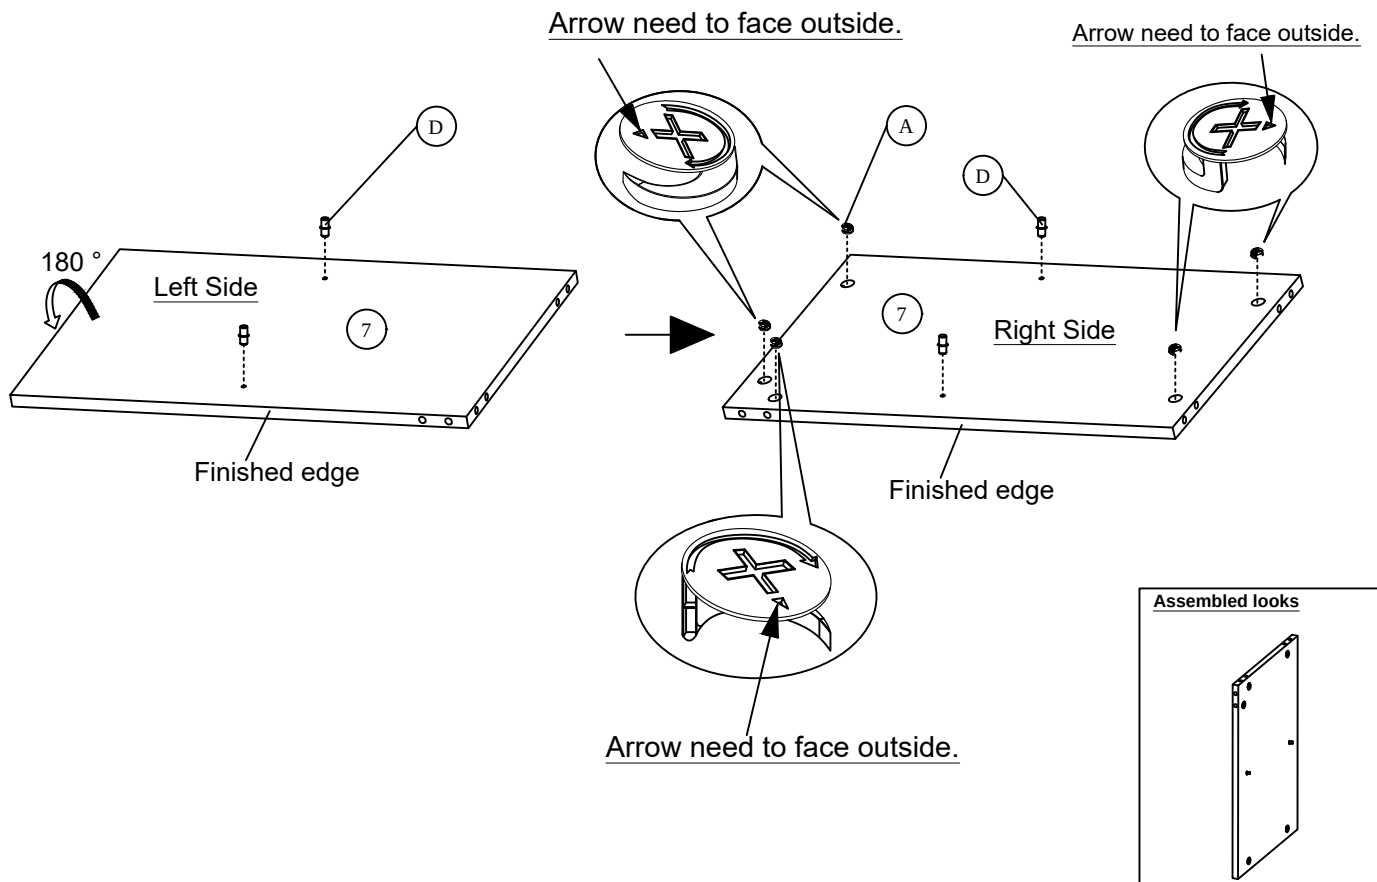


STEP 14

Insert 4 pieces (B) and (C) to the (8) as shown.

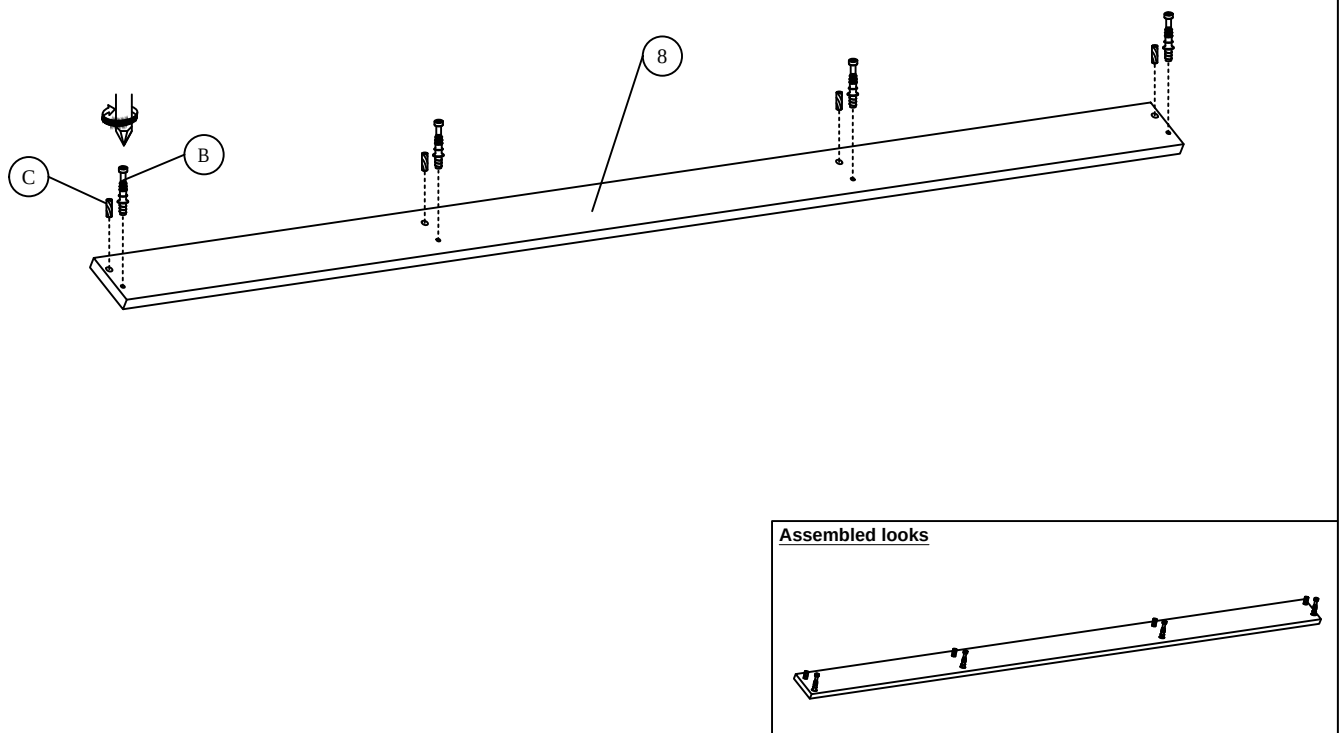


STEP 15

Combine the (2),(3),(6),(7) to the (5) and tighten the 8 pieces (A)-(pre insert in step 1, 2, 12, 13) as shown.

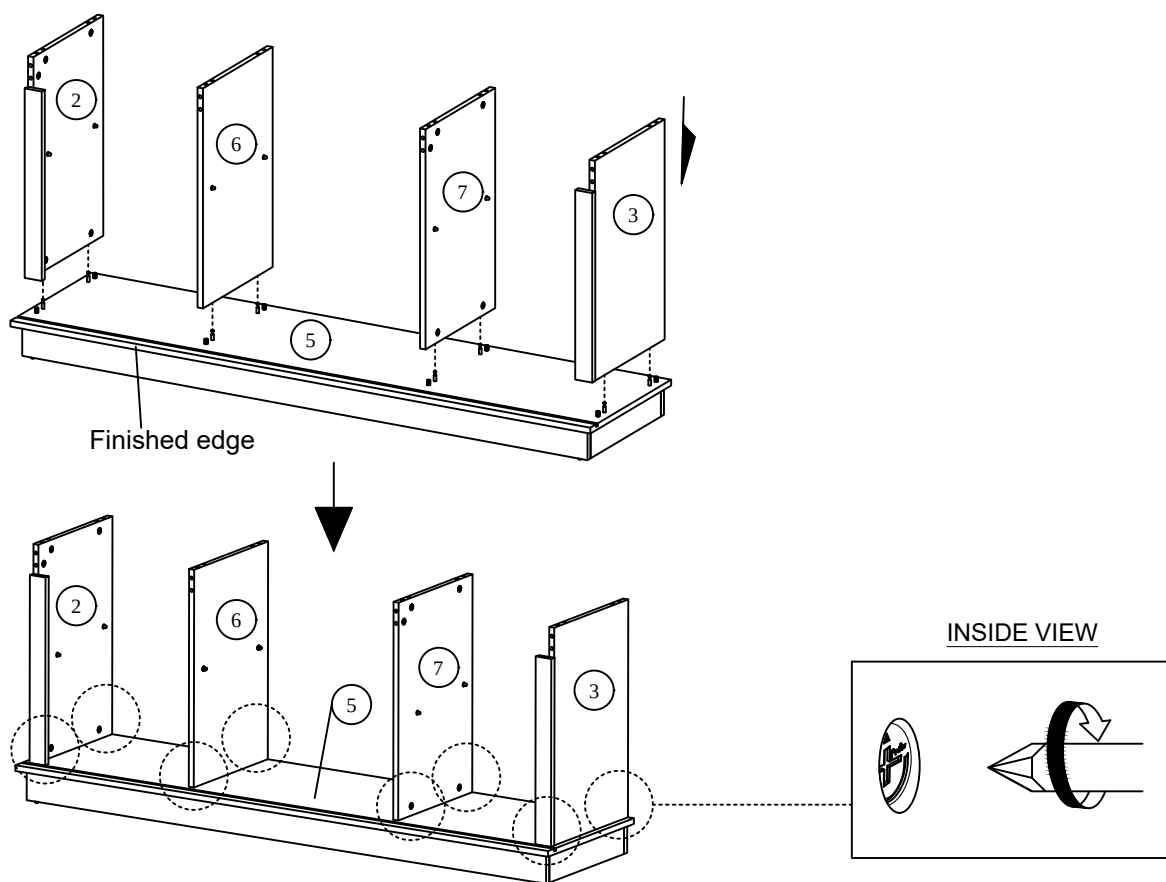


STEP 16

Combine the (8) to the (2),(3),(6),(7) and tighten the 4 pieces (A)-(pre insert in step 1, 2, 12, 13) as shown.

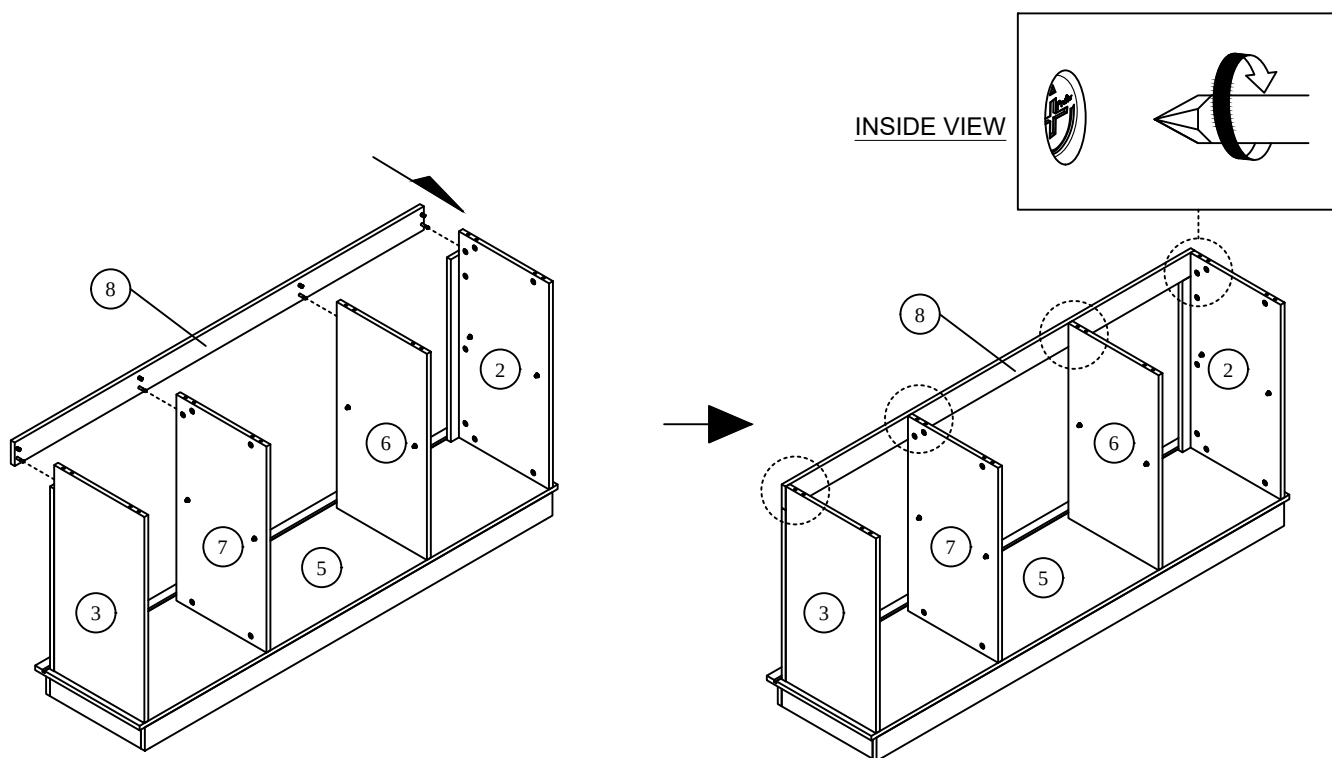


STEP 17

Insert 8 pieces (B) and (C) to the (1) as shown.

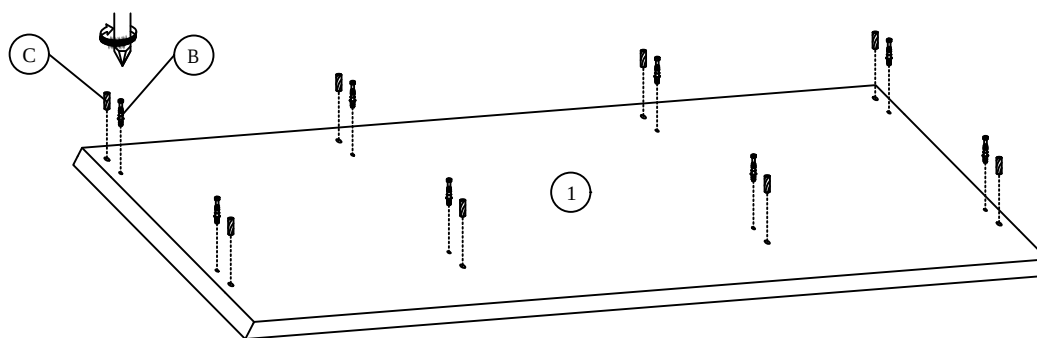


Assembled looks

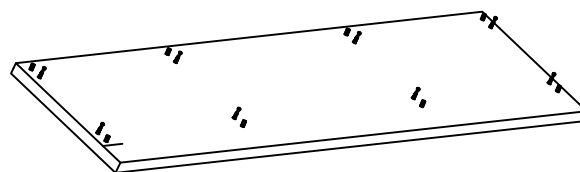


STEP 18

Combine the (1) to the (2),(3),(6),(7) then tighten the remaining 8 pieces (A)-(pre insert in step 1, 2, 12, and 13) as shown.

Finished edge

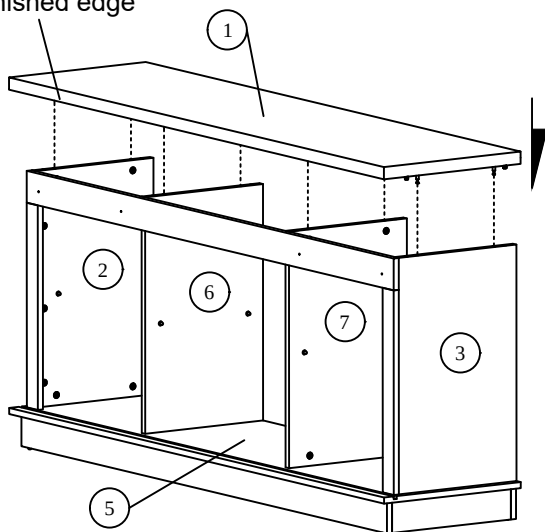


INSIDE VIEW

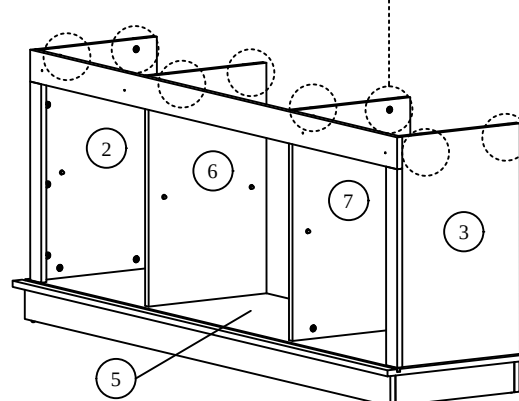

STEP 19

Put the 2 pieces (12) to the gap of (R) as shown. Direction of the side with colored paper must be the same.

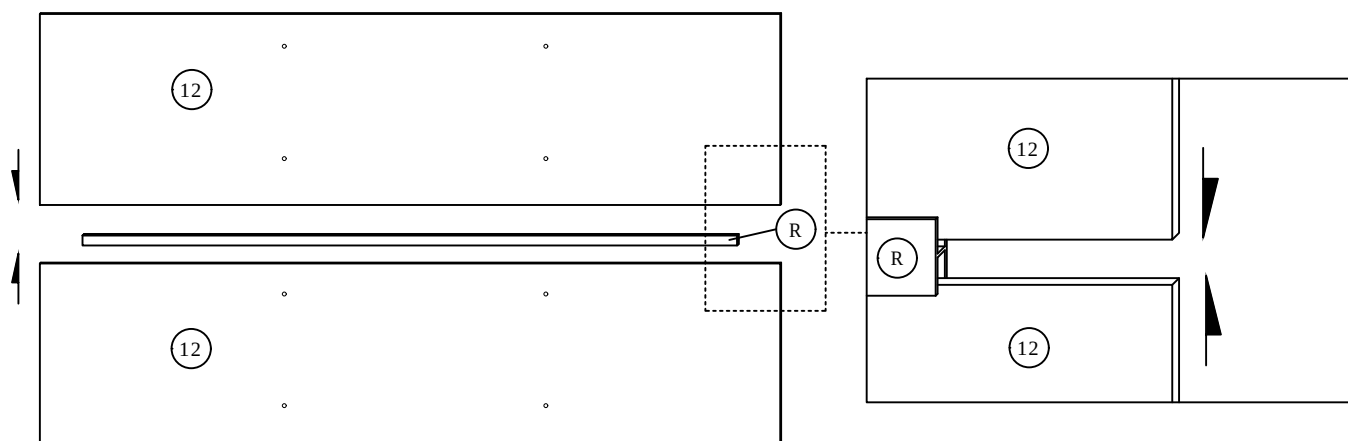


STEP 20

Insert the 30 pieces (L) to fix the 2 piece (12) as shown. Colored paper face to outside.

To prevent blocking (2) and (3), make sure the (R) at the middle of 2 pieces (12), do not over left or right.


Insert 6 pieces (S) to fix 6 pieces (T) to bottom of (22).

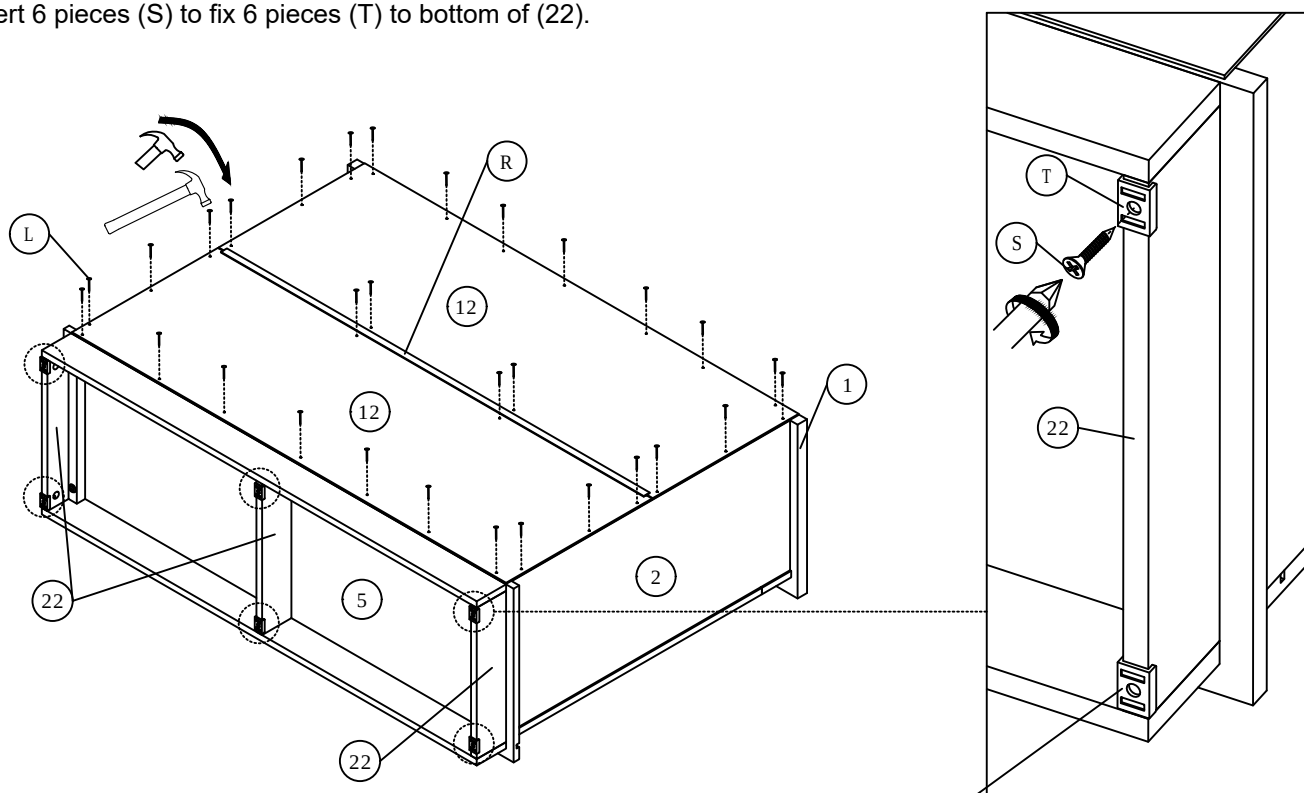

Need to step aside to fix, avoid the hole of (A)


STEP 21

Insert 3 pieces (J) to fix the (M) to the (G).

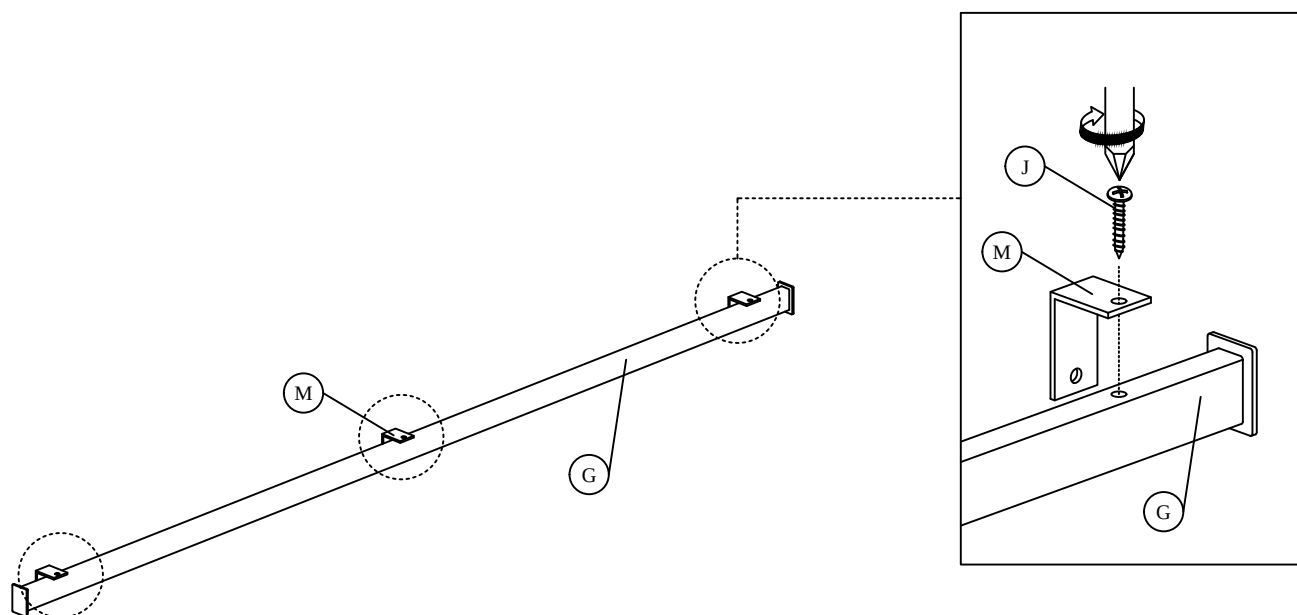


STEP 22

Insert 3 pieces (J) to fix the (G) to the (8).

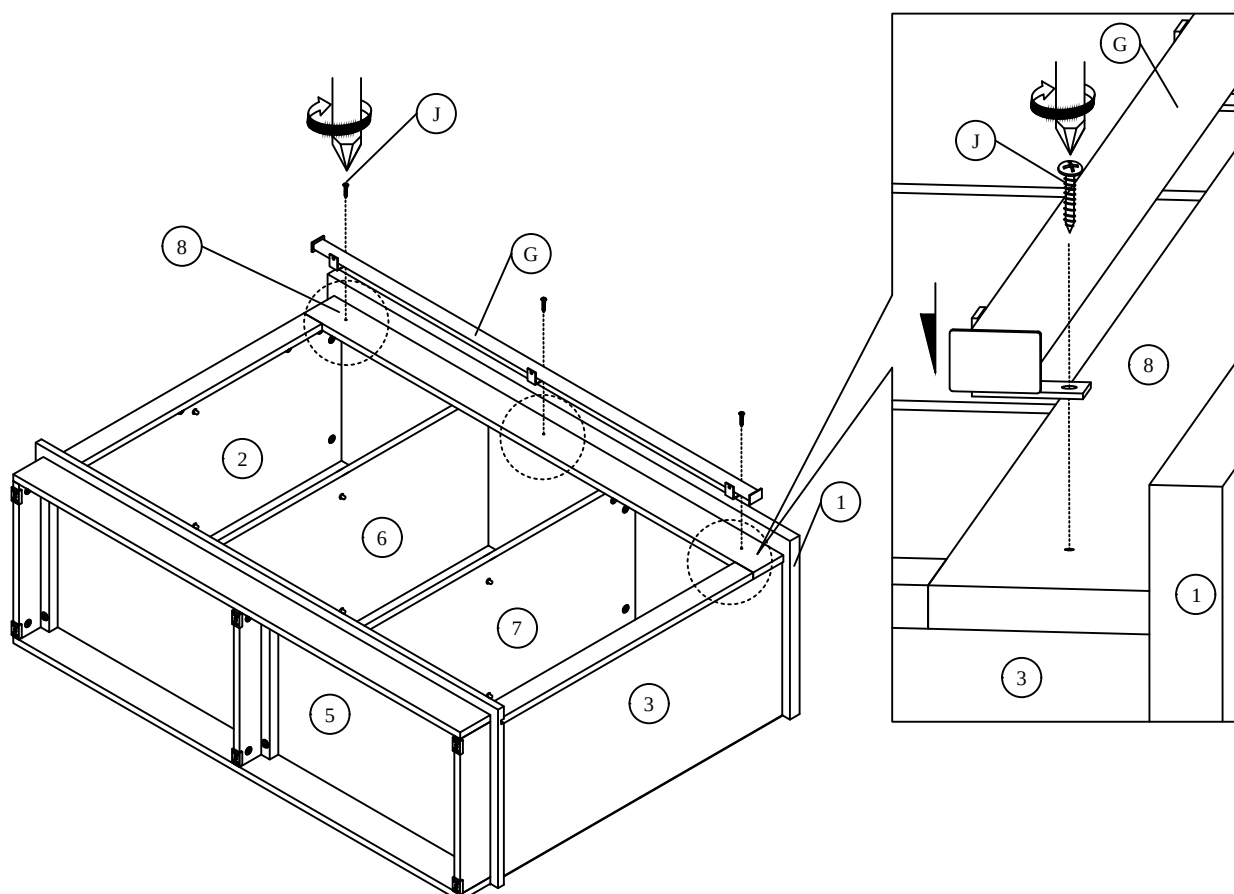


STEP 23

Insert 4 pieces (J) to fix the 2 pieces (I) to the back side of (13). Then insert 4 pieces (J), to fix the 2 pieces (H) to the front side of (13).

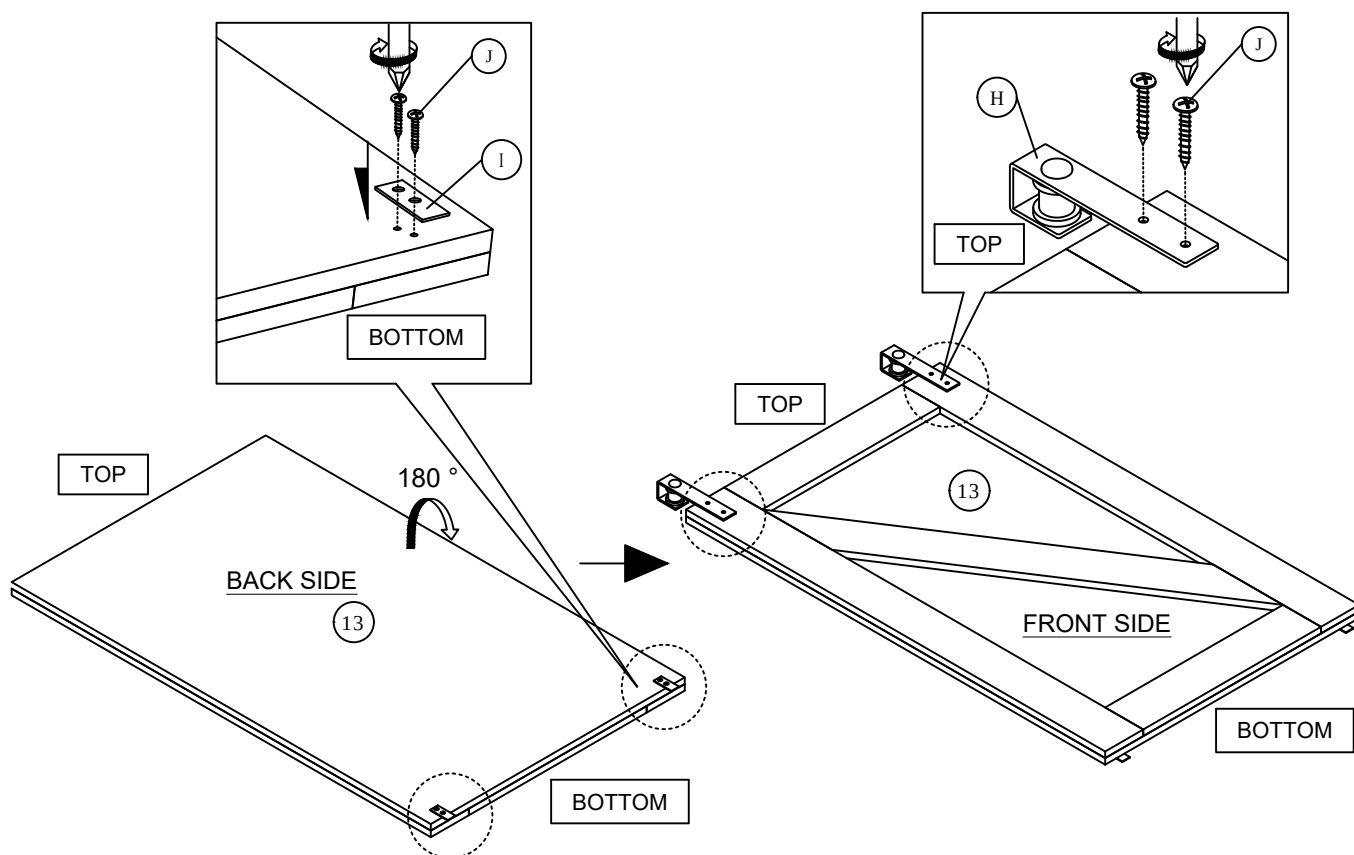


STEP 24

Insert 4 pieces (J) to fix the 2 pieces (I) to the back side of (14). Then insert 4 pieces (J) to fix the 2 pieces (H) to the front side (14).

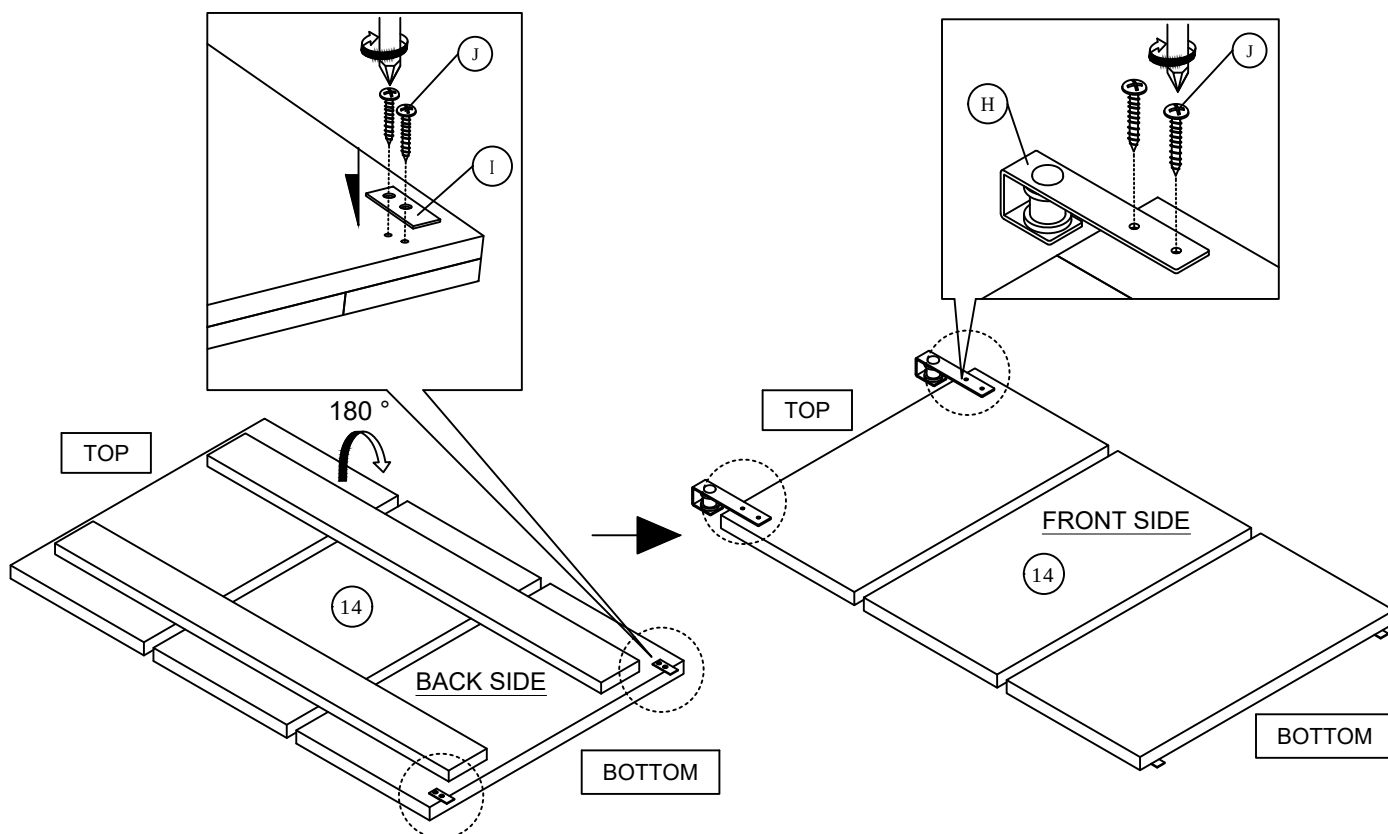


STEP 25

Put the 3 pieces (11) on the (D) which between (2),(3),(6) and (7) as shown.

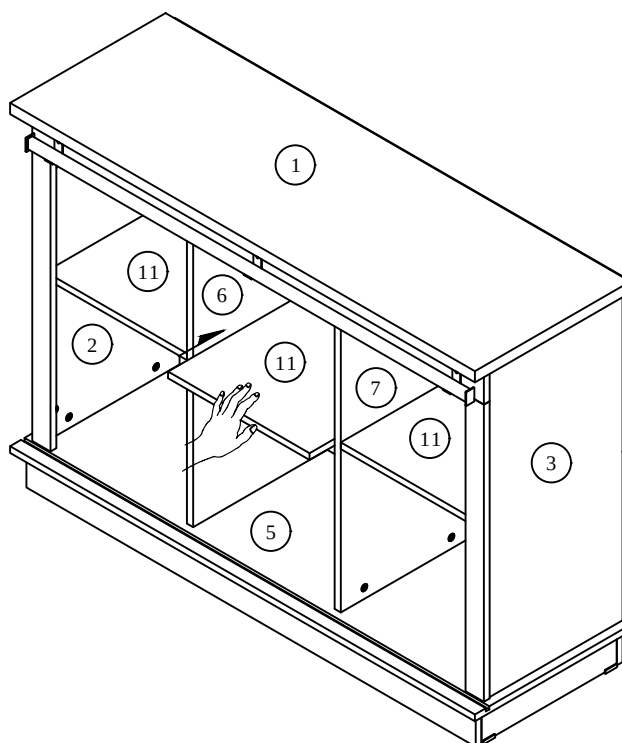


STEP 26

Put the (13) and (14) on the (G) , and align the position that put the (I) to inside groove of (5) as shown.

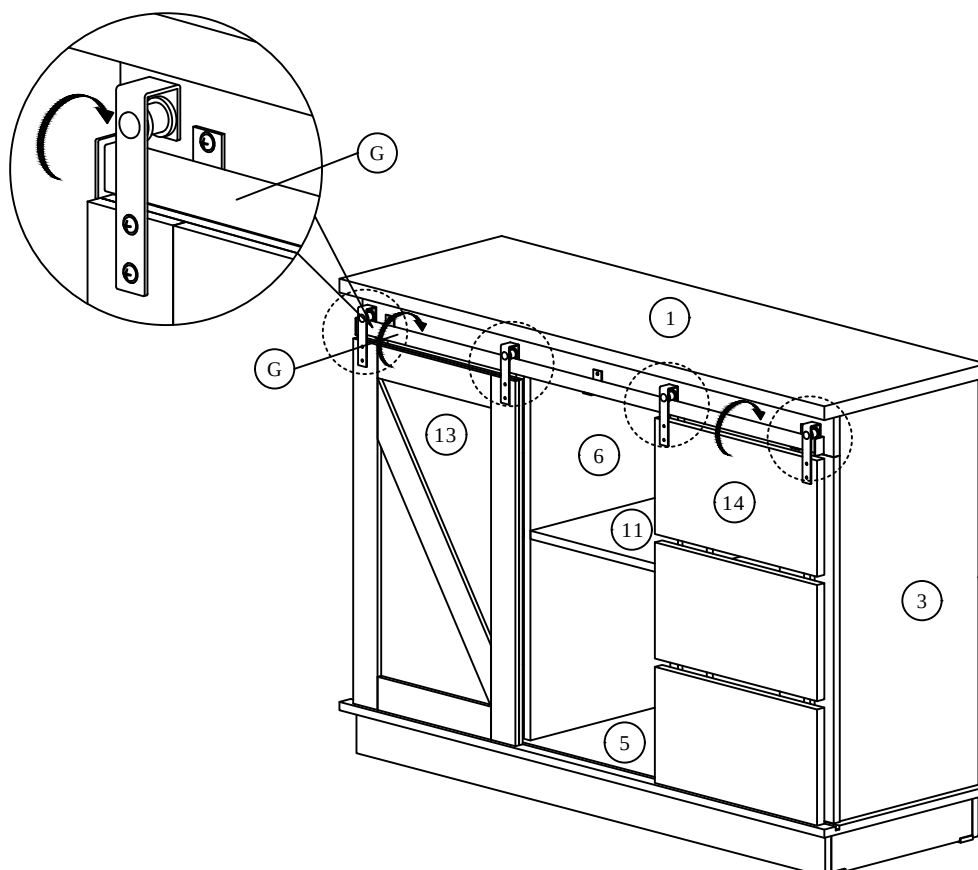

STEP 27

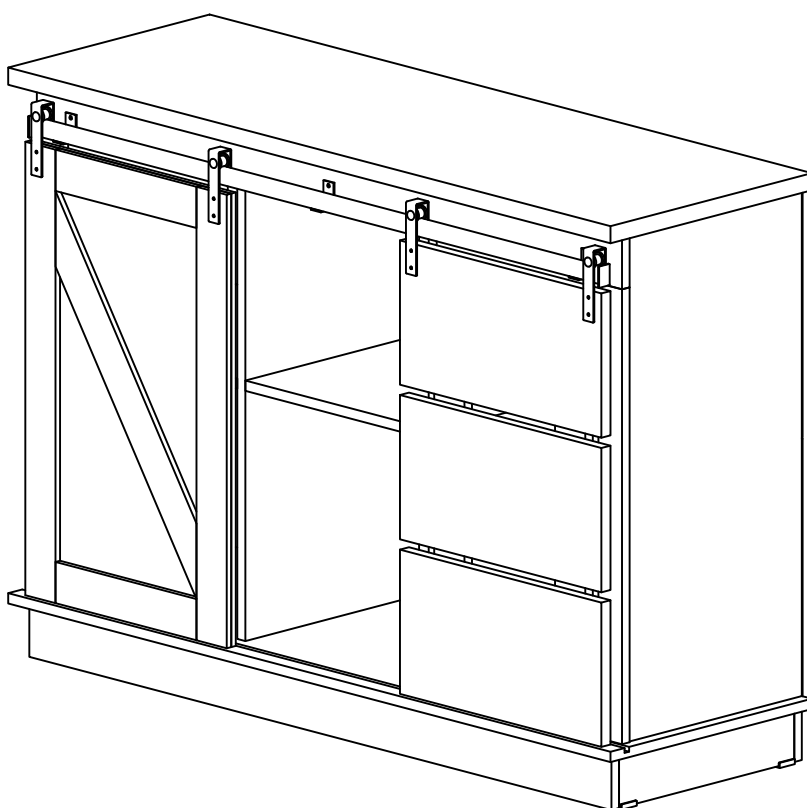

ASSEMBLY COMPLETED

WALL STUD

SAFETY BRACKET INSTRUCTIONS


Part Enclosed :

A) Bracket


B) Safety Strap

C) 50mm Pan Head Screw


D) 17mm Pan Head Screw

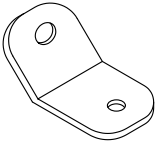


2x

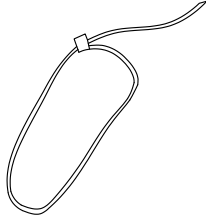

1x



1x




1x

IMPORTANT: Tipping can injure young children. Use of this safety hardware is highly recommended. This safety hardware, when properly installed, can provide furniture protection against unexpected accidental tipping of furniture due to improper use.

Step 1

Attach a bracket to the wall board with the 2" screw provided:


- It is recommended that you locate a wall stud behind the furniture unit. If the wall stud is not used, a suitable "Hollow-Wall Anchor Bolt" (not provided) should be used in lieu of the wall stud.
- Position the wall bracket on the stud about 1" below the top of furniture piece.
- Mark the position for the bracket placement on the wall and drill a pilot hole into the stud.
- Attach the bracket to the back of the furniture with the 2" screws provided.

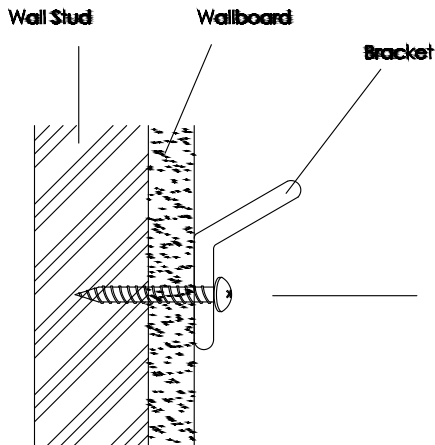

Step 2

To attach a bracket to the Furniture Frame below to top with the short screws provided :


- Move the furniture piece temporarily to its final position to the wall.
- Mark the location of the bracket on the back of the furniture in relation to the previously mounted wall bracket.
- Move the furniture piece away from the wall mounted bracket and place the other bracket on the mark position on the back of the furniture piece.
- Drill a pilot hole as shown in the figure or into the back furniture frame.
- Caution: Mark sure you do not drill completely through the back of the furniture.
- Attach the bracket to the back of the furniture with the 5/8" screws provided.

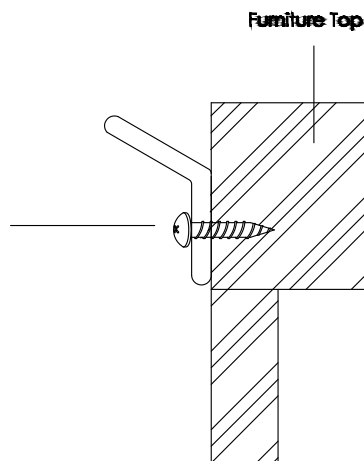

Step 3

To Attach the safety strap:

- Move the furniture back to its final position.
- Thread the safety strap through both of the mounted brackets as shown in the illustration.
- Tighten the strap unit snug.
- Do not over tighten.

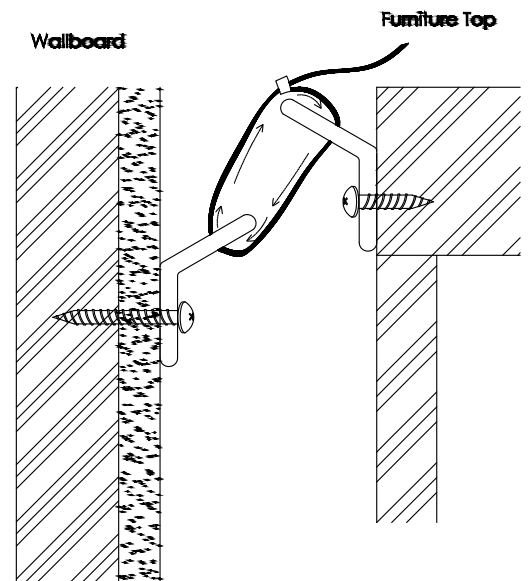

IMPORTANT: Make sure the brackets are firmly attached to the wall stud and furniture frame and the safety strap is snug.

Warning: This product is not be a substitute for proper parental supervision which is the only proper deterrent to prevent improper use of this unit. The manufacturer assumes no liability for improper installation or excessive loads placed on the safety straps, bracket or mounting screws. This hardware will not insure against tipping.

Note: For taller or heavier pieces of furniture, two safety brackets may be installed.