
MANUAL INSTRUCTIONS

7 BOXES

COURTYARD STORAGR&HOUSING

Single-slope Wall-mounted Metal Sheet Sunroom
12*16 FT

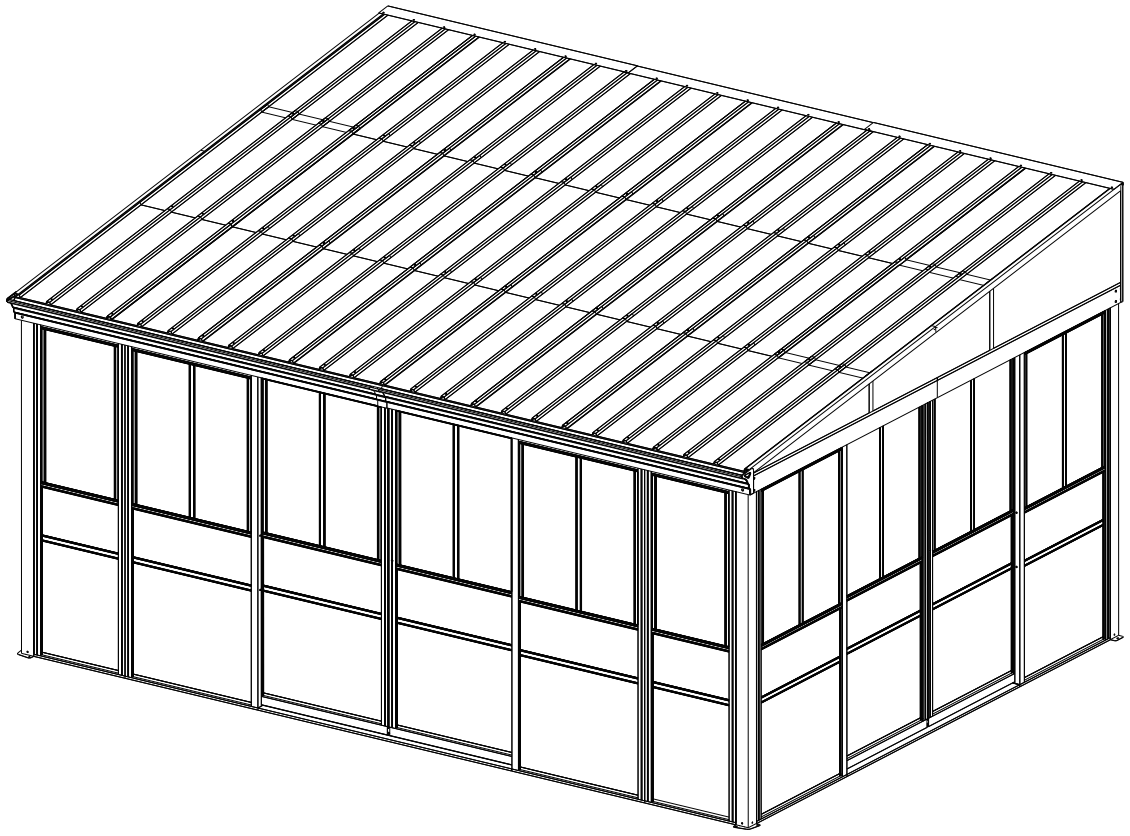

CONTACT US:24H,Mon~Sun.

service@kmcgloble-us.com

(USA) +1 213-816-4788

CUSTOMER SUPPORT

Dear customer
Thank you for your purchase.

This product is a non-permanent outdoor structure designed and manufactured for personal use rather than commercial use.
Please confirm whether the installation is permitted in your states firstly.

1. When you receive the product, please make sure that all the boxes have arrived,and all the parts are intact.
2. Please browse the entire installation manual before assembling, retain this instruction manual for future reference.
3. If any problem occurs unsatisfactorily as follows:
   - Lack of boxes, or some boxes are not arrived.
   - The outer box is damaged.
   - The product is damaged / bent / cracked while you open the box.
   - The parts / accessories / assembly tools are missing.
   - The product is hard to assemble.
   - The instructions are not clear, or hoping for assistance with installation.
   - The product has functional problems.
   - The product did not meet your expectations.
   - Other aspects that you are not satisfied with.

Please feel free to contact us for help firstly. If there is any damage, please send us clear photos. We will check and do our best to provide the best solution for you. The missing or damaged parts will be delivered to you within 5 days.

DO NOT RETURN YOUR UNIT TO THE STORE
CONTACT US FIRST

service@kmcgloble-us.com
(USA) +1 213-816-4788

ATTETION

PREPARATION:

The gazebo needs to be installed in cooperation with **five people**.

Estimated Assembly Time: **12 Hours**

Site preparation suggestion: Level the ground surface,construct a wooden or concrete base as a foundation.

The following installation tools will be used.



Adjustable Ladder



Tape Measure



Screw Driver



Pistol Drill



gradienter



Hammer




gloves




5 people

Minimum foundation size:

- Lawn Leveling

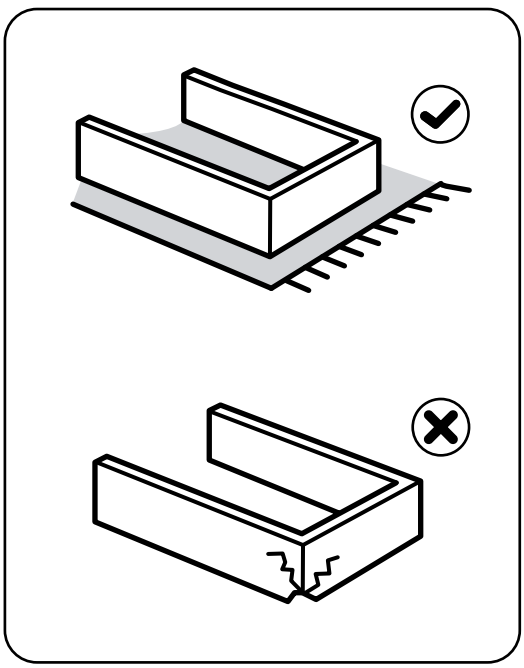

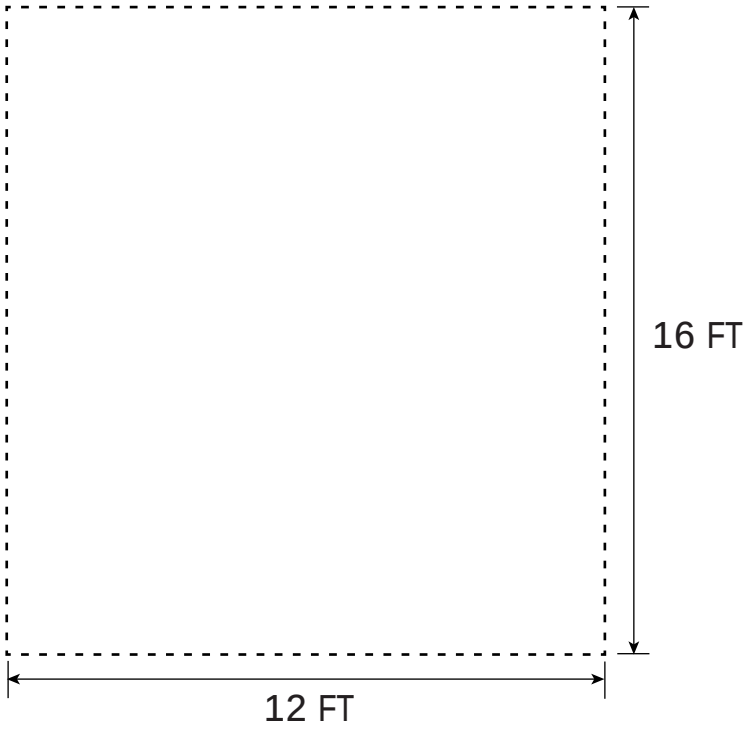

ATTETION

CAUTION:

1. Tighten each boit firmly and properly.
2. Some parts may contain sharp edges. Wear protective gloves in the box as necessary.
3. Children under the age of 16 should not be engaged in the assembly, removal or disassembly of the product.
4. It is strongly recommended to hire a professional installation team.

WARNING:

1. Children under the age of 10 should be supervised by a competent adult while using this furniture.
2. Please keep children out of the assembly area during assembly.
3. Never use this product as a support. Do not shake, lean, or climb on the product any time.
4. Please take appropriate measures to deal with the bad weather. Heavy rain, wind and snow may be damage the Storage Shed. If necessary please dis-assemble and store for later use.
5. In snowy weather, please ensure that the thickness of snow on the roof does not exceed 4 inches, If it does, please remove the snow as soon as possible to ensure safety.
6. When the wind force reaches scale 8, please take corresponding measures to reinforce the Storage Shed to prevent it from being damaged by the wind, and be cautious of safety issues during strong wind conditions.
7. We offer a one-year warranty, excluding damages caused by improper installation, incorrect usage, failure to use the fixing accessories, unclean snow, or failure to take preventive measures.
8. It is necessary to use anchor bolts, expansion bolts and ropes to fix the gazebo to the foundation for Long-term stability.You can fix the foundation firmly in the inner corners of the STORAGR Cabinet using expansion bolts(need to be purchased by yourself).


CHECKLIST

BOX 1 OF 7


G30073-03A-J3

If any accessories are missing or damaged, please contact us immediately.


service@kmcgloble-us.com




A1 X 1




A1-1 X 1




A2 X 1




A2-1 X 1



A4 X 1



A4-1 X 1




E3 X 2

⚠Inside the part “A2”




E4 X 2

⚠Inside the part “A2”



G3 X 2

⚠Inside the part “A2”



G4 X 2

⚠Inside the part “A2”




L2 X 3


M4 X 1



M5 X 1




M3 X 2



1A X 3

⚠Inside the part “A1”



2A X 3

⚠Inside the part “A1”




1F X 3

⚠Inside the part “A1-1”




1Q X 2

⚠Inside the part “A2-1”




1H X 2

⚠Inside the part “A2”



1K X 2



5K X 2



1J X 1



1N X 3

⚠Inside the part “A1&A1-1”



Y X 92


CHECKLIST

BOX 2 OF 7


G30073-03B-J3

If any accessories are missing or damaged, please contact us immediately.


service@kmcgloble-us.com



B11 X 1




B11-1 X 1




B9 X 1



B12 X 1



B12-1 X 1



B13 X 2



B13-1 X 2



C5 X 4



C6 X 4



F3 X 1



F3-1 X 1


F4 X 2




6G X 4



1H X 4



P X 1



P1 X 5




M6

6 X 12




ST4.8x12

7 X 14




M4x20

8 X 136



M4x35

9 X 92



M4x50

10 X 56



M6x15

11 X 261



M6x28

12 X 92



M6

13 X 92

CHECKLIST

BOX 2 OF 7

G30073-03B-J3

If any accessories are missing or damaged, please contact us immediately.

service@kmcgloble-us.com



M6x35

14 X 18



15 X 26



M5x6

16 X 104



M5

17 X 48



M5x12

18 X 48



M6

19 X 92



21 X 10




4mm

22 X 2



2.5mm

23 X 2



25 X 1


CHECKLIST

BOX 3 OF 7

G30073-03C-J3

If any accessories are missing or damaged, please contact us immediately.

service@kmcgloble-us.com



I1 X 2



1B X 5



2B X 5



3B X 3



4B X 3

1D X 3

2D X 3



1C X 3



2C X 3



1M X 6




1R X 28



2R X 24



4R X 4



P2 X 4


CHECKLIST

BOX 4 OF 7


G30073-03D-J3

If any accessories are missing or damaged, please contact us immediately.

service@kmcgloble-us.com



B9-1 X 1



B10 X 1



B10-1 X 1



1E X 28



2G X 24



1K X 4



1J X 2



1L X 24



5L X 4




1P X 6



5P X 2



J X 2




J1 X 2



K X 1



Q1 X 1




Q1-1 X 1




Q2 X 24




Q3 X 2



Q5 X 3




Q5-1 X 3




Q6 X 2



Q6-1 X 2



N1 X 1



N2 X 1


CHECKLIST

BOX 4 OF 7

G30073-03D-J3

If any accessories are missing or damaged, please contact us immediately.


service@kmcgloble-us.com




D1 X 56



D2 X 112




D3 X 28



D4 X 12



D5 X 12



Waterproof tape

H X 1



Z X 4



6.2*11*20

2 X 14



6.2*11*15

3 X 14



4 X 12




5 X 2



Rubber Gasket

20 X 92



24 X 1

CHECKLIST

BOX 5 OF 7


G30073-03E-J3

If any accessories are missing or damaged, please contact us immediately.


service@kmcgloble-us.com




1G X 12




T1 X 24




T2 X 12



T3 X 6



T4 X 6



2S X 12



4S X 2


CHECKLIST

BOX 6 OF 7


G30073-03F-J3

If any accessories are missing or damaged, please contact us immediately.


service@kmcgloble-us.com




R1 X 12




M4 X 1




M4-1 X 1




M5 X 1



M5-1 X 1



M6 X 1



M6-1 X 1


CHECKLIST

BOX 7 OF 7


G30073-03G-J3

If any accessories are missing or damaged, please contact us immediately.


service@kmcgloble-us.com




R1 X 6




R2 X 6



T5 X 2





T6 X 2




T7 X 2


Remove the plastic packing blocks from both ends of profiles 1E, 1G, 2G, 6G, 1L, 5L and 1H.

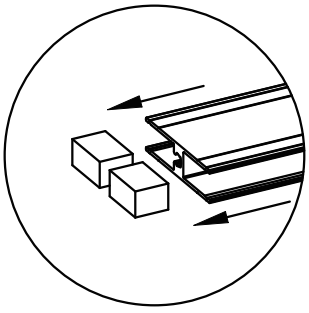

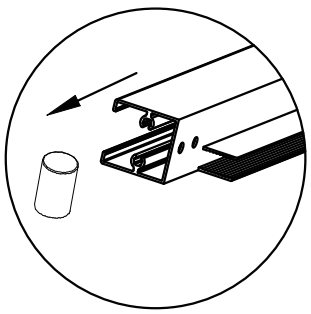

<1>

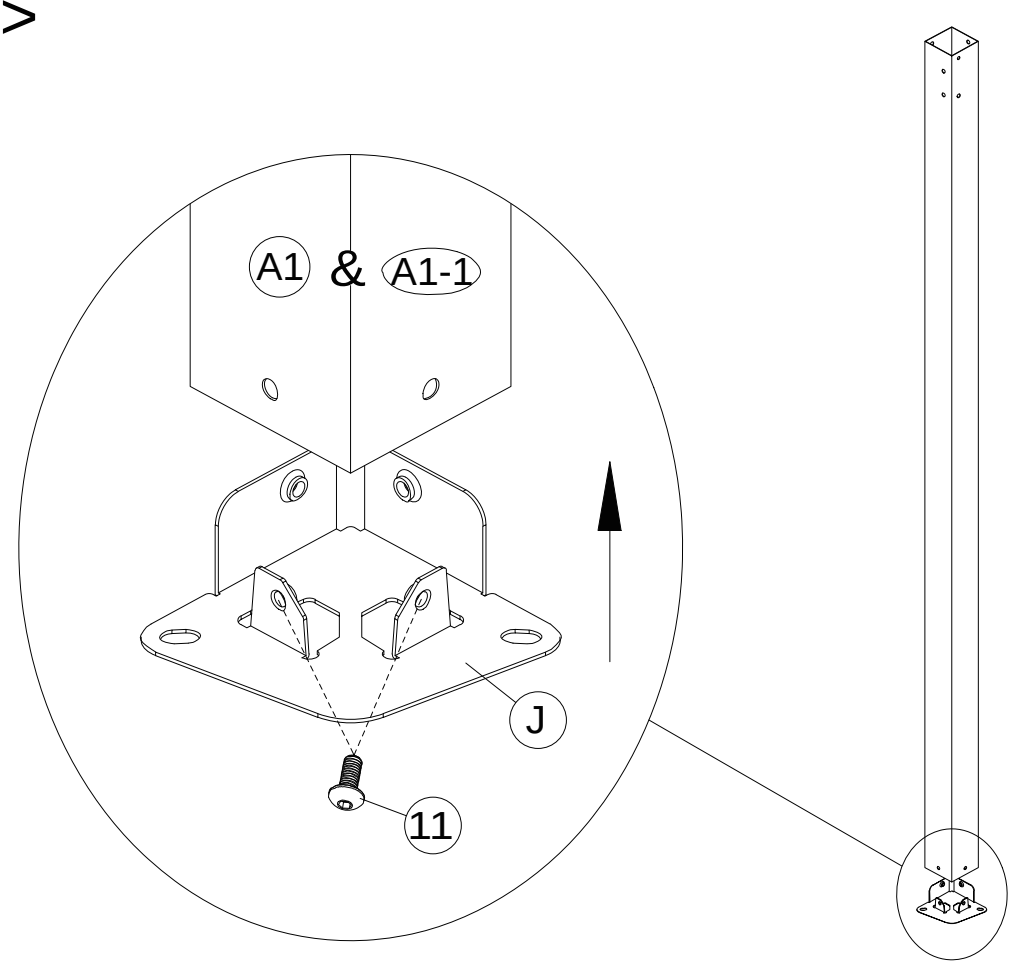

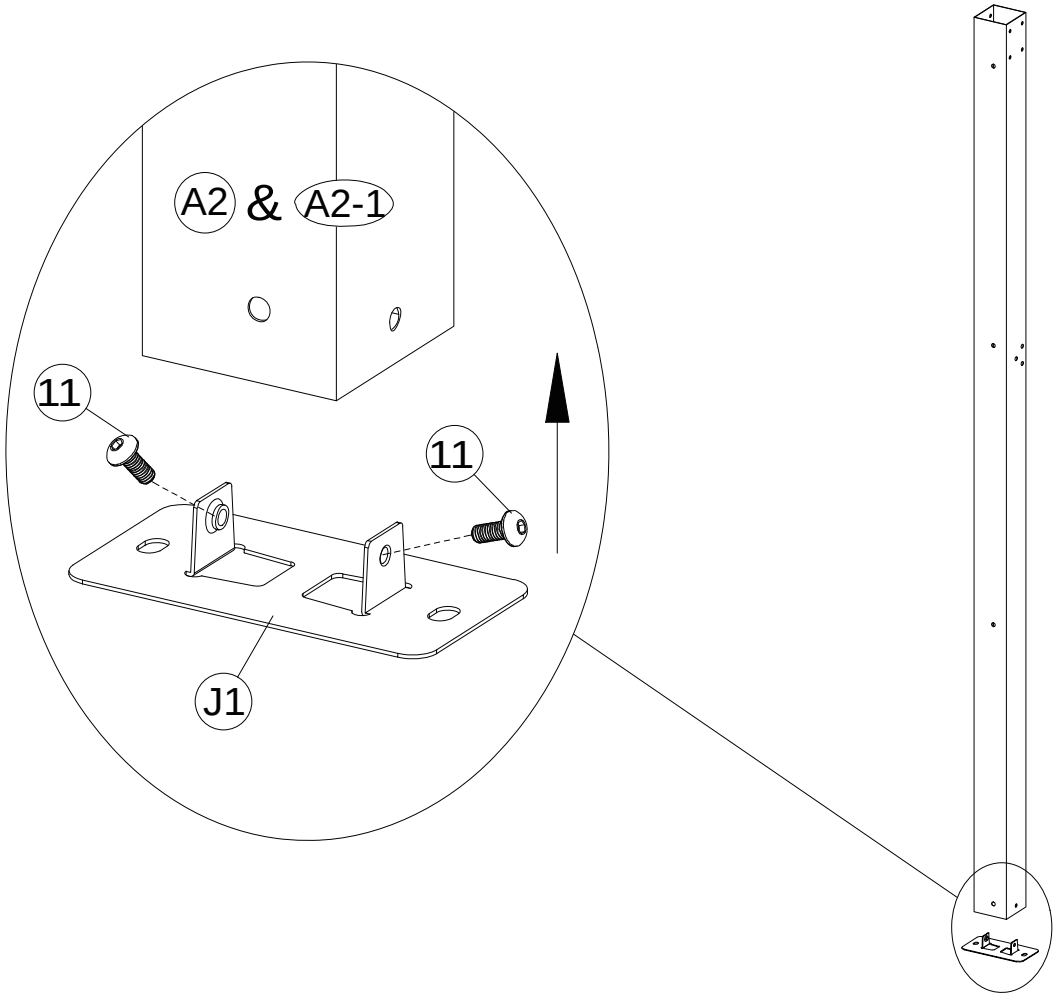

A1 1x

A1-1 1x

A2 1x

A2-1 1x

J 2x


J1 2x

M6x15


11 8x



A4 1x



A4-1 1x

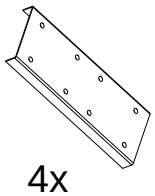

P2 4x




M6x15

11 24x




A2




A2-1


15

Pay attention to the placement of A2 and A4 column holes

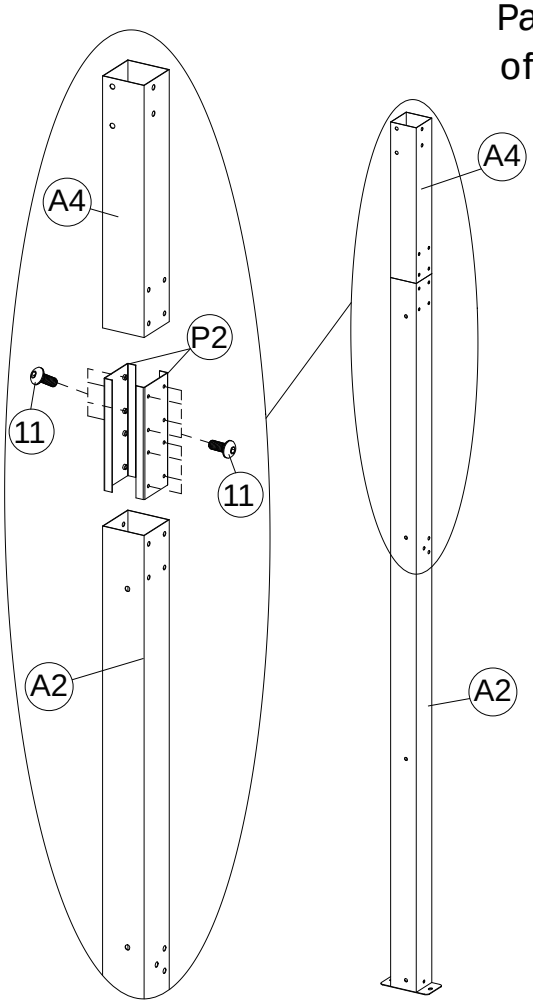


Pay attention to the placement of A2-1 and A4-1 column holes

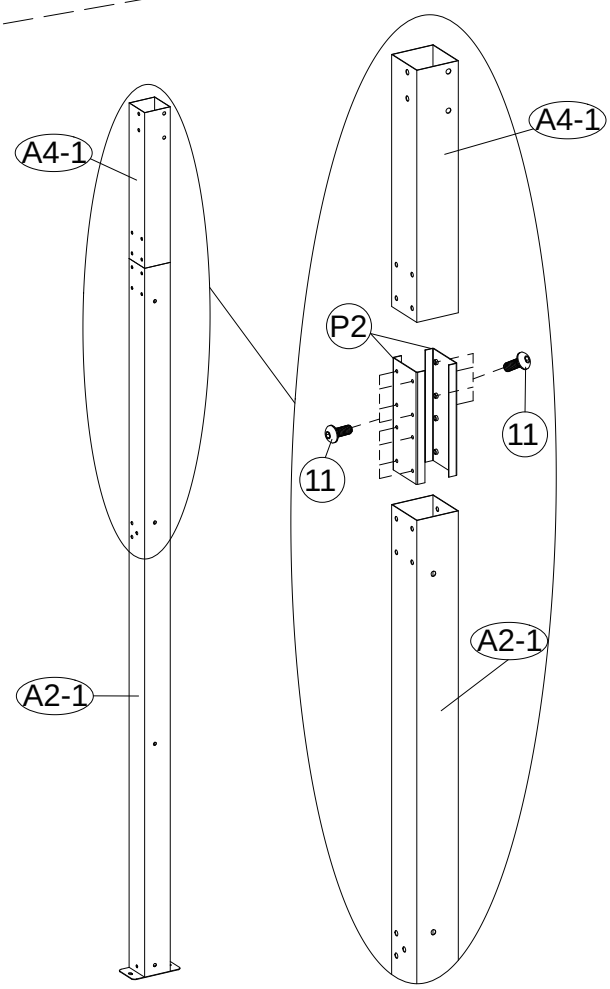


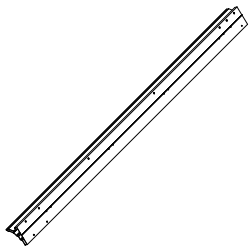


B11 1x

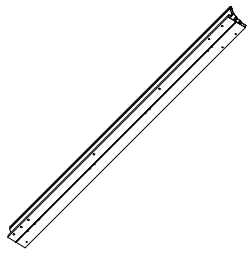


B11-1 1x

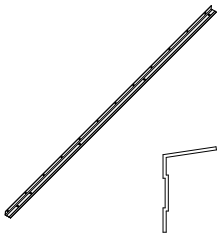

C5 1x

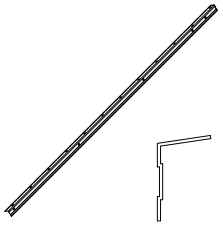

C6 1x




P 1x




M6x15


11 14x

<3>

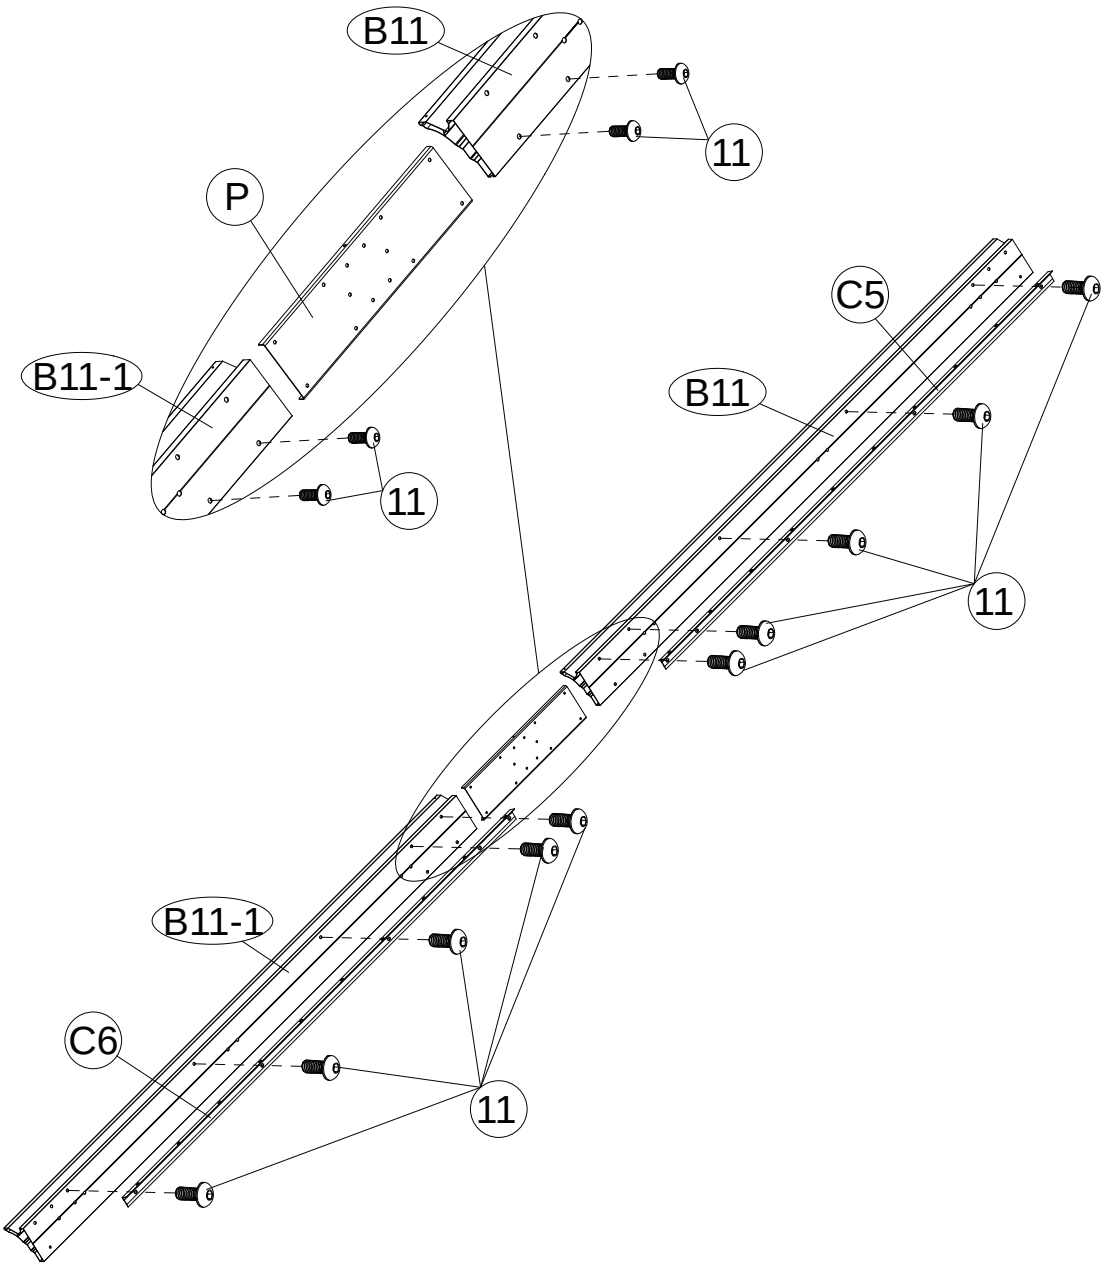

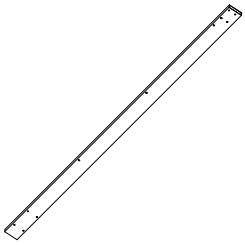


B12 1x

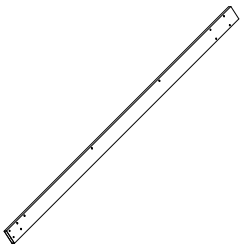


B12-1 1x



B13 2x

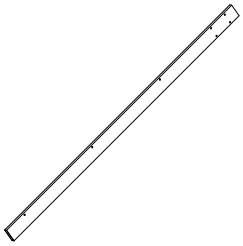

B13-1 2x



P1 3x




M6x15

11 48x


17




C5 3x

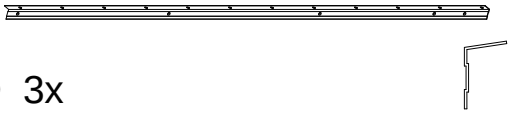


C6 3x

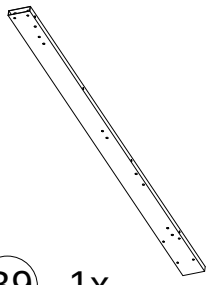


B9 1x

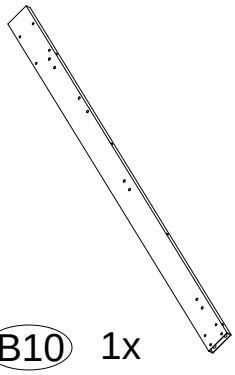


B10 1x

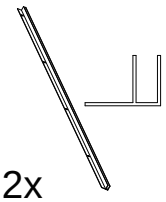

E3 2x

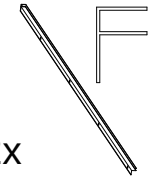


E4 2x



Q6 2x



Q6-1 2x




P1 2x




M6x15


11 44x



B9-1 1x




B10-1 1x

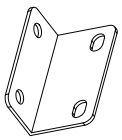

Q2 2x

M6x15

11 10x




6.2*11*15


3 2x




M6x35

14 2x

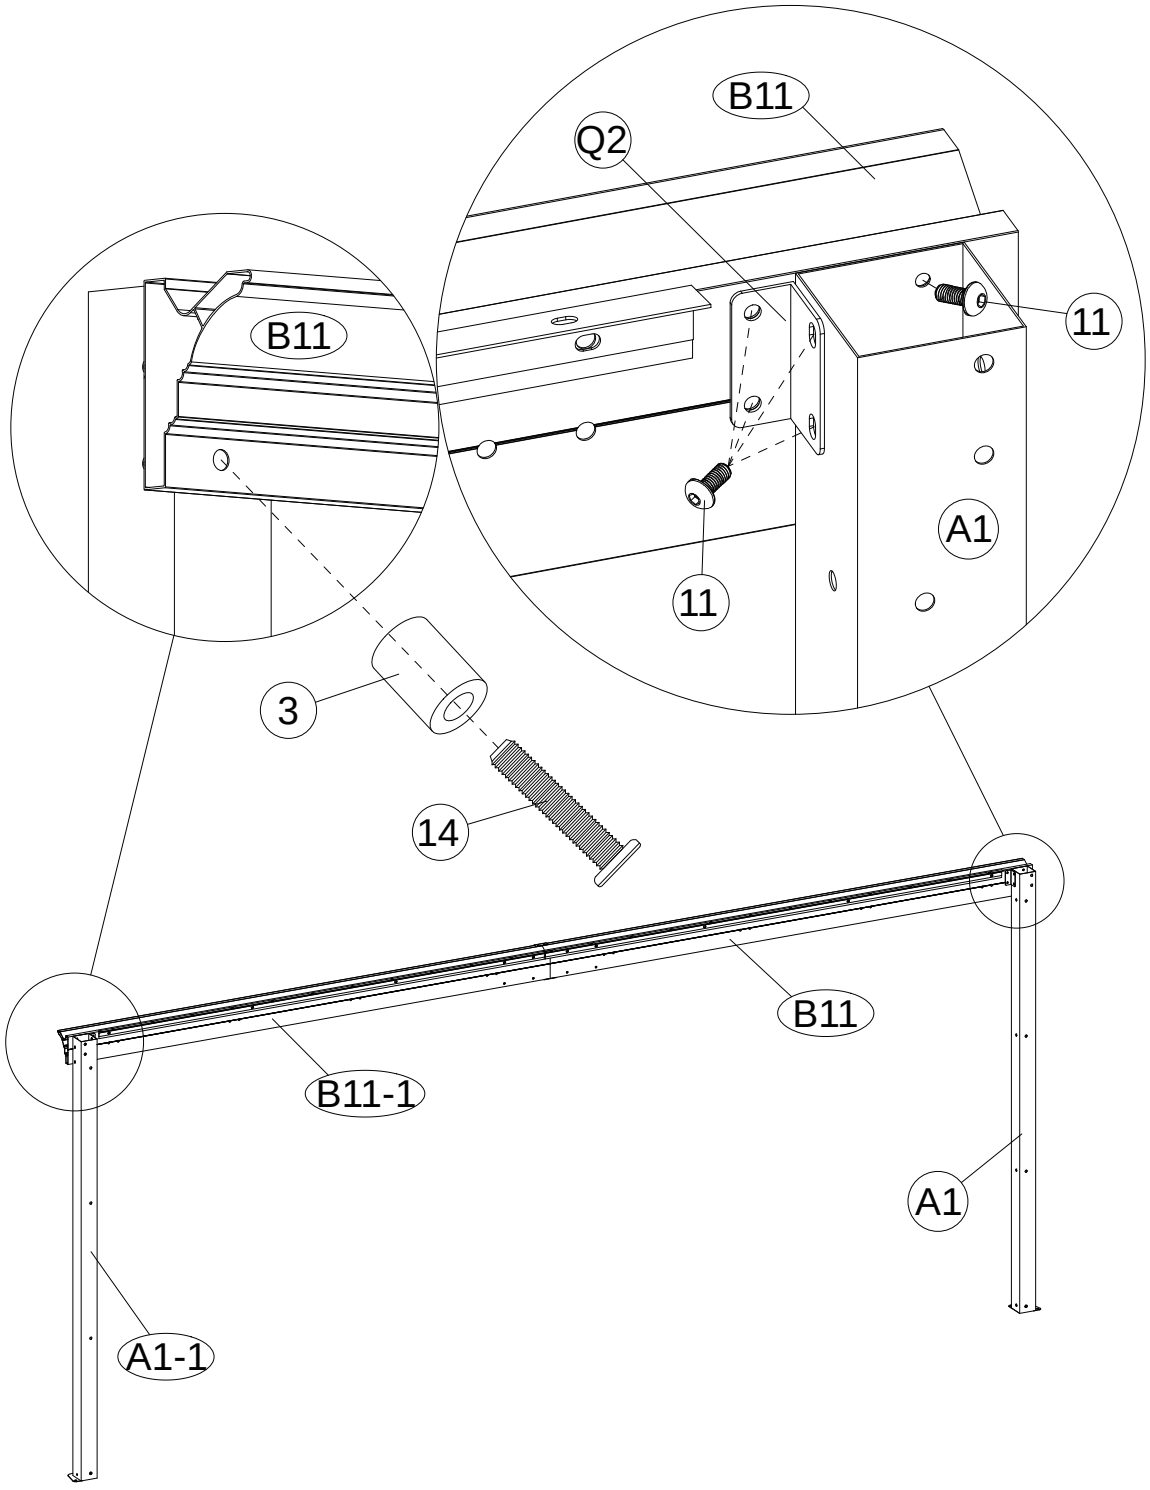


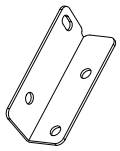

Q1-1 1x



Q1 1x



6.2*11*20

2 4x



M6x35


14 4x




M6x15

11 6x

<7>

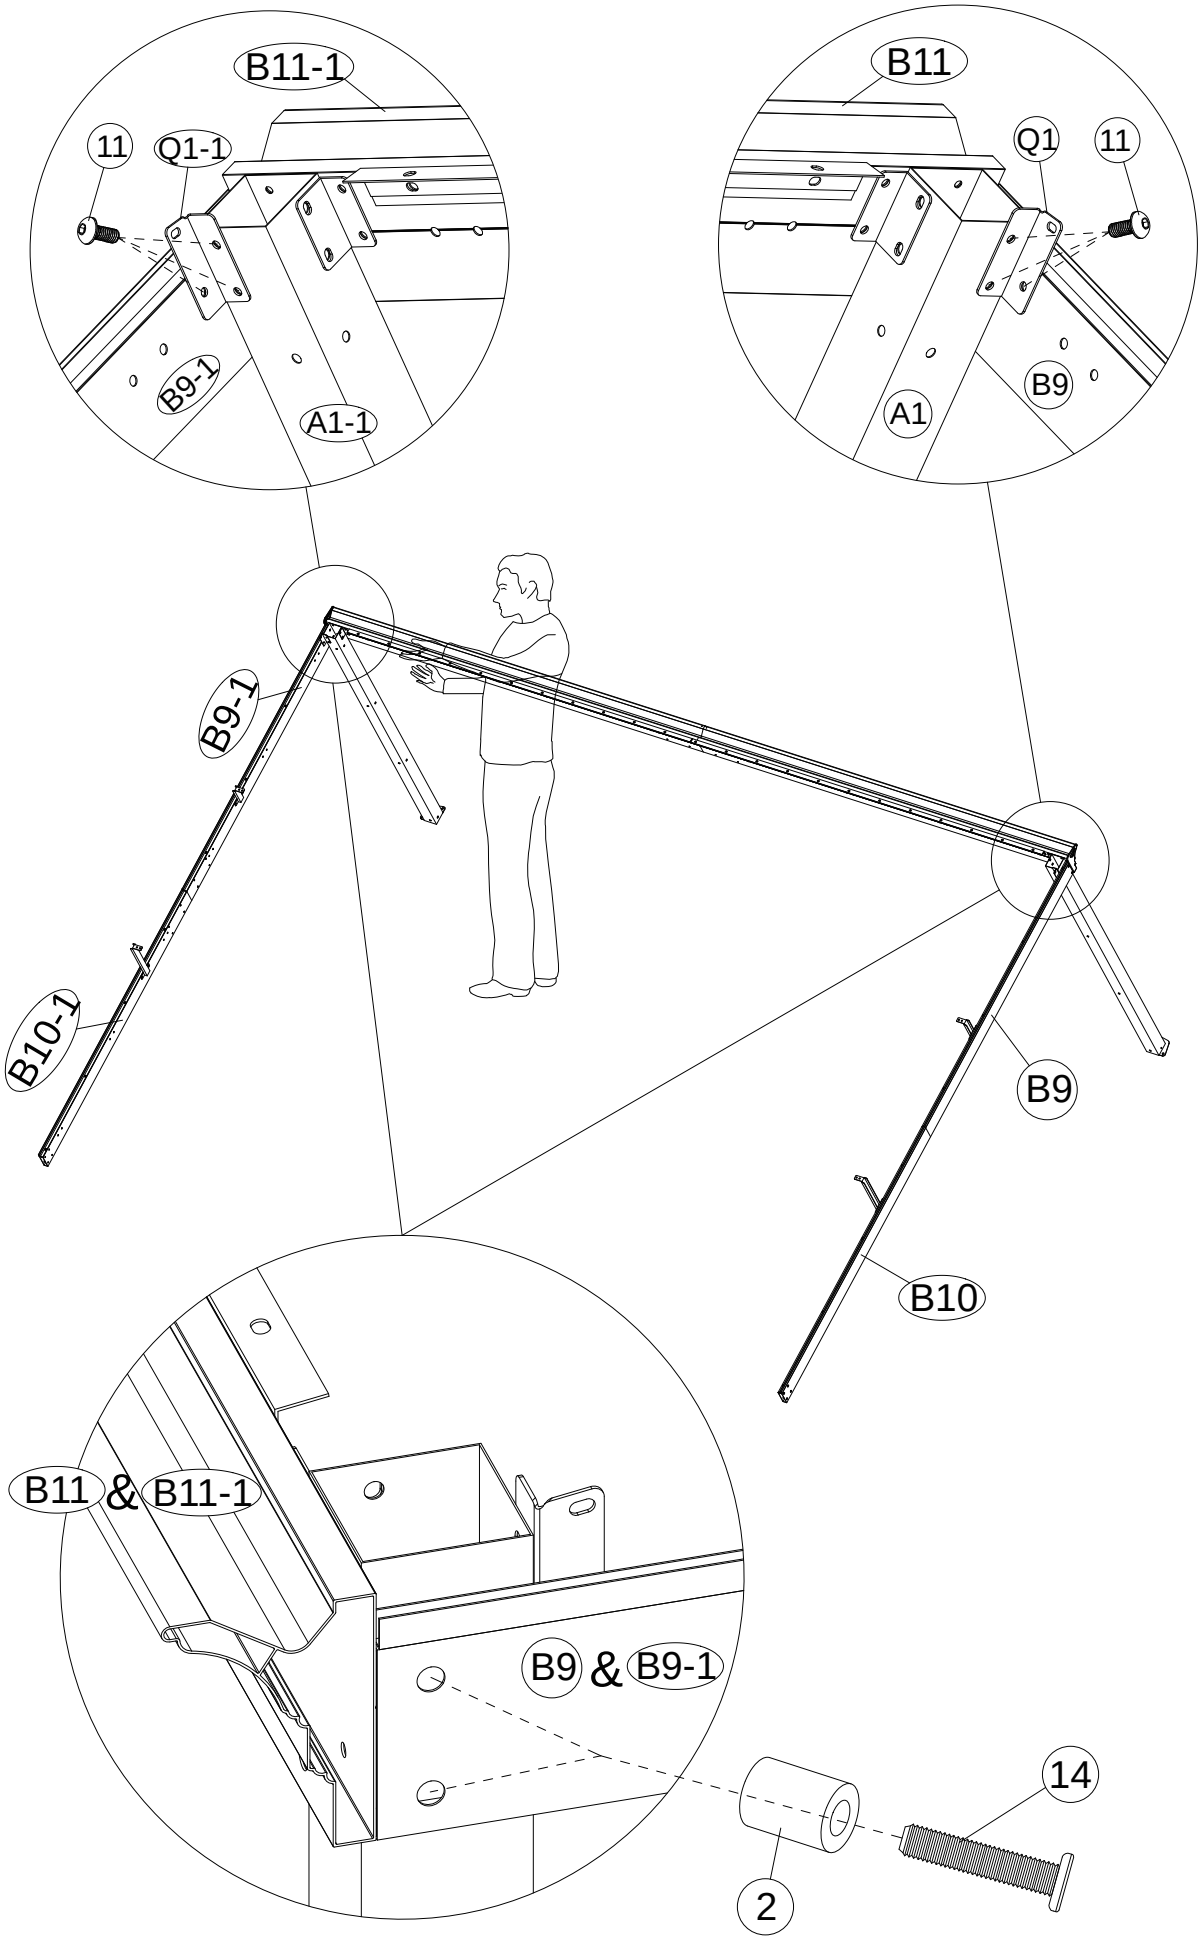



6.2*11*20


2 8x




M6x35


14 8x

<8>

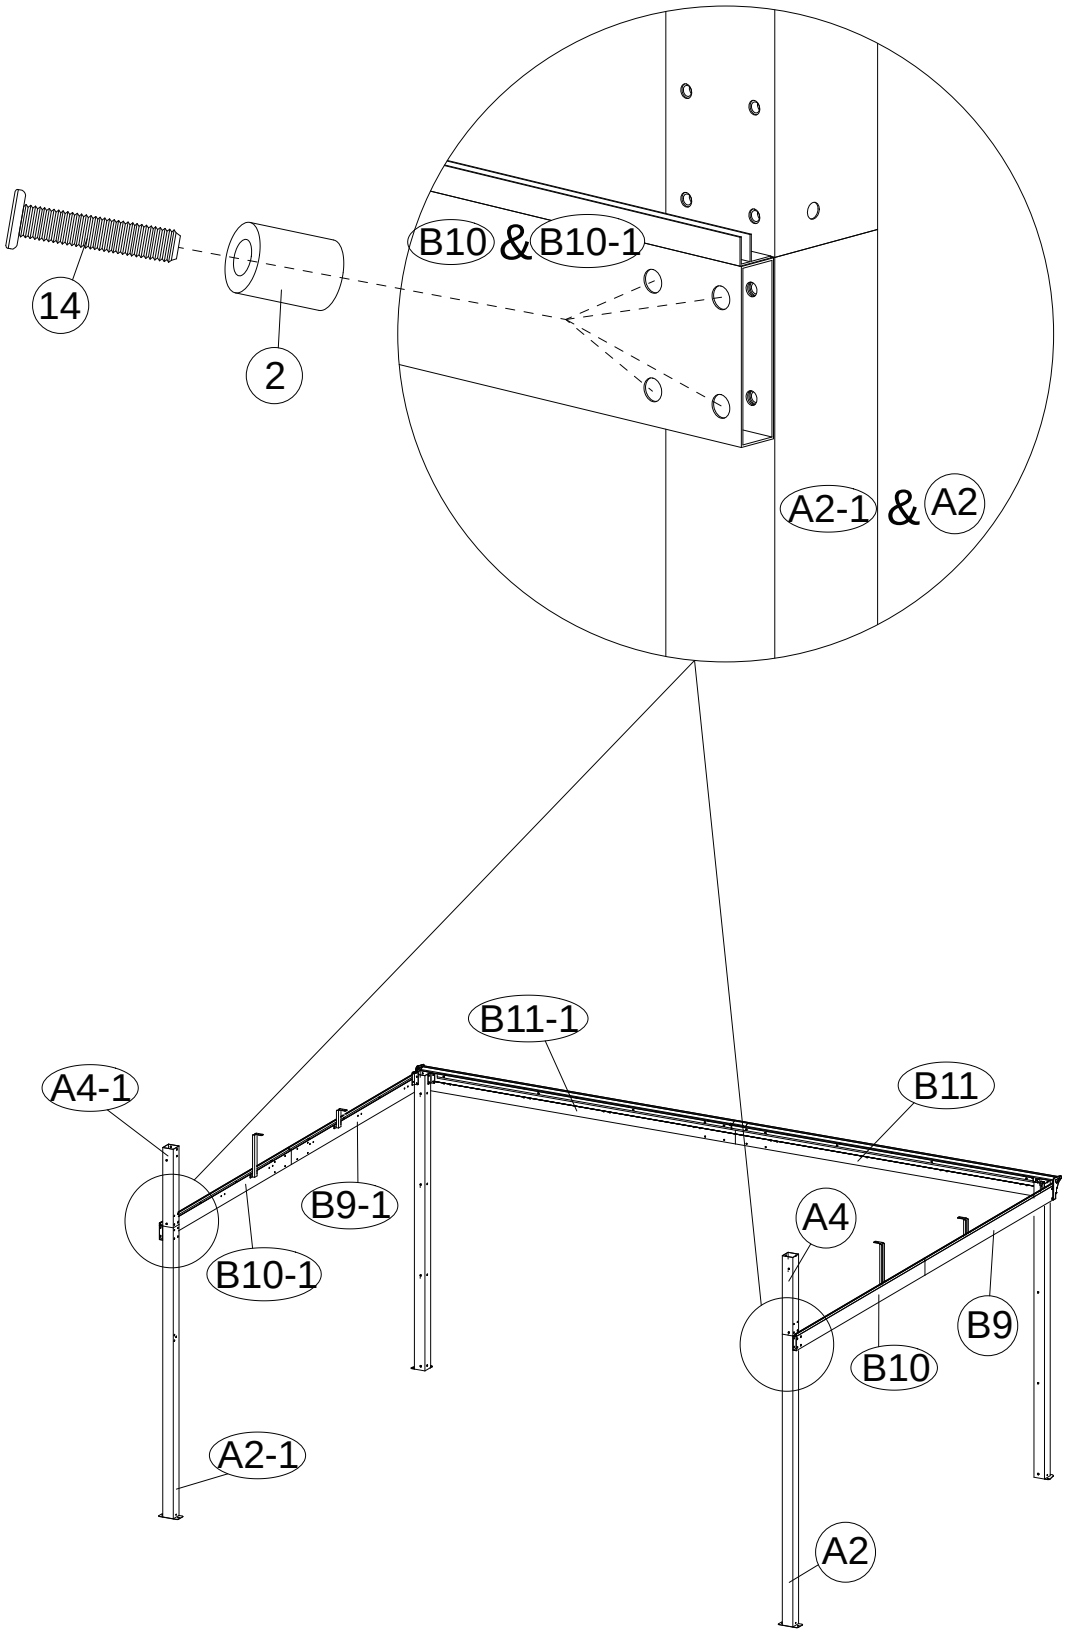


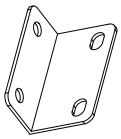


Q2 2x



Q5 1x



Q5-1 1x



6.2*11*20

2 2x




M6x35

14 4x




M6x15


11 8x



Q5 2x




Q5-1 2x



Waterproof tape

H 1x

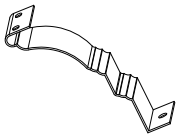

K 1x




ST 4.8x12


7 2x





M6x15


11 13x

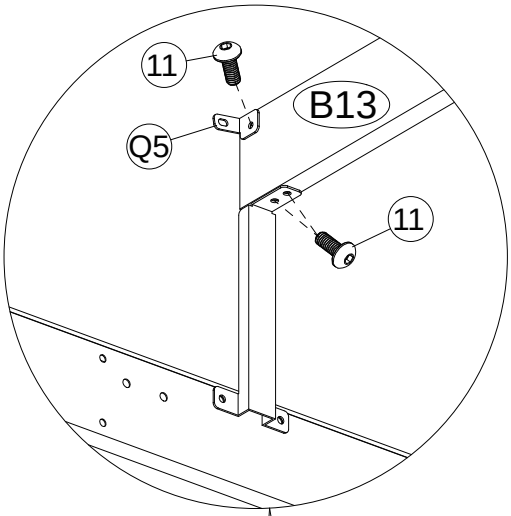


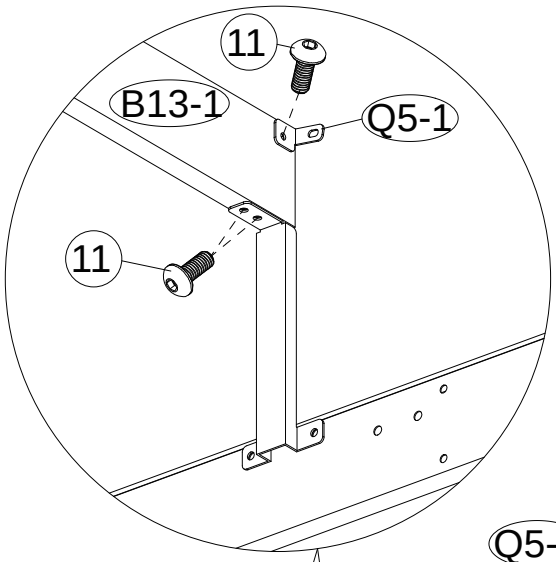


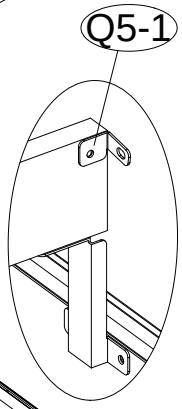


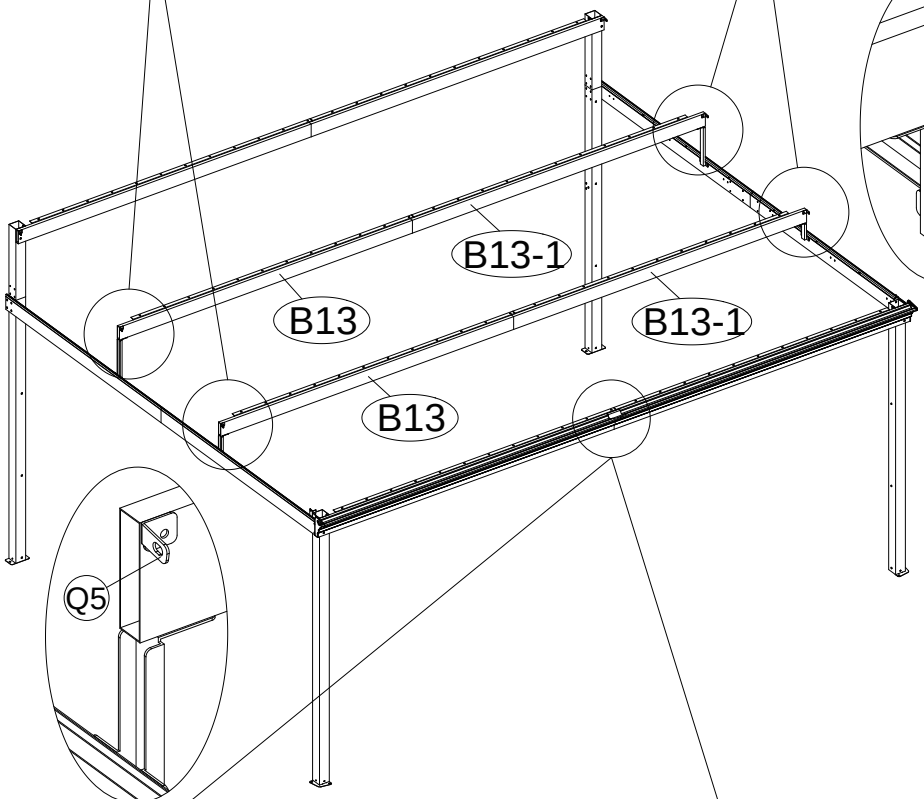

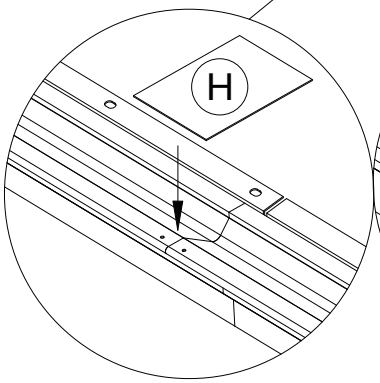

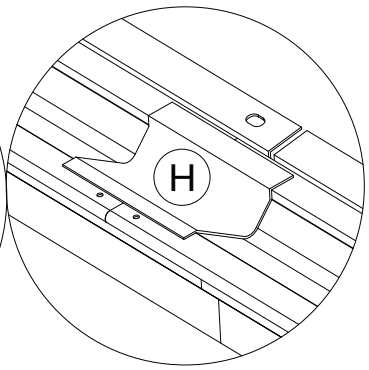

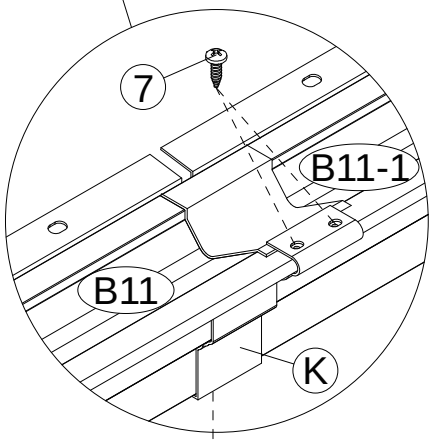




<11>




M4 1x




M4-1 1x




M5 1x




M5-1 1x



M6 1x




M6-1 1x




G3 2x



G4 2x

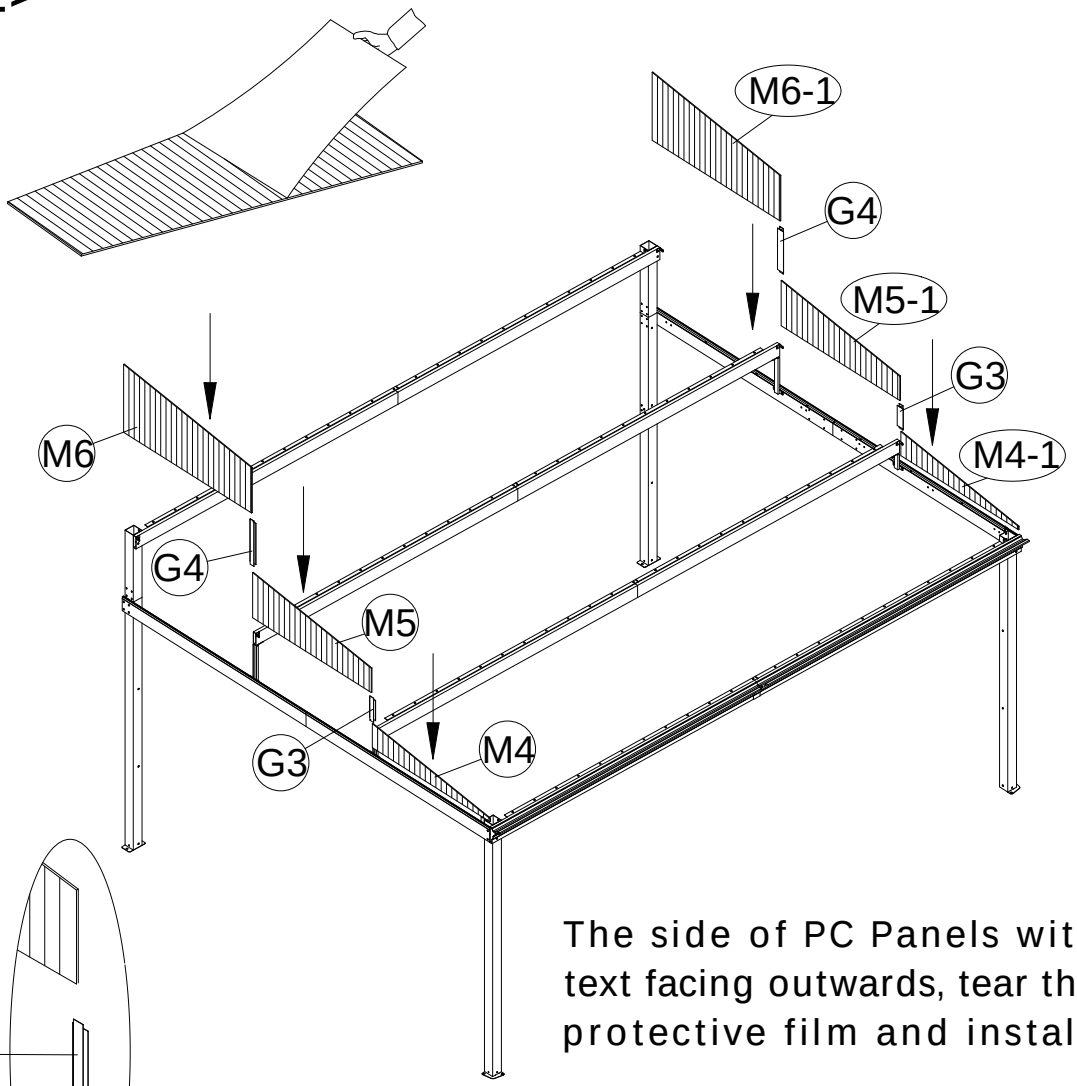

The side of PC Panels with text facing outwards, tear the protective film and install.

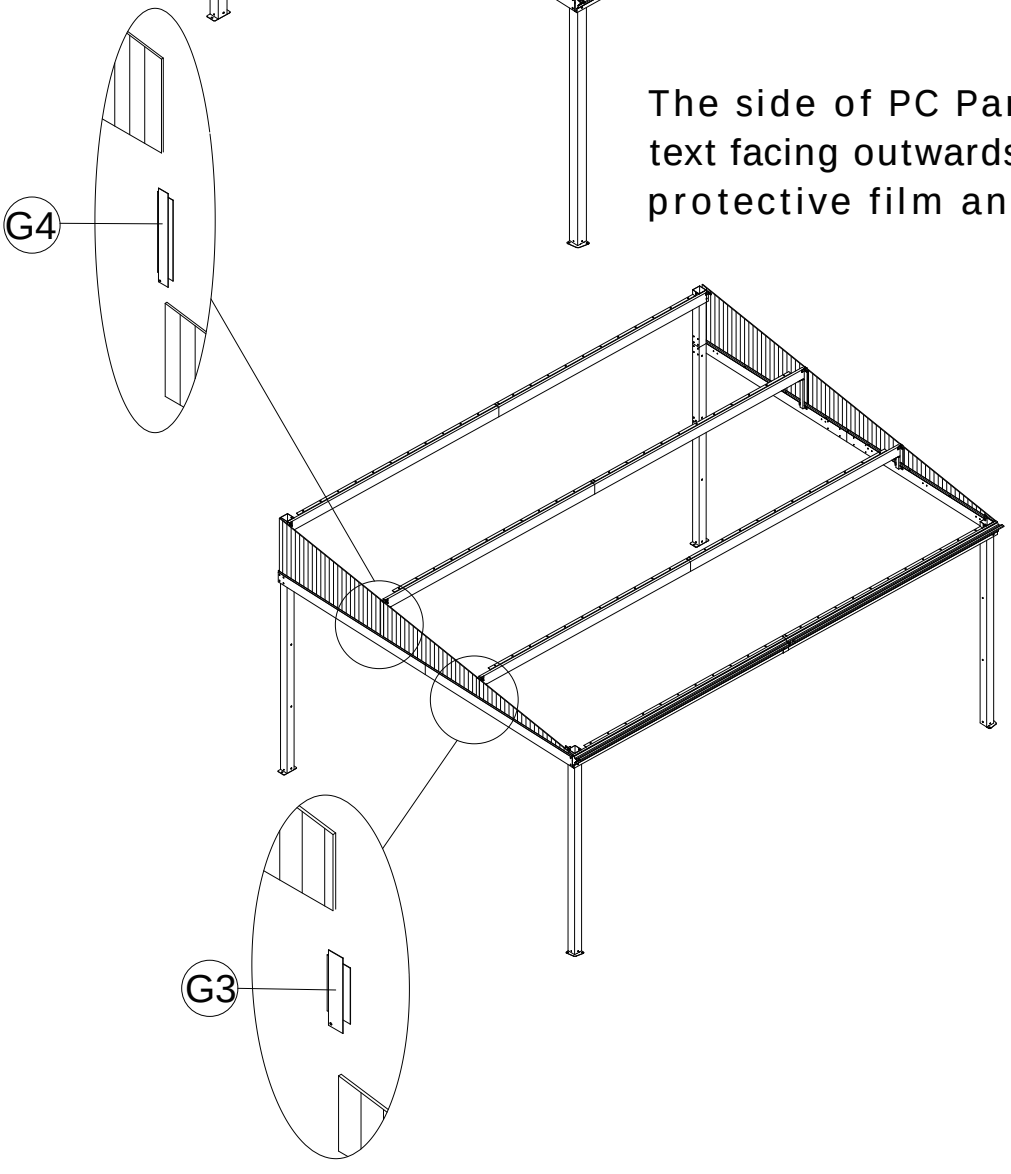




F3 1x



F3-1 1x



F4 2x

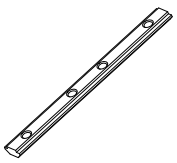


15 2x



M5*6

16 8x


25

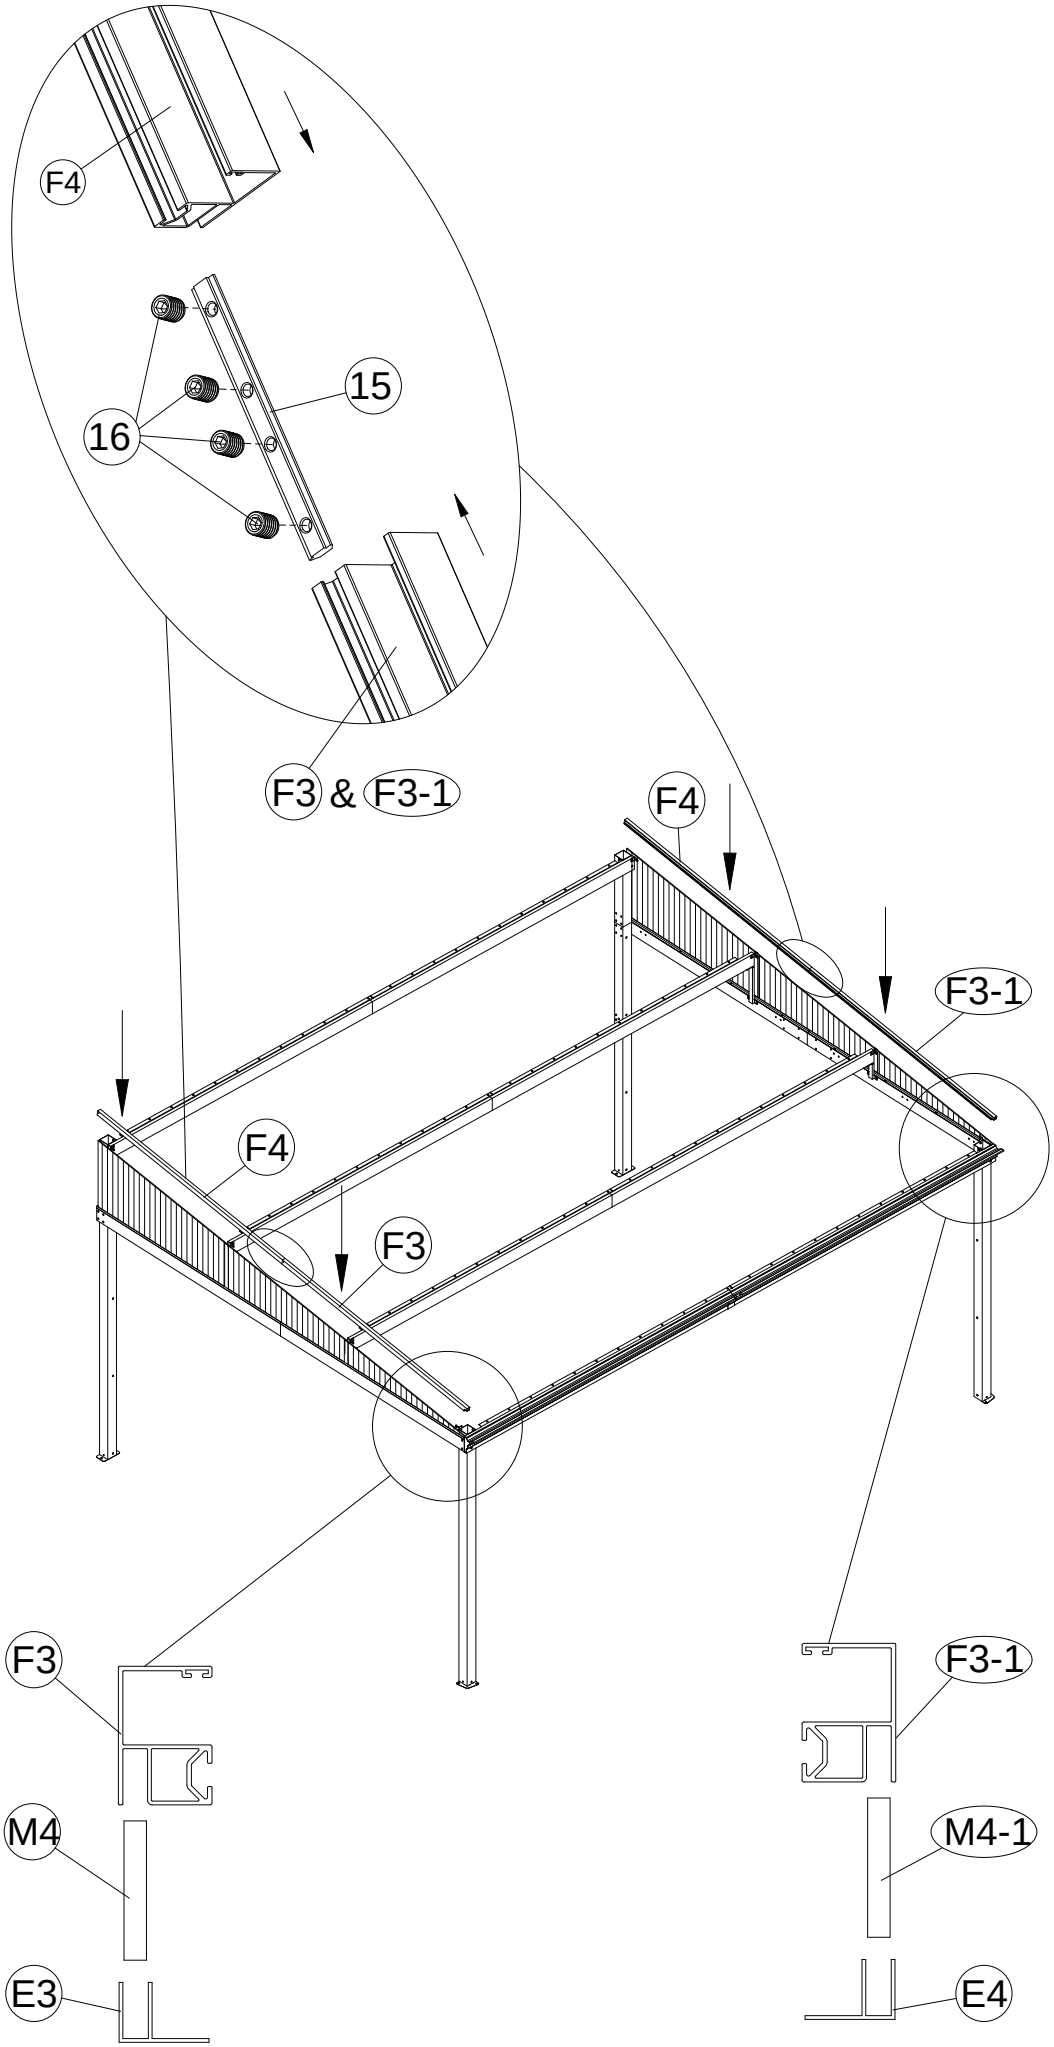



M5


17 8x



M5*12


18 8x

<13>

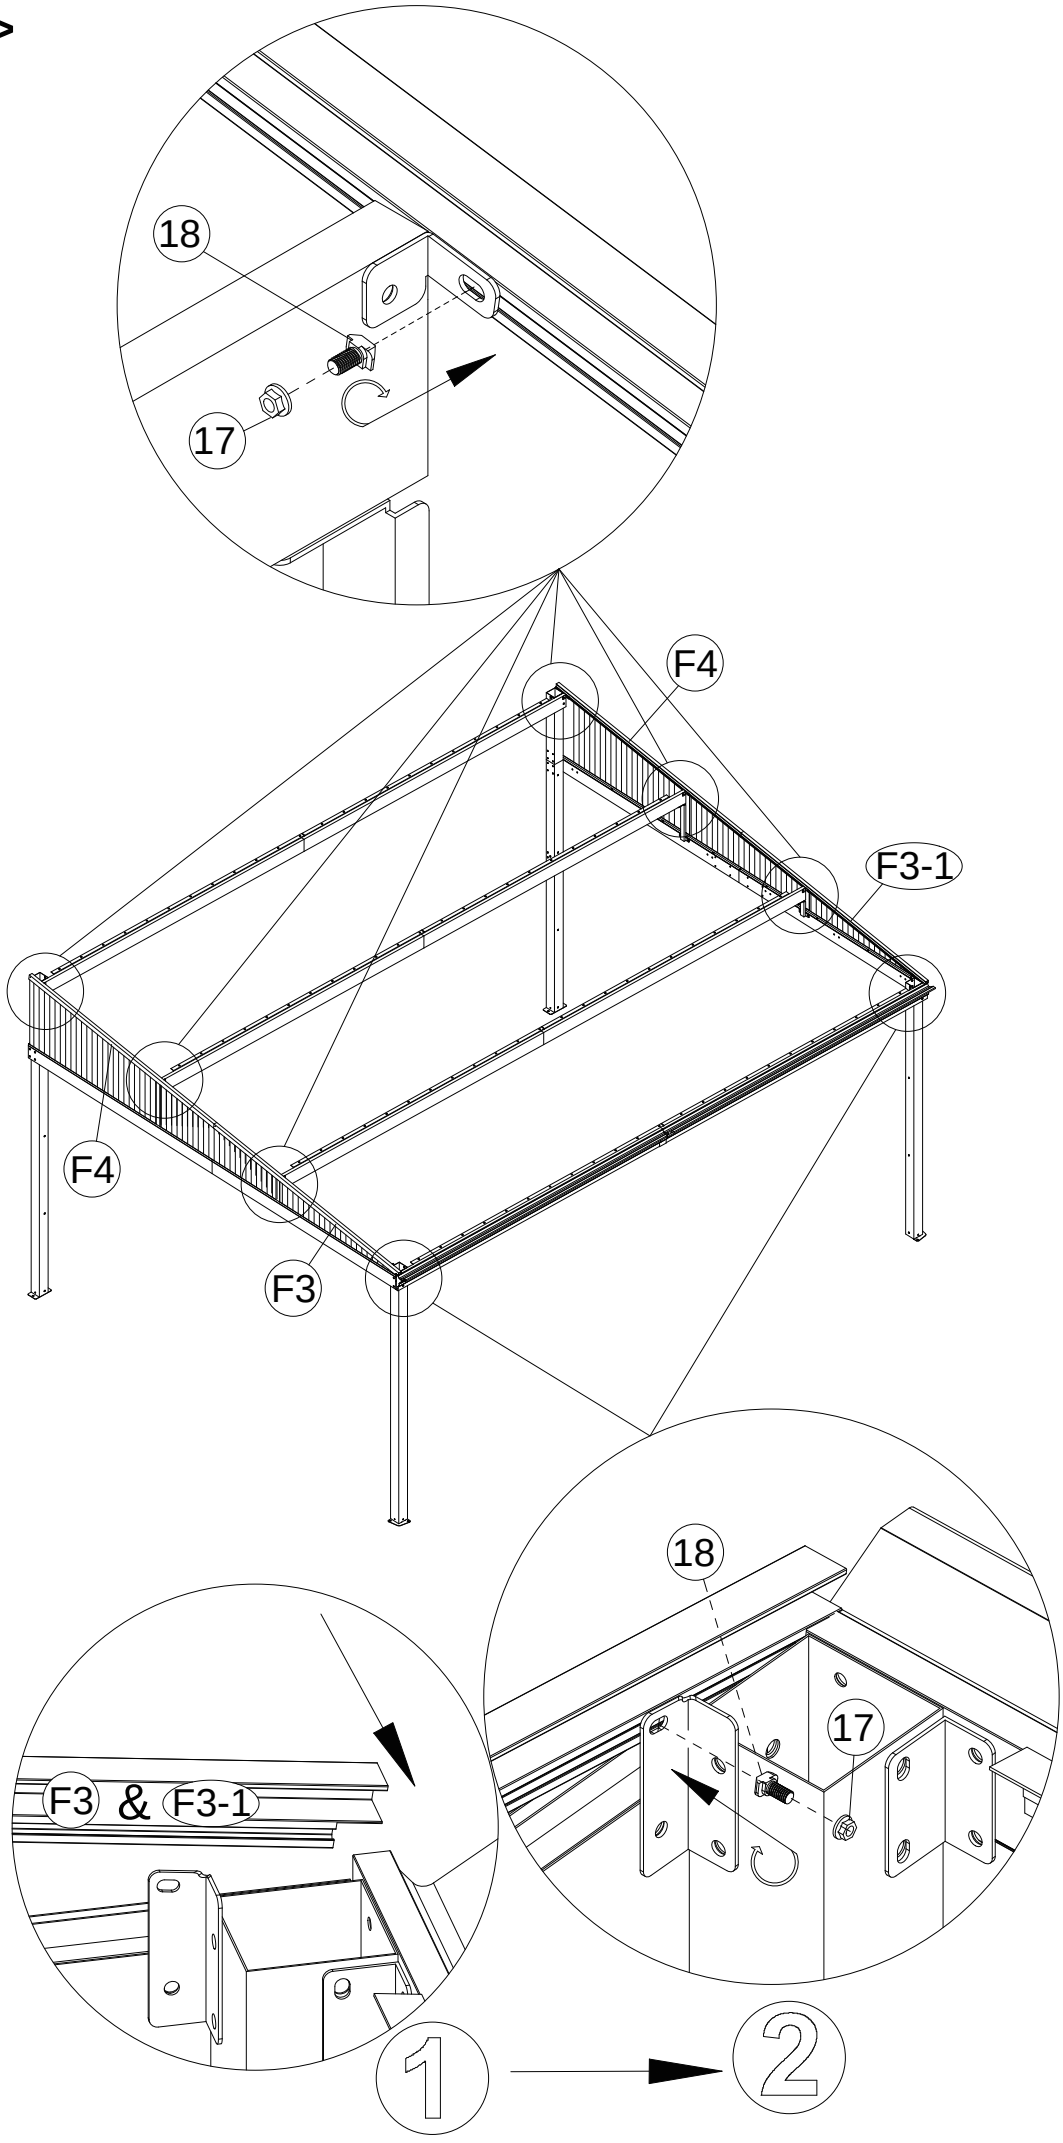




I1 2x



N1 1x





N2 1x




M6x15

11 4x

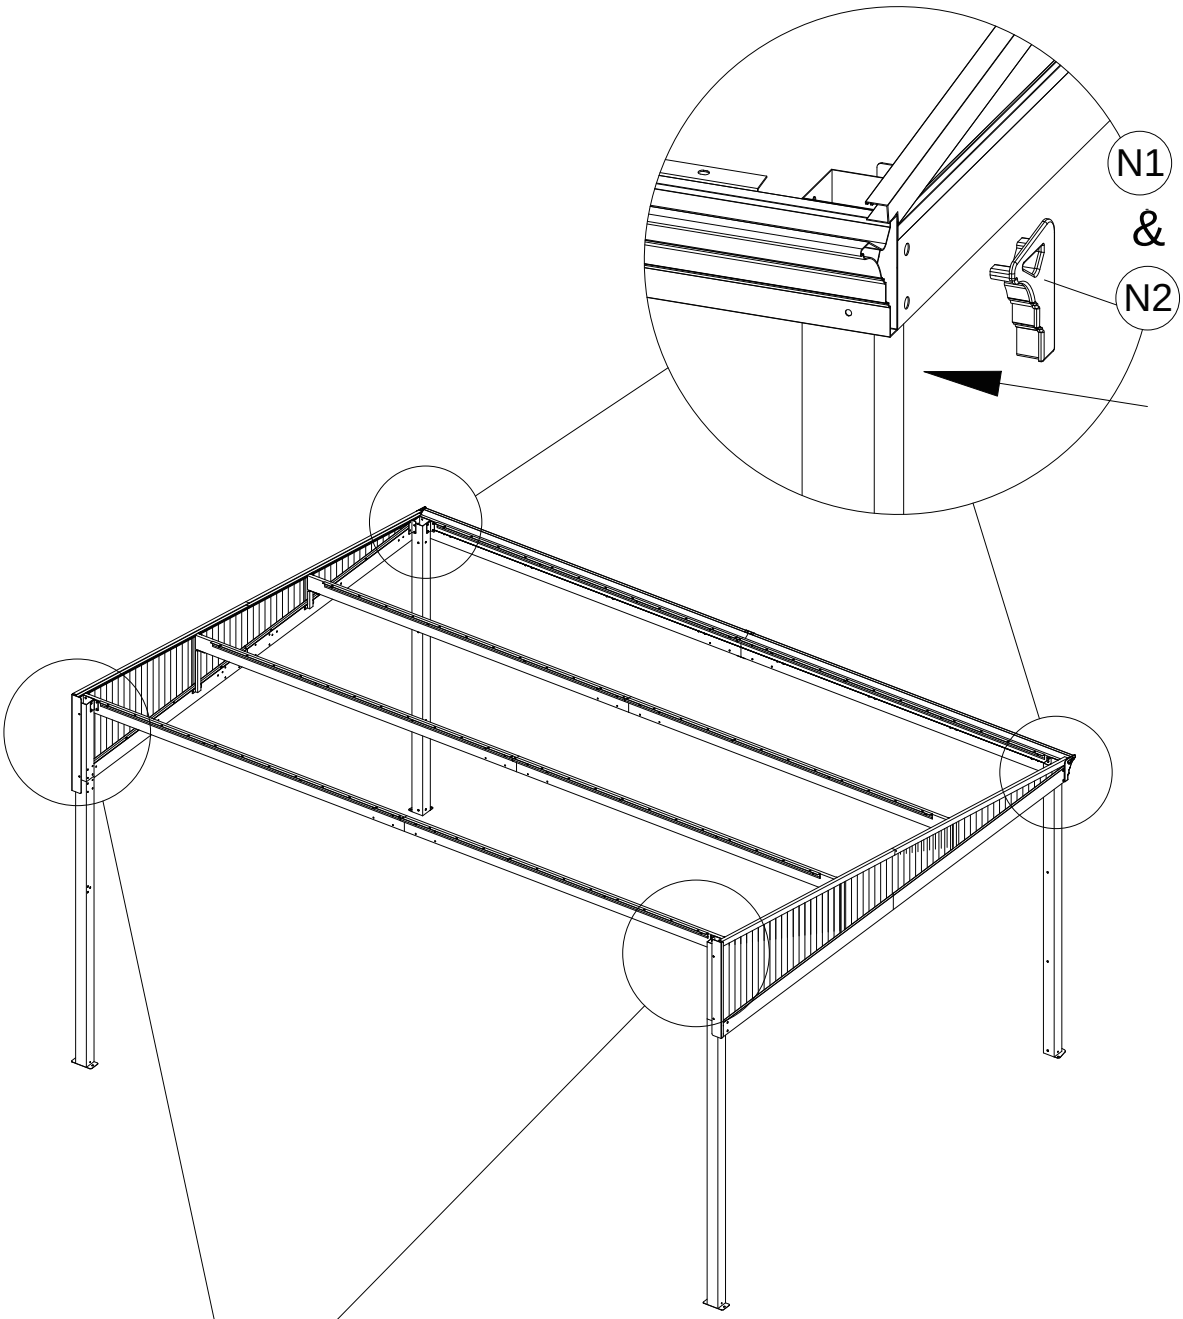


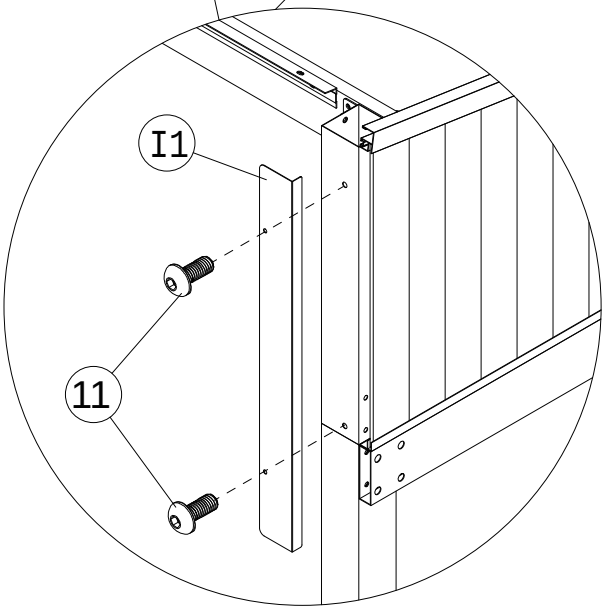


<15>

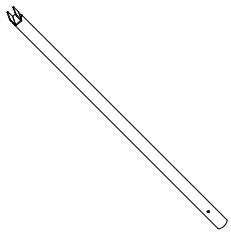


M4 1x

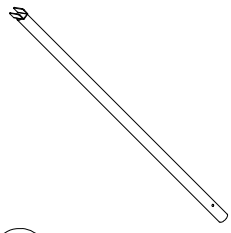


M5 1x

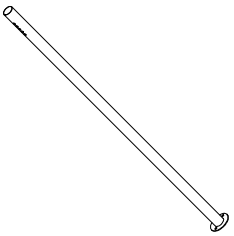


M3 2x





Z 4x

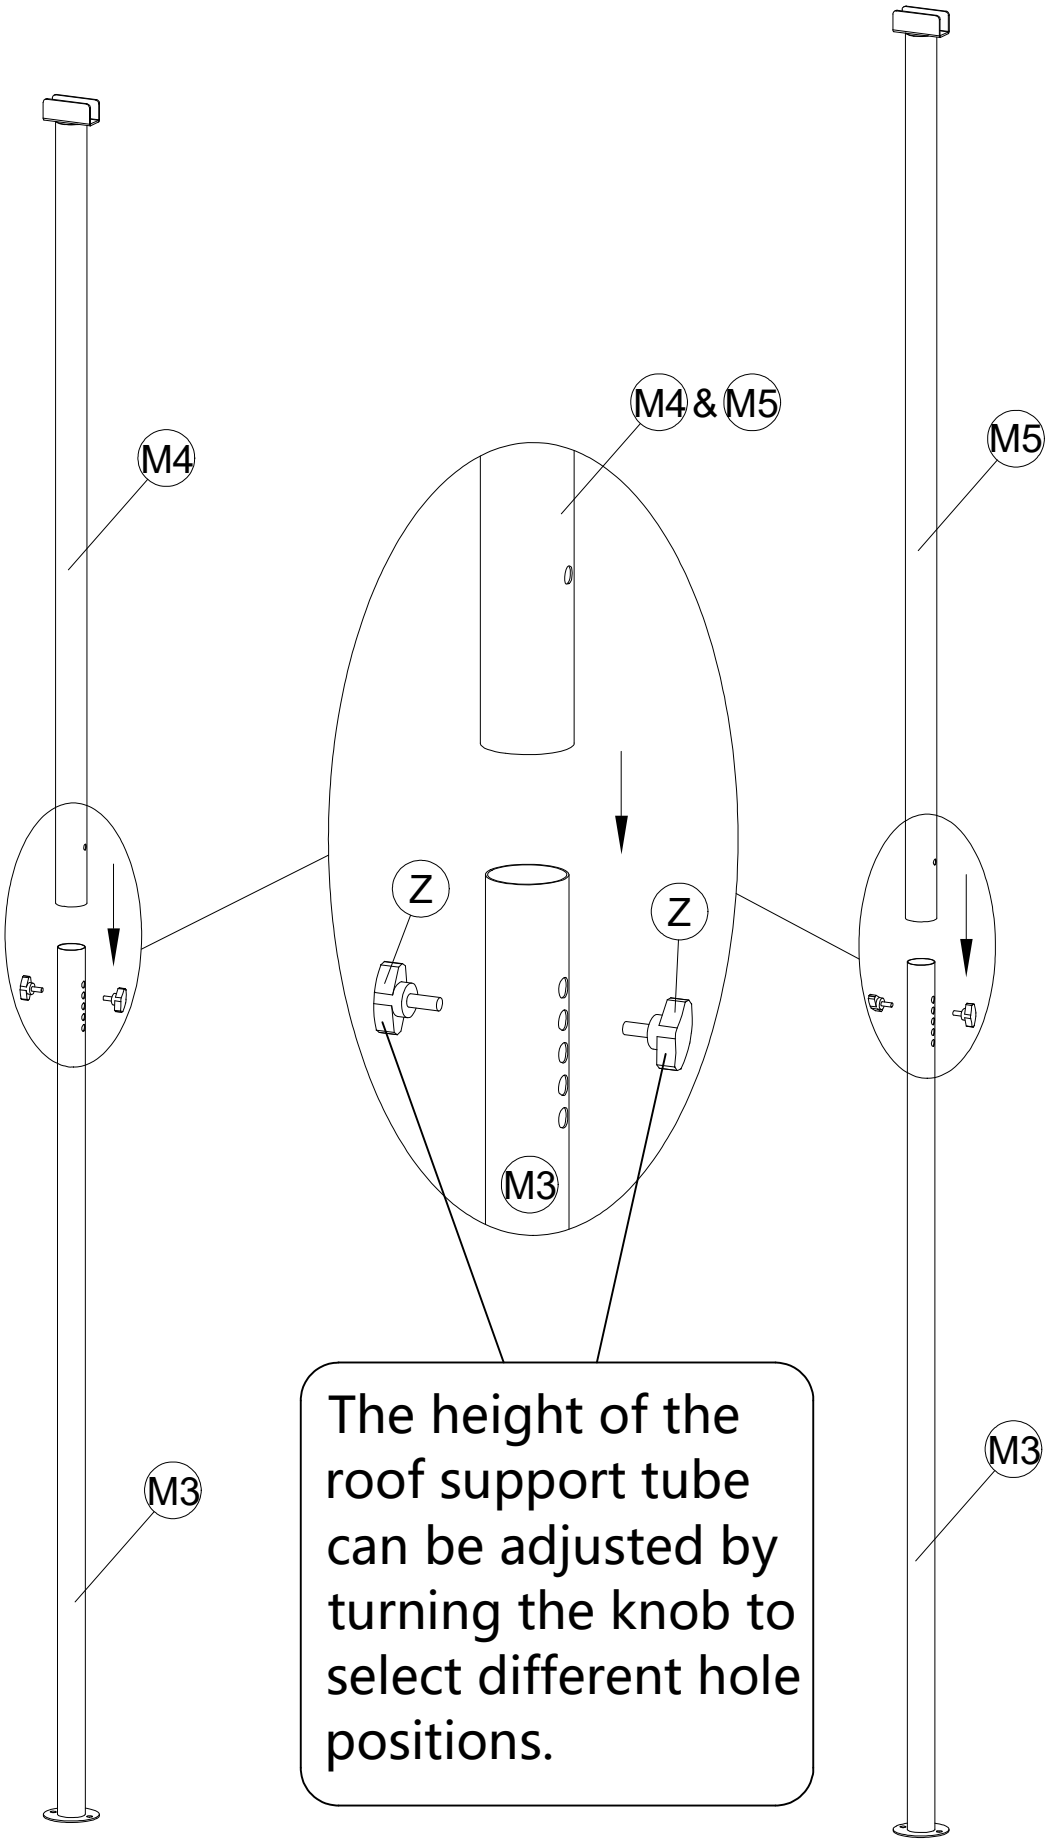


The height of the roof support tube can be adjusted by turning the knob to select different hole positions.


M4
M3


M5
M3

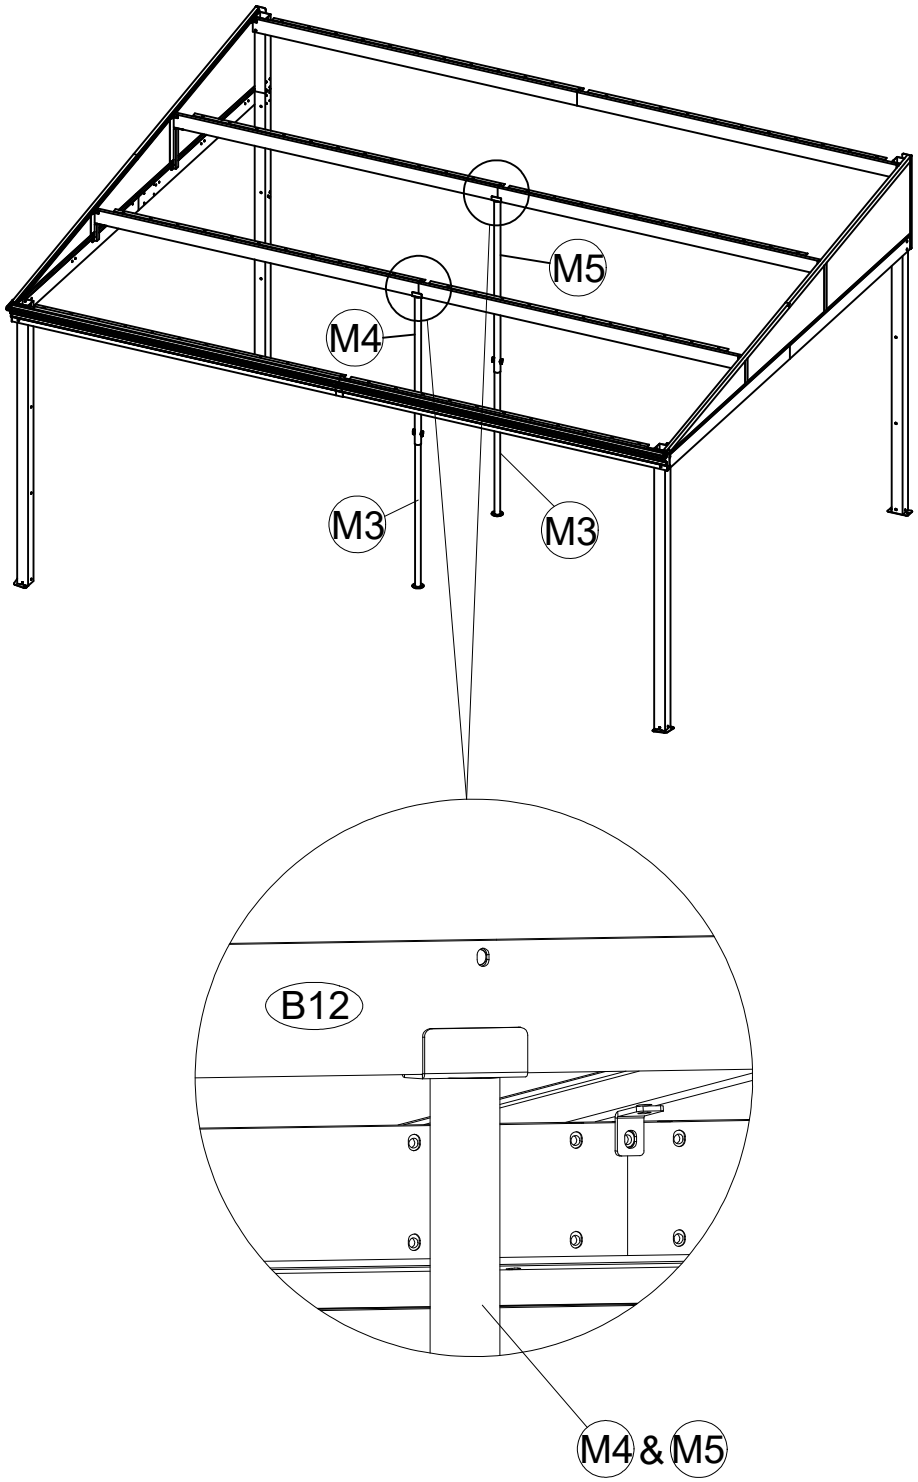
M5
M4
M3
M3
B12
M4 & M5


<17>



R2 3x




Y 6x



M6

19 6x



Rubber Gasket

20 6x



M6


13 6x




M6x28


12 6x

30

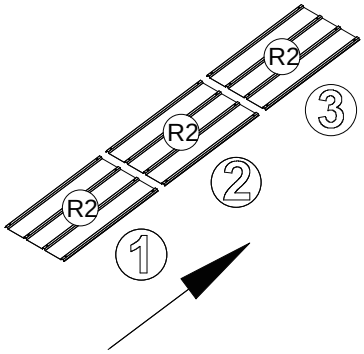


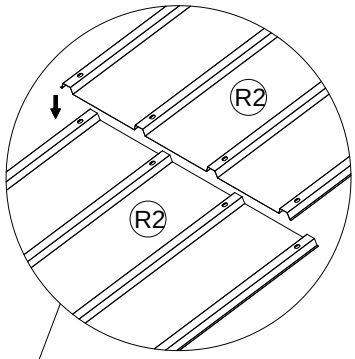


The first row is installed, then the second row is installed, and finally the third row is installed.

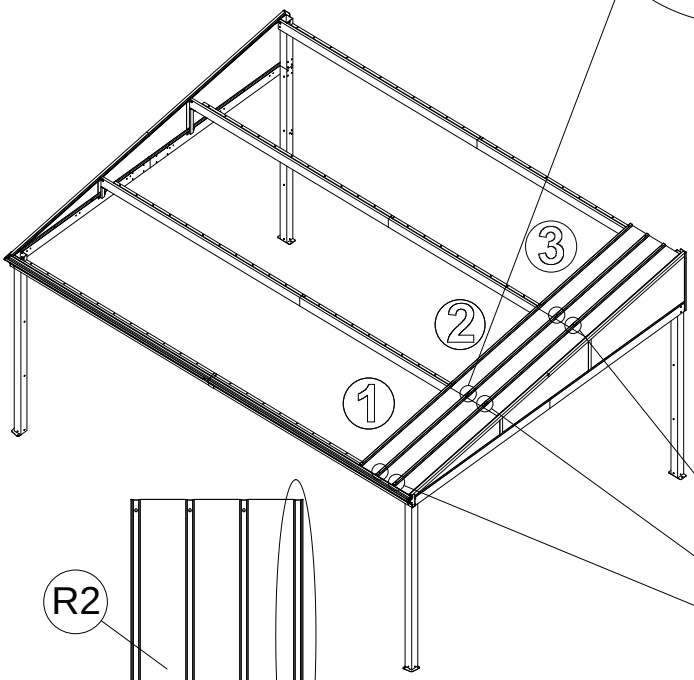

The un-drilled side faces the frame direction

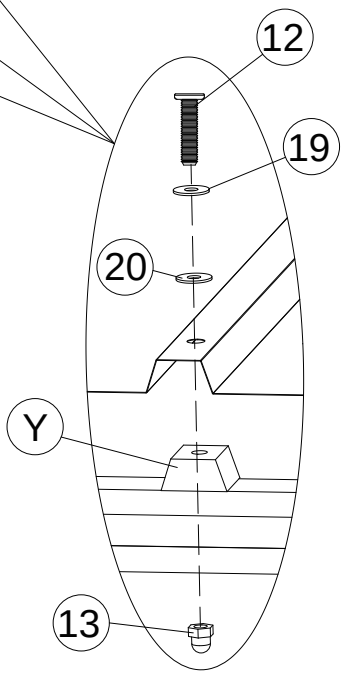


Note: When installing the roof top plates,if the roof plates are slightly unven, pls press the screws from the top of the plates until the bottom screw thread is exposed by 3 to 4mm, and then screw on the nut.



R1 18x




Y 54x



M6

19 54x



Rubber Gasket

20 54x



M6


13 54x




M6x28

12 54x

<18>

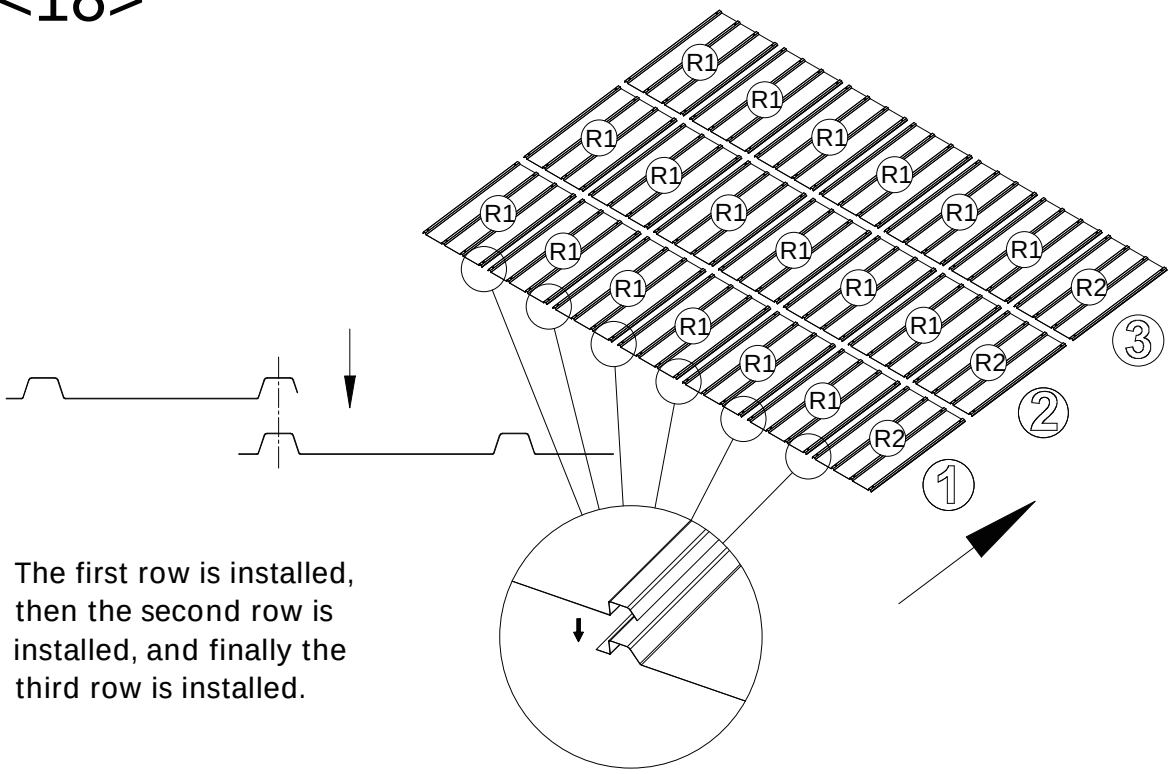


The first row is installed, then the second row is installed, and finally the third row is installed.

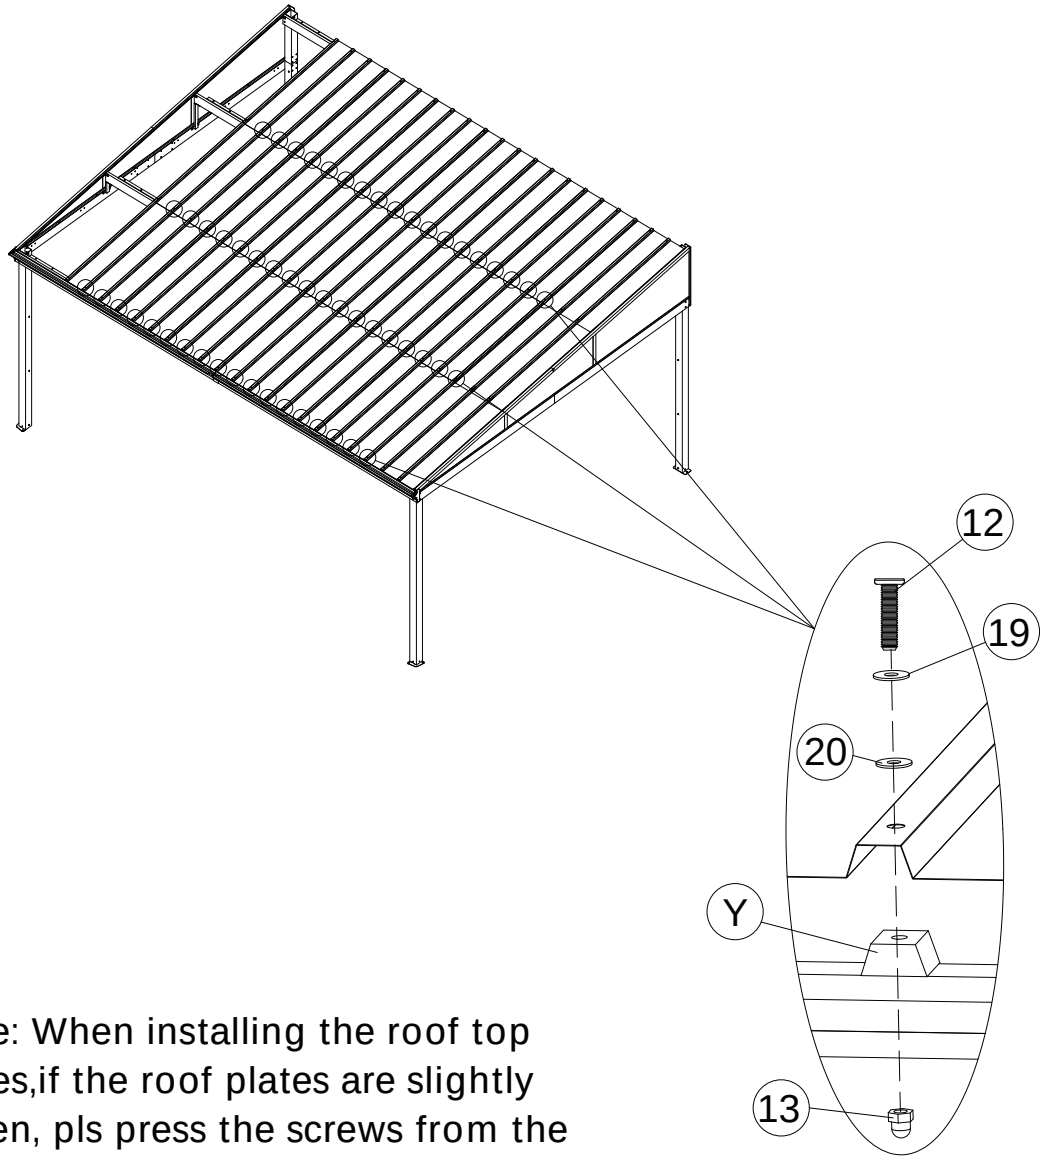


Note: When installing the roof top plates,if the roof plates are slightly unven, pls press the screws from the top of the plates until the bottom screw thread is exposed by 3 to 4mm, and then screw on the nut.

<19>




R2 3x

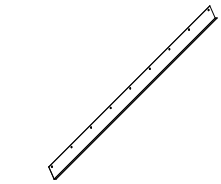

L2 3x




Y 32x



M6

19 32x



Rubber Gasket

20 32x




M6

13 32x





M6x28


12 32x

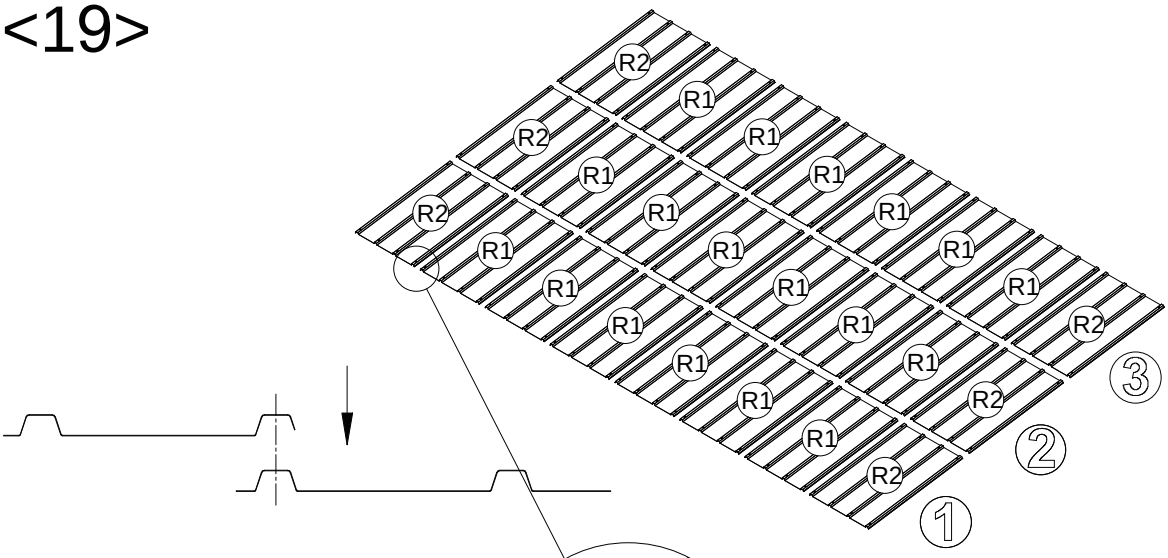


The first row is installed, then the second row is installed, and finally the third row is installed.

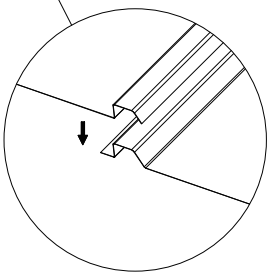

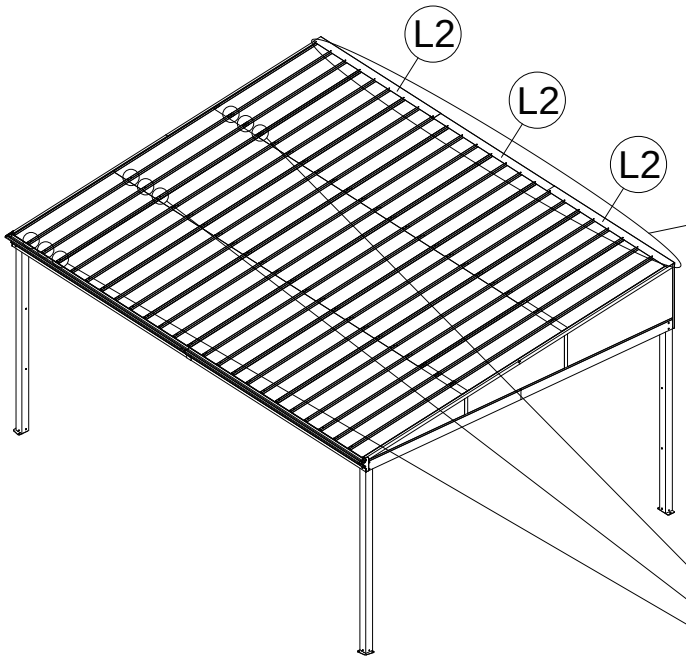


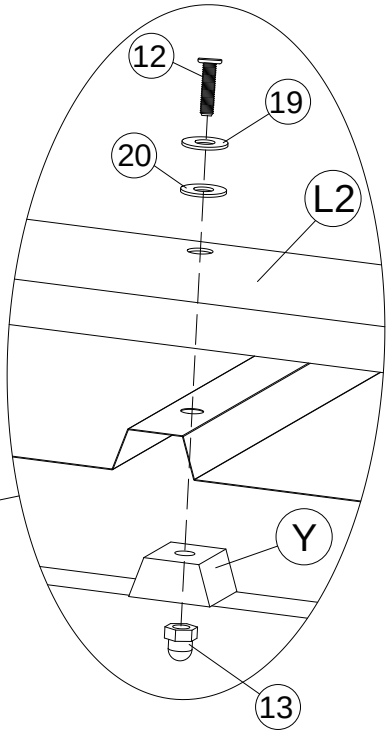


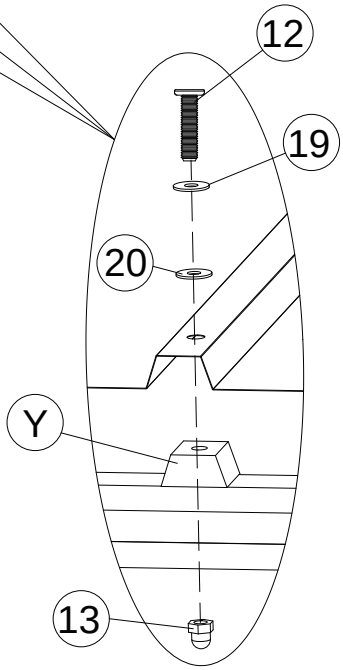


Note: When installing the roof top plates,if the roof plates are slightly unven, pls press the screws from the top of the plates until the bottom screw thread is exposed by 3 to 4mm, and then screw on the nut.

AB 3x

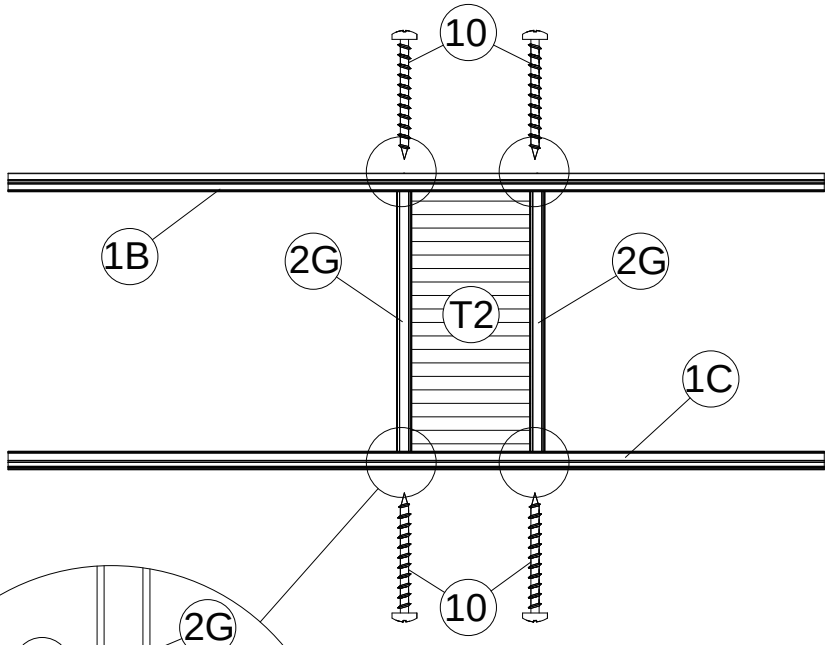

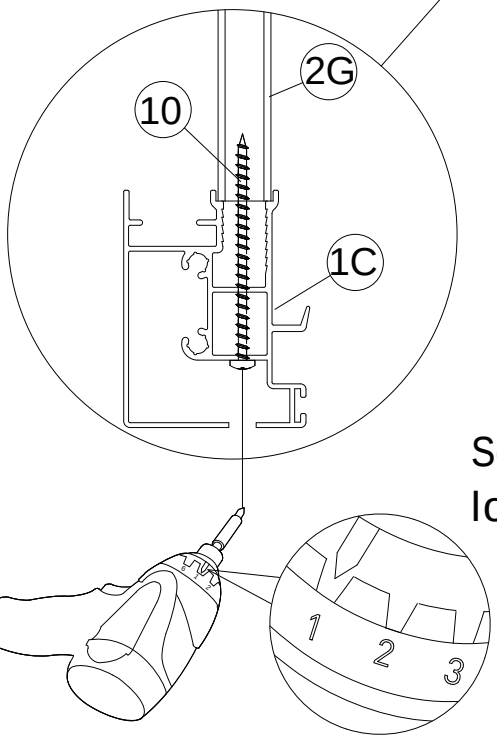


Select the low gear.

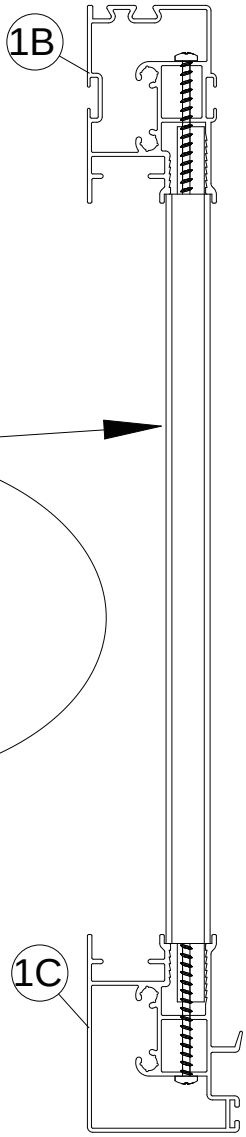


The side of PC Panel with text facing outwards, tear the protective film and install.


The door frame installation template on pages 33 to 38 is displayed. All subsequent door frames follow this template.

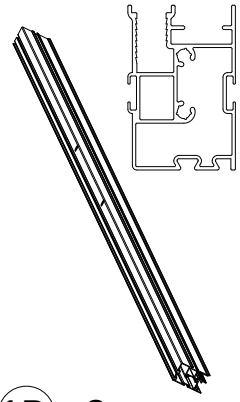


1B 3x

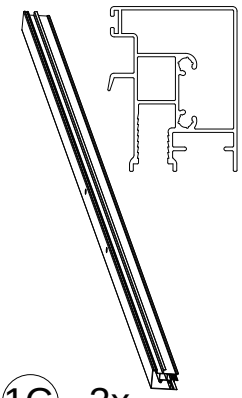


1C 3x

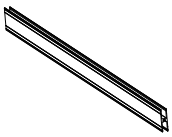

2G 6x




T2 3x

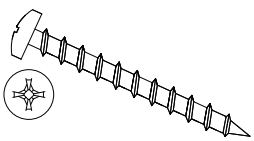


M4x50


10 12x

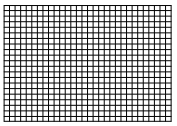

2S 3x

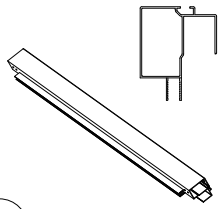

1K 3x





M4x20

8 12x

<21>


AB 3x

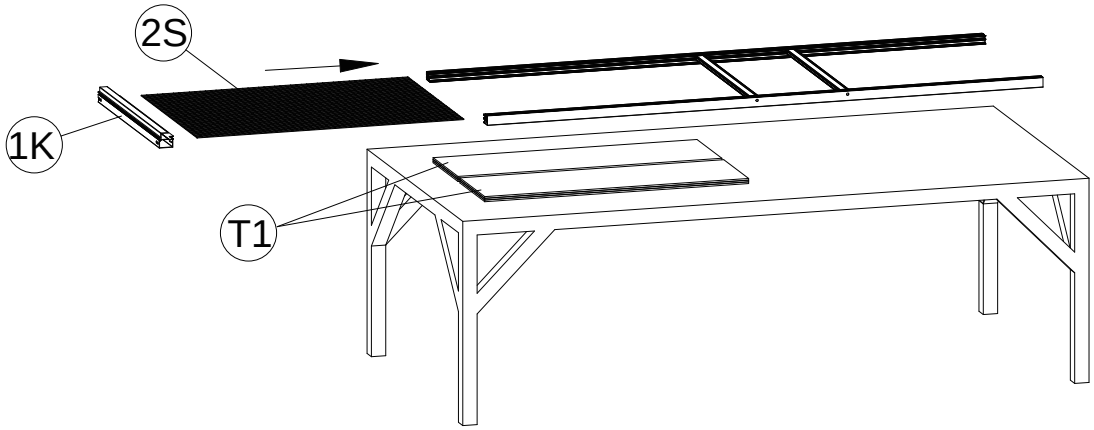

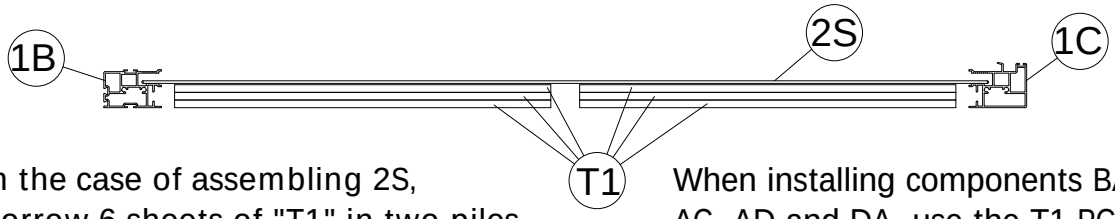

In the case of assembling 2S, borrow 6 sheets of "T1" in two piles and drain the bottom, lift the "2S".

When installing components BA, AC, AD and DA, use the T1 PC panel as a pad in the same way.

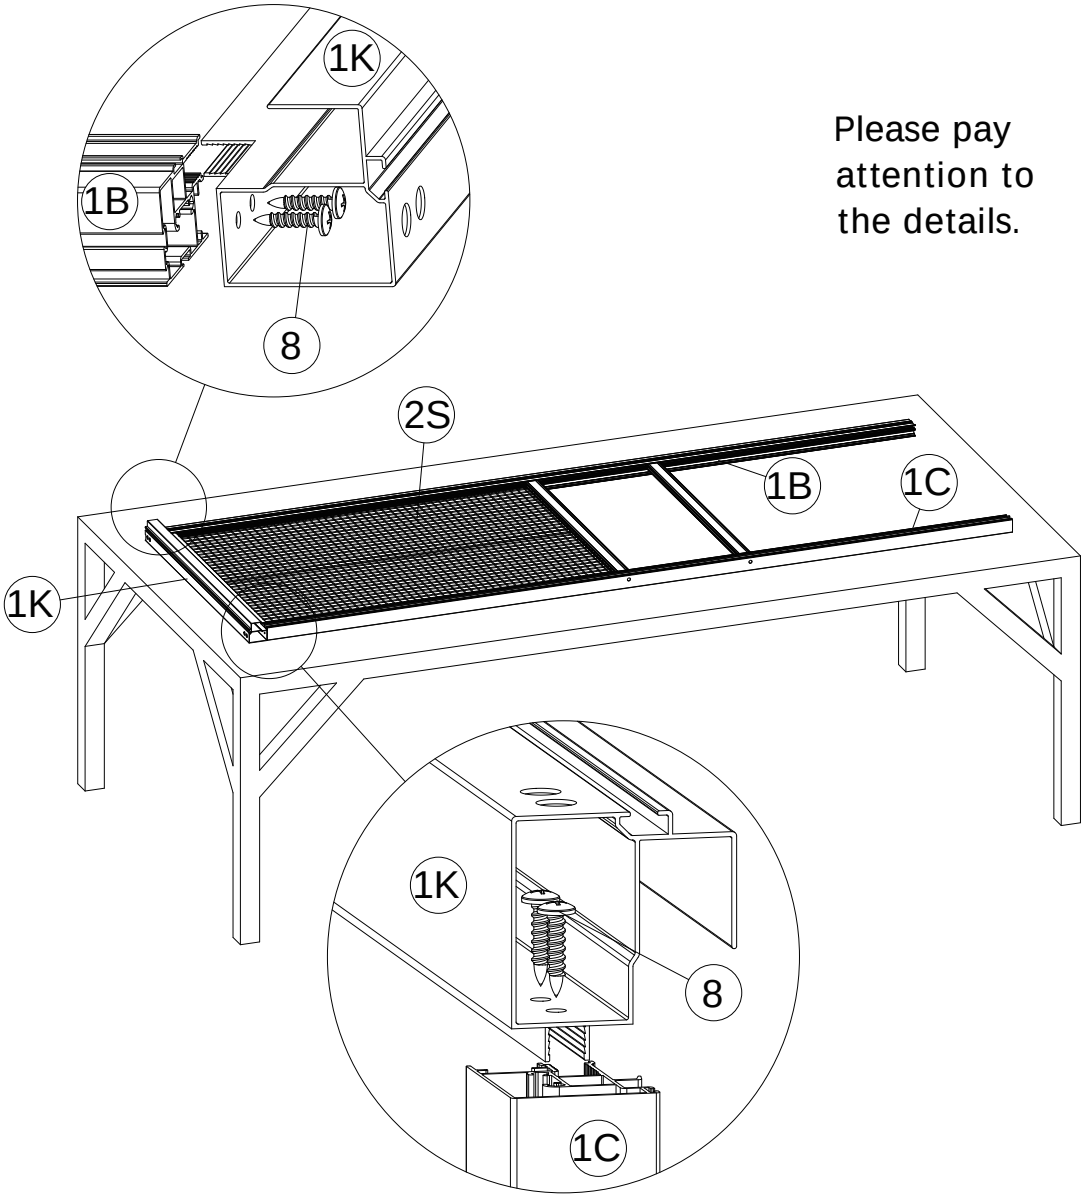


Please pay attention to the details.


<22>

AB 3x


Before installing the parts (1R and 2R), move the gauze by hand to ensure make enough space around the gauze.

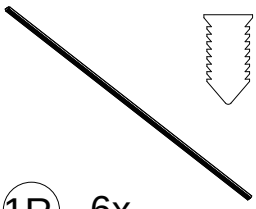



1R 6x

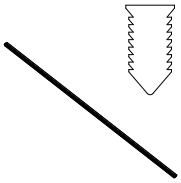


2R 6x

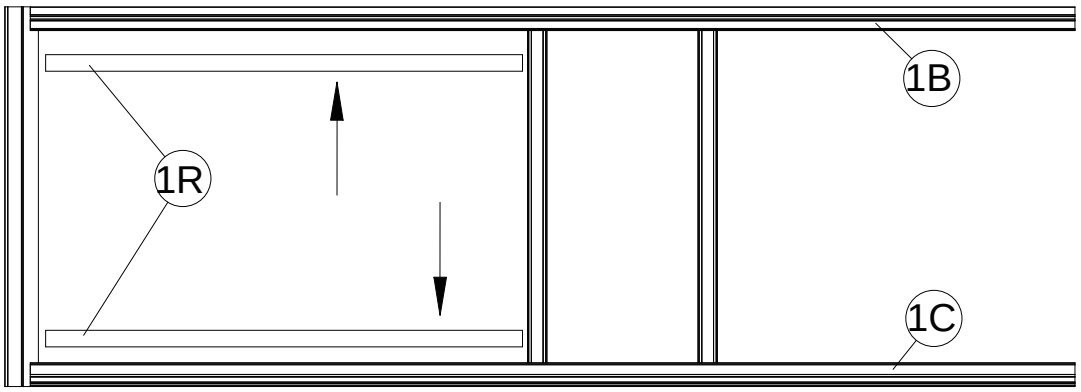

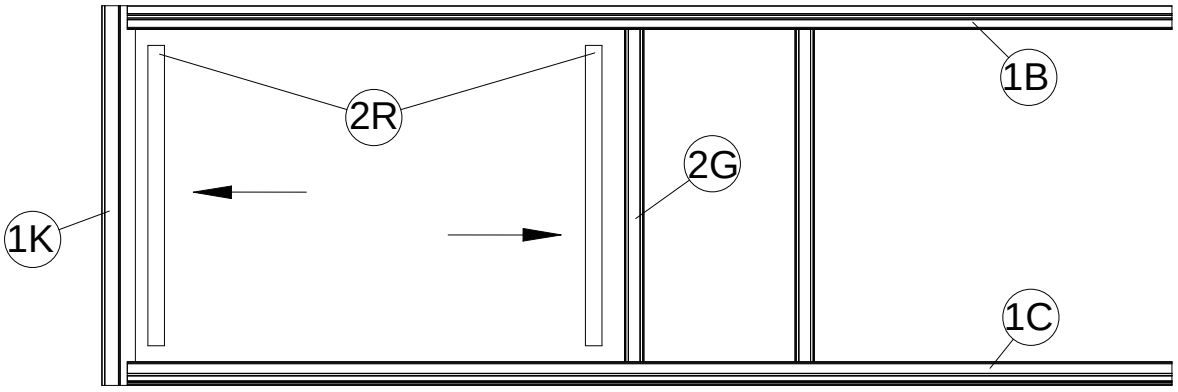

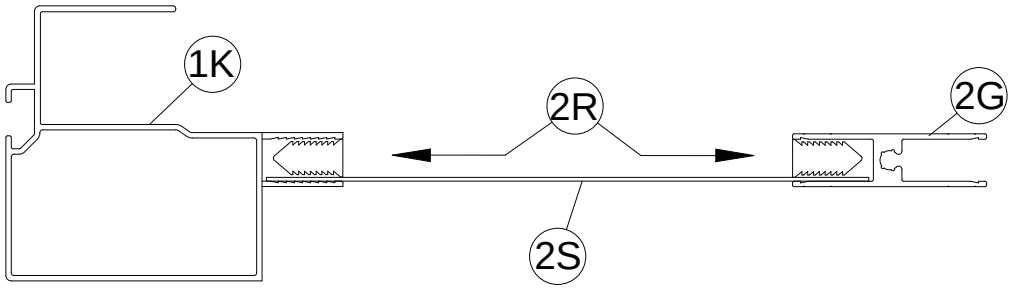

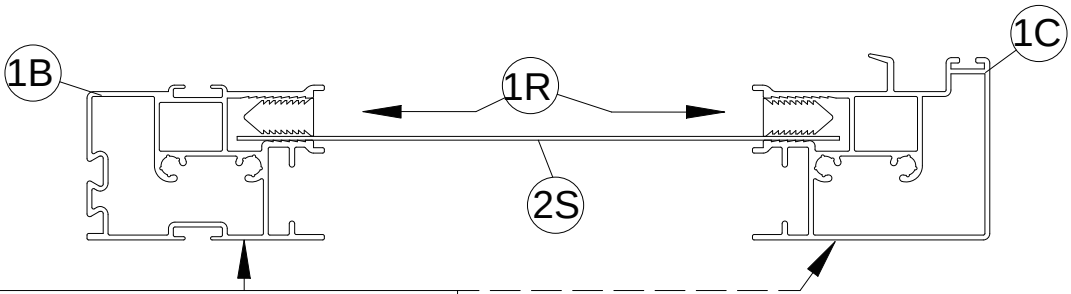


For the convenience of following assembly, please attach the letter sticker AB in a prominent position on the front.

Tip:Other components assembled in the same way as AB require corresponding letter stickers after assembly.


<23>

This picture is for subsequent reference

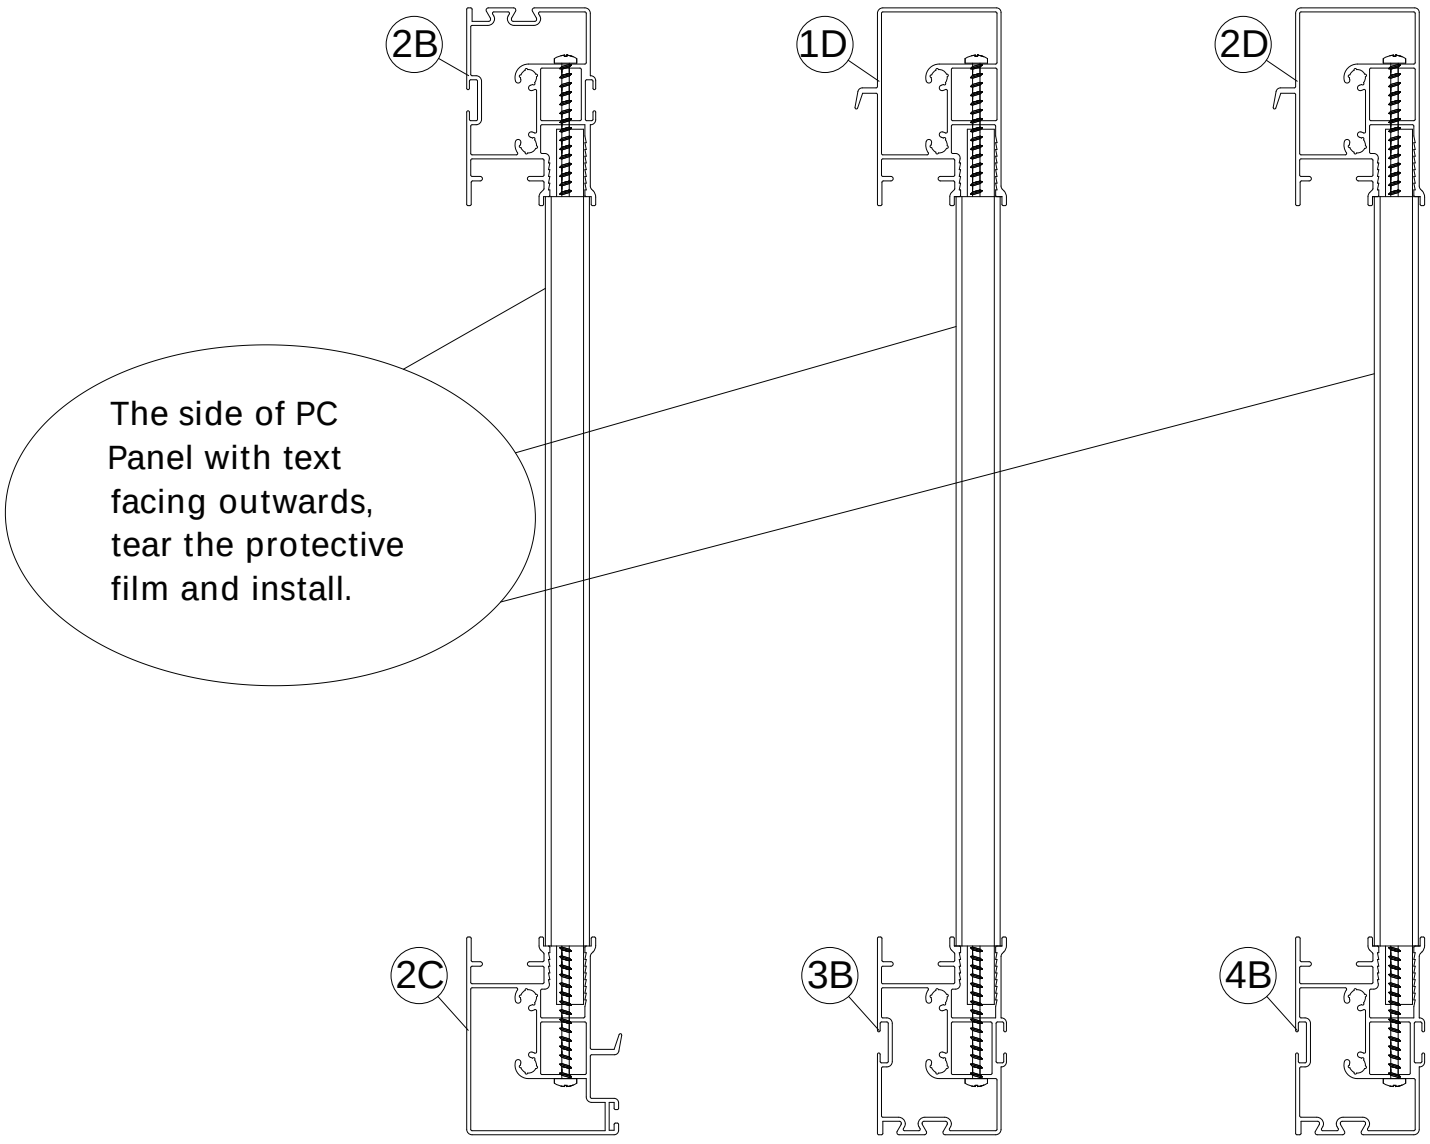


<24>

This picture is for subsequent reference

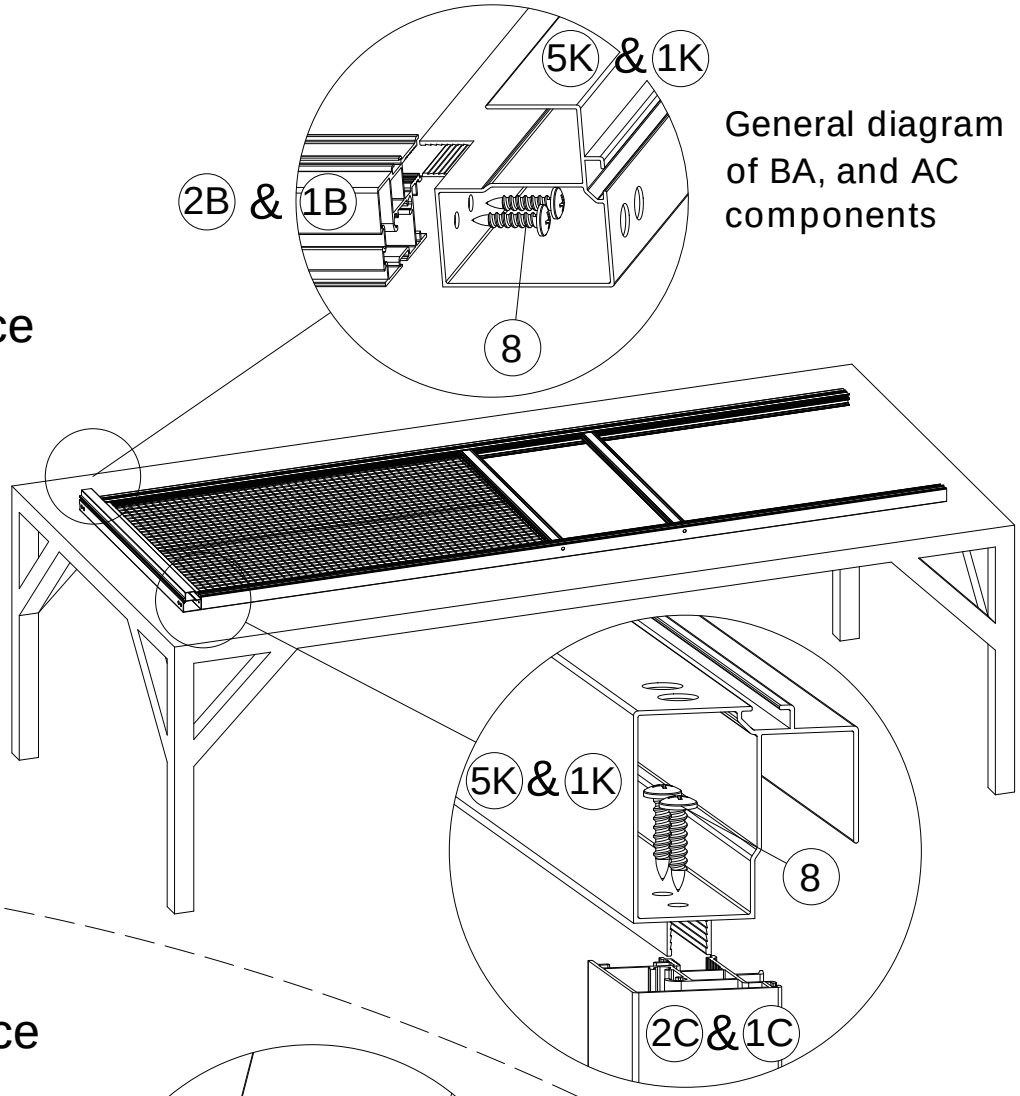

General diagram of BA, and AC components

This picture is for subsequent reference

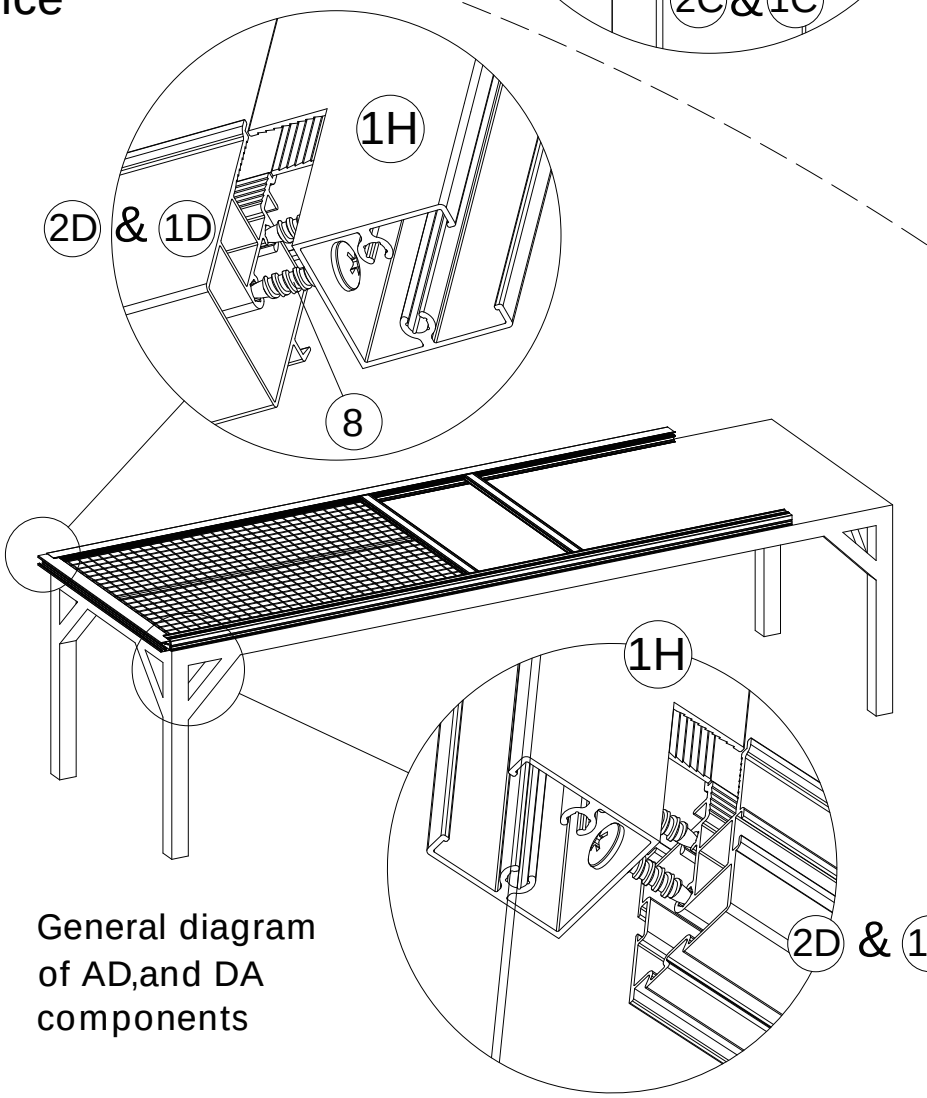


General diagram of AD,and DA components

1K	3x
1R	6x
2R	6x
2G	6x
2S	3x
T2	3x
2B	3x
2C	3x
10	12x
8	12x


<25>

BA 3x

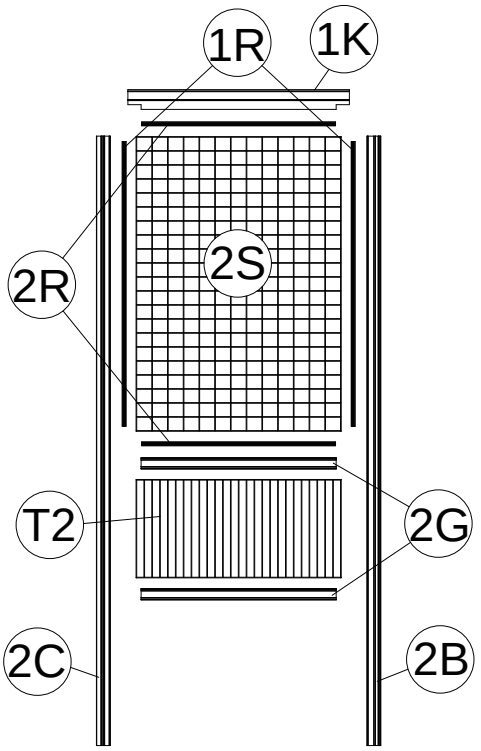


5K	2x
1R	4x
4R	4x
6G	4x
4S	2x
T6	2x
1B	2x
2B	2x
10	8x
8	8x

AC 2x

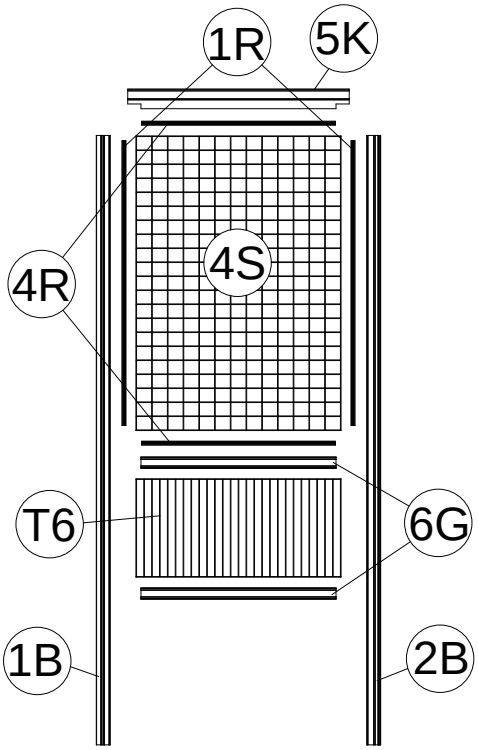


1H	3x
1R	6x
2R	6x
2G	6x
2S	3x
T2	3x
3B	3x
1D	3x
10	12x
8	12x

AD 3x

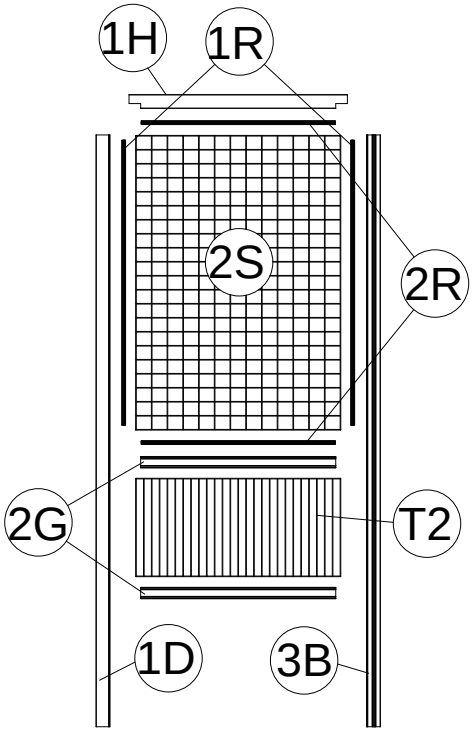


1H	3x
1R	6x
2R	6x
2G	6x
2S	3x
T2	3x
4B	3x
2D	3x
10	12x
8	12x

DA 3x

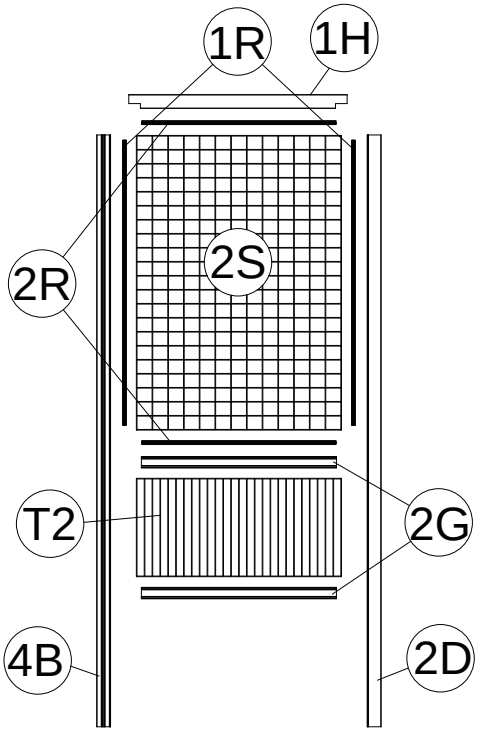


Door frame BA, AC, AD, DA installation follow pages 33 to 38.


Component AB is symmetric BA, AD is symmetric DA.

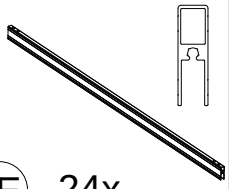


1E 24x

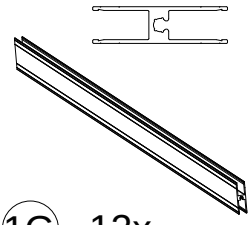


1G 12x

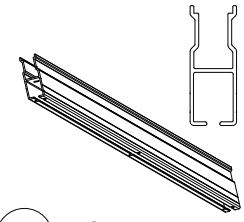

1L 24x




T1 24x




M4x35

9 72x

AE 12x

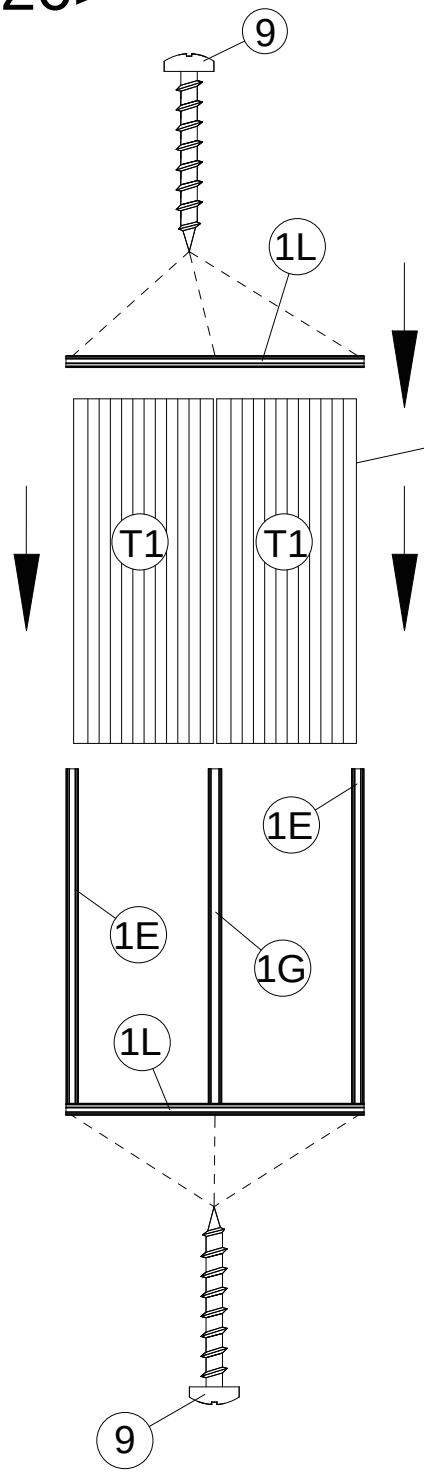


The side of the PC panel with the text facing outward, tear the protective film and install it. After installation, ensure that the front side remains unchanged for the next step.

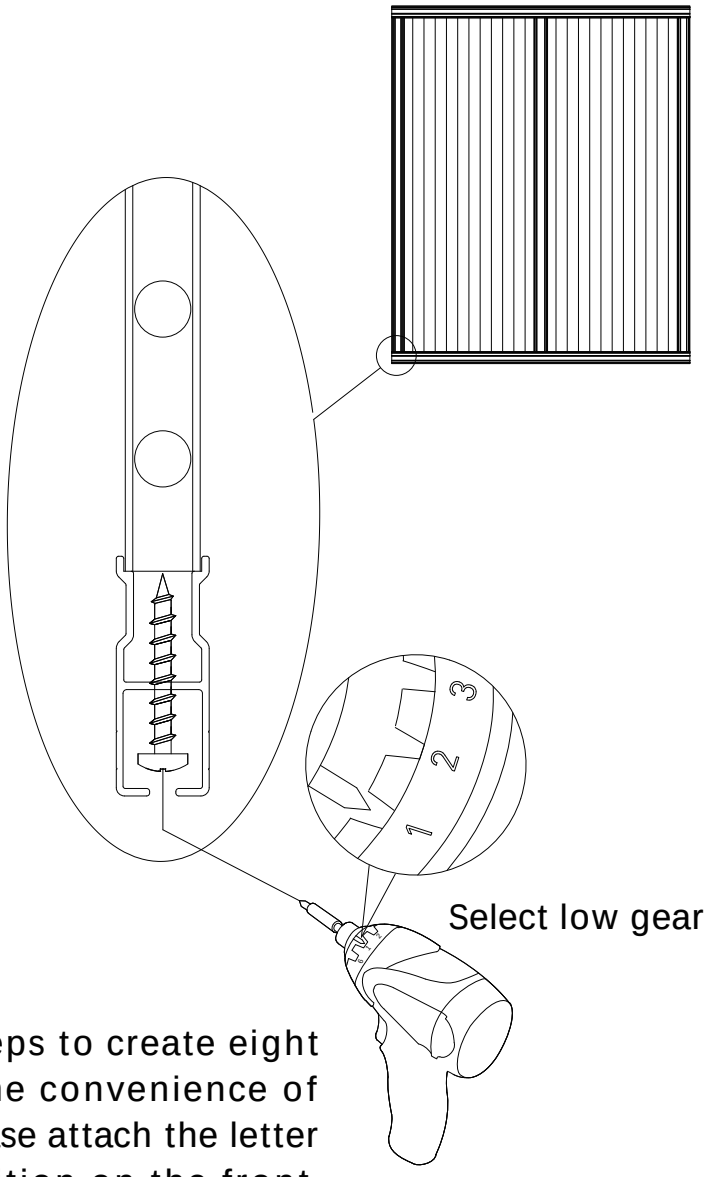


Select low gear


Repeat the previous steps to create eight AF components. For the convenience of following assembly, please attach the letter AF in a prominent position on the front.

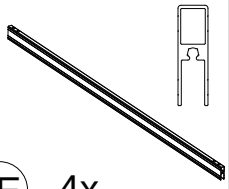


1E 4x

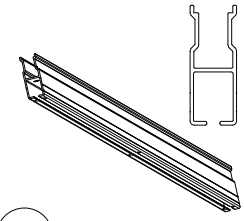

5L 4x




T5 2x




M4x35


9 8x


AF 2x

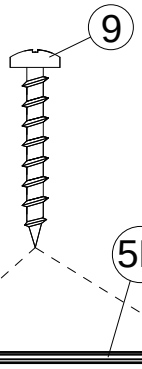


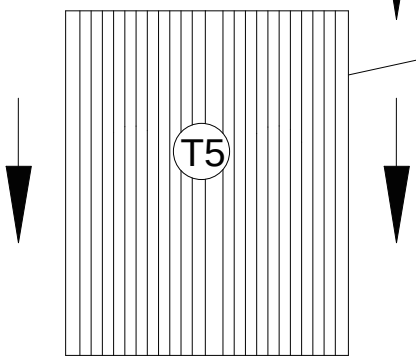


The side of the PC panel with the text facing outward, tear the protective film and install it. After installation, ensure that the front side remains unchanged for the next step.

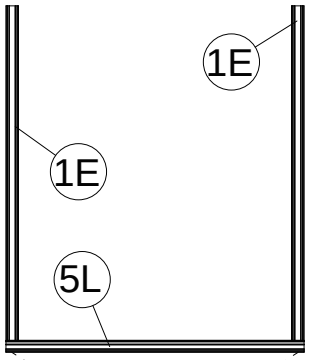

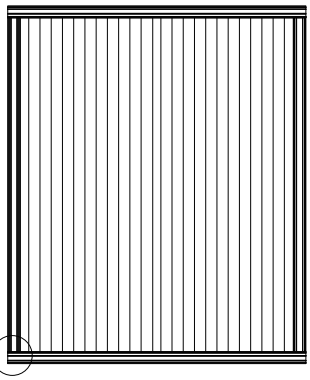

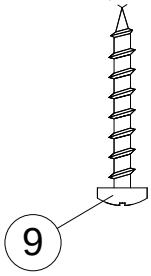


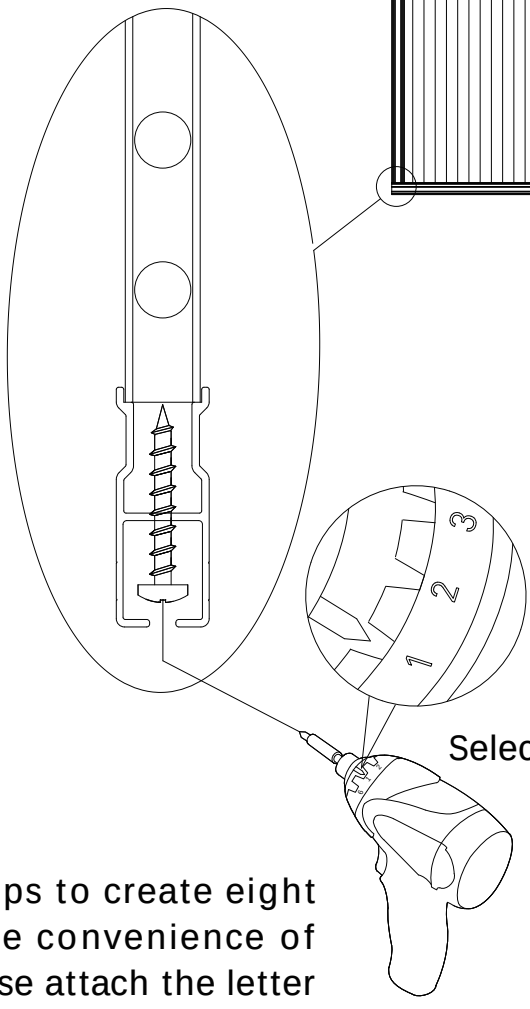

Select low gear

Repeat the previous steps to create eight AF components. For the convenience of following assembly, please attach the letter AF in a prominent position on the front.


AB 2x




D1 8x




D2 16x

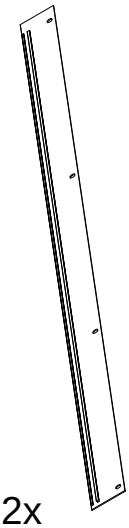


1A 2x





D3 4x

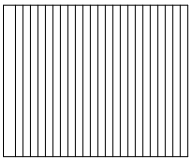


T3 2x

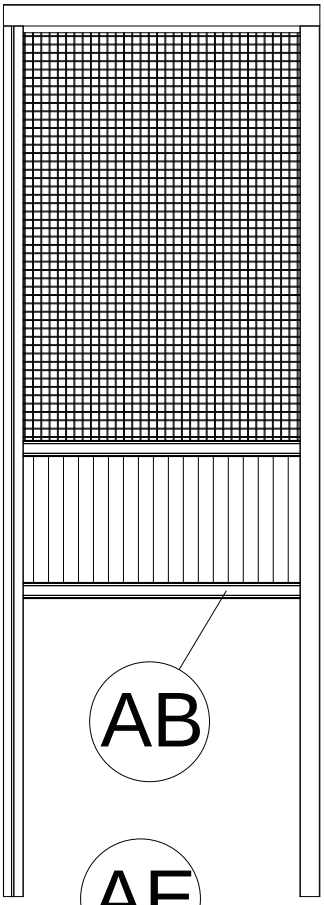


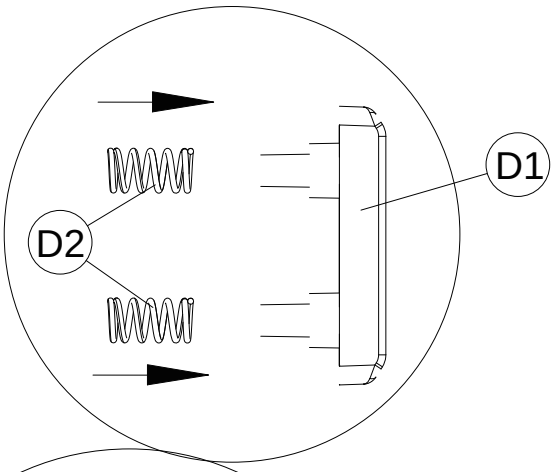

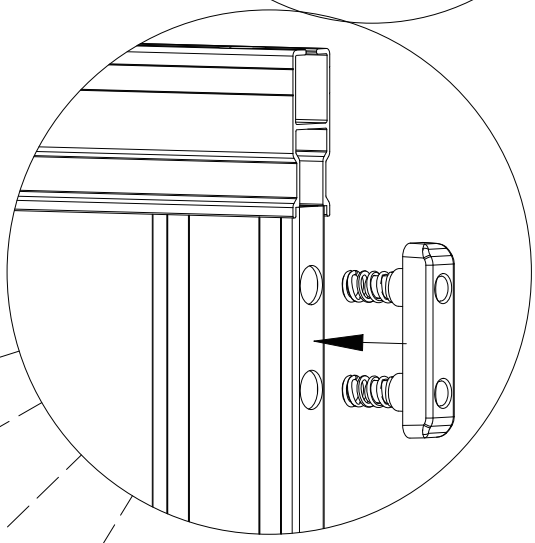



AE

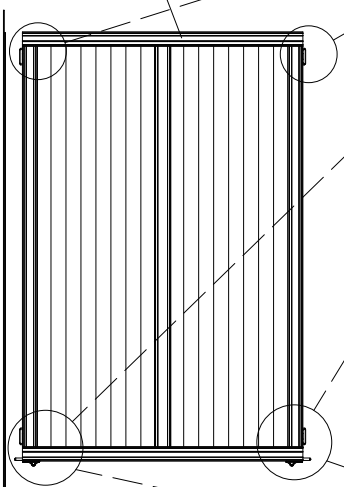

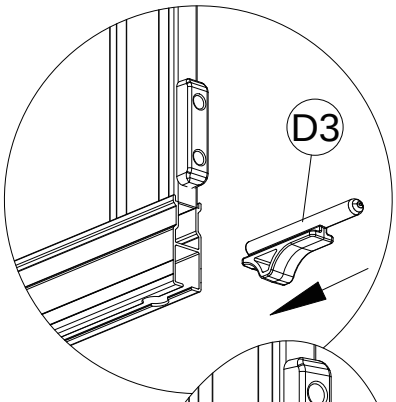


1A

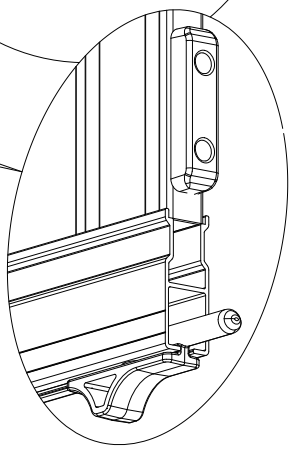

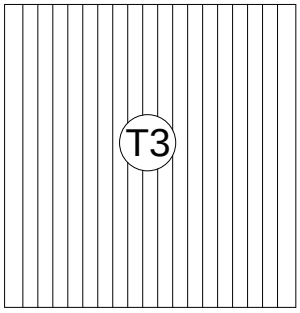


T3

The side of PC Panel with text facing outwards, tear the protective film and install.

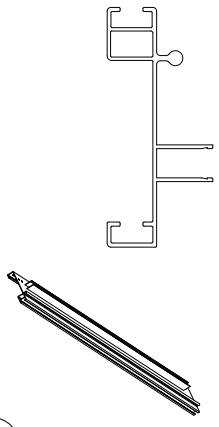

1P 2x




M4x20

8 8x

<29>


AB 2x

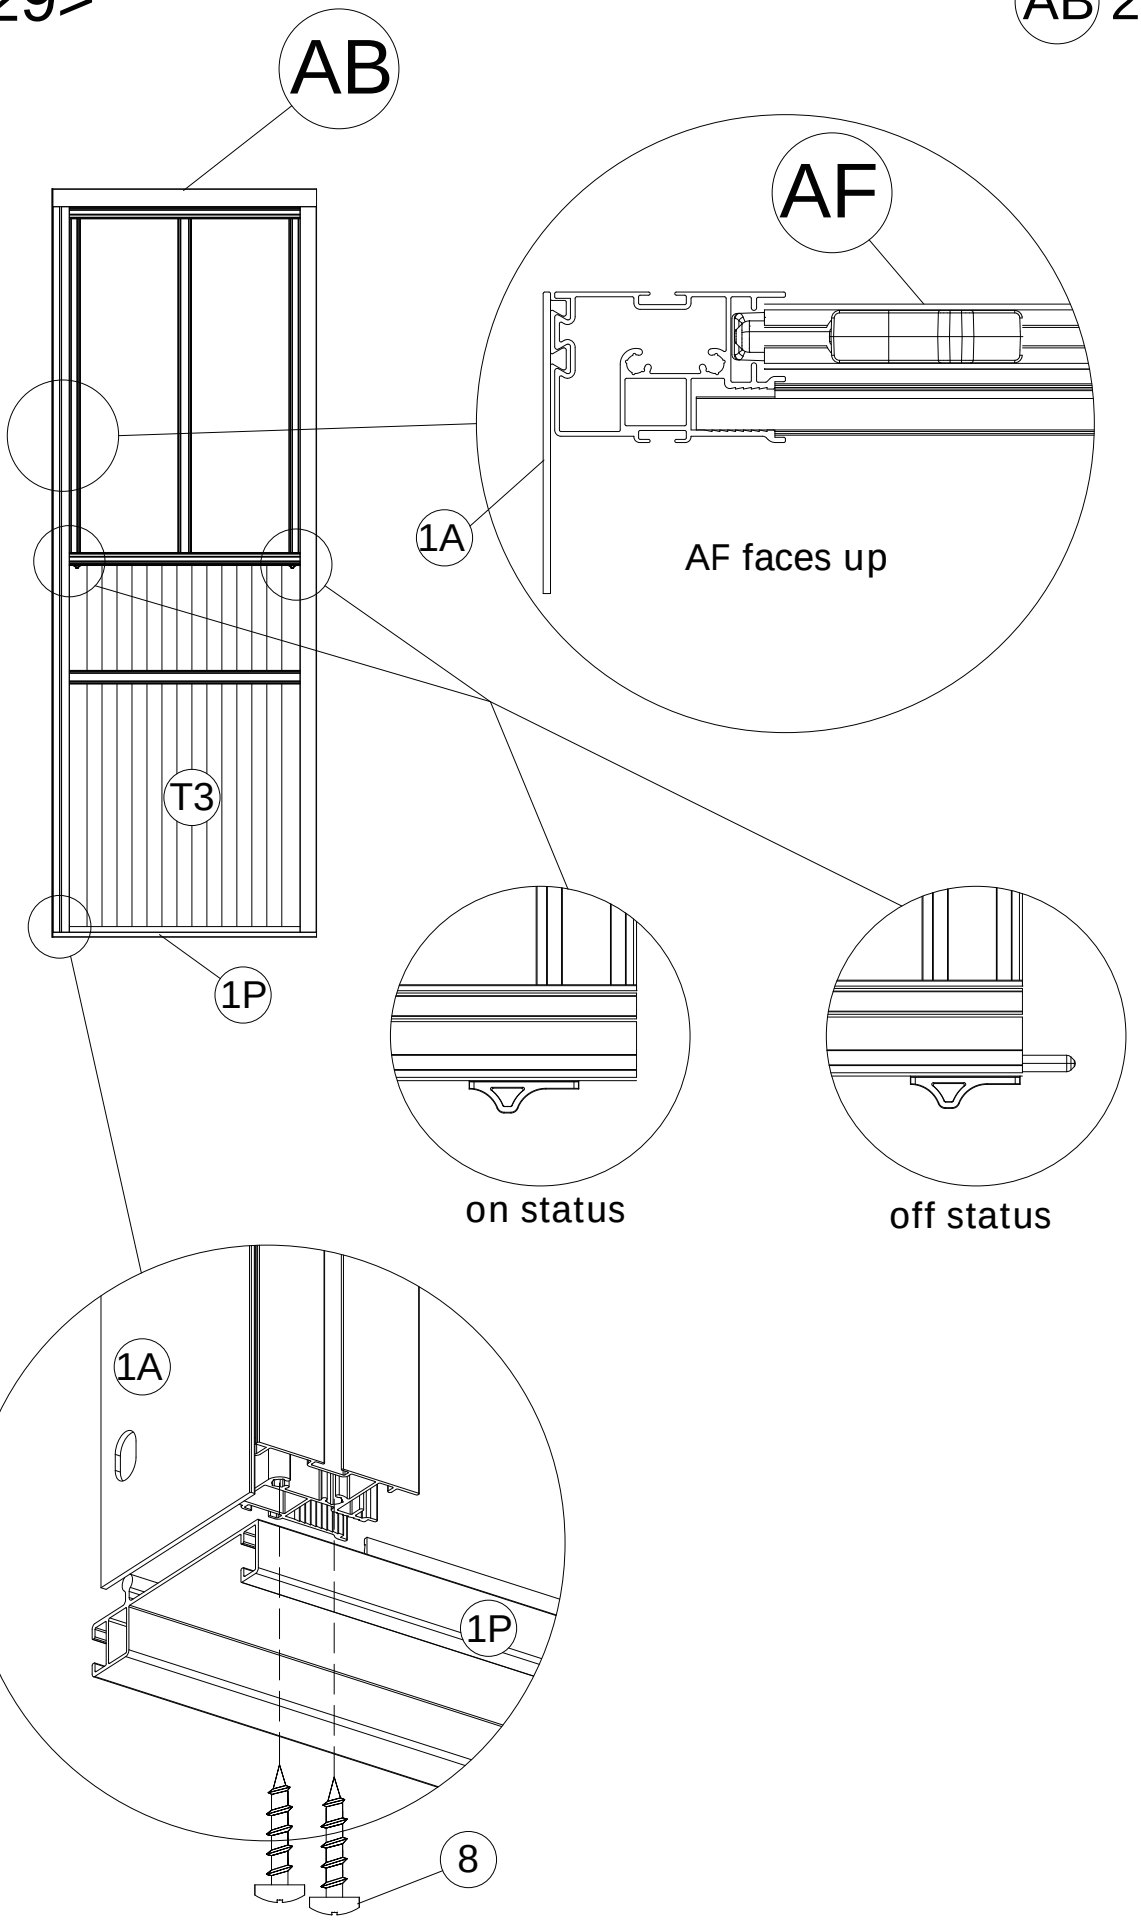

<30>


Door frame BA
installation follow
pages 41 to 43.

T3	2x
1P	2x
2A	2x
D1	8x
D2	16x
D3	4x
8	8x

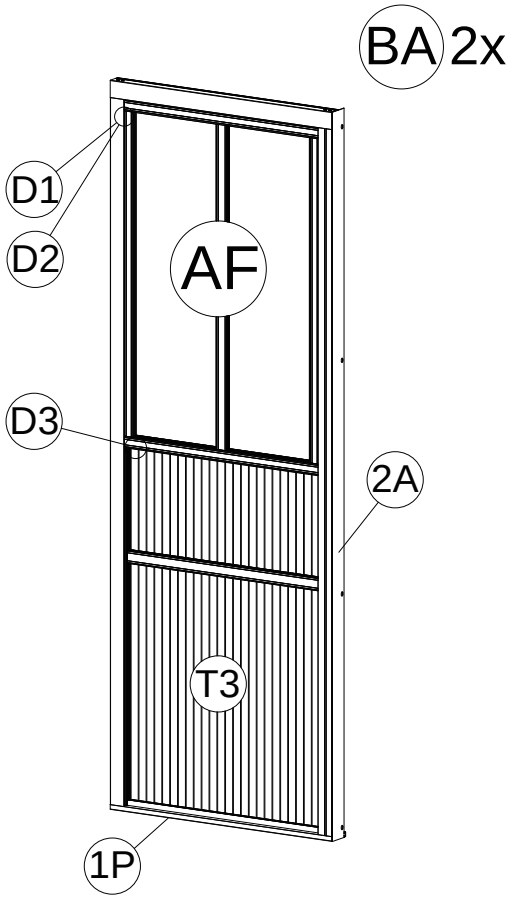


Component AB is symmetric BA.


<31>

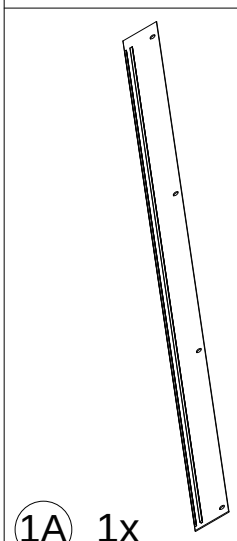


1A 1x

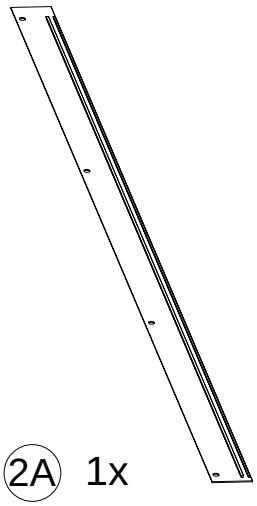

2A 1x

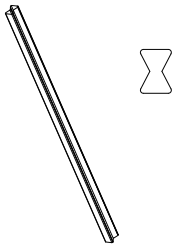

1Q 2x




15 2x




M5x6

16 8x

44

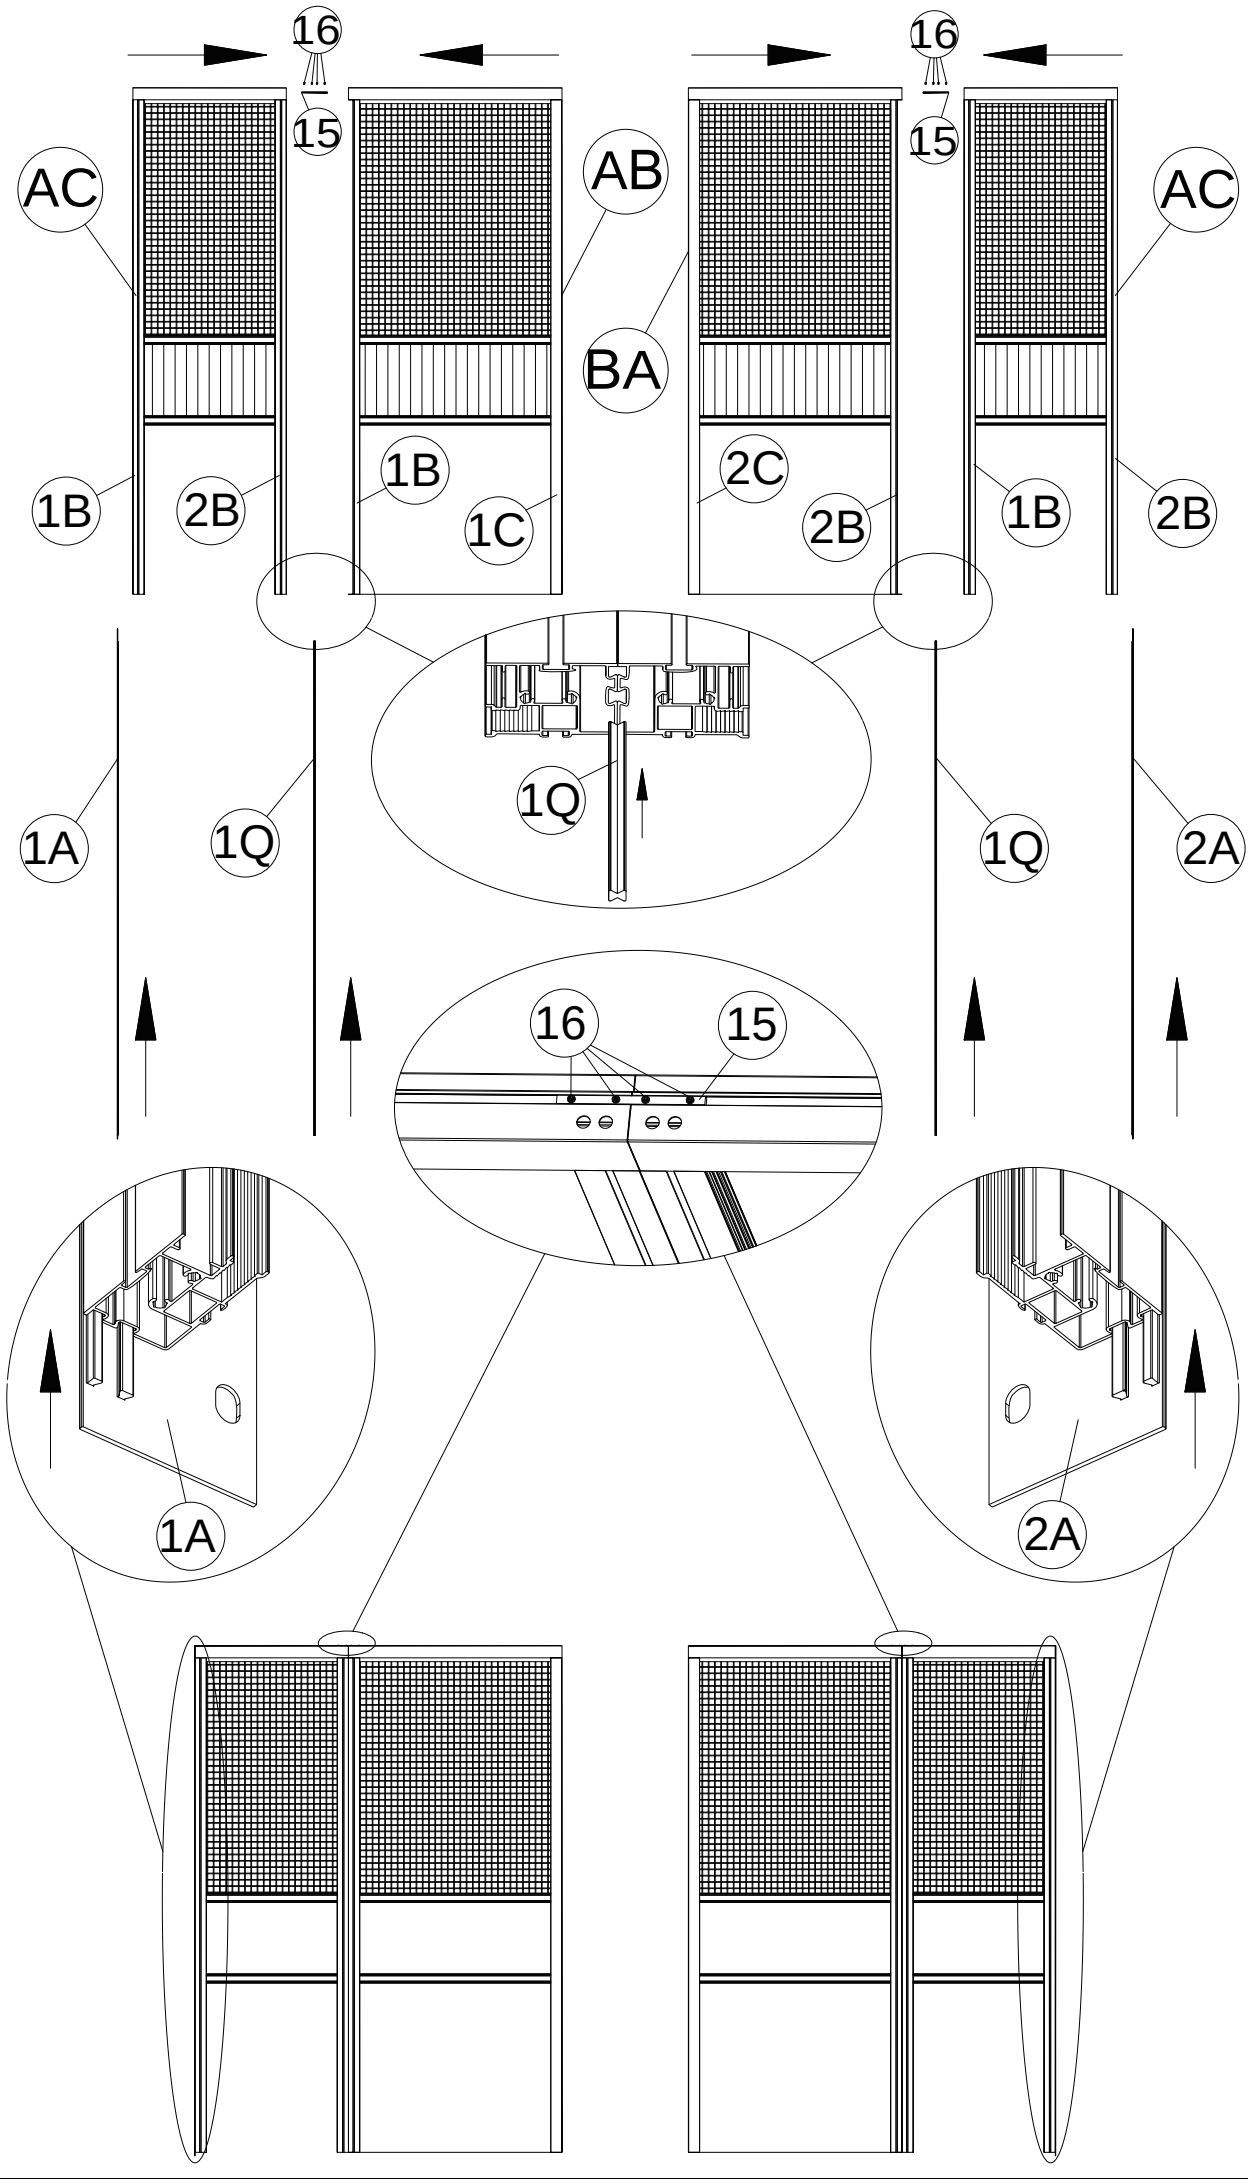




15 4x




M5x6


16 16x




T7 2x

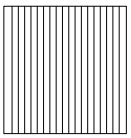


T3 2x

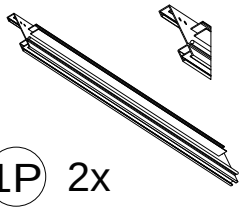

1P 2x

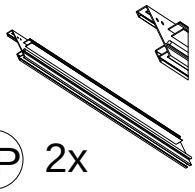


5P 2x



D1 16x




D2 32x




D3 8x

45

<32>

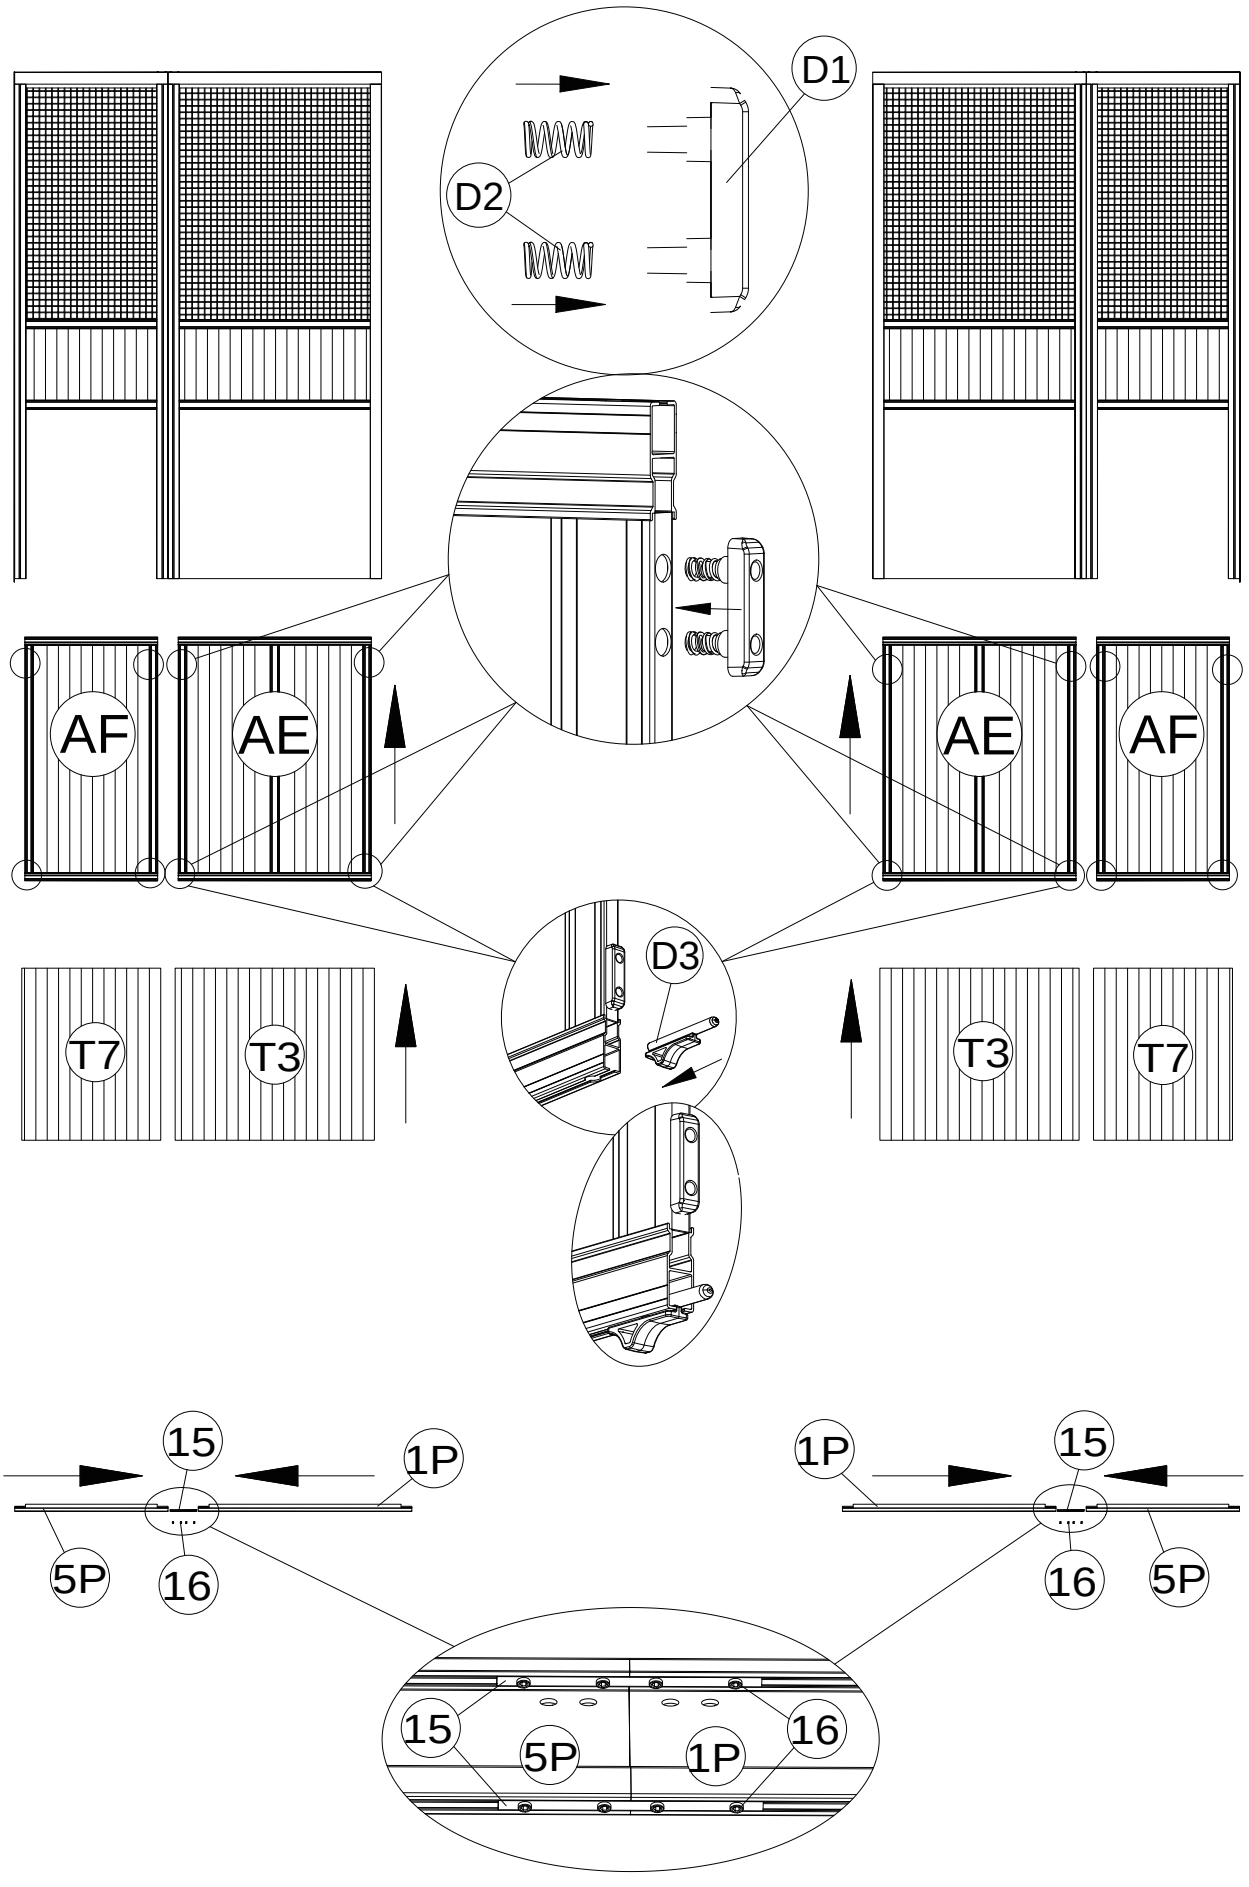






M4x20

8 16x

<33>

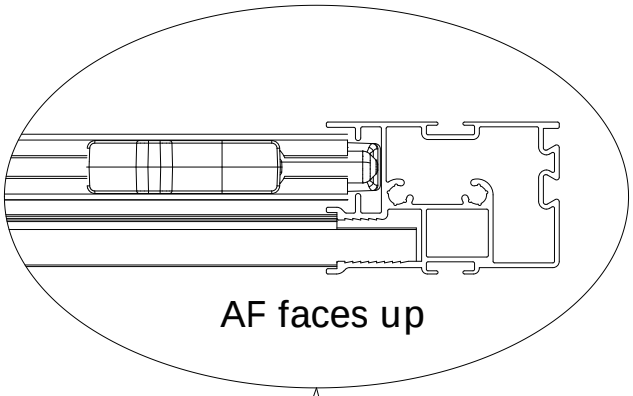

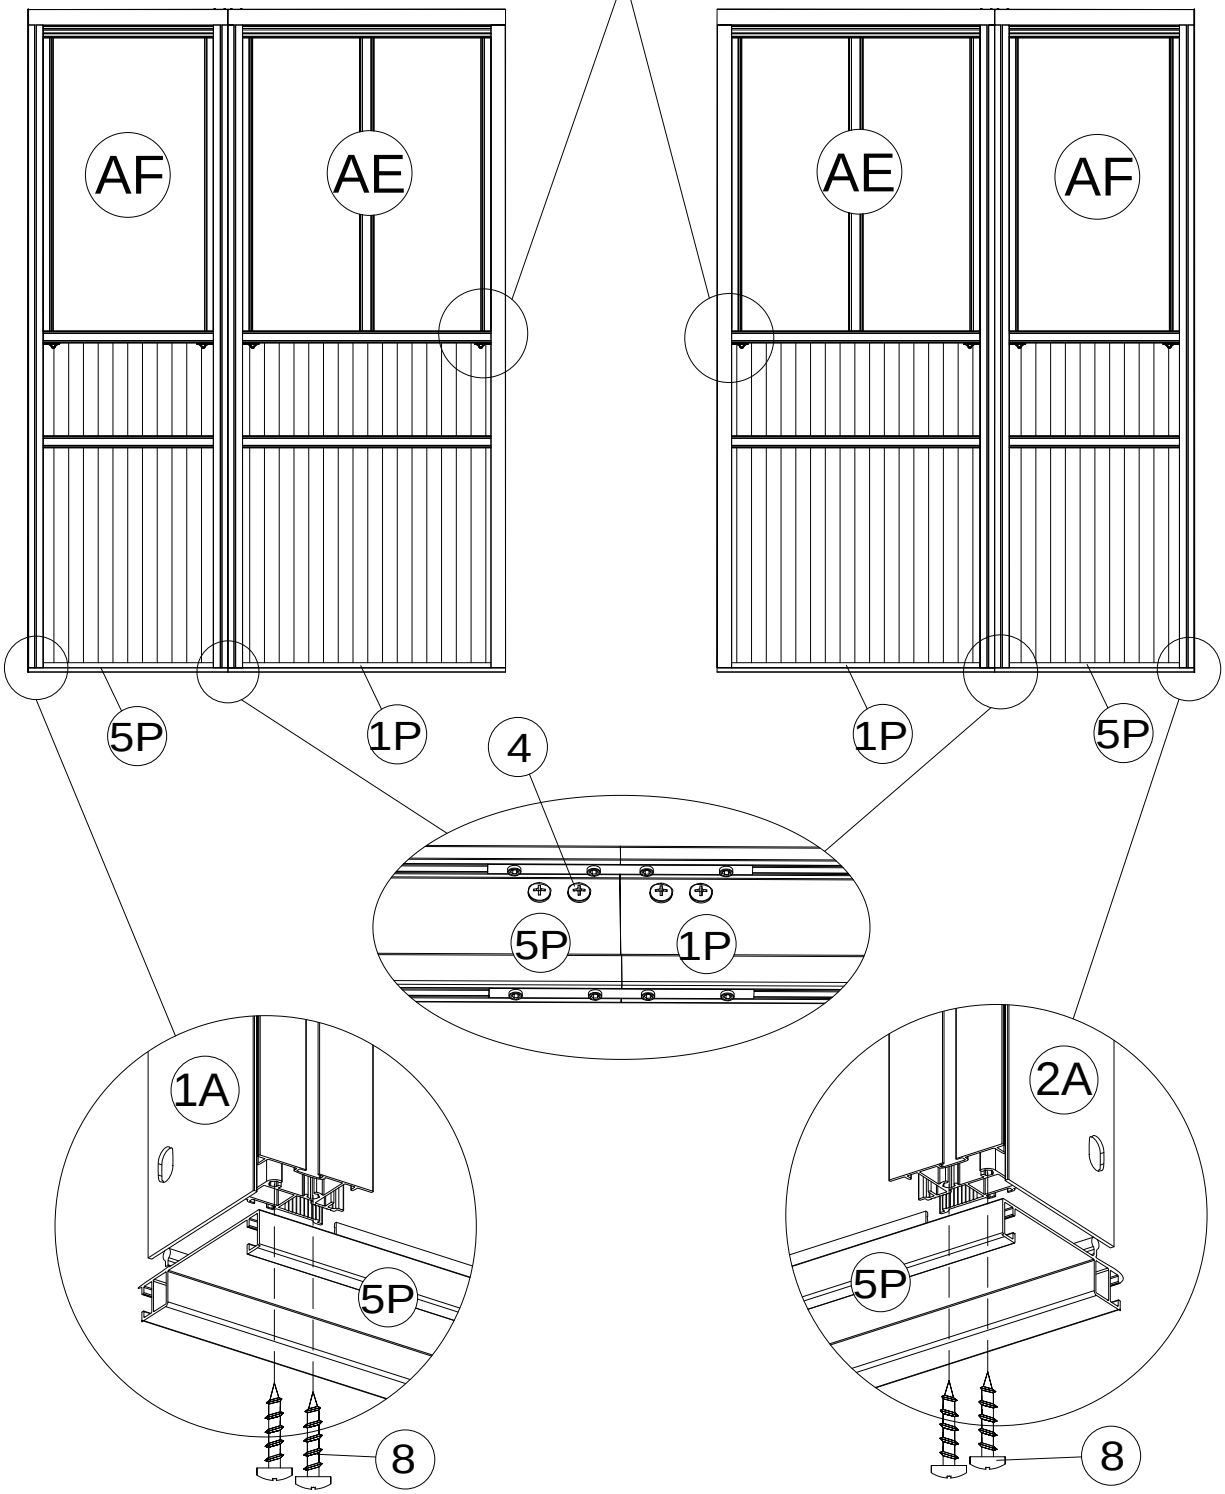





D1 12x




D2 24x

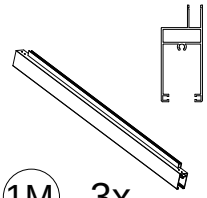

1M 3x




D3 6x

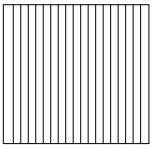


T4 3x


AD 3x


AD

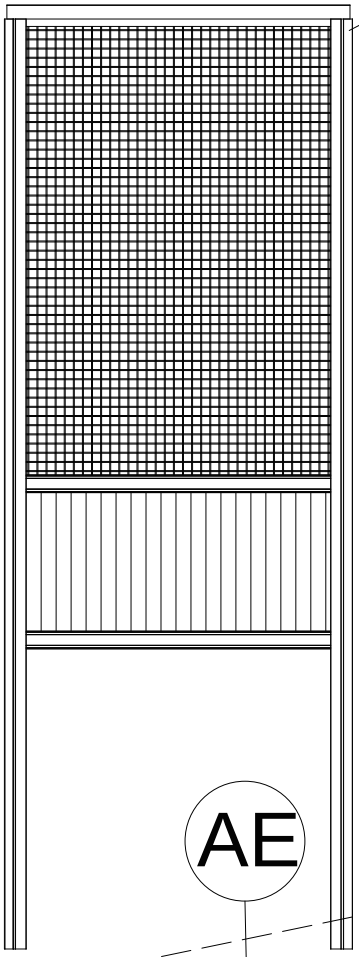


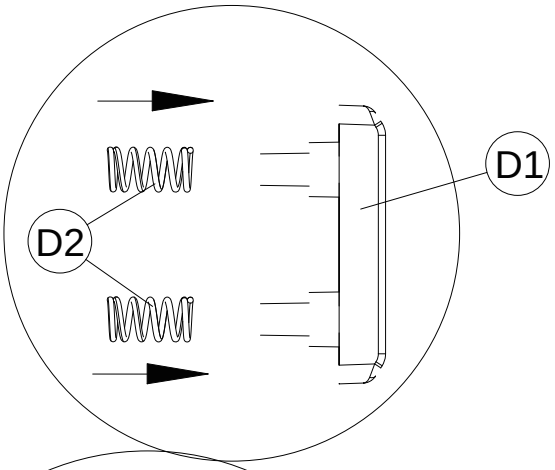



AE

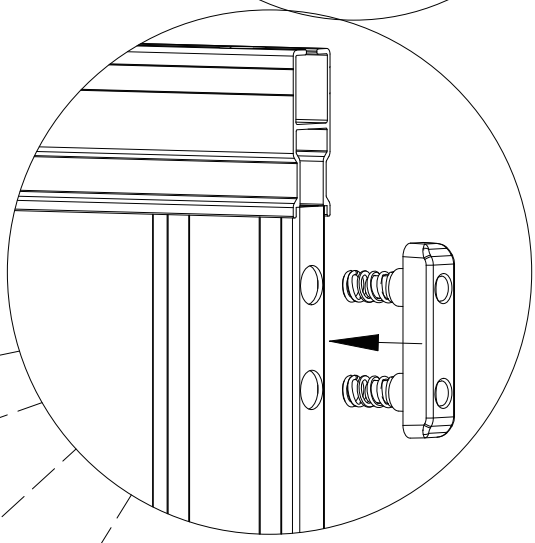

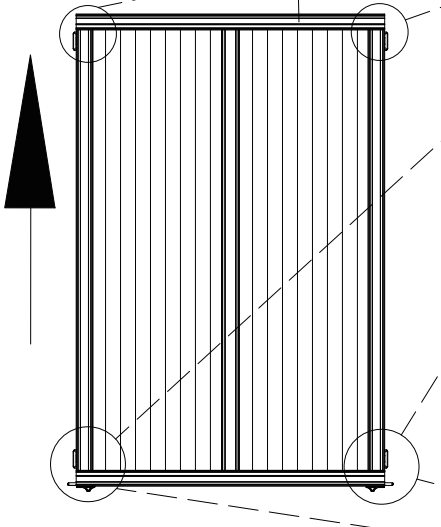

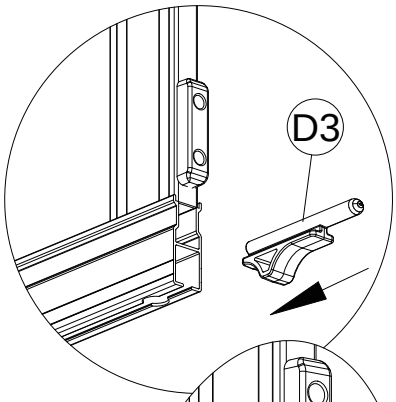

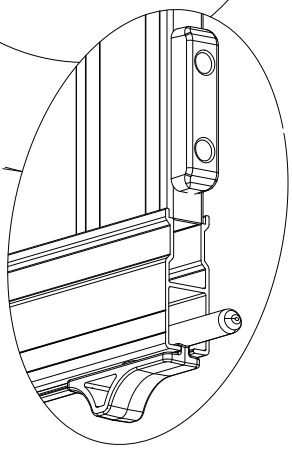

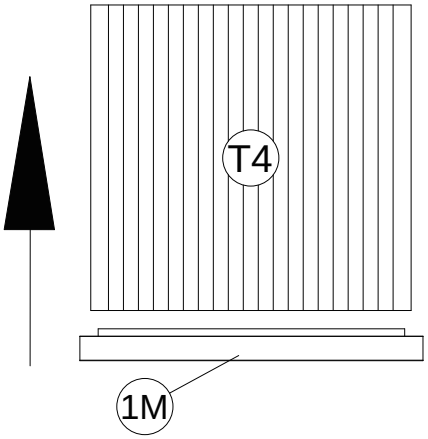

T4


The side of PC Panel with text facing outwards, tear the protective film and install.


M4x20

8 12x


<35>

AD 3x

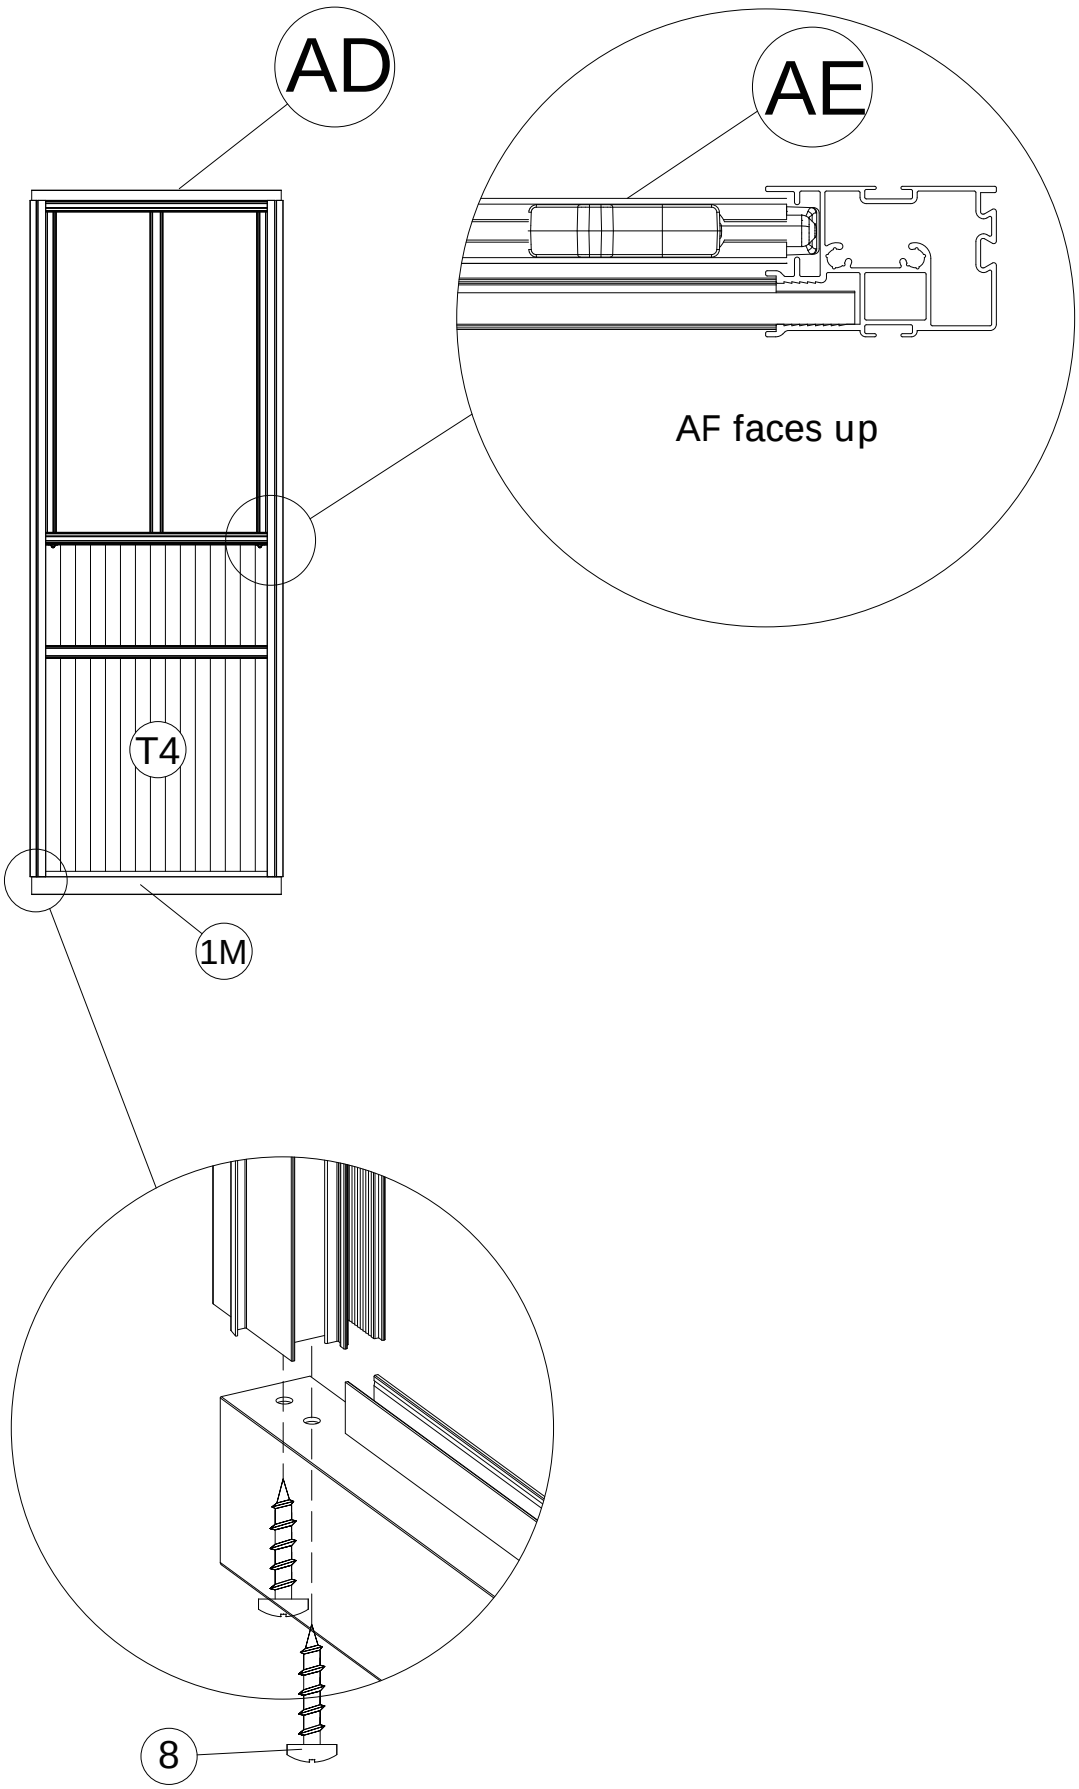





D5 6x



D4 6x




4 6x



M4x20


8 12x





M4x35


9 6x

AD 3x

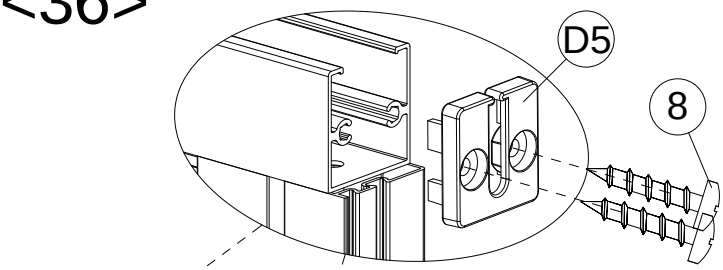

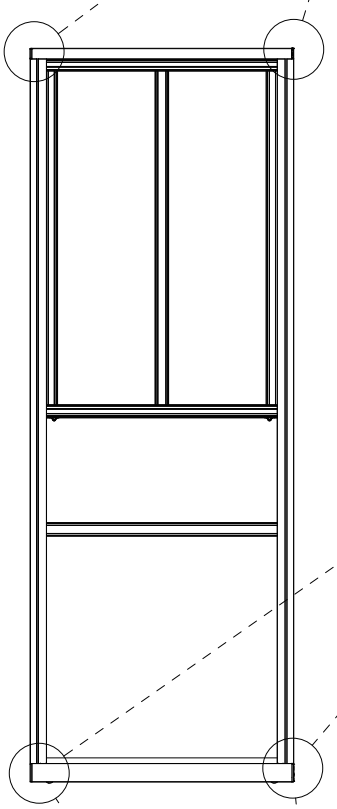

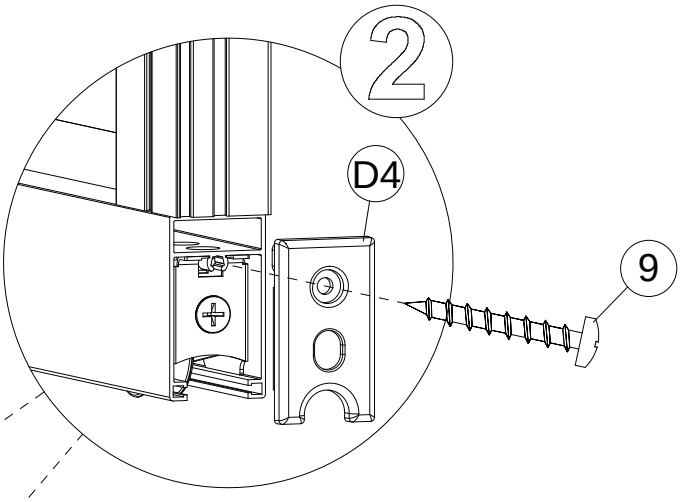

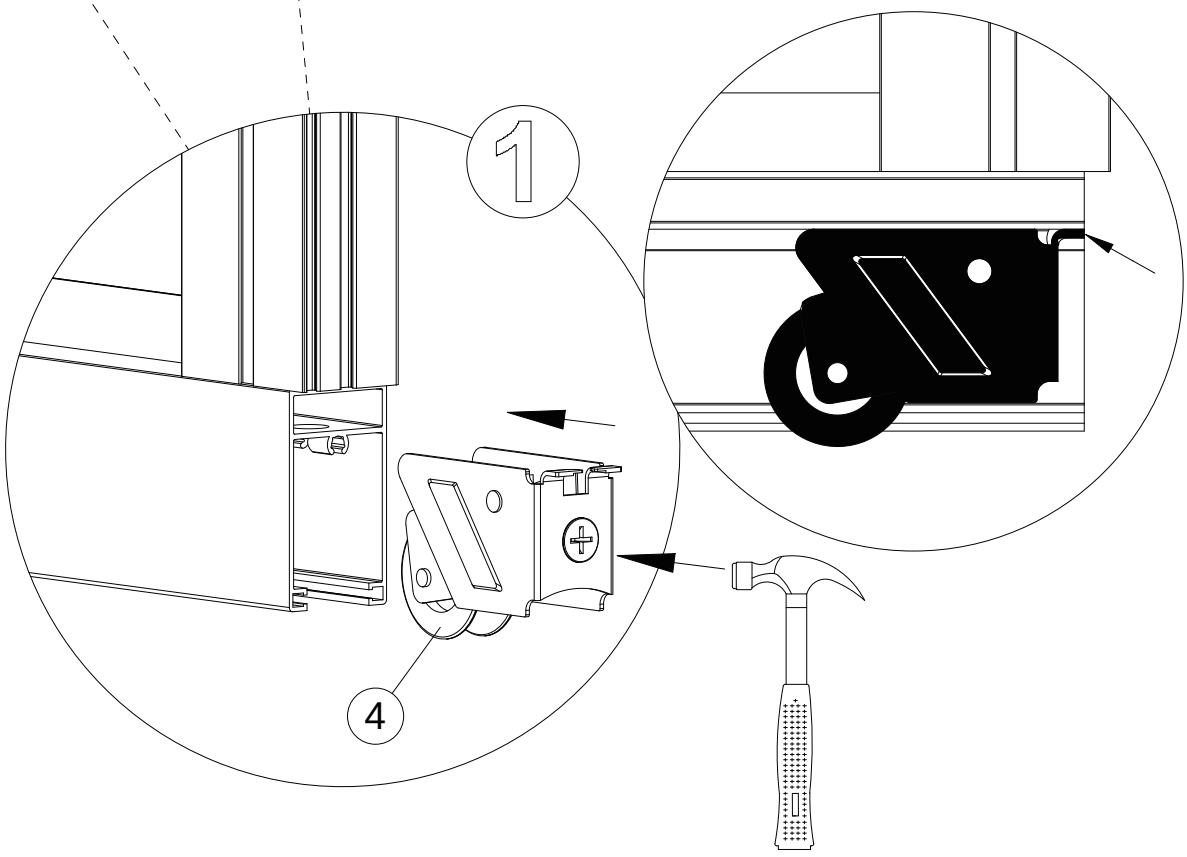


Tap gently so that the pulley is flush with the profile


<37>

Door frame DA
installation follow
pages 47 to 50.


1M	3x
T4	3x
D1	12x
D2	24x
D3	6x
D4	6x
D5	6x
4	6x
8	24x
9	6x

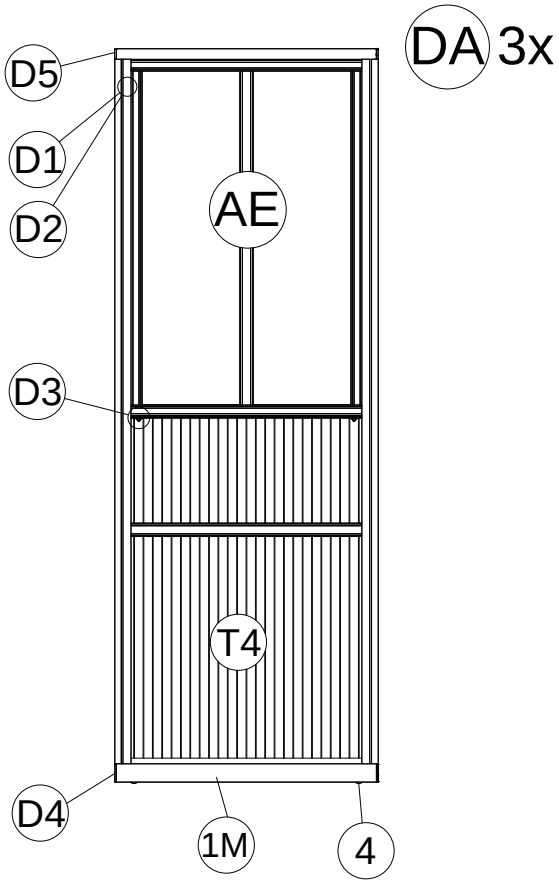

Component AD is symmetric DA.



5 2x

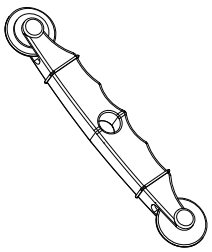


24 1x


<38>

Before installation, wet the rubber strips "⑤" with water to make it easier to stick into the slot.


AD 2x

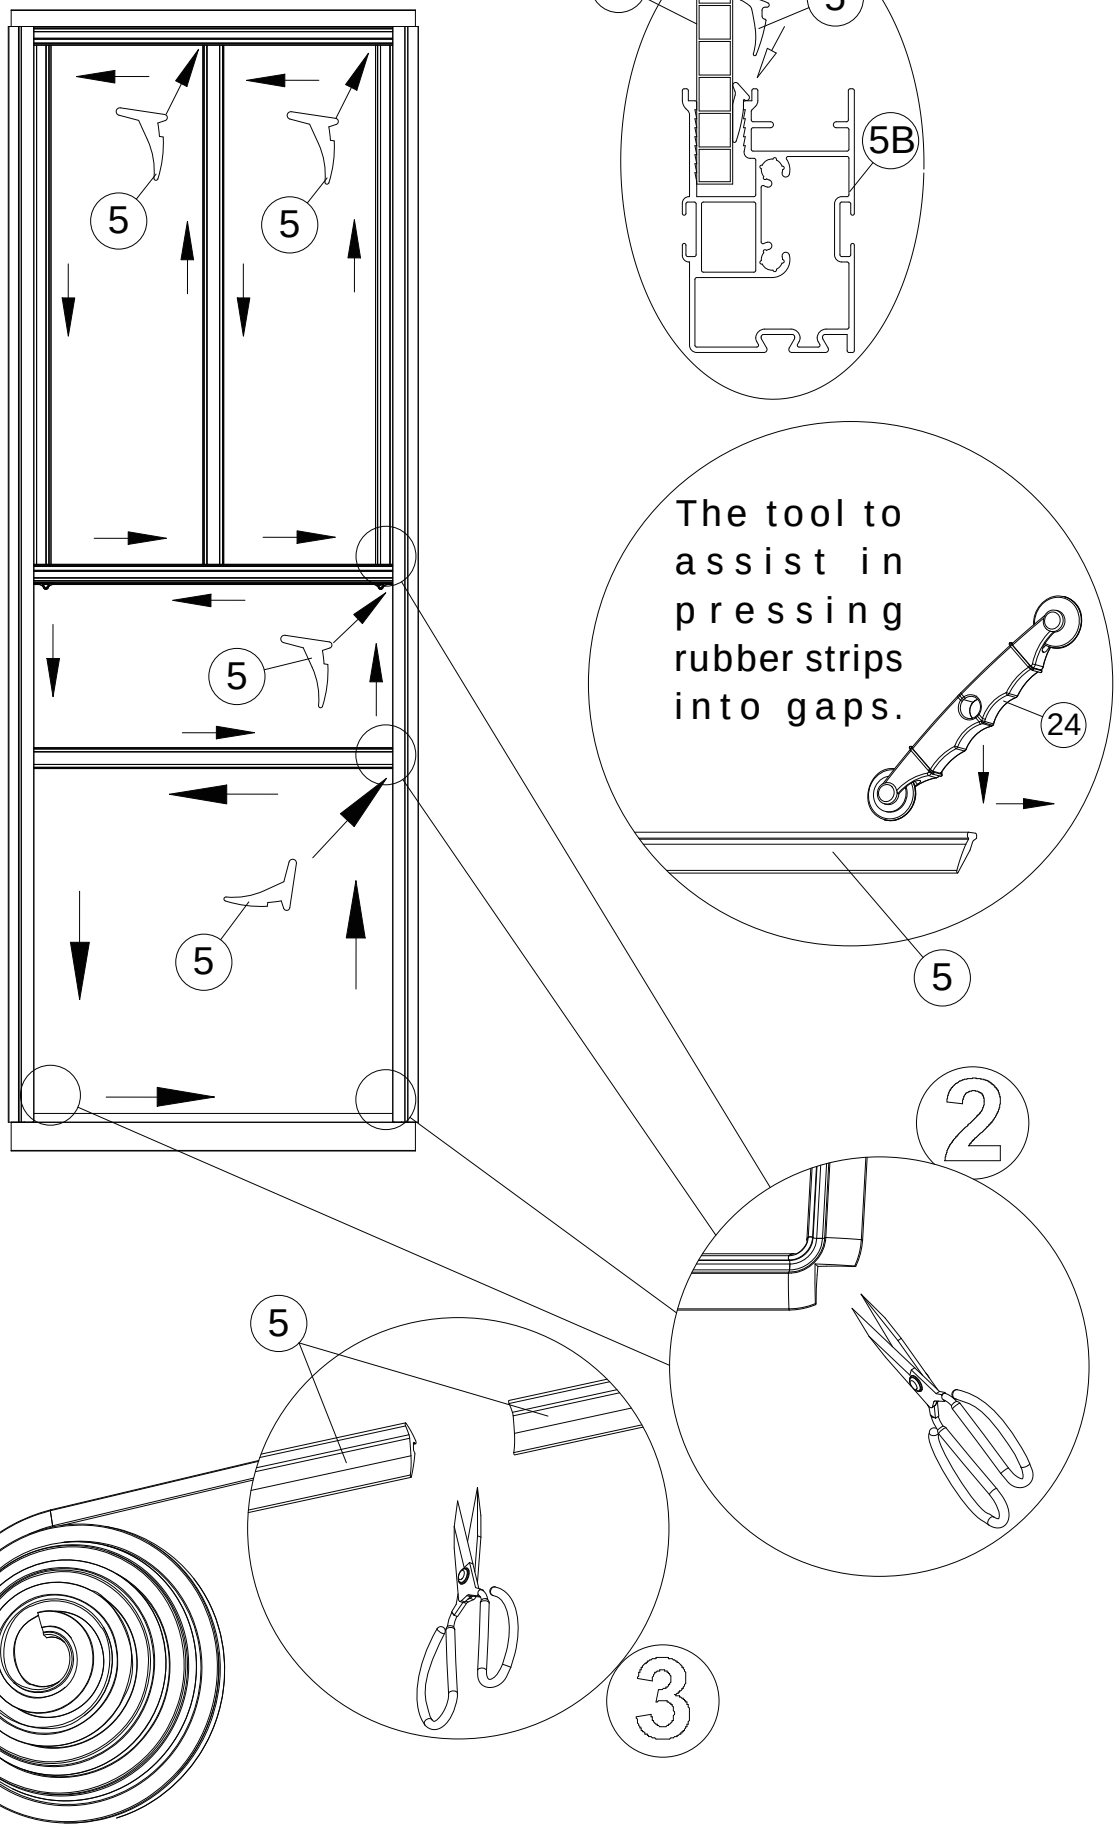

All door frames, AB, BA, AC, AD, DA, AE, AF, follow this method

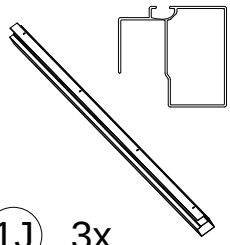


1J 3x



6.2*11*15

3 12x




M6

6 12x



M6x15

11 12x

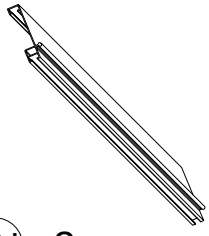

1N 3x




15 18x



M5*6


16 72x

52

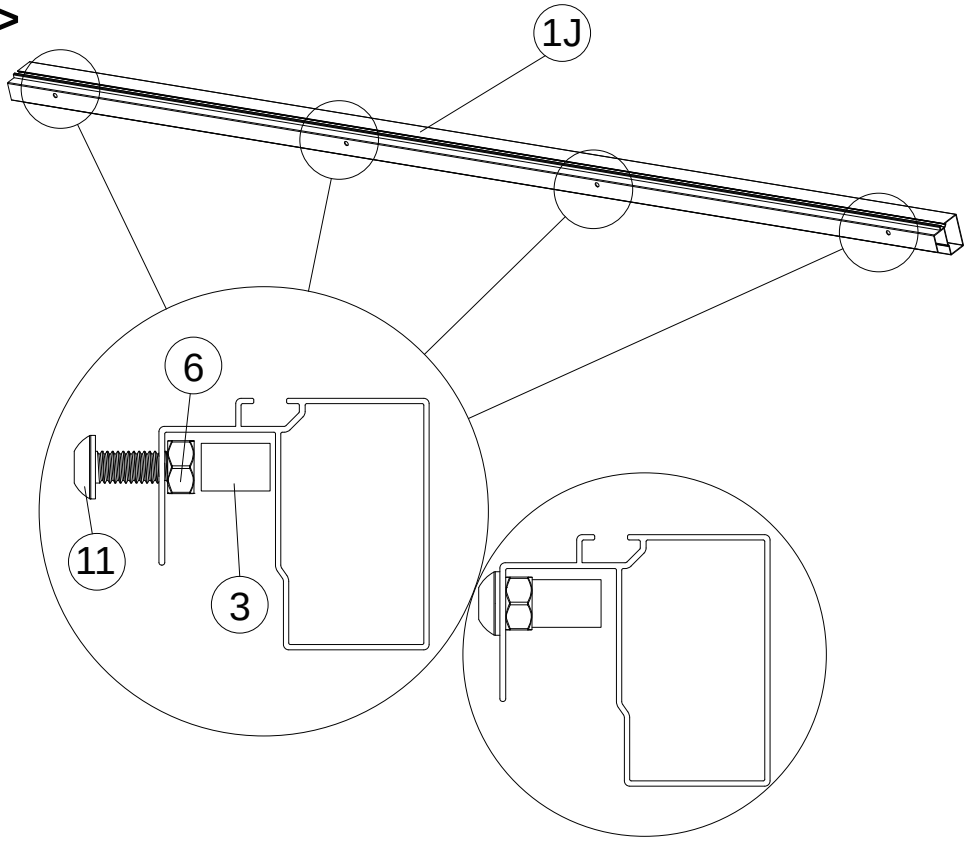

x3

x3

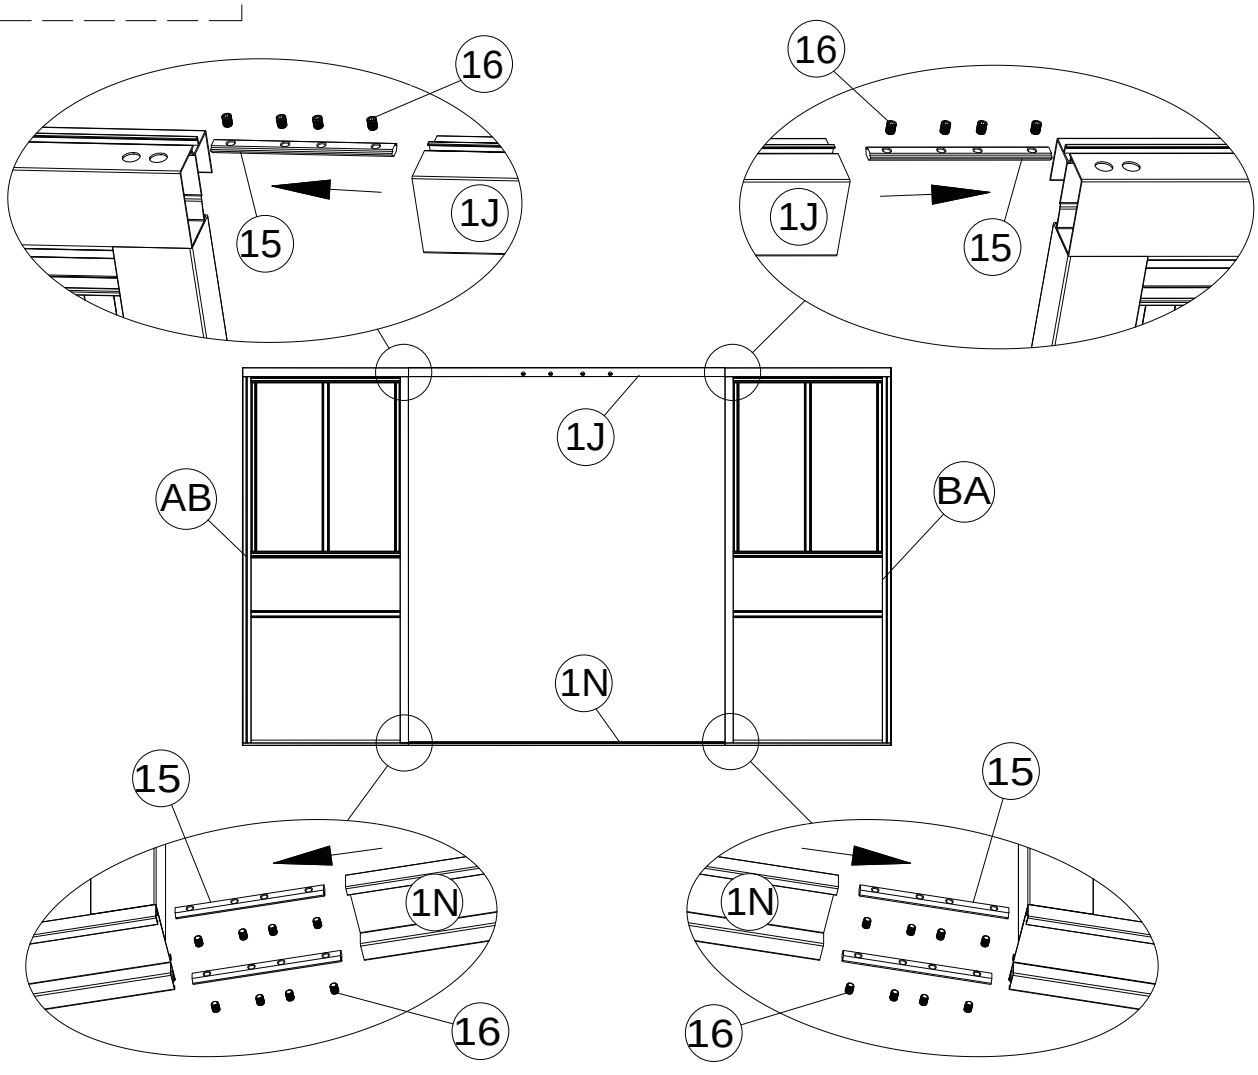






M6x15

11 16x


<40>

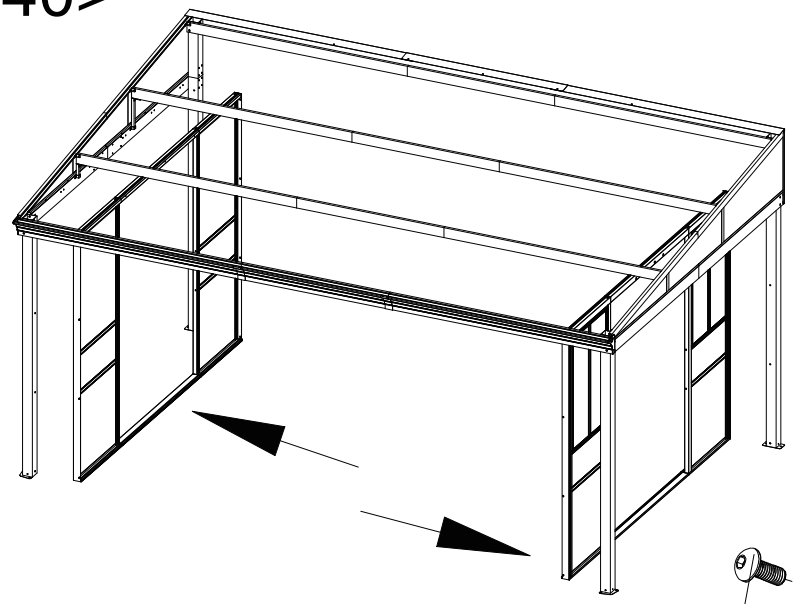


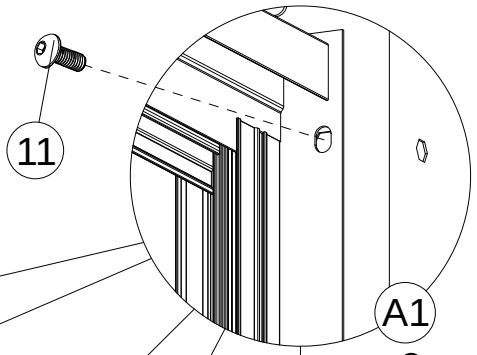


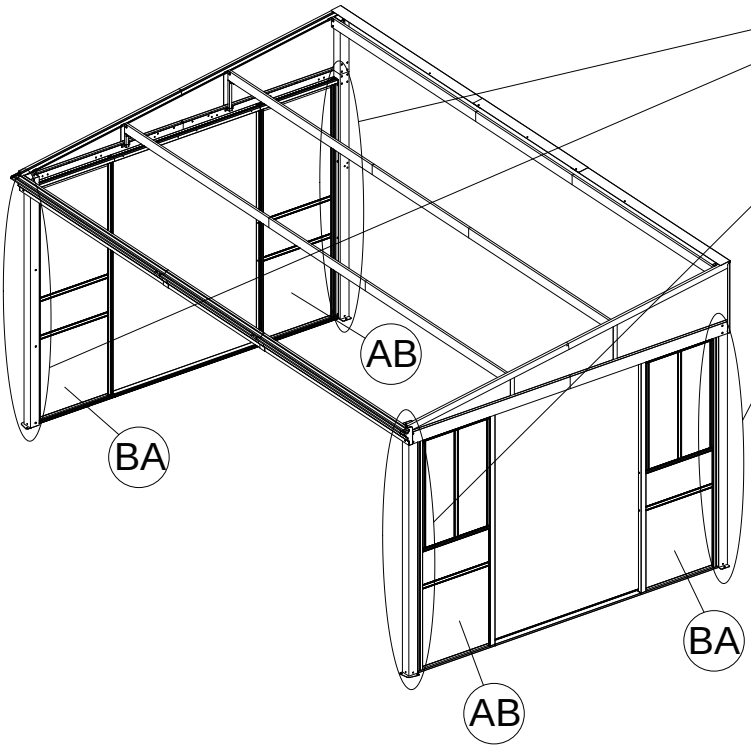

A1
&
A1-1
&
A2
&
A2-1

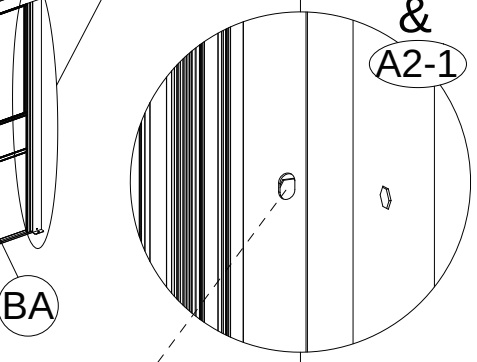




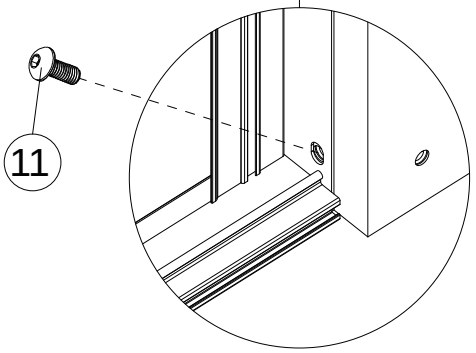



M6x15

11 24x



Q2 12x



M5


17 24x




M5*12

18 24x

<41>

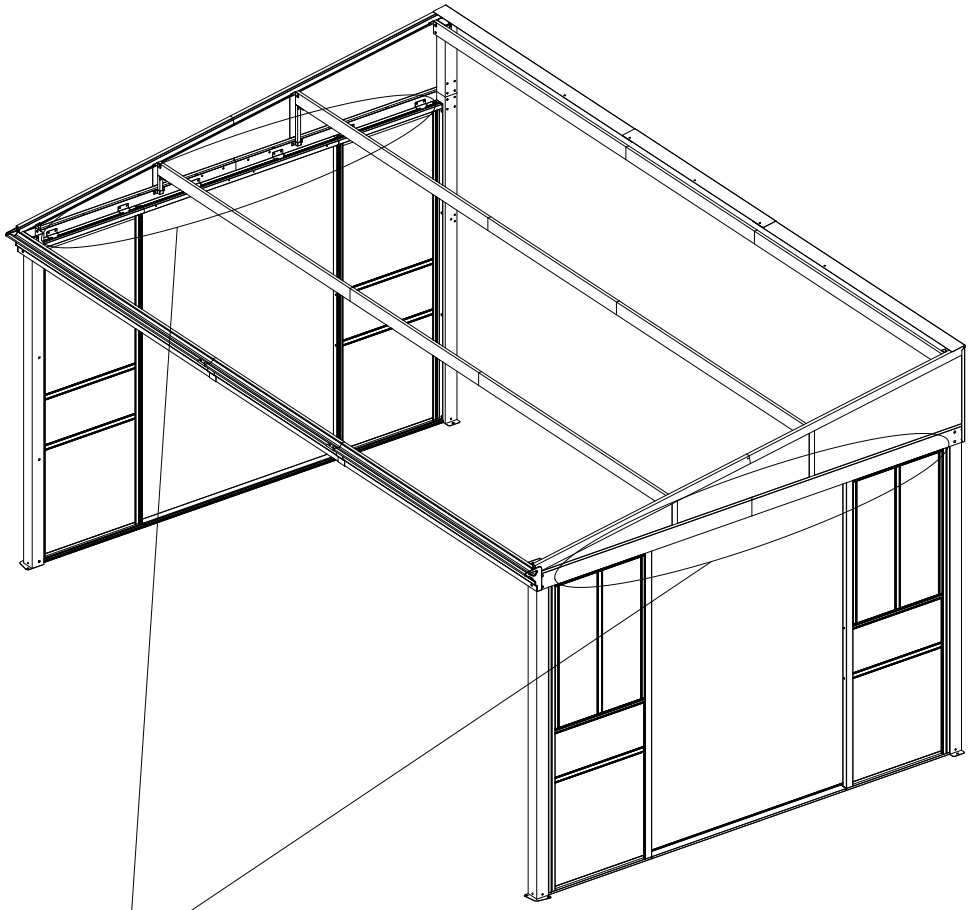

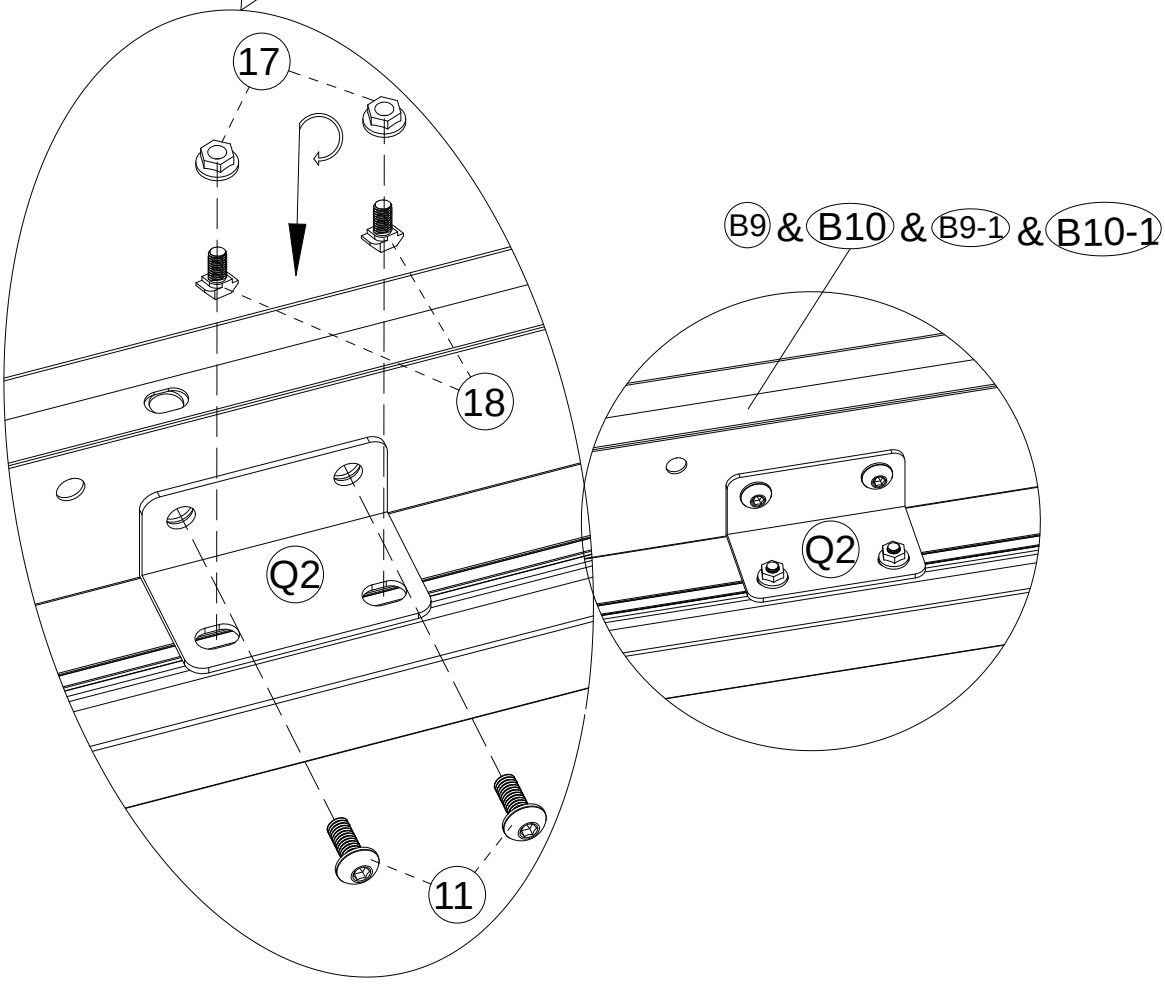




M6x15

11 8x


<42>

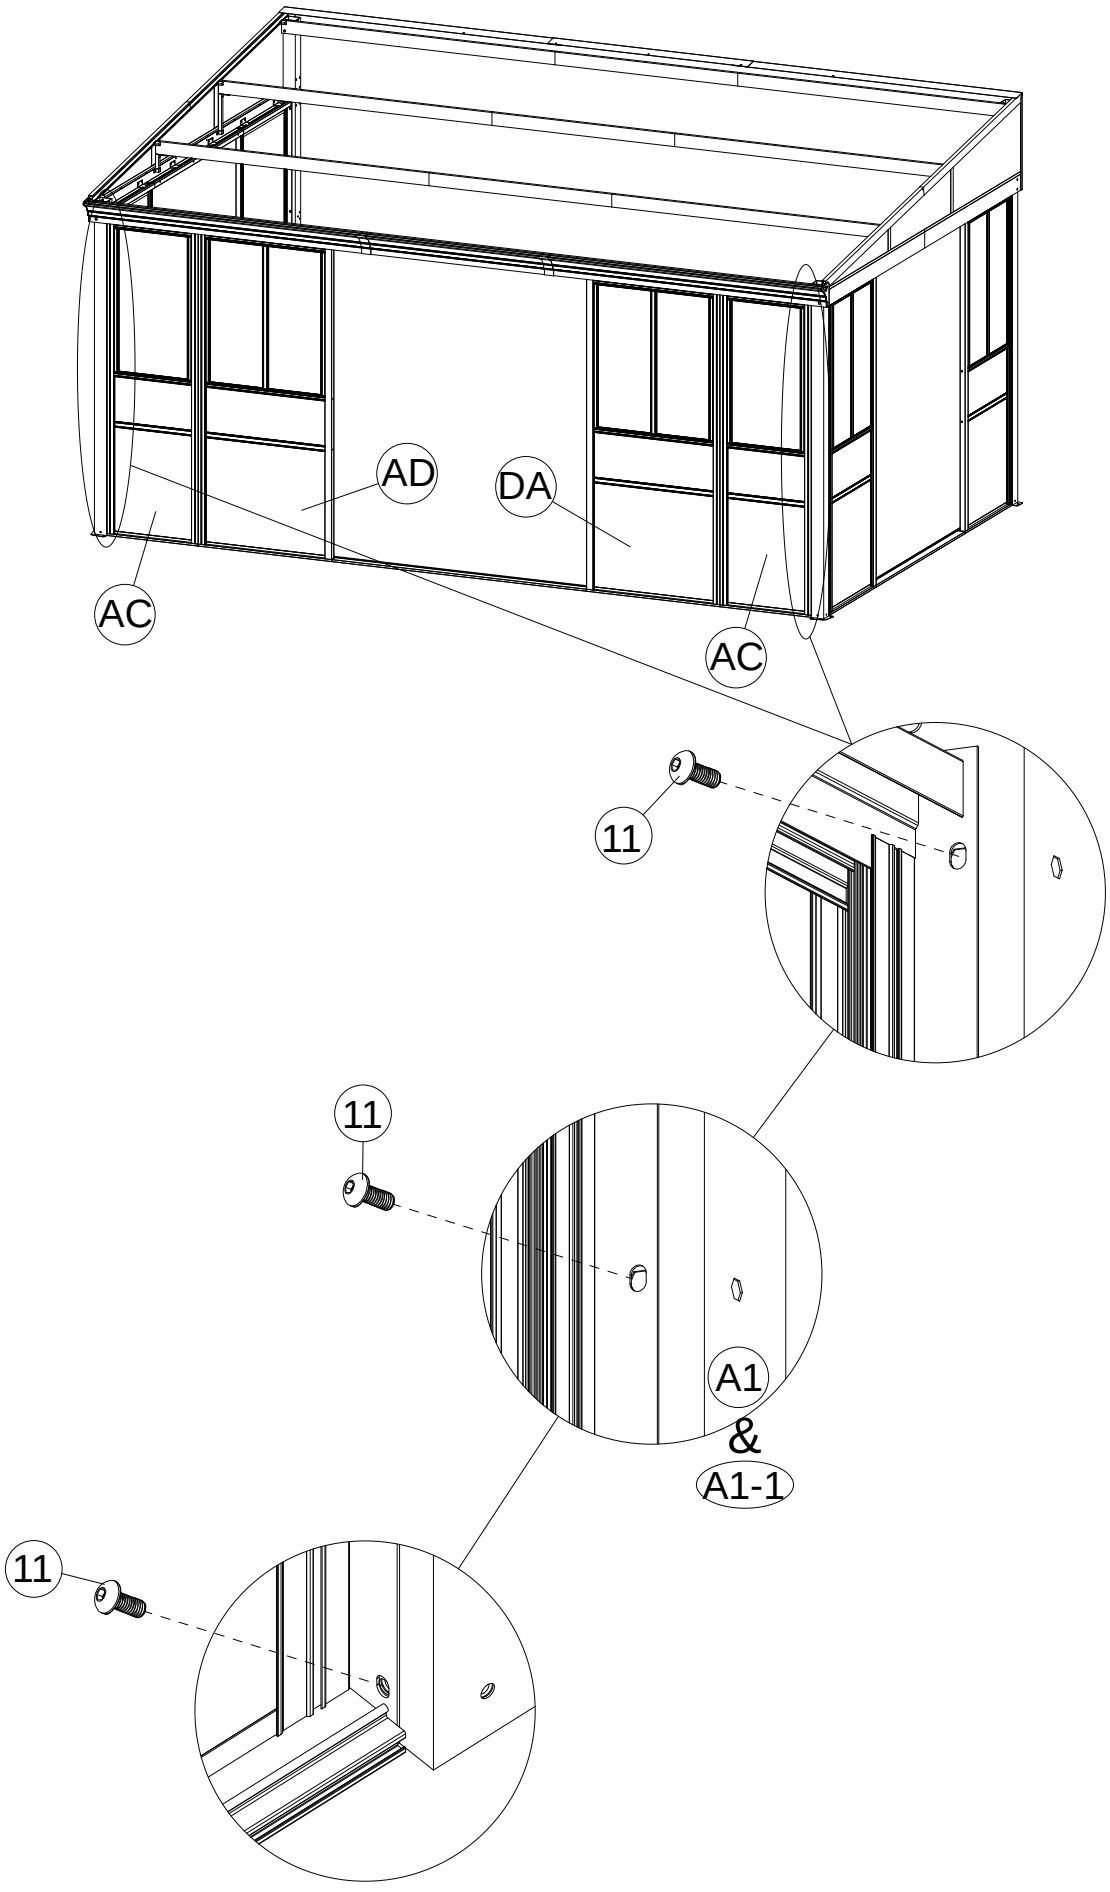



M6x15

11 16x

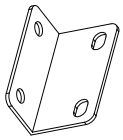


Q2 8x




M5


17 16x




M5*12

18 16x

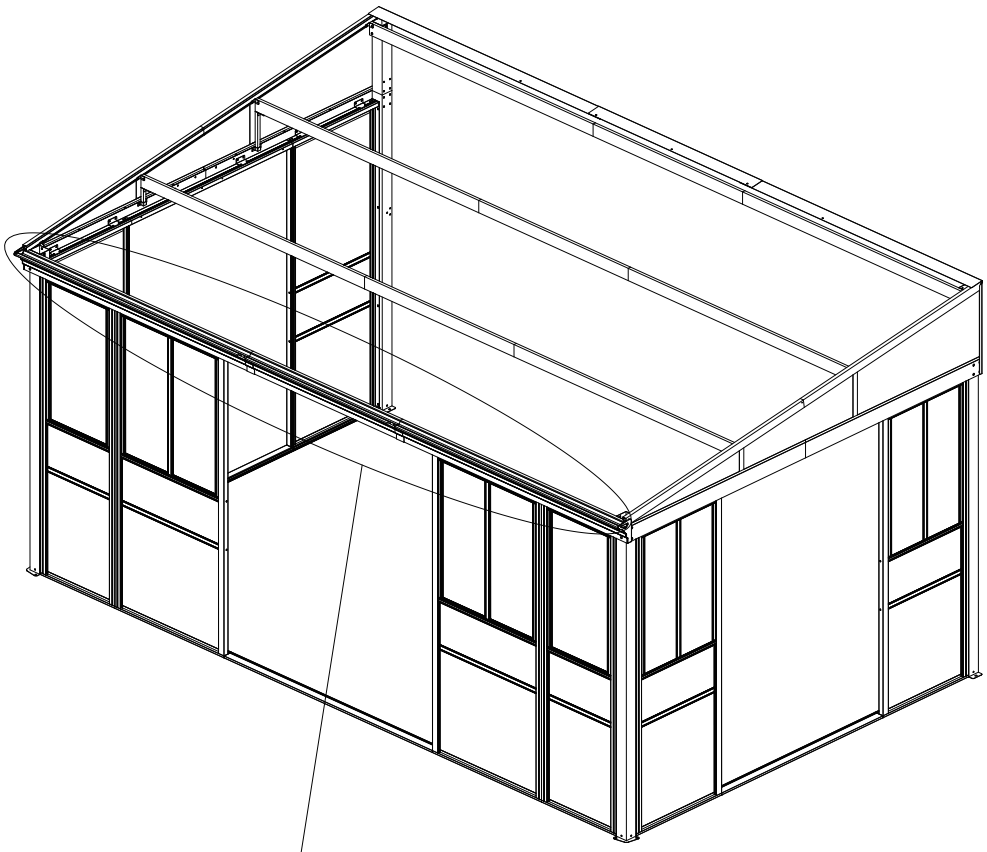


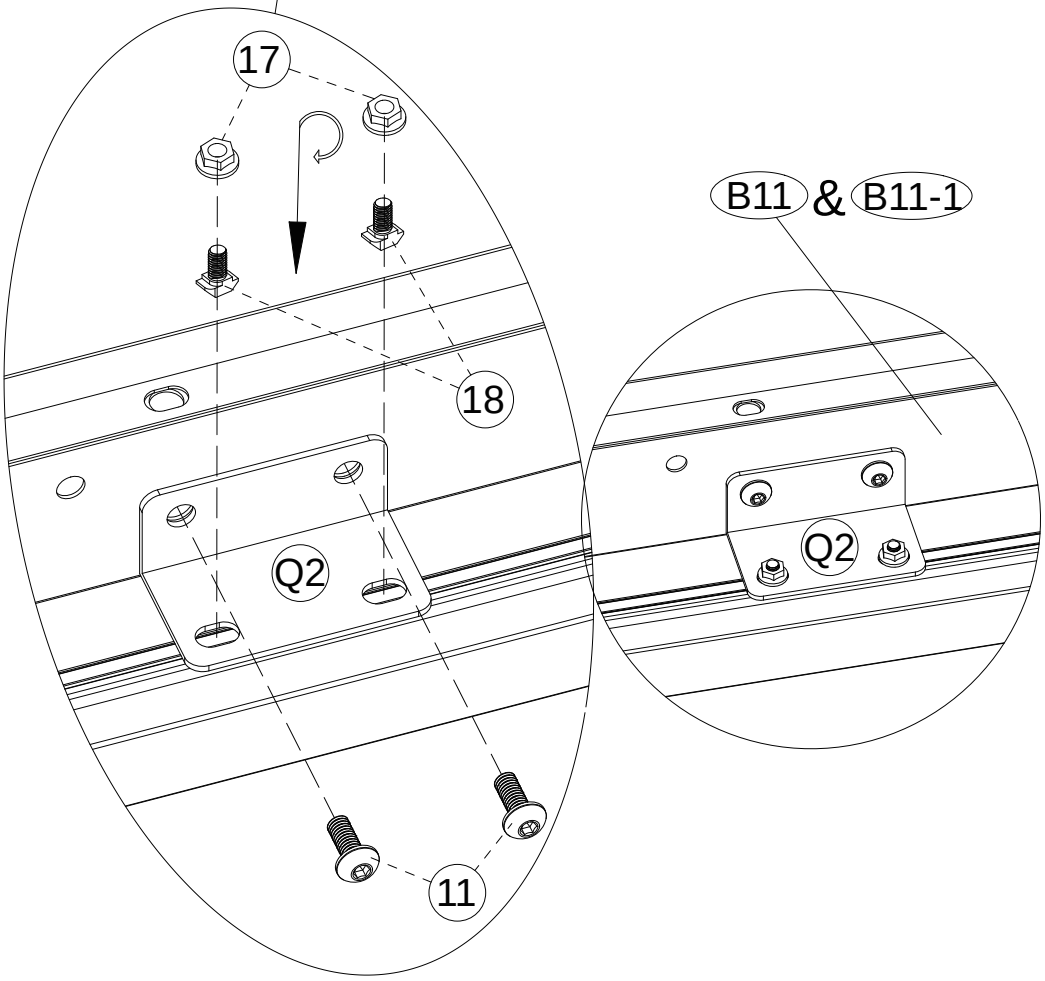


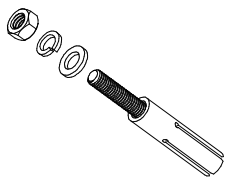

21 8x

Please install it
on a level floor

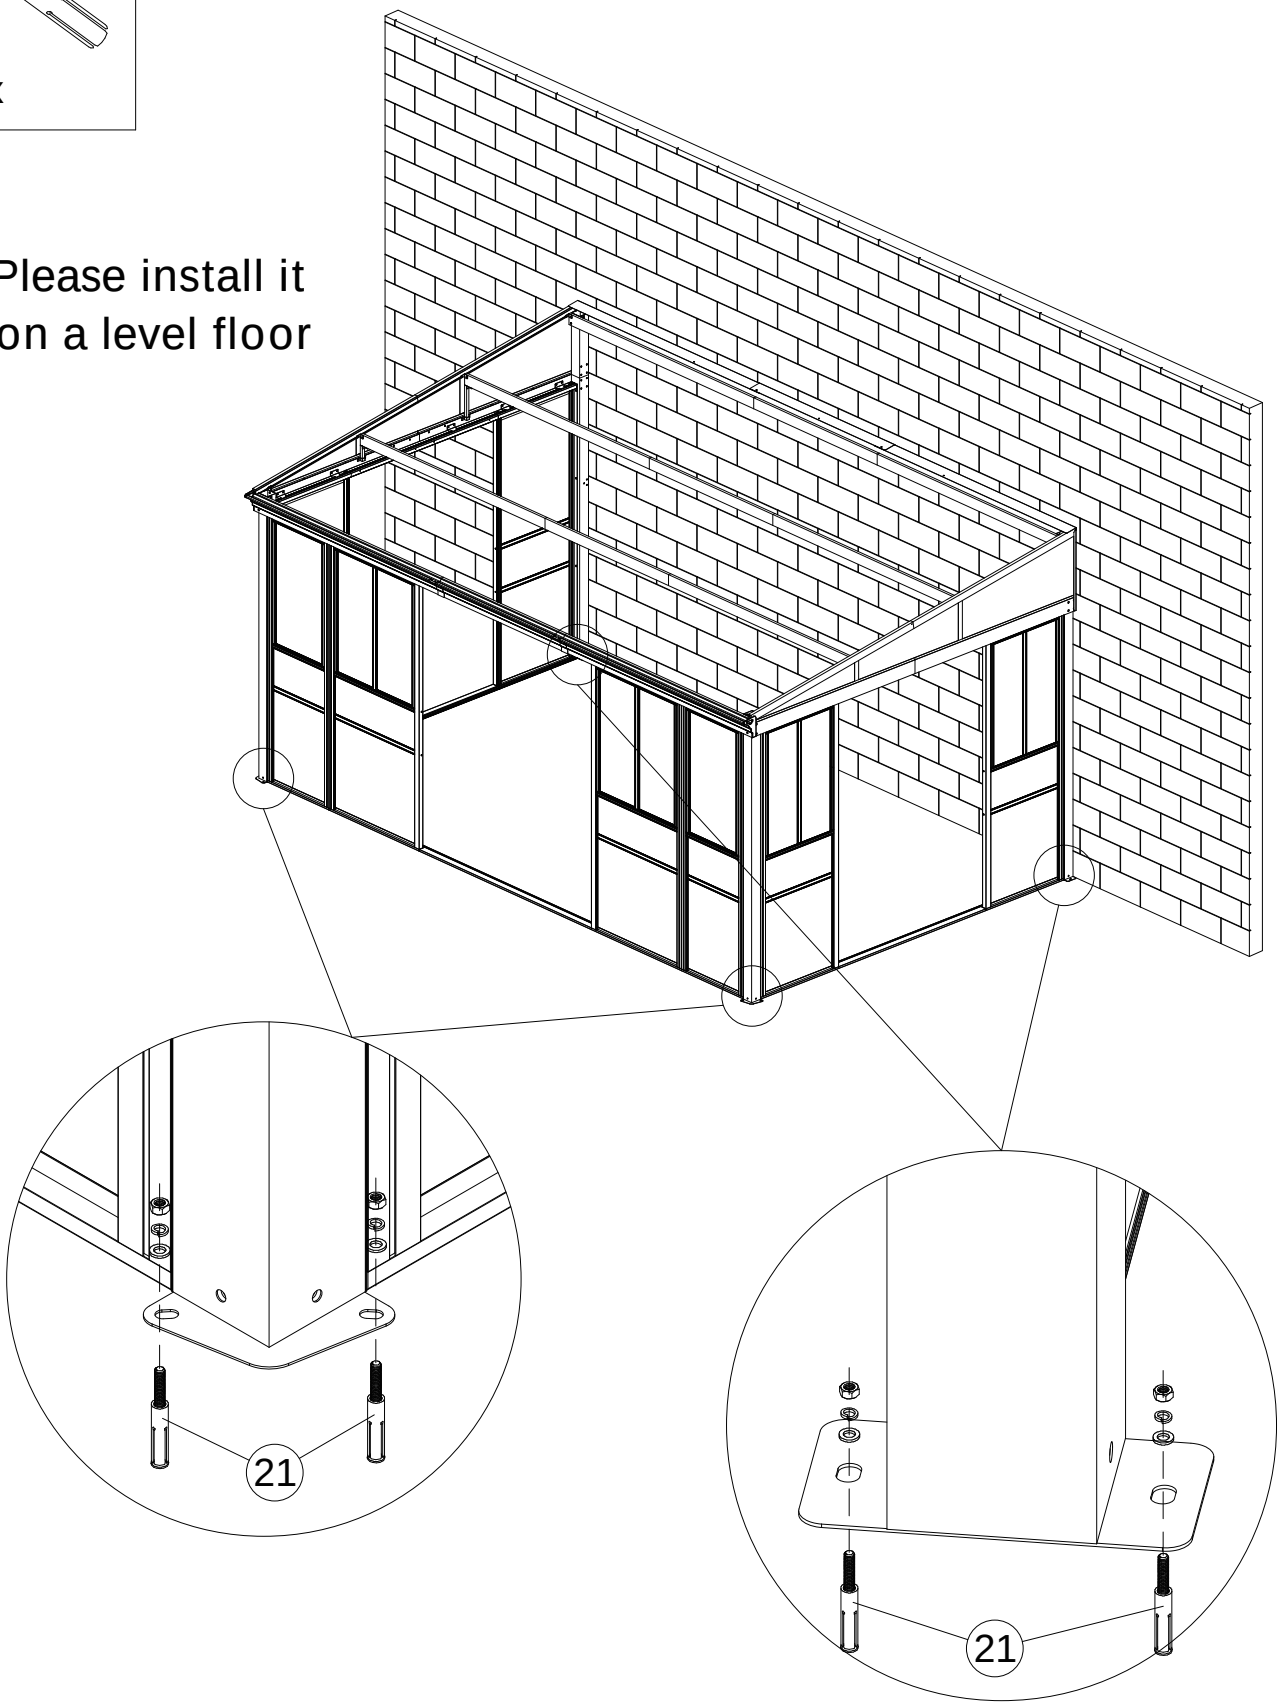




Q3 2x




M6x15


11 6x

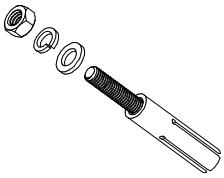



21 2x

<45>

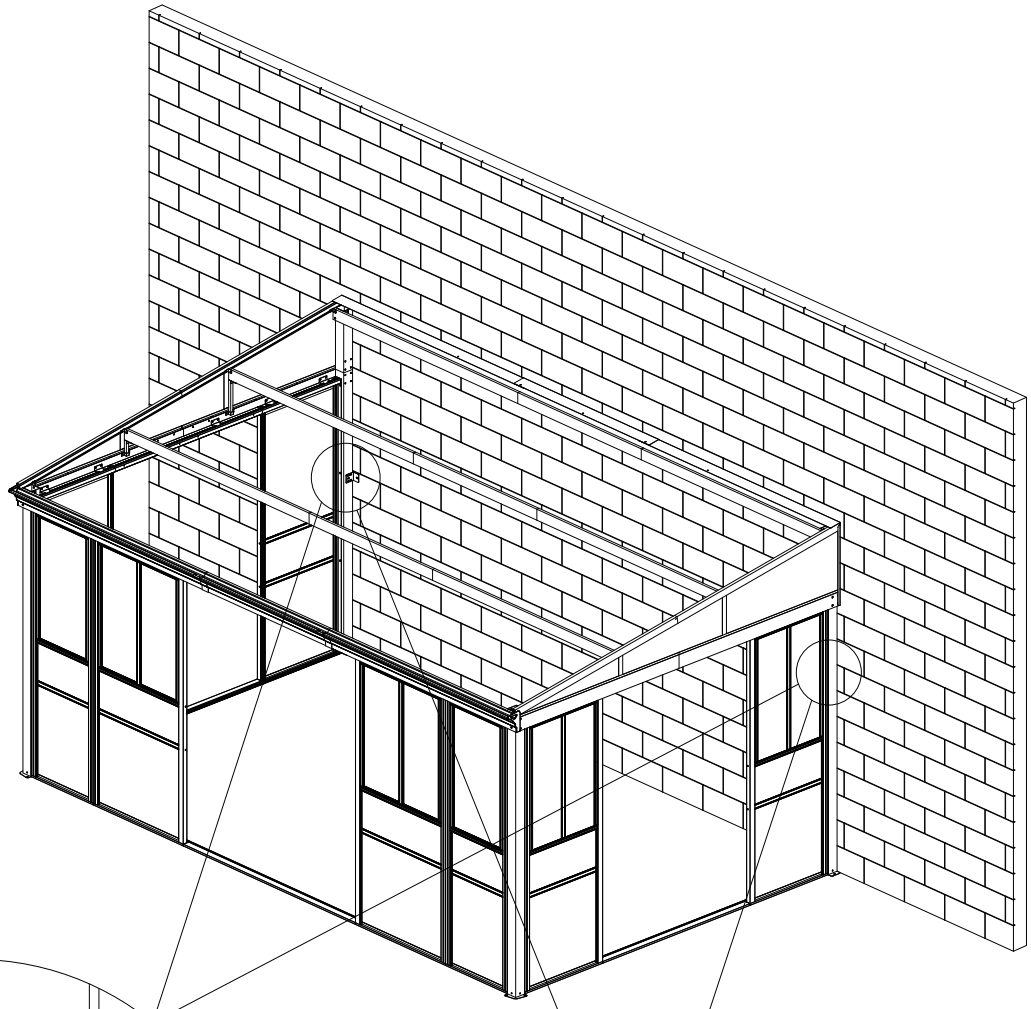

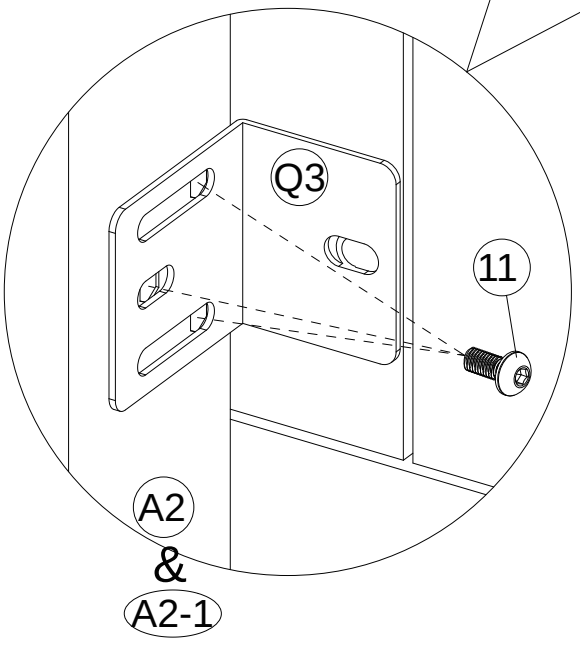

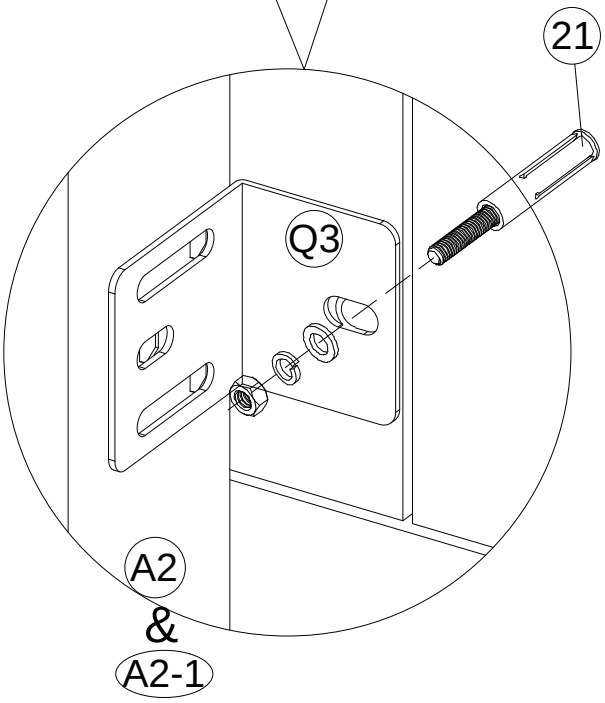

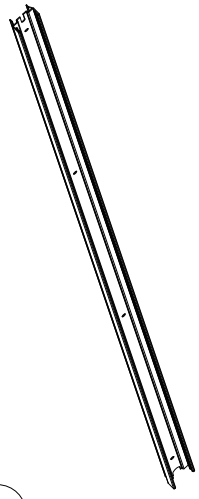

1F 3x


ST 4.8x12

7 12x


<46>


DA 3x

Pay attention to the installation direction.

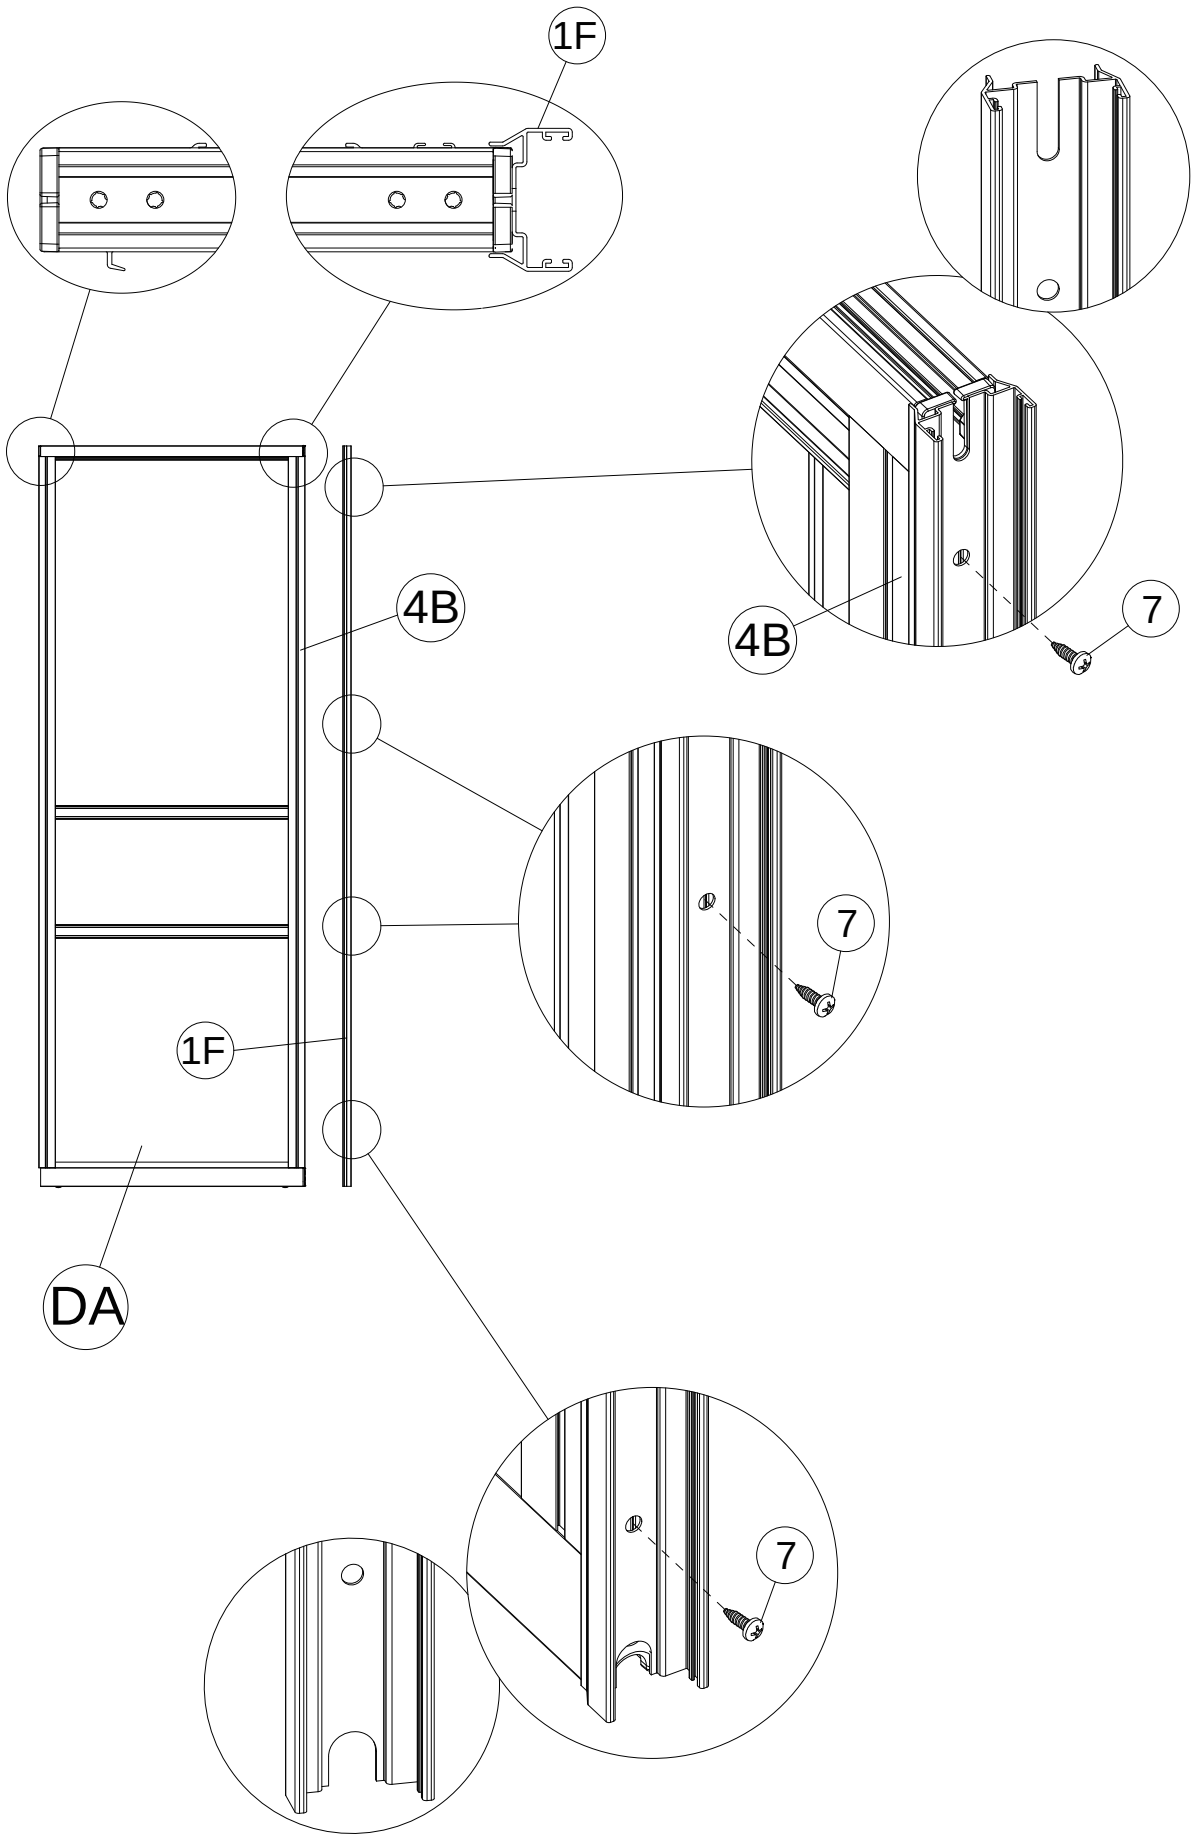



<47>

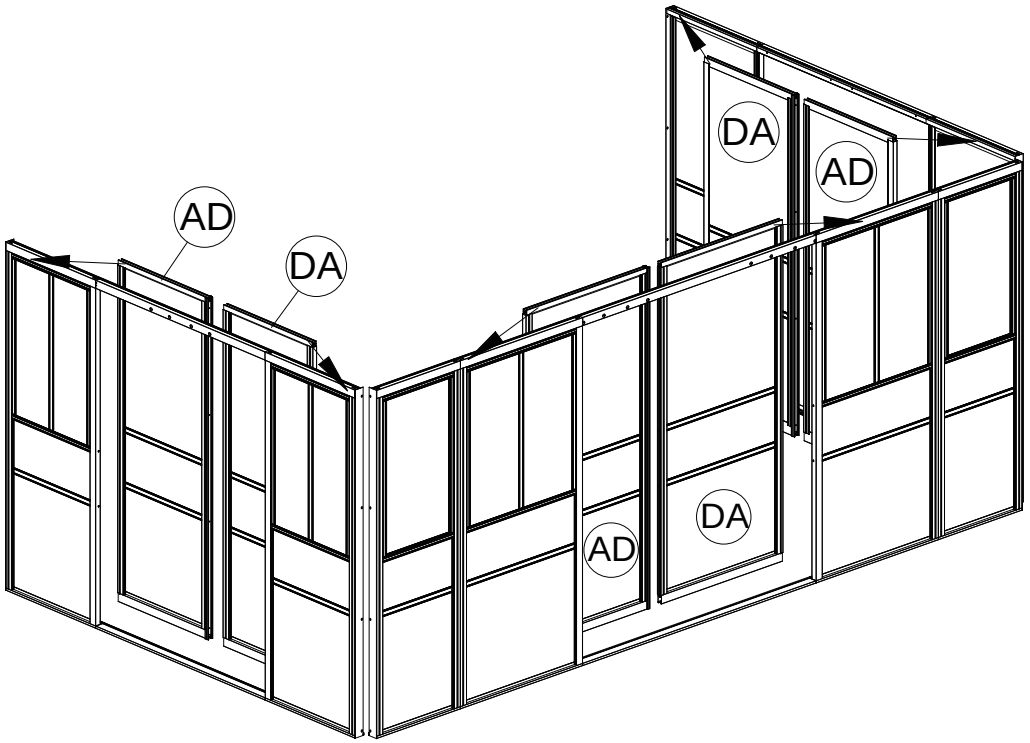

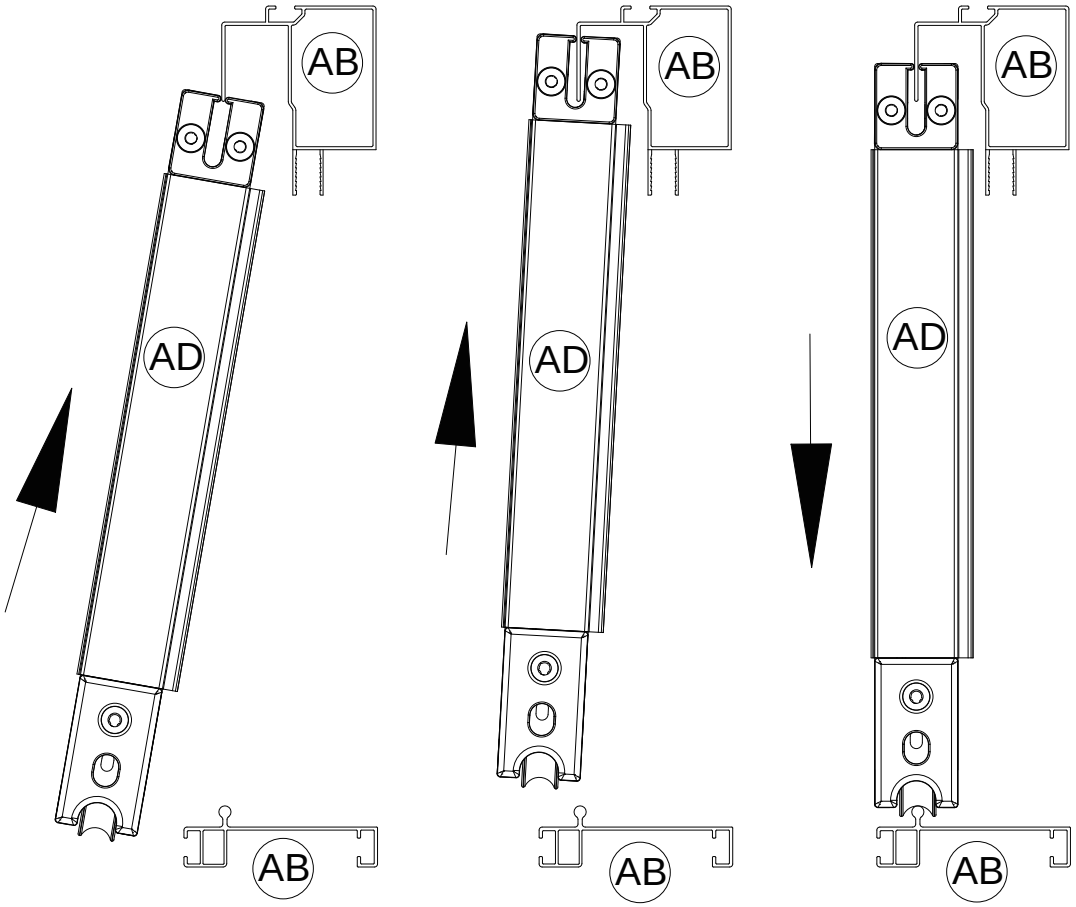


Repeat the previous steps
for other components.

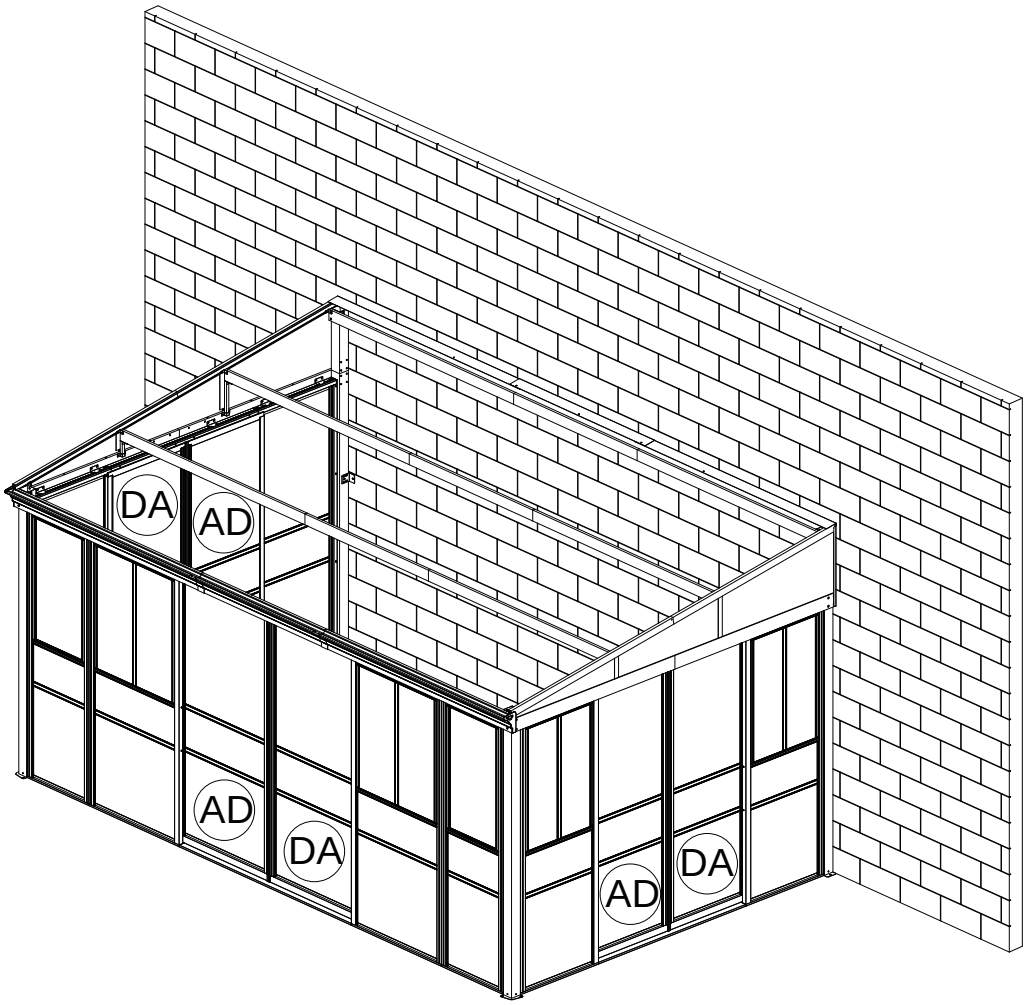

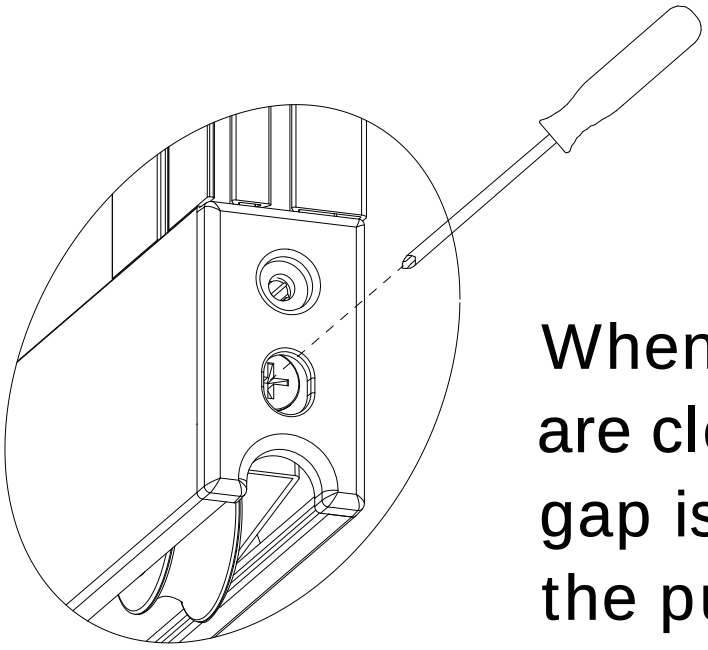

When the two sliding doors are closed and an obvious gap is found, the height of the pulley can be adjusted by the screw on the pulley.

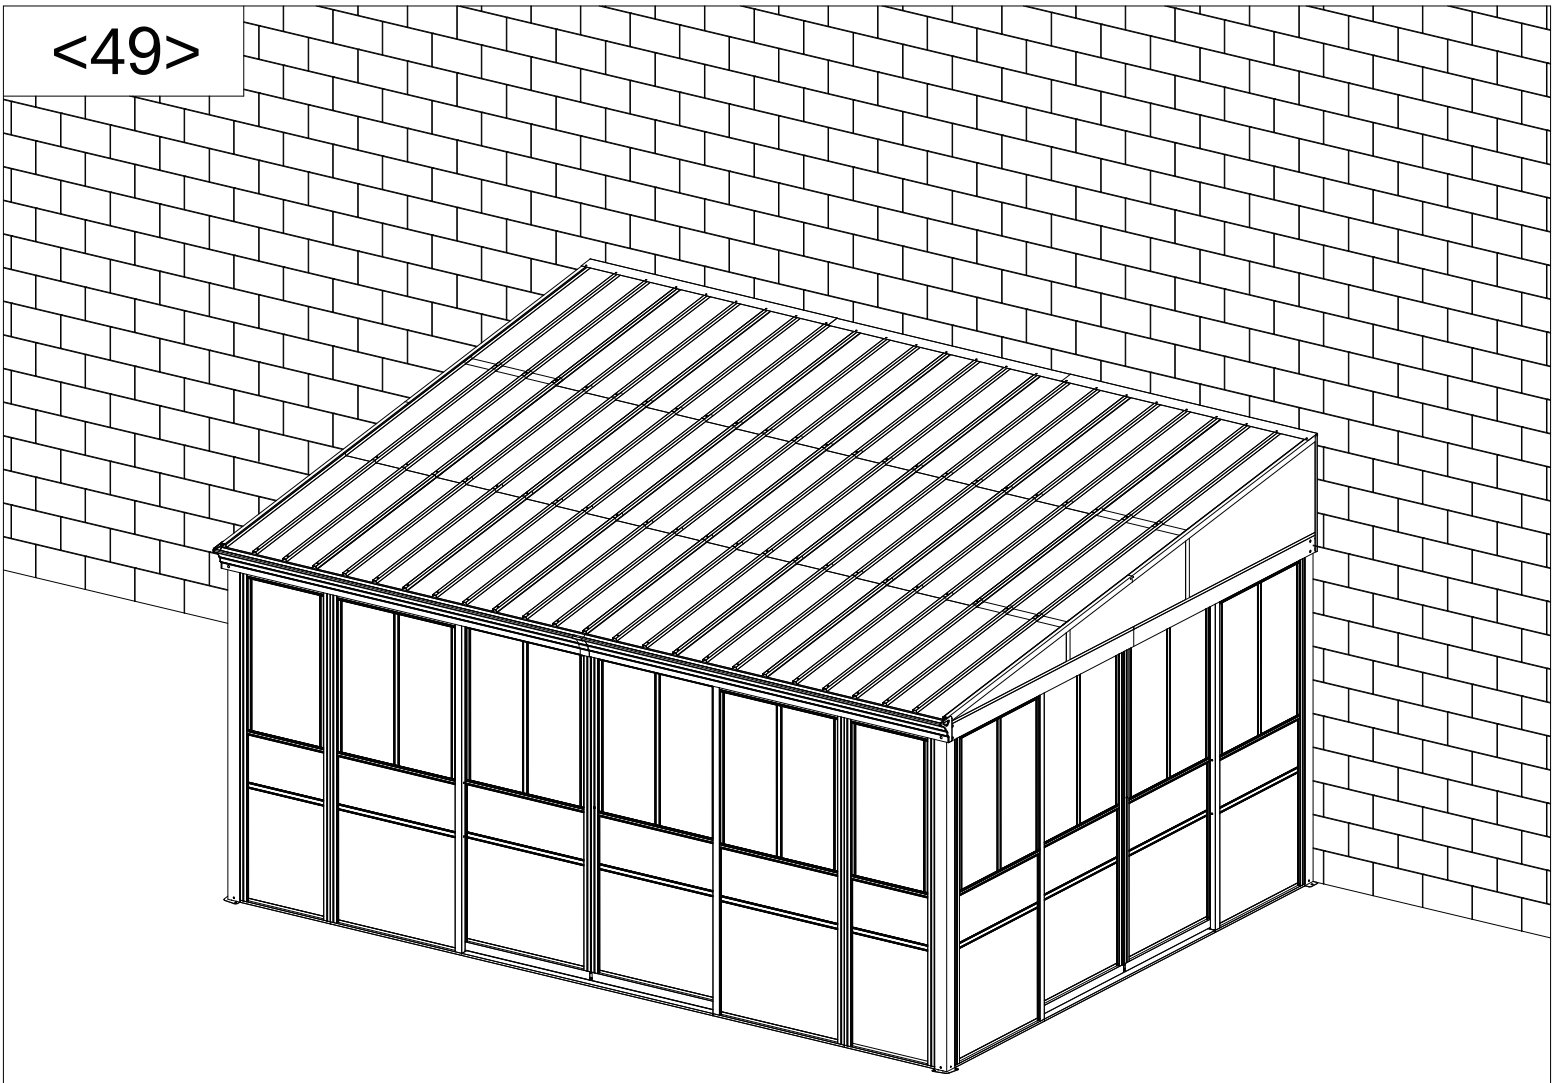

AFTER-SALE

AFTER-SALE SERVICE

If you have any suggestions or encounter quality issues with our products, please contact us first.

Our after-sales team will respond within 24 hours, and we will do our best to provide a solution until you are satisfied.

GUARANTEED CUSTOMER SERVICE

Your shopping experience is very important to us!

If you feel unsatisfied or have any questions,
just contact us!

If you want to share how wonderful our smart product makes your home, just contact us and share your pictures!

For further information,
just contact us!

service@kmcgloble-us.com

(USA) +1 213-816-4788