

Polybird




**ROUND END
TABLE**
P53


TOOLS



HARDWARE




PARTS

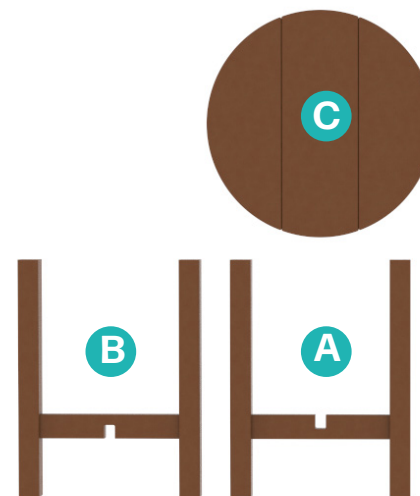


Note before starting: wait until the whole piece is assembled to tighten the screws completely.

1

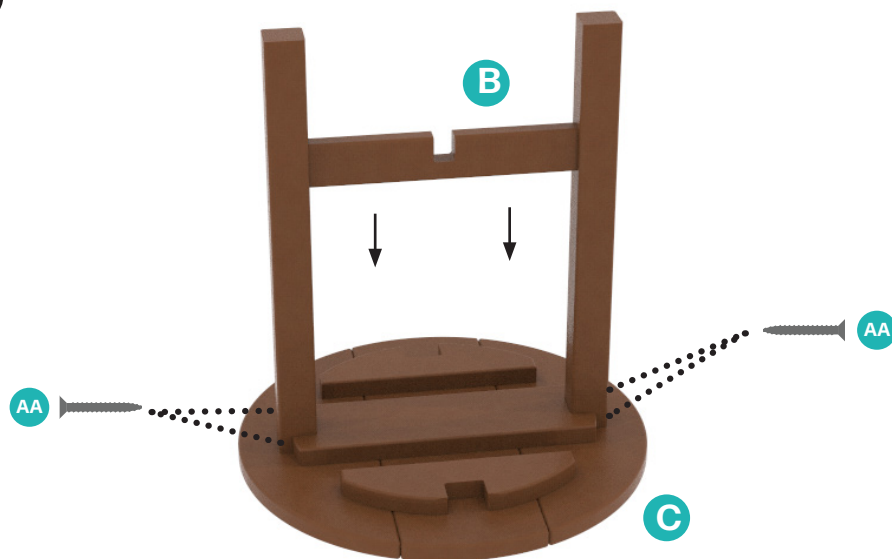

Slide legs of part B into notches on bottom of table top C using two #8 x 2 1/2" screws (AA) per leg.

2

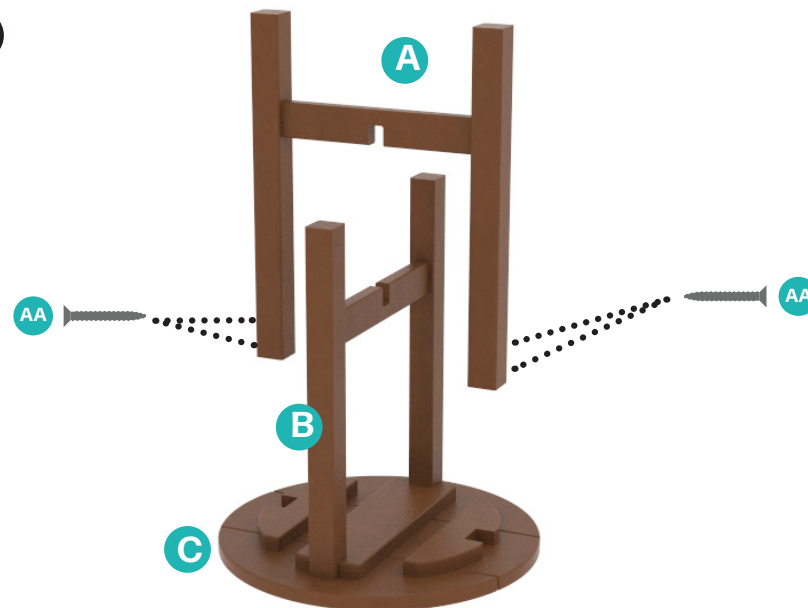

Repeat step 1 for part A, fitting into notches in tabletop and in crossbrace on part B.