


Assembly Instructions

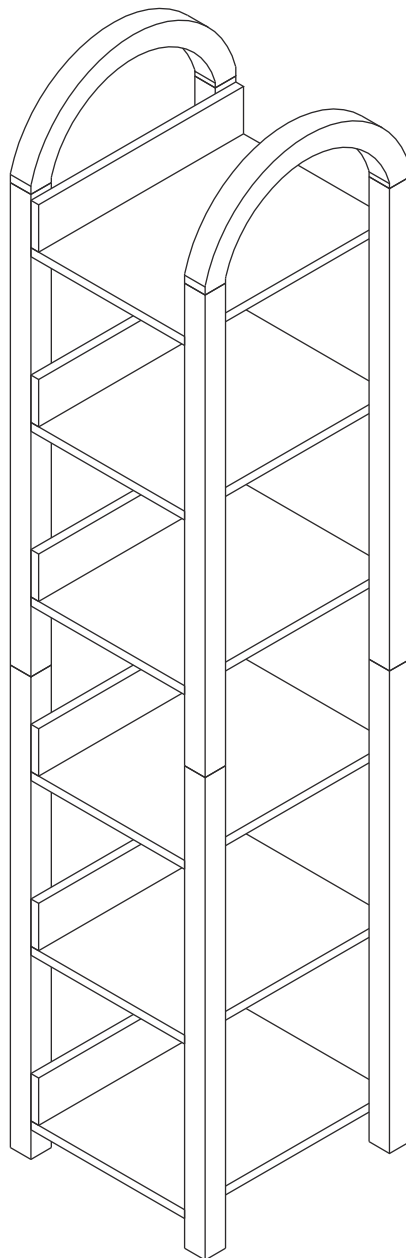


Bookcase

Model No.
HOGA-JW1187

Contact Us




We're here to help you.

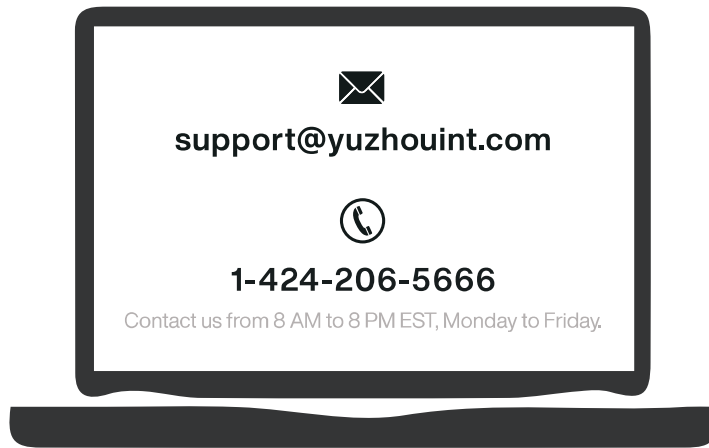

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

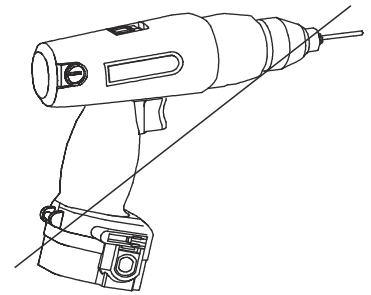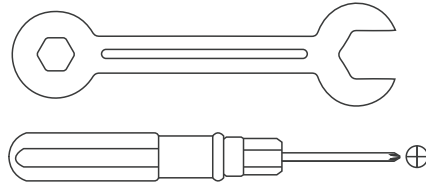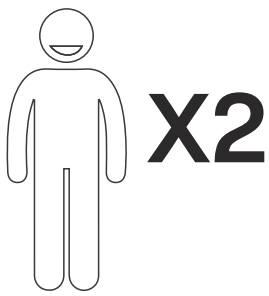


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

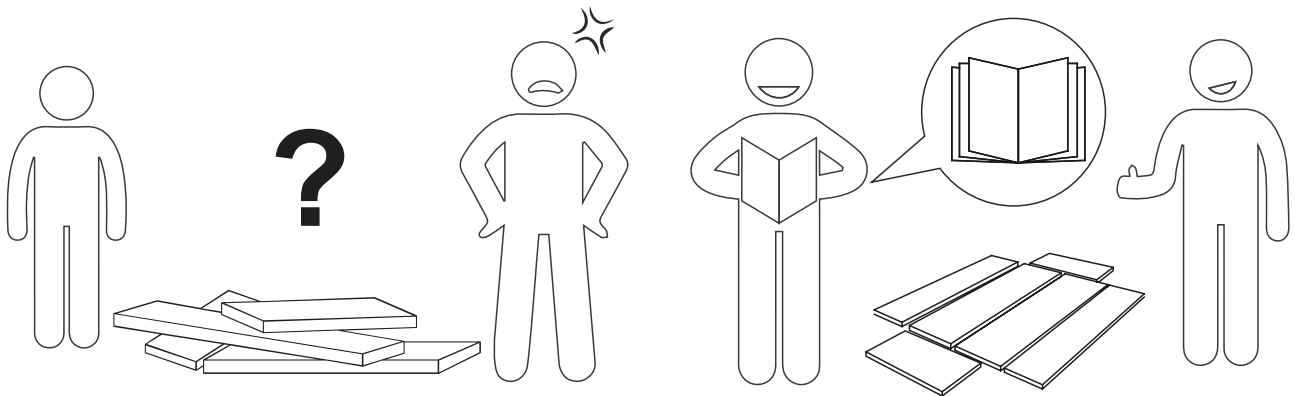

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.





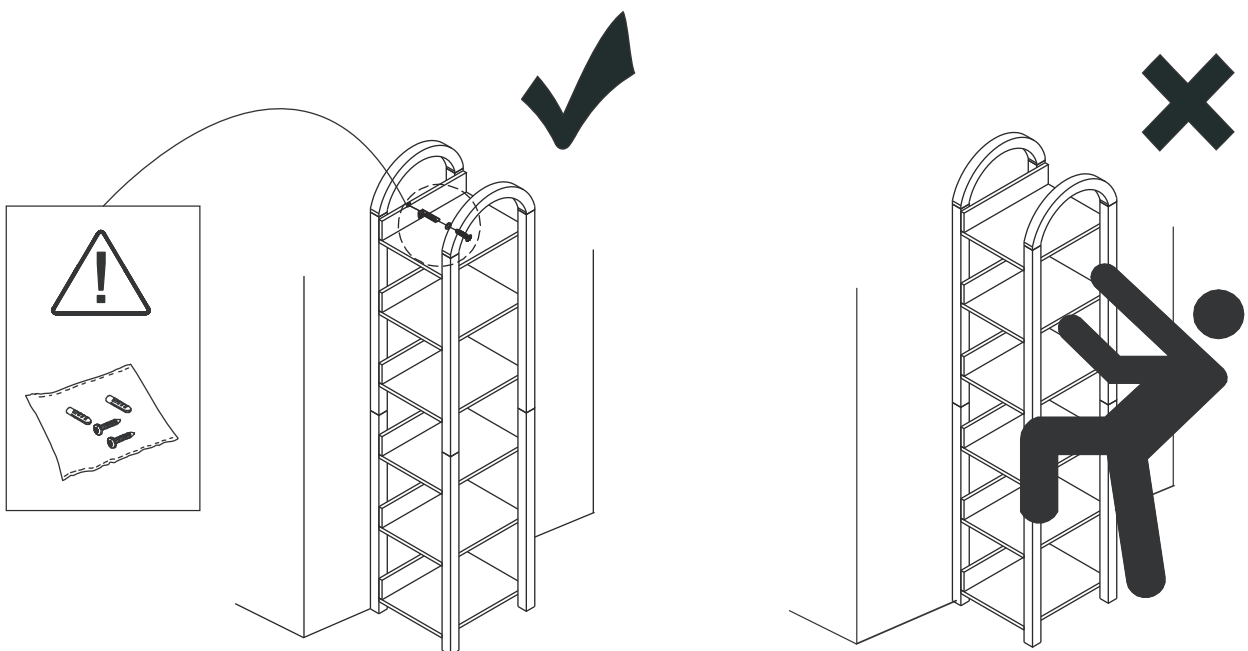


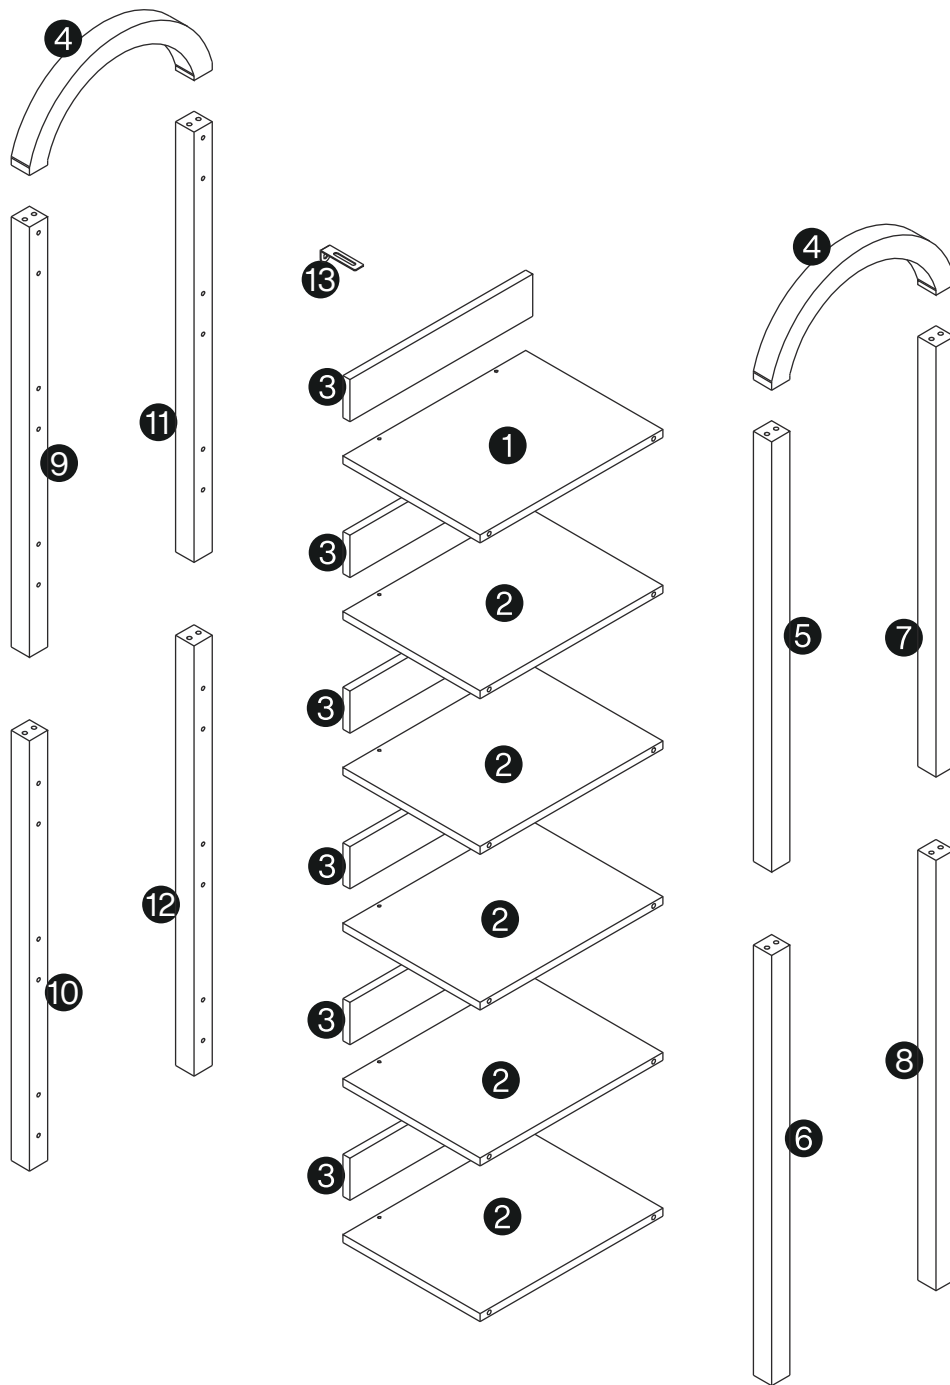





⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

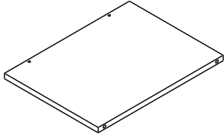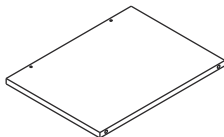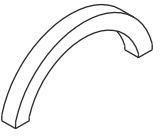

1  1 pc	2  5 pcs	3  6 pcs	4  2 pcs	5  1 pc
6  1 pc	7  1 pc	8  1 pc	9  1 pc	10  1 pc
11  1 pc	12  1 pc	13  1 pc		

Hardware List


A	B	C	D	E	F
 M6×65mm	 M6×50mm	 M6×12mm	 5×38mm	 4×24.5mm	 M6×44.5mm
12 pcs	12 pcs	1 pc	12 pcs	1 pc	20 pcs
G	H	I	J	K	L
 Ø15mm	 Ø8x30mm		 Ø6.2xØ16mm	 Ø21mm	
20 pcs	8 pcs	1 pc	1 pc	8 pcs	1 pc

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

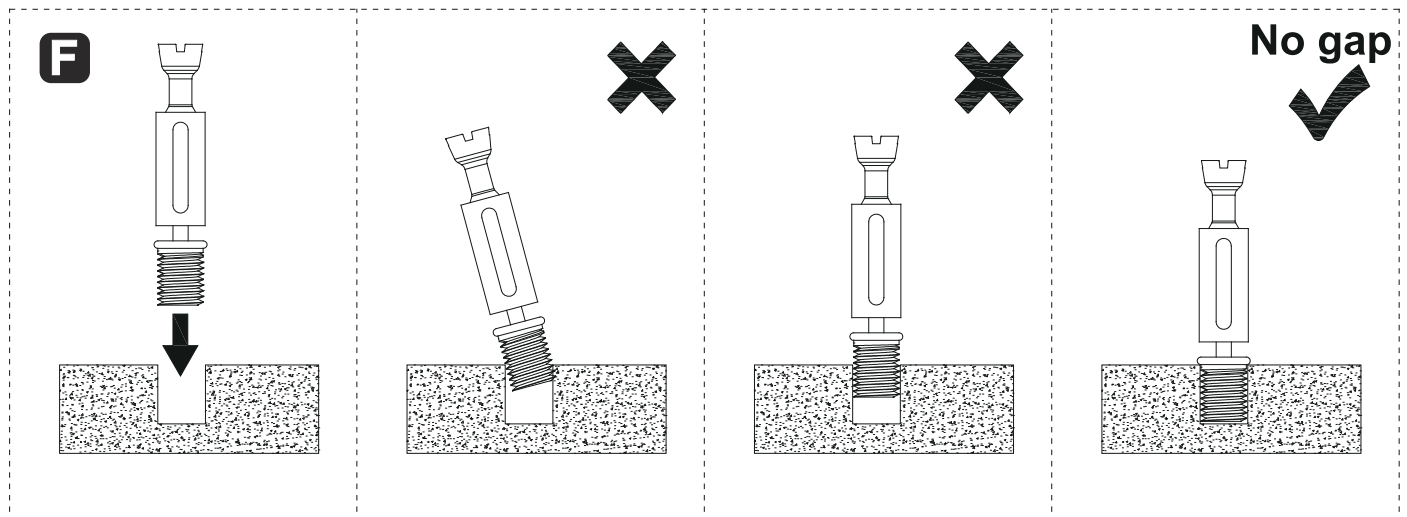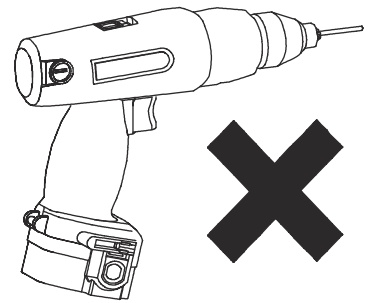


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

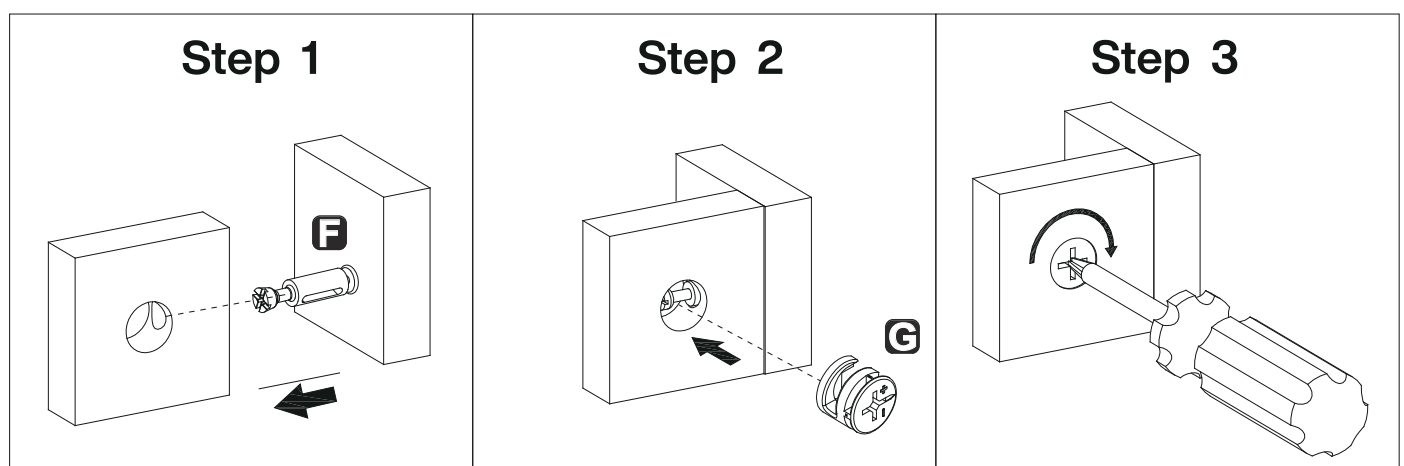


1

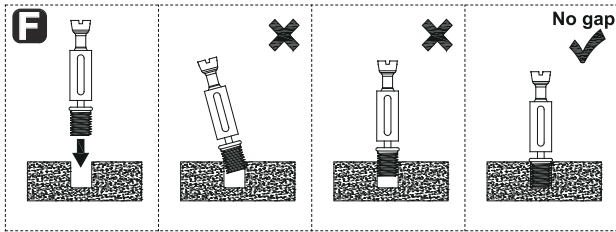

F	H
	
M6×44.5mm	Ø8×30mm
4 pcs	4 pcs

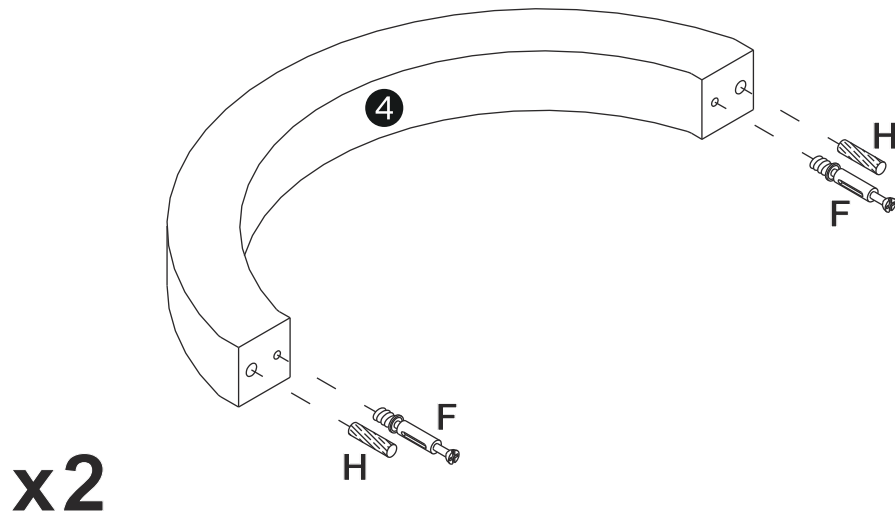


2

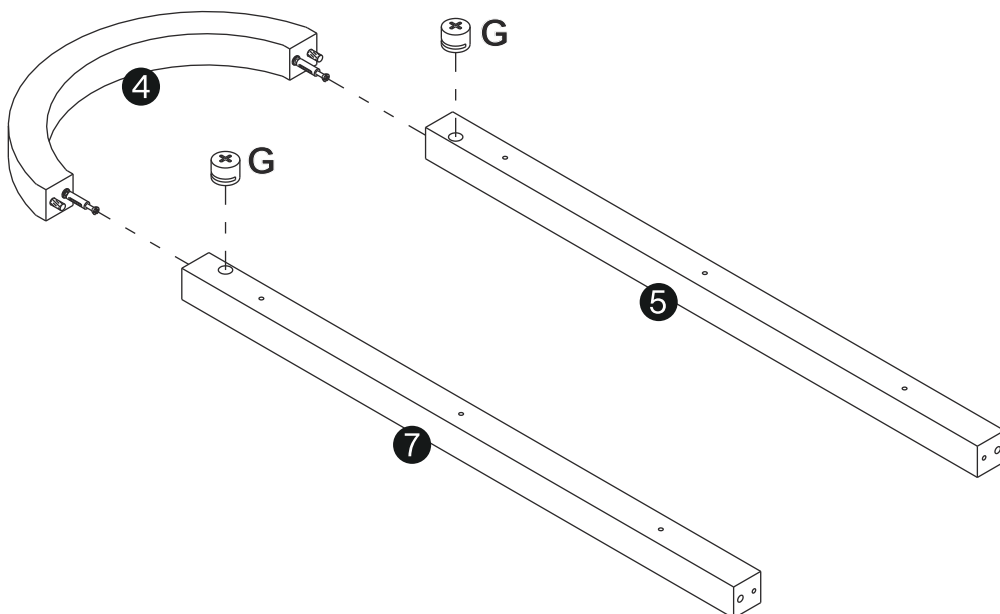


G


Ø15mm
2 pcs

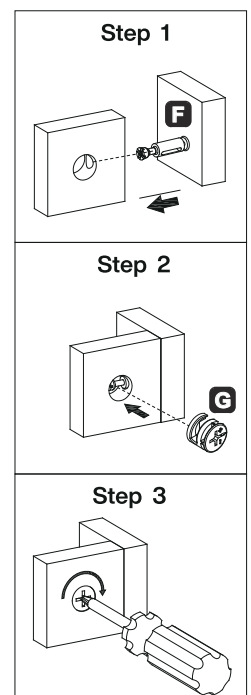

3

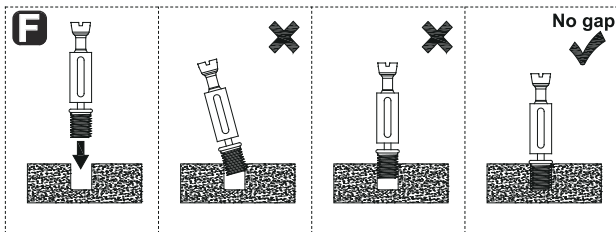



F	H
	
M6×44.5mm	Ø8×30mm
2 pcs	2 pcs

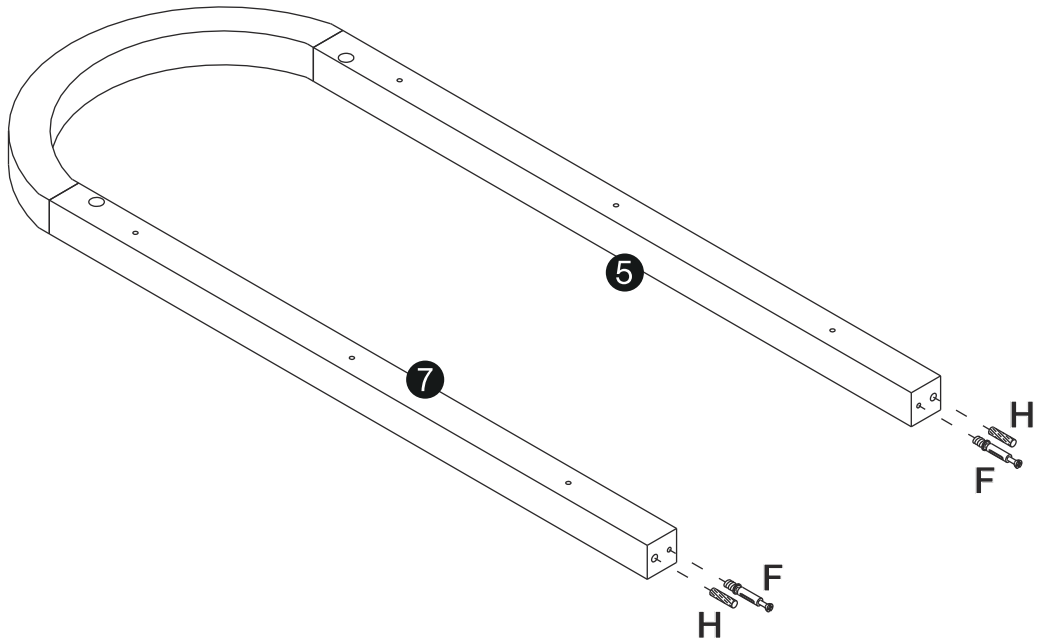


4

G

Ø15mm
2 pcs

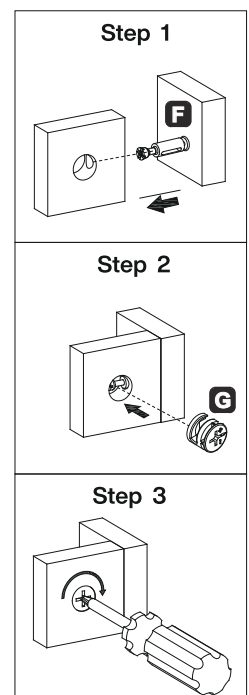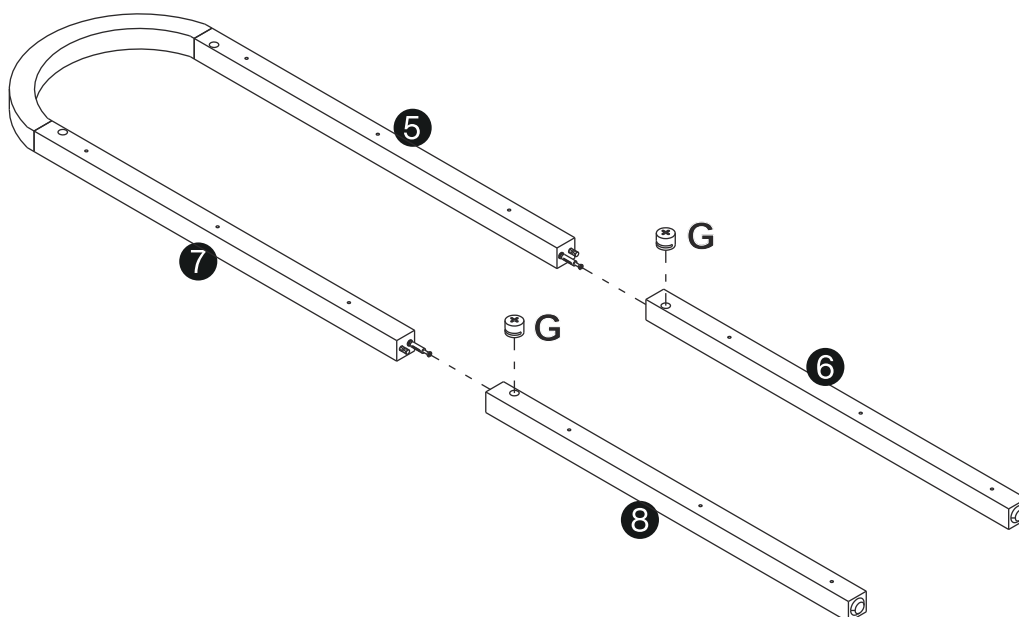


5

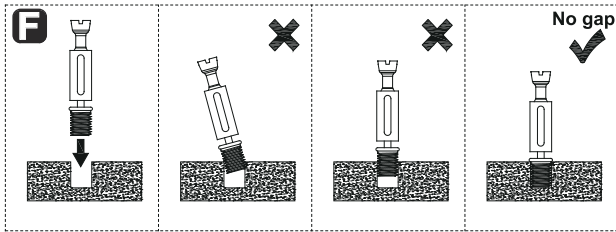

F


M6×44.5mm
12 pcs

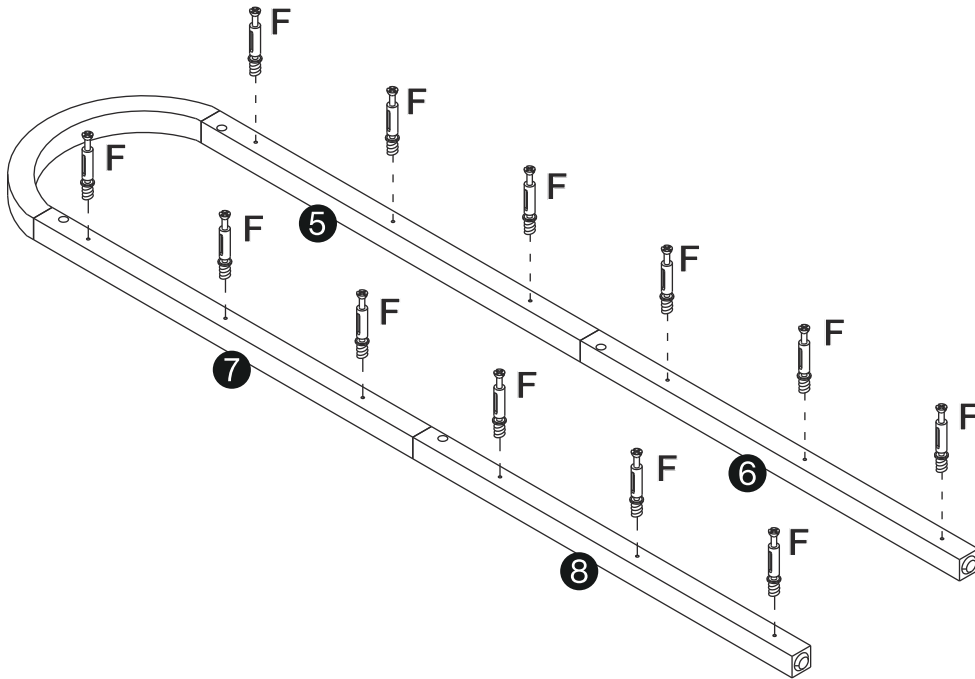


6

D

5×38mm
2 pcs

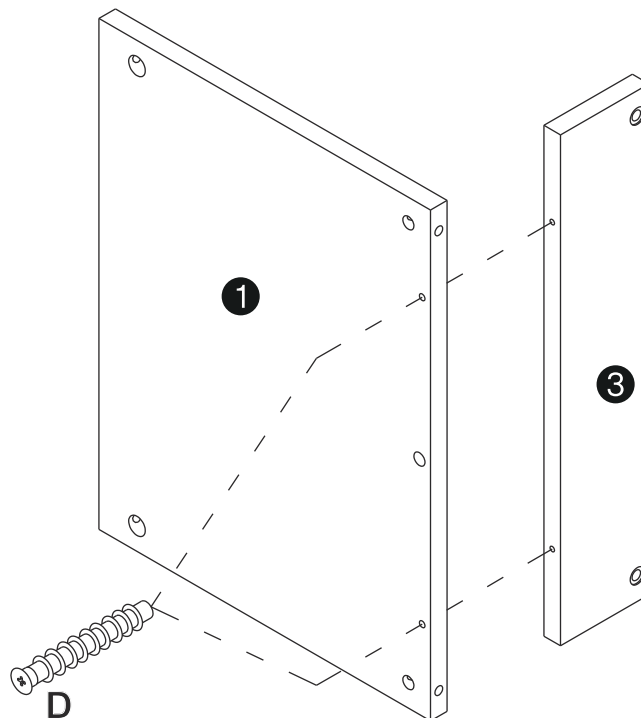

7

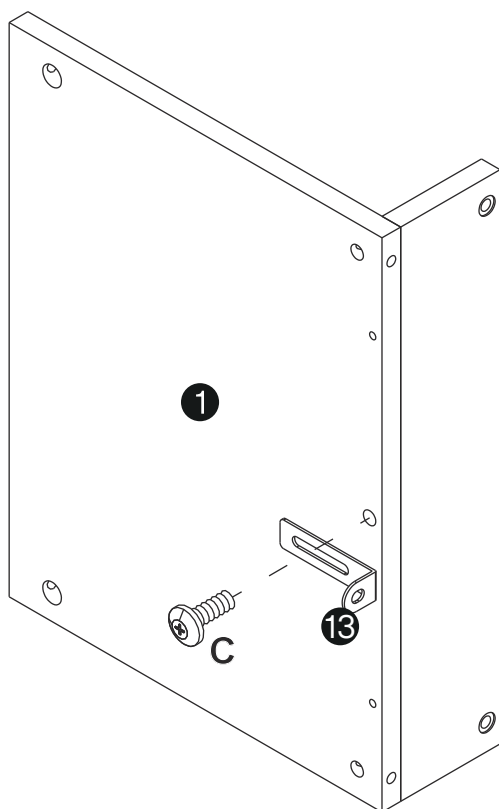


C

M6×12mm
1pc

8


x5

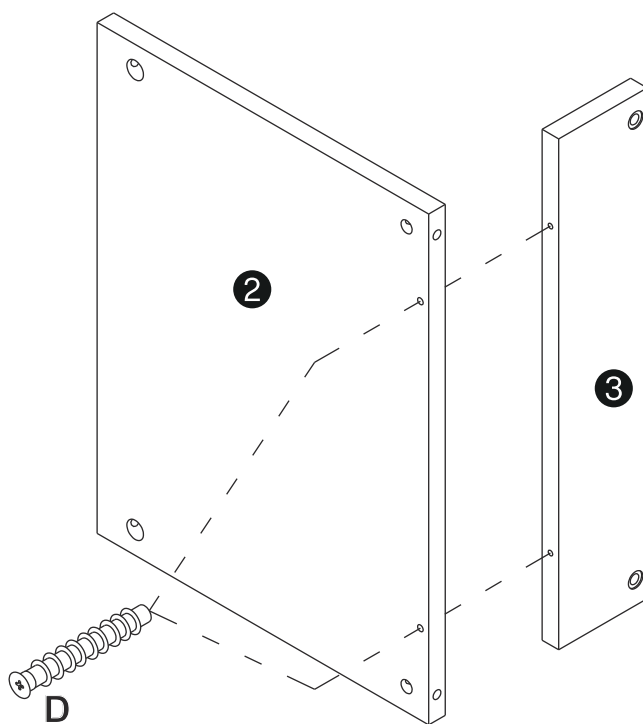

D


5×38mm
10 pcs

9

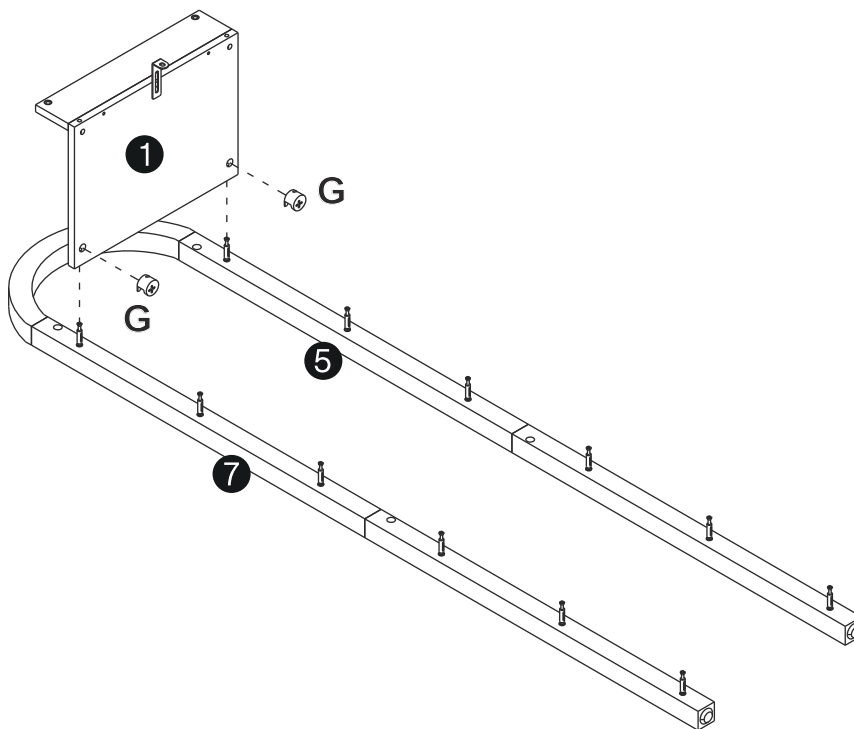


G

Ø15mm
2 pcs

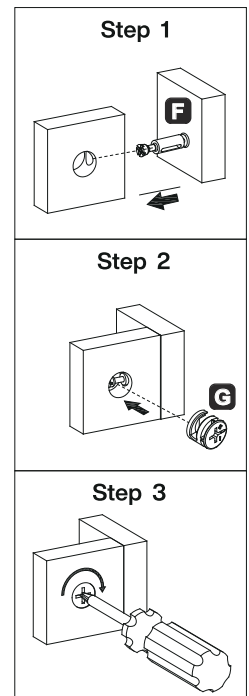


10

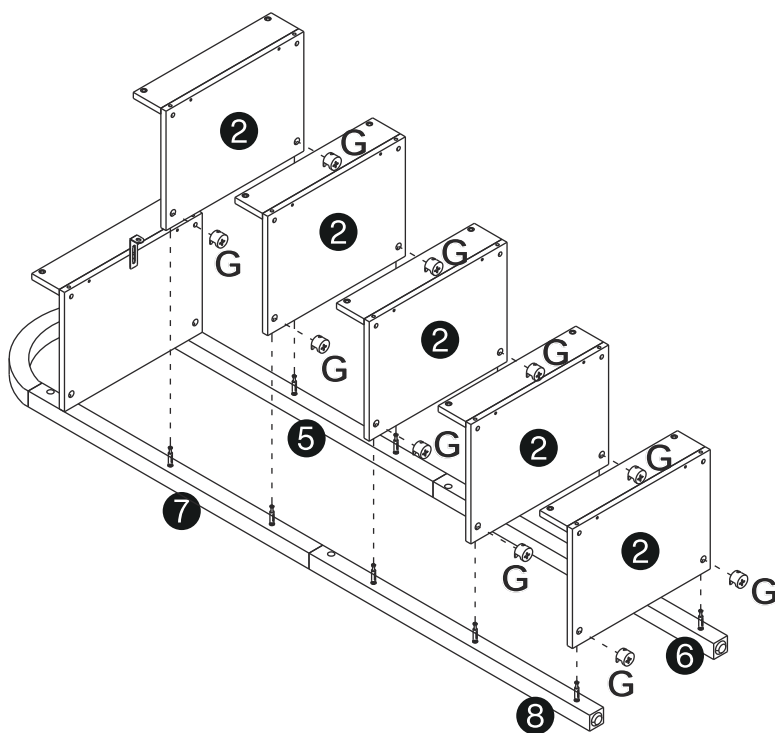


G

Ø15mm
10 pcs

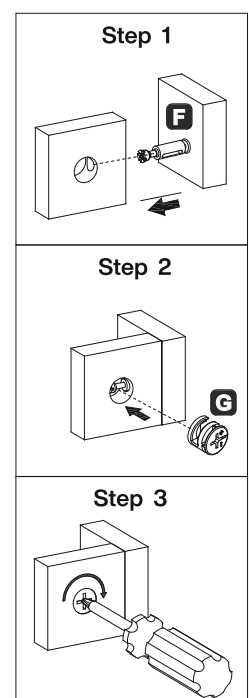


11

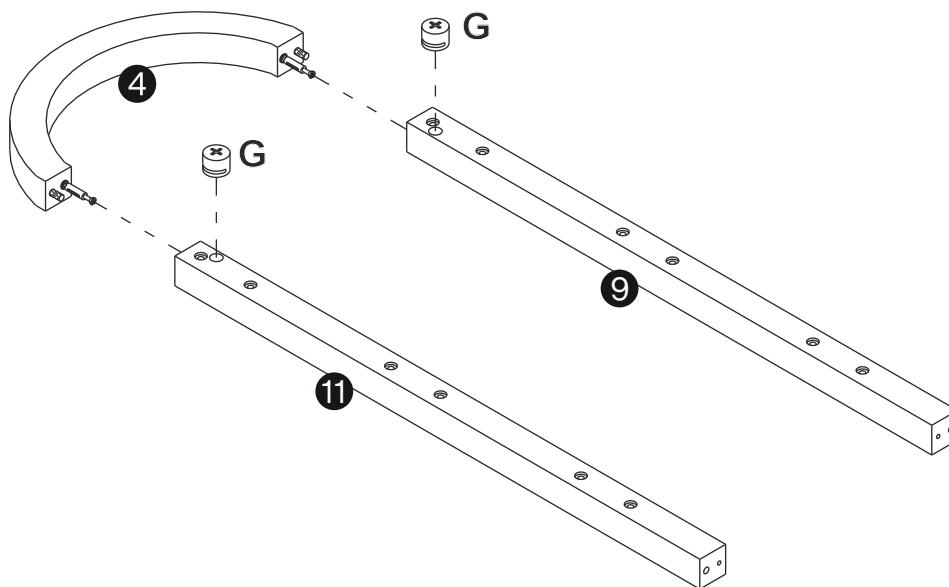


G


Ø15mm
2 pcs

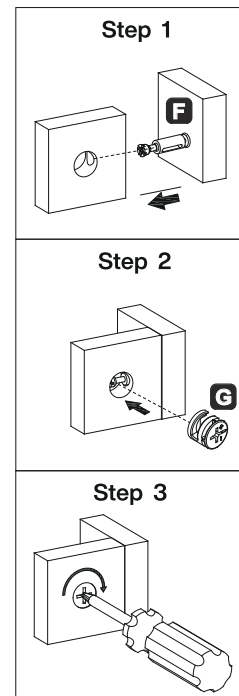


12

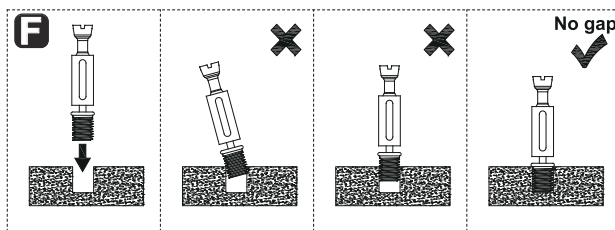

F	H
	
M6×44.5mm	Ø8×30mm
2 pcs	2 pcs

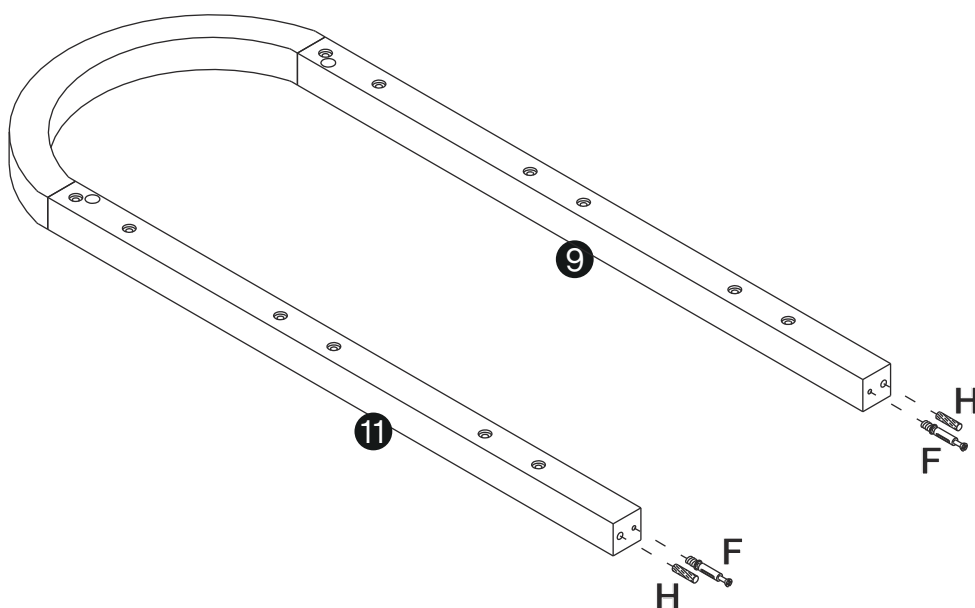


13

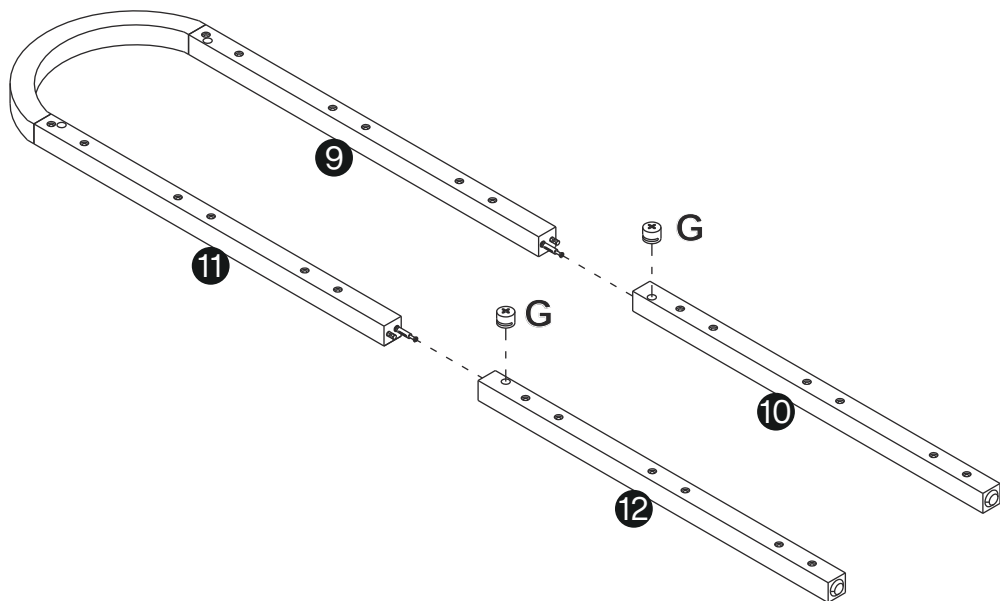


G

Ø15mm
2 pcs

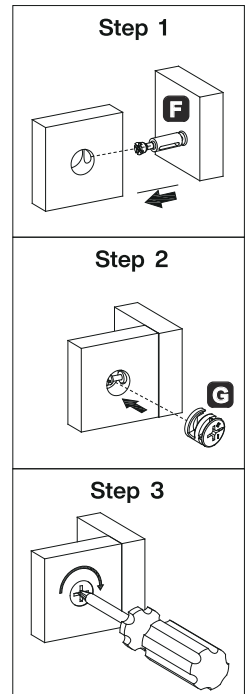




14

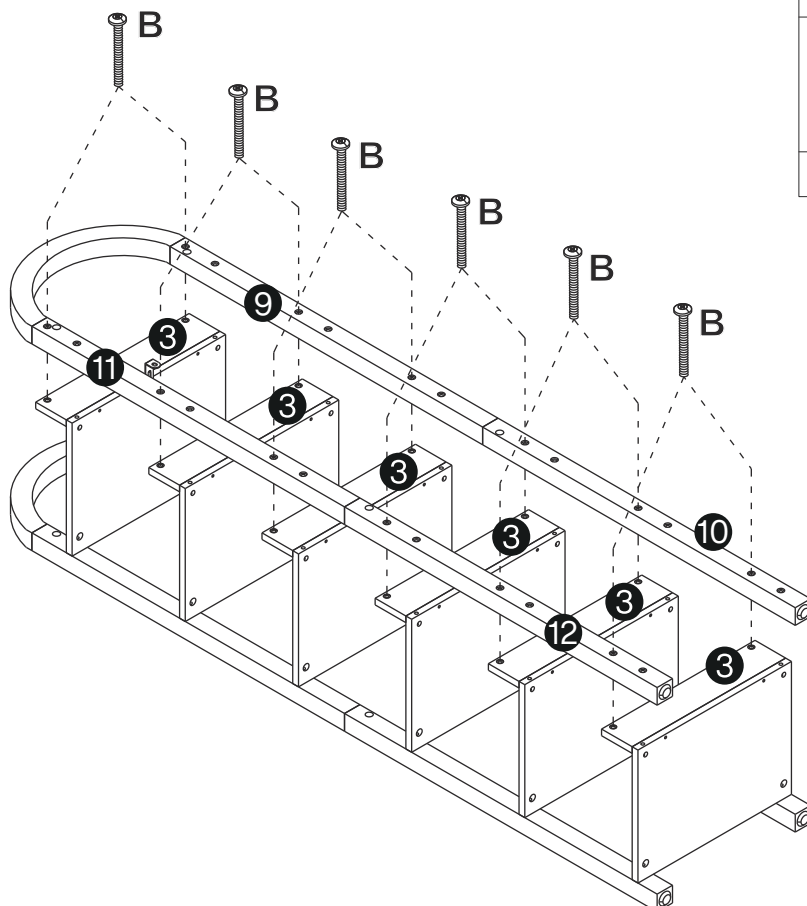




B	A
	
M6×50mm	M6×65mm
12 pcs	

15

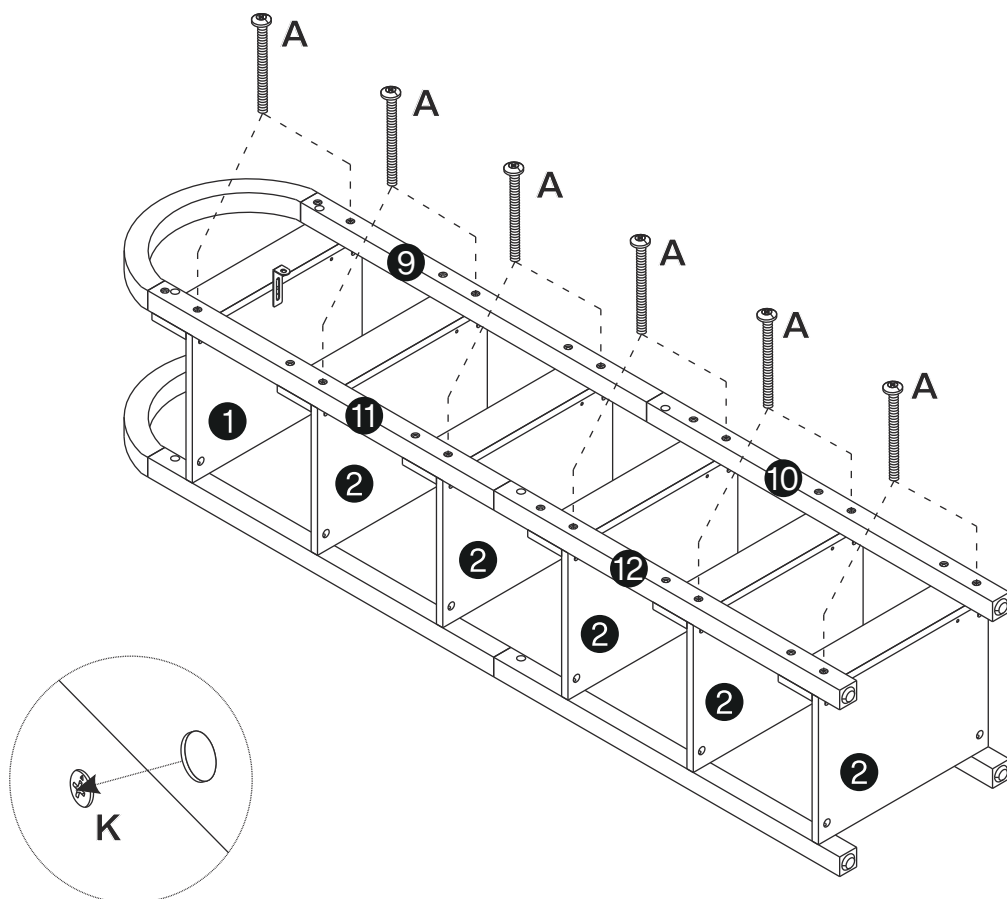

A	K
	
M6×65mm	Ø21mm
12 pcs	8 pcs

16

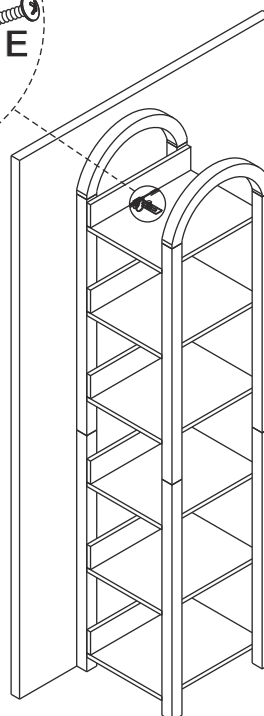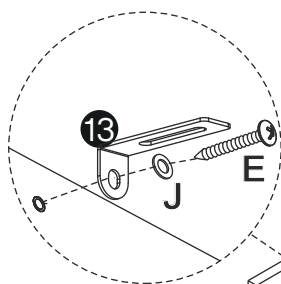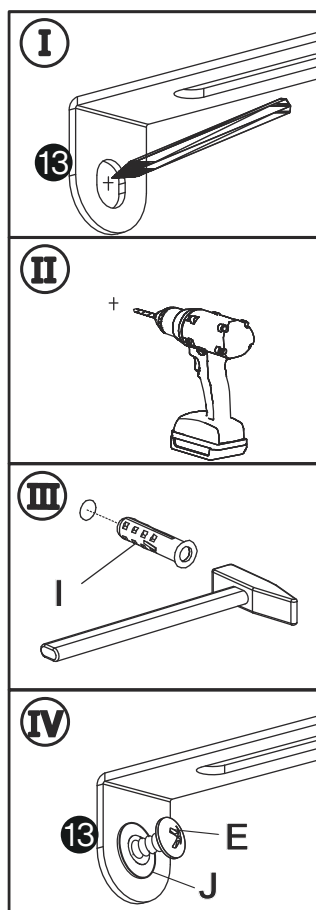

E	I	J
		
4×24.5mm		Ø16×Ø6.2mm
1pc	1pc	1pc

Thank you for your support!

