

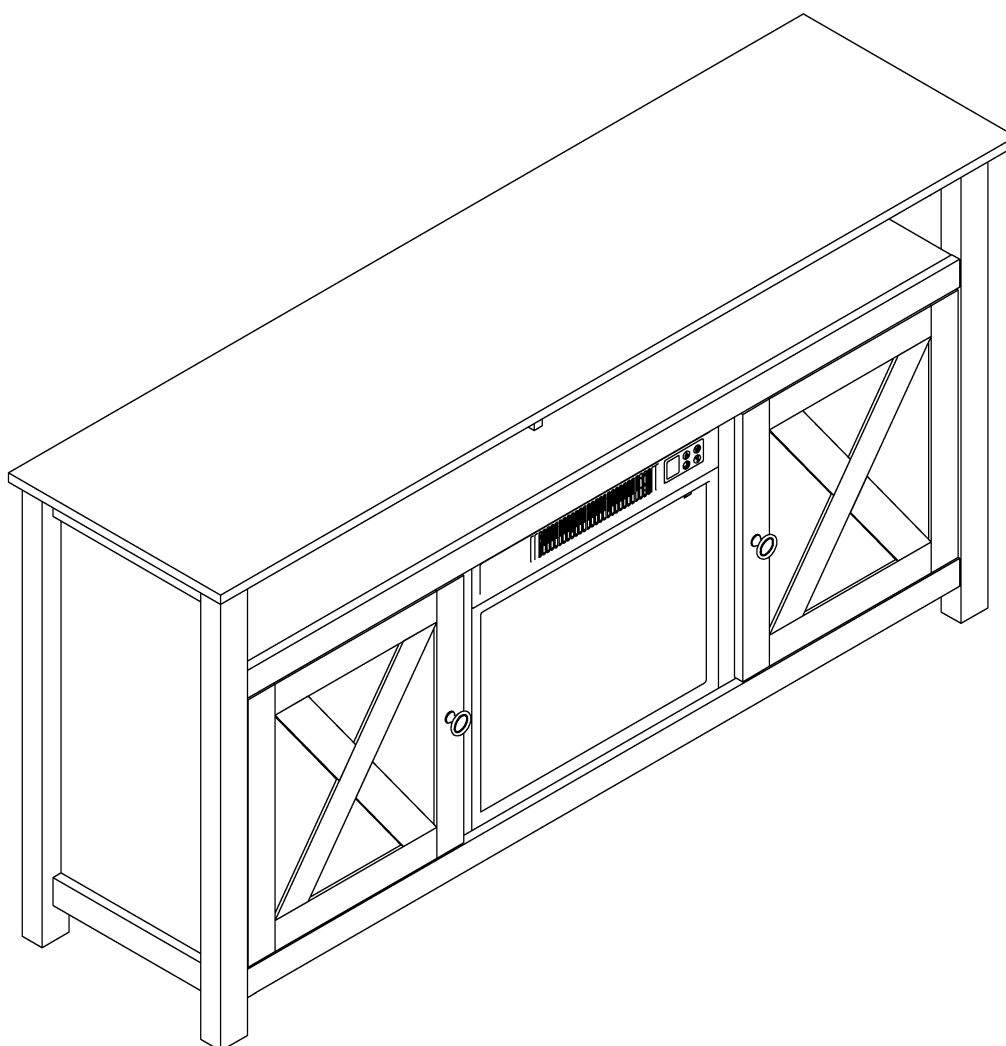
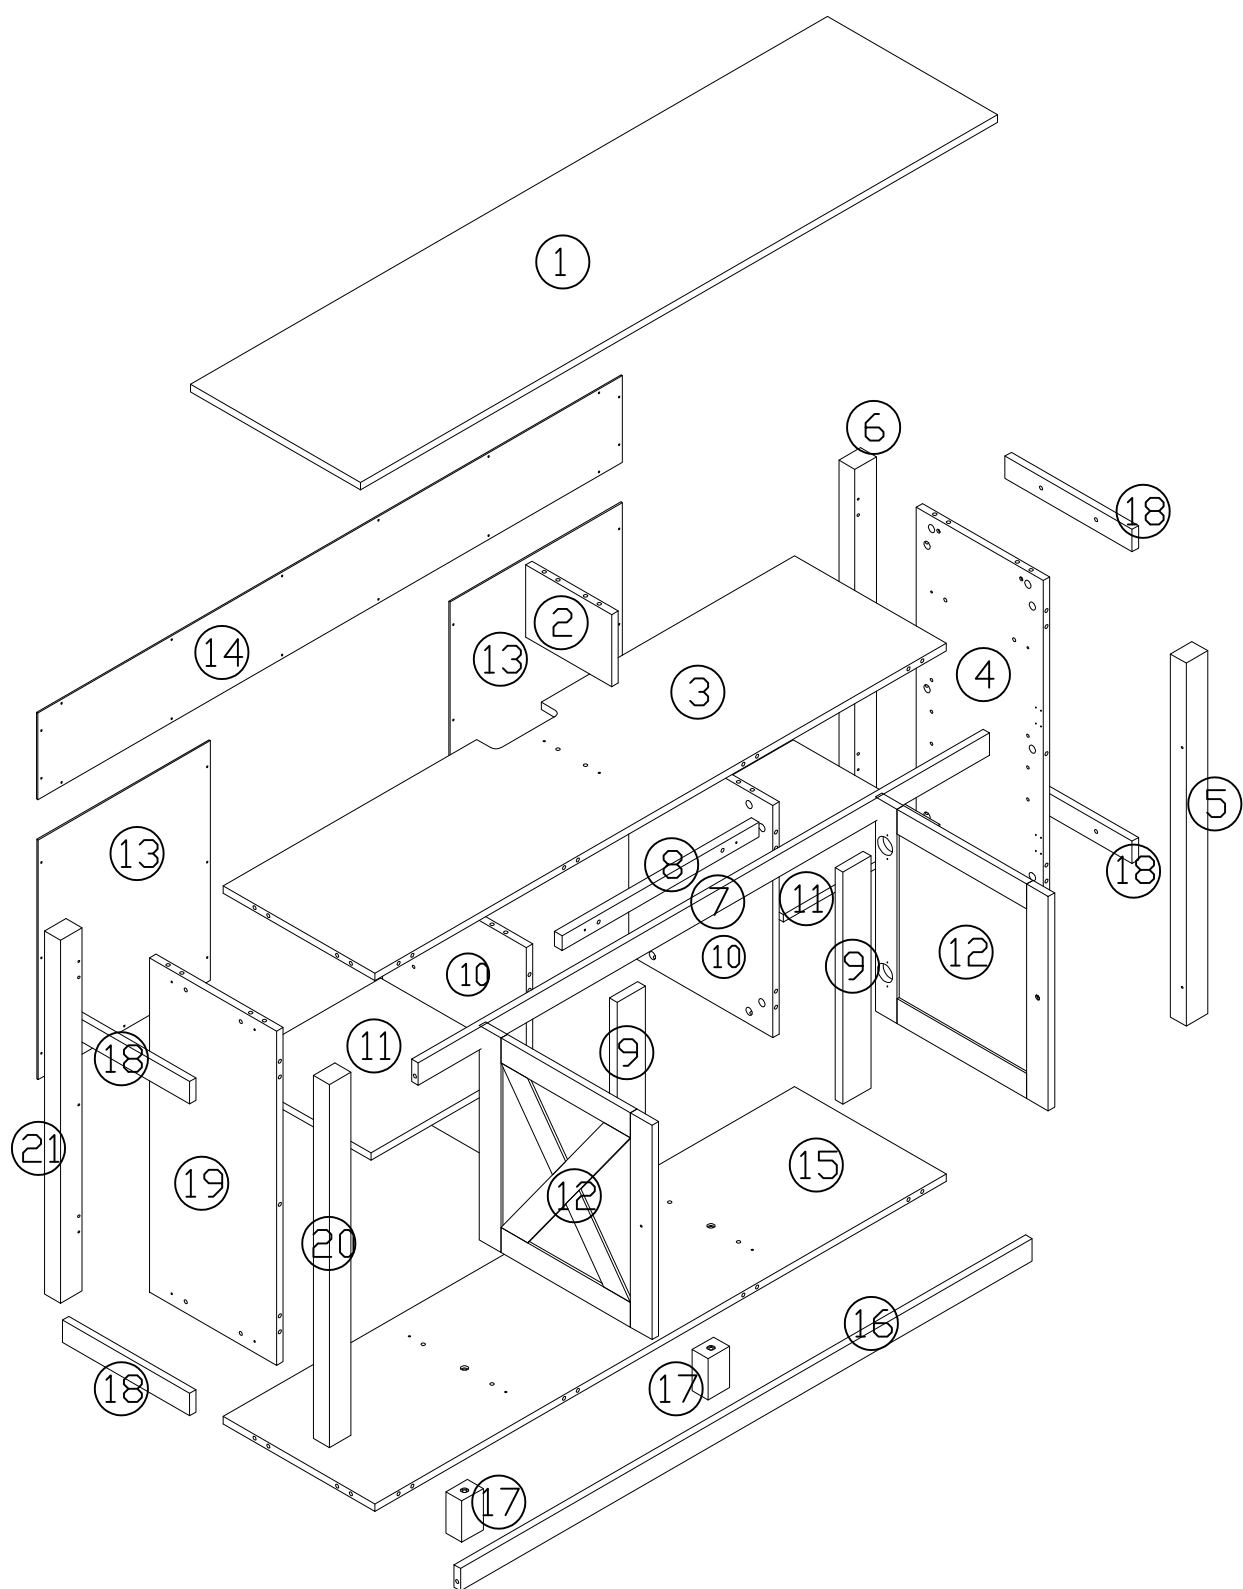
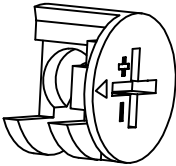
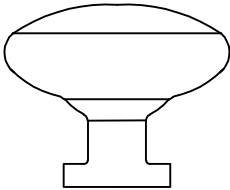


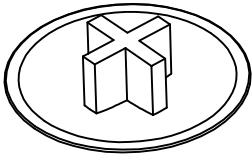
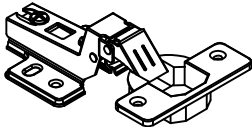
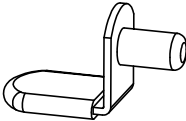
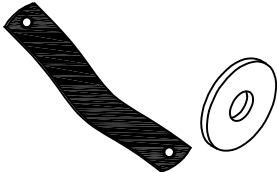
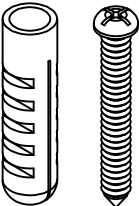




THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.





PACKAGE CONTENT		
CODR	DESCRIPTION	QTY
1	Panel	1
2	Upper neutral plate	1
3	Laminate	1
4	Right side plate	1
5	Right forefoot post	1
6	Right post post	1
7	Laminate baffle	1
8	The furnace core transverse block	1
9	Furnace core vertical block	2
10	Lower neutral plate	2
11	Active laminate	2
12	Door panels	2
13	Lower back panel	2
14	Upper back panel	1
15	Floor	1
16	Floor baffle	1
17	Center post	2
18	Side panel trim strip	4
19	Left side plate	1
20	Left forefoot post	1
21	Left post post	1

Ⓐ  52X+2X	Ⓑ ø8×30mm  44X+2X	Ⓒ ø15  52X+2X	Ⓓ  2X
Ⓔ ø3.9× 15mm  24X+1X	Ⓕ ø3.5×16mm  36X+1X	Ⓖ ø5/32" × 17mm  2X	Ⓗ ø1/4" × 30mm  2X
Ⓘ  30X	Ⓙ  4X	Ⓚ  8X	Ⓛ  2X+4X
Ⓜ  2X+2X	Ⓝ  6X	Ⓞ ø8×20mm  10X	Ⓟ ø3.9× 25mm  8X
Ⓠ ø3.9× 30mm  2X			



Step 1

A		4
B		4

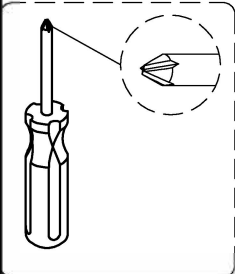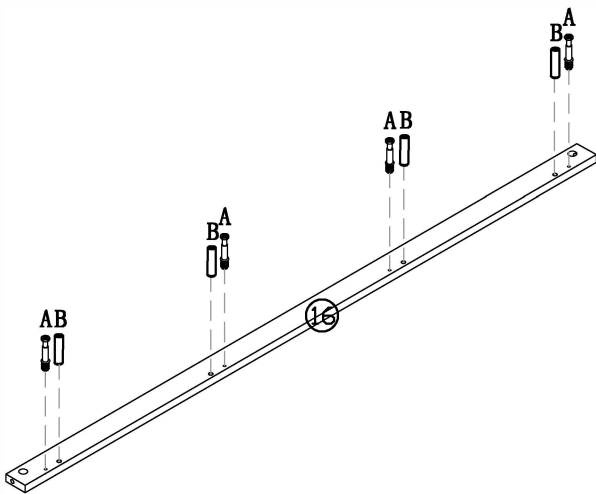



Step 2

C		4
---	---	---

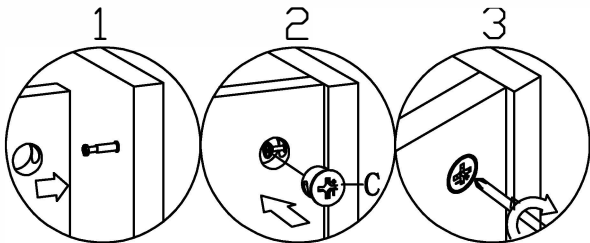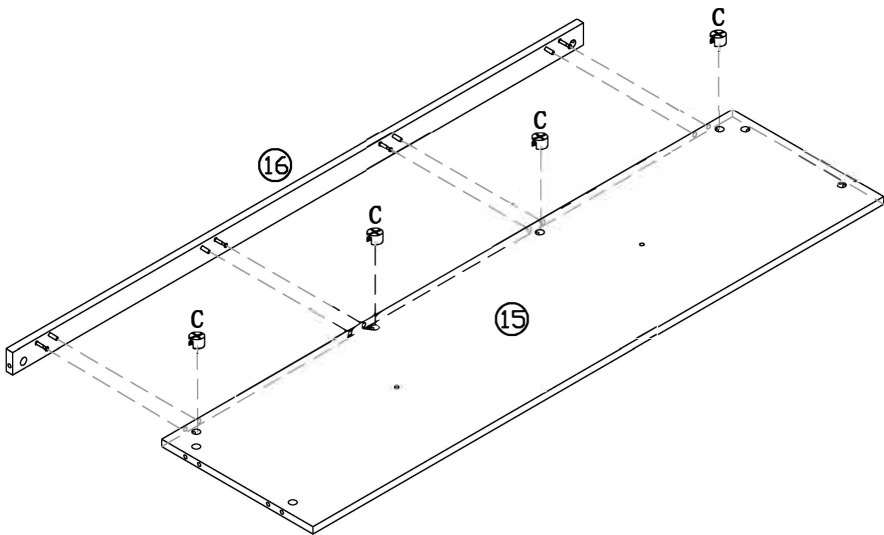



Step 3

A		4
B		4

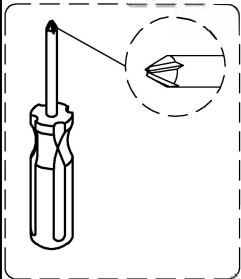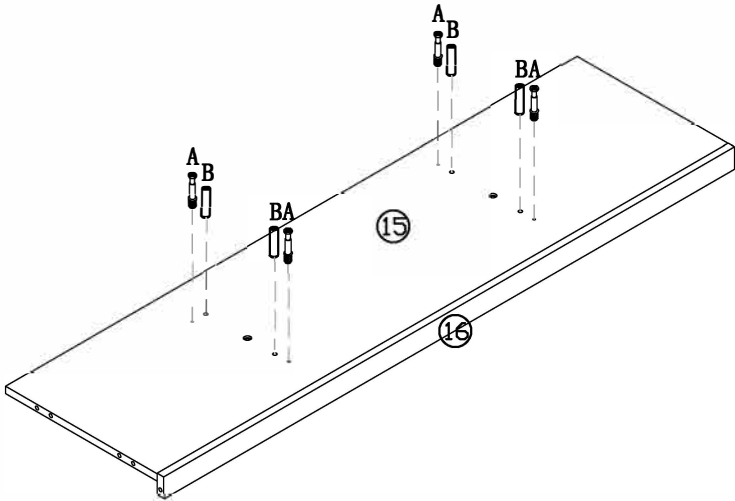



Step 4

H		2
N		2

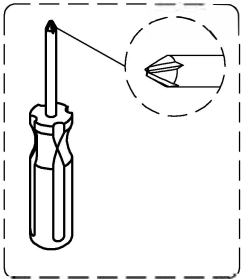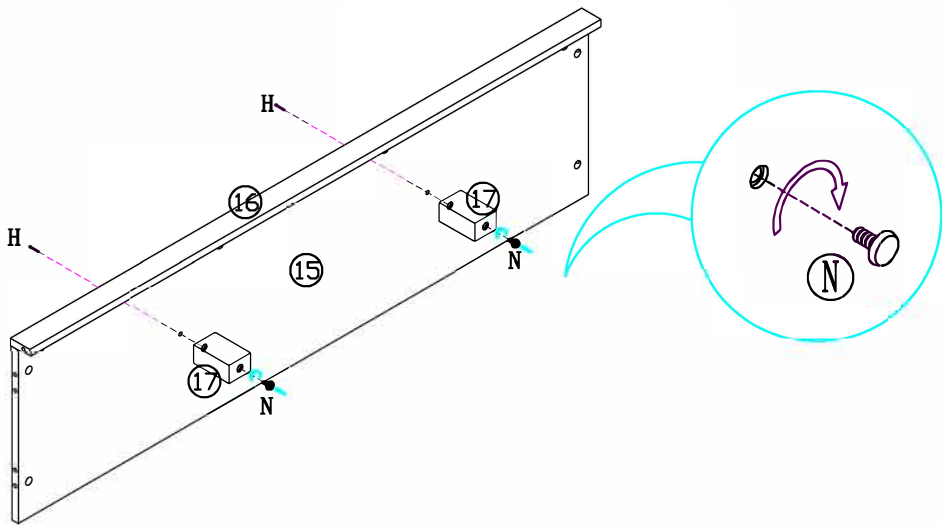




Step 5

A		4
B		4

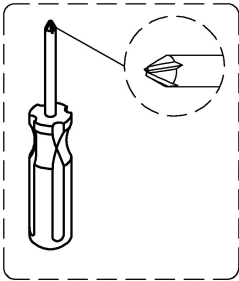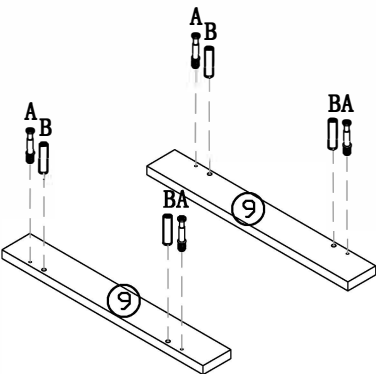



Step 6

C		4
---	---	---

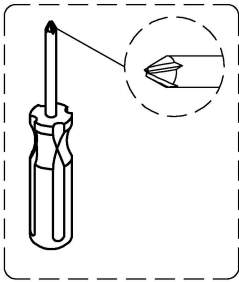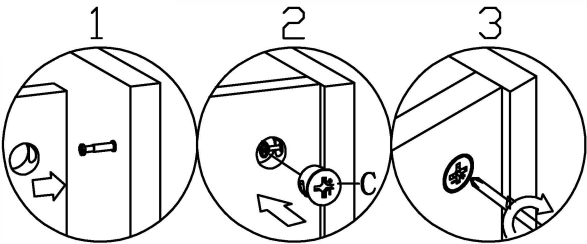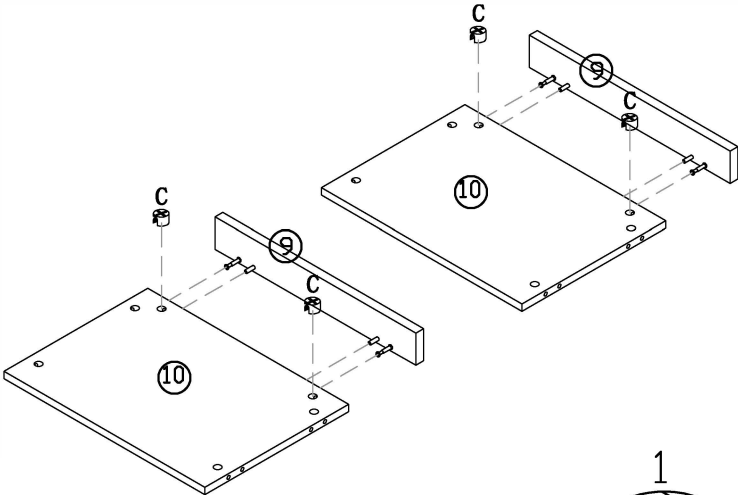



Step 7

C		4
---	---	---

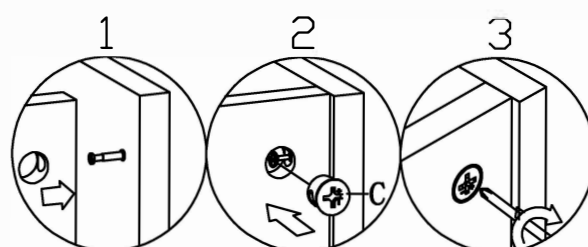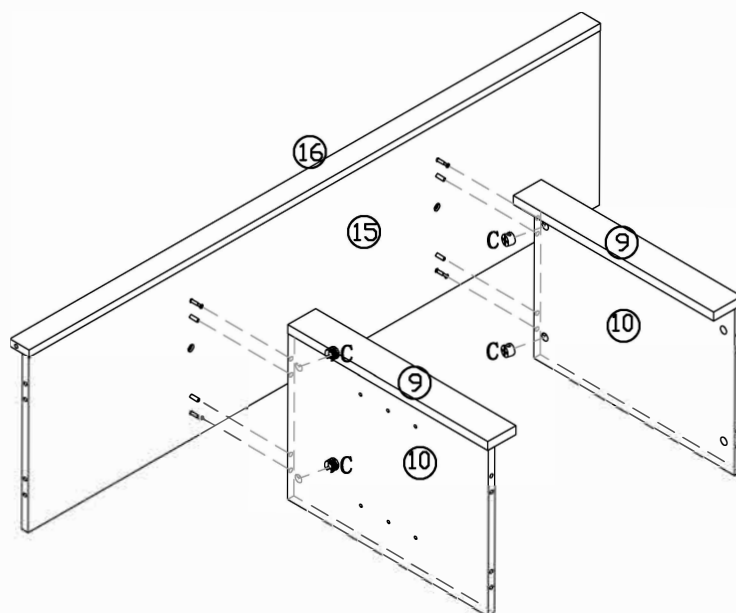



Step 8

A		4
B		4
		2

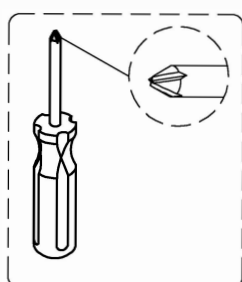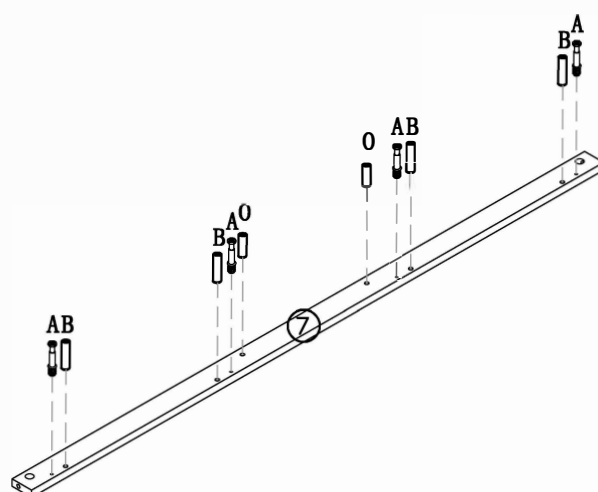



Step 9

Q		2
---	--	---

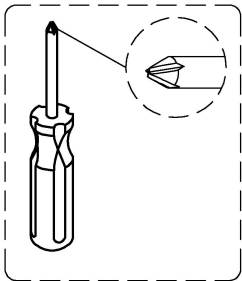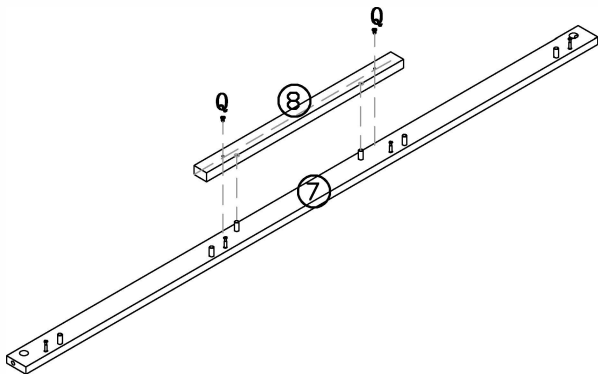



Step 10

C		4
---	---	---

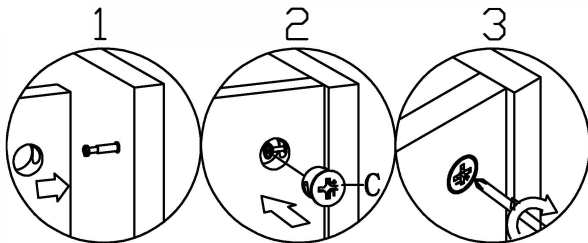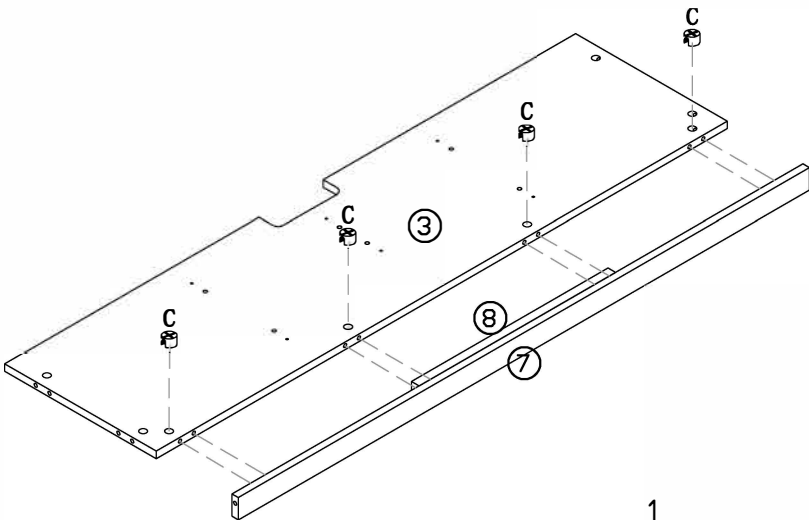



Step 11

A		4
B		4

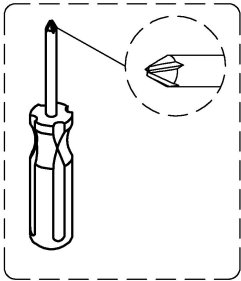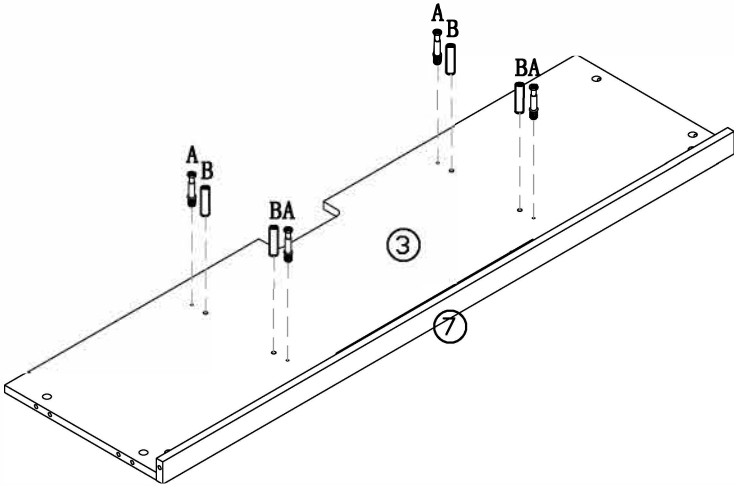




Step 12

A		2
B		2

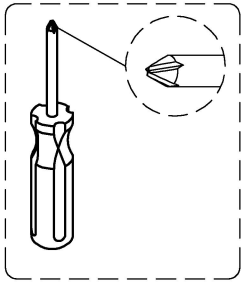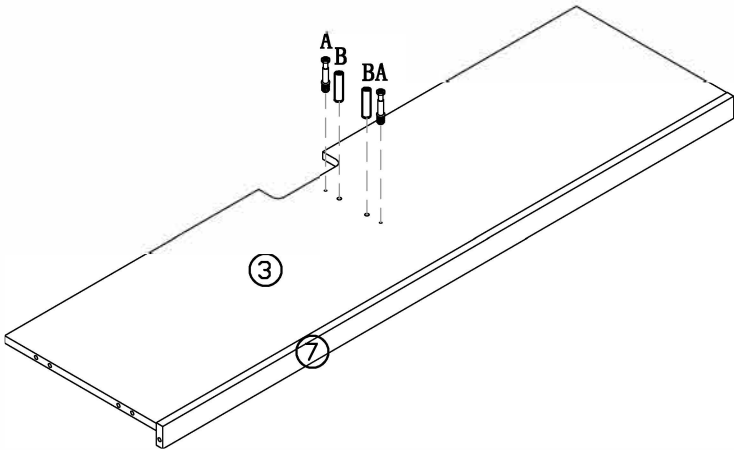



Step 13

C  2

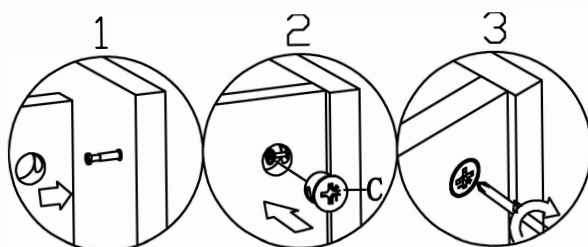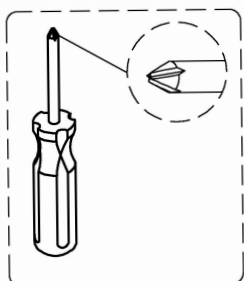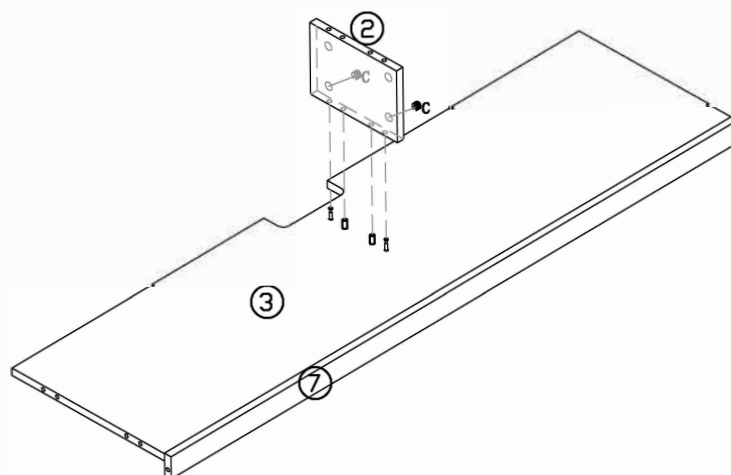



Step 14

C  4

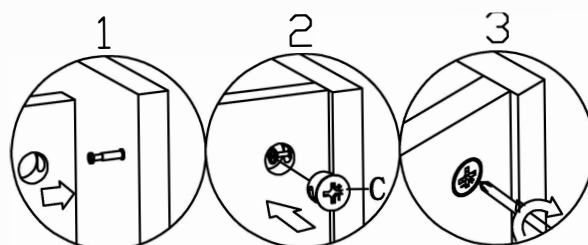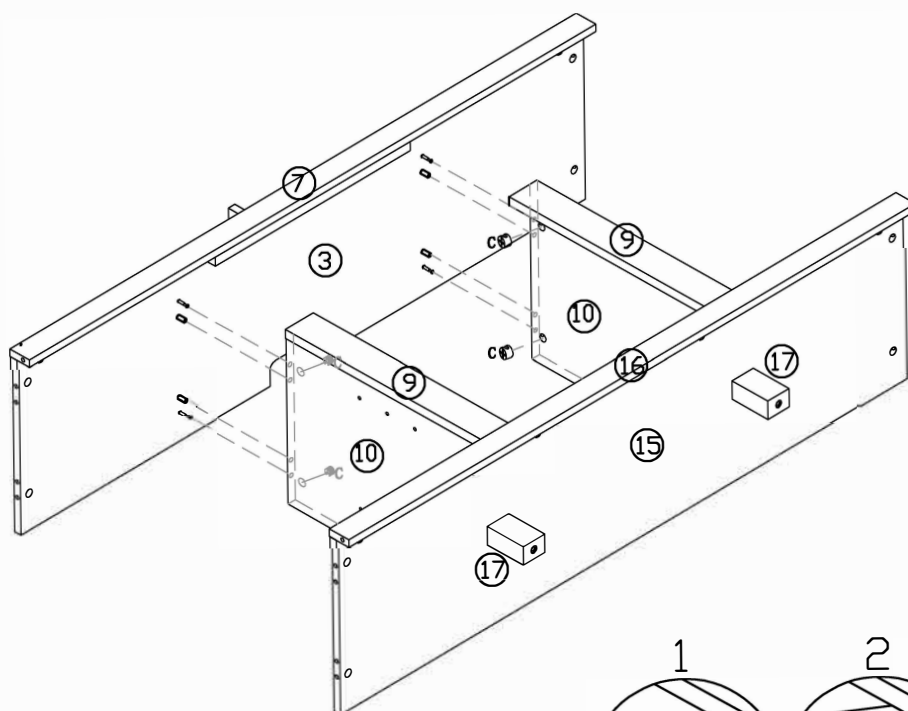



Step 15

A		8
B		4
N		2

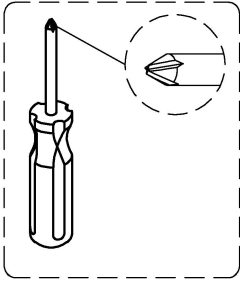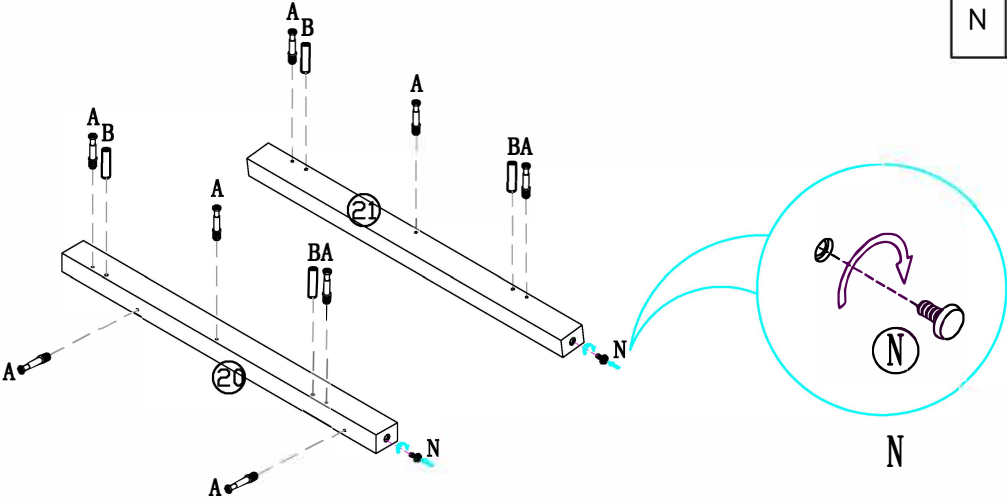



Step 16

A		8
B		4
N		2

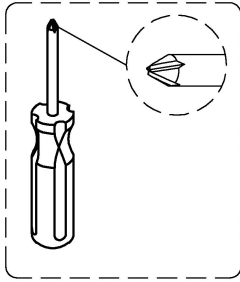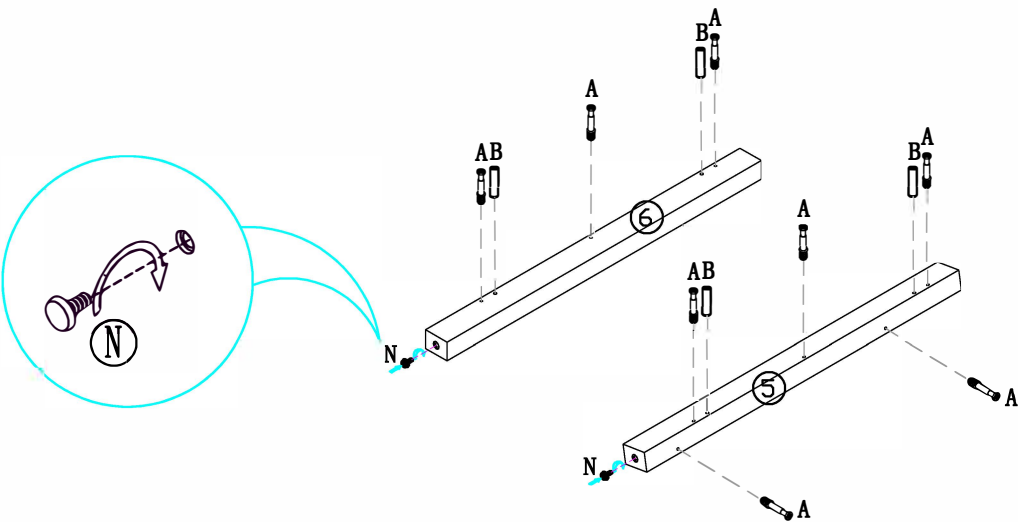


Step 17

		8
---	---	---

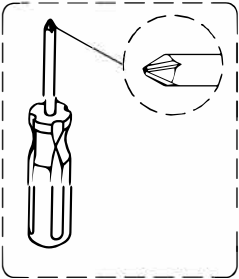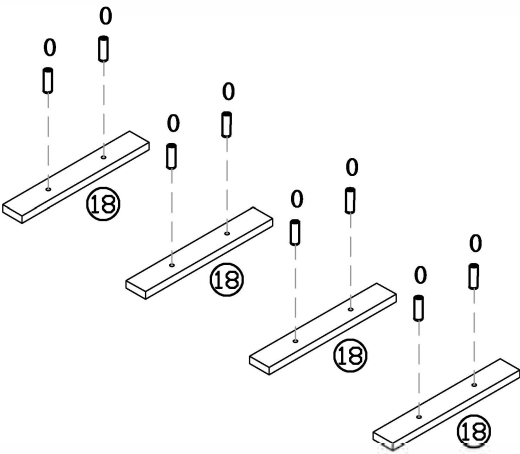



Step 18

P		4
---	---	---

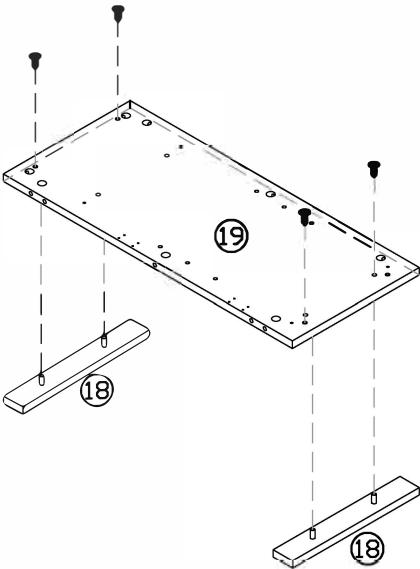




Step 19

P		4
---	---	---

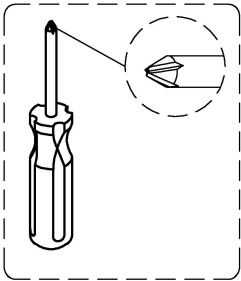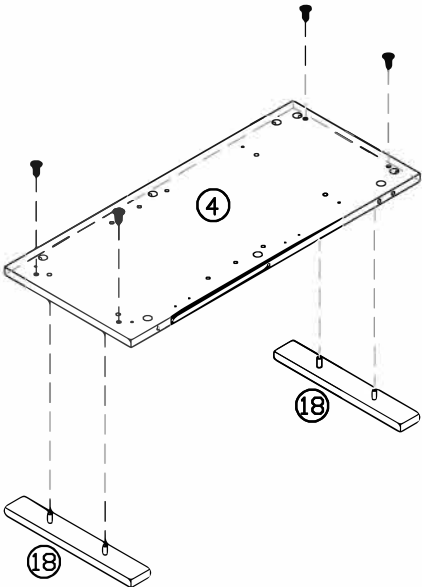




Step 20

A		4
B		4
C		6

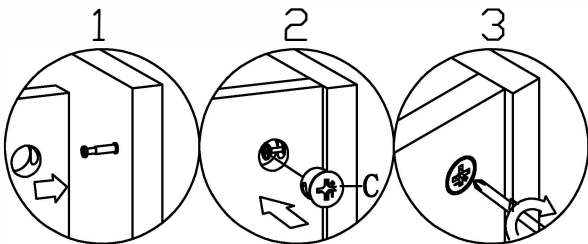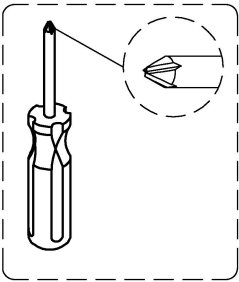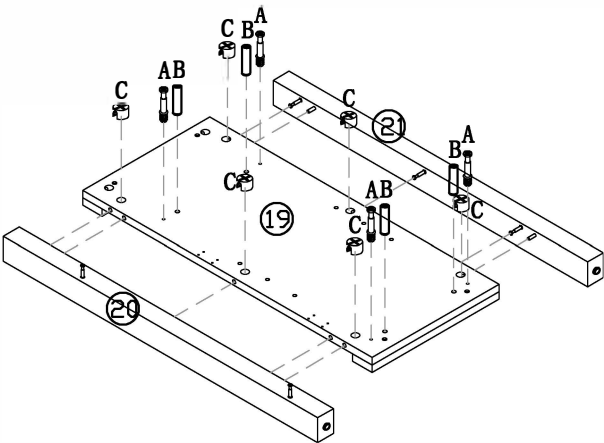



Step 21

A		4
B		4
C		6

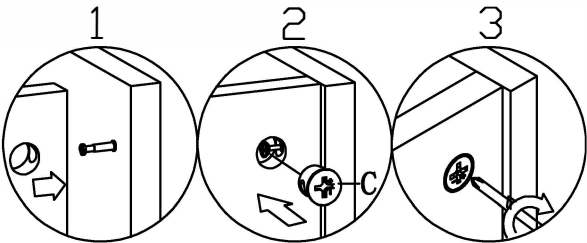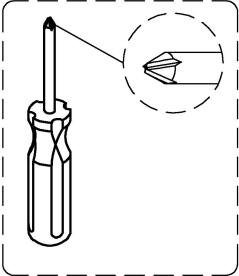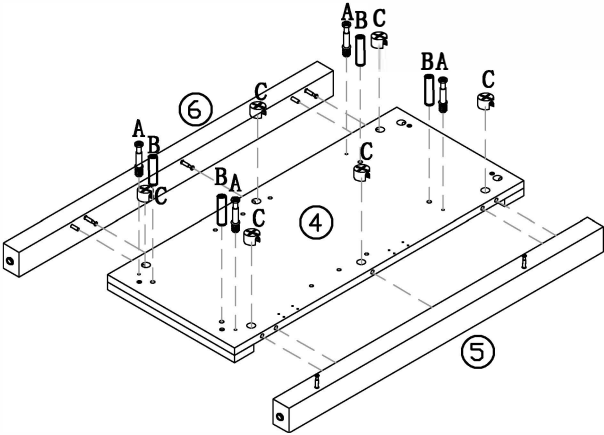



Step 22

C		8
---	---	---

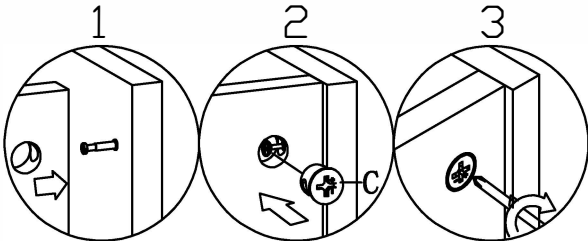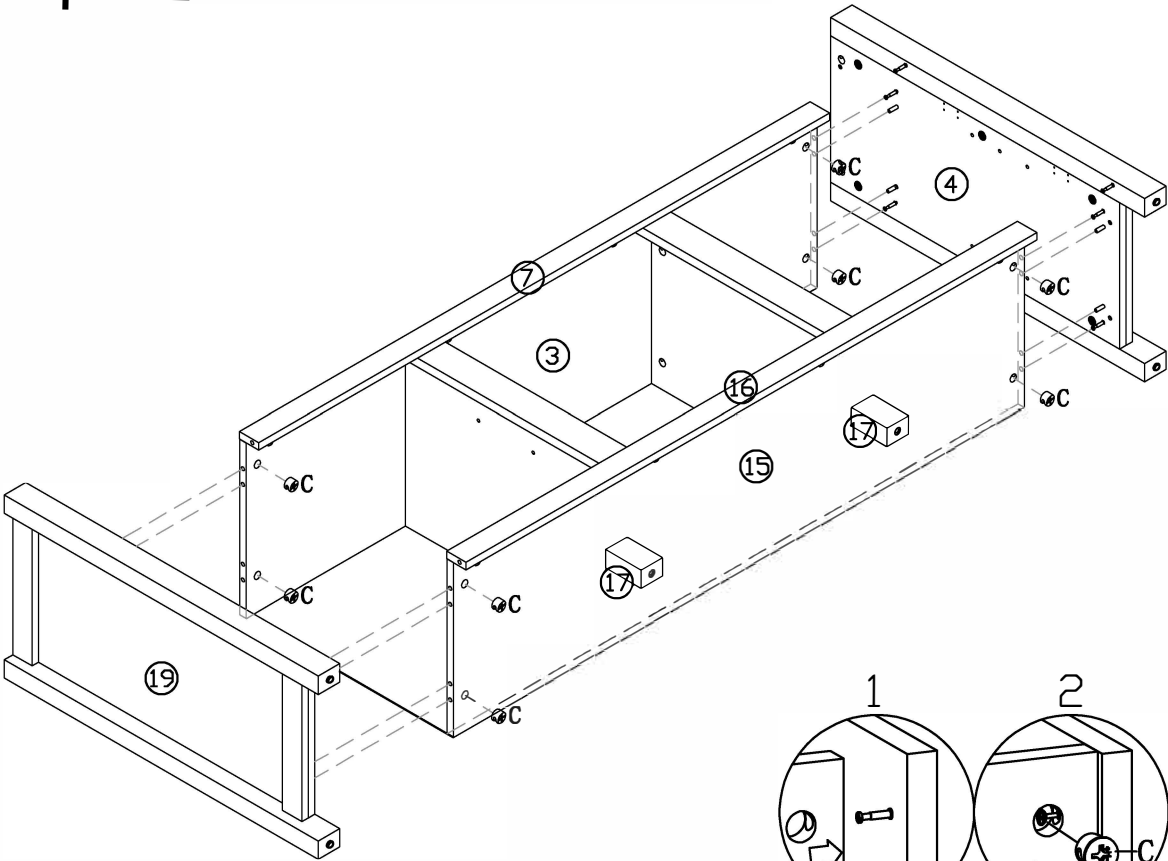



Step 23

A		6
B		6

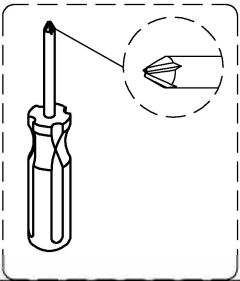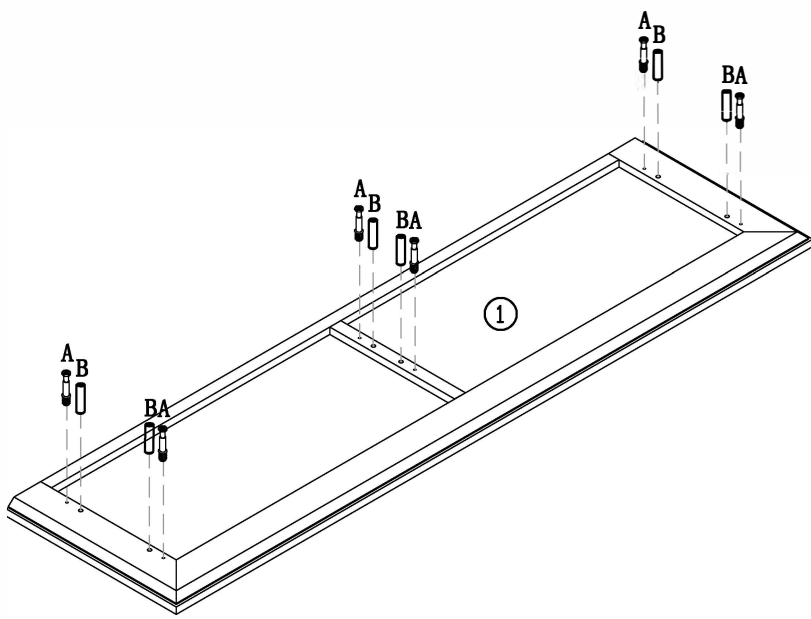


Step 24

C		6
---	---	---

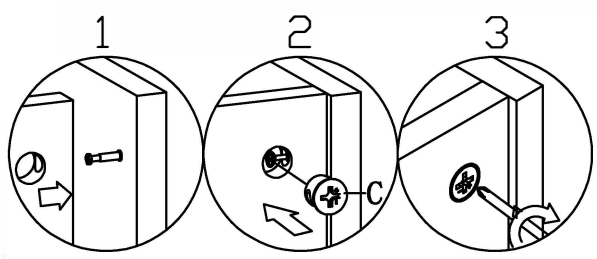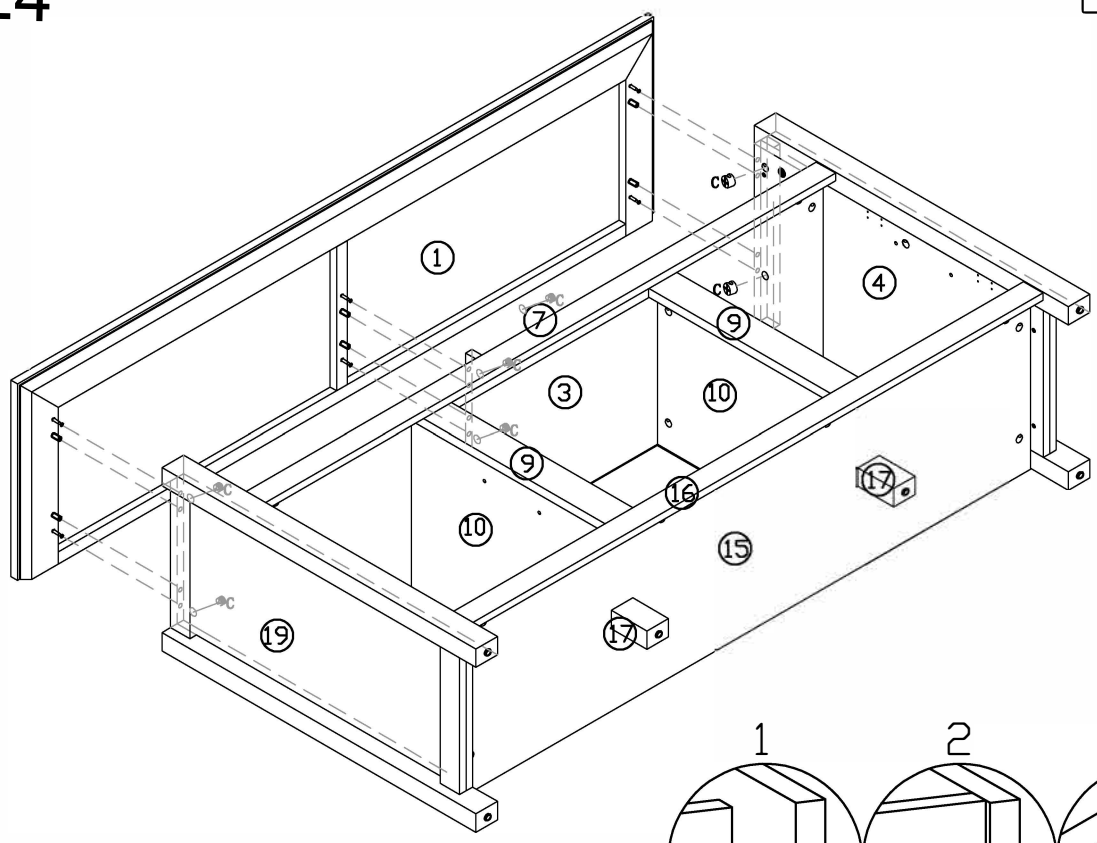


Step 25

F		34
---	---	----

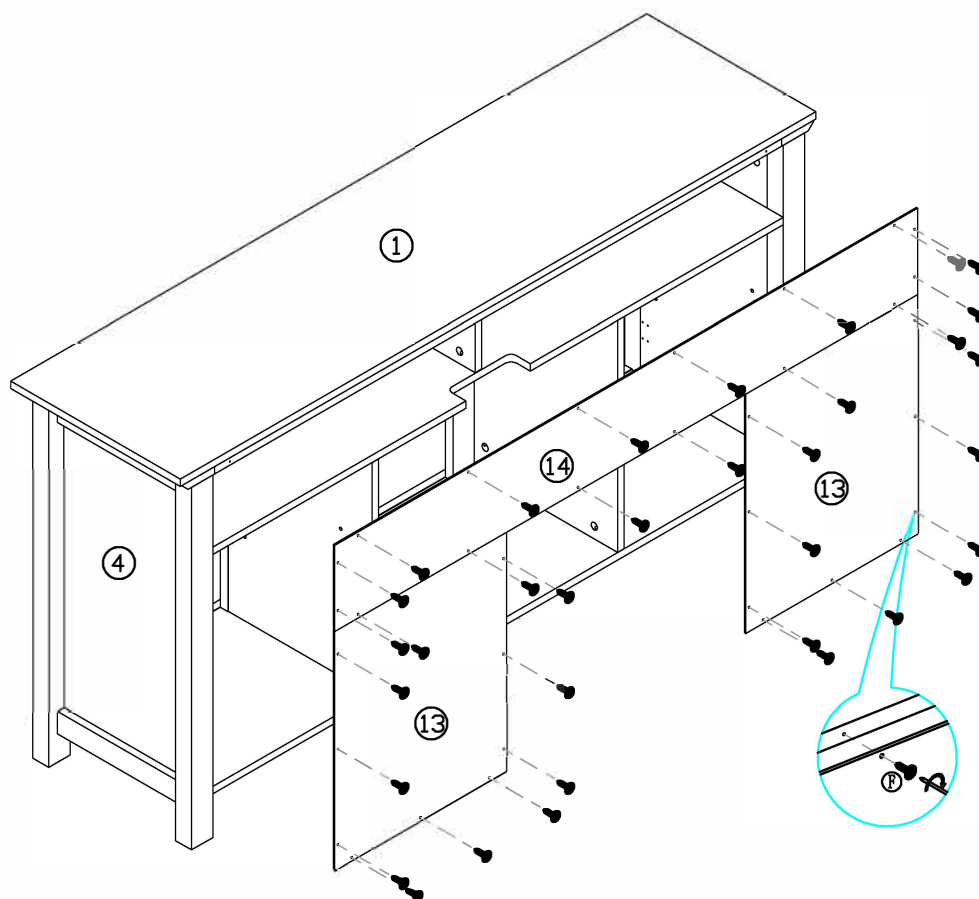


Step 26

I		30
---	---	----

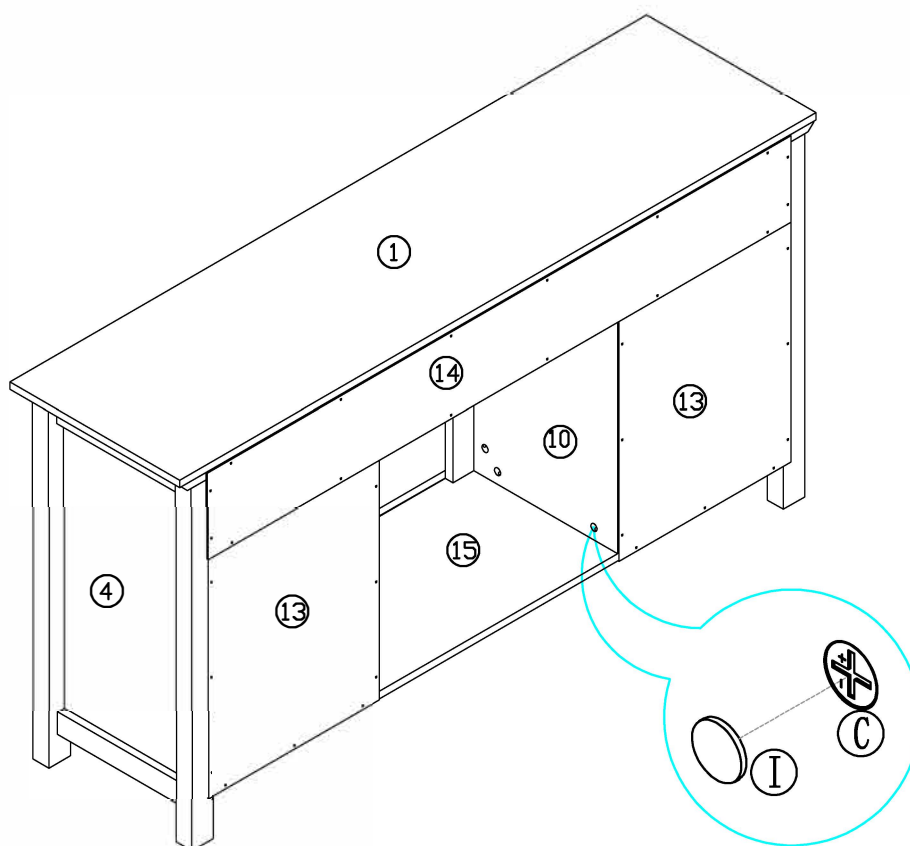


Step 27

K		8
---	---	---

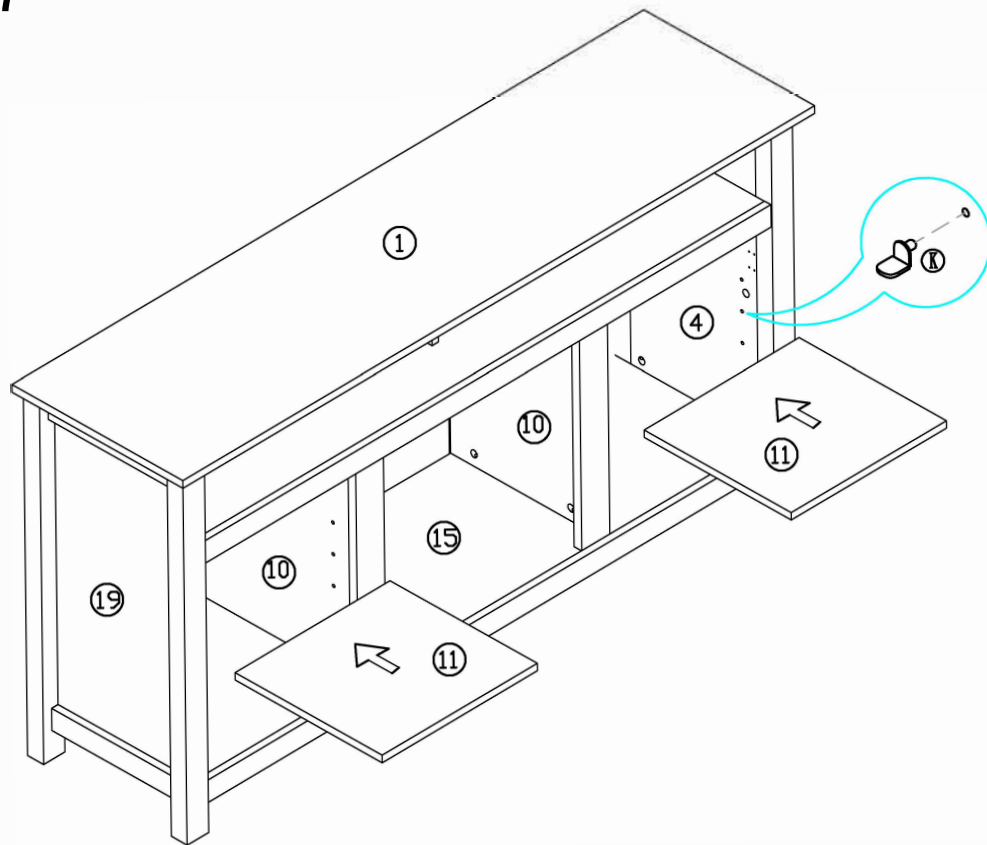

Step 28


J		4
E		8

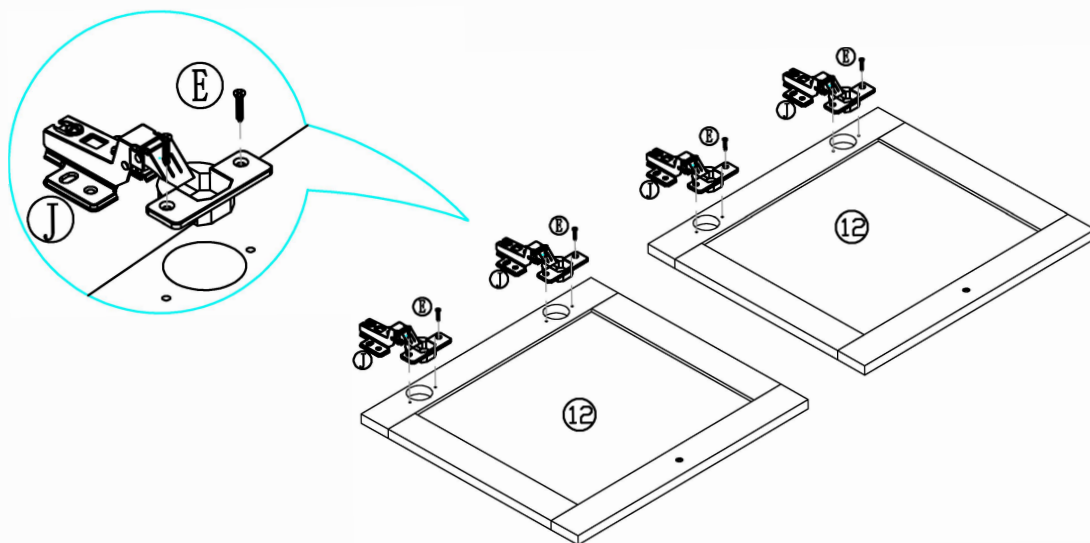

Step 29


Note: When installing the cabinet door, install the bottom hinge first, and then install the upper part of the hinge.

E		16
---	---	----

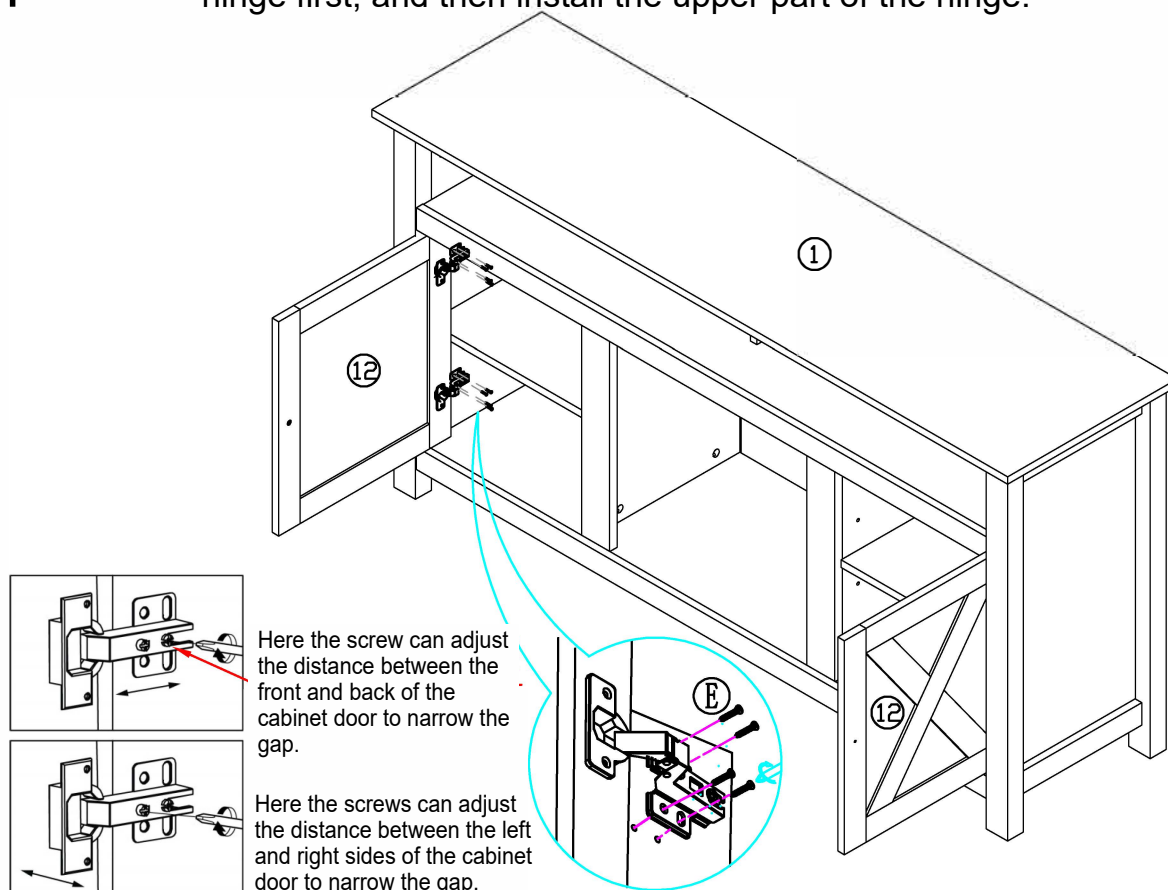


Step 30


D		2
G		2

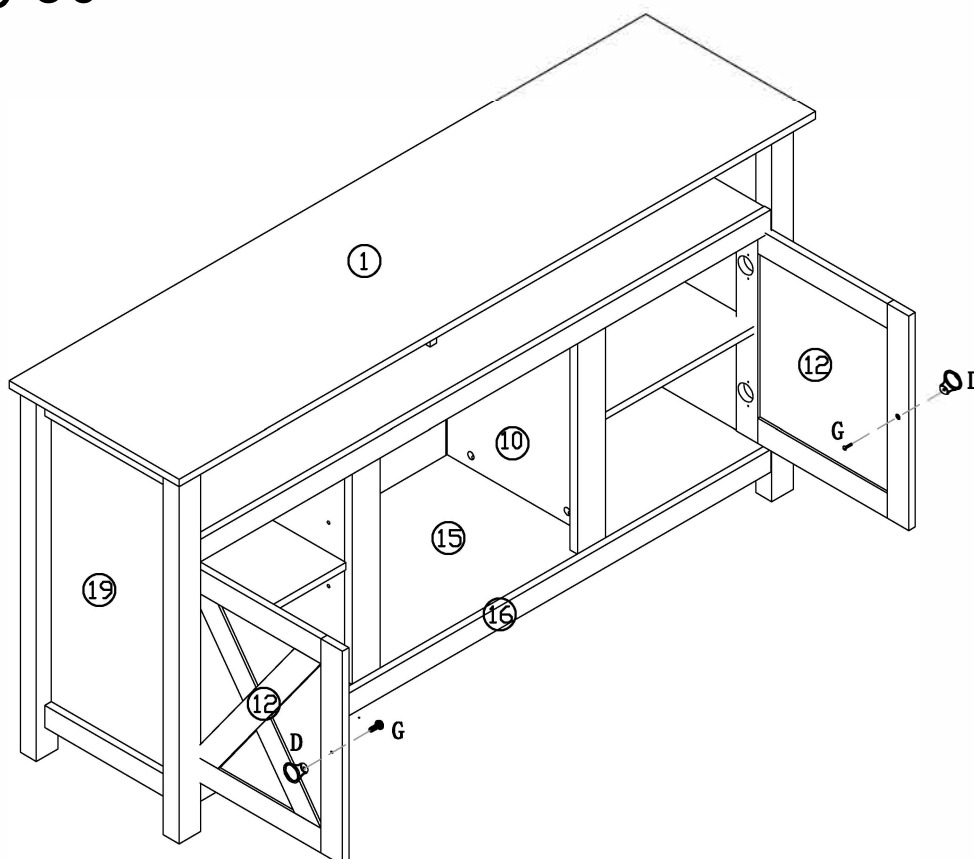


Step 31

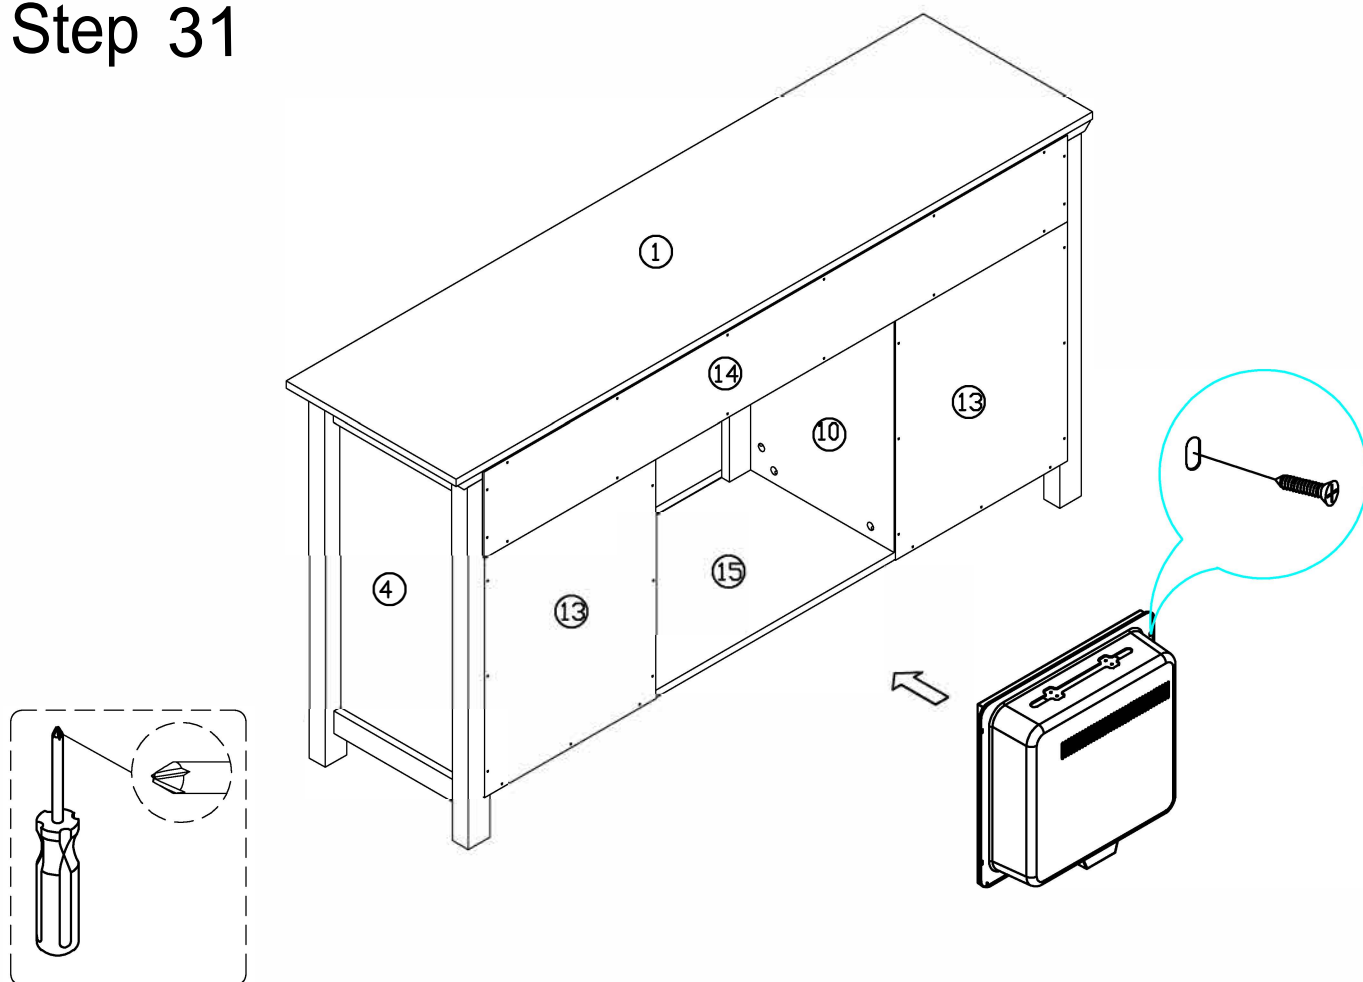





Step 32

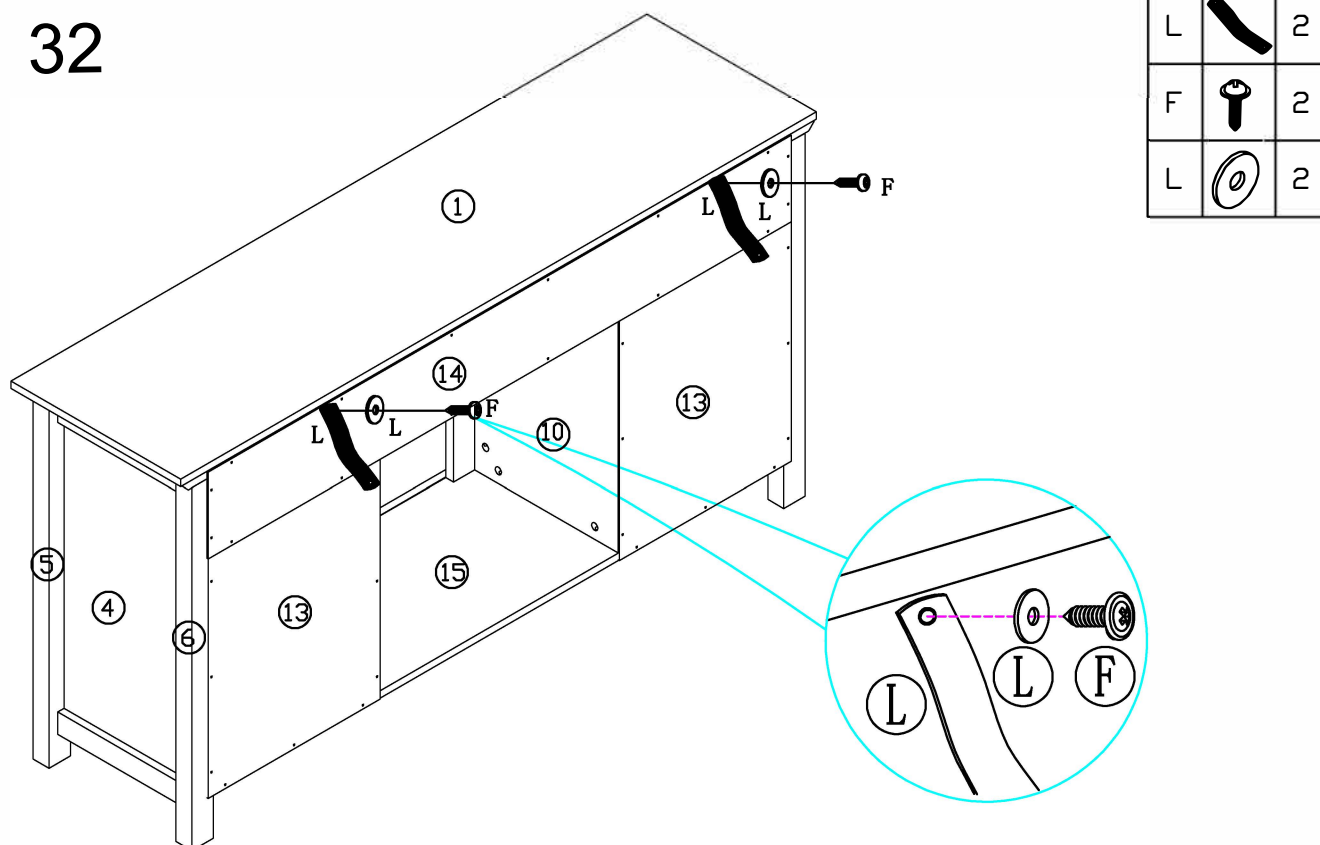

Step 33

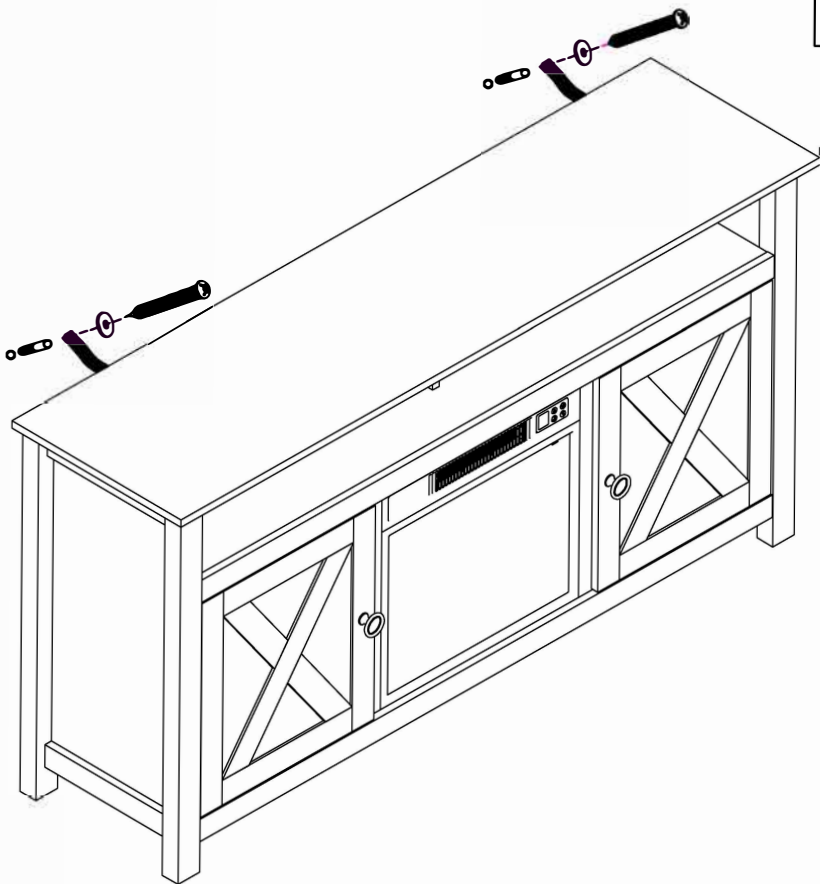

M		2+2
L		2

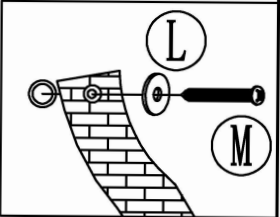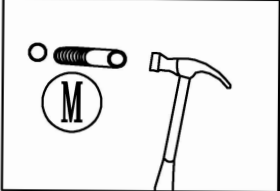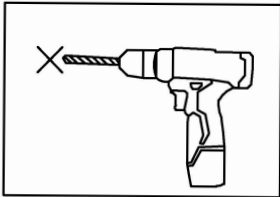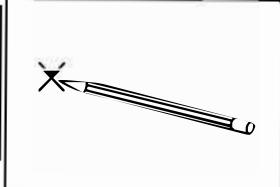

Step 34

