

Installation Instructions

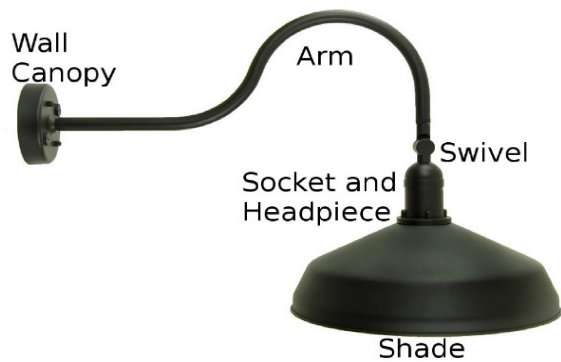



Figure A



Figure A



Heavy Duty Cross Mounting Yoke

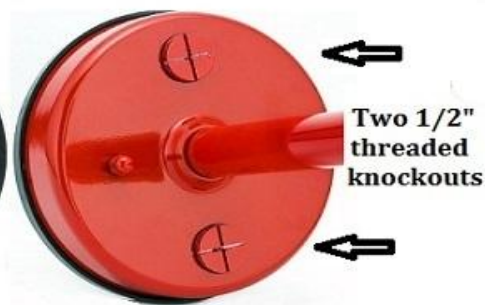

Heavy Duty Cast Wall Canopy



Shade Screws



Wire Nuts



Exclusive Cast Swivel & Head Piece



Exclusive Recessed Socket Design



Shade Gasket & Washer

IMPORTANT WARNING:

We highly recommend that all installations are made by a Licensed Electrical Contractor. We are NOT responsible by any means for the use or misuse of the following information. We are NOT responsible in whole or in part for any harm or damage that may or may not be caused. We reserve the right to revise the components of any product, due to parts availability or change in ETL, CUL or UL standards without assuming any obligation or liability to modify any products previously manufactured and without notice. These instructions do not cover all details of variations in equipment, nor do they provide for every possible contingency to be met in.

READ CAREFULLY BEFORE INSTALLING FIXTURE

This must be wired in accordance with the National Electrical Code and applicable local codes.

Warning: pertaining to risk of fire or personal injury.

Keep away from combustibles

Turn off/unplug power to change lamp. BE SURE THE POWER IS OFF!

Do not operate if cover shields are damaged or missing on bulbs

Allow fixture to cool down before putting the lamp to the socket.

Do not use lamp indetified for use in enclosed luminaries.

Do not overload transformer or cable rating.

Wiring Instructions

1. Pull the supply wire and the house ground wire out from the OUTLET BOX through the large center hole in the CROSS BAR (FIGURE B). Attach CROSS BAR to the OUTLET BOX using the MOUNTING SCREWS.
2. Place the WALL CANOPY (FIGURE A) over the OUTLET BOX and onto the fixture's MOUNTING SCREWS and adjust the fixture MOUNTING SCREWS until they protrude out an appropriate height from the back of the WALL CANOPY to allow the DECORATIVE NUTS to hold the WALL CANOPY tightly against the wall. Remove the WALL CANOPY and secure the position of the MOUNTING SCREWS against the CROSS BAR.
3. Place the GASKET (FIGURE A) on the WALL CANOPY and place both over the OUTLET BOX and onto the MOUNTING SCREWS (which should now protrude throught the WALL CANOPY) and sure in place using the DECORATIVE NUTS. Place O RUBBER RINGS before placing DECORATIVE NUTS (FIGURE B).
4. Before connecting your wires, make sure that all power to your installation is OFF!
Now attach the HOUSE GROUND WIRE to the FIXTURE'S GROUND WIRE. Fasten the HOUSE GROUND WIRE from the center hold of the outlet box to the FIXTURE GROUND WIRE from the CROSS BAR (FIGURE B). Proceed to attach the HOUSE WHITE WIRE to the FIXTURE'S WHITE WIRE. Finally attach the HOUSE BLACK (or RED) WiRE to the FIXTURE'S BLACK WIRE. Carefully tuck all wiring back into the OUTLET BOX, making sure there are no unexposed/uninsulated wires.

Shade Installation:

1. Place RUBBER GASKET between SHADE and SWIVEL/HEADPIECE, lining up the holes with those in the SWIVEL/HEADPIECE. (Note: the ADLXSV930 has a directional shade)
2. Line up the METAL WASHER inside the SHADE and line up with the holes, keeping the RUBBER GASKER and SWIVEL/HEADPIECE aligned.
3. With all holes lined up, insert the 4 SHADE SCREWS through the METAL WASHER and SHADE and screw them into the SWIVEL/HEADPEICE to secure the SHADE.
4. Insert the bulb. See labels on the fixture for maximum wattage - DO NOT USE MORE THAN MAXIMUM WATTAGE.
5. Restore power to installation point.
6. Optional: Adjust SHADE to ideal position.

Cleaning Instructions:

Caution: be sure fixture is cool to the touch before cleaning. Be sure the power is OFF.

Clean hood and fixture with mild soap or household type detergent. DO NOT use acid, ammonia or any other caustic solvent based cleaners.

FIGURE B

