

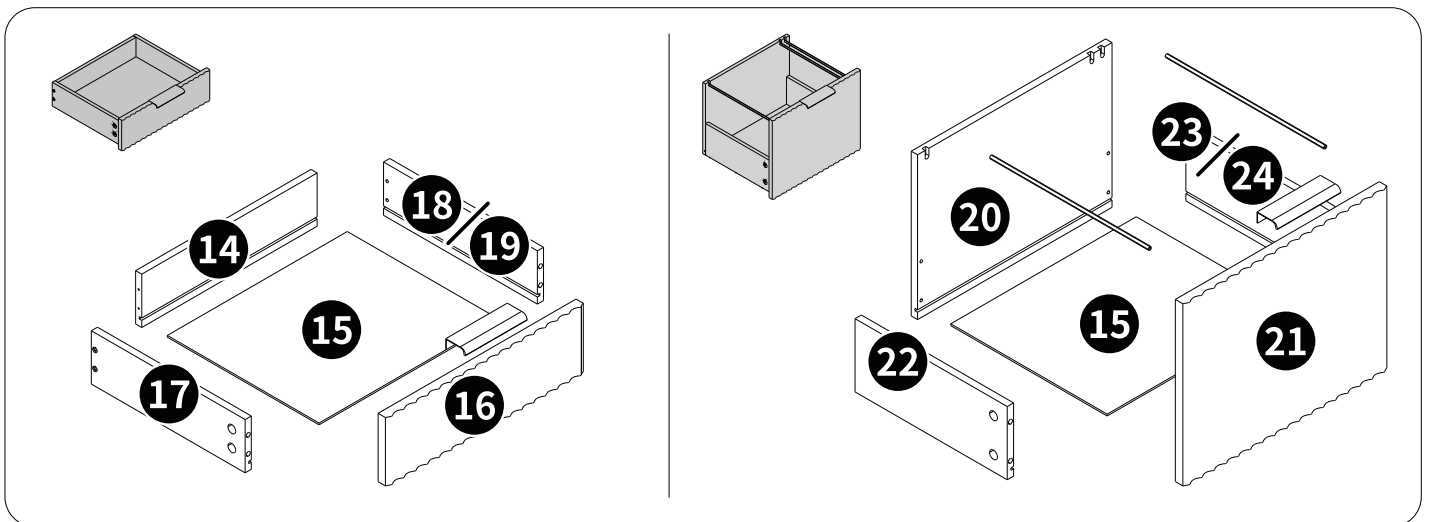
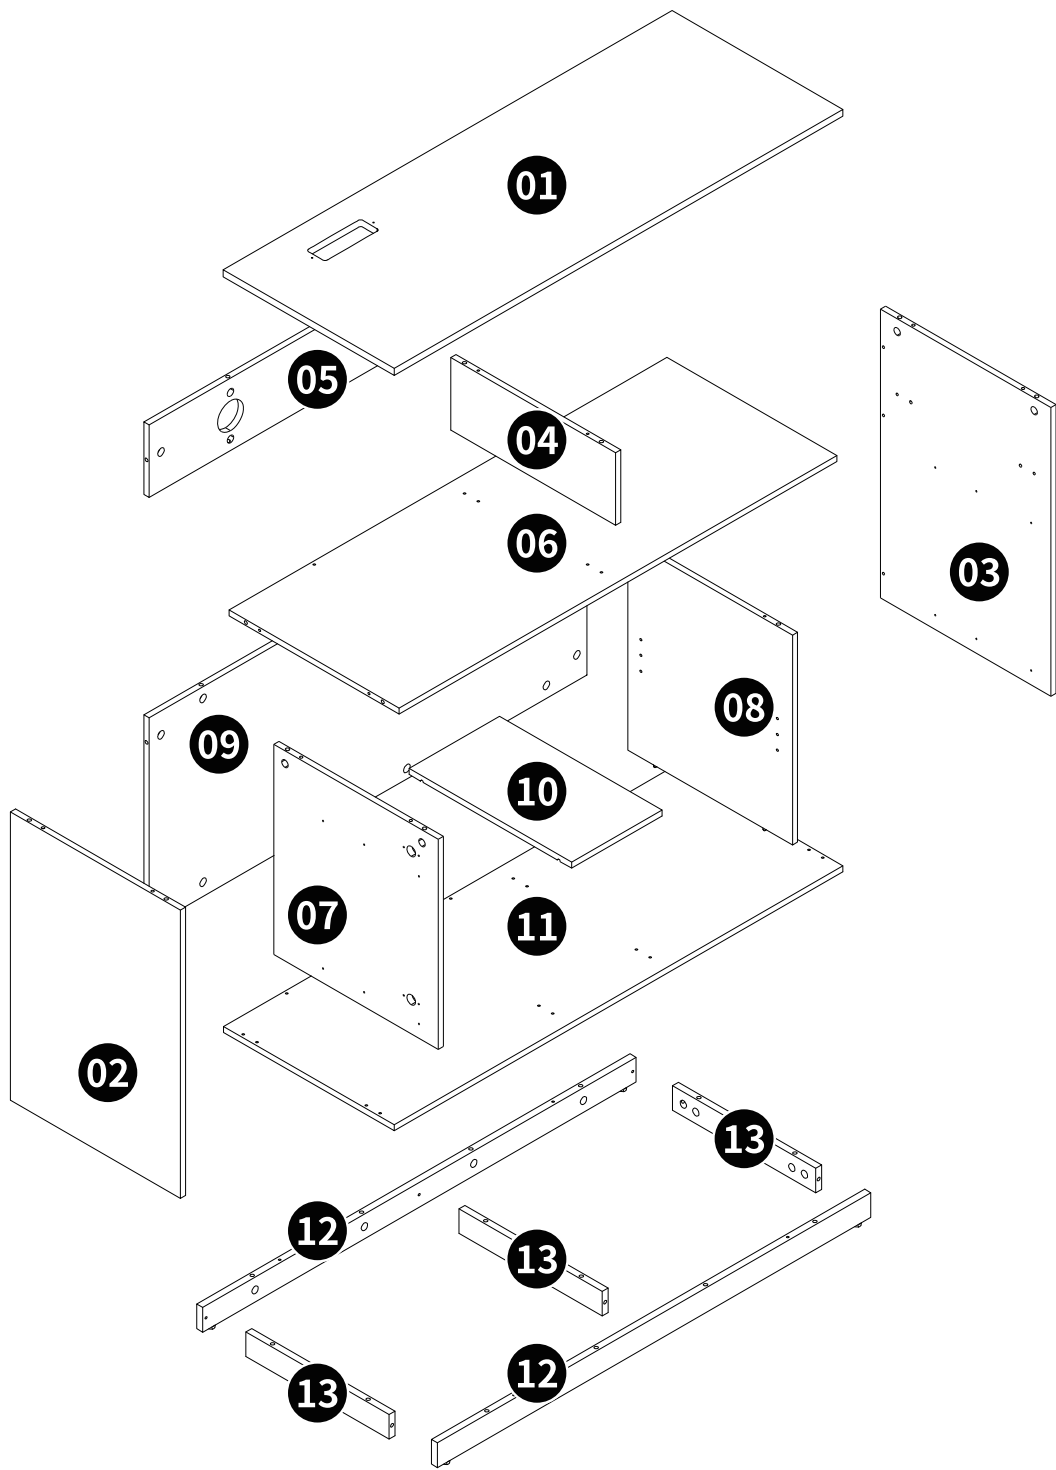
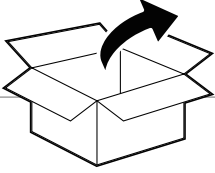
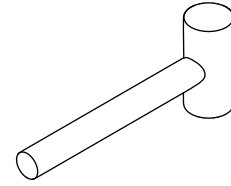



AMBFC06

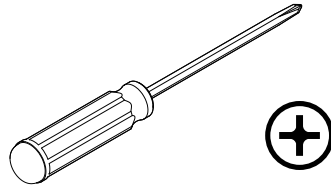

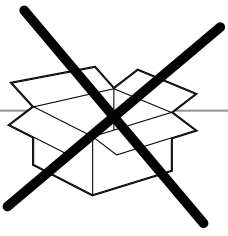


Ø15 x 9mm

(A) x 66

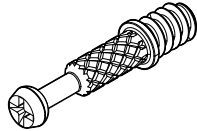

Ø6 x 32mm

(B) x 66

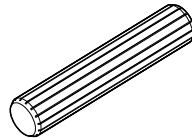

Ø6 x 30mm

(C) x 28




Ø3.5 x 12mm

(D) x 58




Ø4 x 12mm

(E) x 4

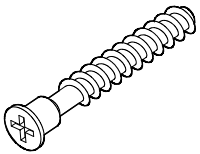


Ø5 x 40mm


(F) x 10

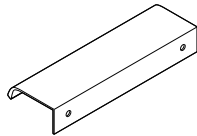

(G) x 4

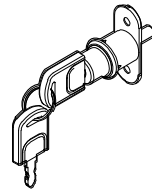


(H) x 2

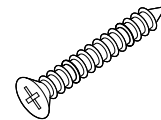

Ø4 x 38mm


(I) x 16

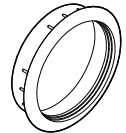


(J) x 1




(K) x 4

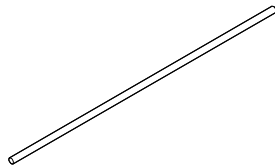


(L) x 4

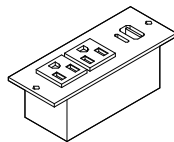

(M) x 1

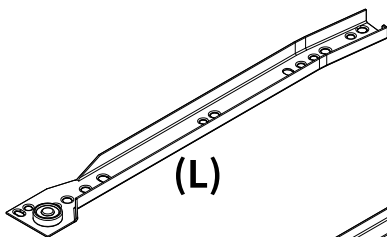


(L)

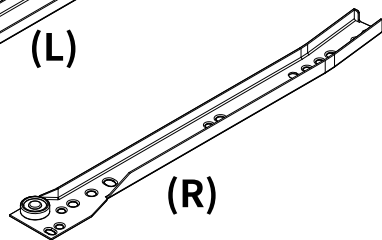


(R)

(N1) x 4

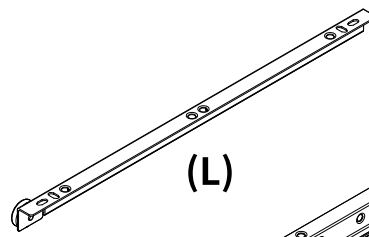


(L)

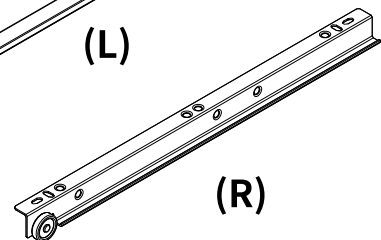




(R)

(N2) x 4


Installation Guide



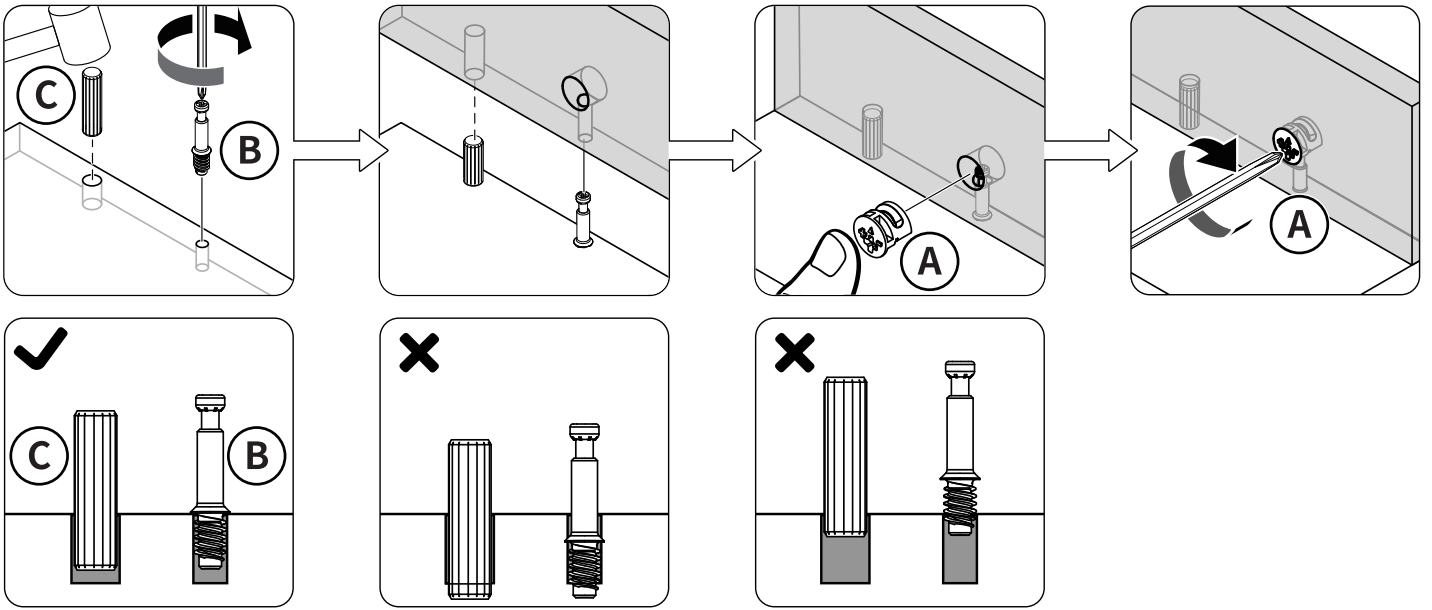








1


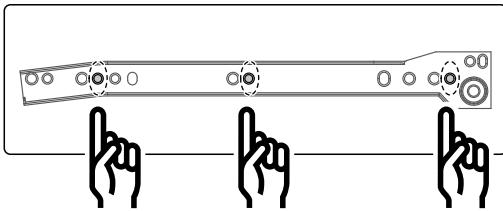
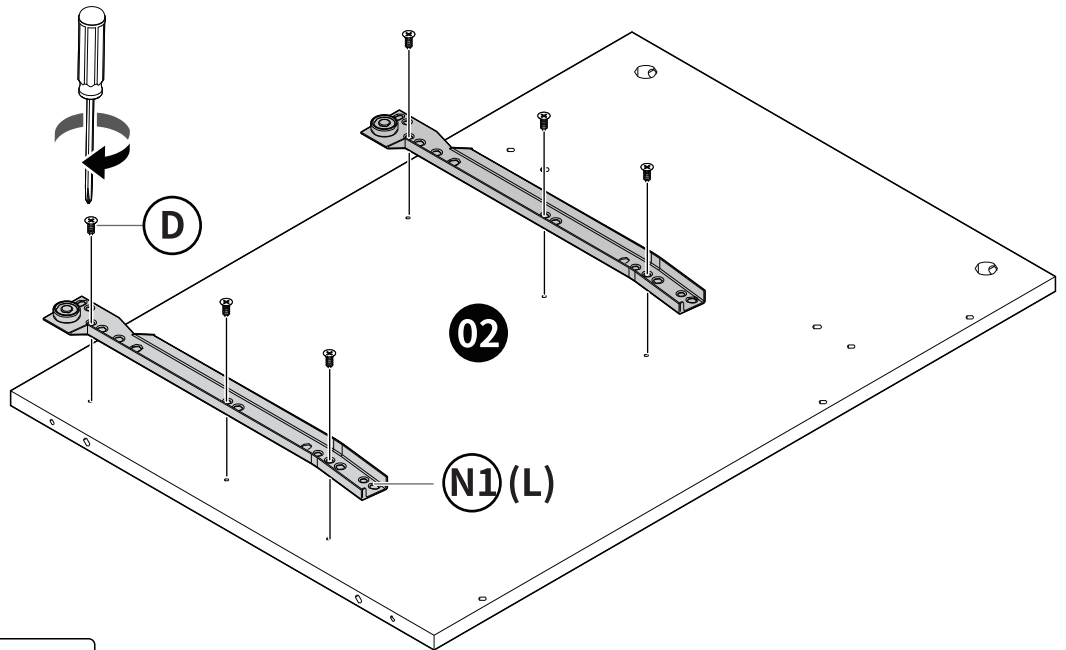
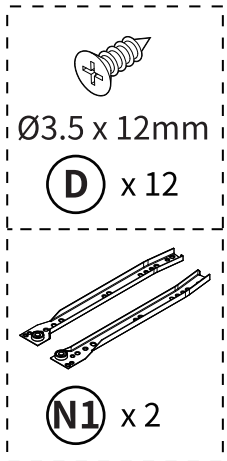


Note: Fully tighten screws to avoid loose drawers and ensure smooth movement.





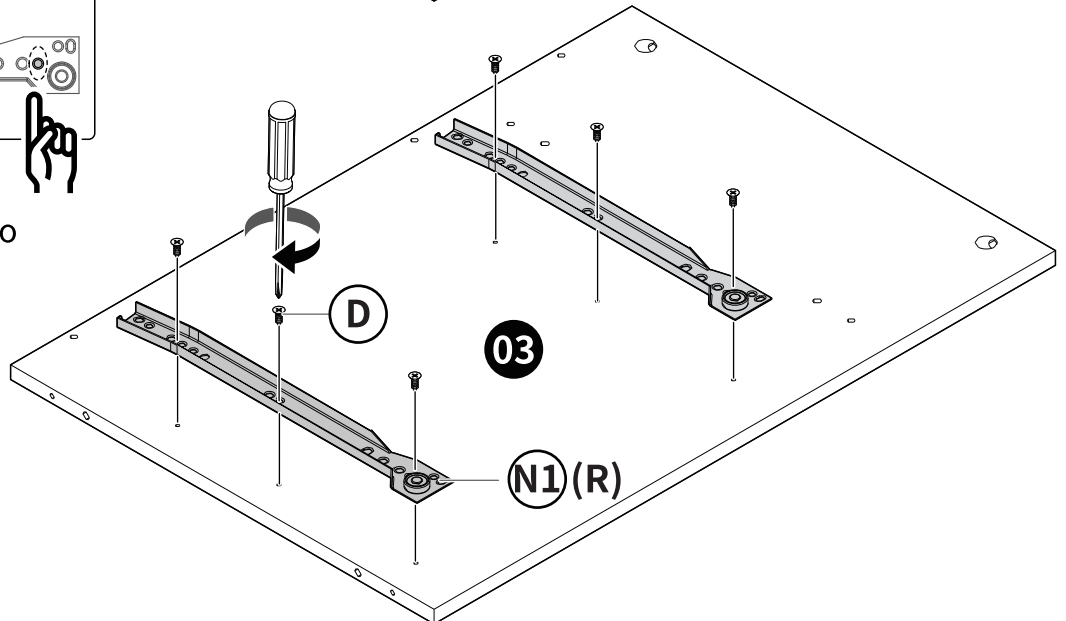




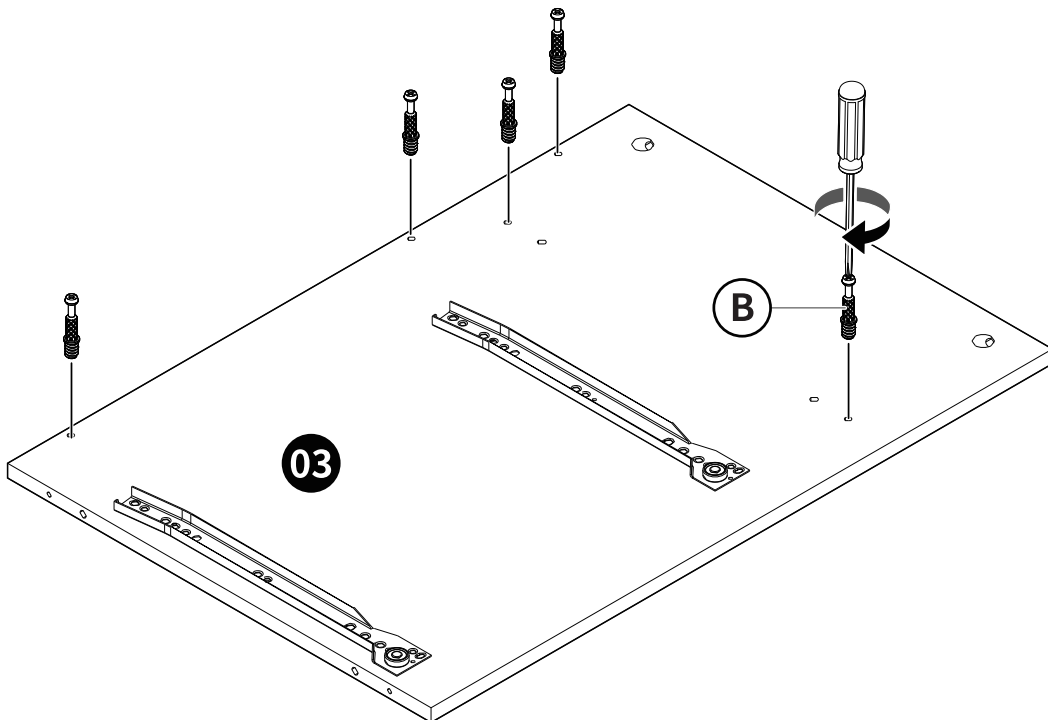
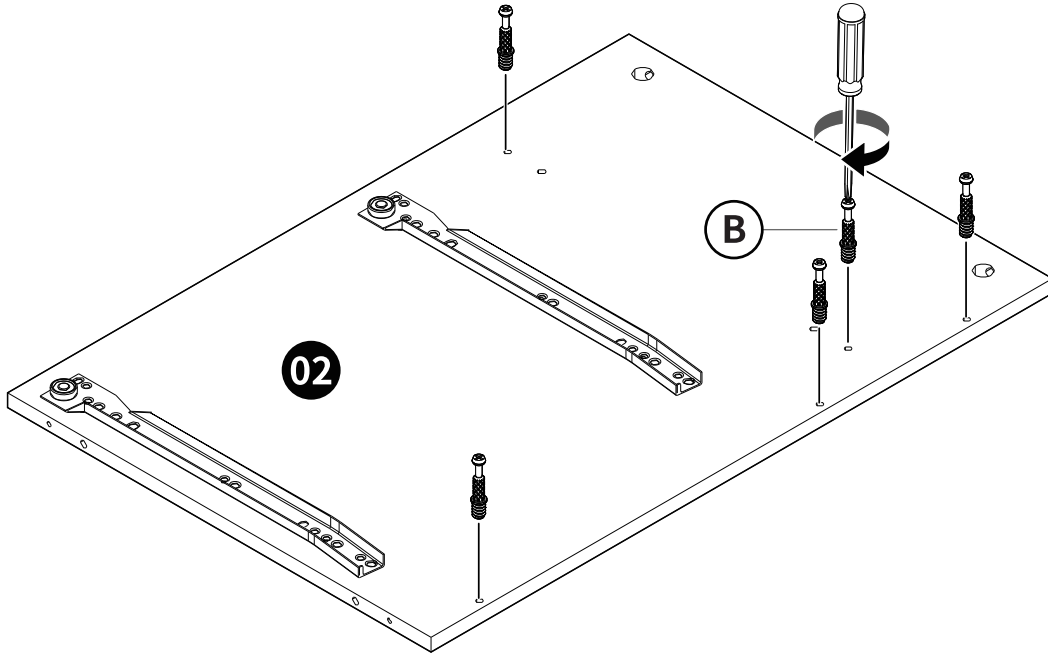
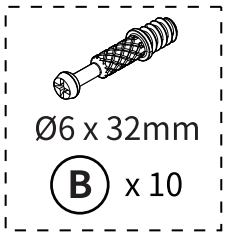


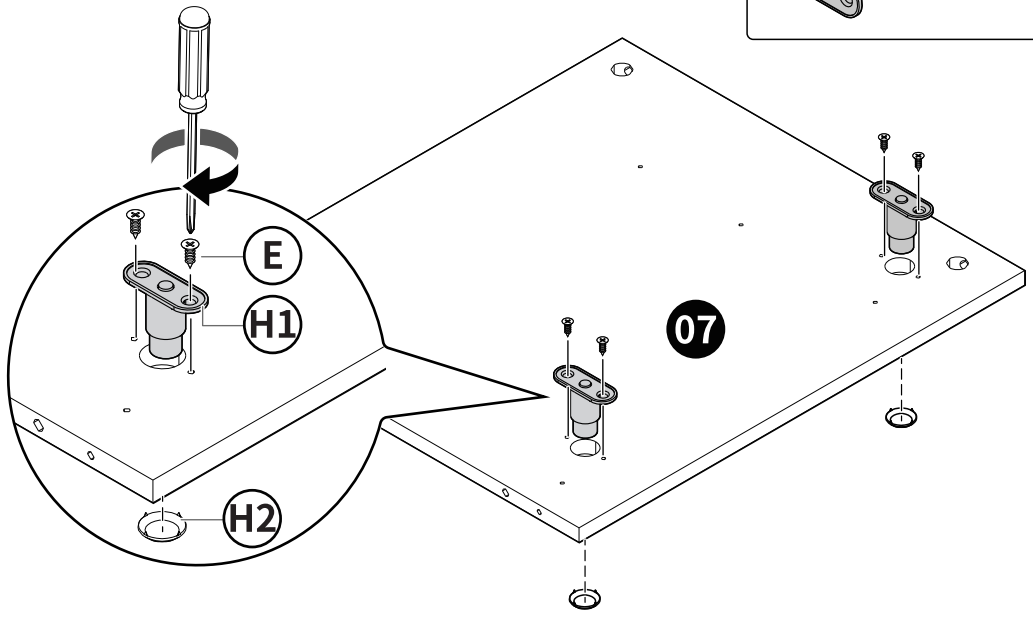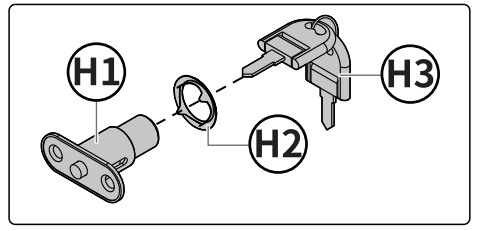
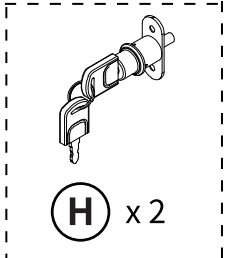
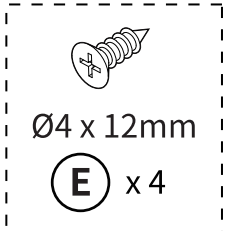
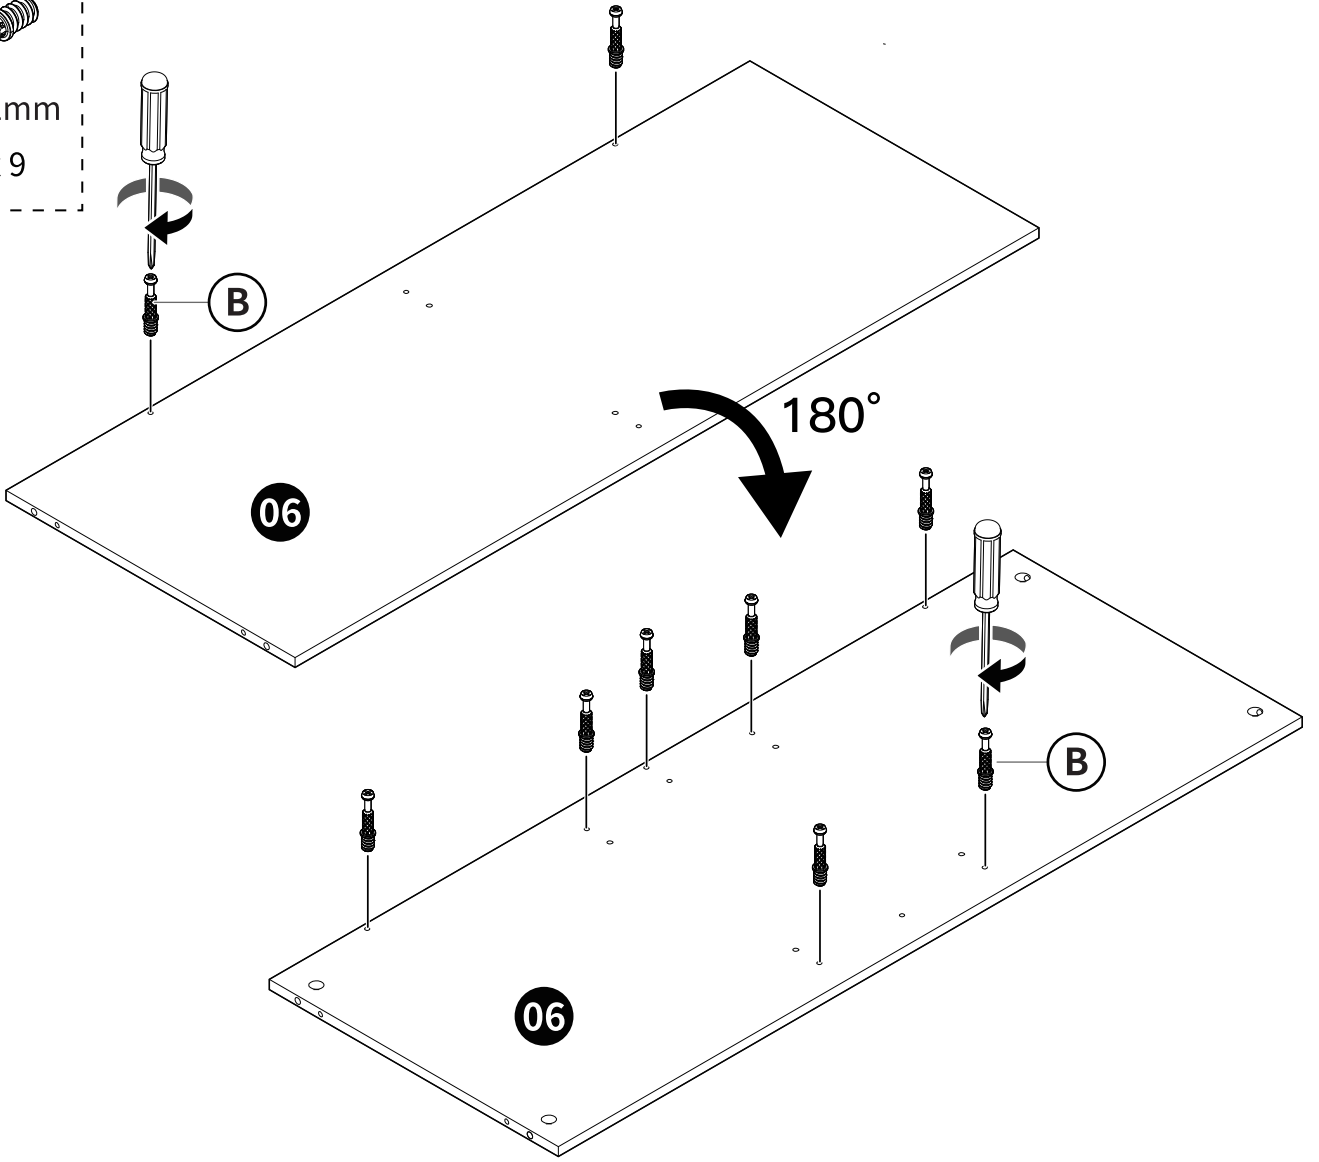
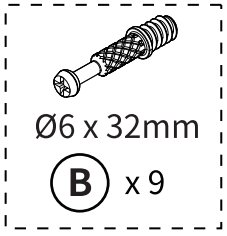


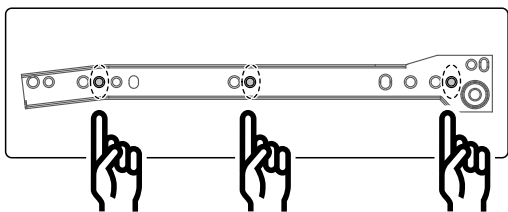
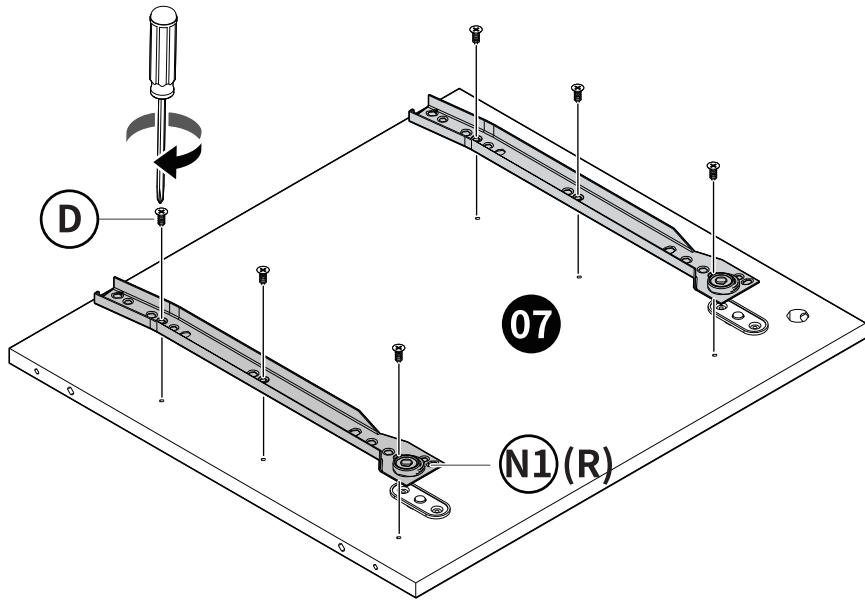
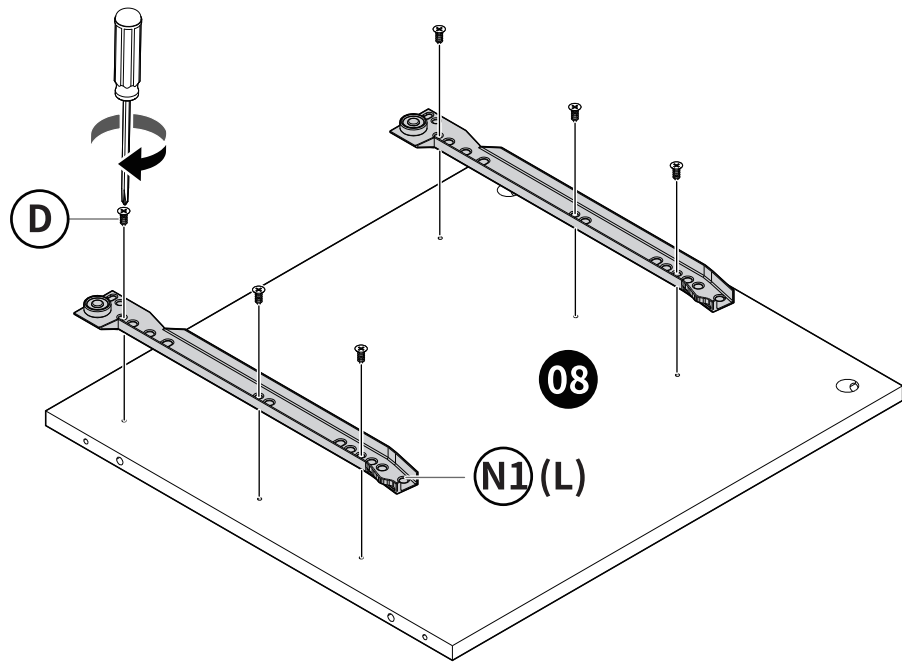
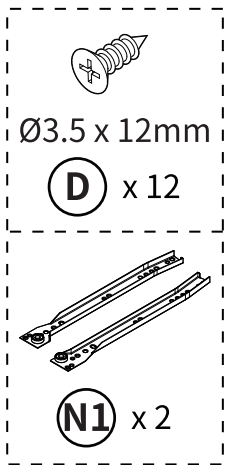







Note: Fully tighten screws to avoid loose drawers and ensure smooth movement.

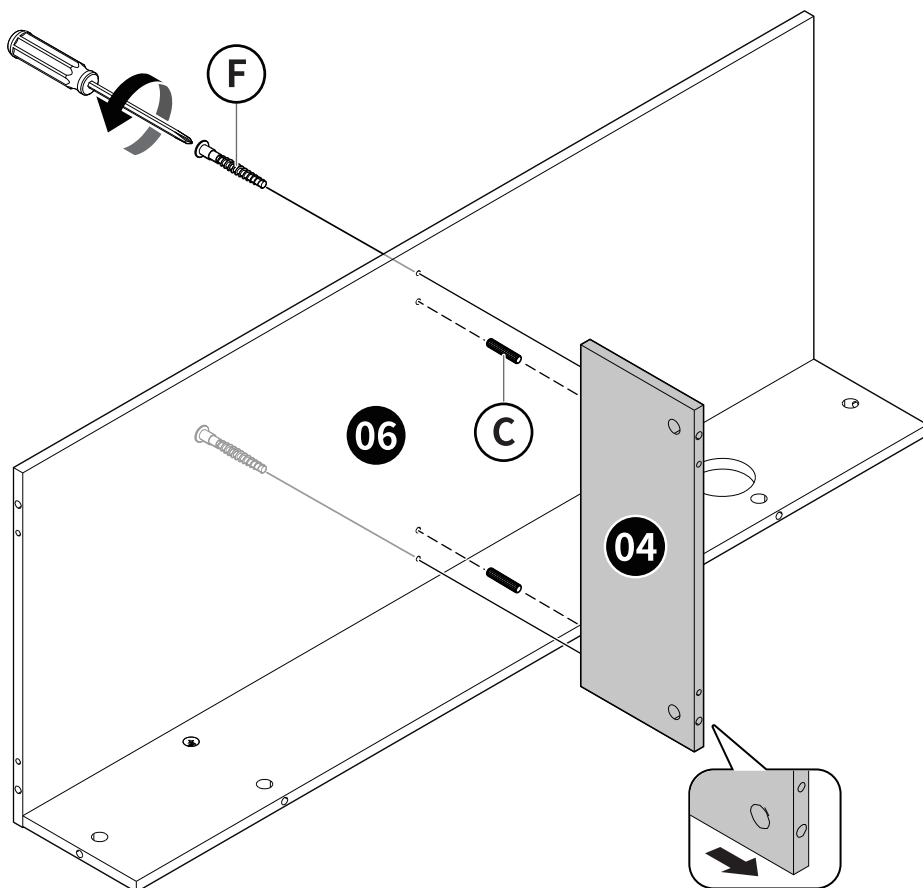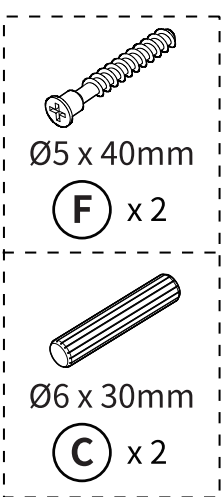
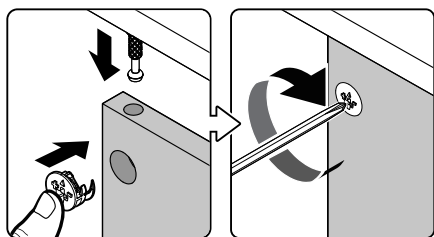
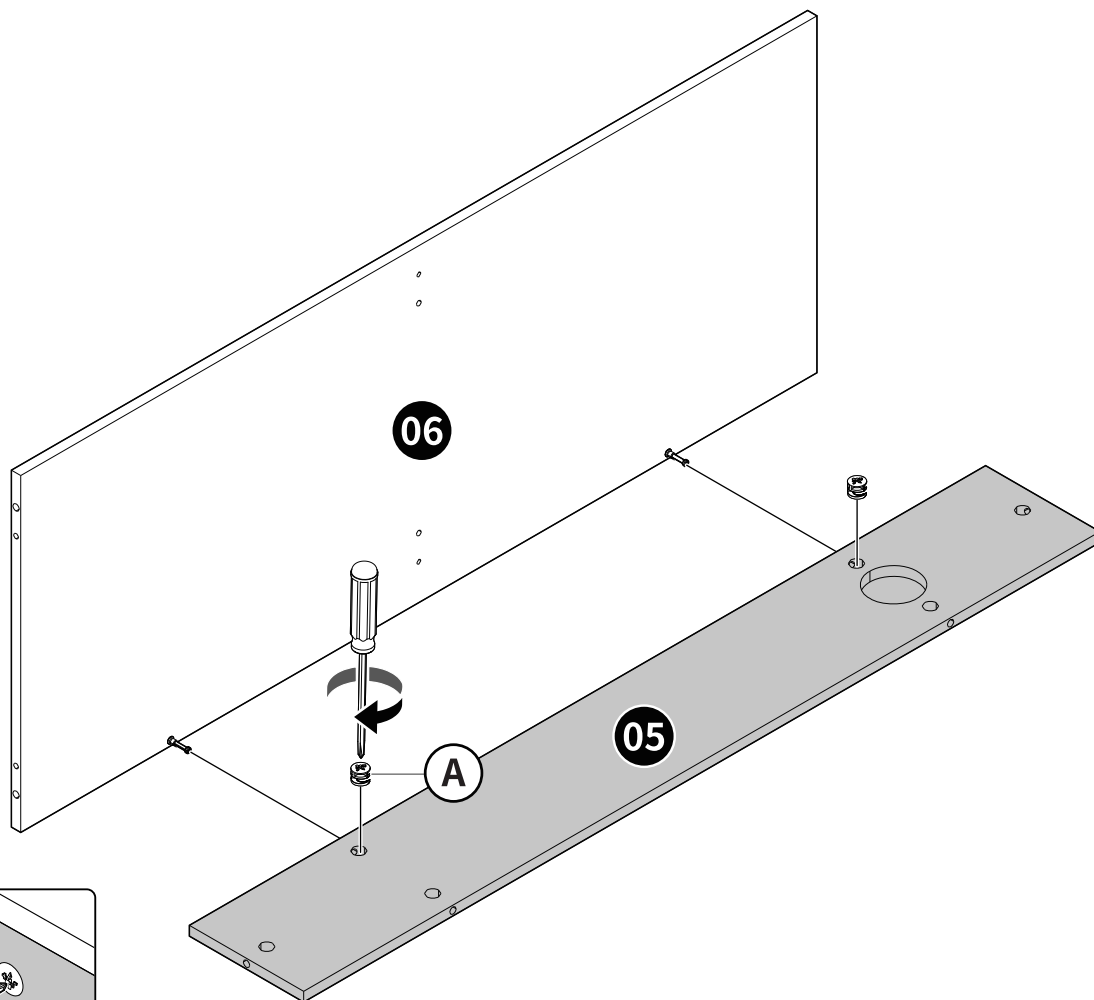
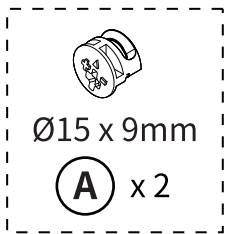


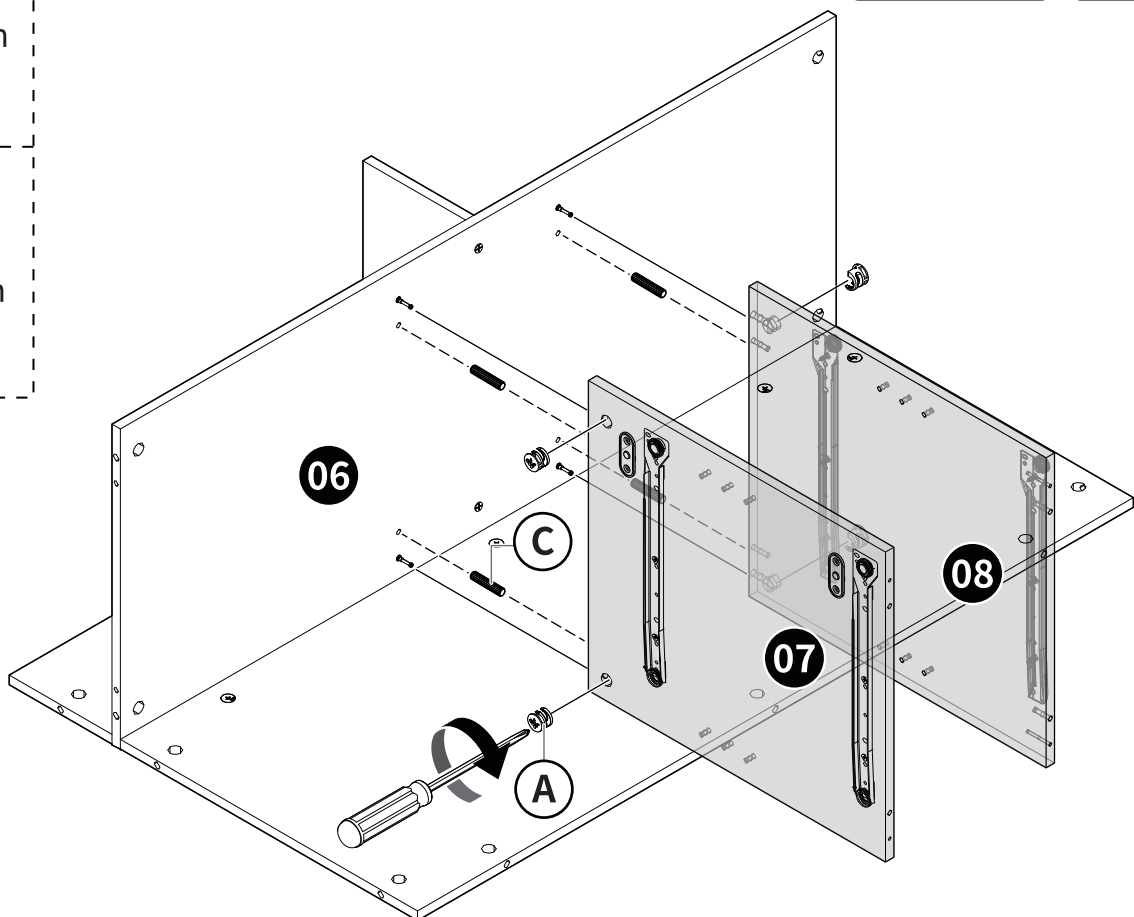
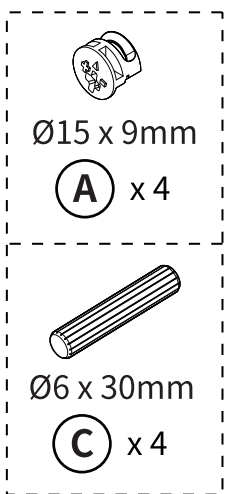
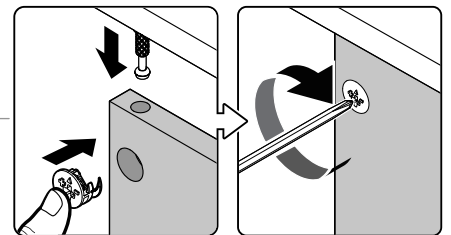
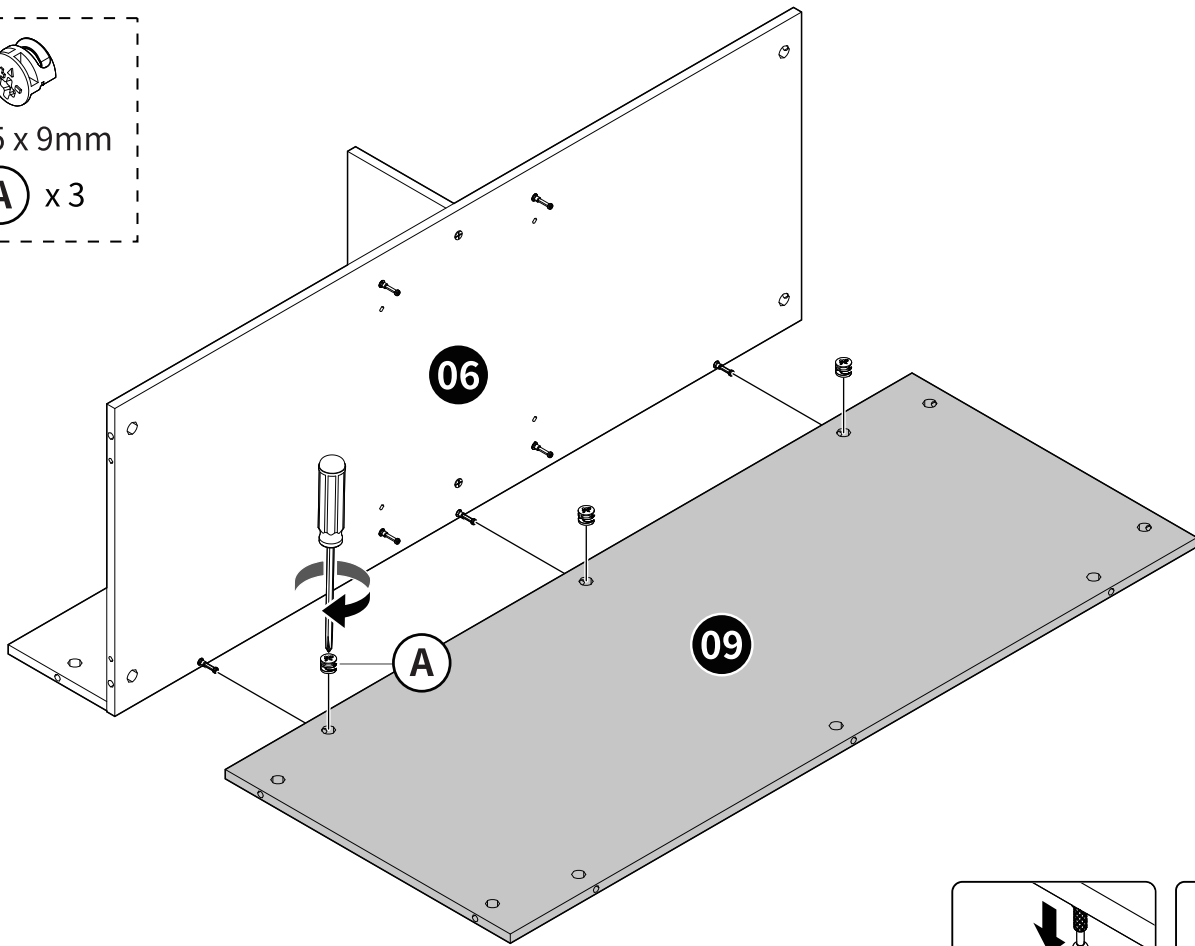
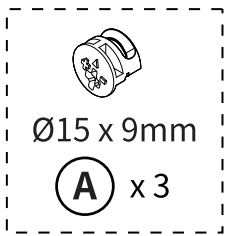


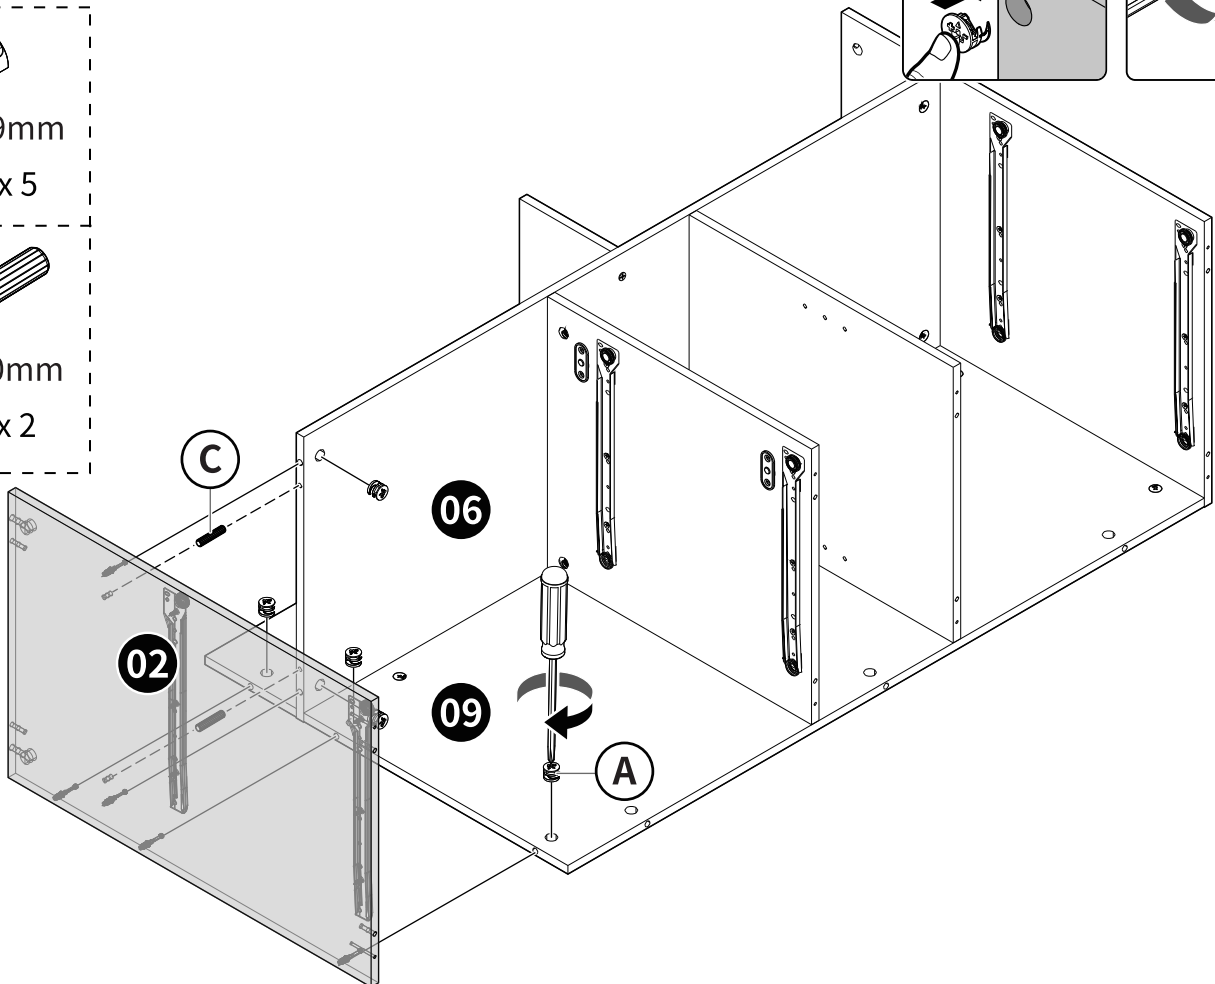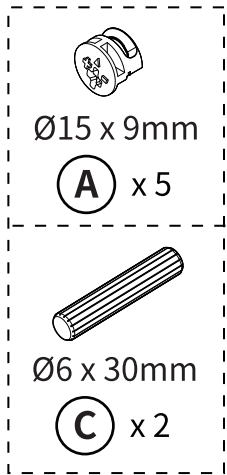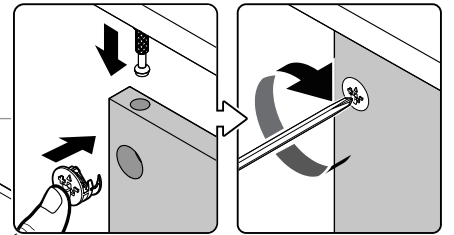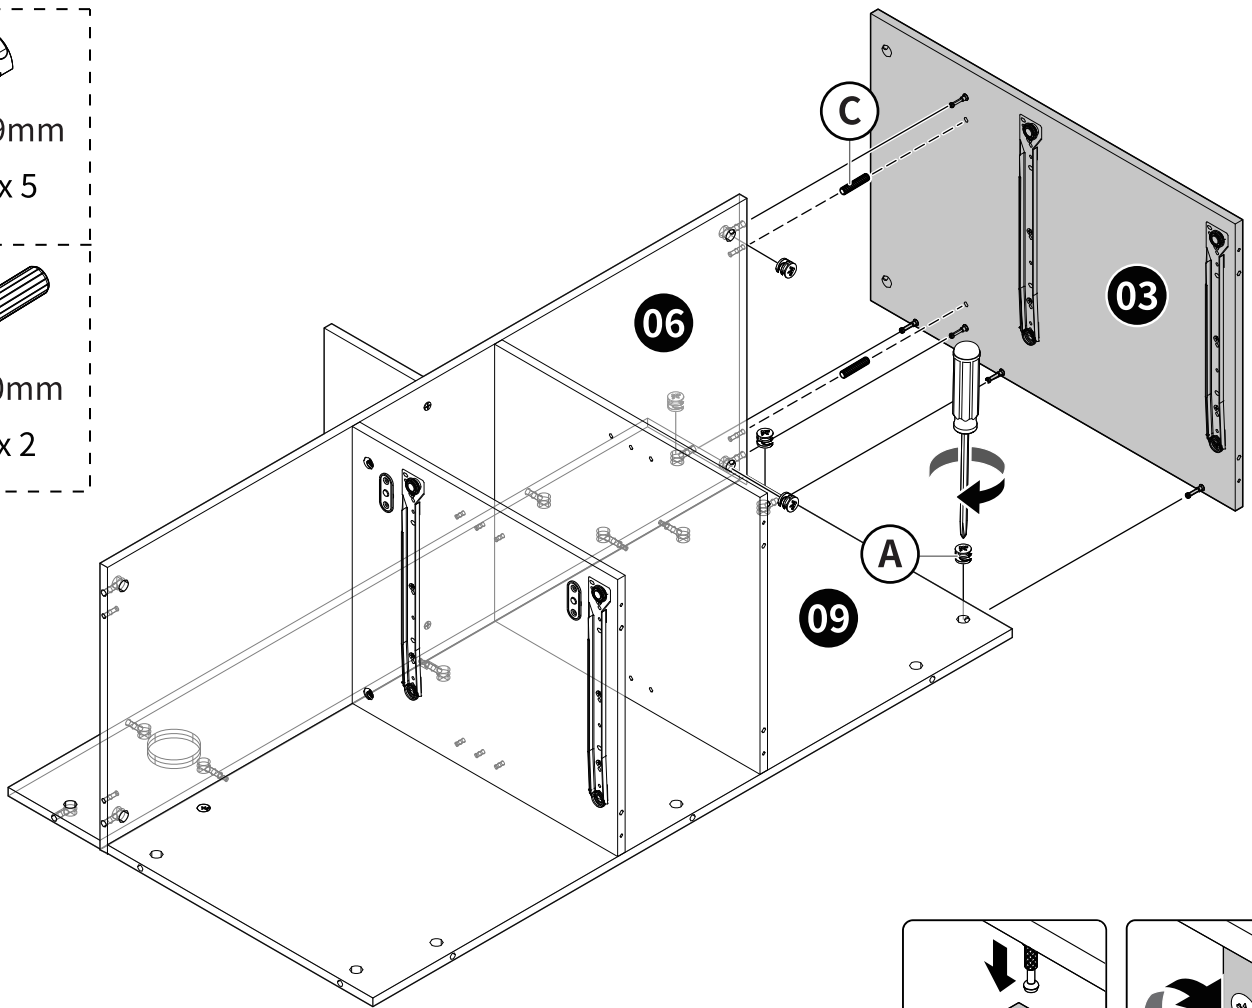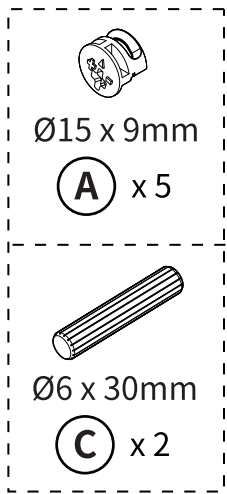

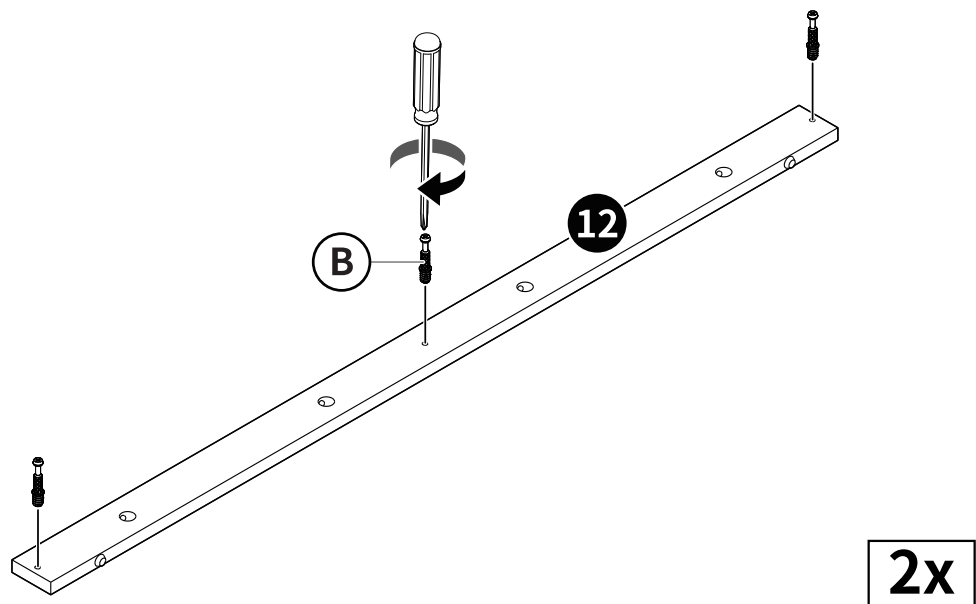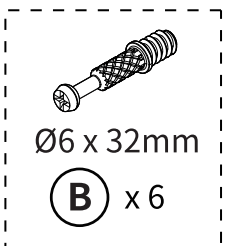
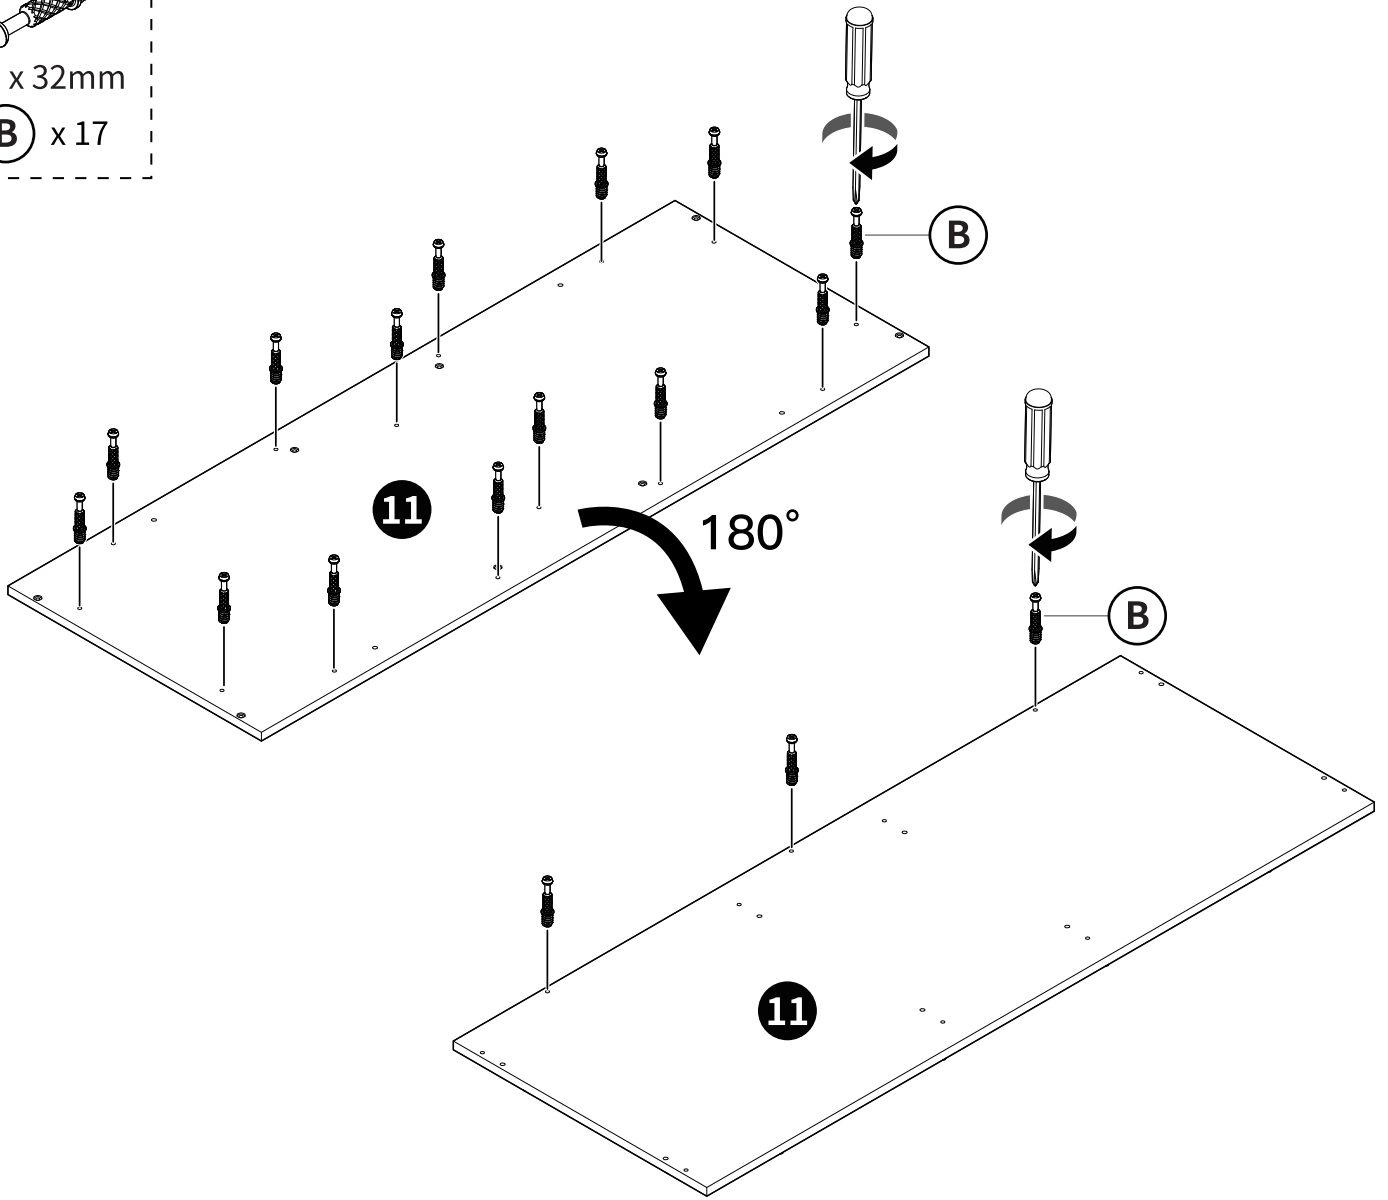
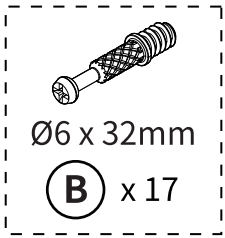


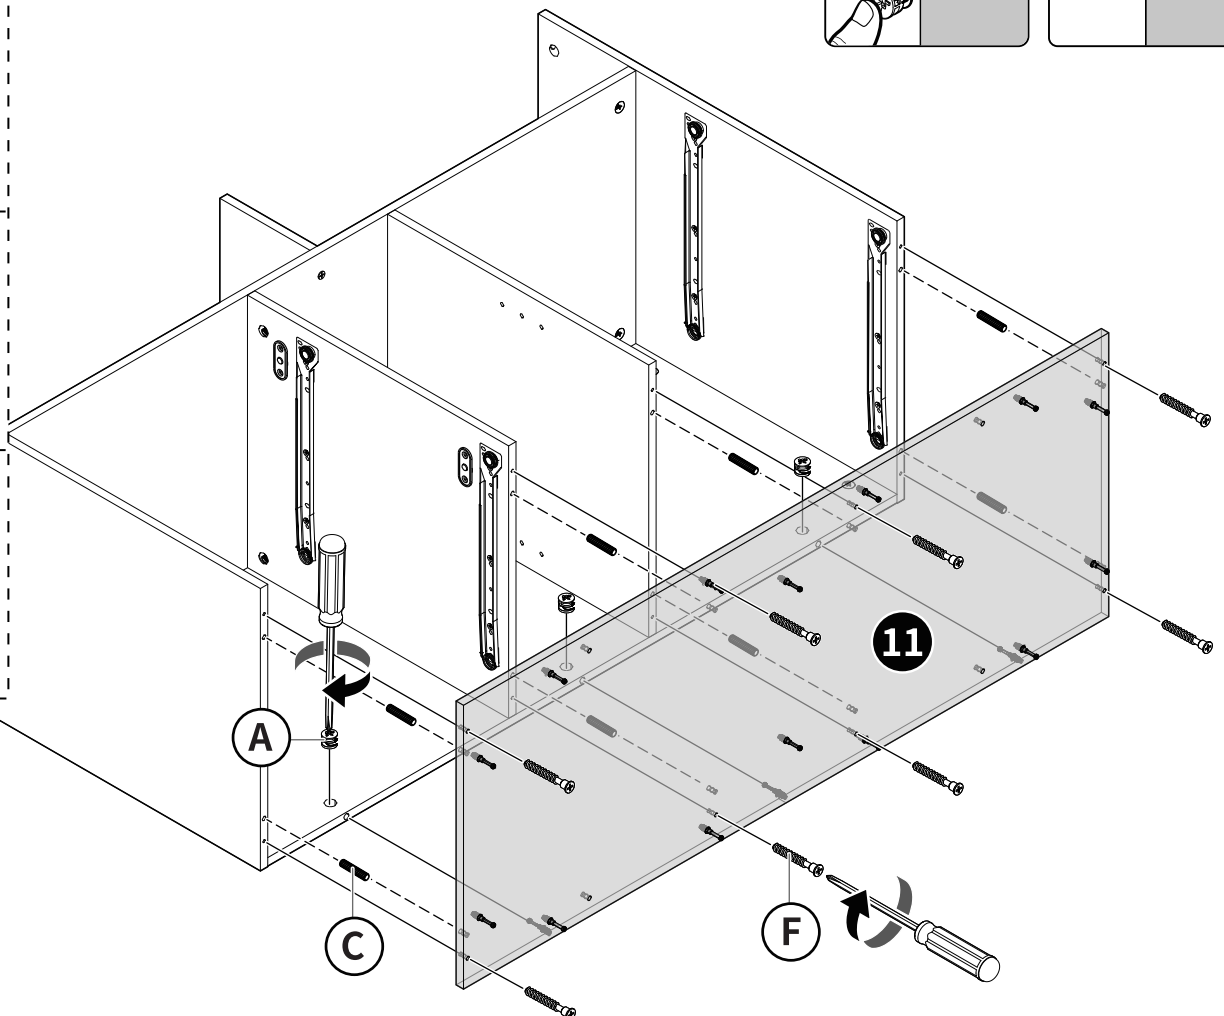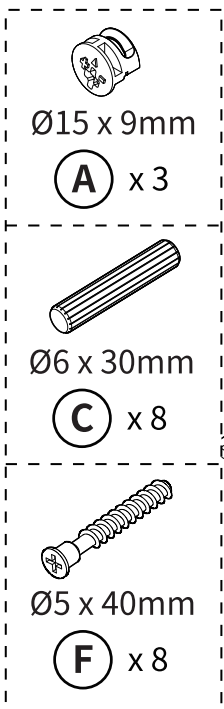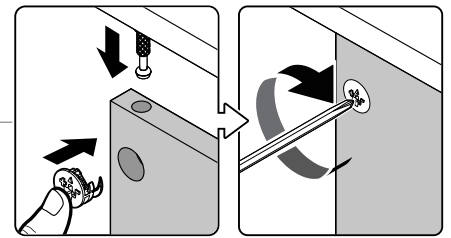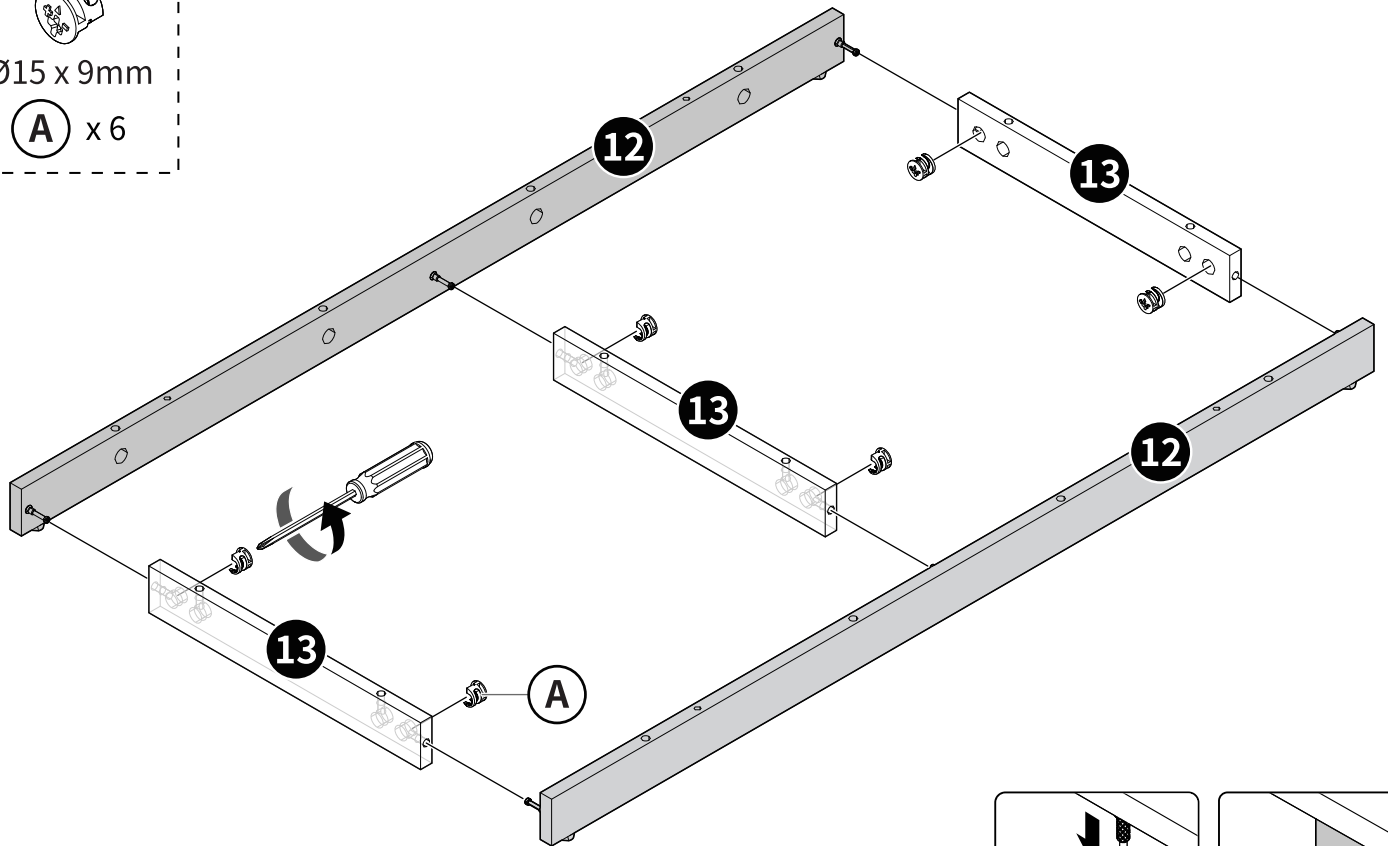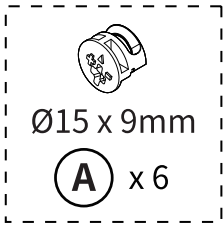


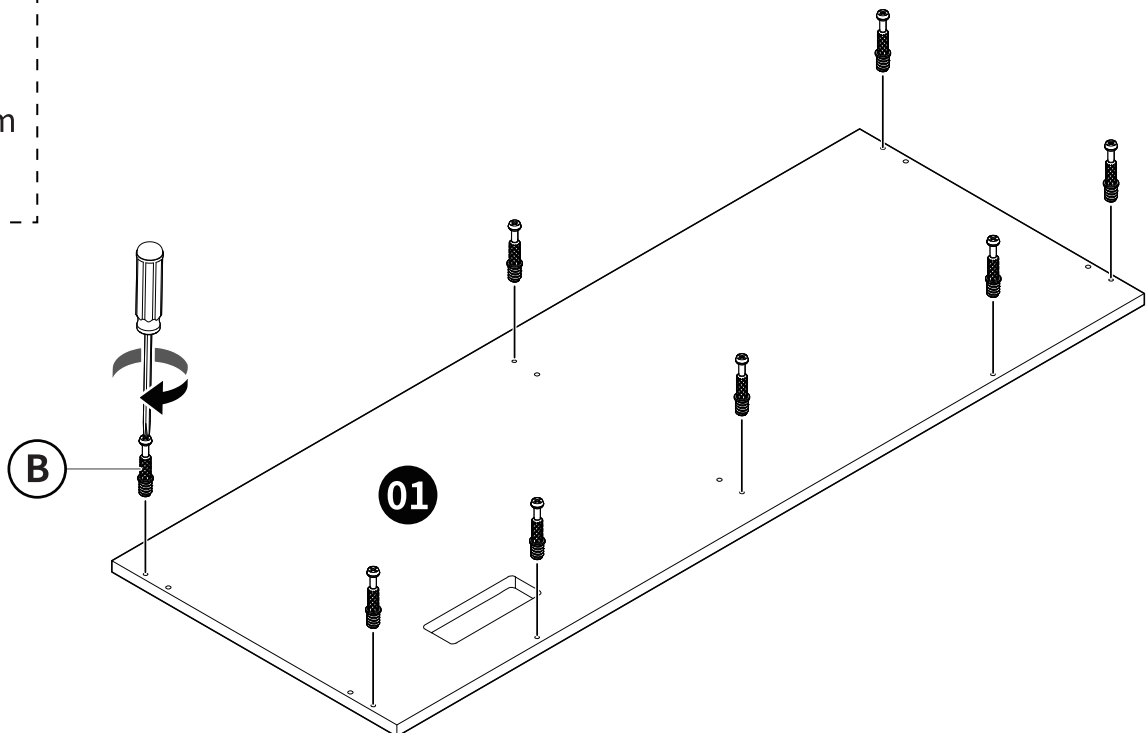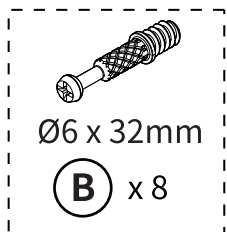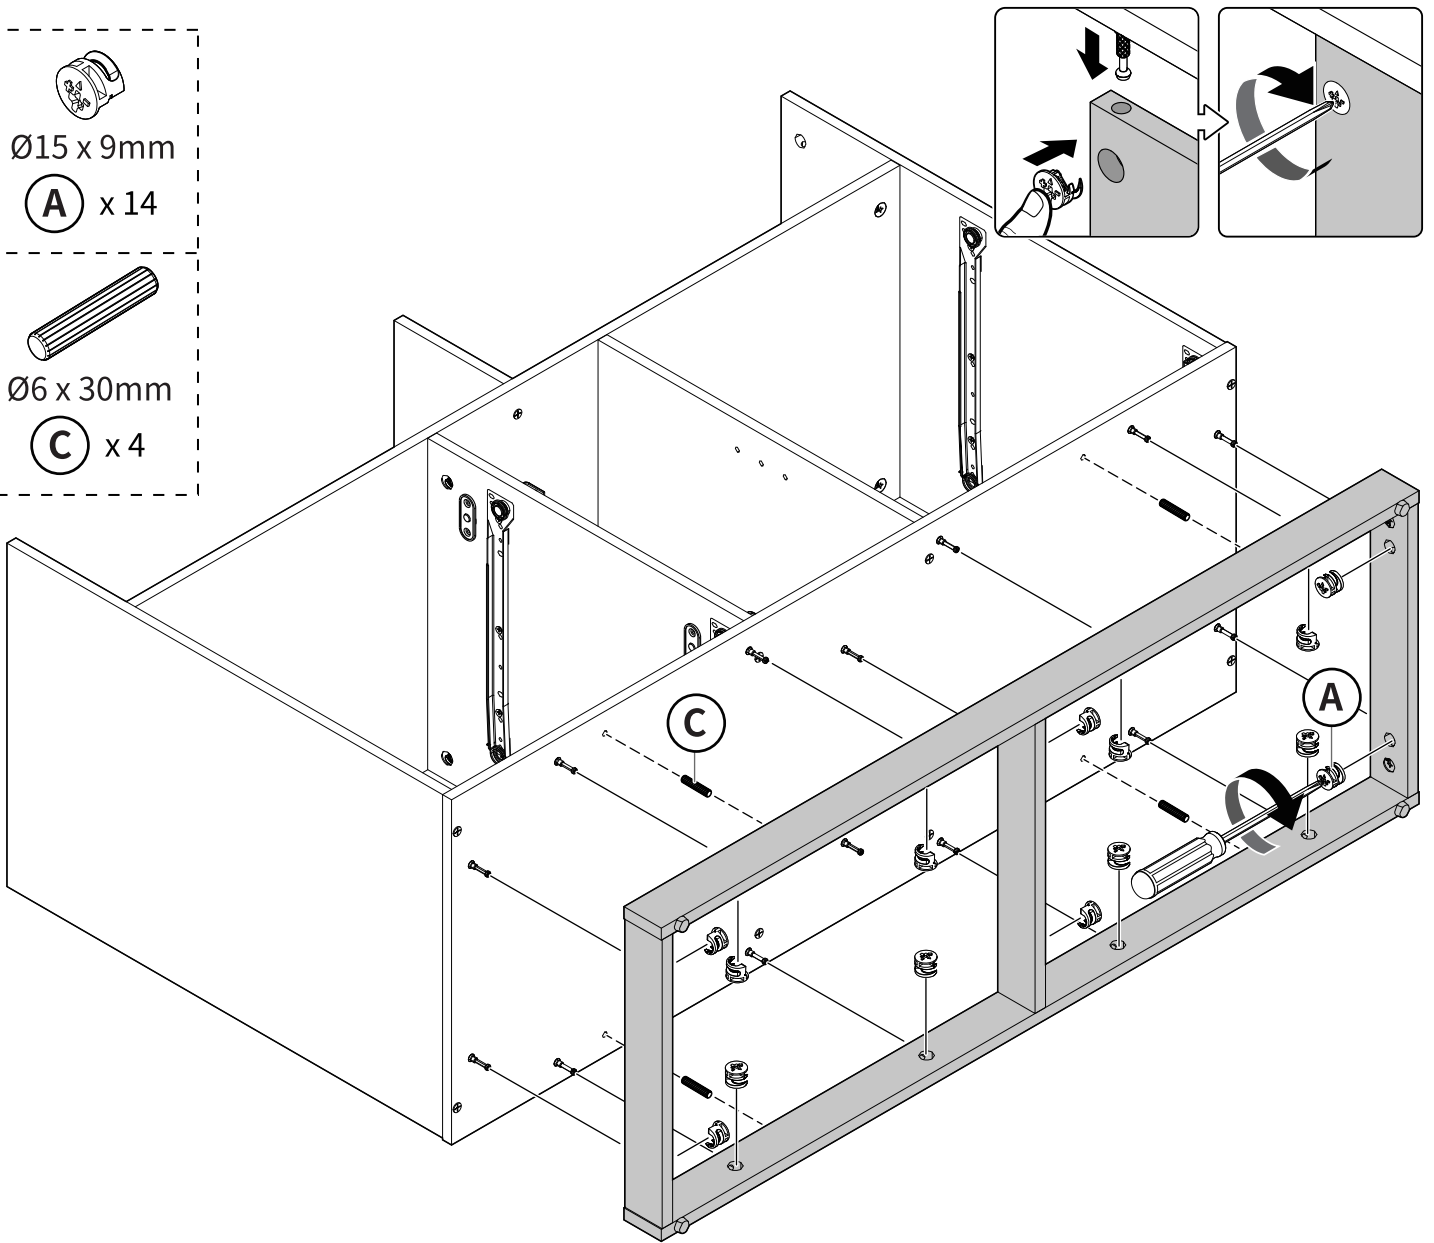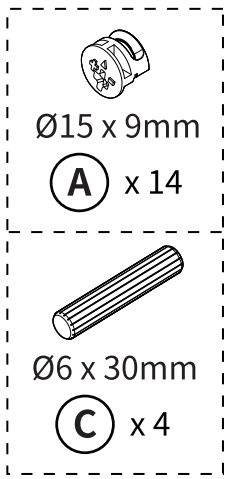

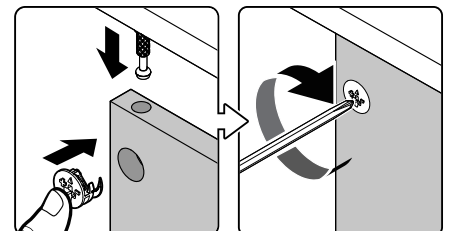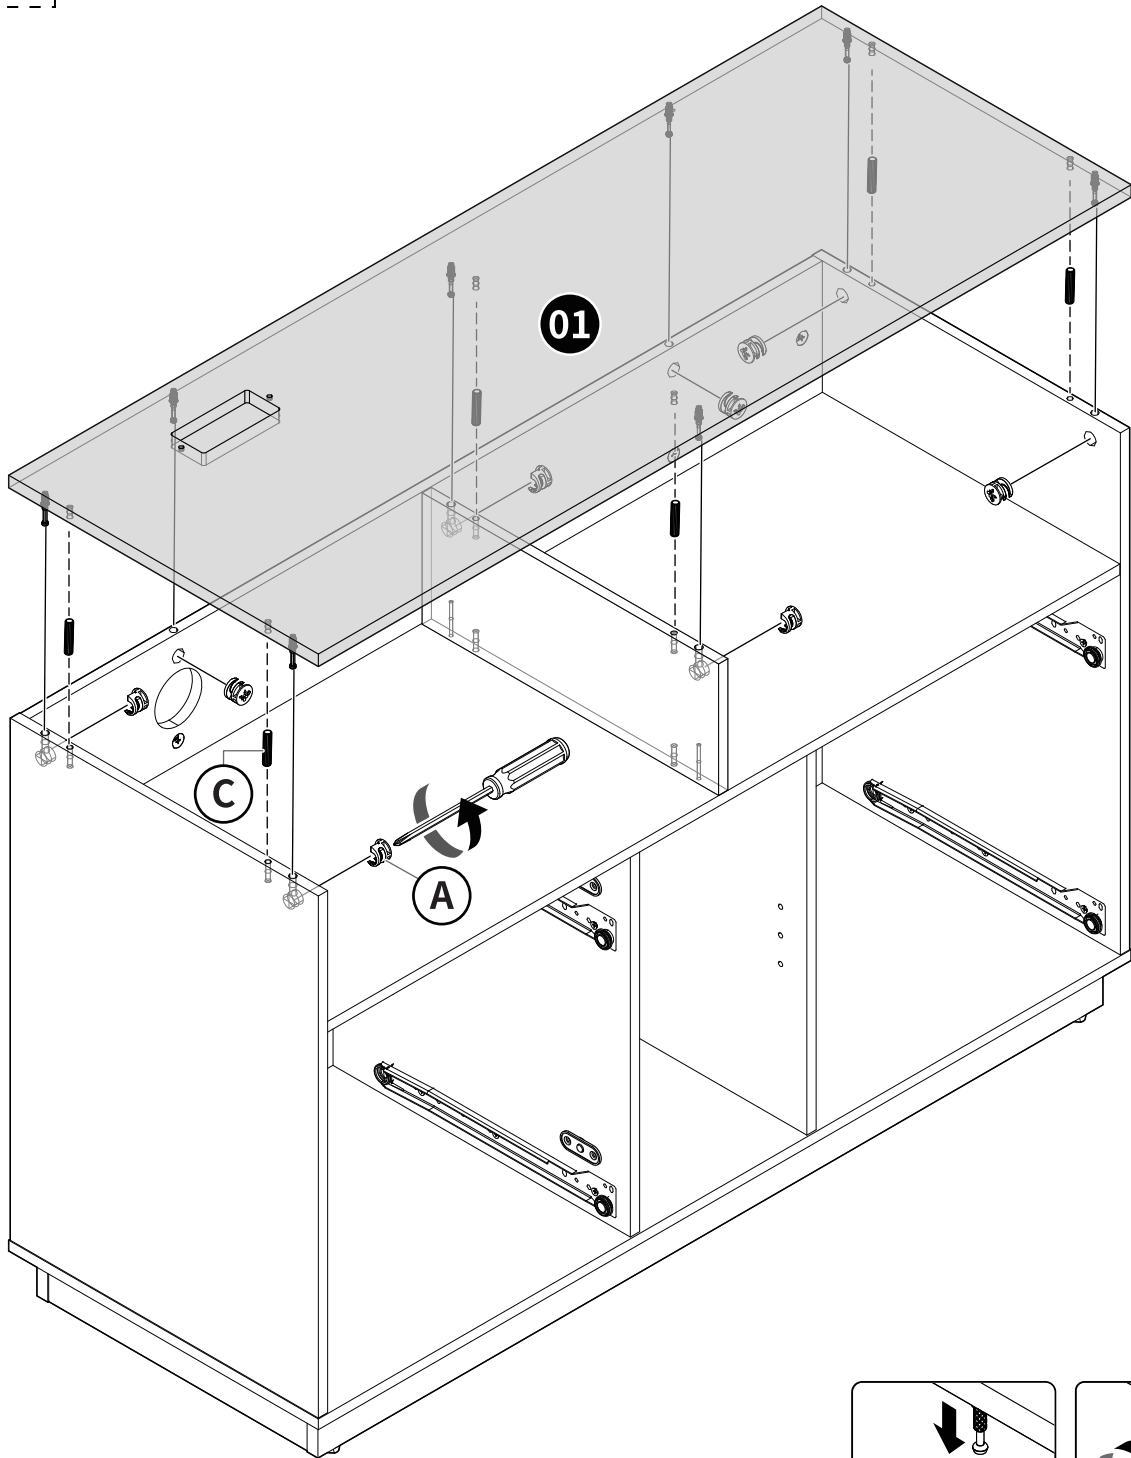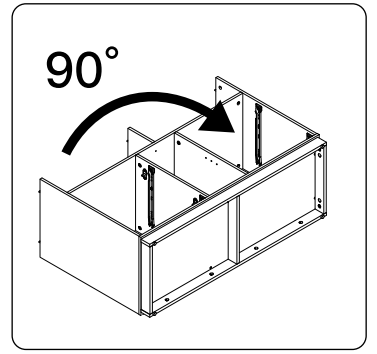
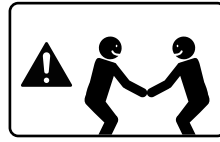
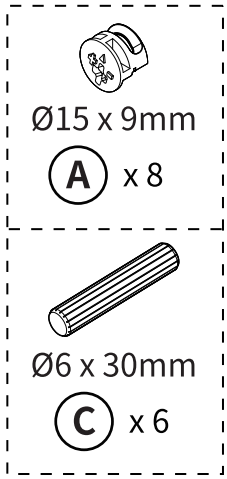









2

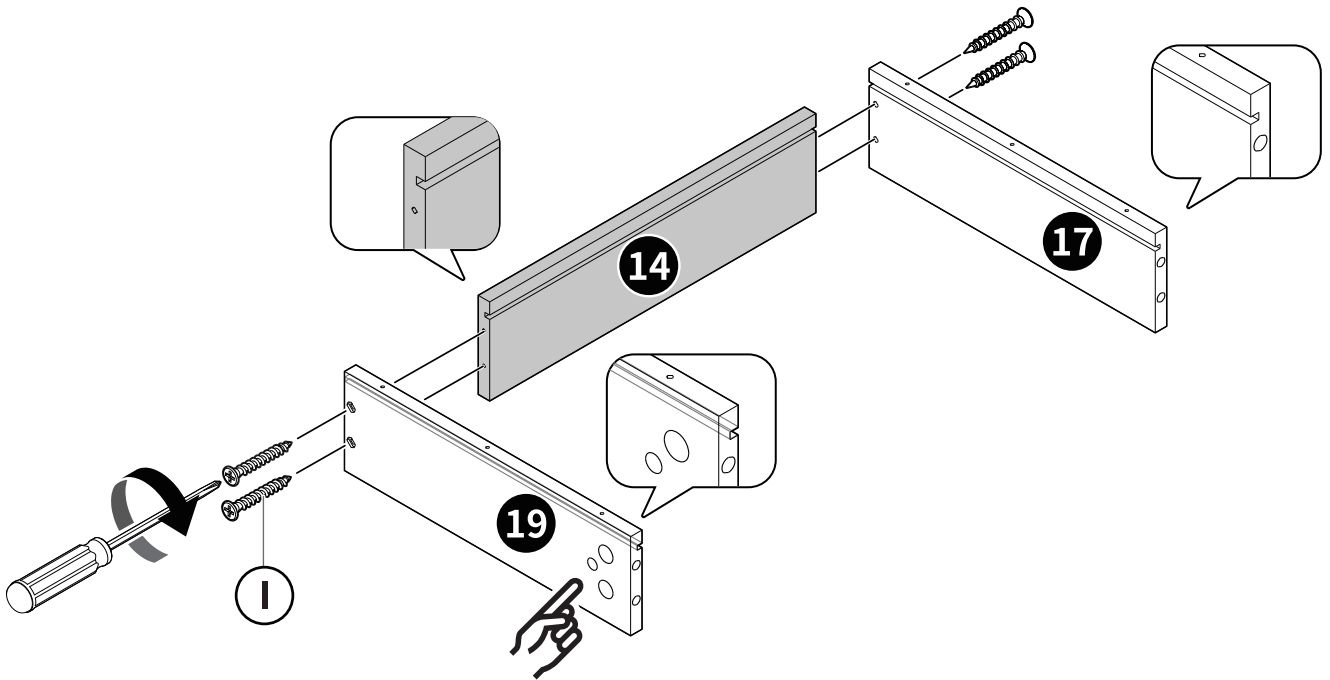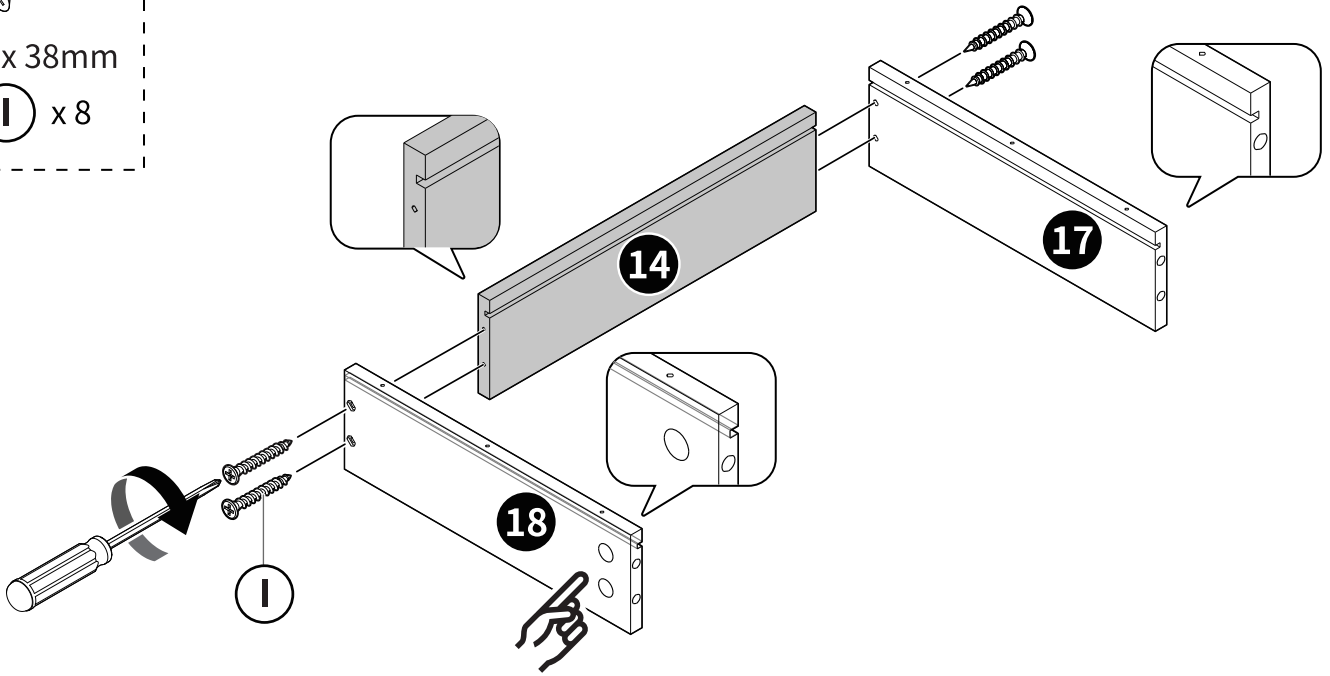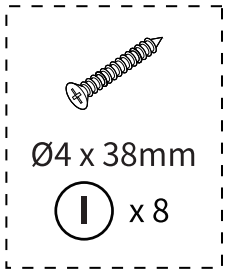



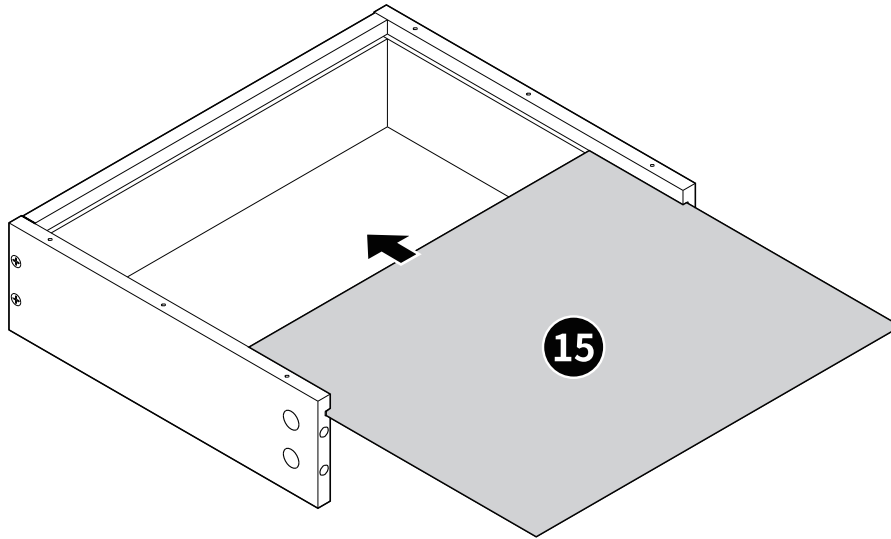



2x

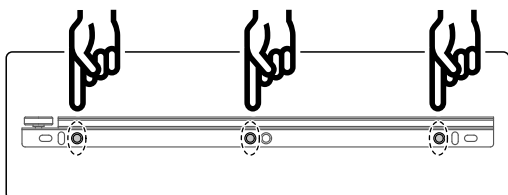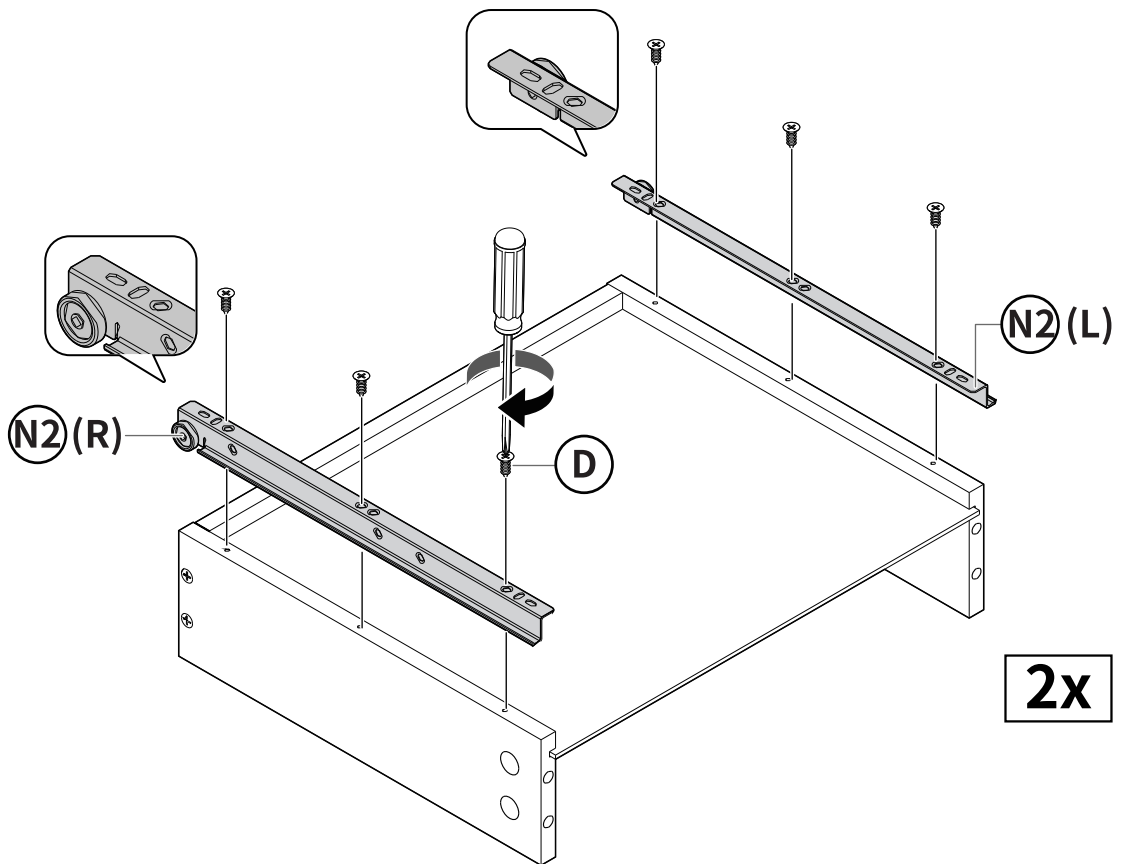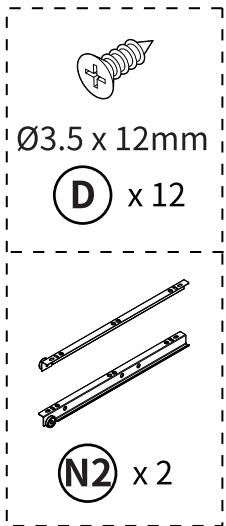

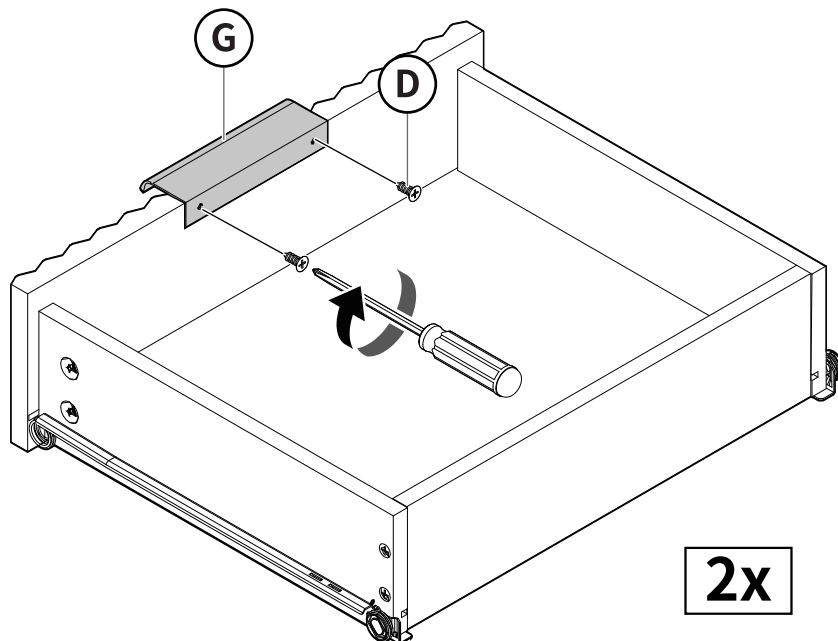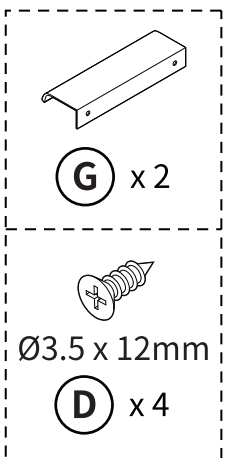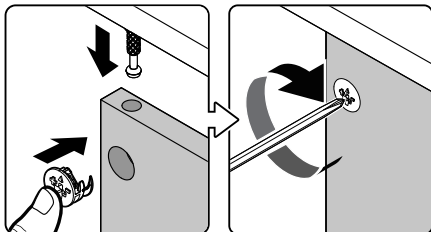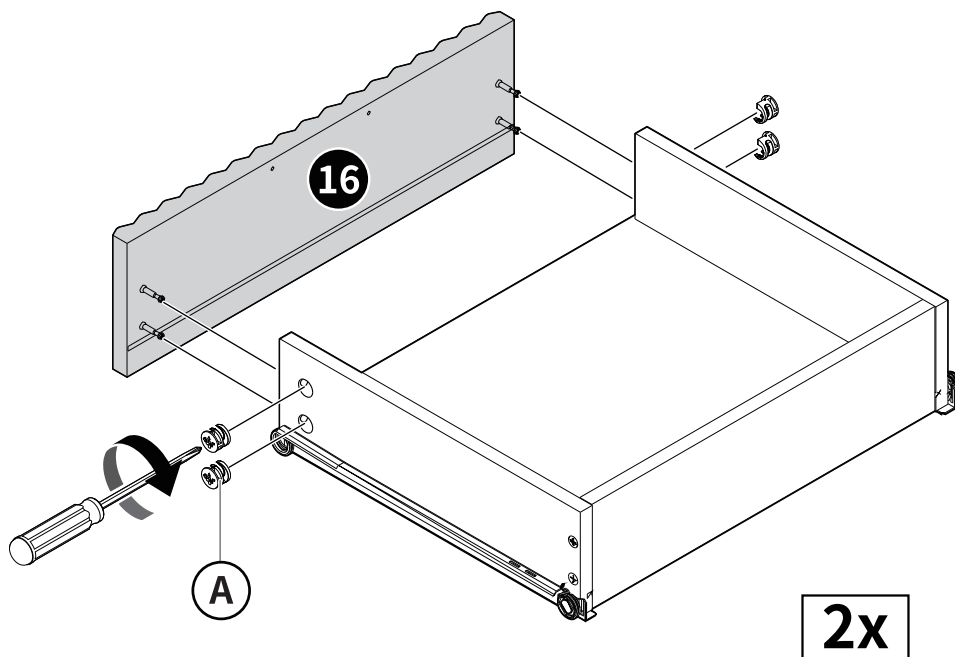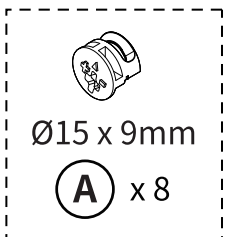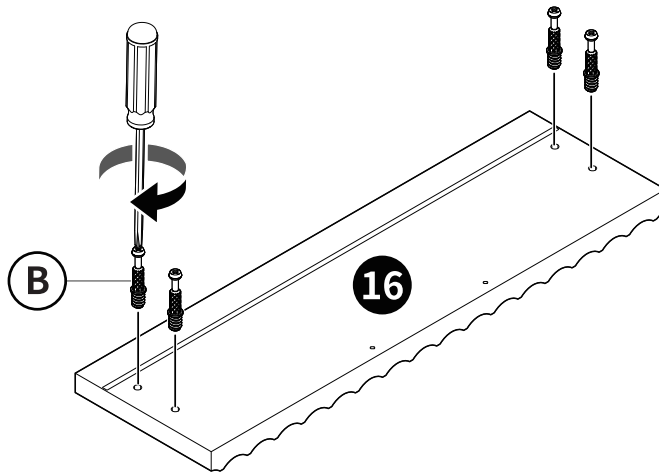
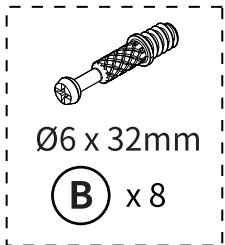


3

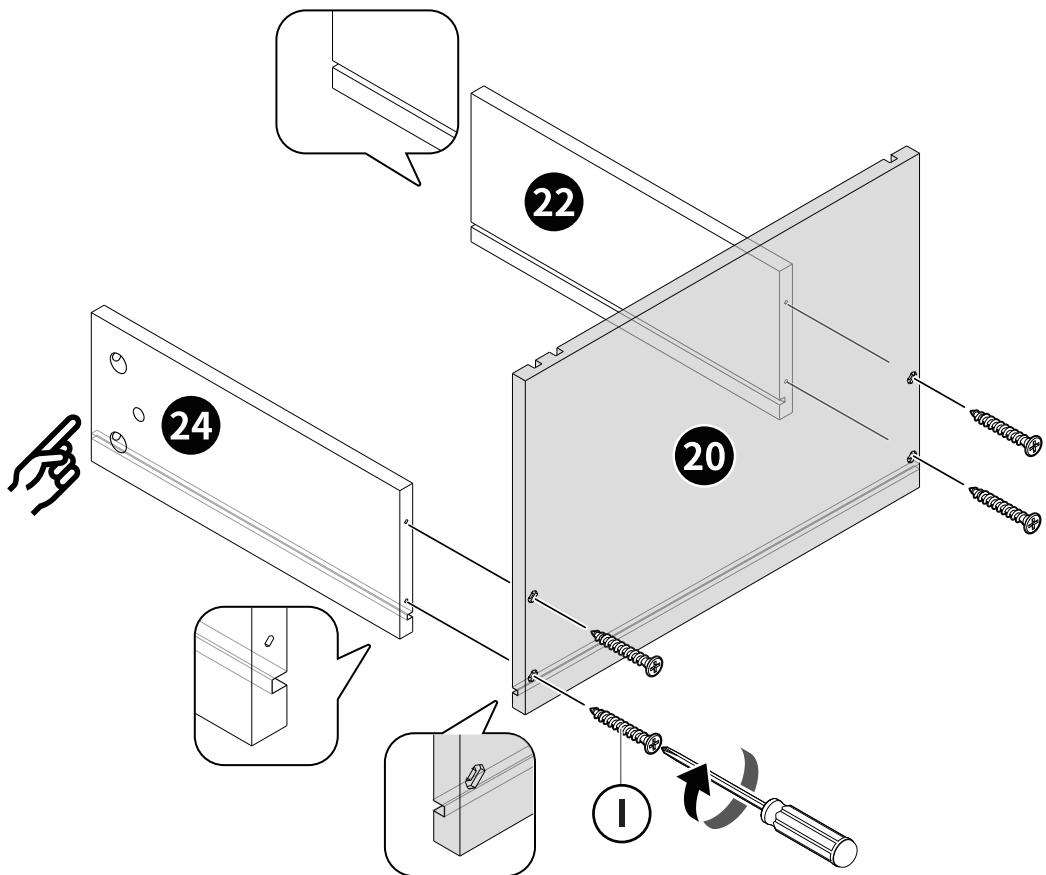
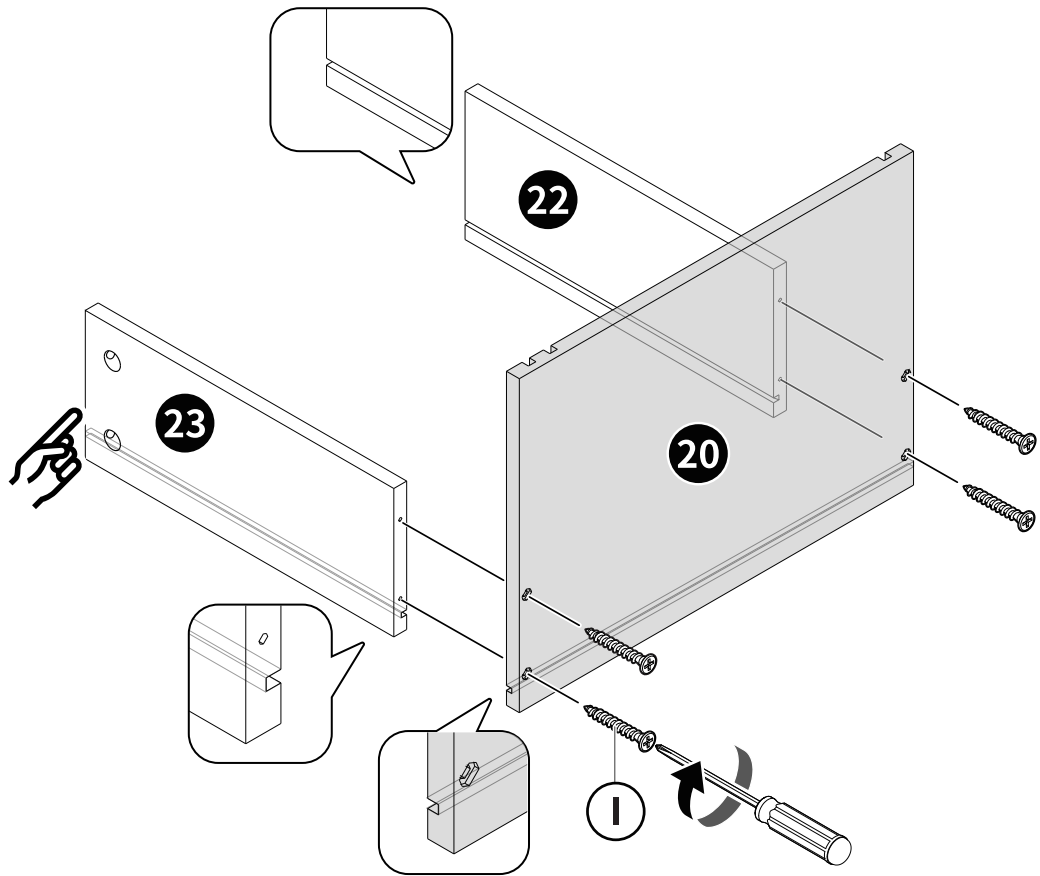
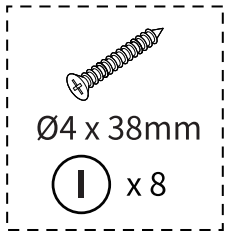


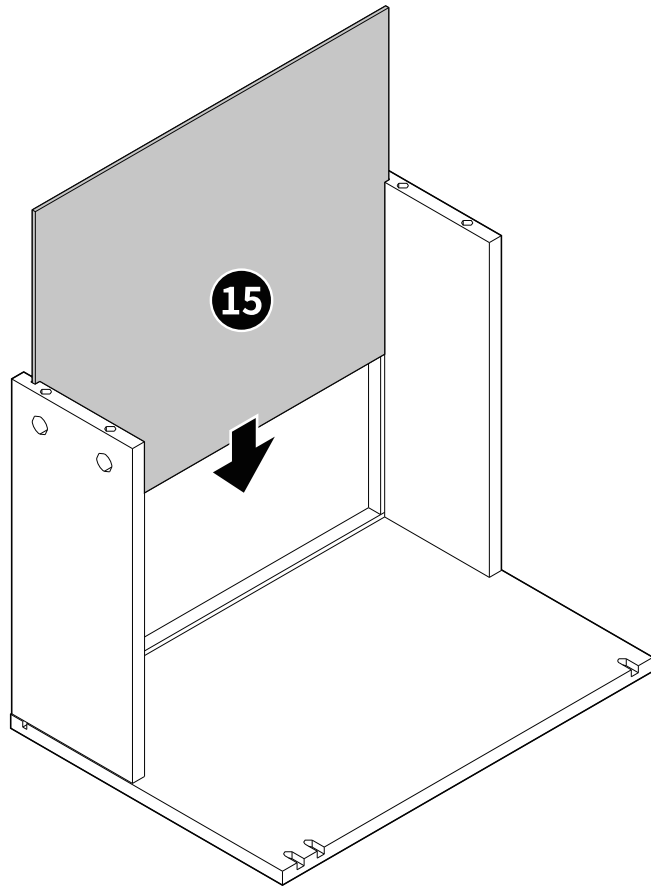




2x

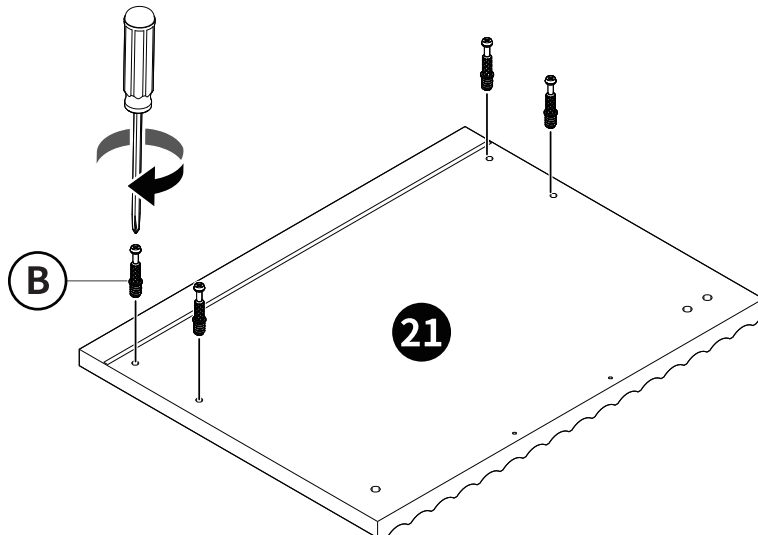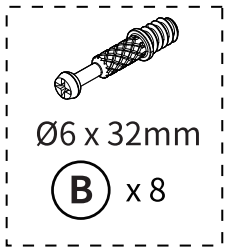



2x

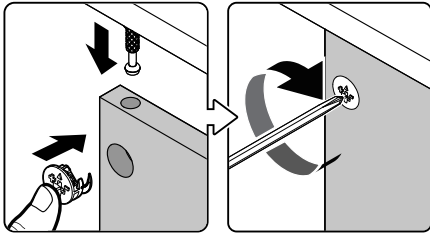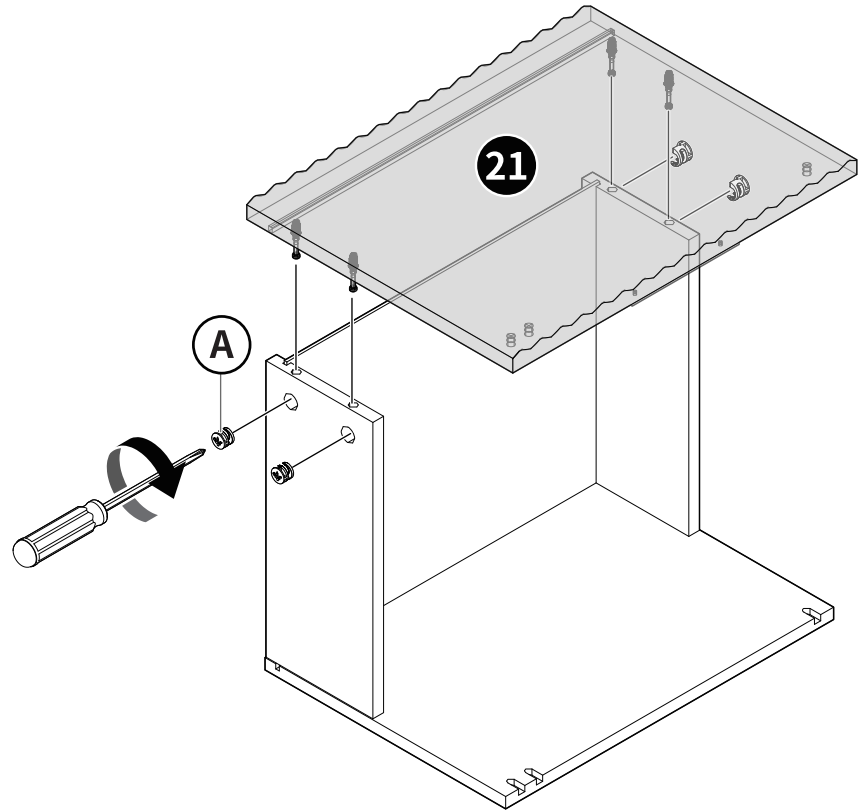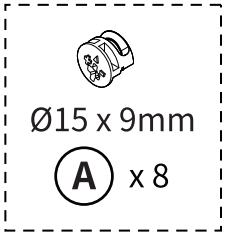



2x

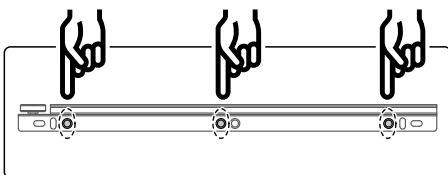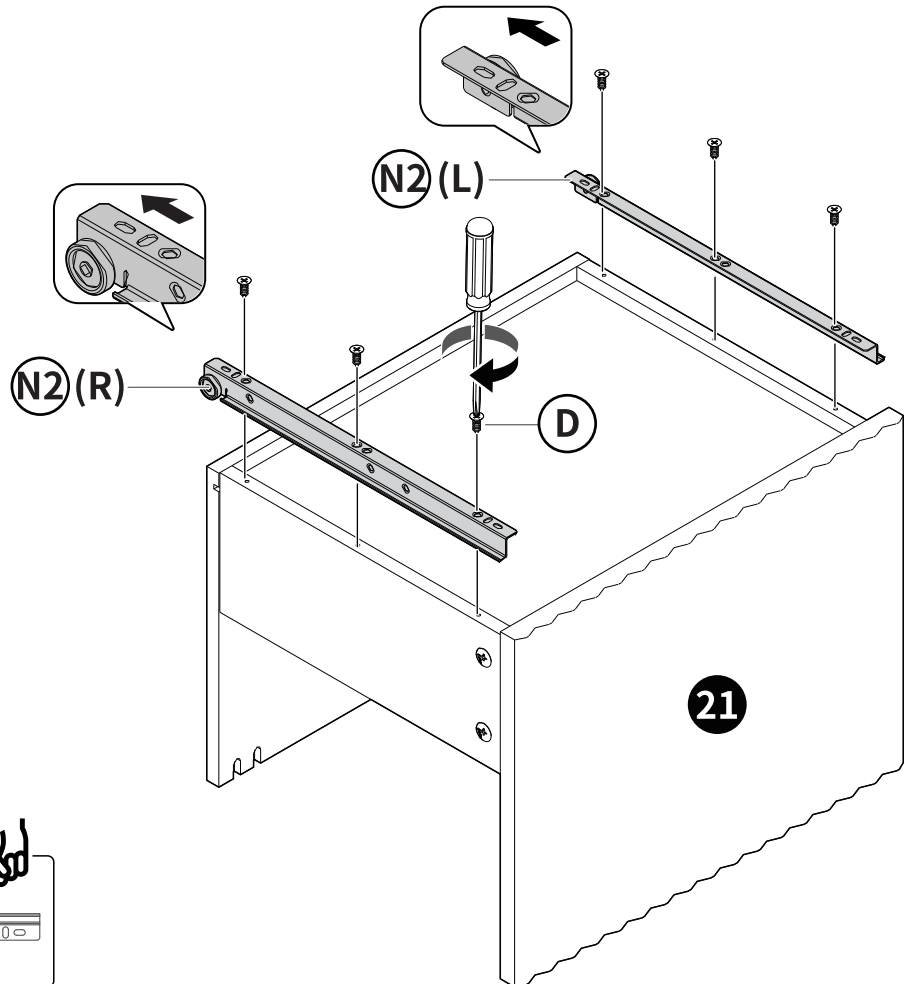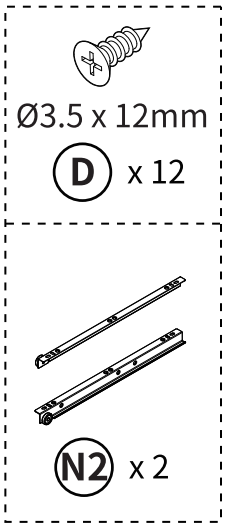

2x

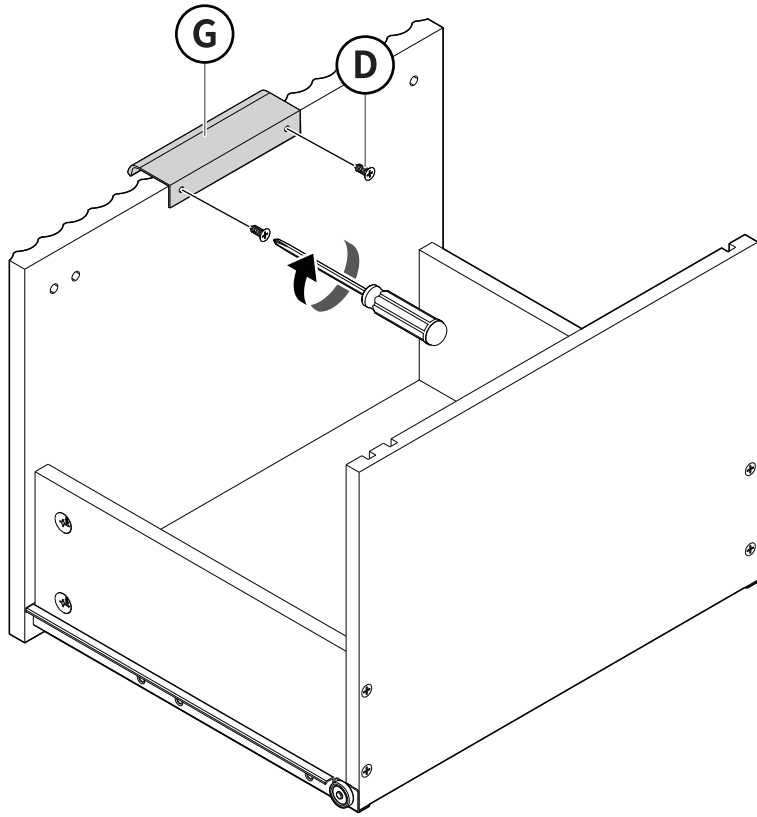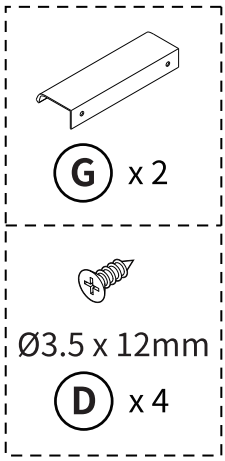


2x

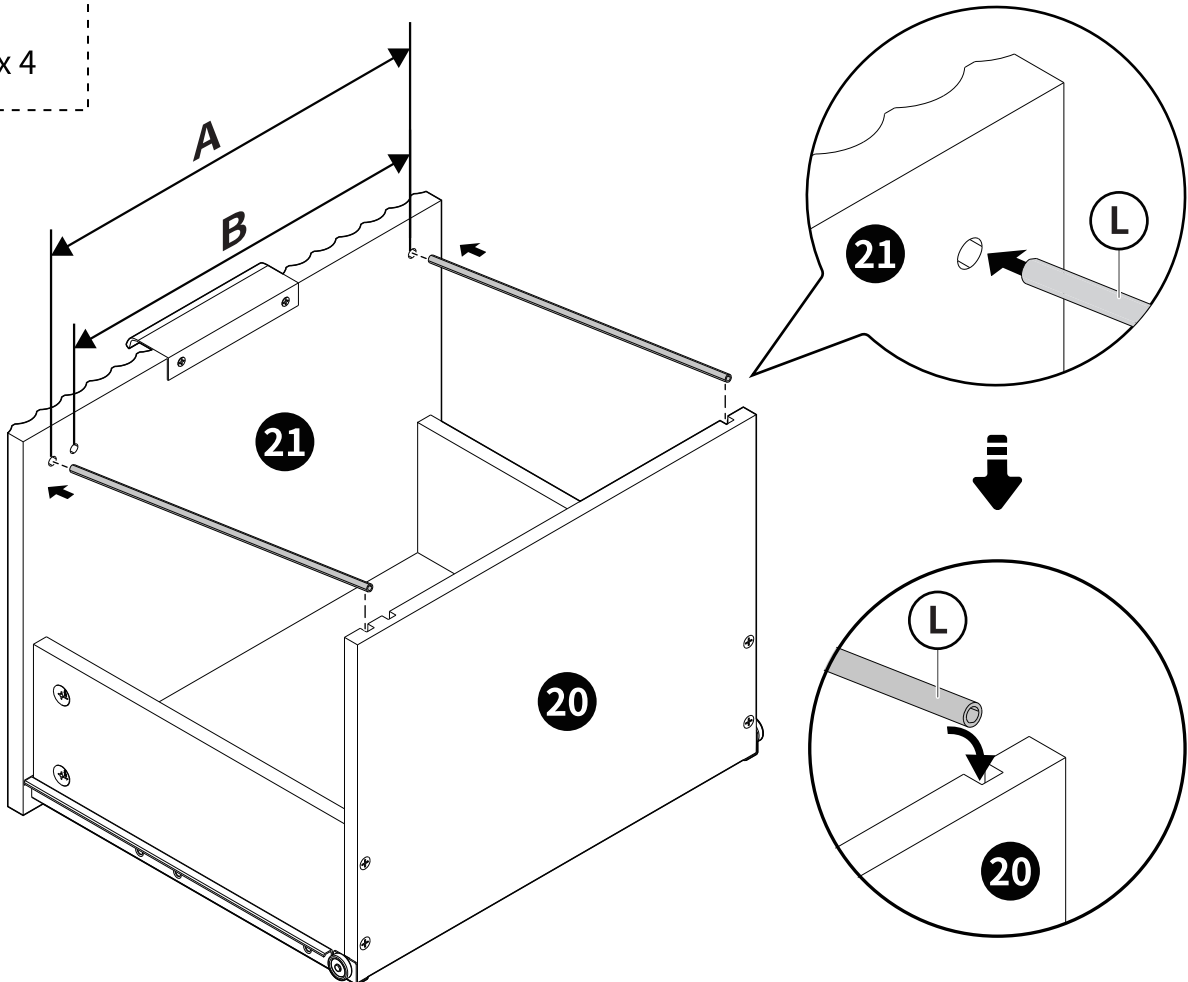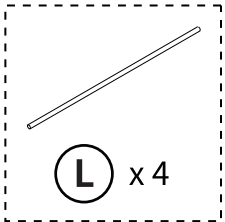


2x


4

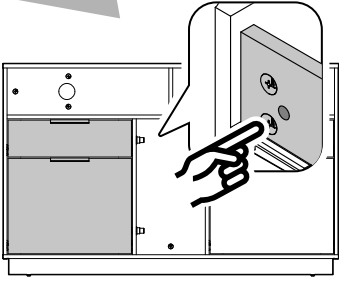


Note: The drawers with the side panel keyhole should be attached to the left.

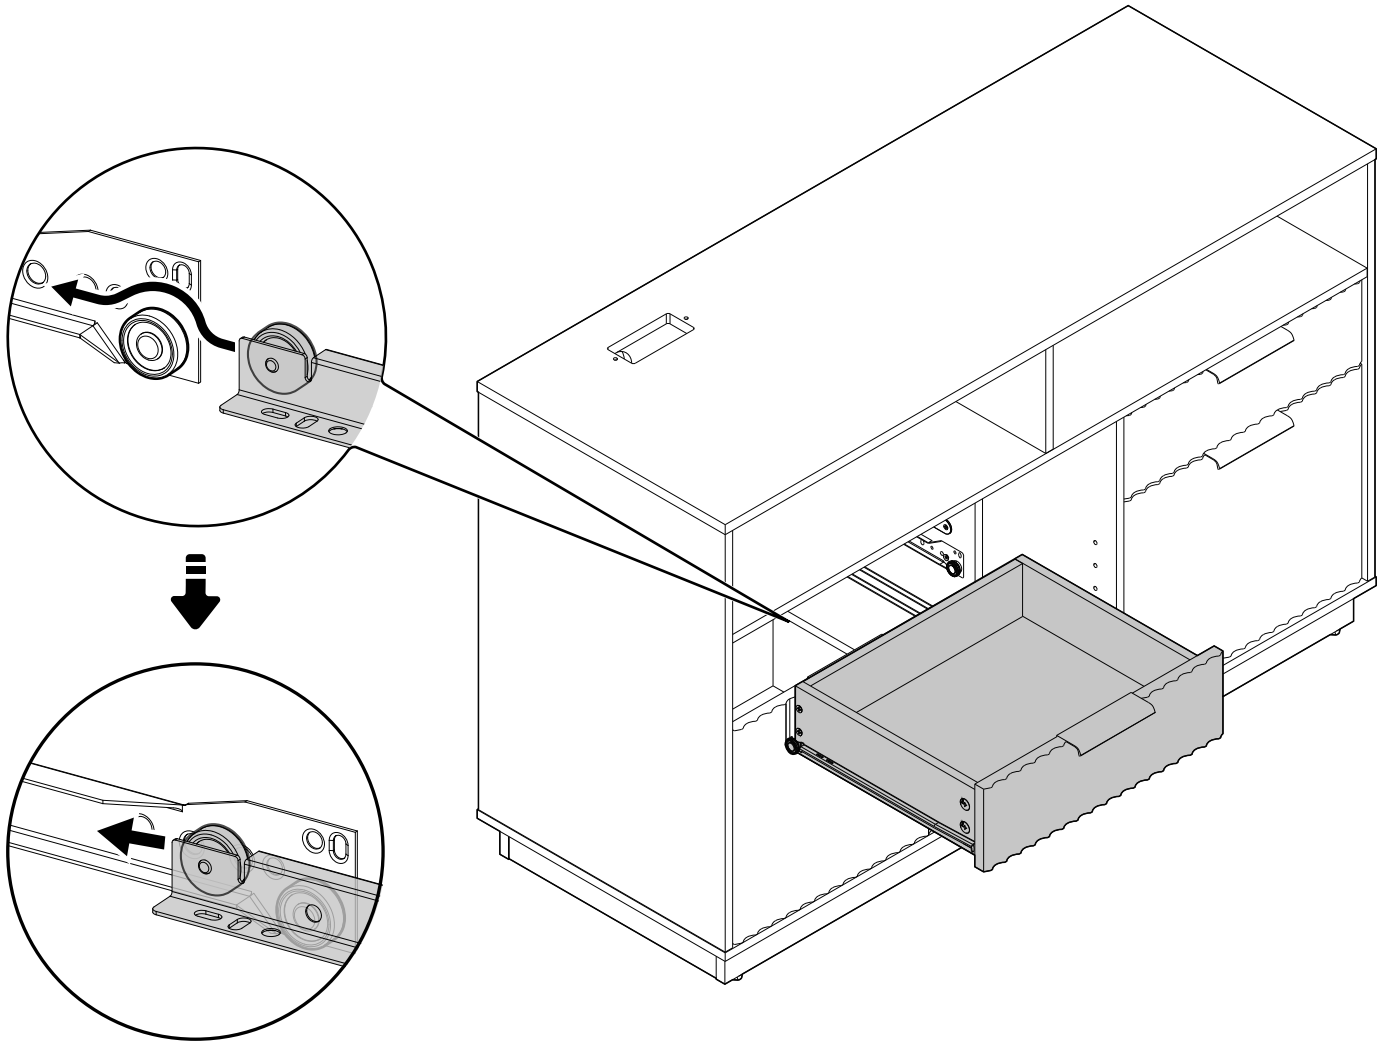


Drawer Slide Under Cabinet Slide

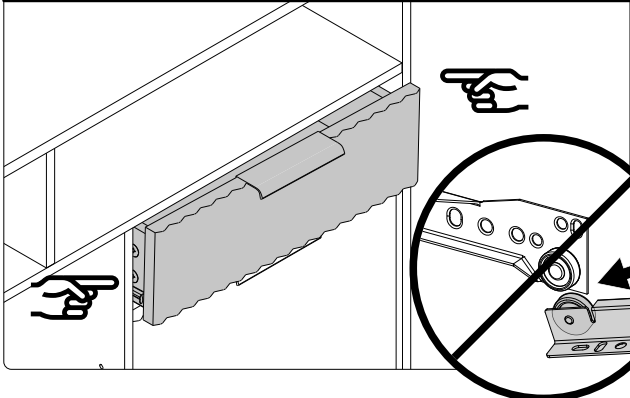



Drawer Slide Not Aligned

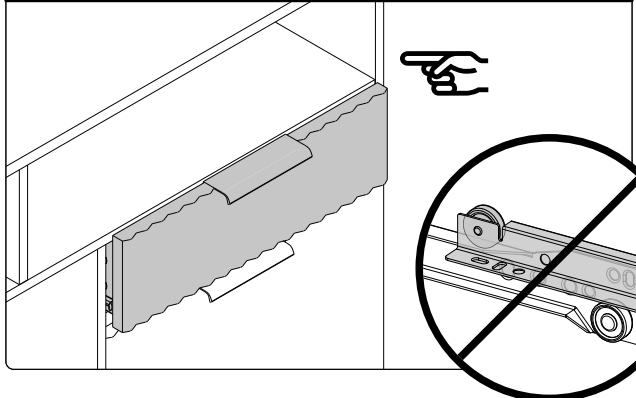

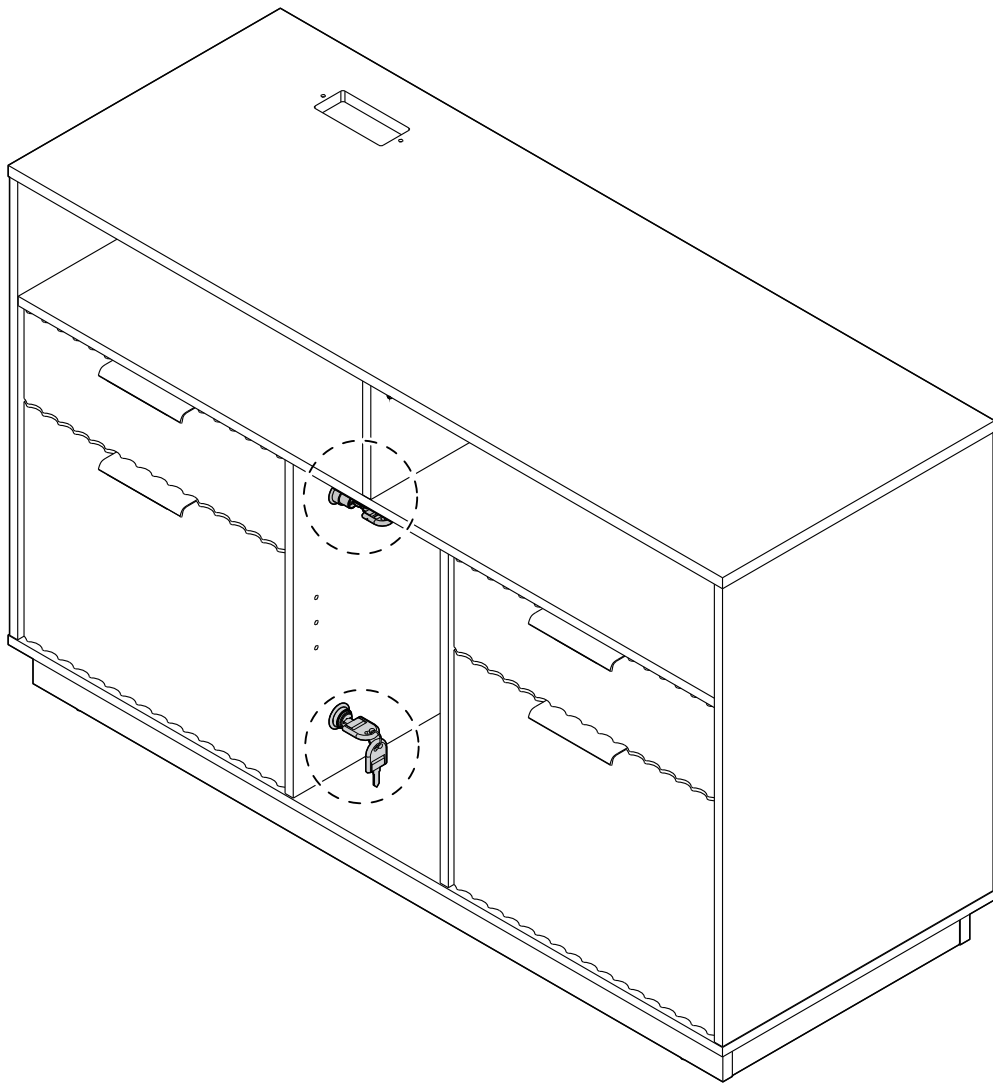



To lock

Insert & Press

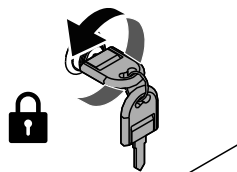
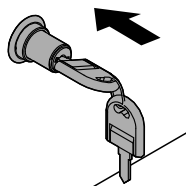


To unlock

Press & Turn

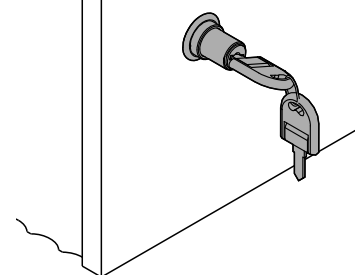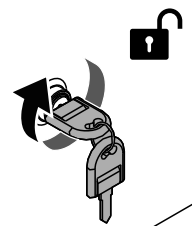

5

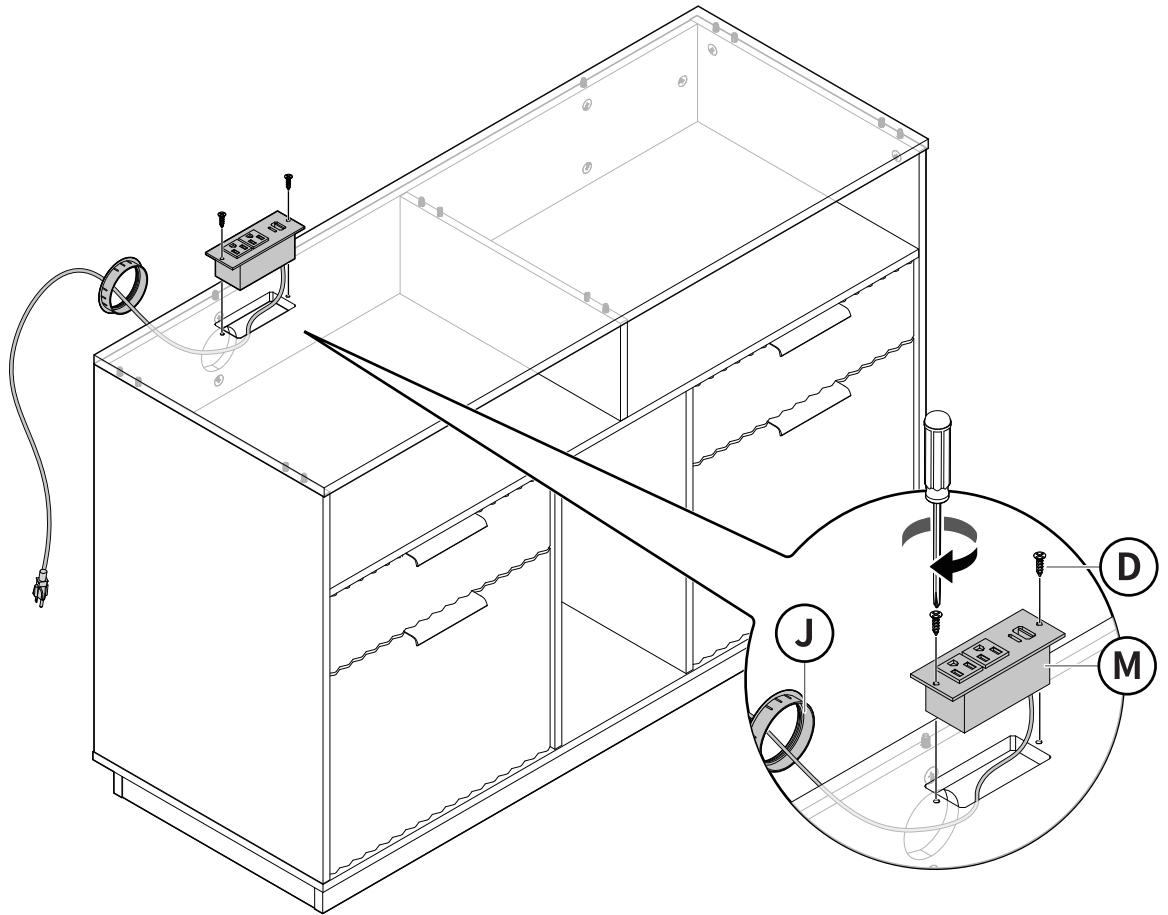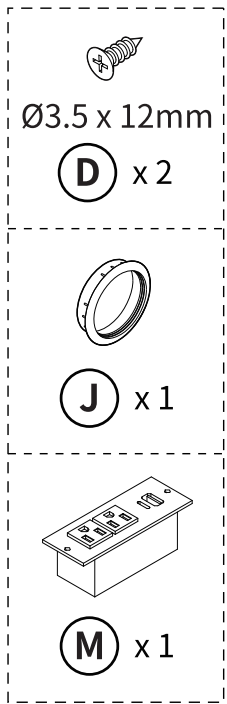

6

