

Assembly Instructions










Model NO.	KJ016	Product Name	Storage Ottoman

Hardware list


No.	Part Name	Picture	Dim.	Qty.
A	Cam Connector		M6*40mm	18
B	Bolt		M8*50mm	8
C	Bolt		M6*40mm	8
D	Bolt		M6*12mm	8
E	Screw		3.5*14mm	8
F	Bolt		M4*12mm	8
G	Hinge			2
H	Left Stay		3.0	1
J	Right Stay		3.0	1
I	Hex Key		5mm	1
K	Screwdriver		170mm	1

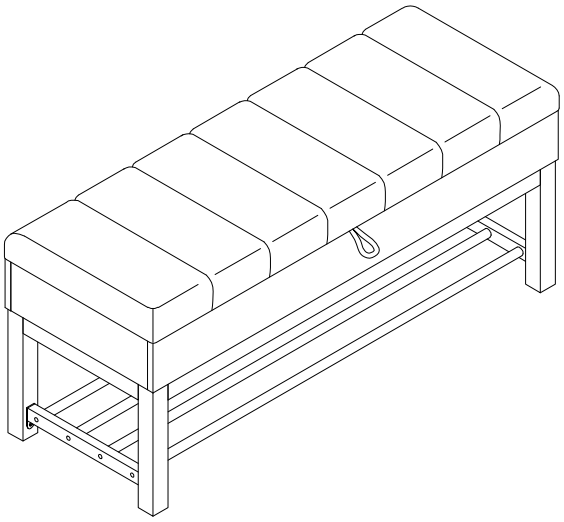


Component List

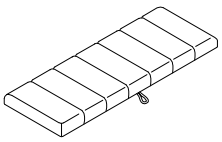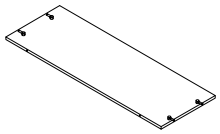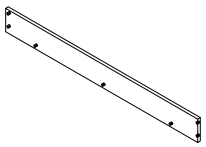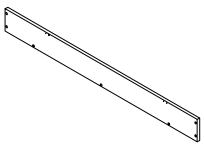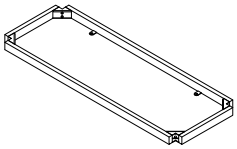No.	Part Name	Picture	Qty.
①	Cushion		1
②	Bottom Panel		1
③	Front Panel		1
④	Back Panel		1
⑤	Side Panel		2
⑥	left Leg		2
⑦	Right leg		2
⑧	Side Rail		2
⑨	Bottom Rail		4
⑩	Frame		1


STEP 1

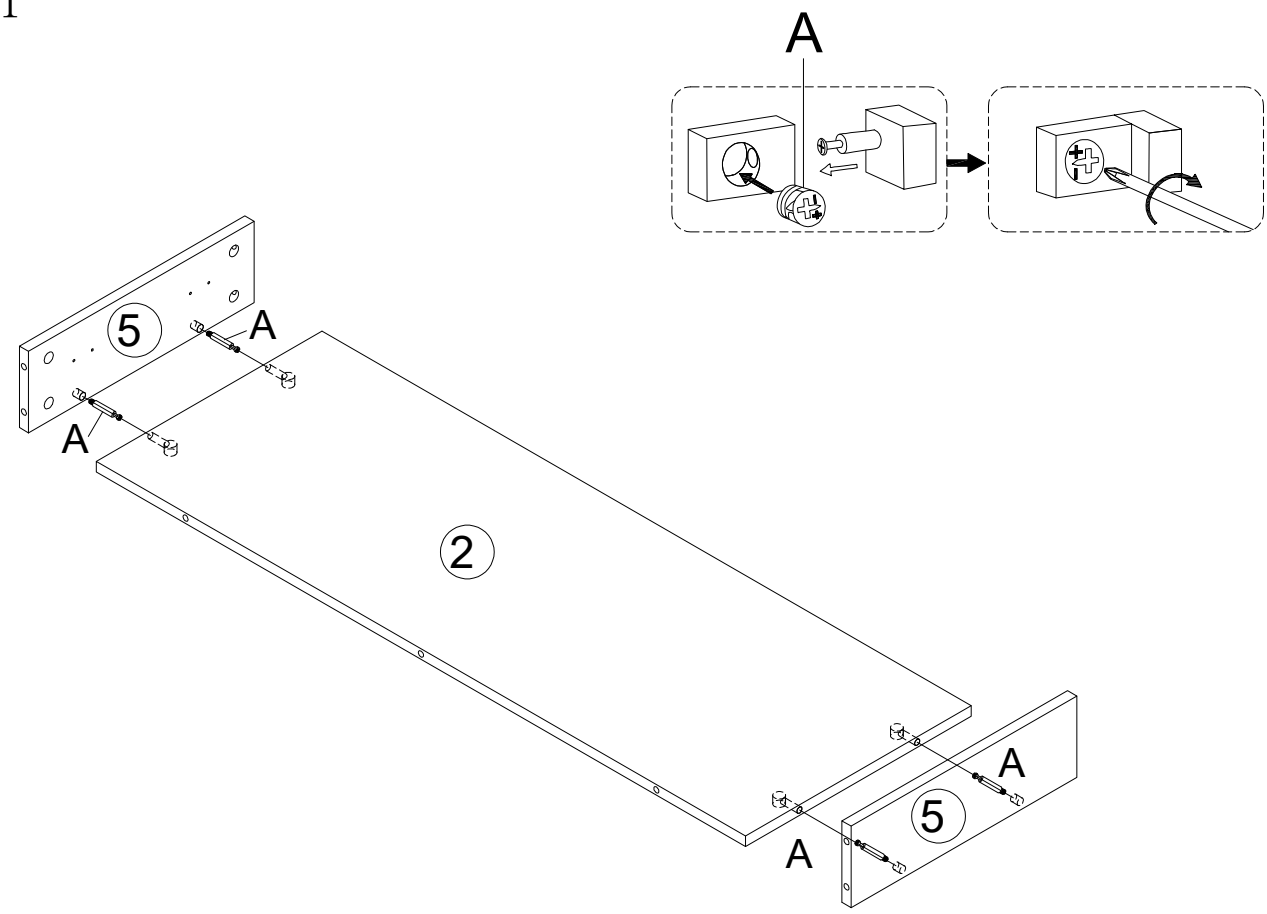


STEP 2

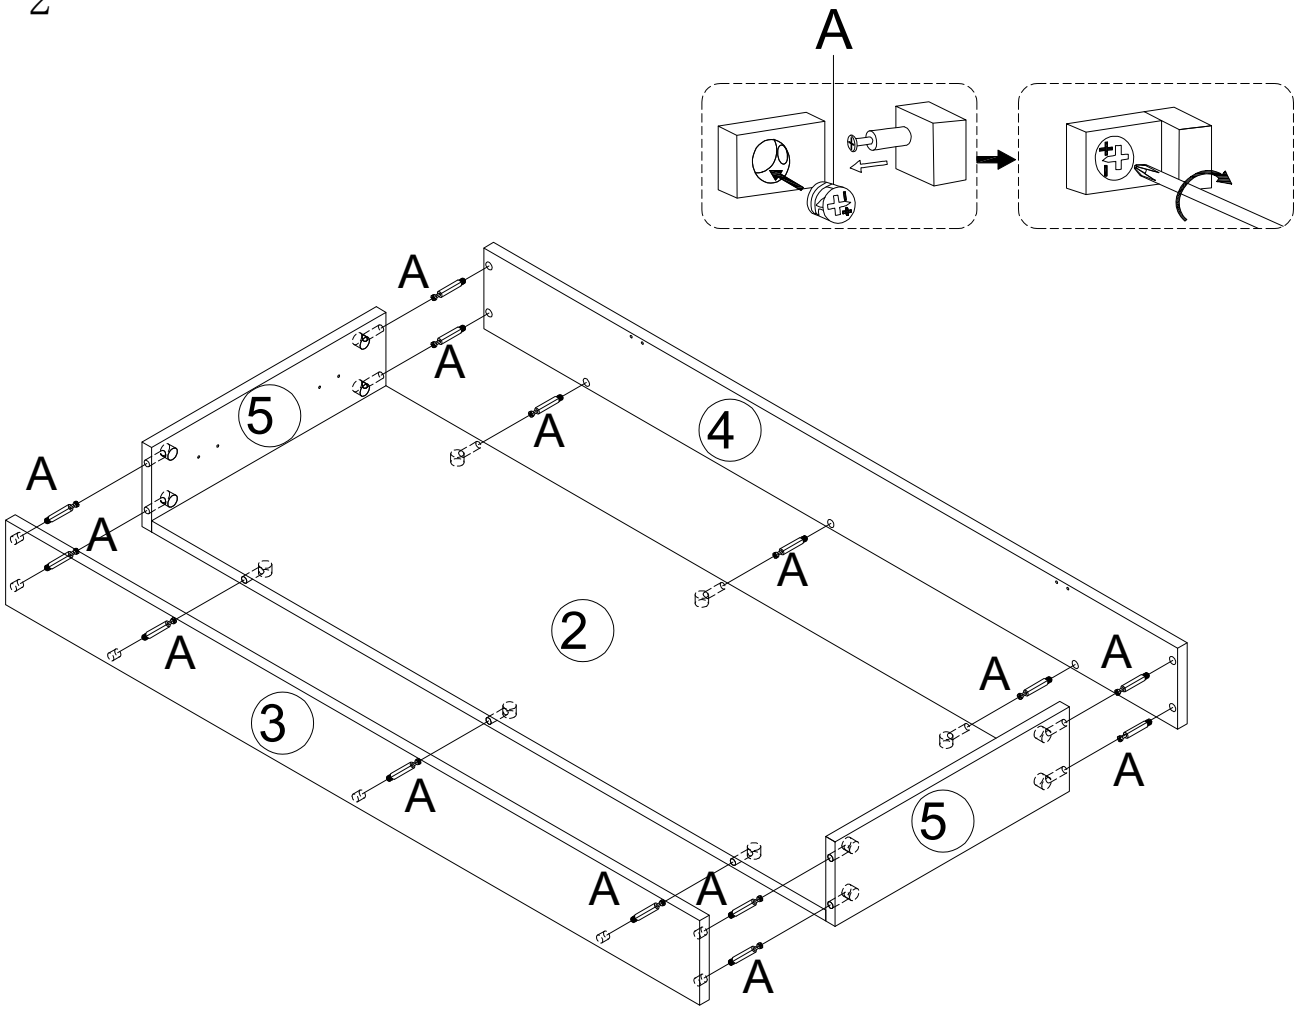


STEP 3

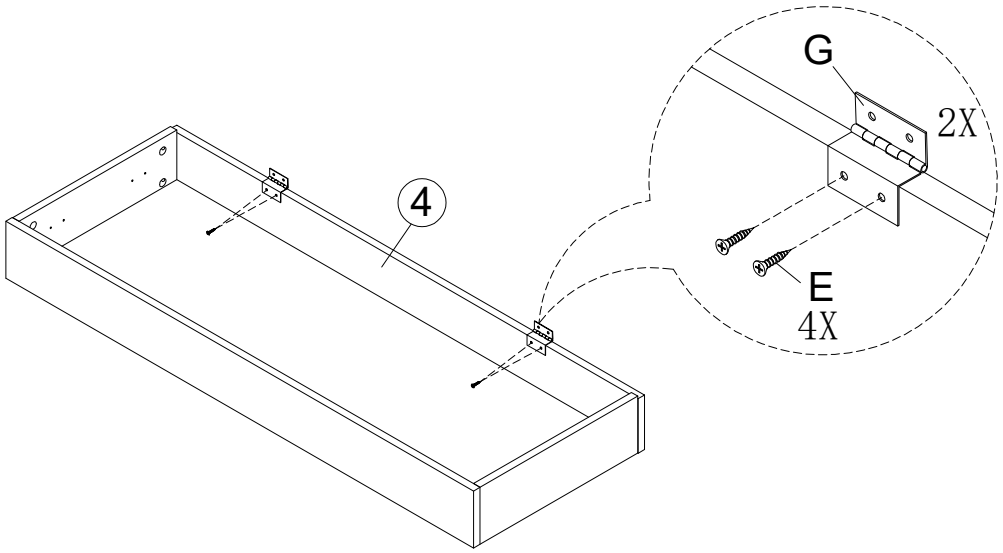


STEP 4

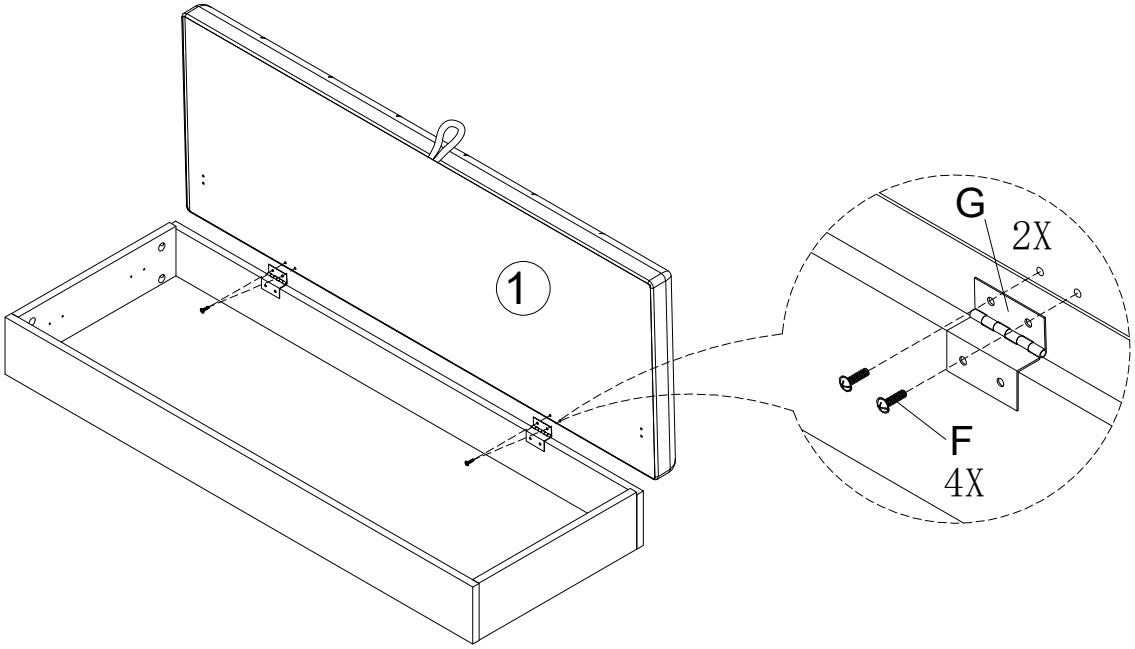

STEP 5

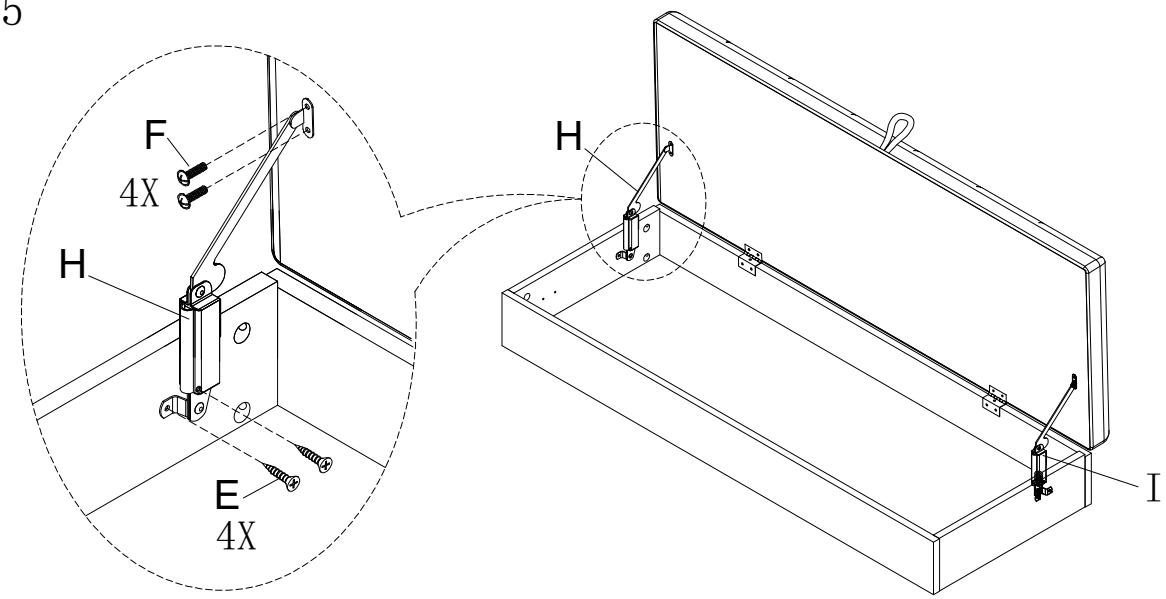


STEP 6

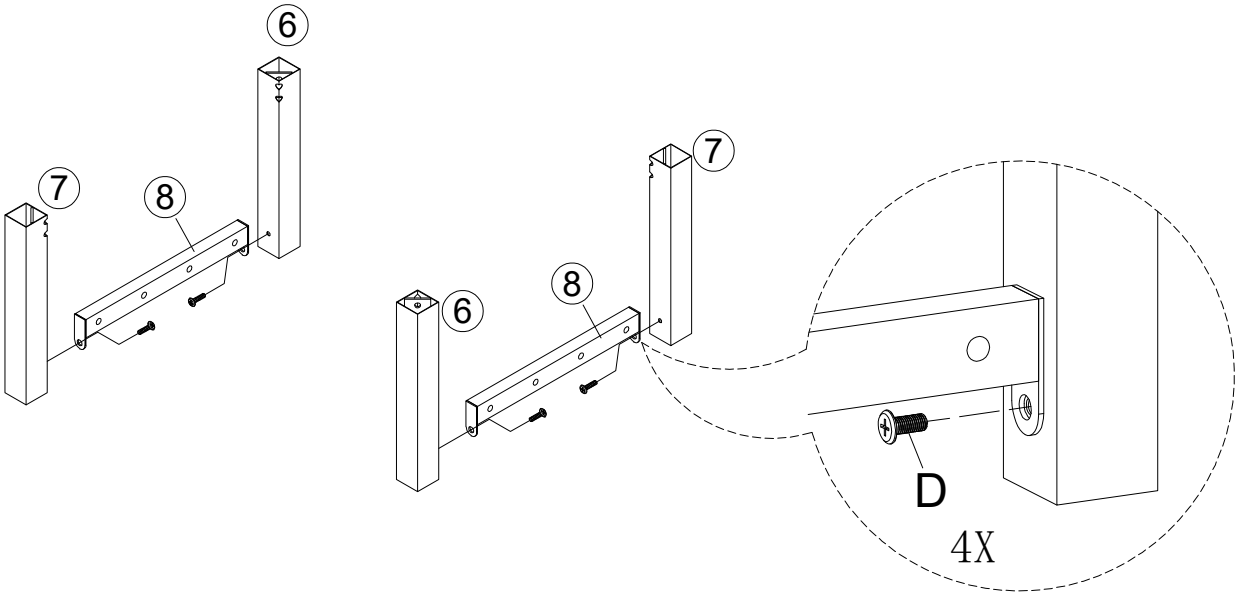


Pass Bolt D through the side rail hole to connect with the leg, tighten 70% only; do not fully tighten now

STEP 7

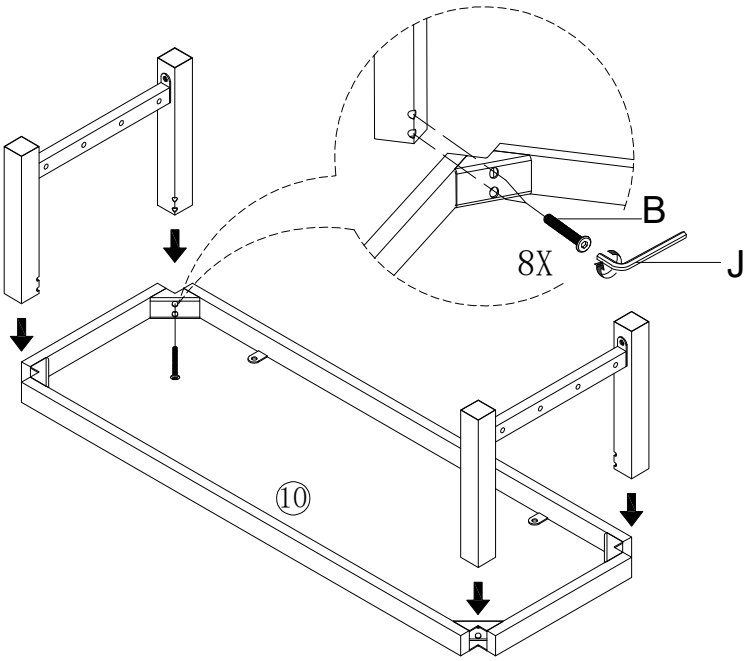


Pass Bolt B through the frame hole to connect with the leg, tighten only 70%; do not fully tighten for now.

STEP 8

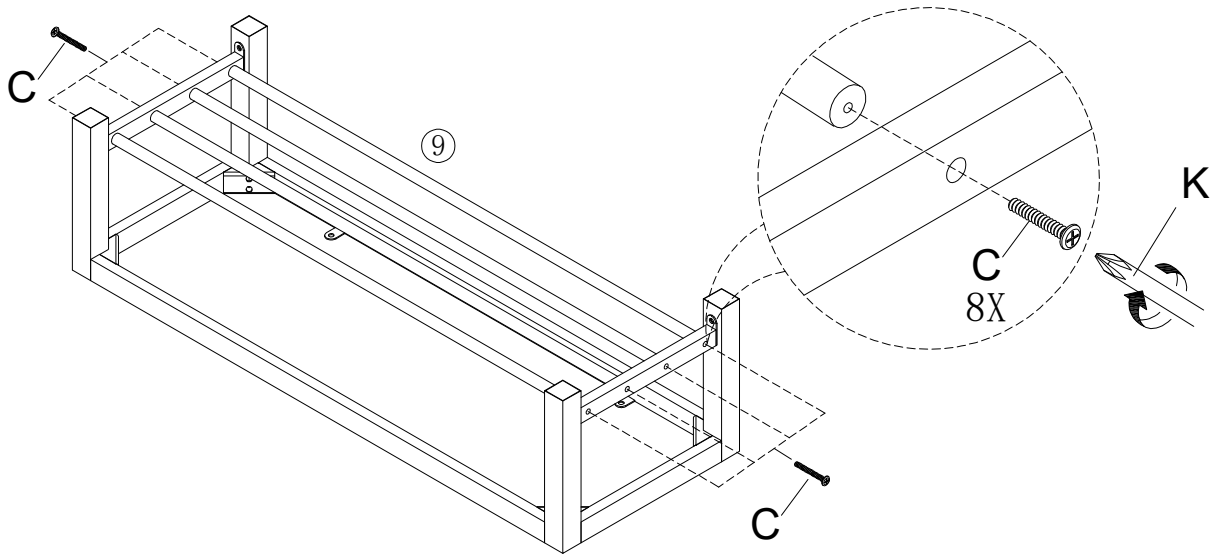

Thread Bolt C through the hole of Side Rail 8 to connect with Bottom Rail 9, tighten to 70% torque. Do not fully fasten at this stage. Fully tighten all bolts once all assembly work is completed.

STEP 9

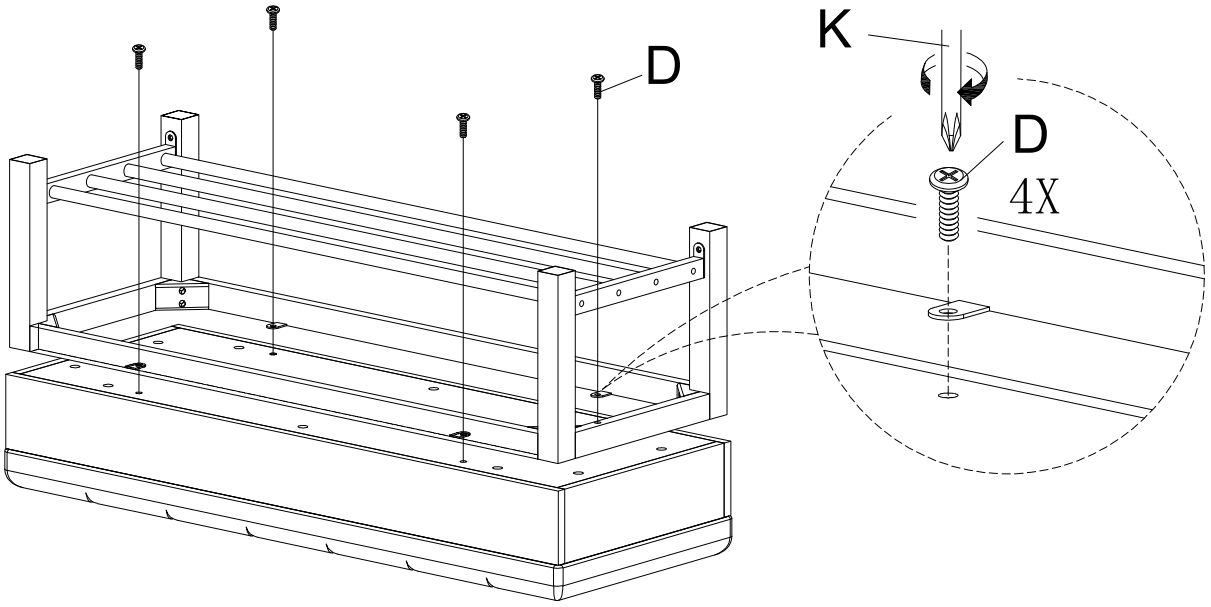

STEP 10

