


ASSEMBLY INSTRUCTIONS


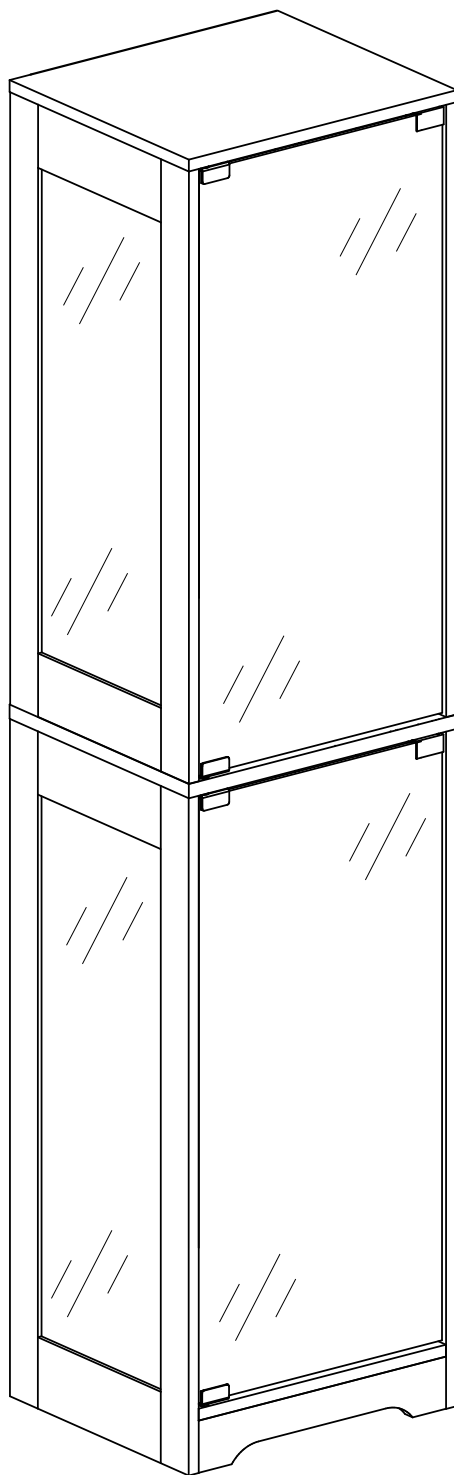


WARNING !




Estimated Time for Assembly

60 mins

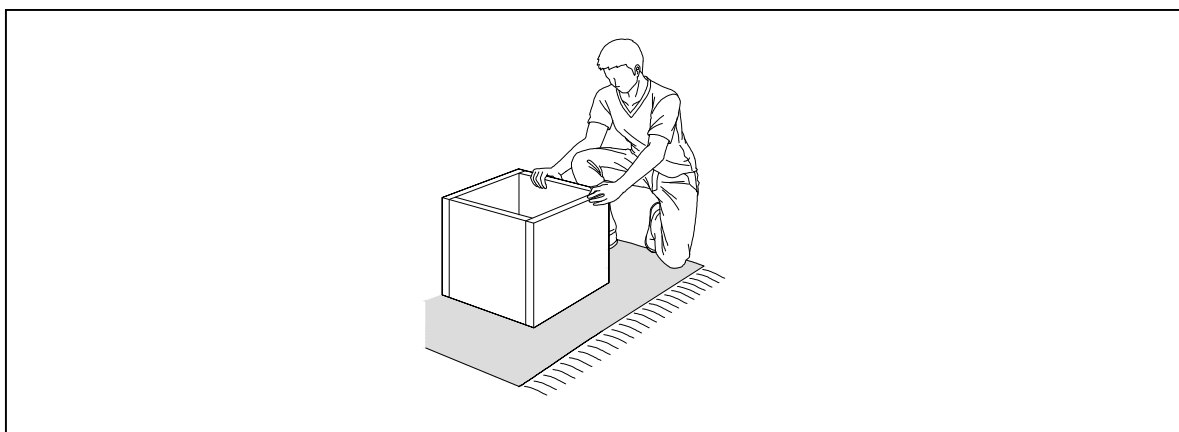

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.


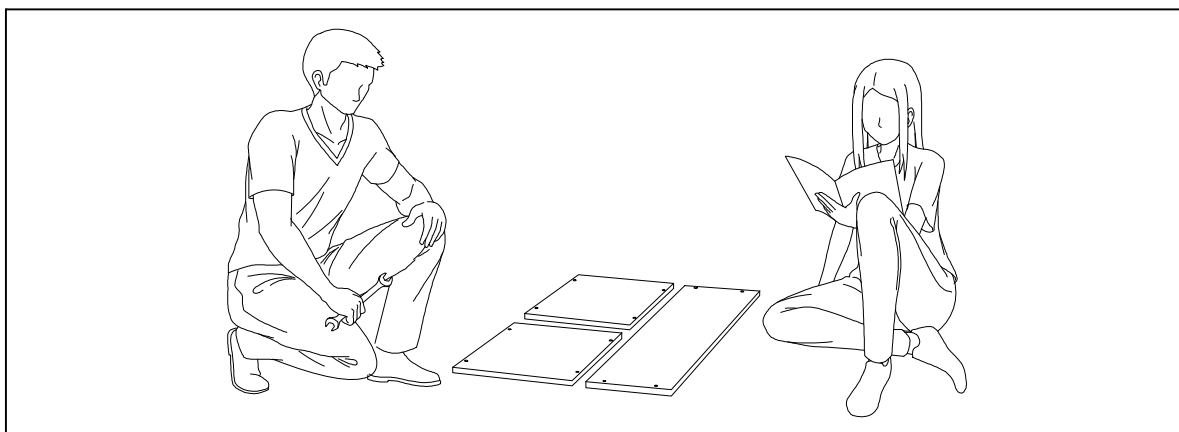


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

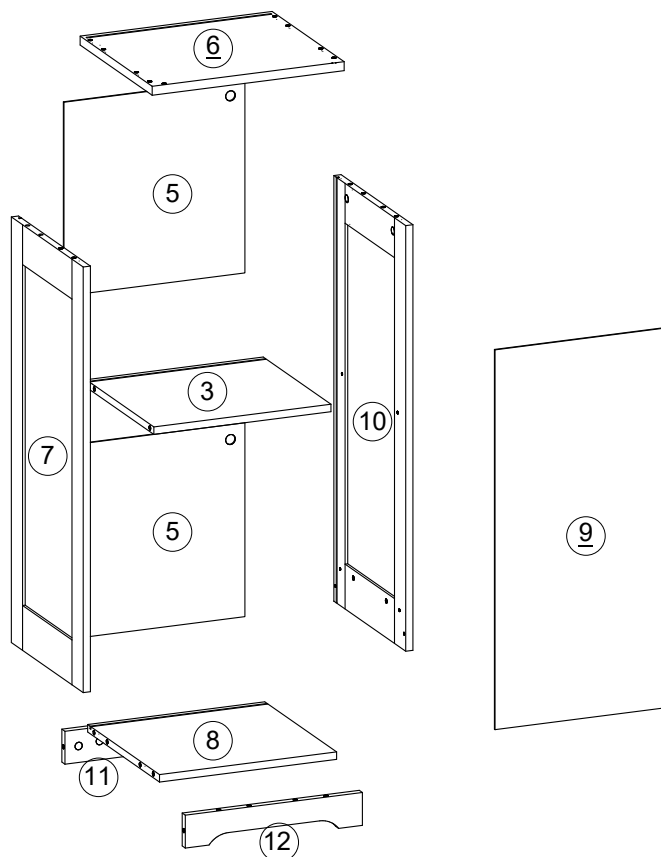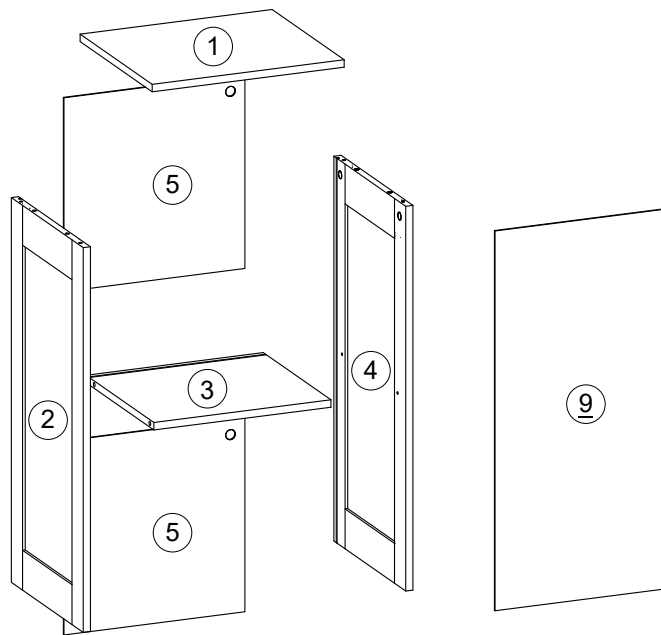


BOARD IDENTIFICATION


Not actual size

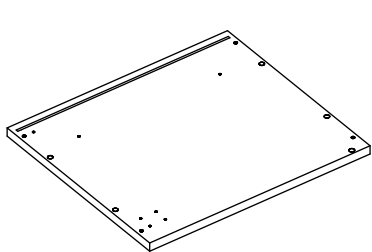


① X1

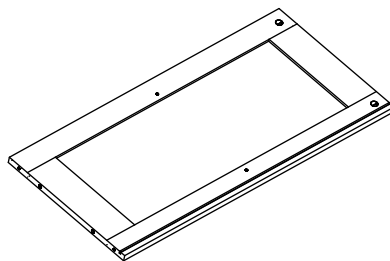


② X1

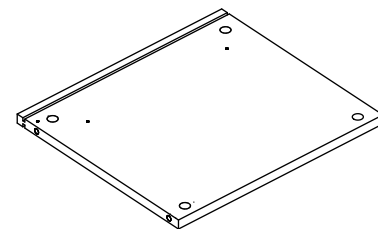


③ X2

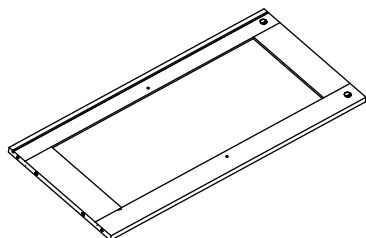


④ X1

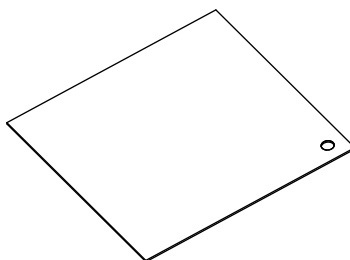


⑤ X4

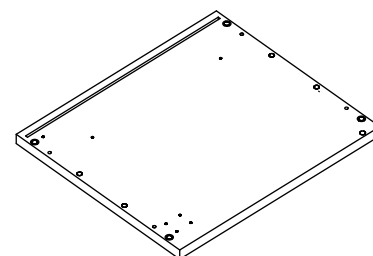


⑥ X1

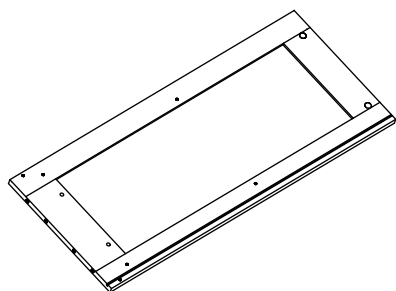


⑦ X1

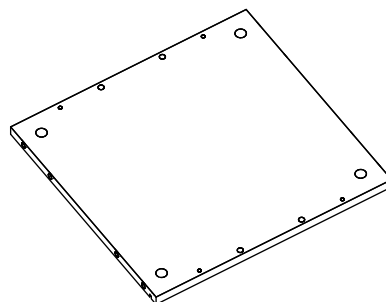


⑧ X1

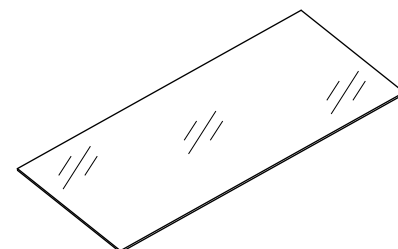


⑨ X2

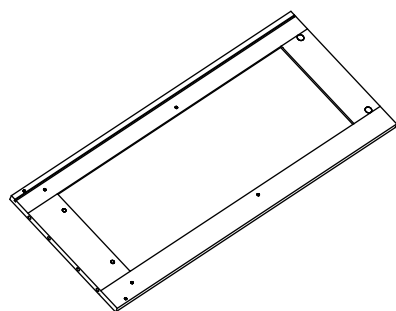

⑩ X1












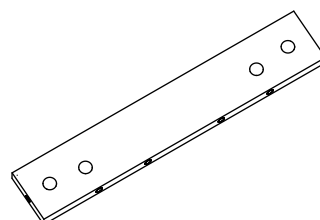


⑪ X1

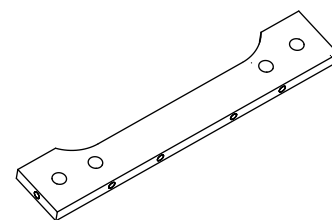





⑫ X1

HARDWARE LIST

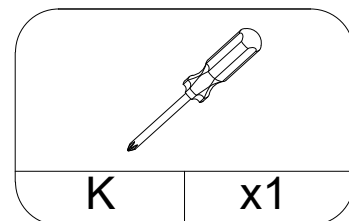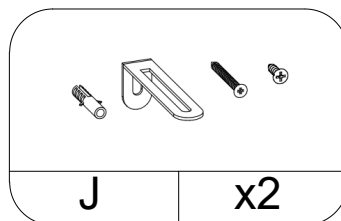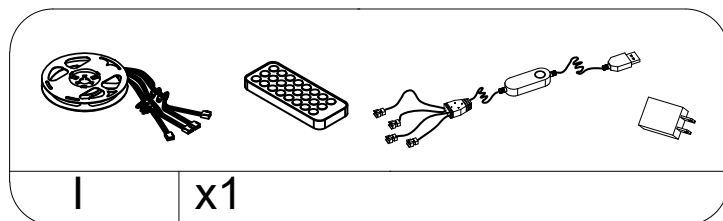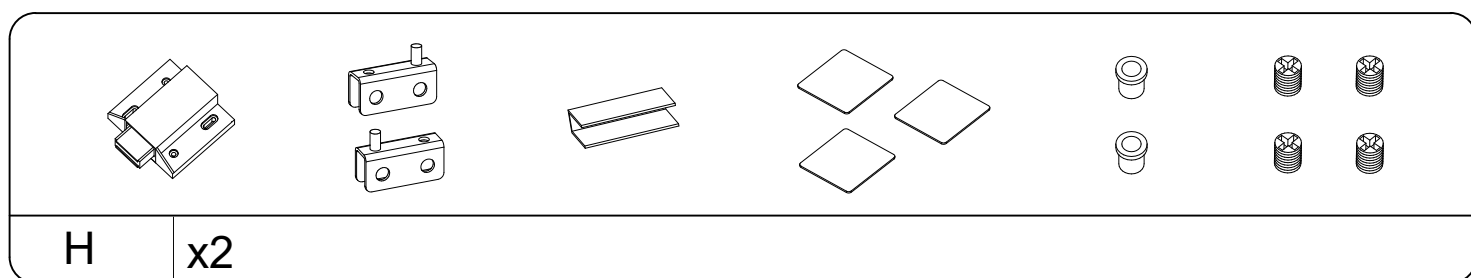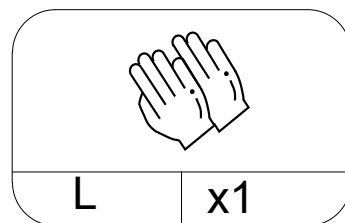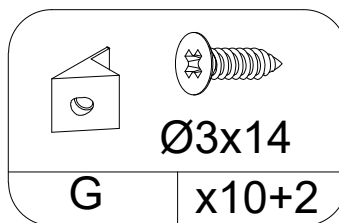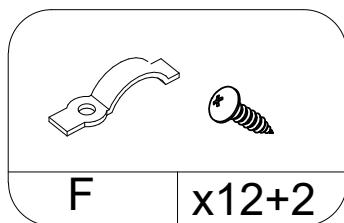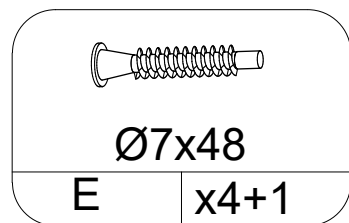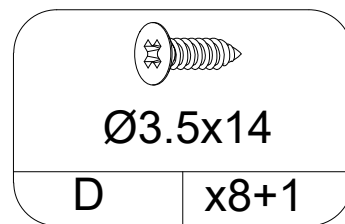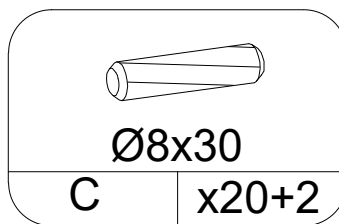
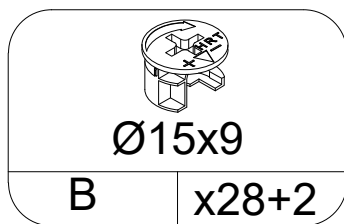
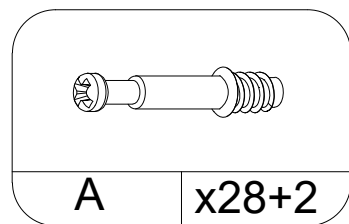


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

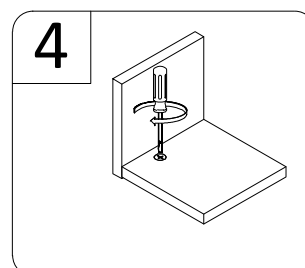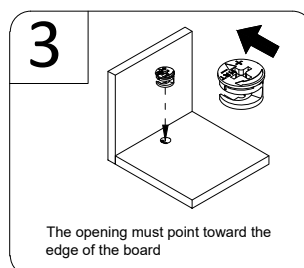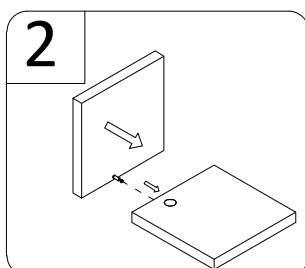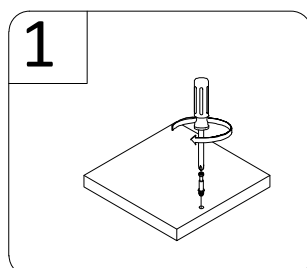


STEP 1

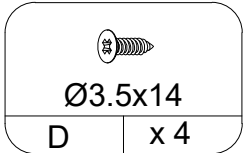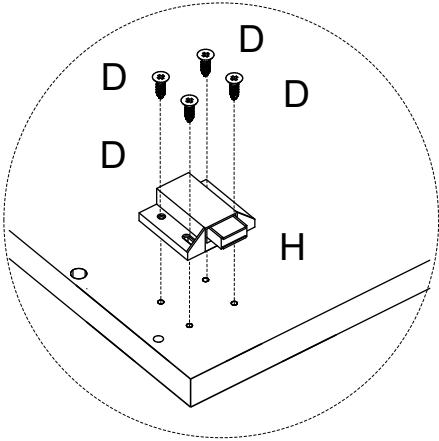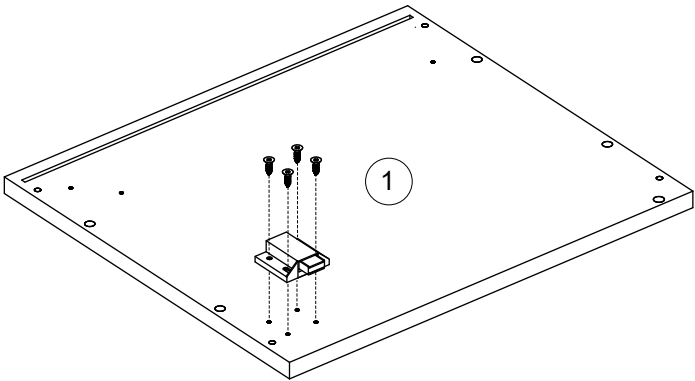

D




x 4

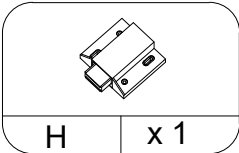

H


x 1

STEP 2

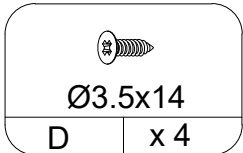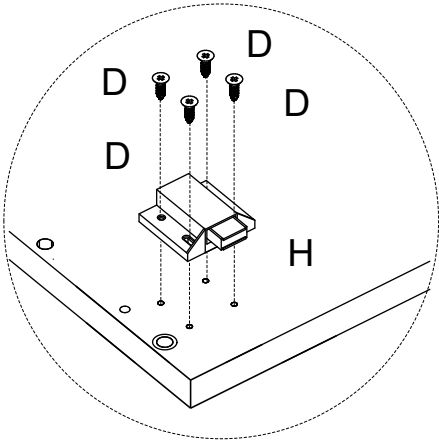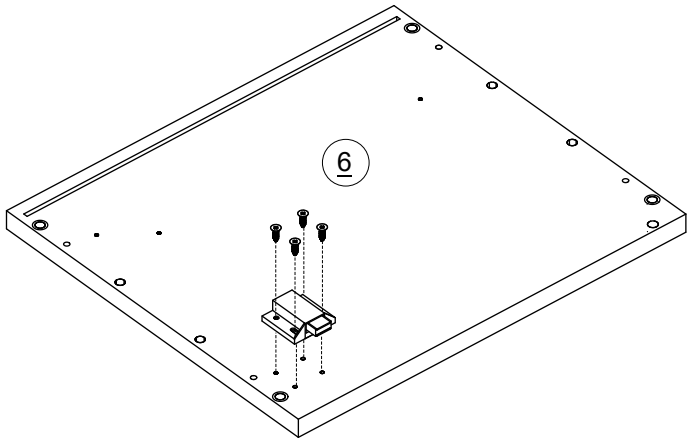

D

x 4

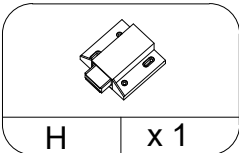





H

x 1

STEP 3

When installing the LED strip light, follow these steps in sequence:





1. Peel off the protective backing from the adhesive tape on the strip light.
2. Affix the strip to the inner surface of Plate 1, ensuring the total length of the strip is appropriate and maintaining a minimum clearance of 22mm from the left edge.
3. Secure the strip using Screw F at designated points, as illustrated in the accompanying diagram.

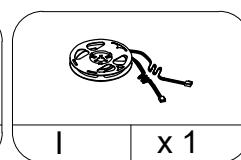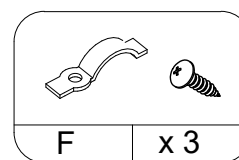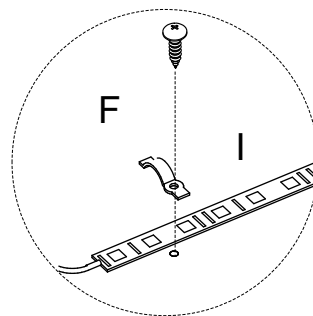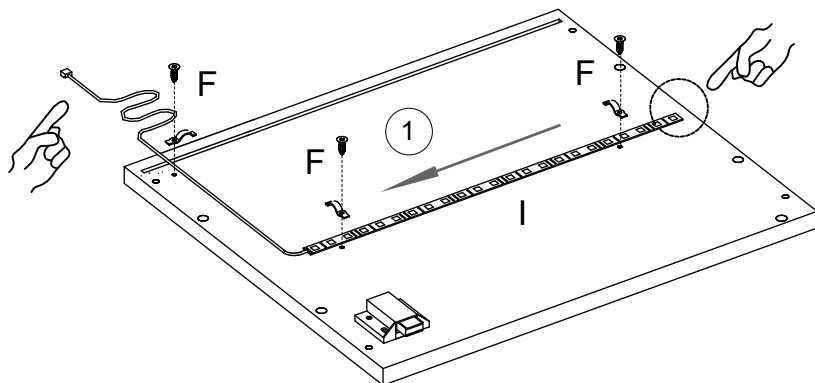

STEP 4

When installing the LED strip light, follow these steps in sequence:



1. Peel off the protective backing from the adhesive tape on the strip light.
2. Affix the strip to the inner surface of Plate 6, ensuring the total length of the strip is appropriate and maintaining a minimum clearance of 22mm from the left edge.
3. Secure the strip using Screw F at designated points, as illustrated in the accompanying diagram.

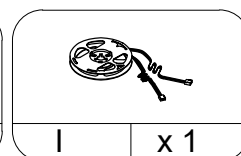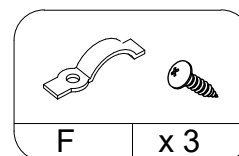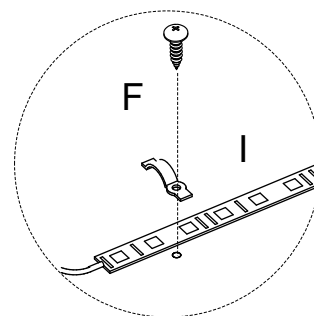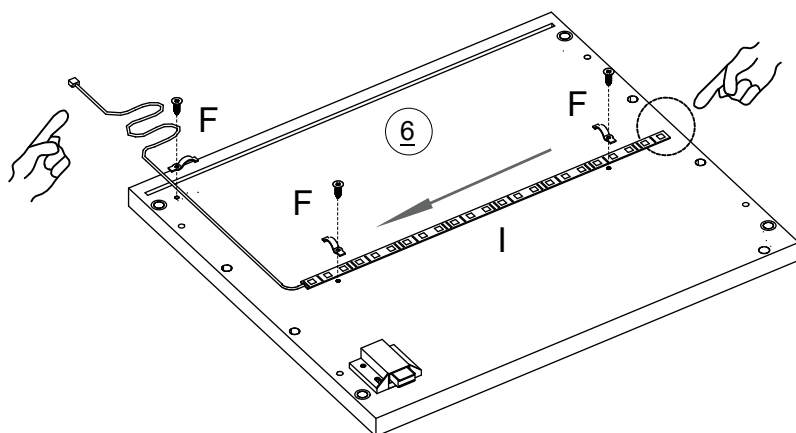



STEP 5

When installing the LED strip light, follow these steps in sequence:




1. Peel off the protective backing from the adhesive tape on the strip light.
2. Affix the strip to the inner surface of Plate 3, ensuring the total length of the strip is appropriate and maintaining a minimum clearance of 22mm from the left edge.
3. Secure the strip using Screw F at designated points, as illustrated in the accompanying diagram.

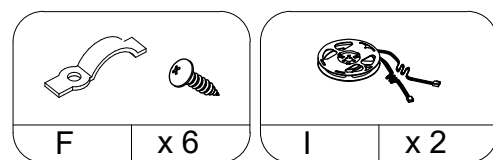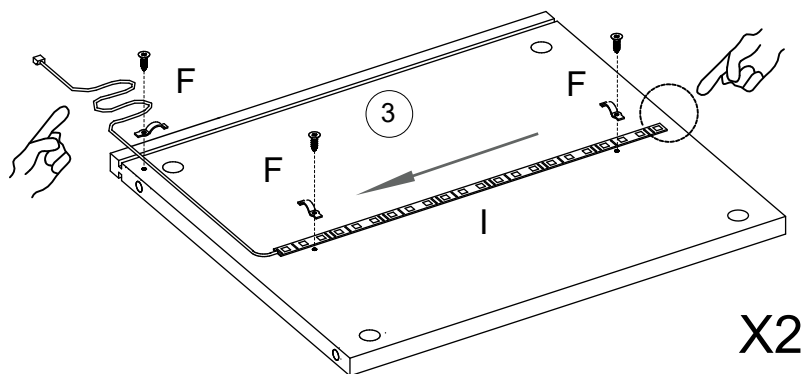




STEP 6

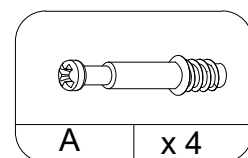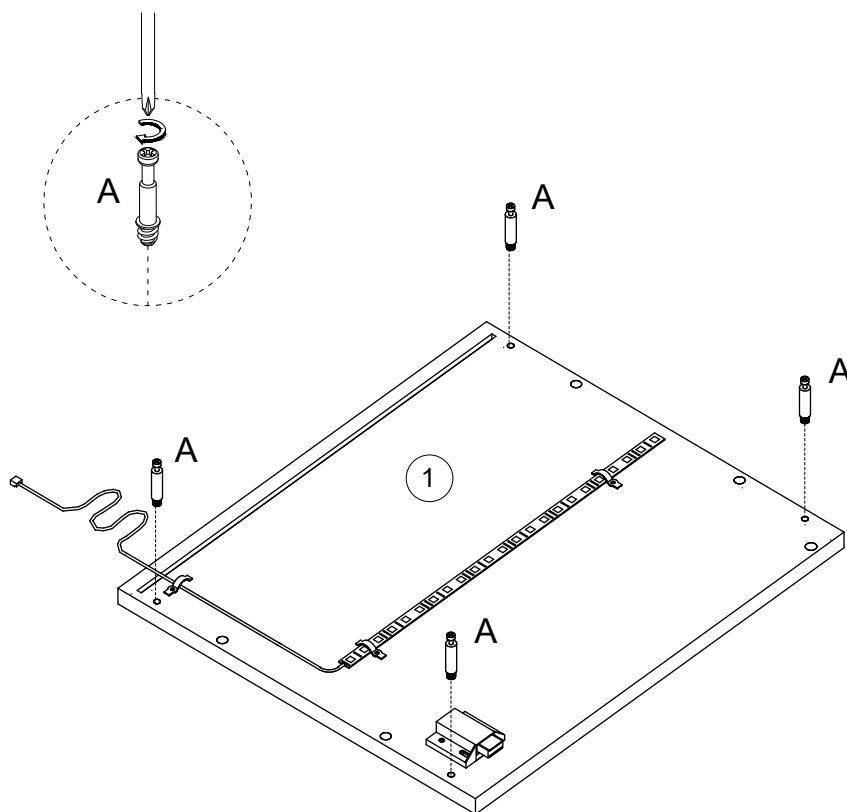



STEP 7

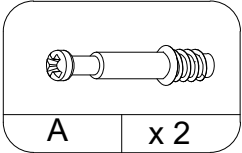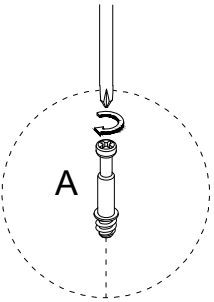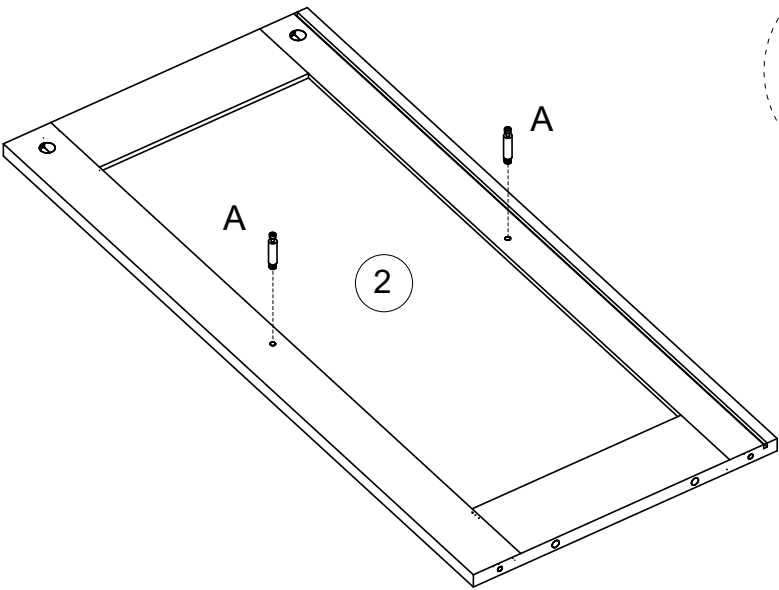

STEP 8


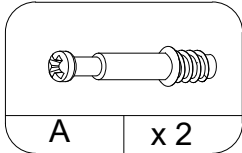
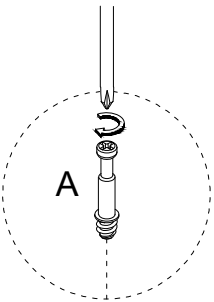
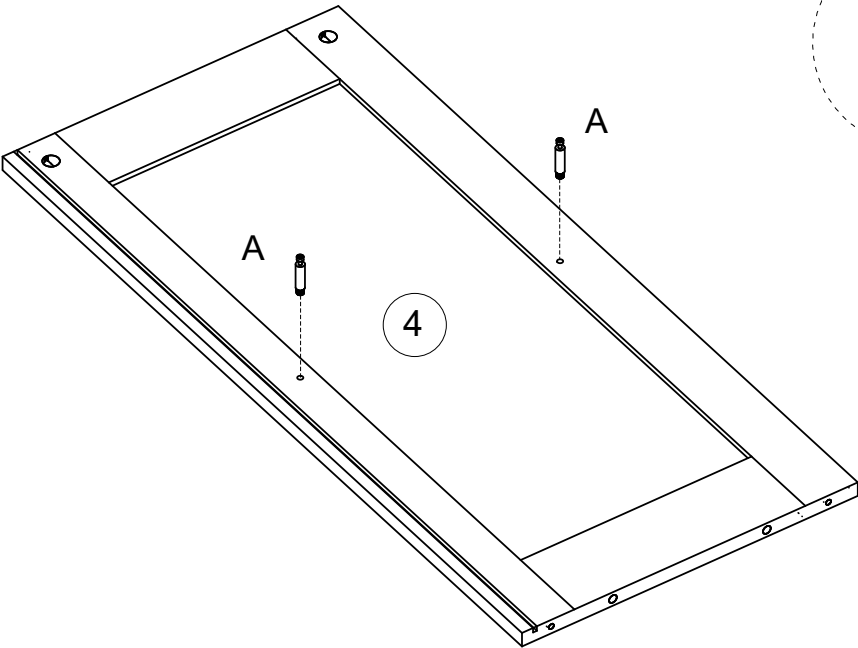


STEP 9

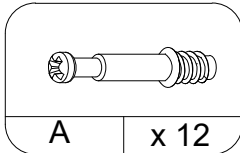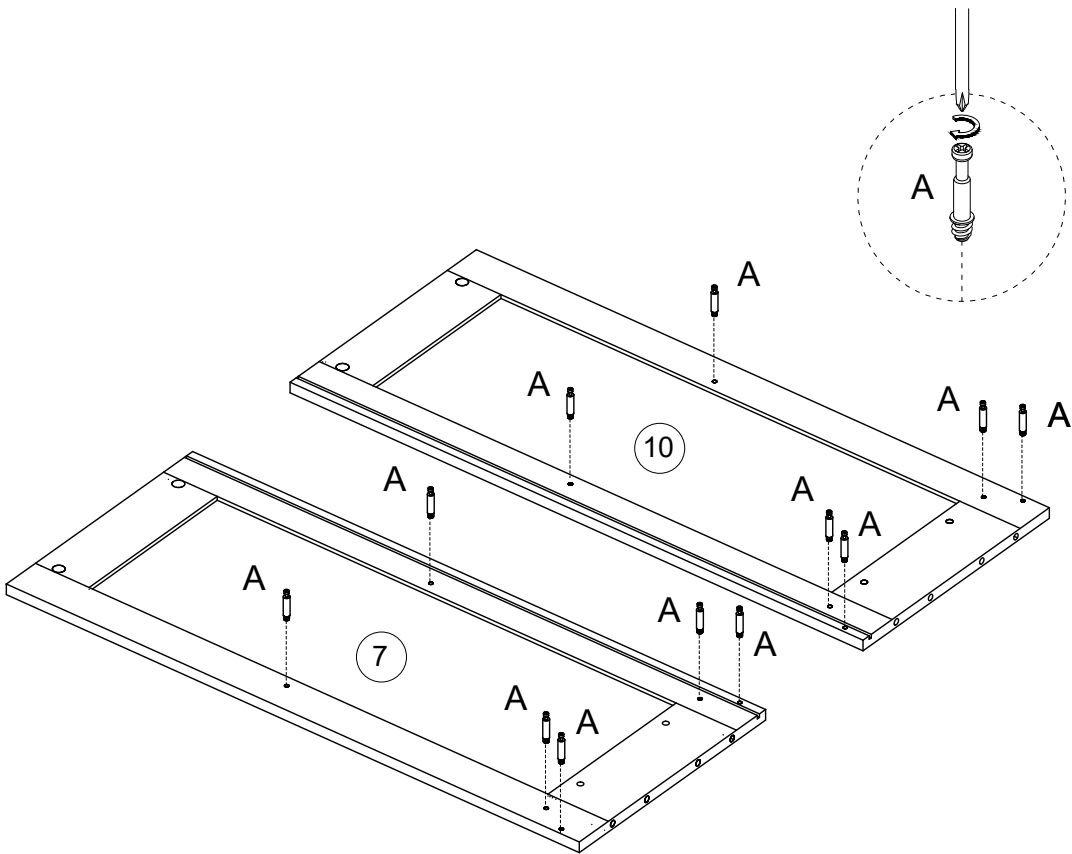





A x 12

STEP 10

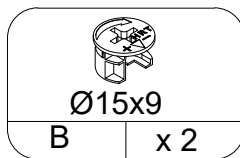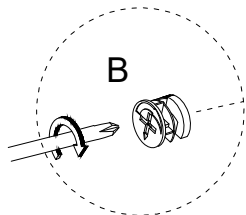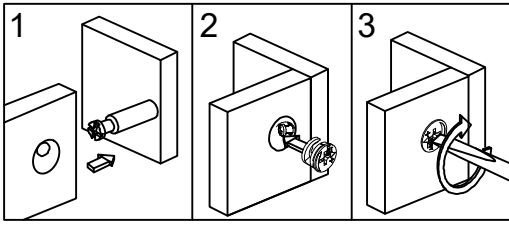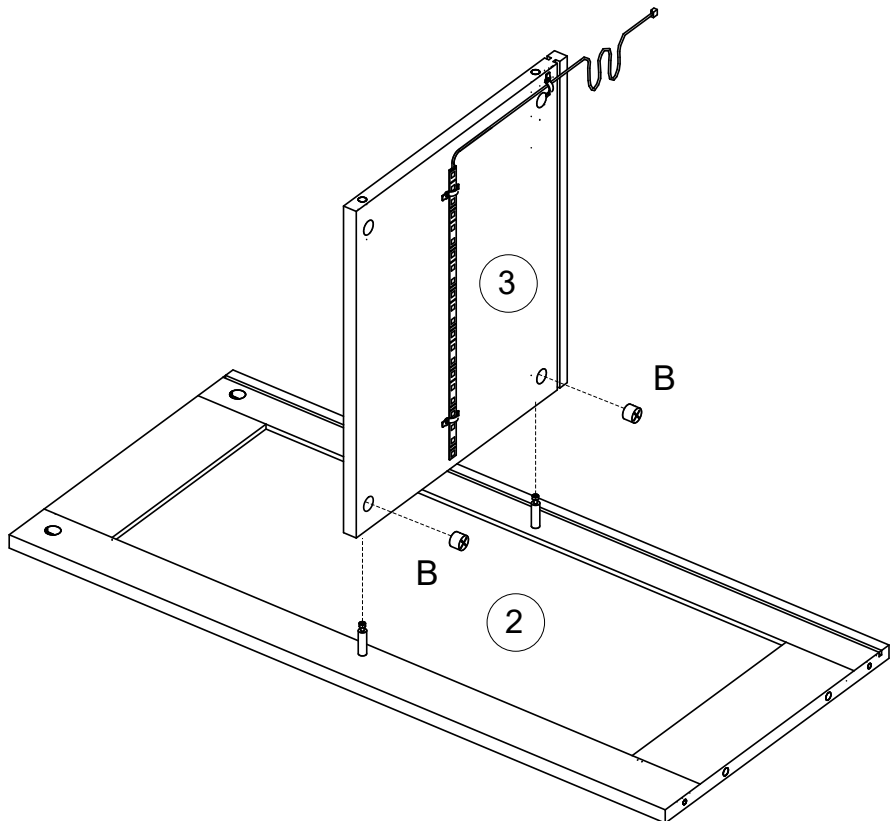

Ø15x9
B x 2




STEP 11

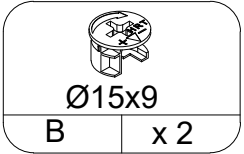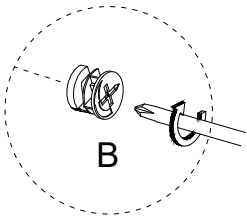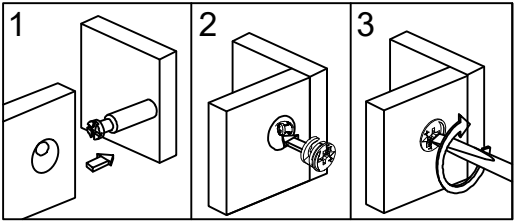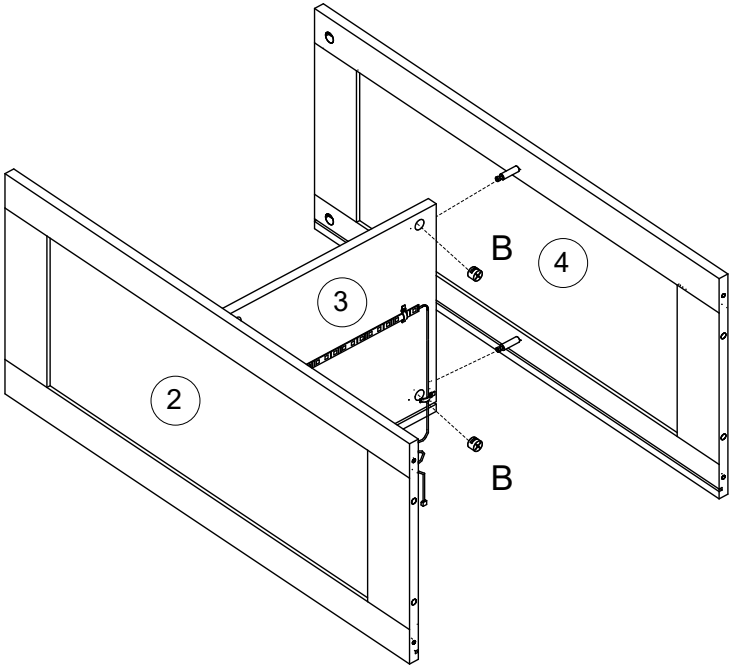


STEP 12




Pay attention to
hole position .

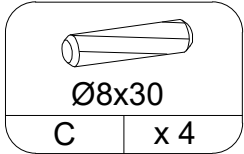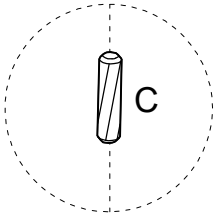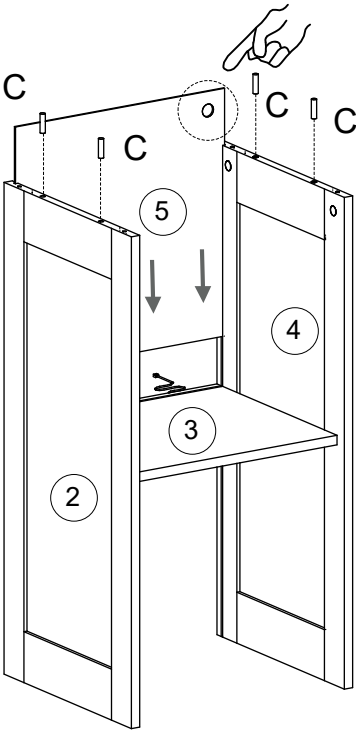

STEP 13

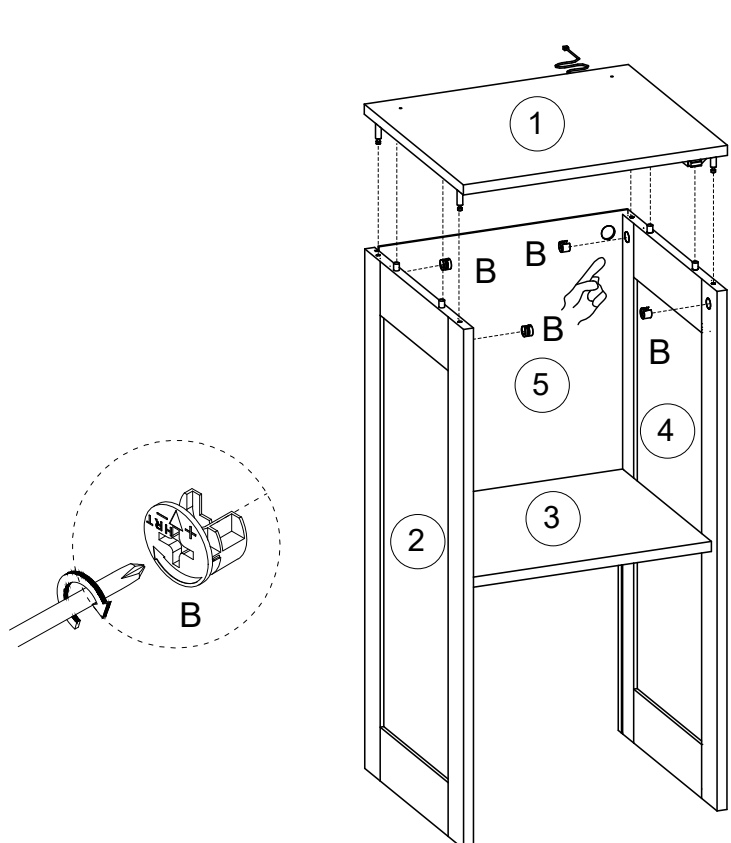


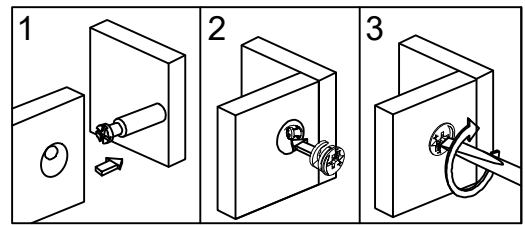

1 2 3




Let the wire pass through this hole.

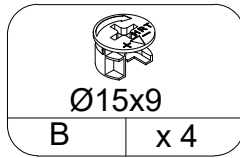


Ø15x9
B x 4

STEP 14

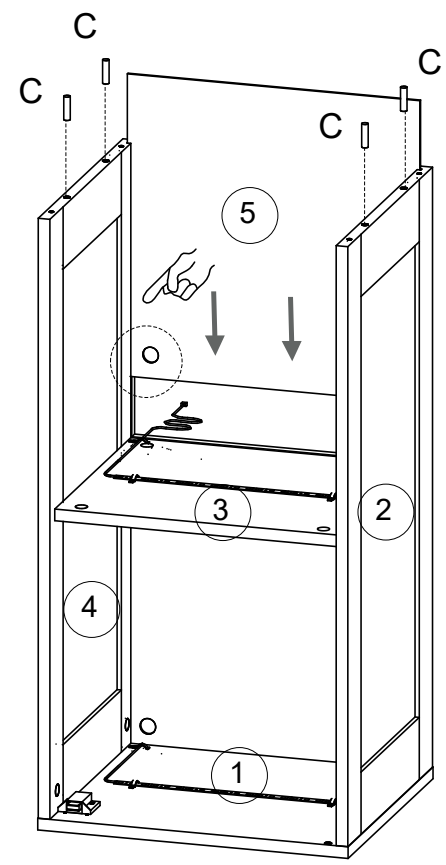




Pay attention to hole position. then let the wires pass through this hole.


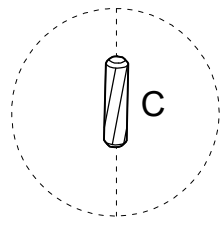



C

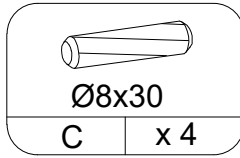

Ø8x30
C x 4

STEP 15

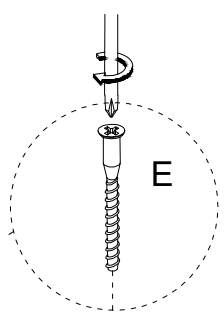
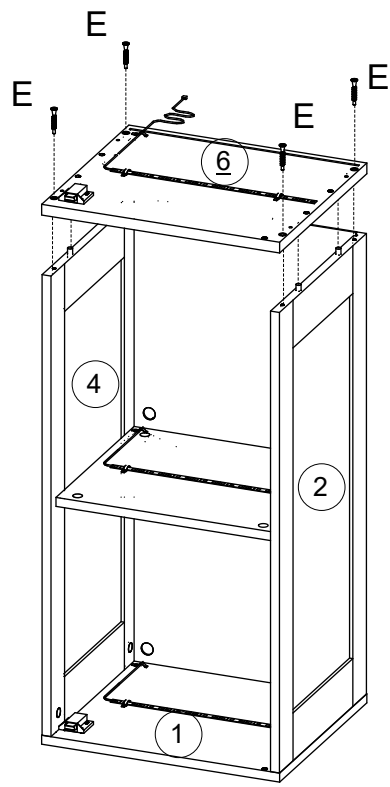





$\text{Ø}7 \times 48$

E	x 4
---	-----



STEP 16

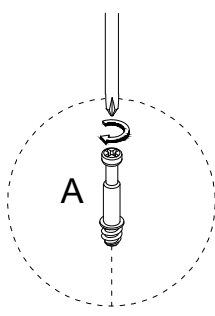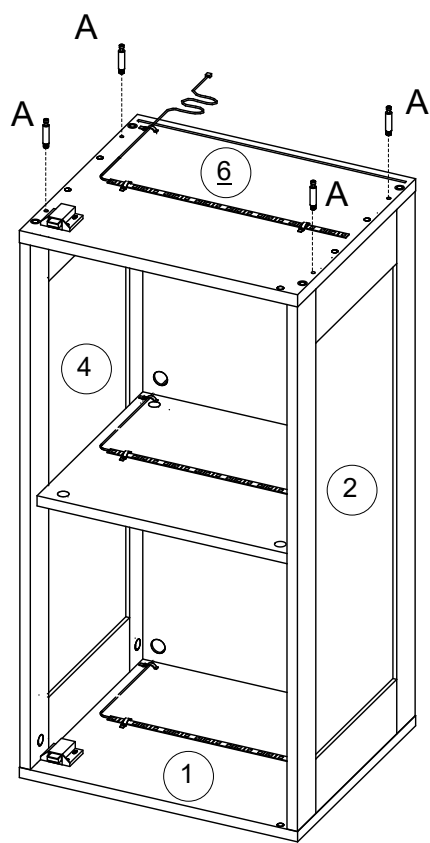





A	x 4
---	-----





STEP 17

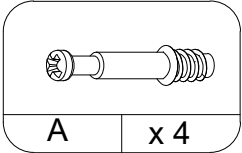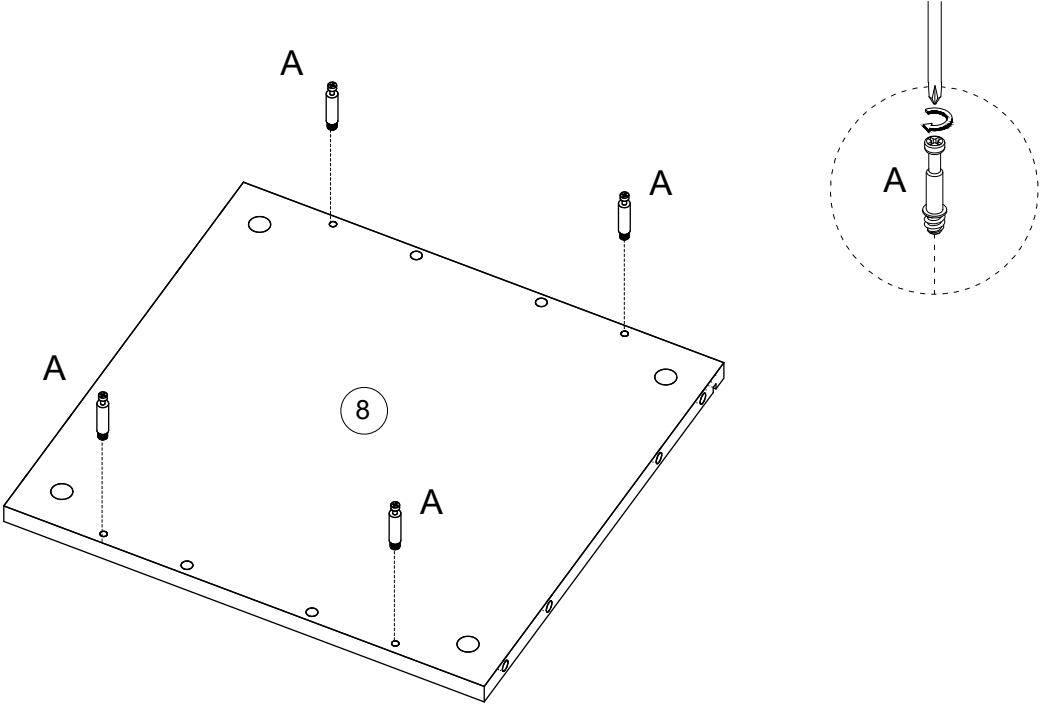






STEP 18

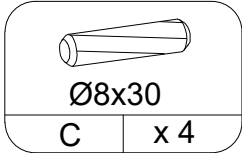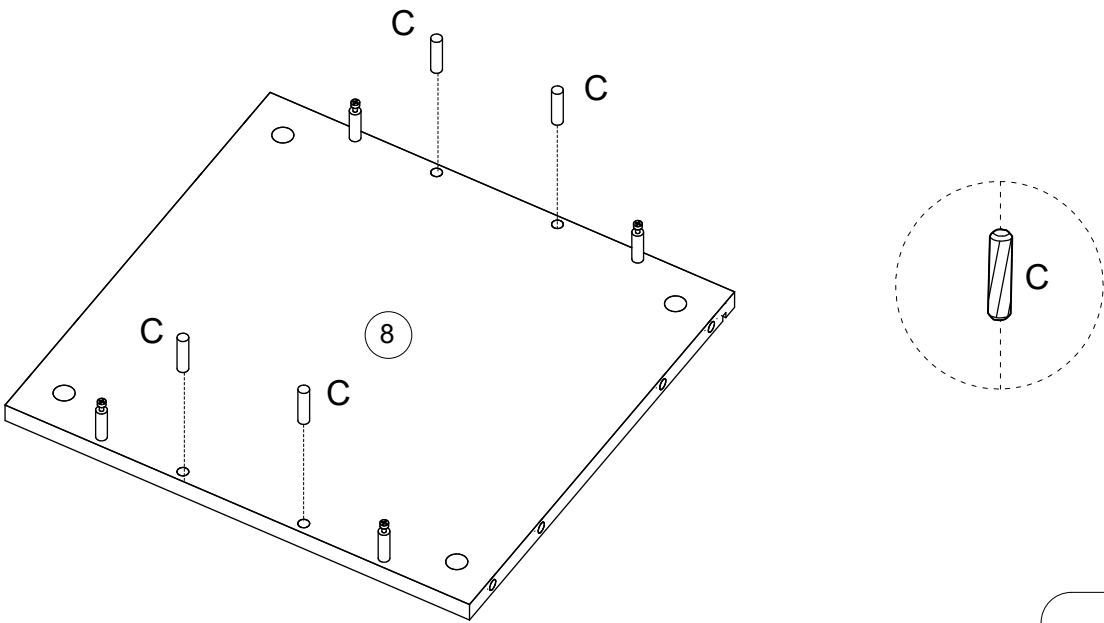





STEP 19

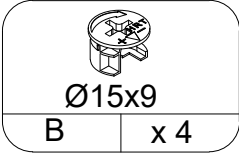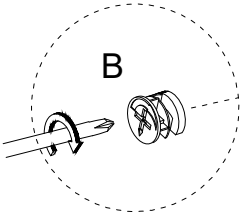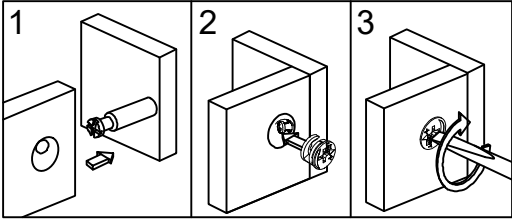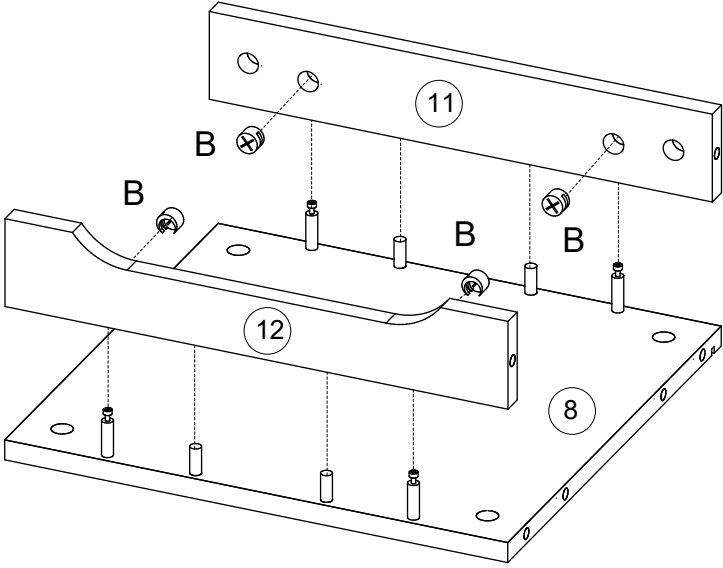

STEP 20

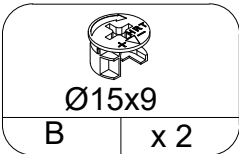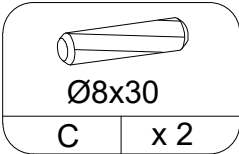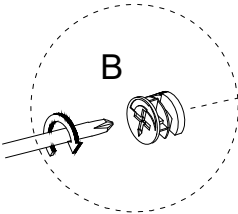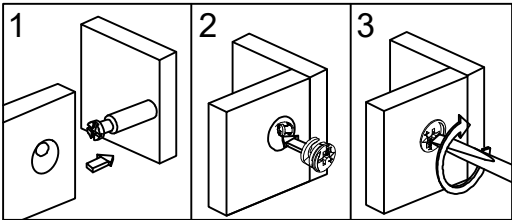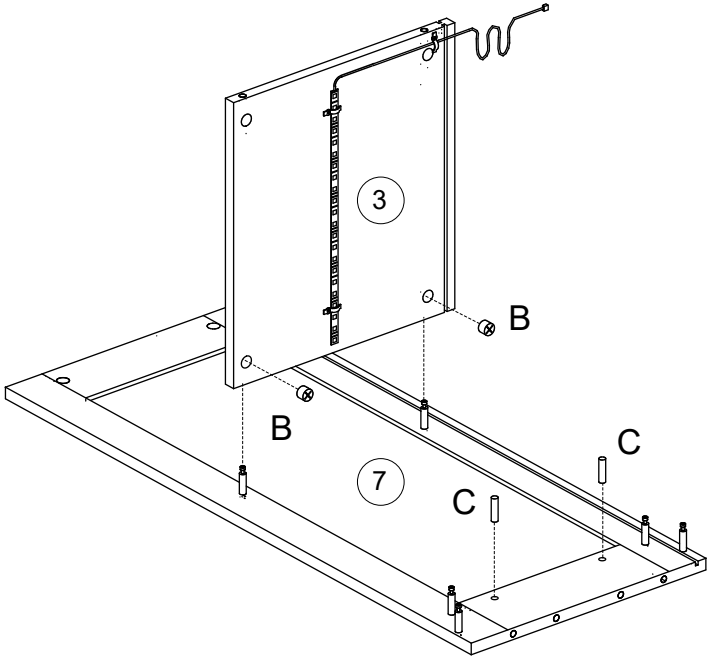




STEP 21

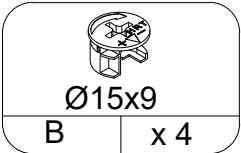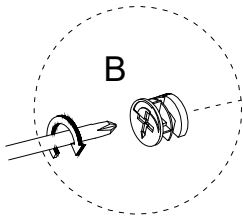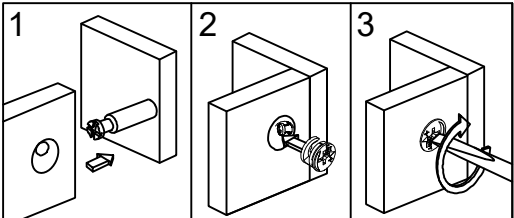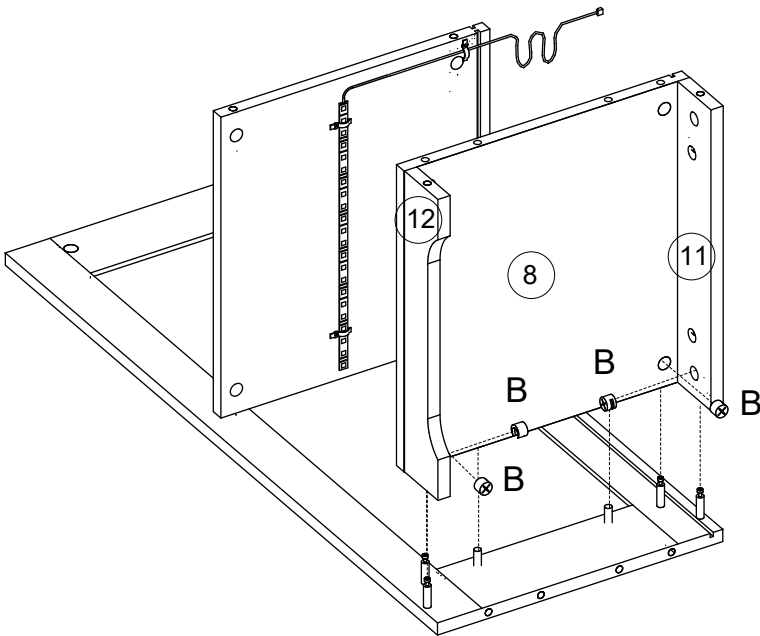




STEP 22



Pay attention to hole position. then let the wires pass through this hole.

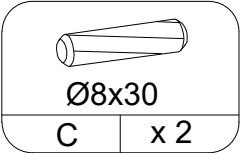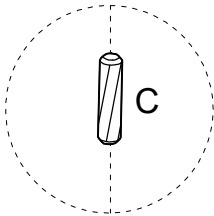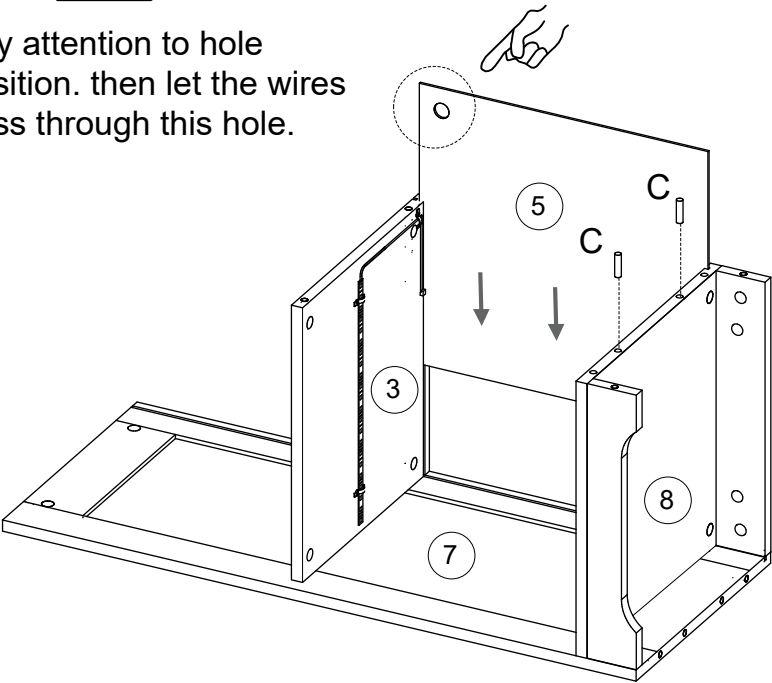


STEP 23

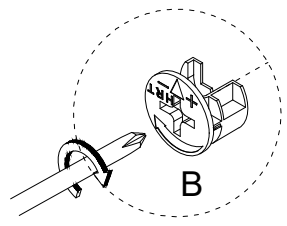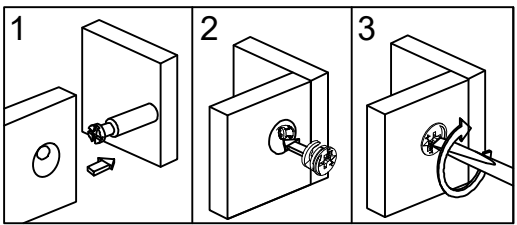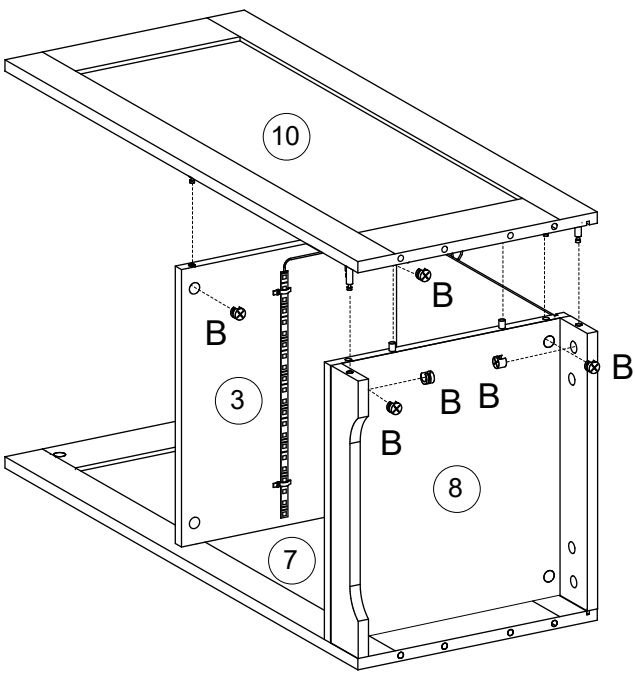




Ø15x9
B x 6

STEP 24

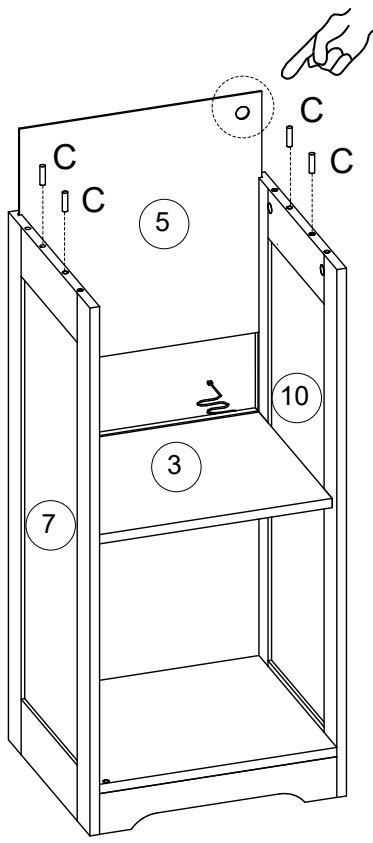

Pay attention to
hole position .




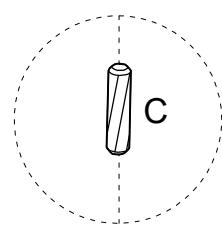



Ø8x30
C x 4




STEP 25



For this step, you need one helper.

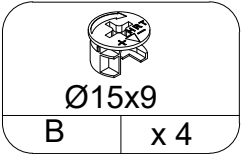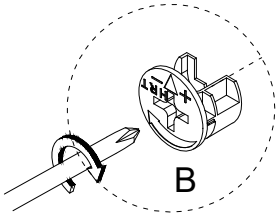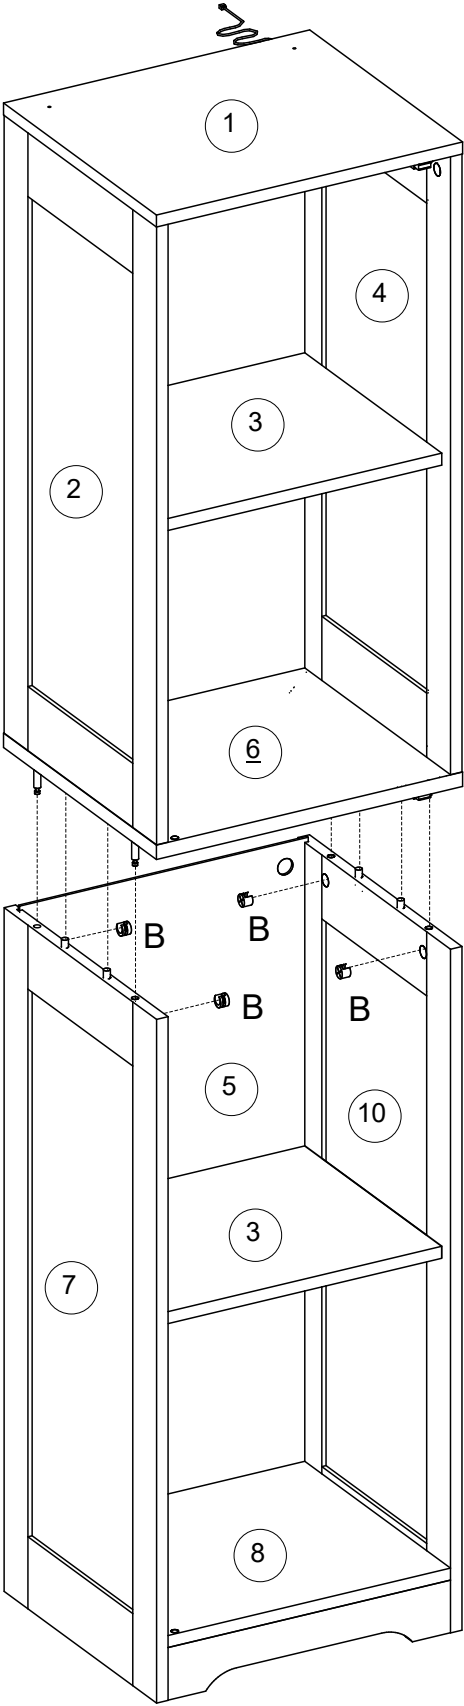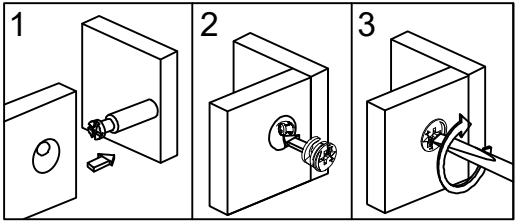




STEP 26

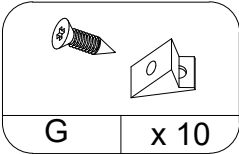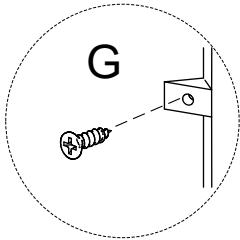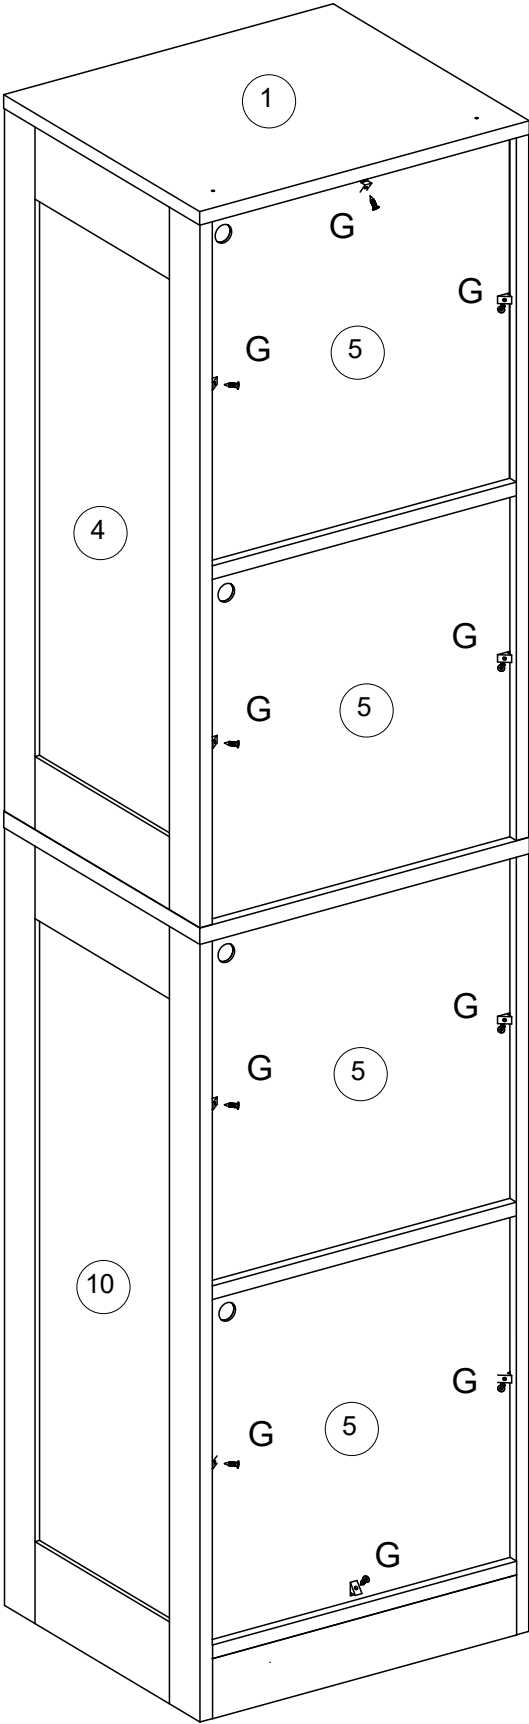


STEP 27






First, perform steps 1 to 3, then install tempered glass, and finally perform steps 4 to 5.

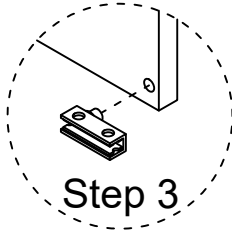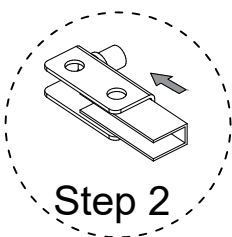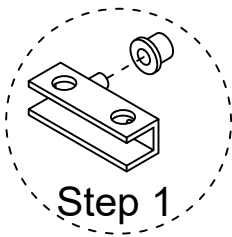


Please wear gloves while operating

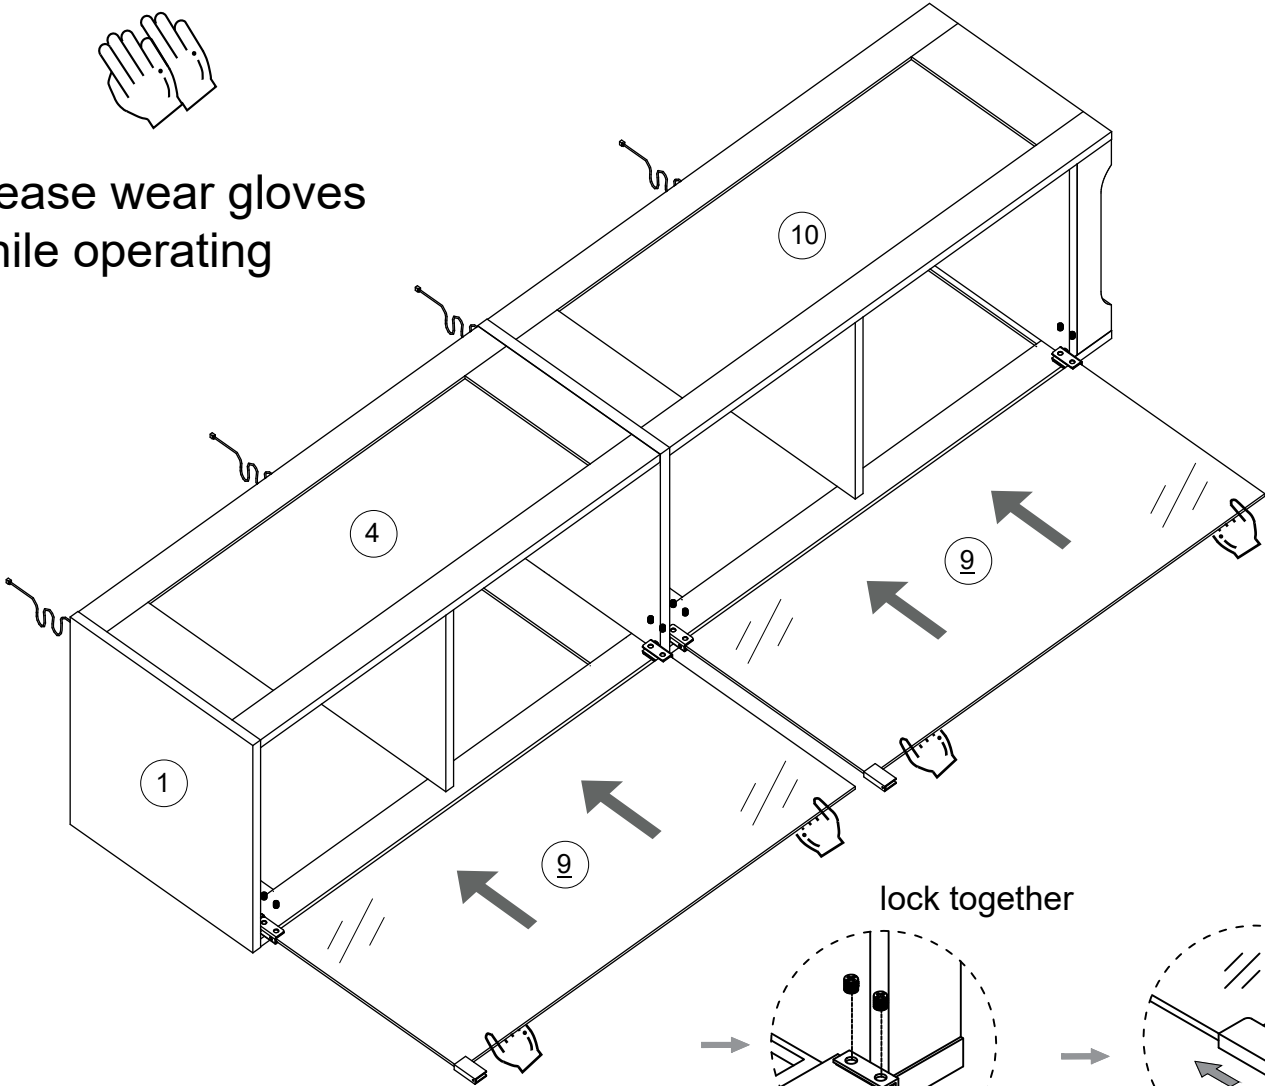

The glass is recessed by about 1-2mm

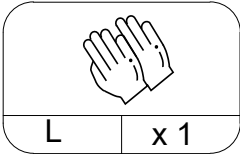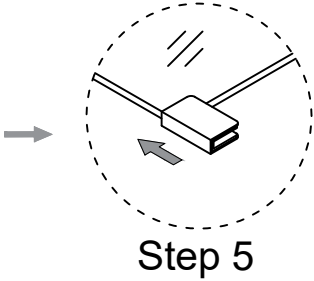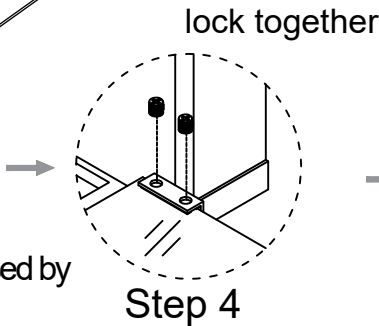


L x 1

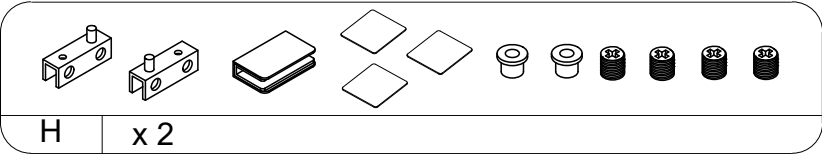



H x 2

STEP 28

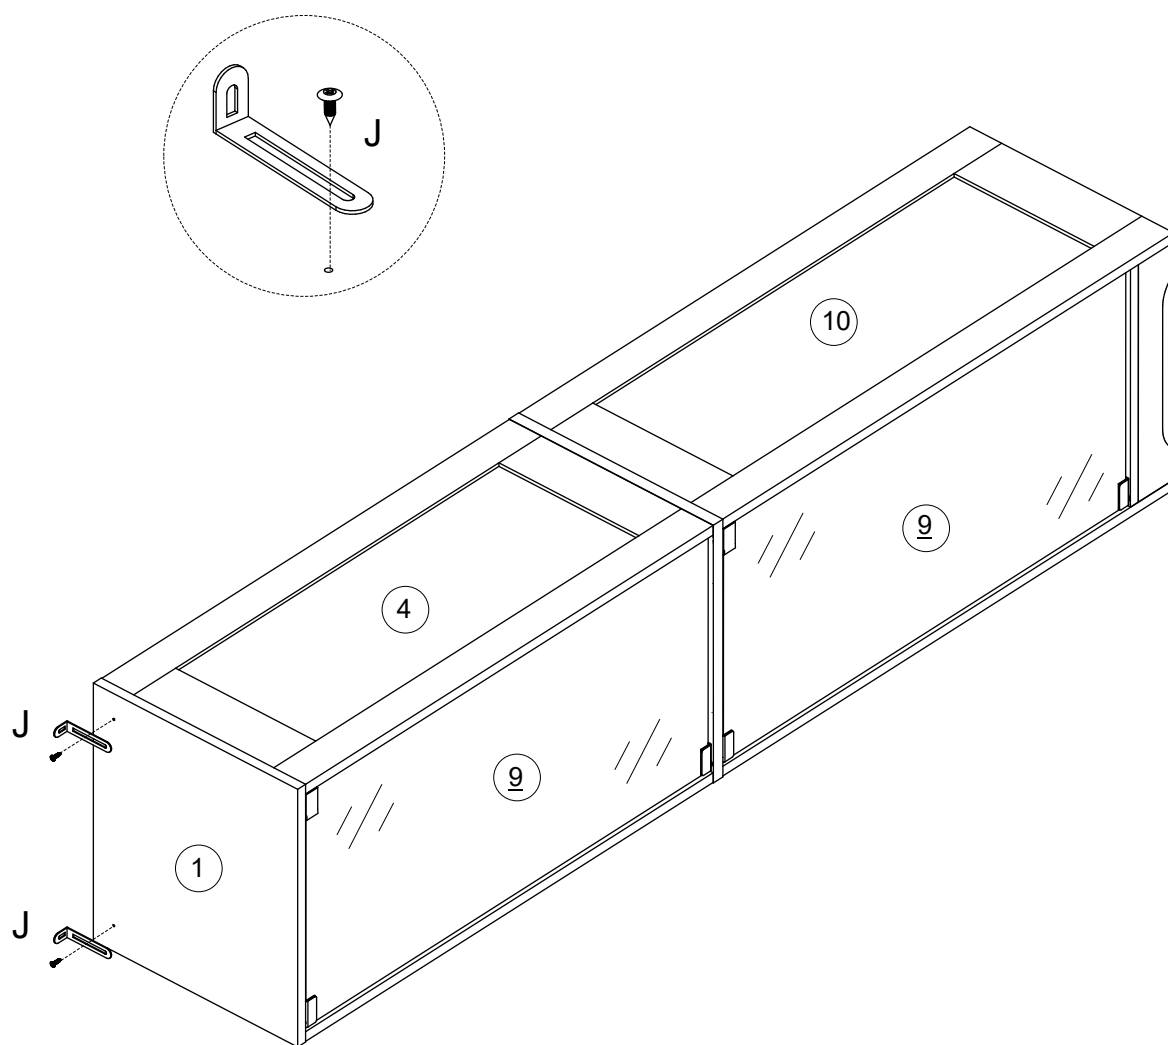


	
J	x 2

STEP 29

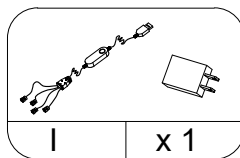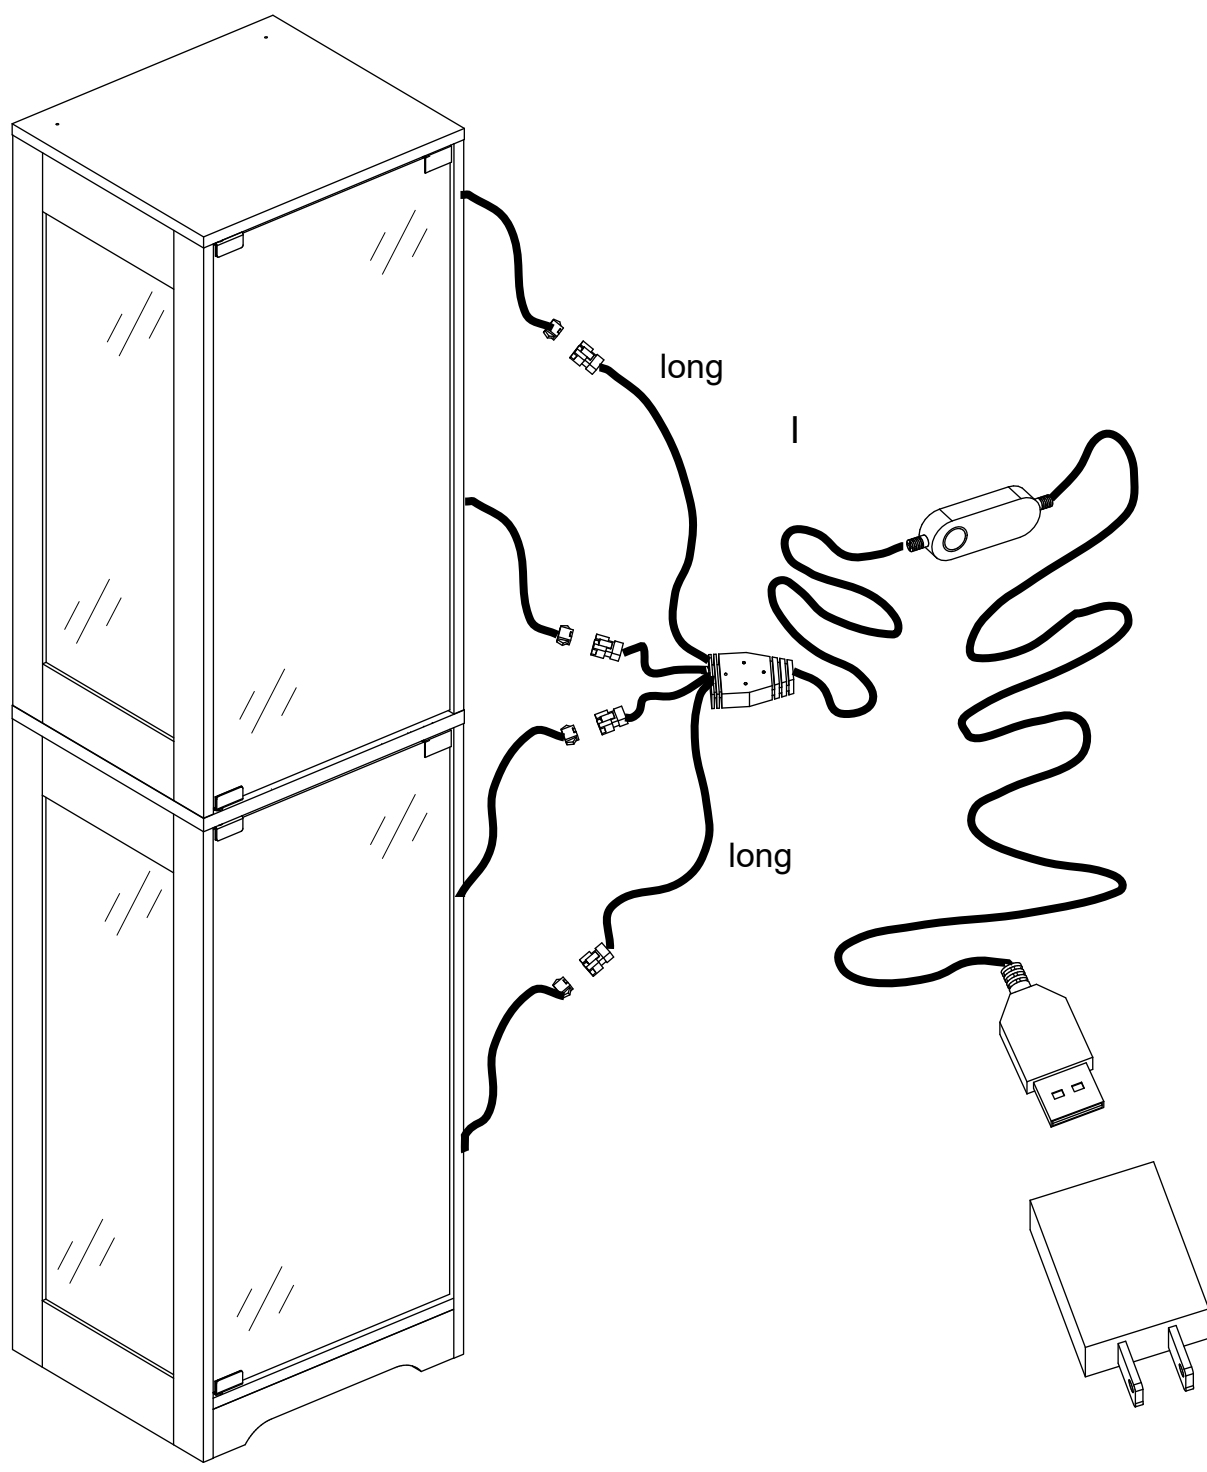

STEP 30

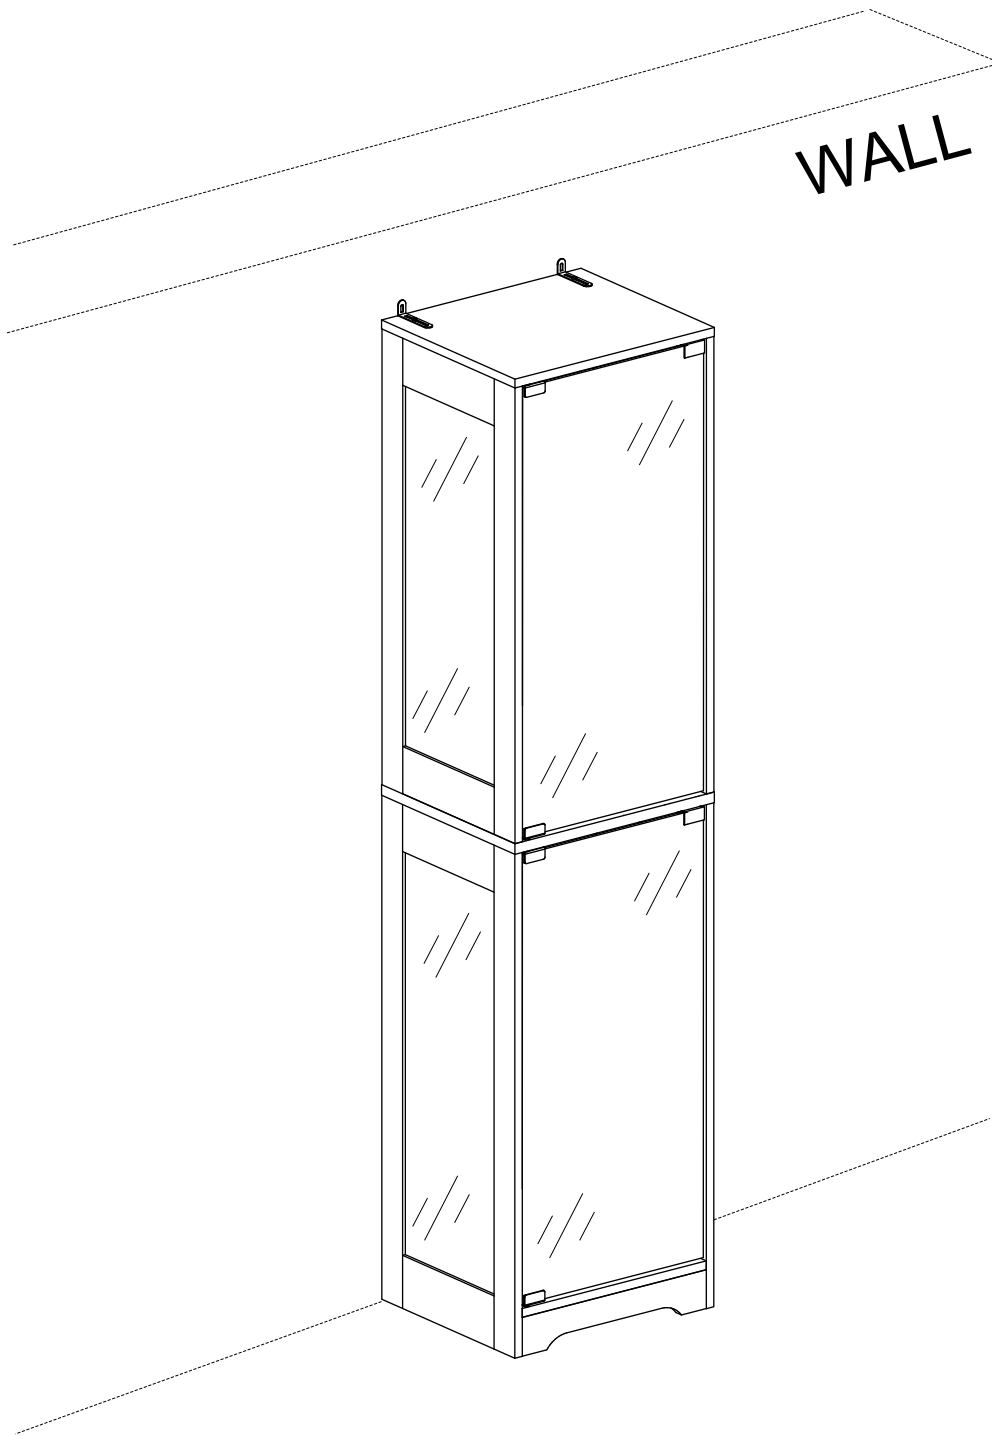

WALL

I Mark the hole drilling location



WALL

II Drill a hole

WALL

J


Use a hammer to close anchor

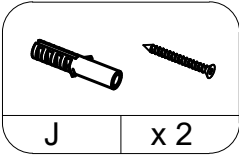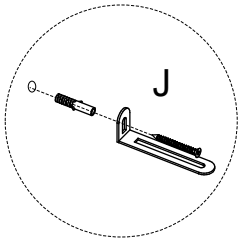

STEP 31

LED light

You need to install the battery before using the remote control
Please purchase the appropriate battery model yourself.
Battery model:CR2025

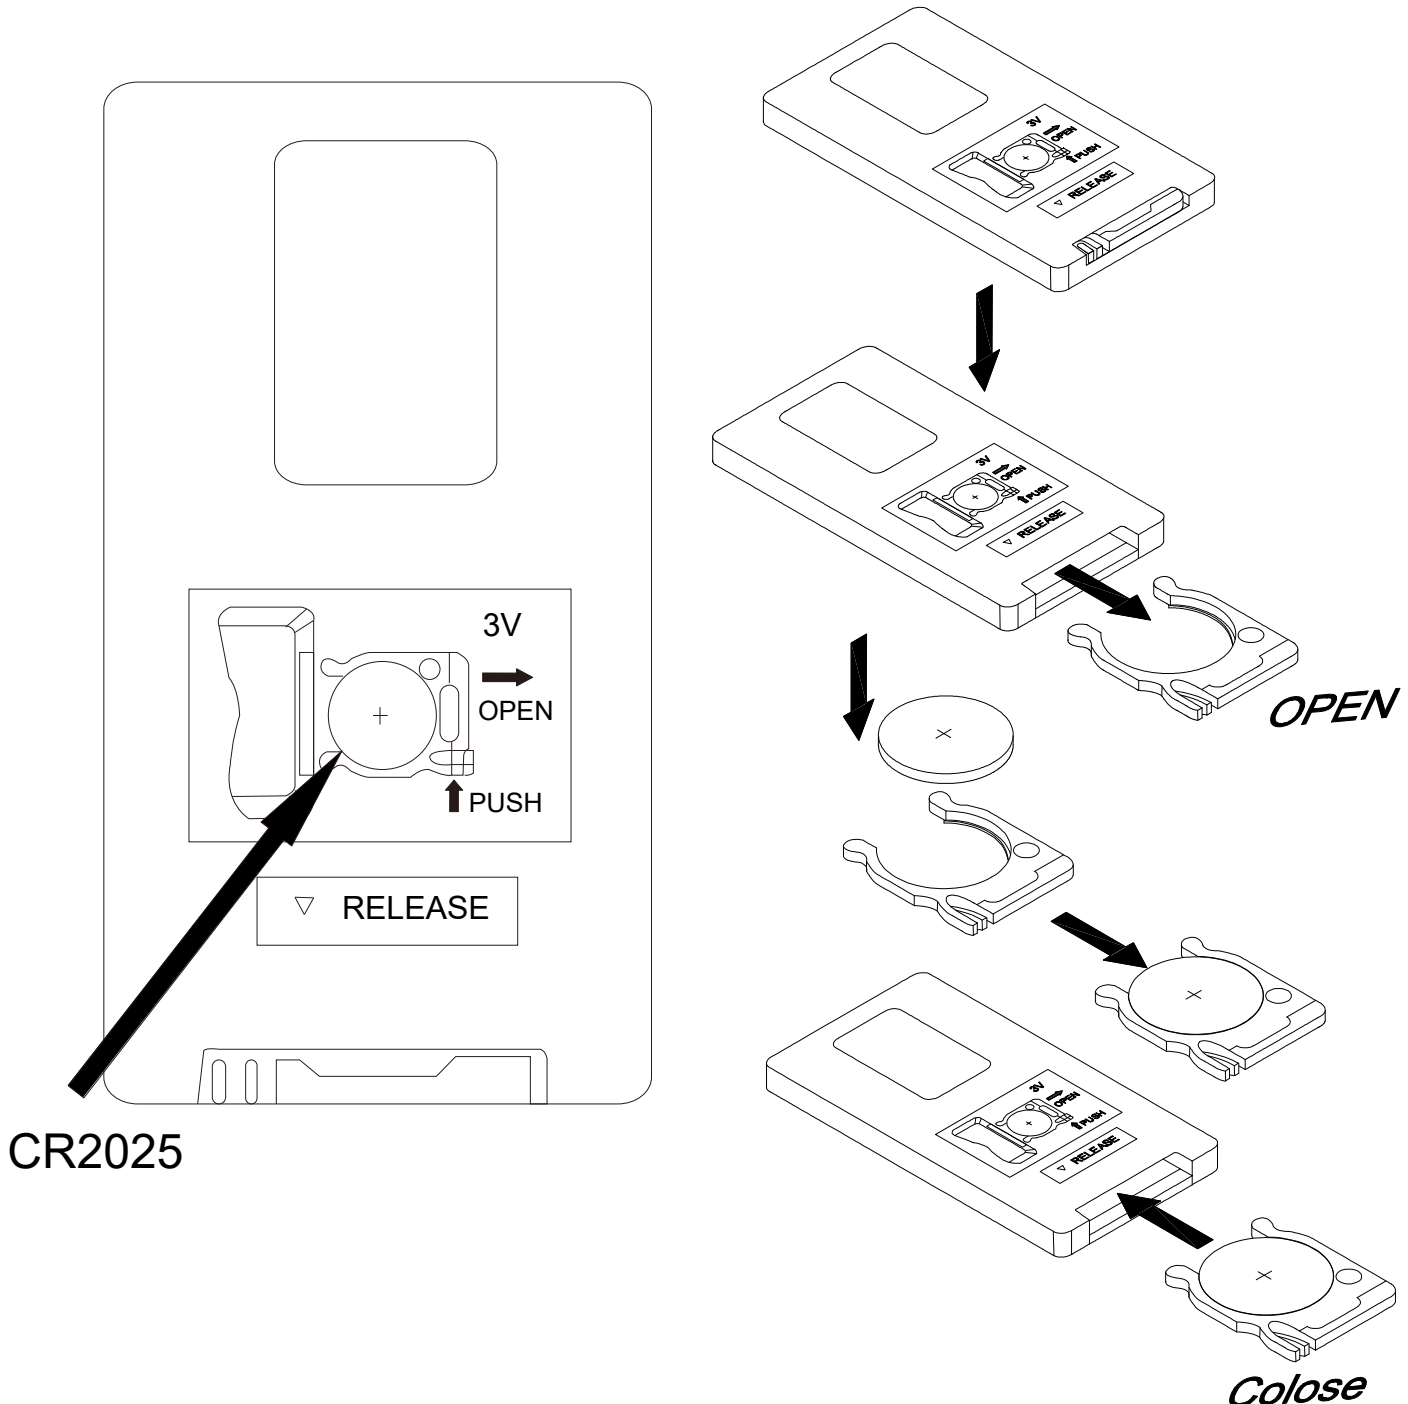

If the lights are not working properly, please check the following:

1. Please check the remote control sensor cover,
2. Don't use the remote too far from the receiver, may sure you have a clear line of sight.

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning