

KINCAID

—SOLID WOOD SINCE 1946—

www.kincaidfurniture.com


phone :828-728-3261.

ASSEMBLY INSTRUCTION

161-250 Witham Bureau

IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children

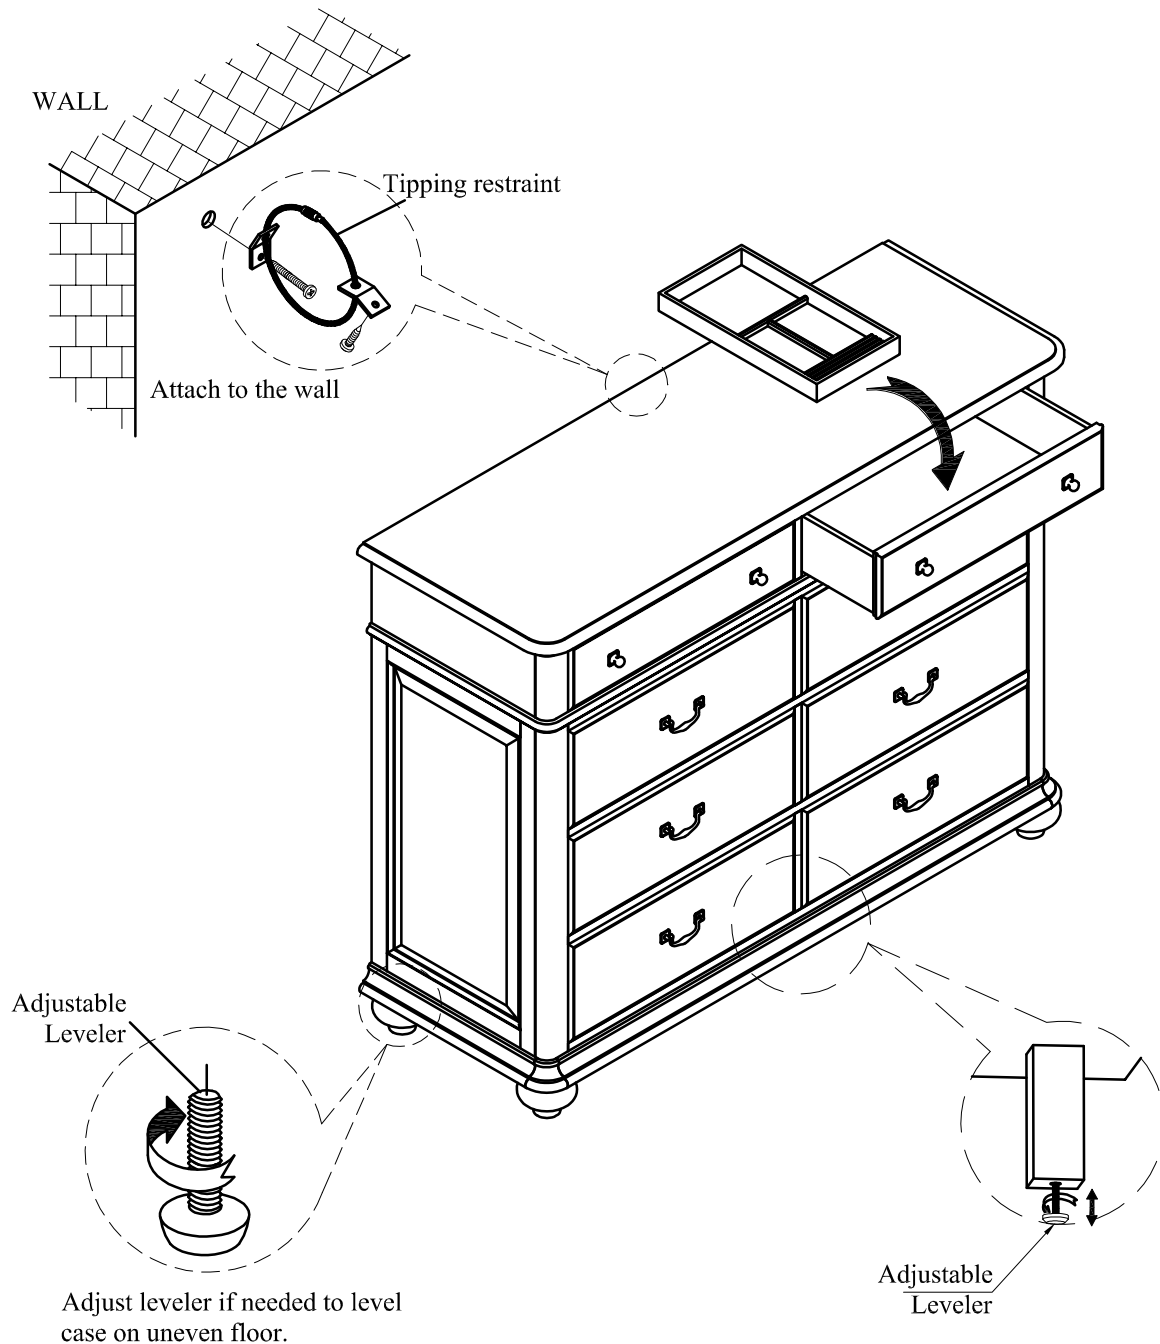

Adjust leveler if needed to level case on uneven floor.

MADE IN VIETNAM