



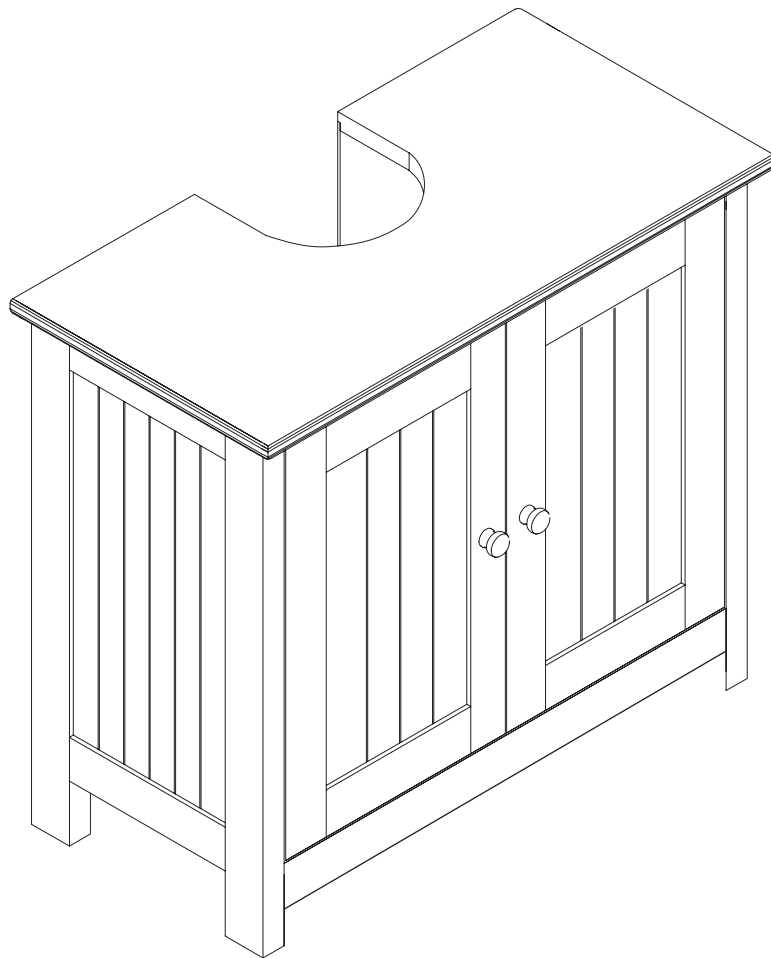

UNDER SINK BATHROOM CABINET

ASSEMBLY INSTRUCTIONS





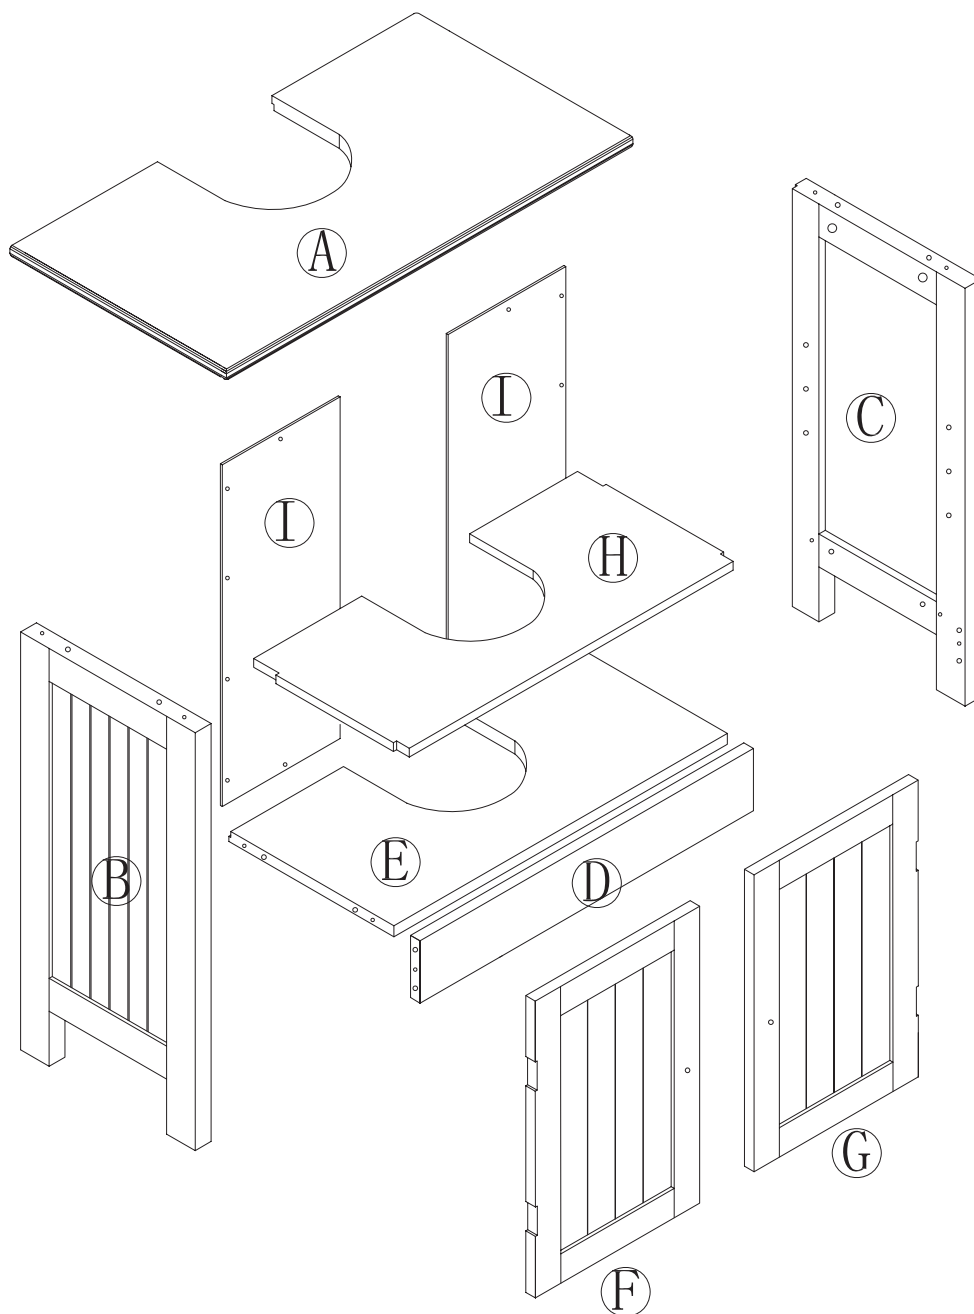





Hardware:

Letter	Draw	Number	Letter	Draw	Number
1		12pcs	7	 3x10mm	18pcs
2		10pcs	8		2pcs
3	 15x9.5mm	10pcs	9	 2.2x10mm	12pcs + extra 2pcs
4		2pcs	10		4pcs
5		2pcs	11	 2.5x12mm	2pcs
6		4pcs	12		1pc

Step 1

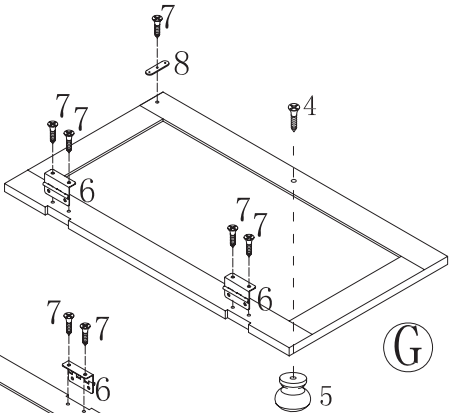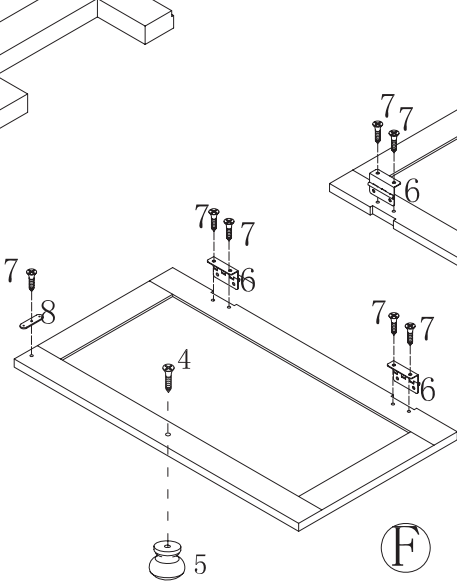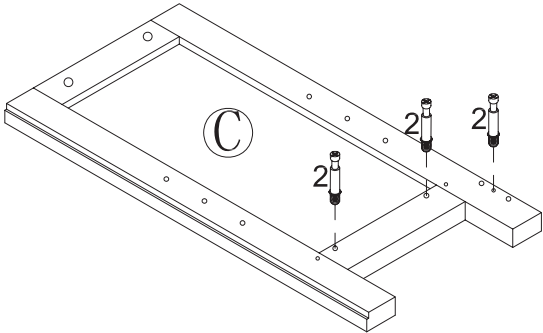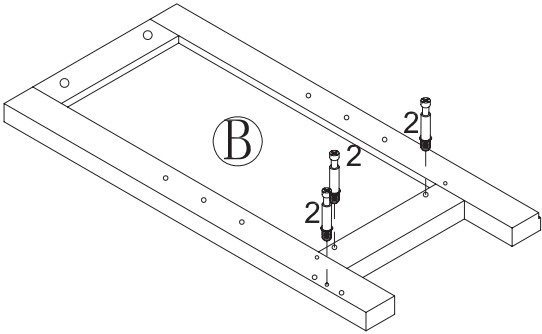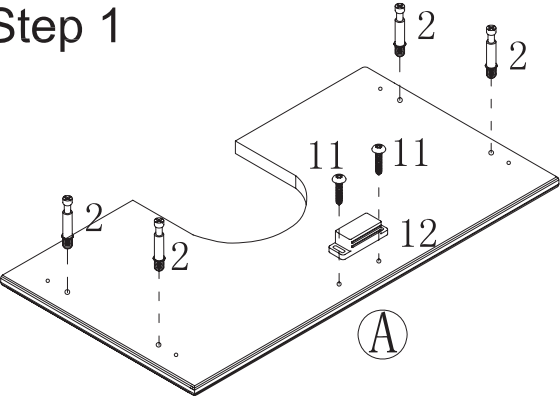


 (2)x10pcs	 (7)x10pcs
 (4)x2pcs	 (8)x2pcs
 (5)x2pcs	 (11)x2pcs
 (6)x4pcs	 (12)x1pc

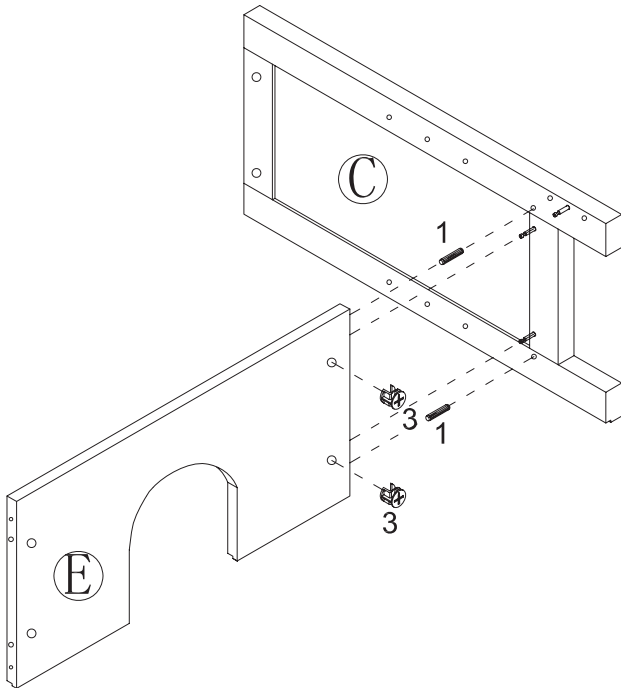

 (1)x2pcs
 (3)x2pcs

Step 2

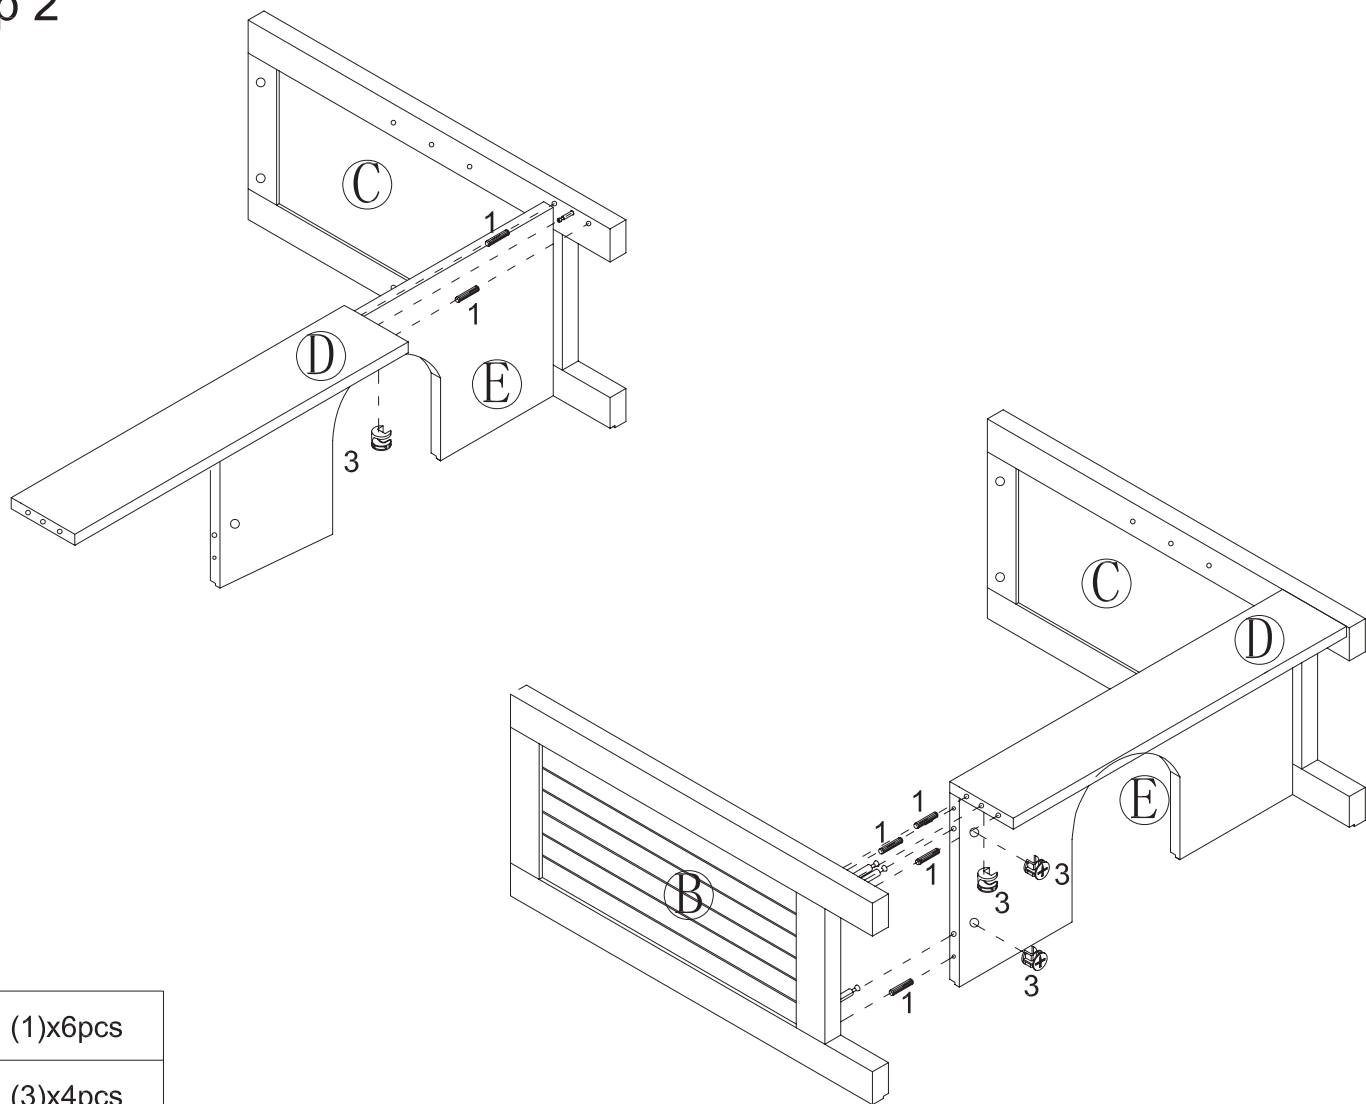


(1)x6pcs



(3)x4pcs

Step 3

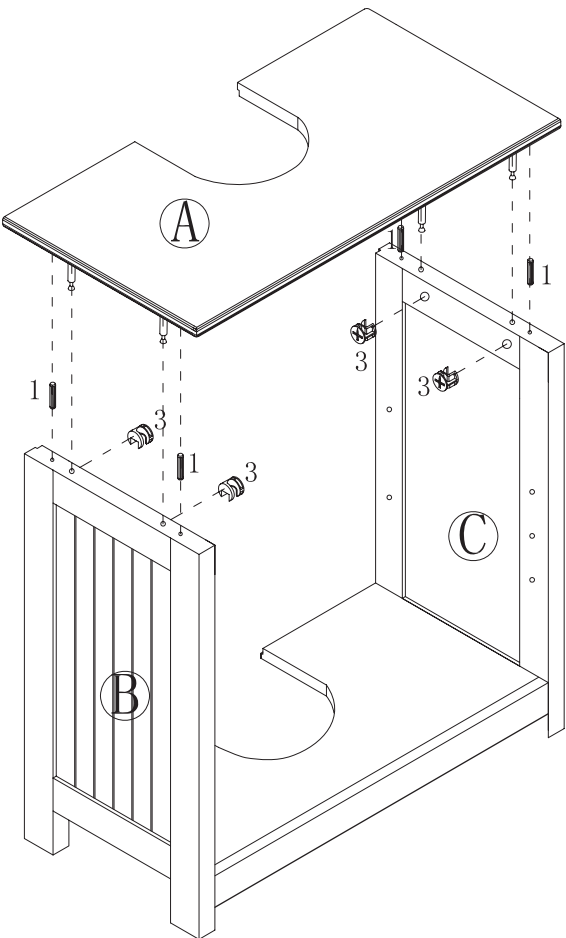


(1)x4pcs




(3)x4pcs

Step 4

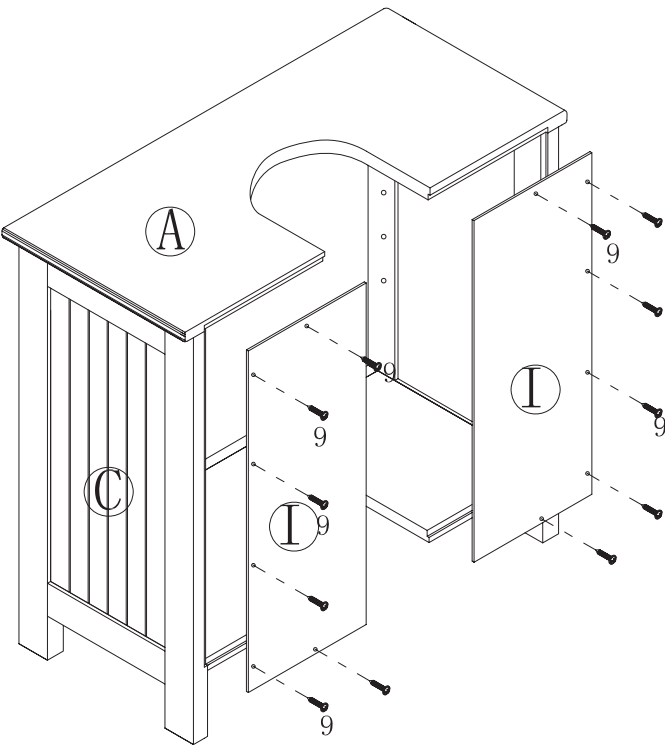

(9)x12pcs


Step 5

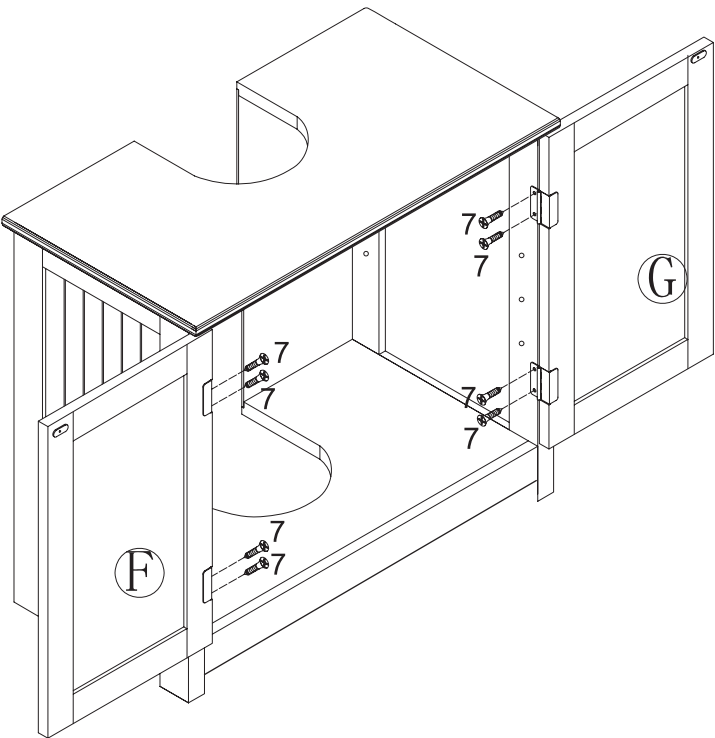

(7)x8pcs

Step 6

The back boards and shelf could be fixed if needed

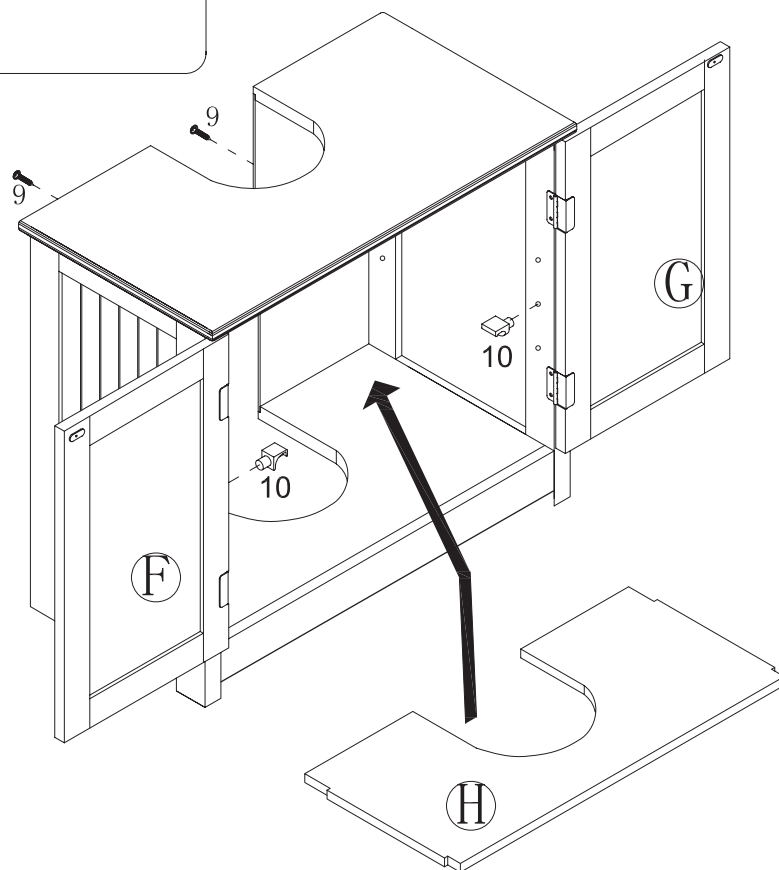

(10)x4pcs

Step 7

