## **ASSEMBLY INSTRUCTIONS**



## **Notice:**


- 1. Please unbox the item from the side with an open label and put a carpet on the floor to avoid scratching it.
- 2. Follow the installation instructions carefully. before installation, please ensure that all accessories are present. For large items, we advise you to install them with 2 or more people for faster and safer installation.
- 3. Do not fully tighten the screws during initial assembly. Fully tighten the screws only once all pieces are correctly assembled. Do not use power tools.
- 4. Do not stand, climb, or swing on the product.
- 5. If you encounter any problems during installation, please contact our customer service.



Recommended installers:2



Put a carpet on the floor before unpcking

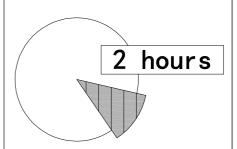

Estimate installation time: 2 hours

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		×1	2		×1
3		×2	4		×2
5		×1	6		×1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
7		×2	8	0	×2
9	0 0	×2	10		×1
11		×1	12		×1
13		×1	14		×1
15		×1	16		×1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
17		×9	18		×9
19		×9	20		×9
21		×9			

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		× 48+2	В	Ø15x11mm	×48+2
C	Ø30mm	× 48+2	D	Ø8×30mm	× 48+2
E	Ø5*50mm	×10+1	F		×27+2
G		×9	Н	<b>Ø4</b> ×10mm	×18+1
(CL)	Ø 00 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	×9	K (CR)	7000 00 00 00 00 00 00 00 00 00 00 00 00	×9
L (DL)	The state of the s	×9	M (DR)	P. T.	×9
N	<(₹) Ø3. 5x12mm	×108+2	P		×1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
Q		×2	R	(})	×2
S	€) Ø4x12mm	×2	Т		×2
U	145mmL	×18	V	Ø6×24mm	×36+2
W		×36+2	X	<i>∮###</i> Ø3×12mm	×72+2
Y	<(} Ø3×12mm	×20+1	Z		×9
AA		×1			

1

Tips: The number after "+" represents the spare hardware.

## **Explosion Diagram**

