

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



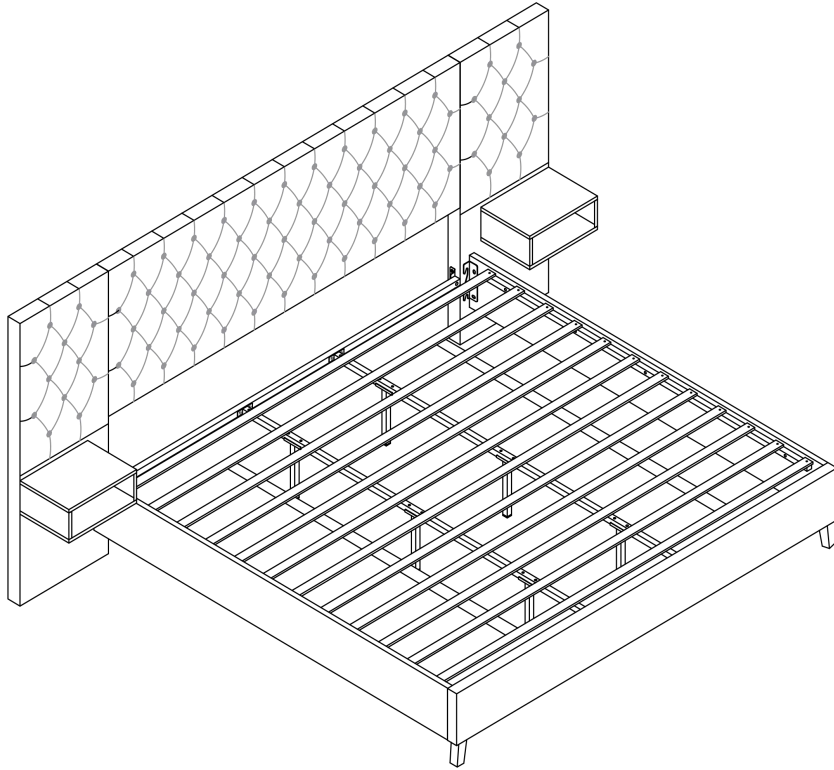
- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in the magic tape pouch for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.


BED








N757P210231











Part List

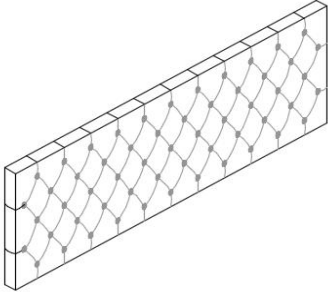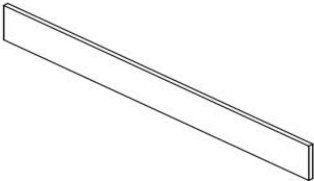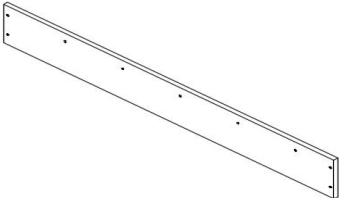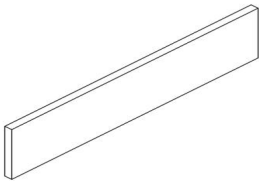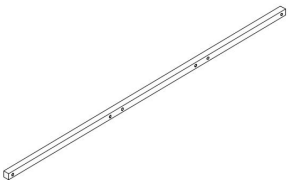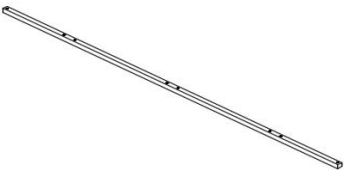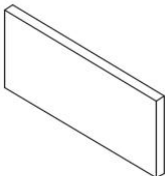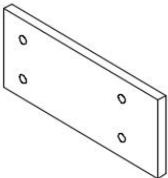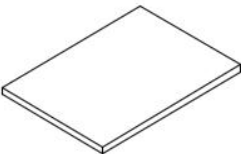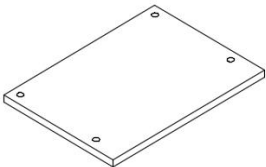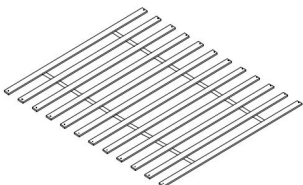N757P210231









Label	Picture	Description	QTY
A		Head board	1

B		Side head board	1
C		Side head board	1
D		Side rail	1
E		Side rail	1
F		Foot board	1
G		Bed legs	2
H		Side rails support bar	2

I		Head board cross bar	1
J		Center support bar	2
K		Middle support legs	6
L		Drawer side board	2
M		Drawer side board	2
N		Drawer top board	2
O		Drawer base board	2
P		Slats	1


Hardware

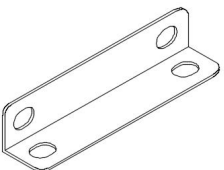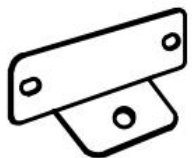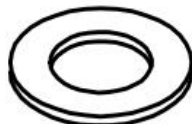N757P210231

Label	Picture	Description	QTY
①		Allen wrench	1
②		Bolts (M8x45mm)	32
③		Hinge	4
④		Bolts (M8x18mm)	80
⑤		7 Connector	12
⑥		Center support bar fittings	6
⑦		Nails (M4X30mm)	24
⑧		Washer	4

Assembly Preparation

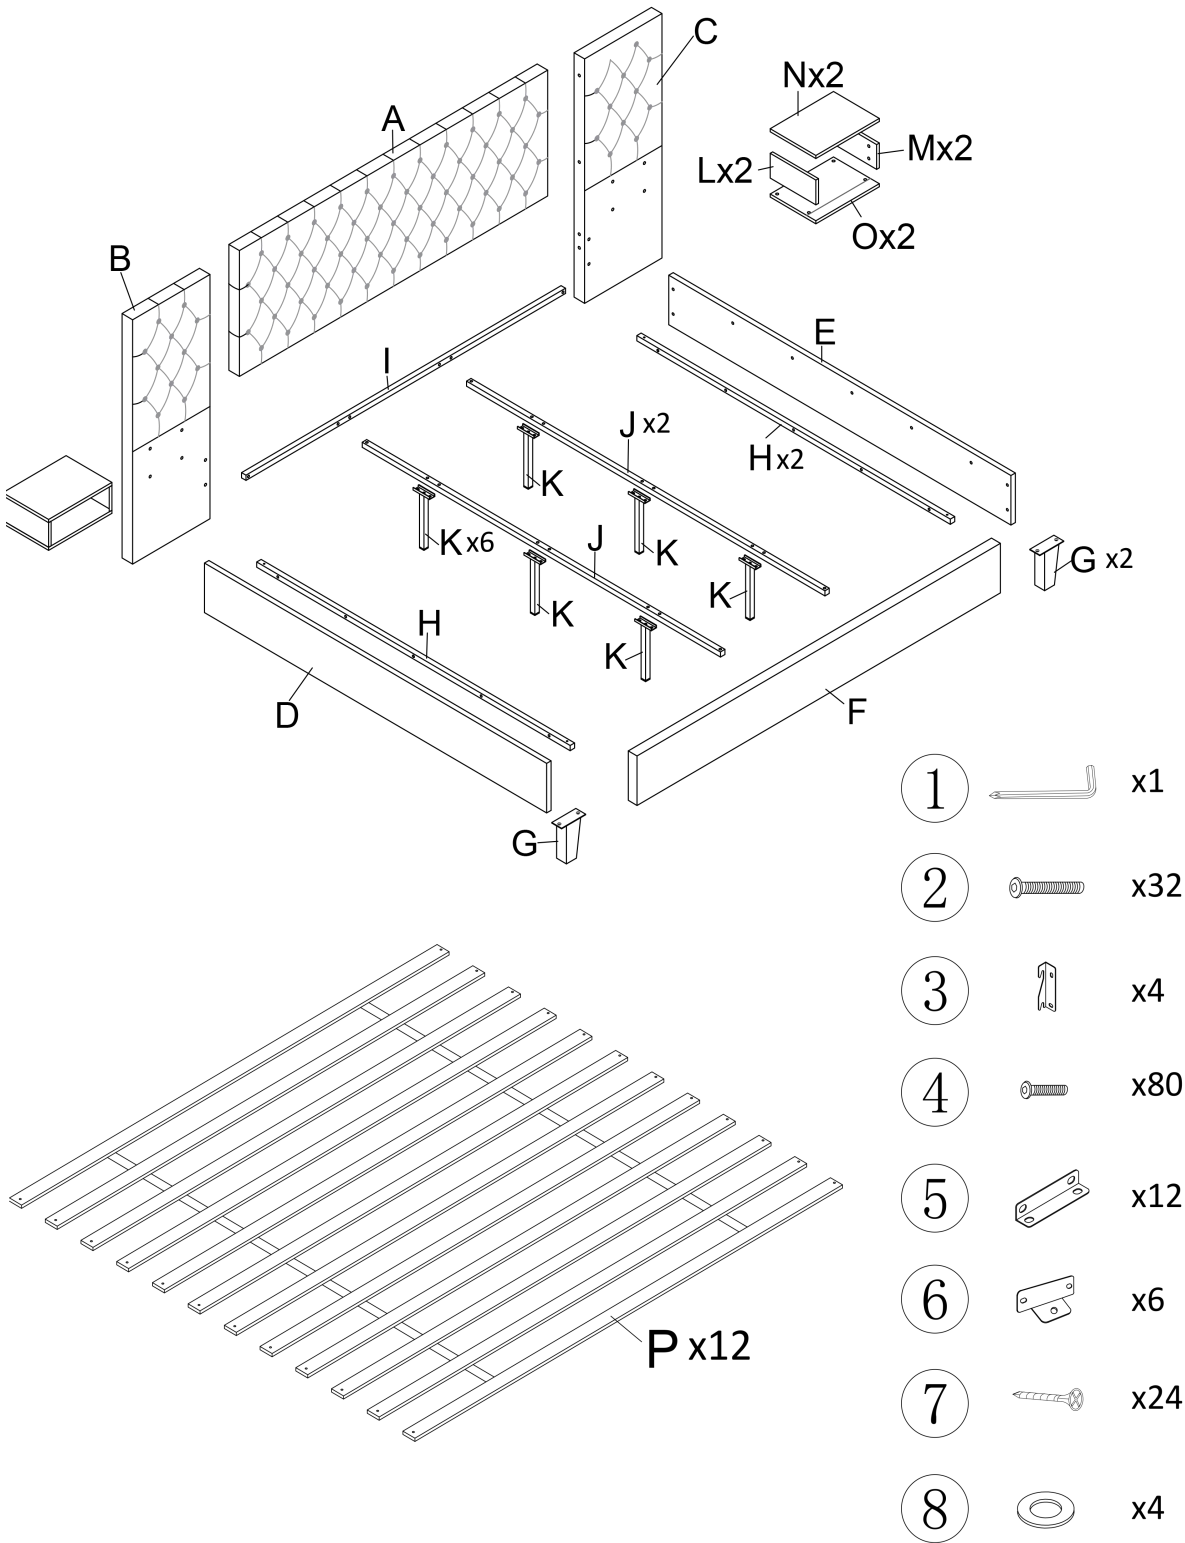Before Beginning Assembly:



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



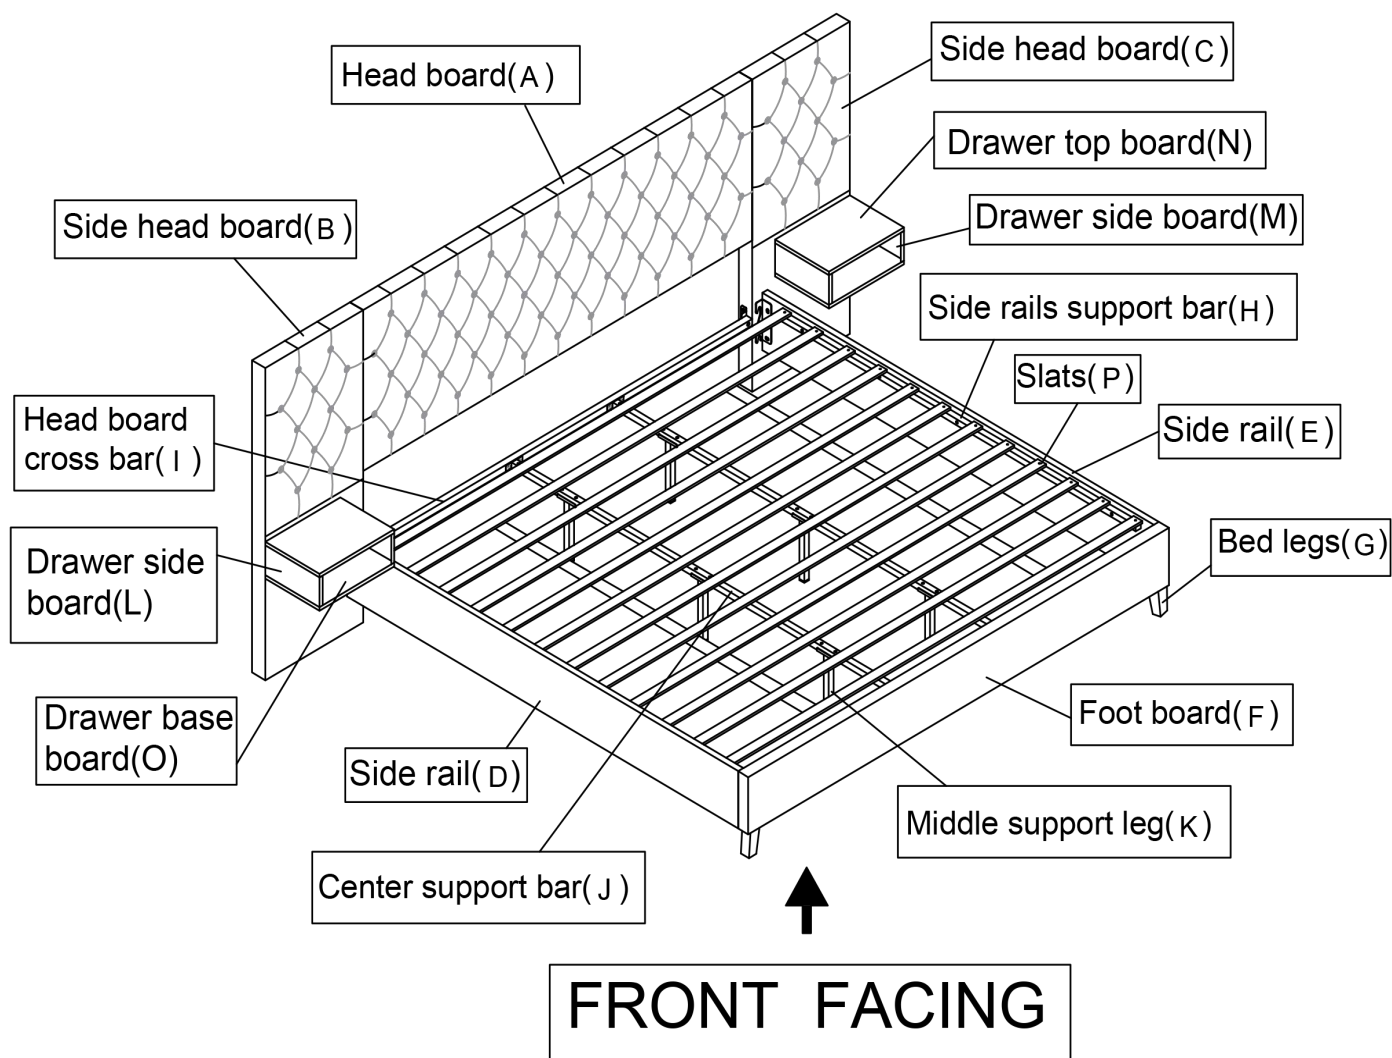
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


OVERVIEW






This Bed have multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

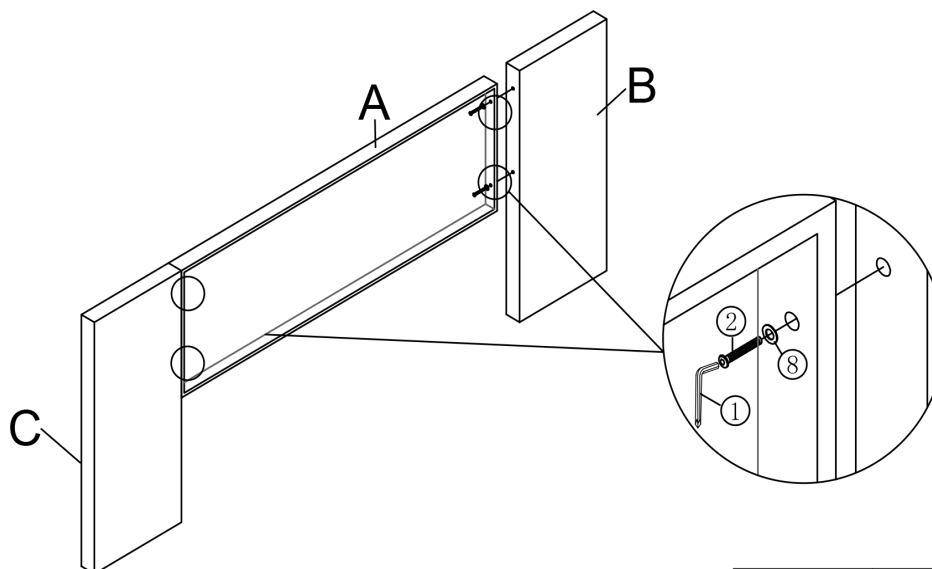Note: It is recommended that you have an adult partner to assist during the entire assembly process.


Step 1






① Allen Wrench 	② Bolts x 4  M8X45mm	⑧ Washer x 4 
---	---	---

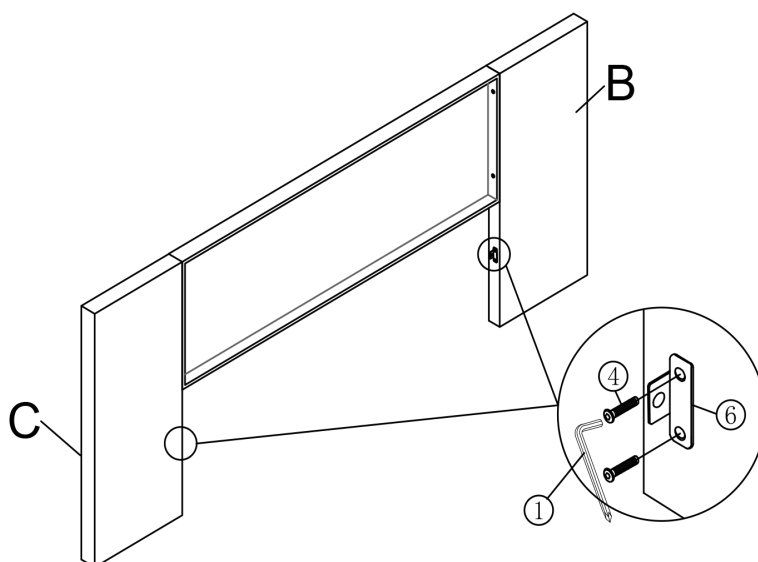Fix the Side headboard (C/B)to the Headboard (A) with Bolts(②)and washers(⑧) by using Allen wrench(①).


Step 2





① Allen Wrench 	④ Bolts x 4  M8X18mm	⑥ Center support bar fittings x2 
---	---	---

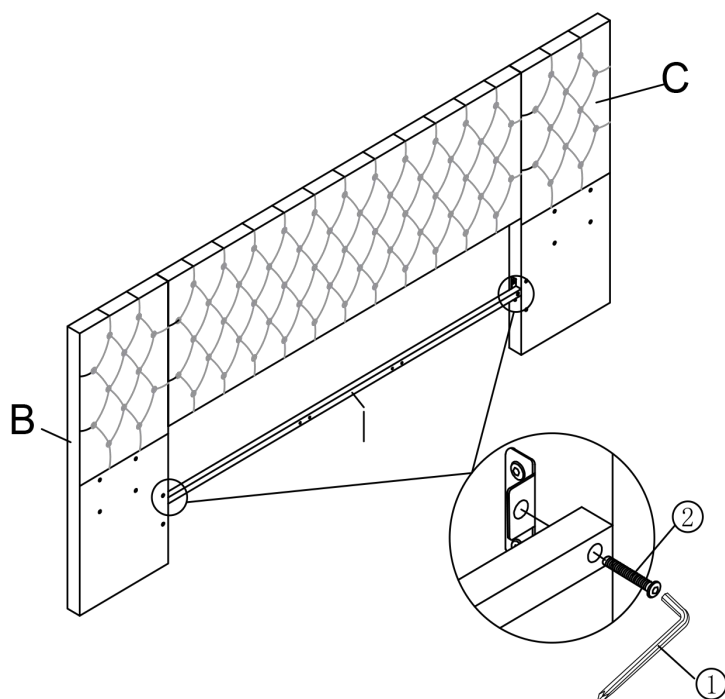Fix the Center support bar fittings(⑥) to the Side head board C and B with Bolts (④) by using Allen wrench (①) .


Step 3





① Allen Wrench	② Bolts x 2
	 M8X45mm

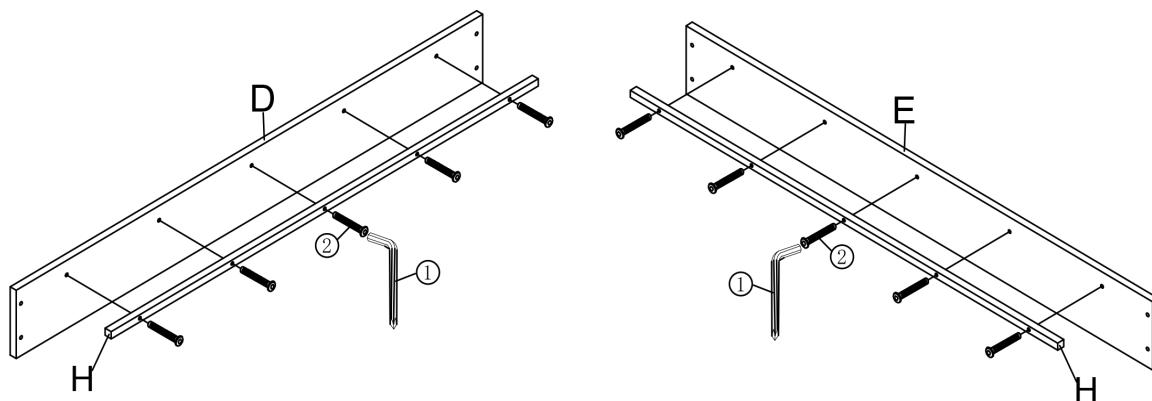Fix the Headboard cross bar (I) to the Side board (B) and (C) with Bolts(②) by using Allen wrench(①) .


Step 4



① Allen Wrench	② Bolts x 10
	 M8X45mm

Fix the Siderail support bar (H) to Siderails (D/E) with Bolt(②) by using Allen wrench(①) .

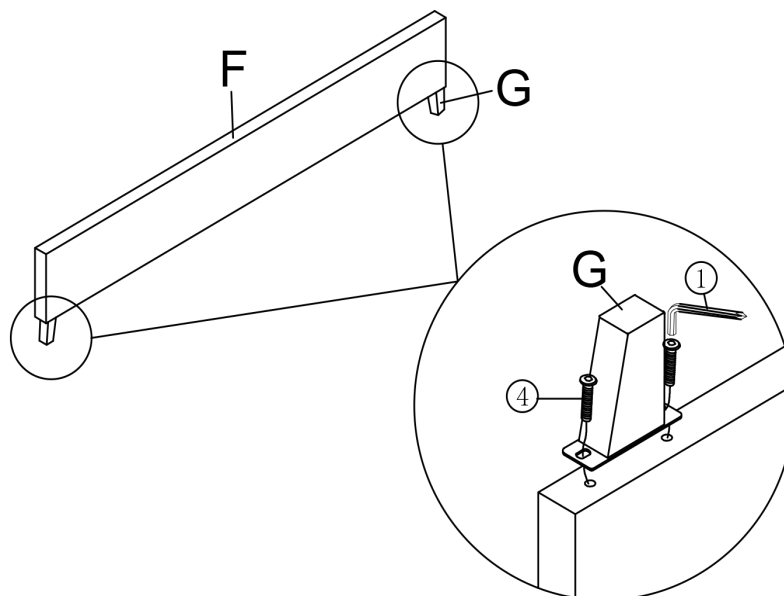
Step 5



① Allen Wrench	④ Bolts x 4
	 M8X18mm

Fix the legs (G) to the Footboard (F) with Bolts(④) by using Allen wrench(①) .

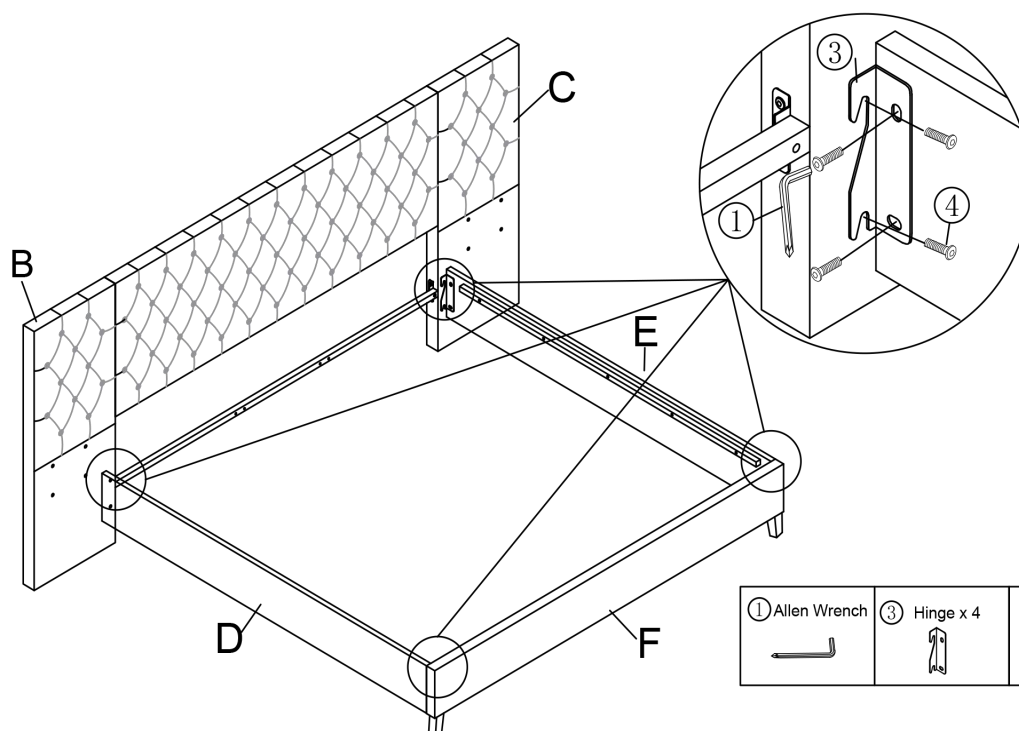
Step 6



① Allen Wrench	③ Hinge x 4	④ Bolts x 16
		 M8X18mm


Fix the side rails (D/E) to the Side headboard (B/C) and Footboard (F) with Bolts(④) and Hinges(③) by using Allen wrench(①) .

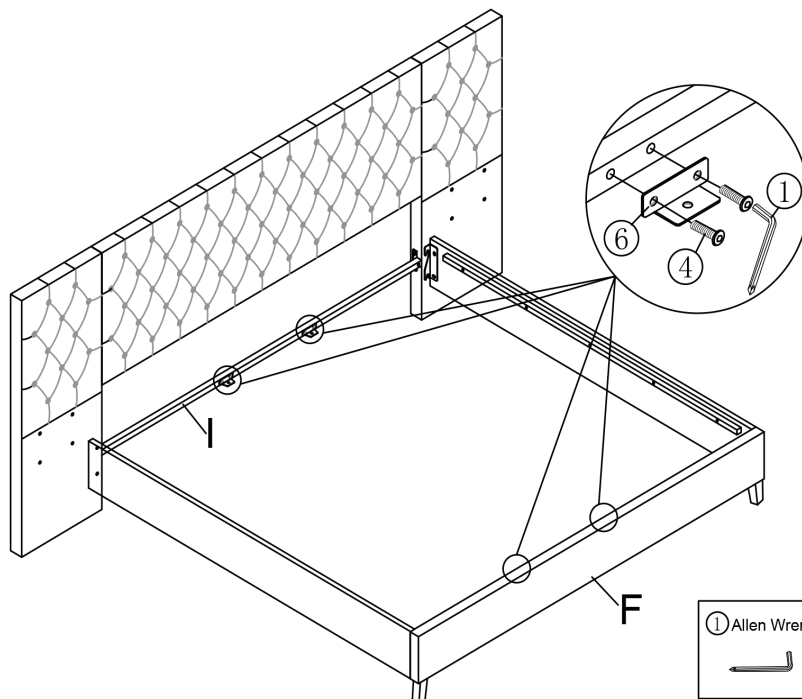Step 7




Fix the Center support bar fittings(⑥) to the Headboard cross bar (I) and Foot board (F)with Bolts(④) by using Allen wrench(①) .

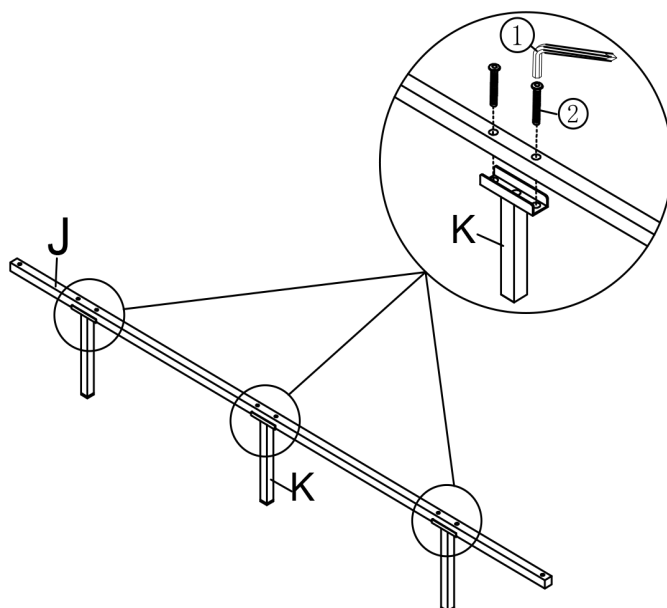Step 8 x2




Fix the middle support leg (K) to the center support bar (J) with Bolts(②) by using Allen wrench(①) .

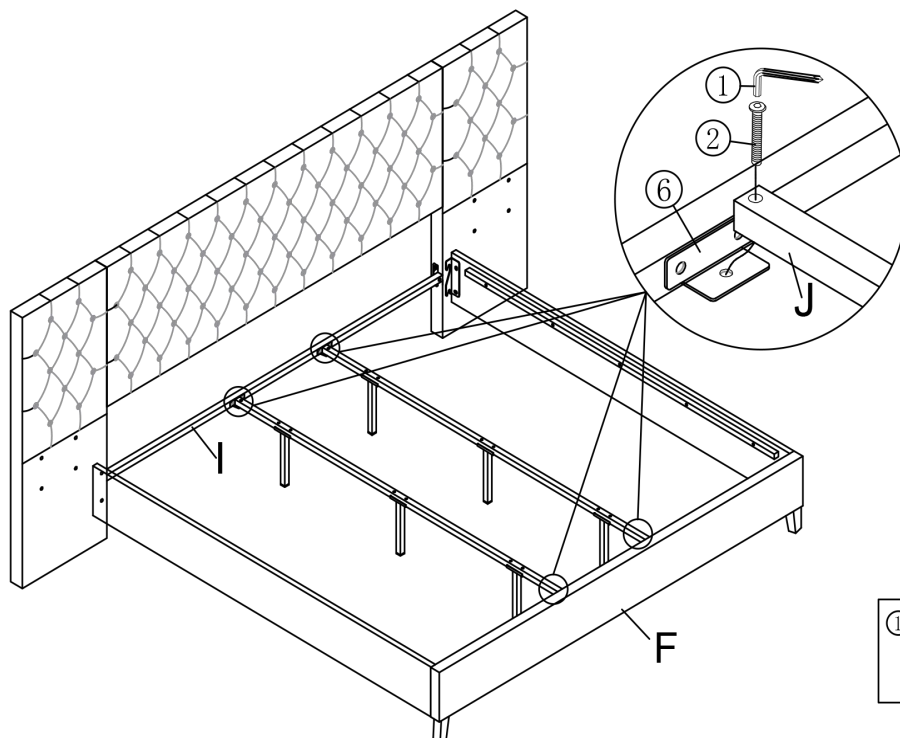Step 9



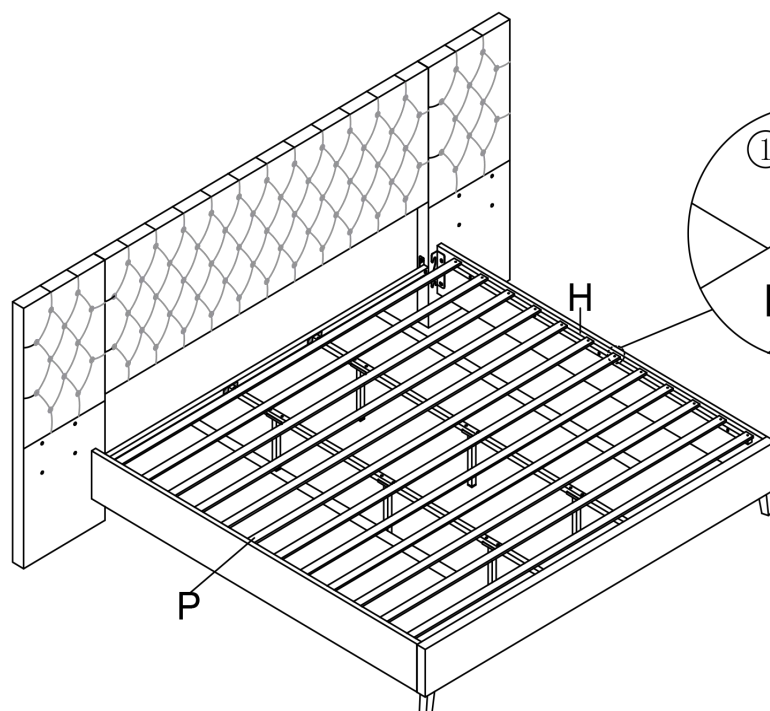
Fix the Center support bar (J) to the Headboard cross bar (I) and Foot board (F) with Bolts (②) by using Allen wrench (①).




Step 10



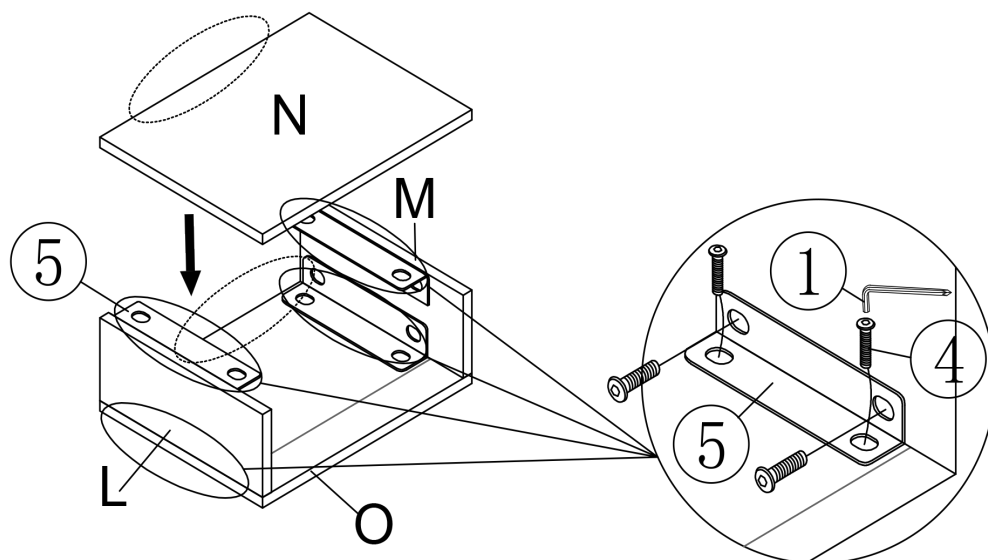Fix the Slats (P) to the side support bar (H) with Nails (⑦) by using Allen wrench (①) or Electric drill.


Step 11 x2





Allen Wrench 	④ Bolts x 40  M8X18mm	⑤ "7" Connector x12 
---	--	--

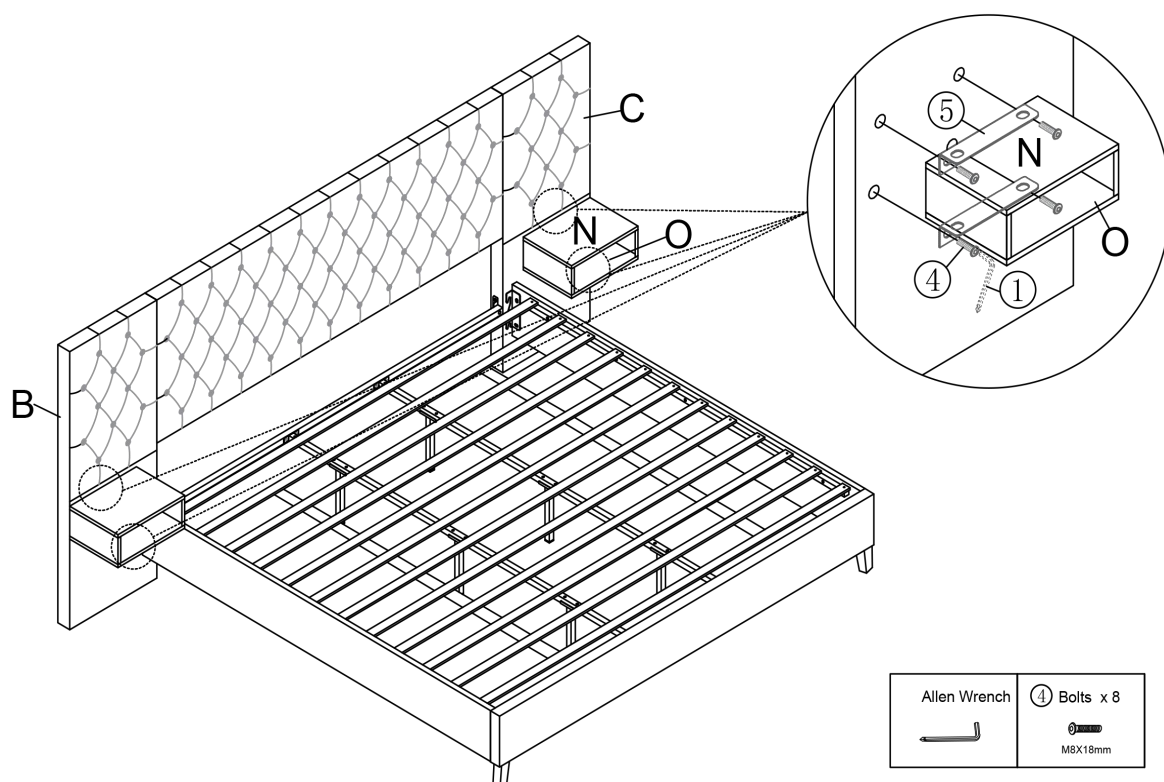Fix the Drawer side board (L/M) ,Drawer top board N and Drawer base board O together with "7" connector(⑤) and Bolts (④) by using Allen wrench(①).


Step 12



Allen Wrench 	④ Bolts x 8  M8X18mm
---	---

Fix the Drawer to the Side headboard(B/C) with Bolts (④) by using Allen wrench(①).

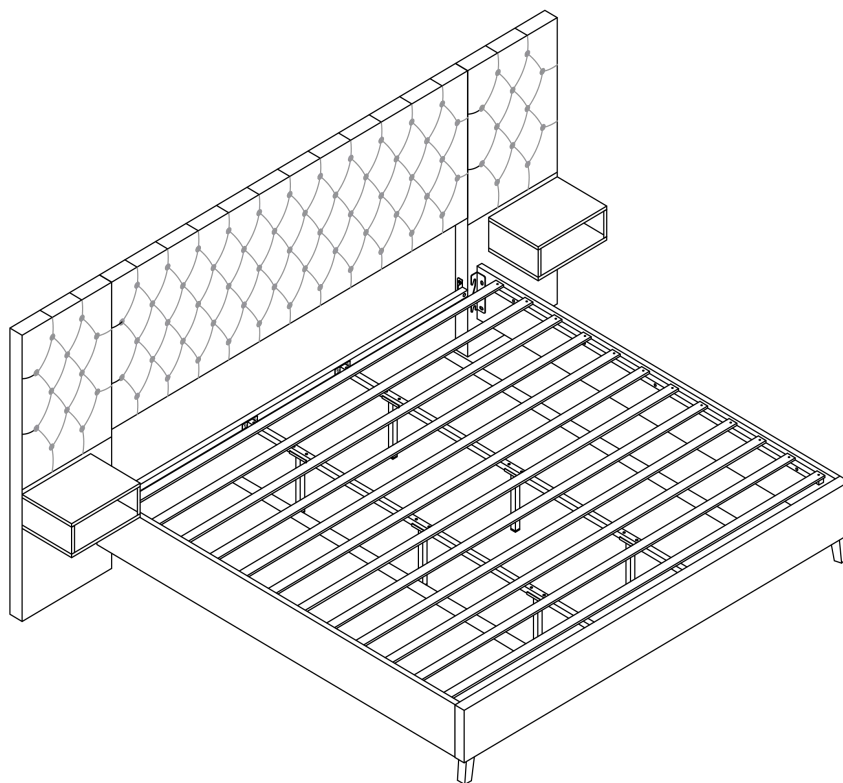Step 13



Your Bed is ready for use.
This Bed can only be used on a flat, level surface.