

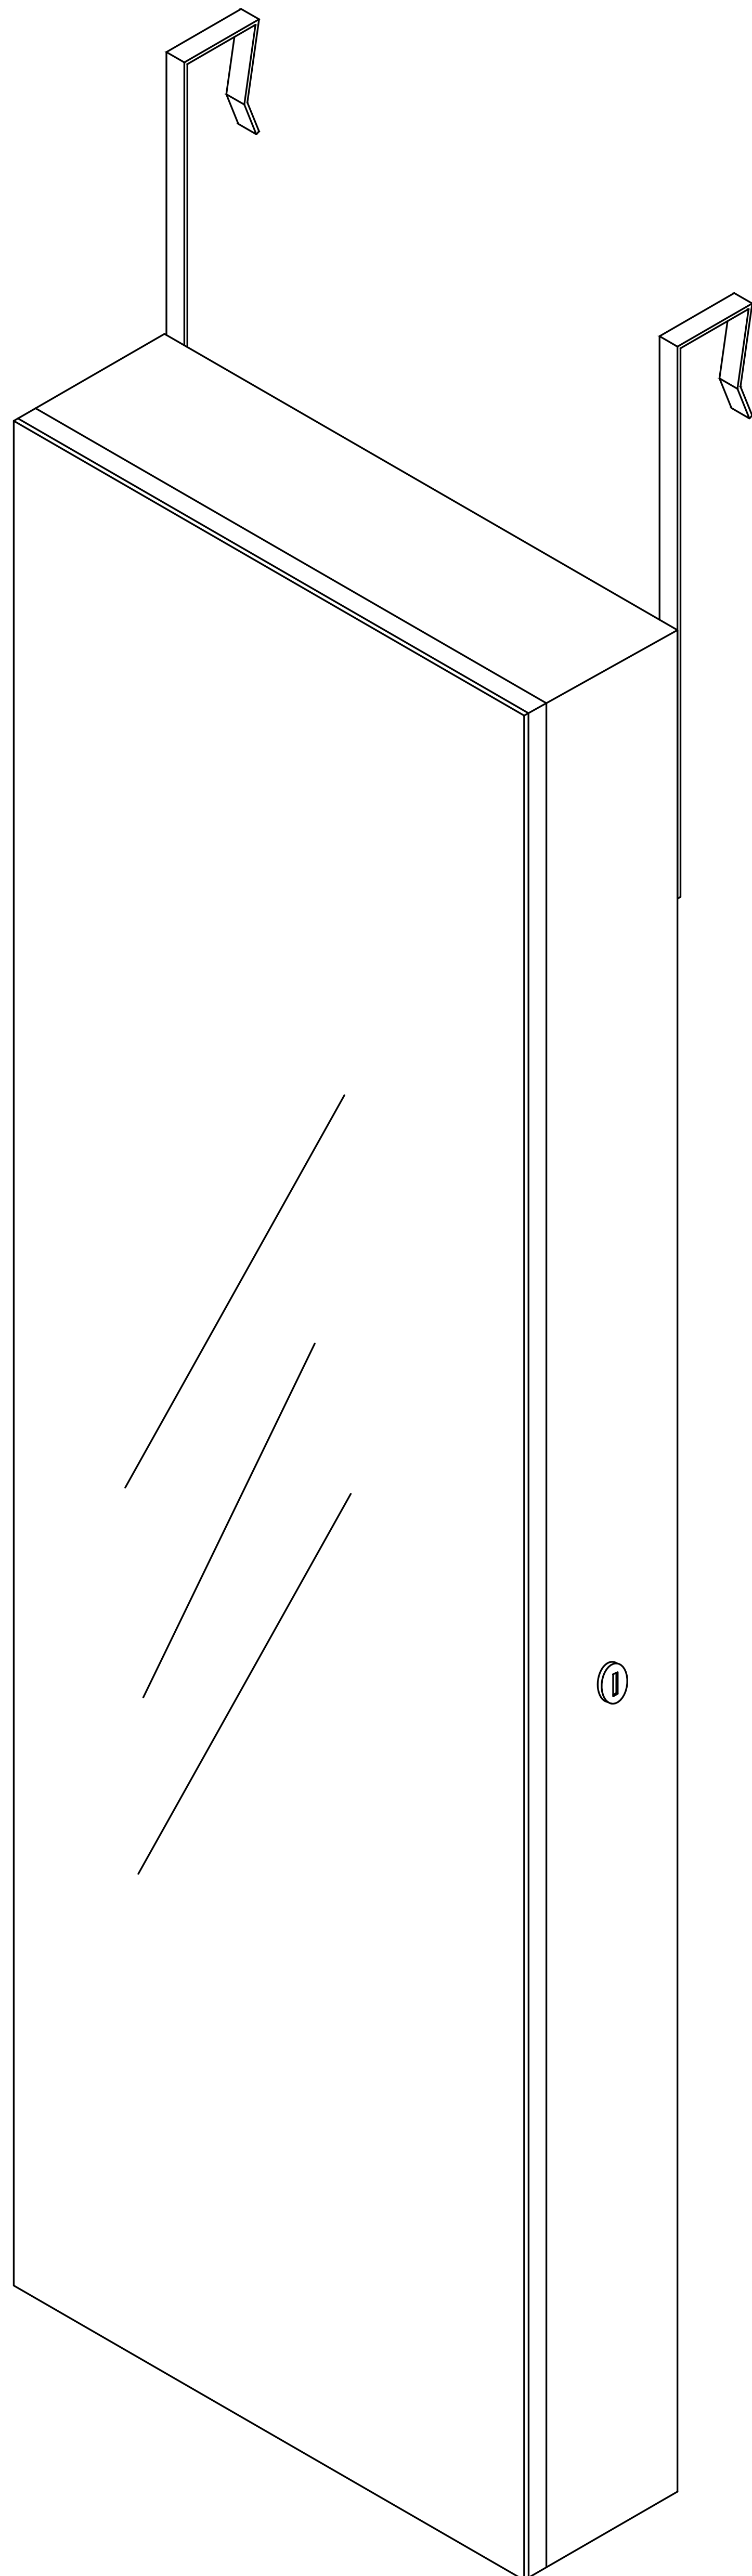
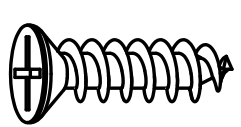
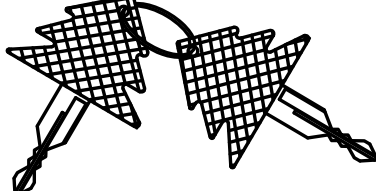
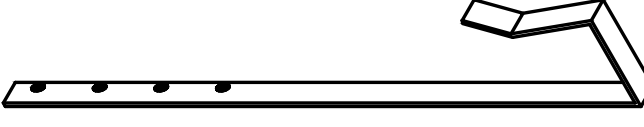
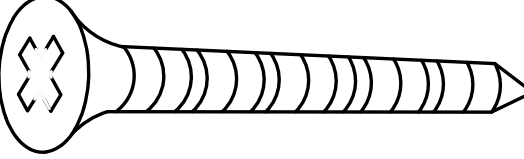
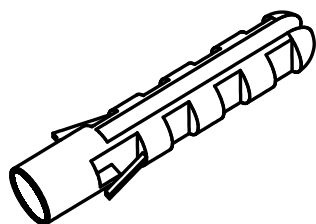
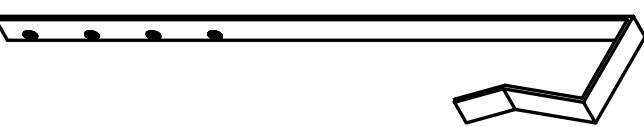


MIRROR JEWELLERY CABINET



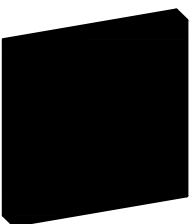



A		Self tapping screw(3x16mm)	8 Pcs
B		The key	1 Pcs
C		Hook	1 Pcs
D		Self tapping wire(4x45mm)	2 Pcs
E		Colloidal granules	2 Pcs
F		Hook	1 Pcs
G		Adhesive Velcro	2 Pcs


Battery installation
(Tip: use 3 AAA Batteries)
need to bring your own

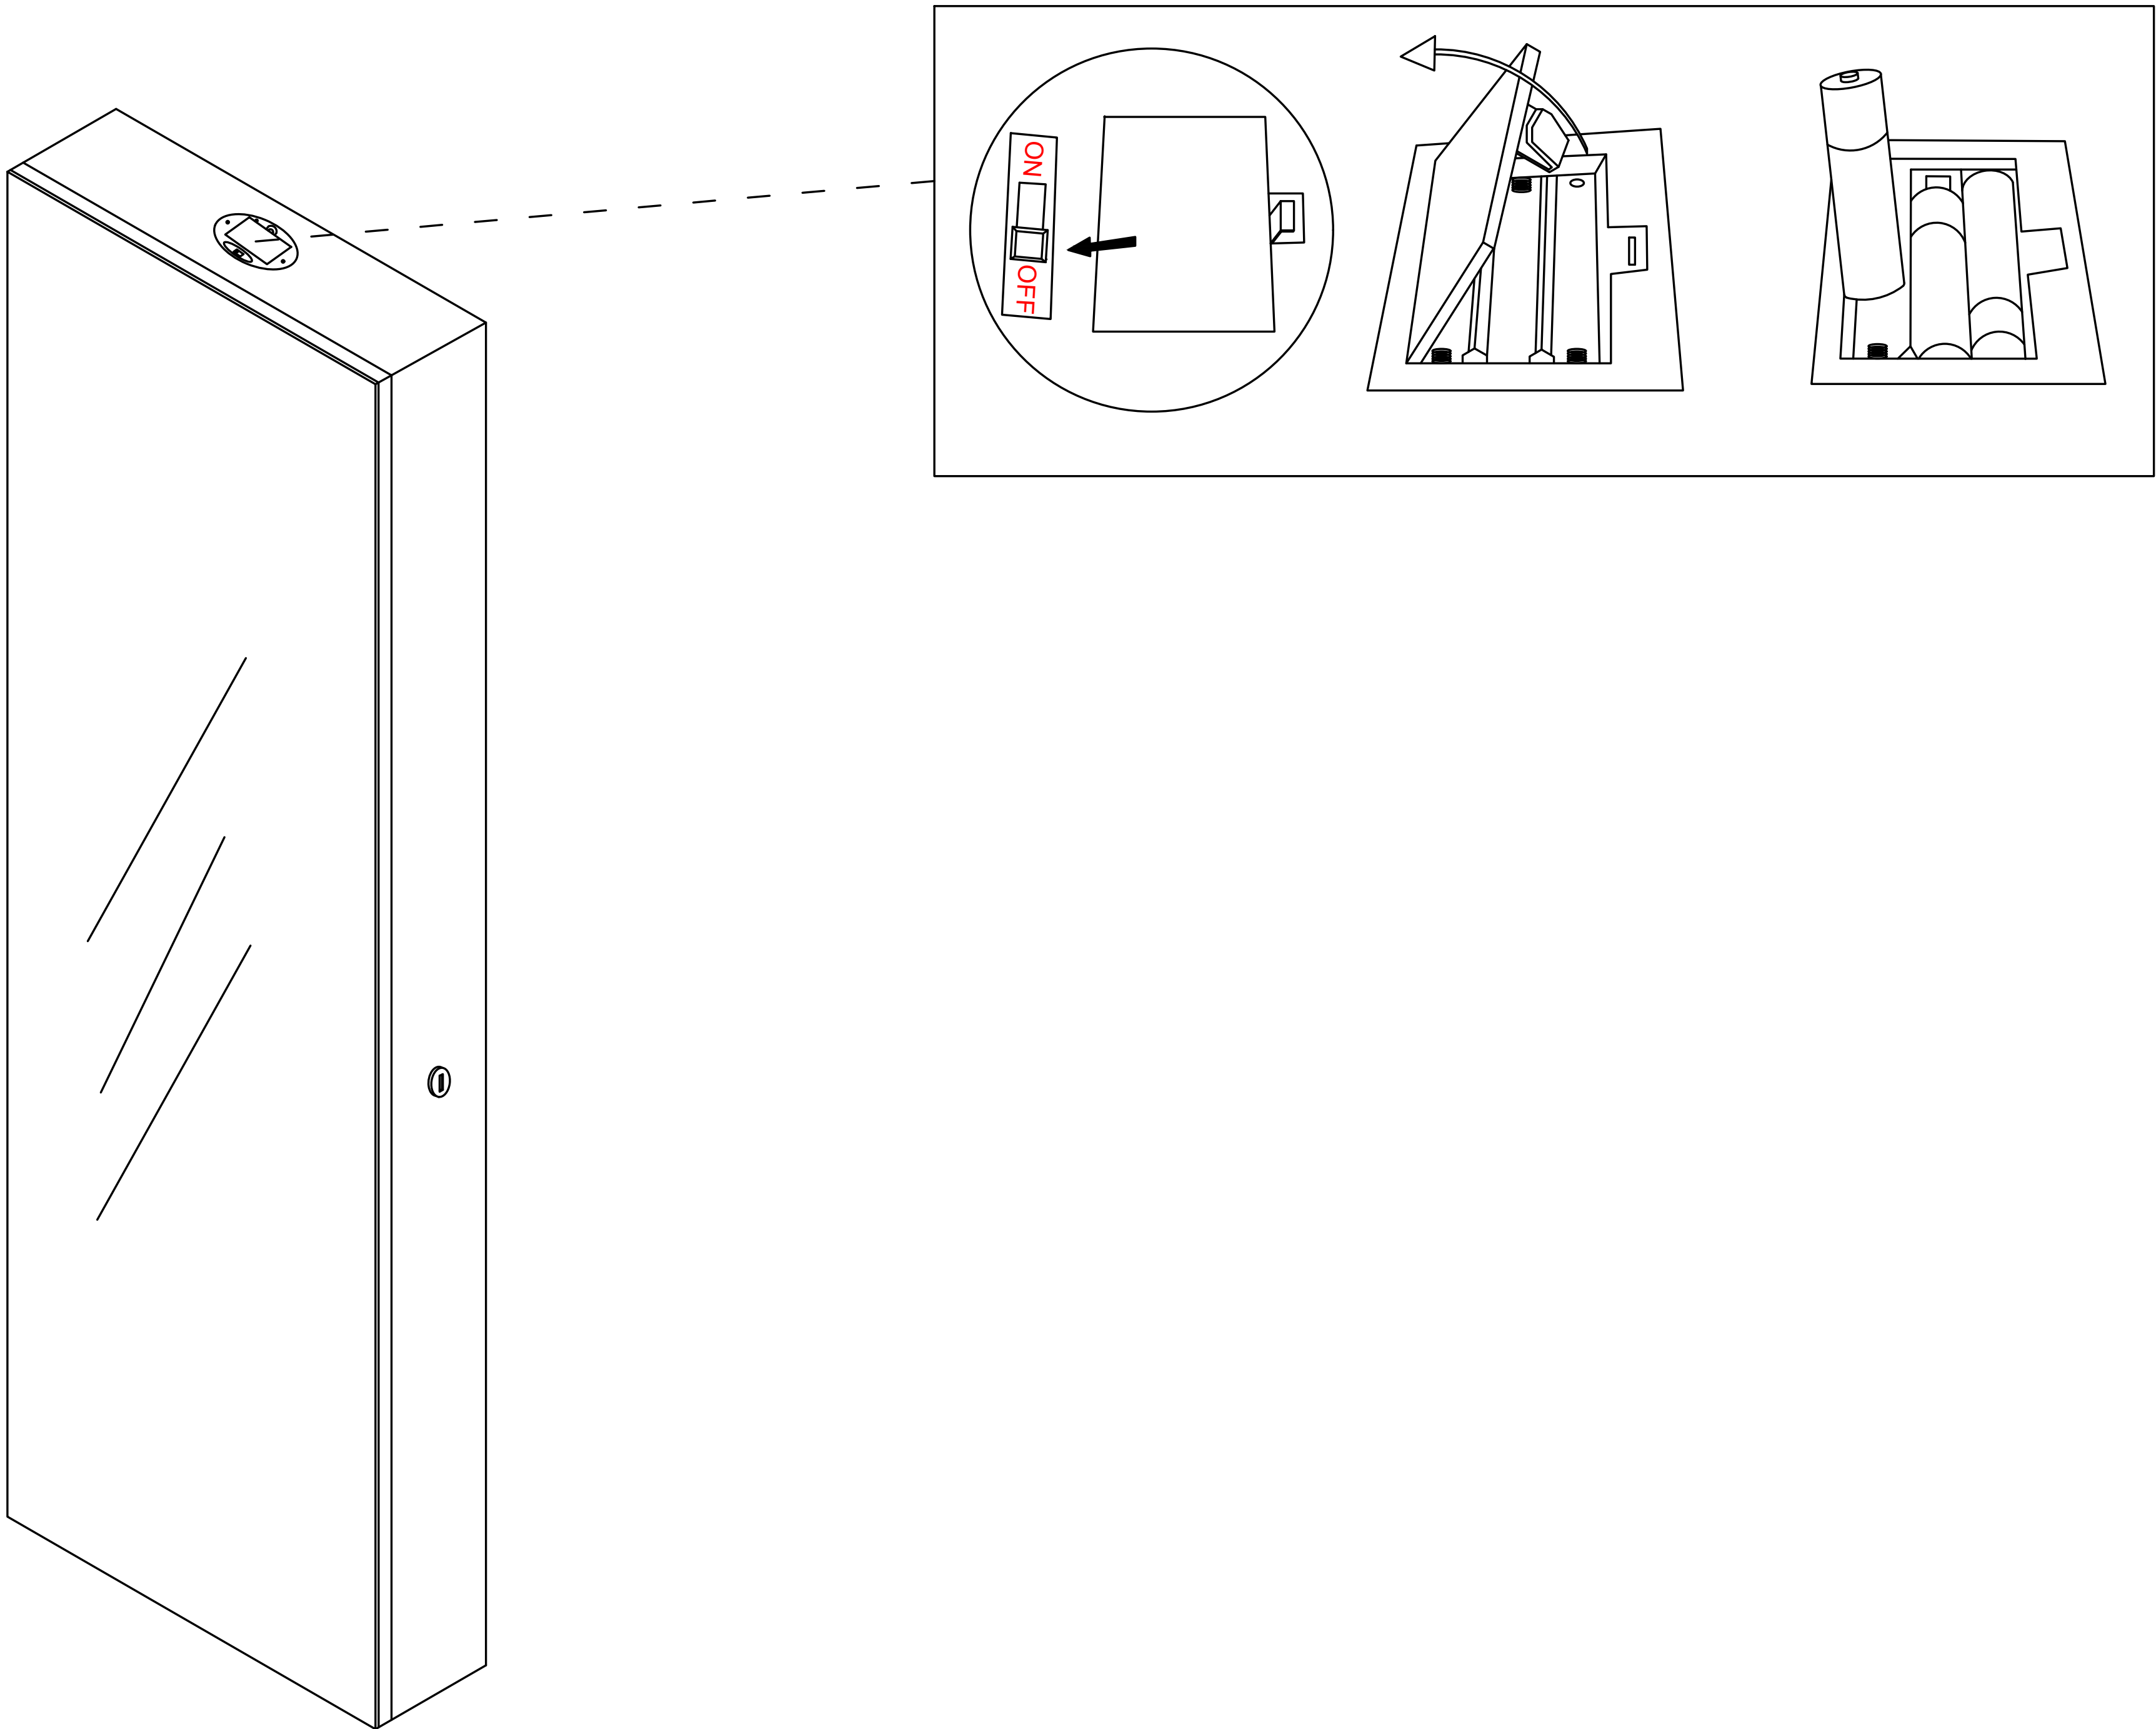


Over The Door

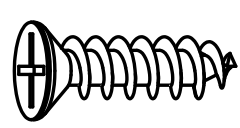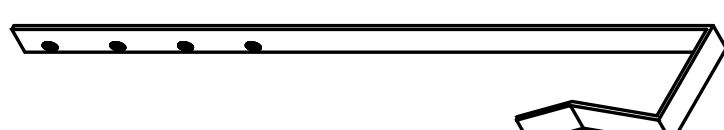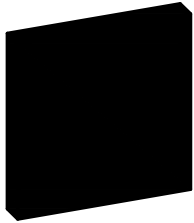A		x 8
C		x 1
F		x 1
G		x 2

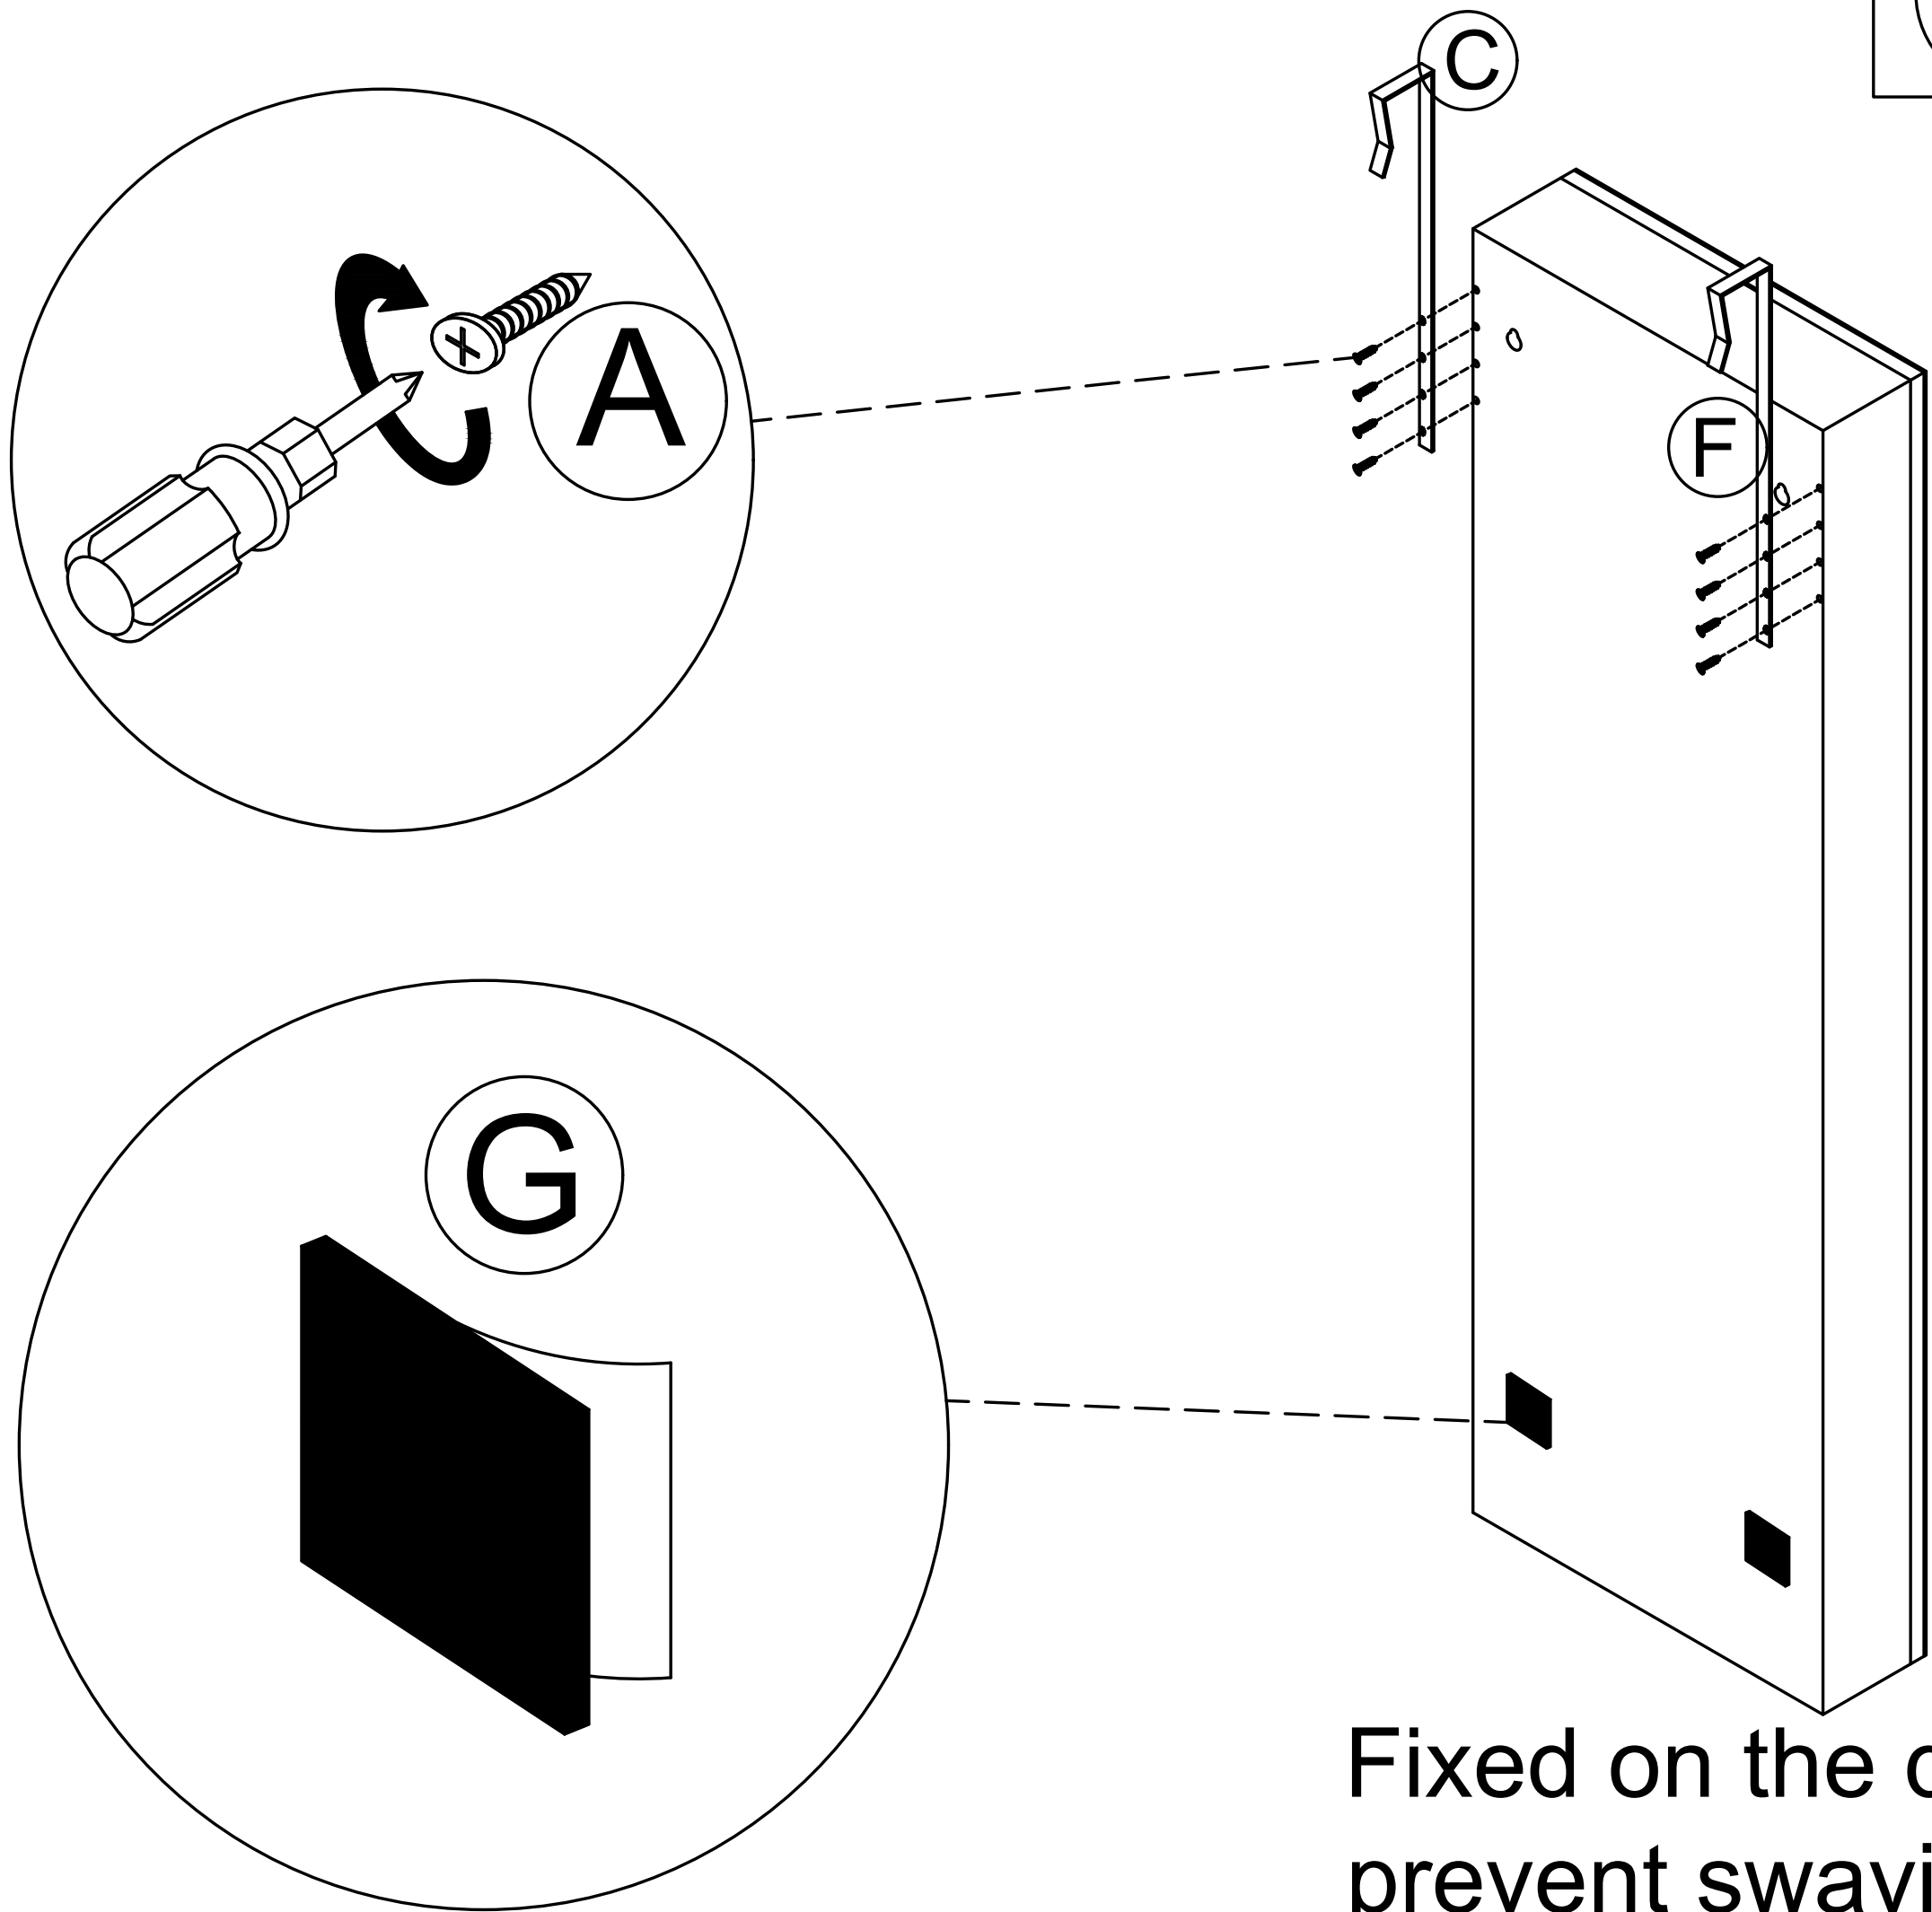



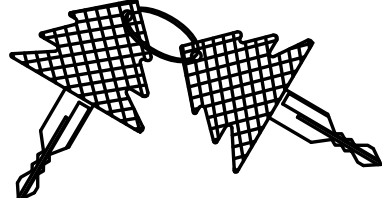
B		x 1
---	---	-----


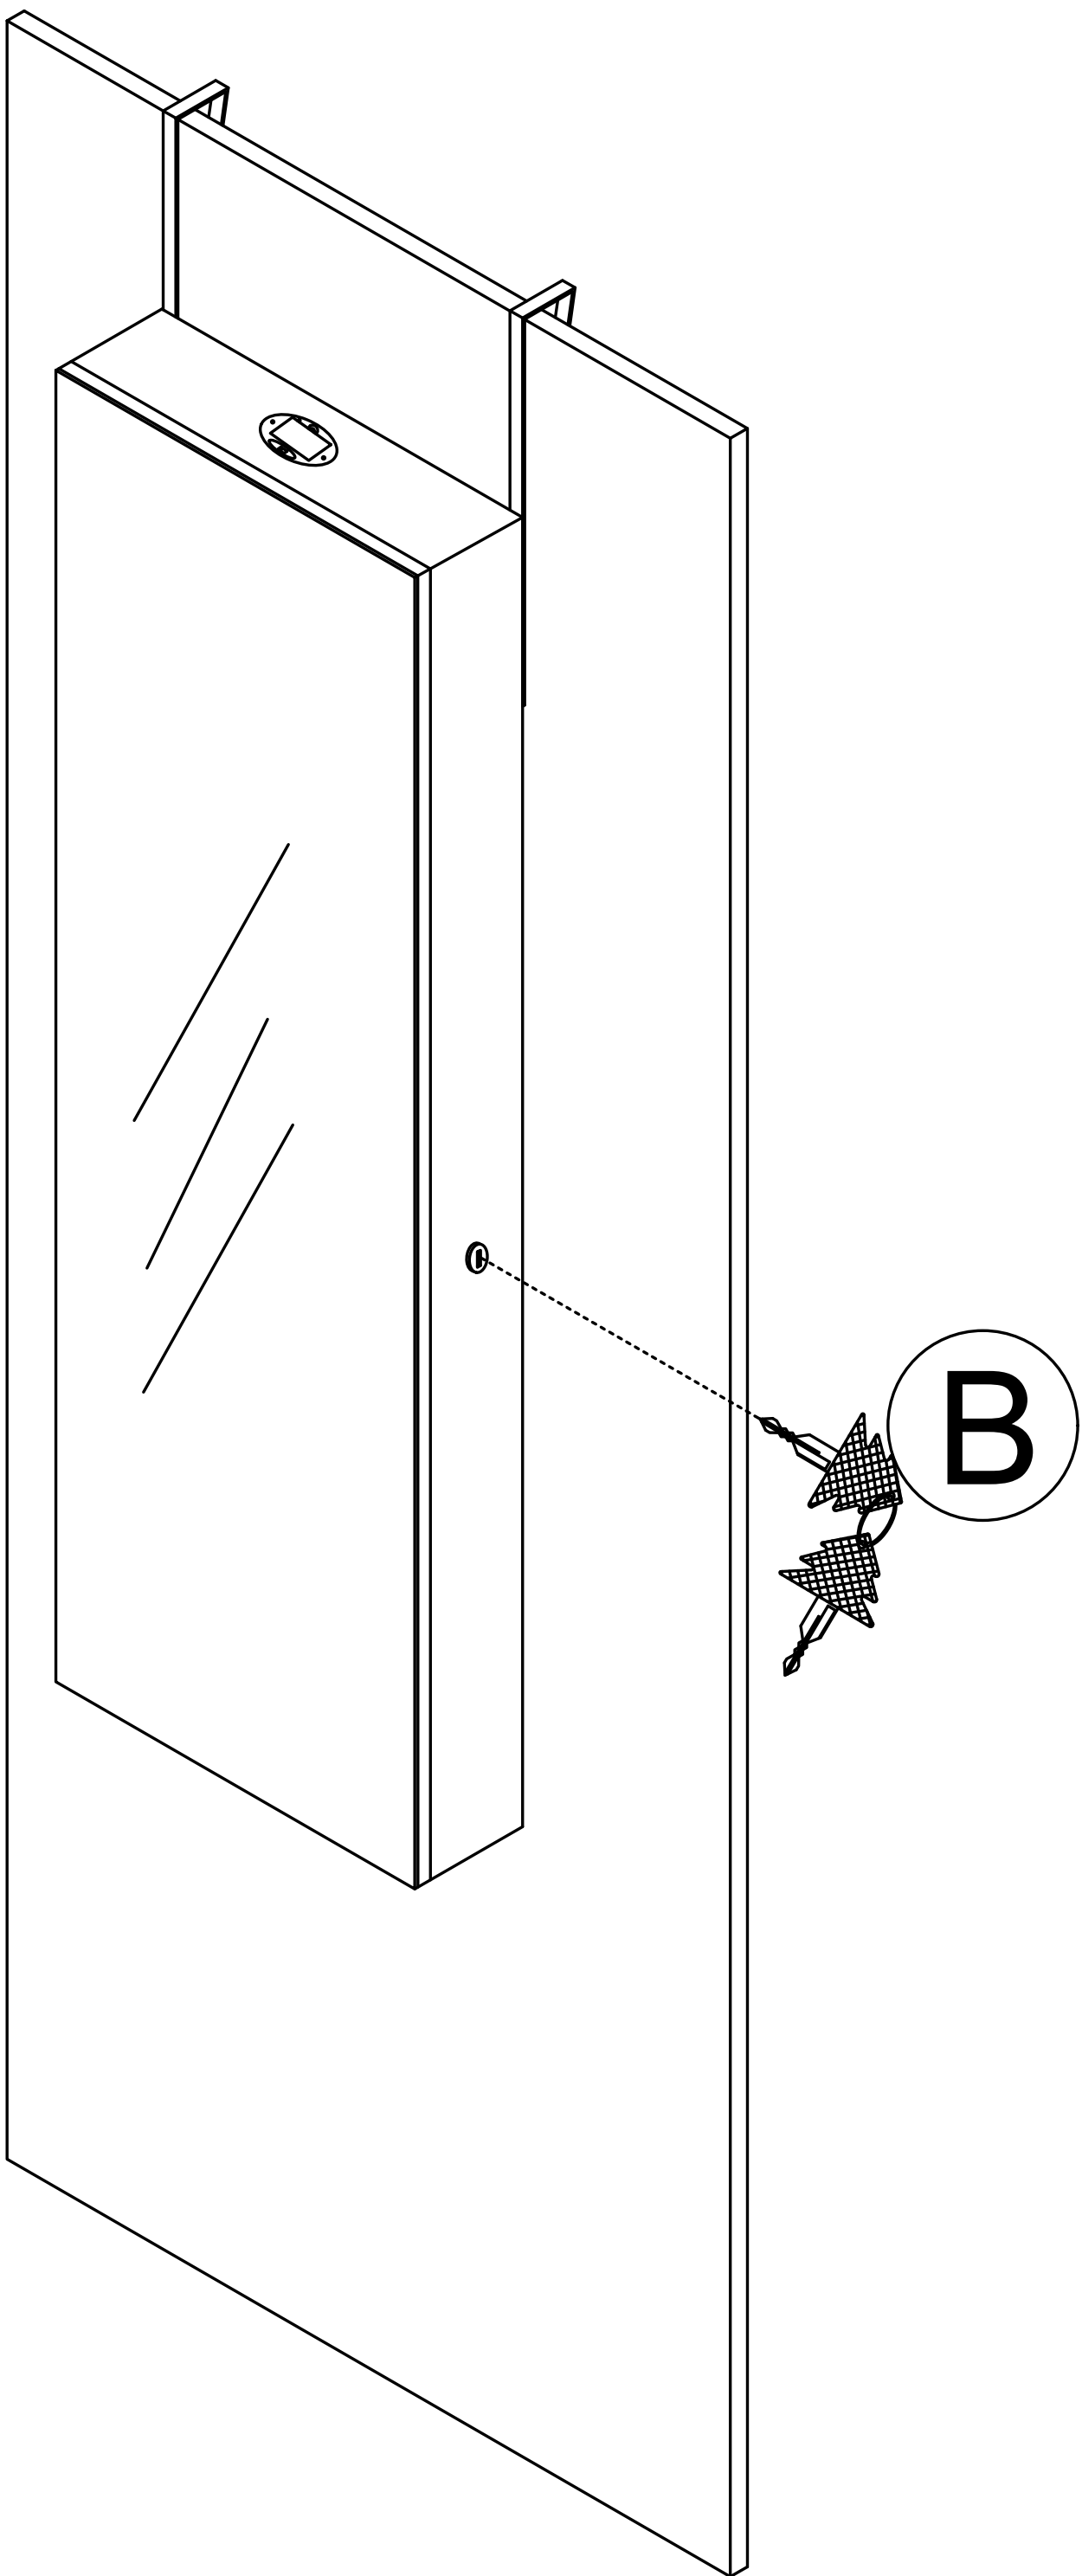




Wall Mount


(Tip: Please use your own tools)

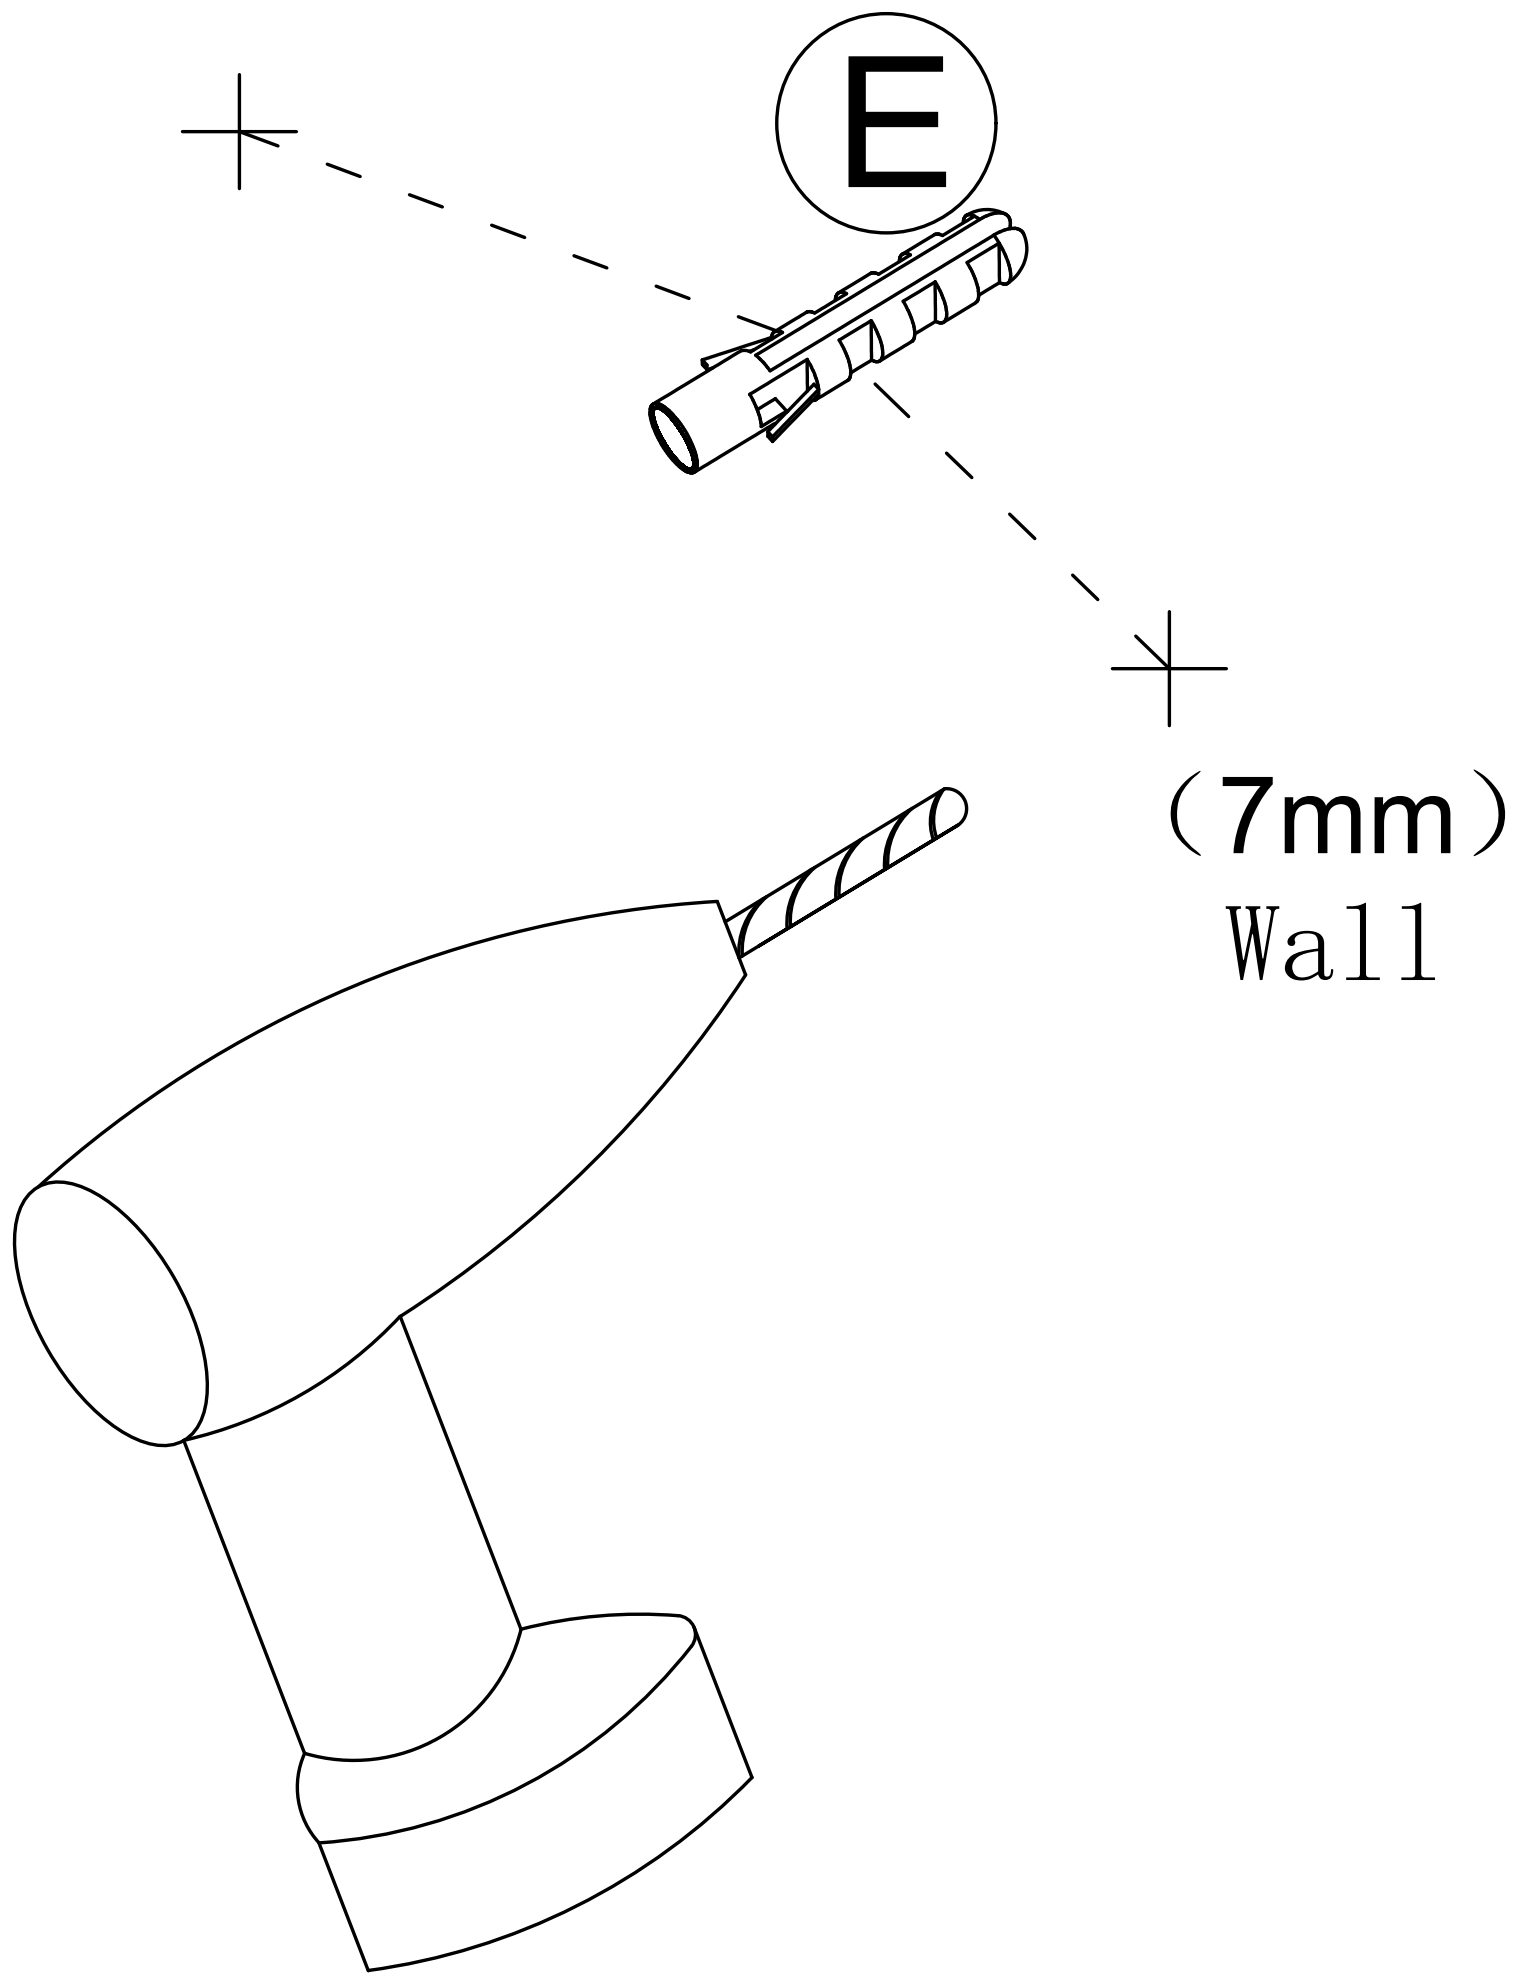

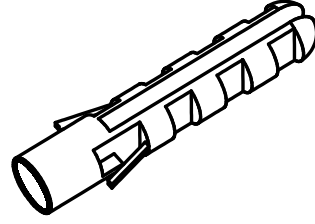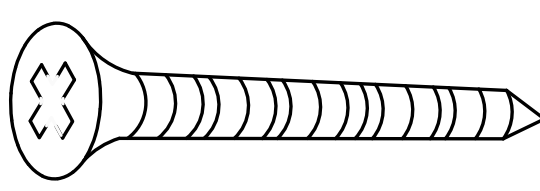E		x 2
D		x 2

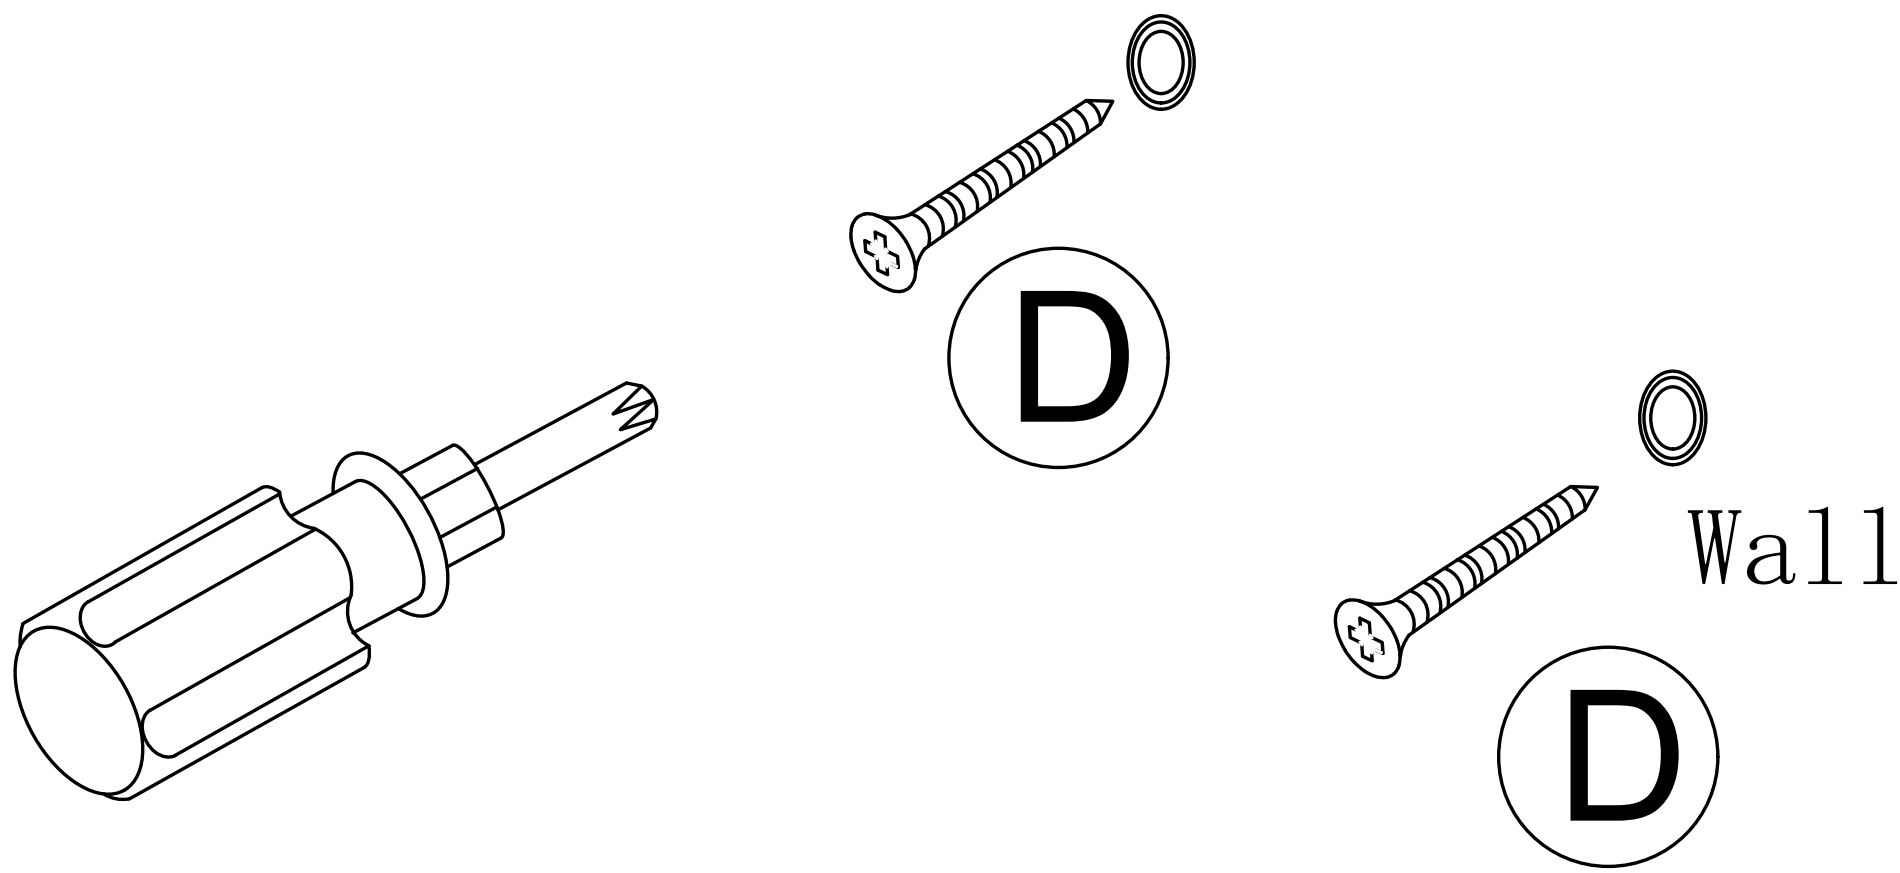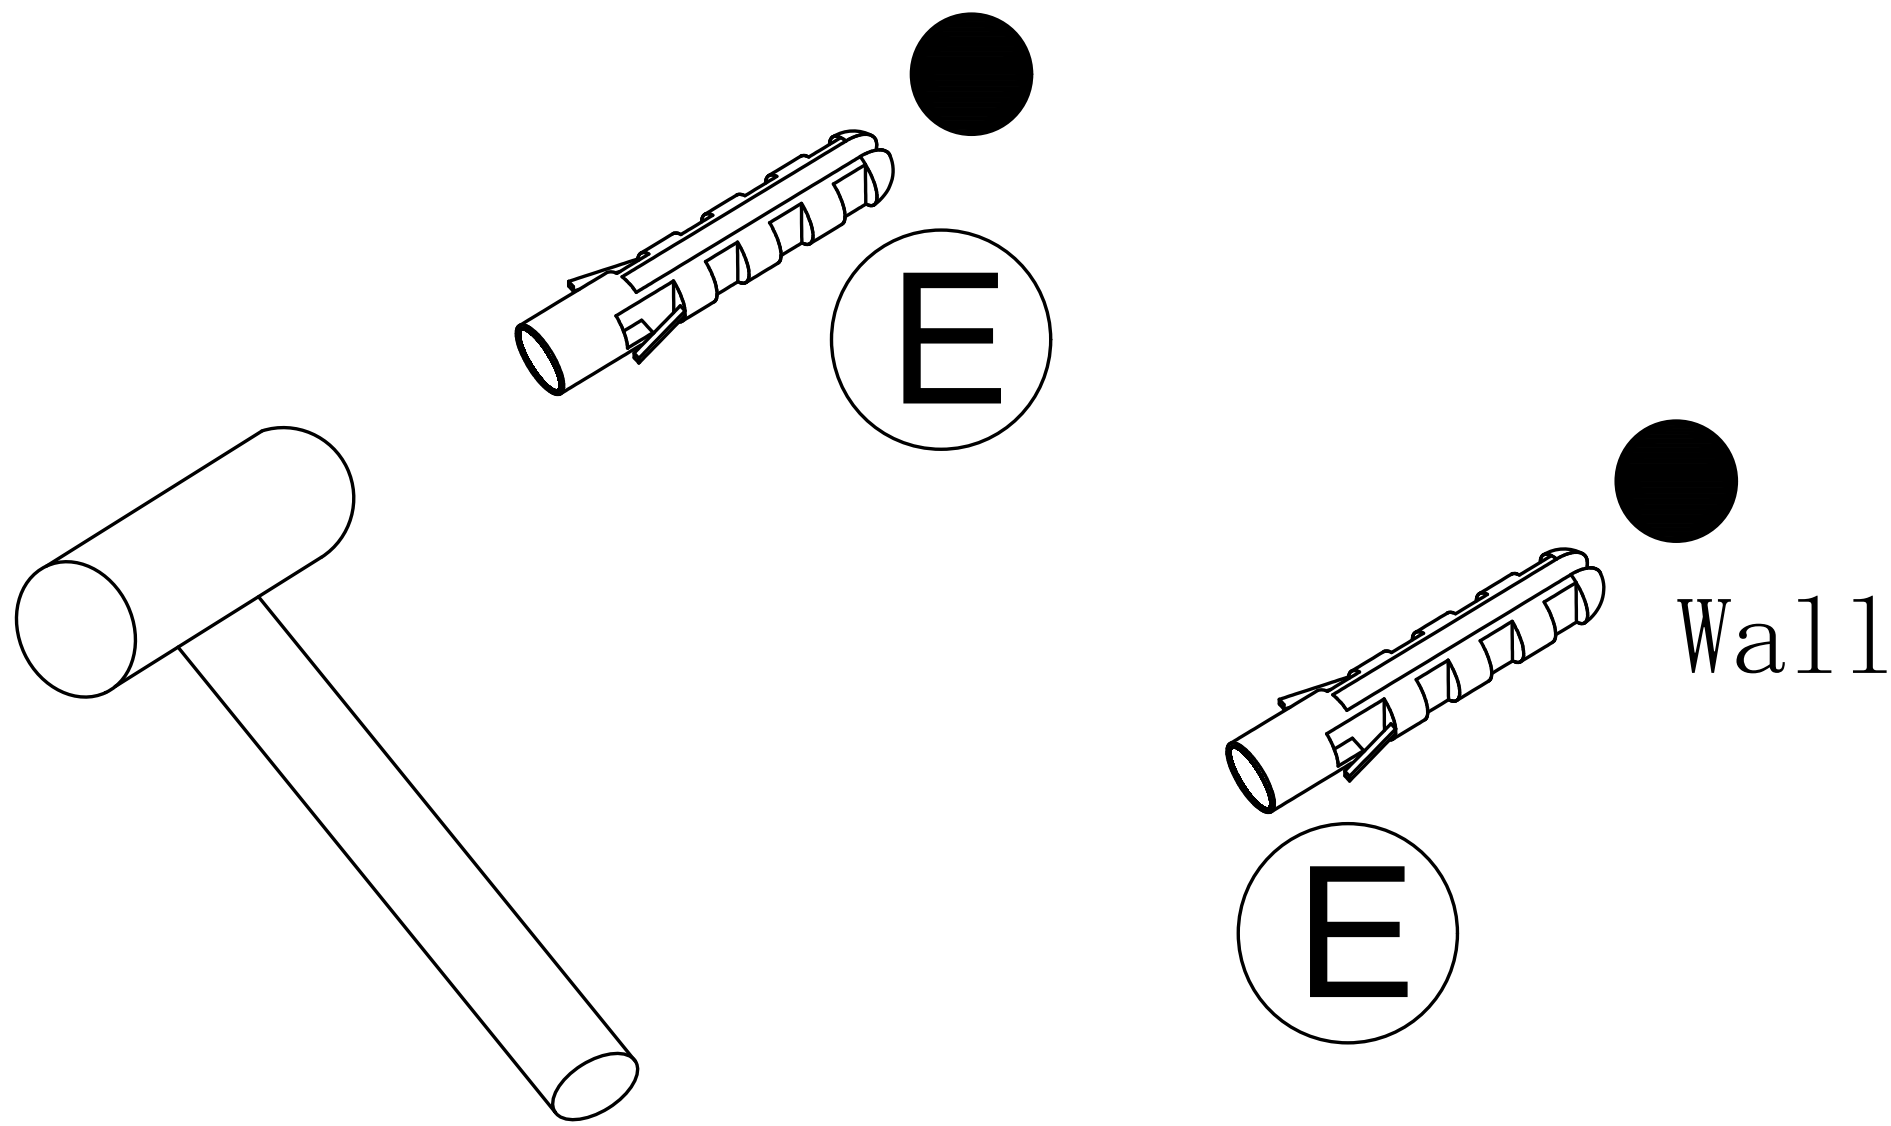

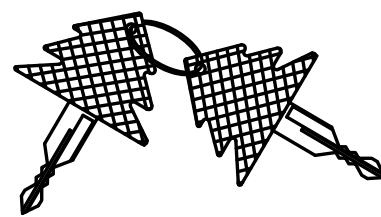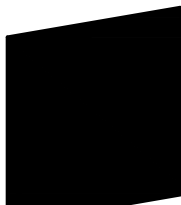B		x 1
G		x 1

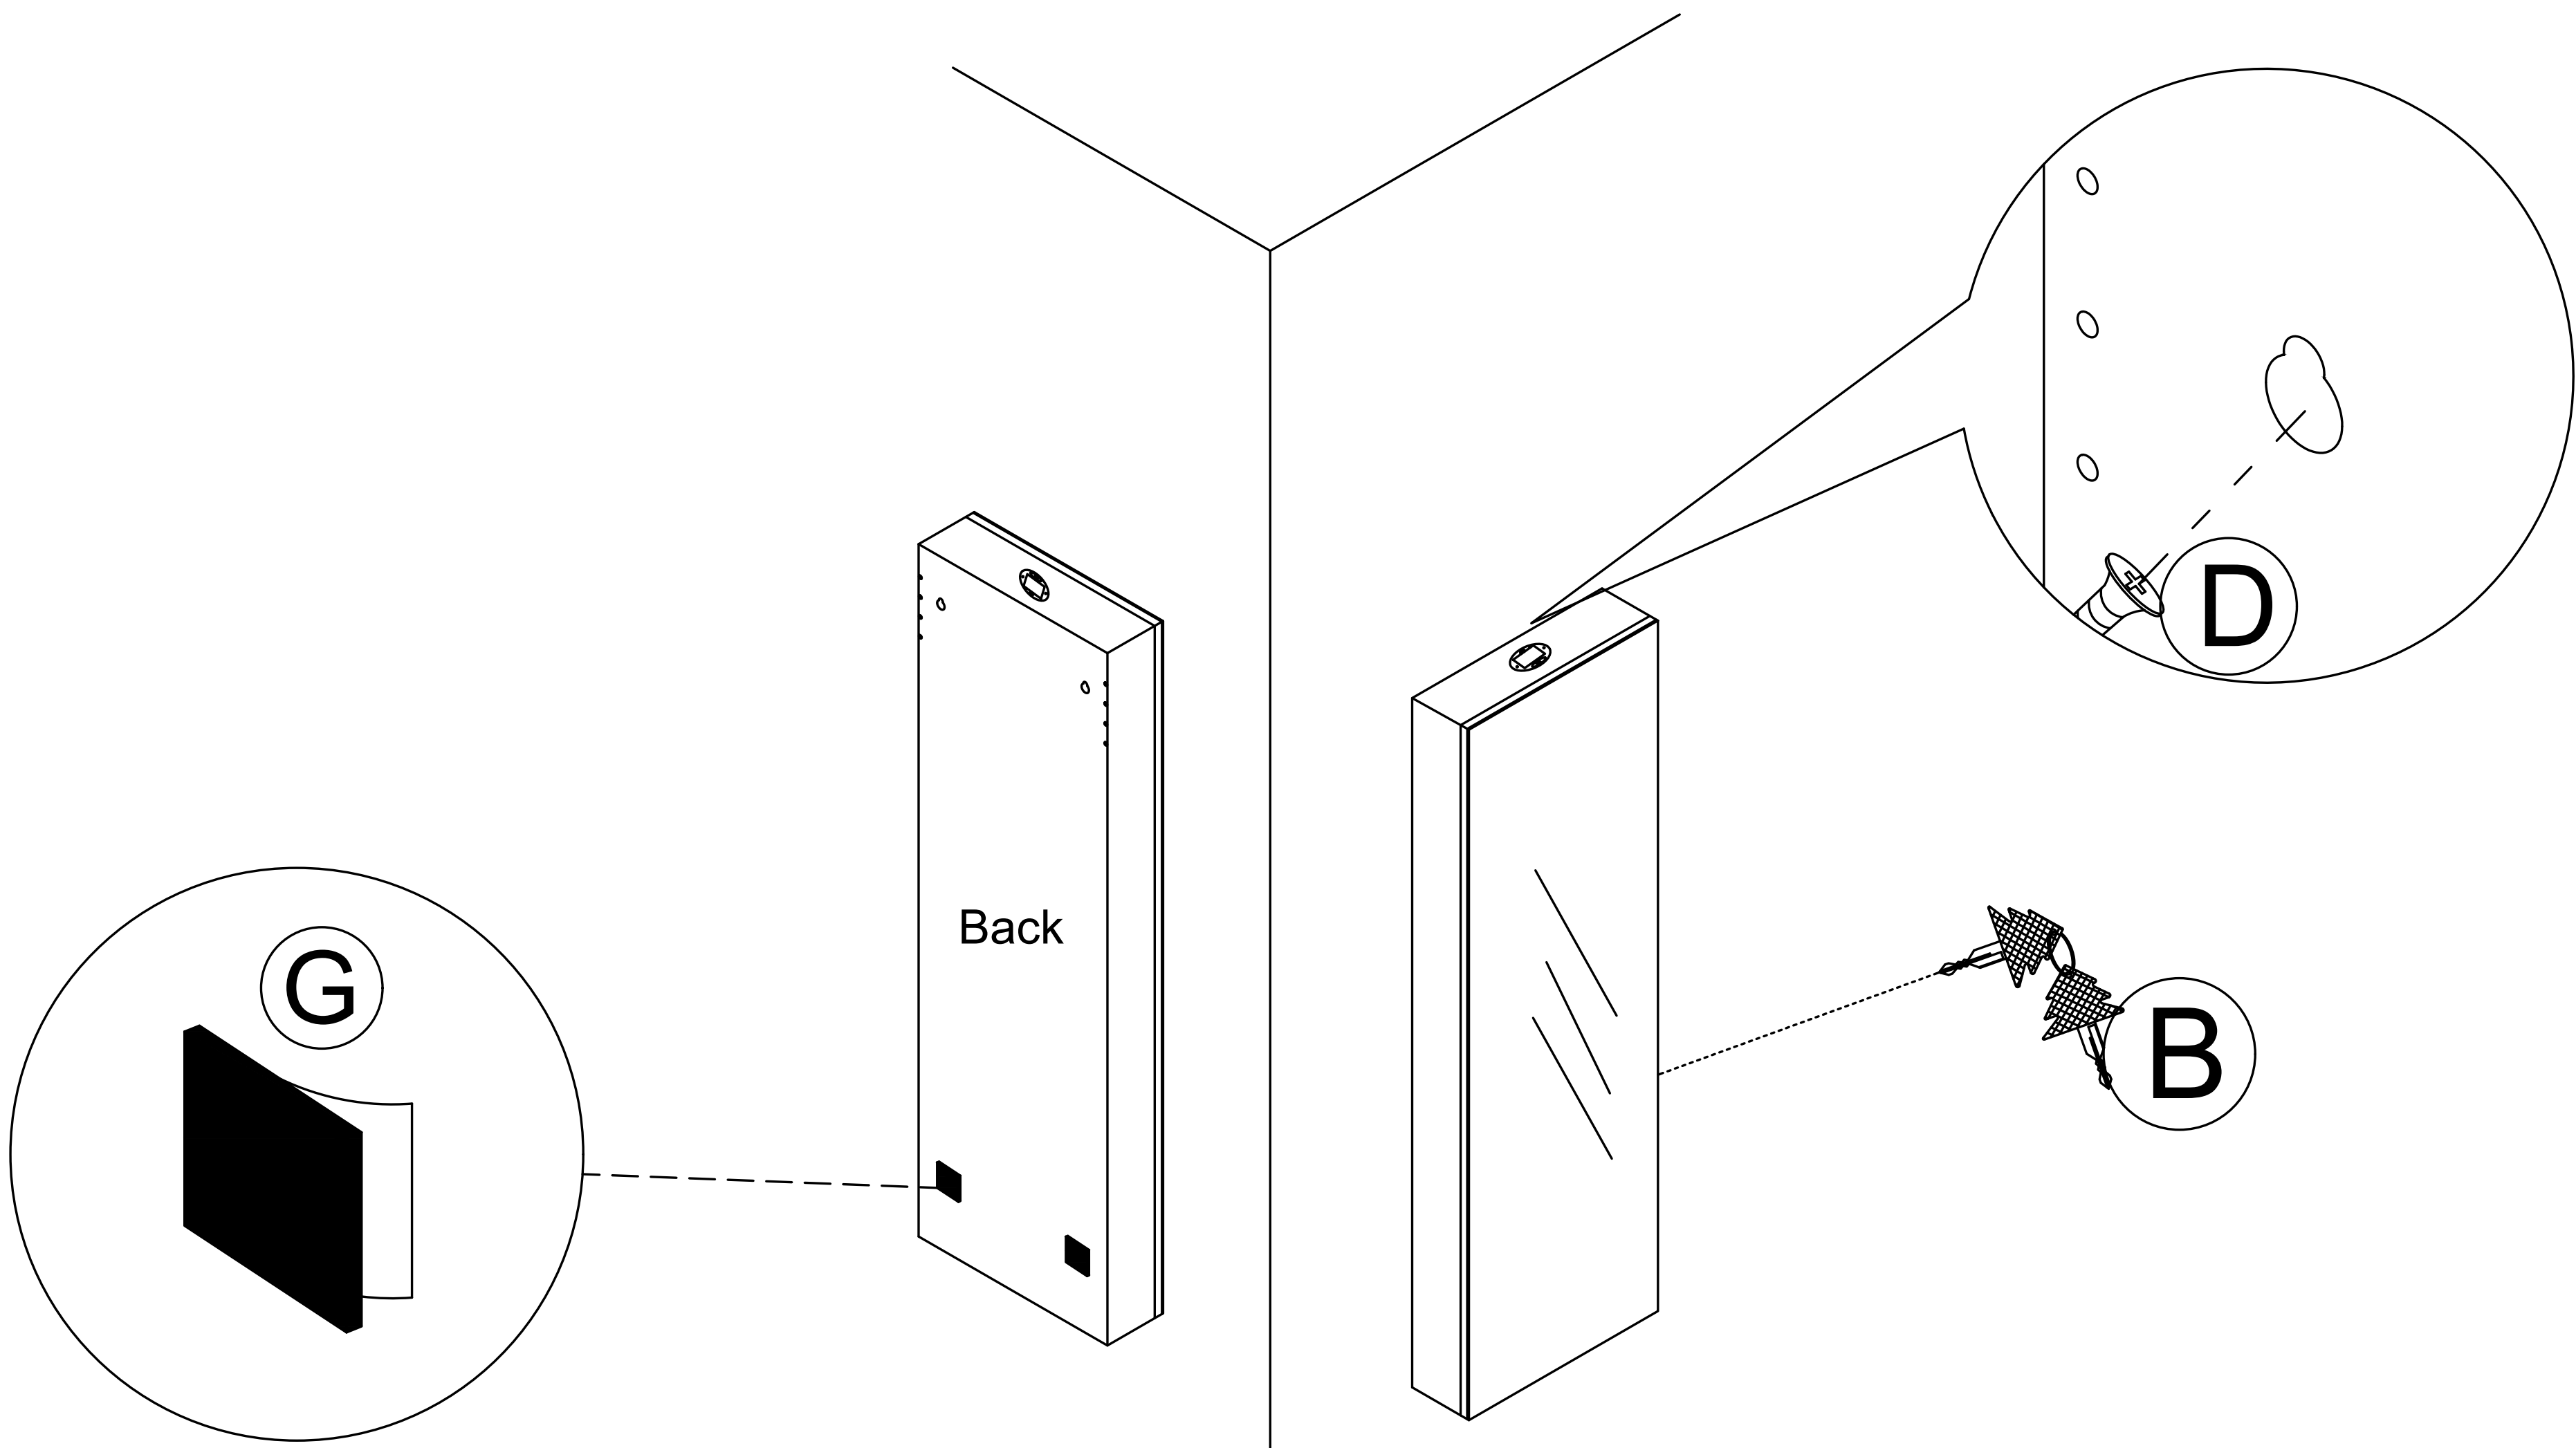

Fixed on the door to prevent swaying.