



1.0hr

APPROXIMATE ASSEMBLY TIME




2 PERSON OF ASSEMBLY

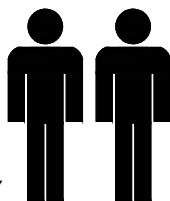

FLOOR AREA
2.0M X 1.5M

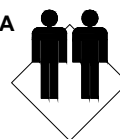


REQUIRED ASSEMBLY SPACE

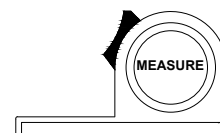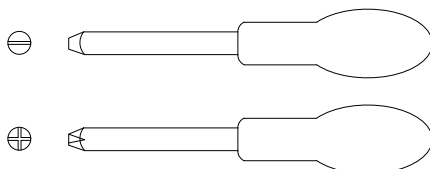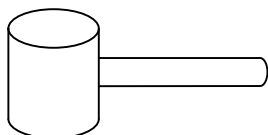

REQUIRED ASSEMBLY TOOLS


ASSEMBLED DIMENSIONS

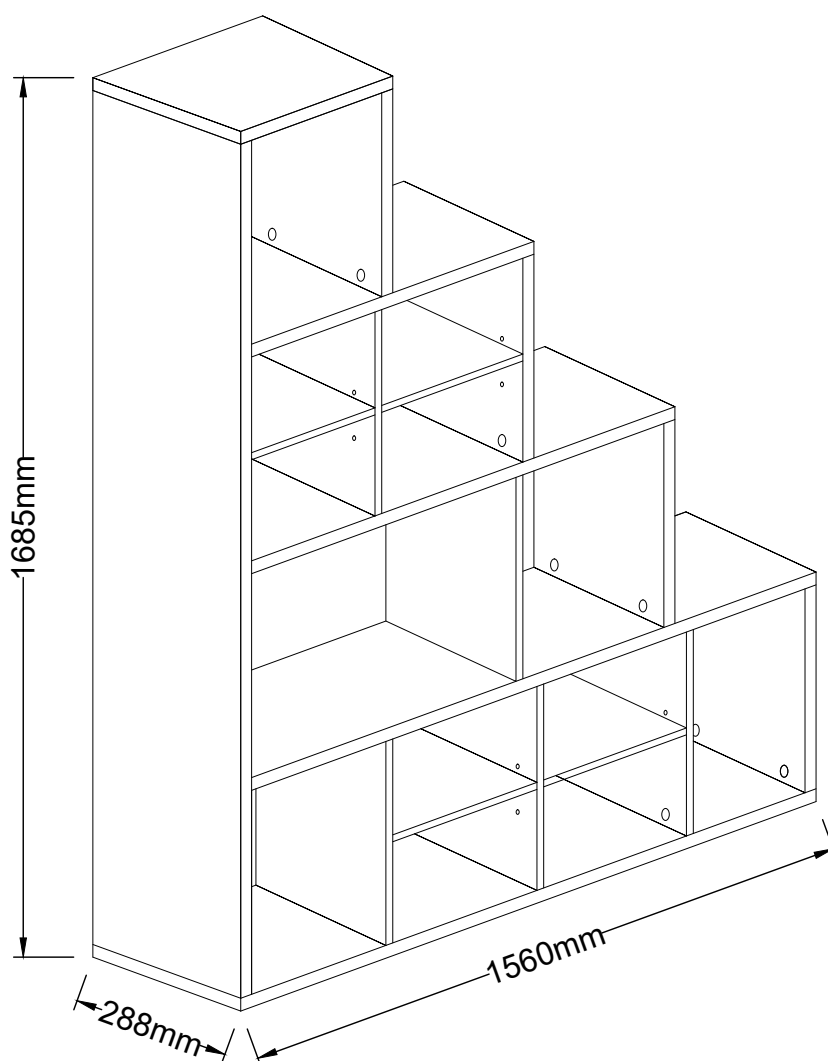


NOTE : THE MAXIMUM WEIGHT THIS PRODUCT CAN HOLD UP TO 25 KGS.

NO.	PART LIST	QTY	NO.	PART LIST	QTY
(A)	RIGHT SIDE PANEL (A)	3	(G)	FIXED PANEL(A)	1
(B)	RIGHT SIDE PANEL (B)	1	(H)	FIXED PANEL(B)	1
(C)	LEFT SIDE PANEL	1	(I)	FIXED PANEL(C)	1
(D)	MIDDLE PANEL(A)	1	(J)	FIXED PANEL(D)	1
(E)	MIDDLE PANEL(B)	2	(K)	FIXED PANEL(E)	1
(F)	MIDDLE PANEL(C)	2	(L)	ADJUSTABLE PANEL	4

PARTS LIST

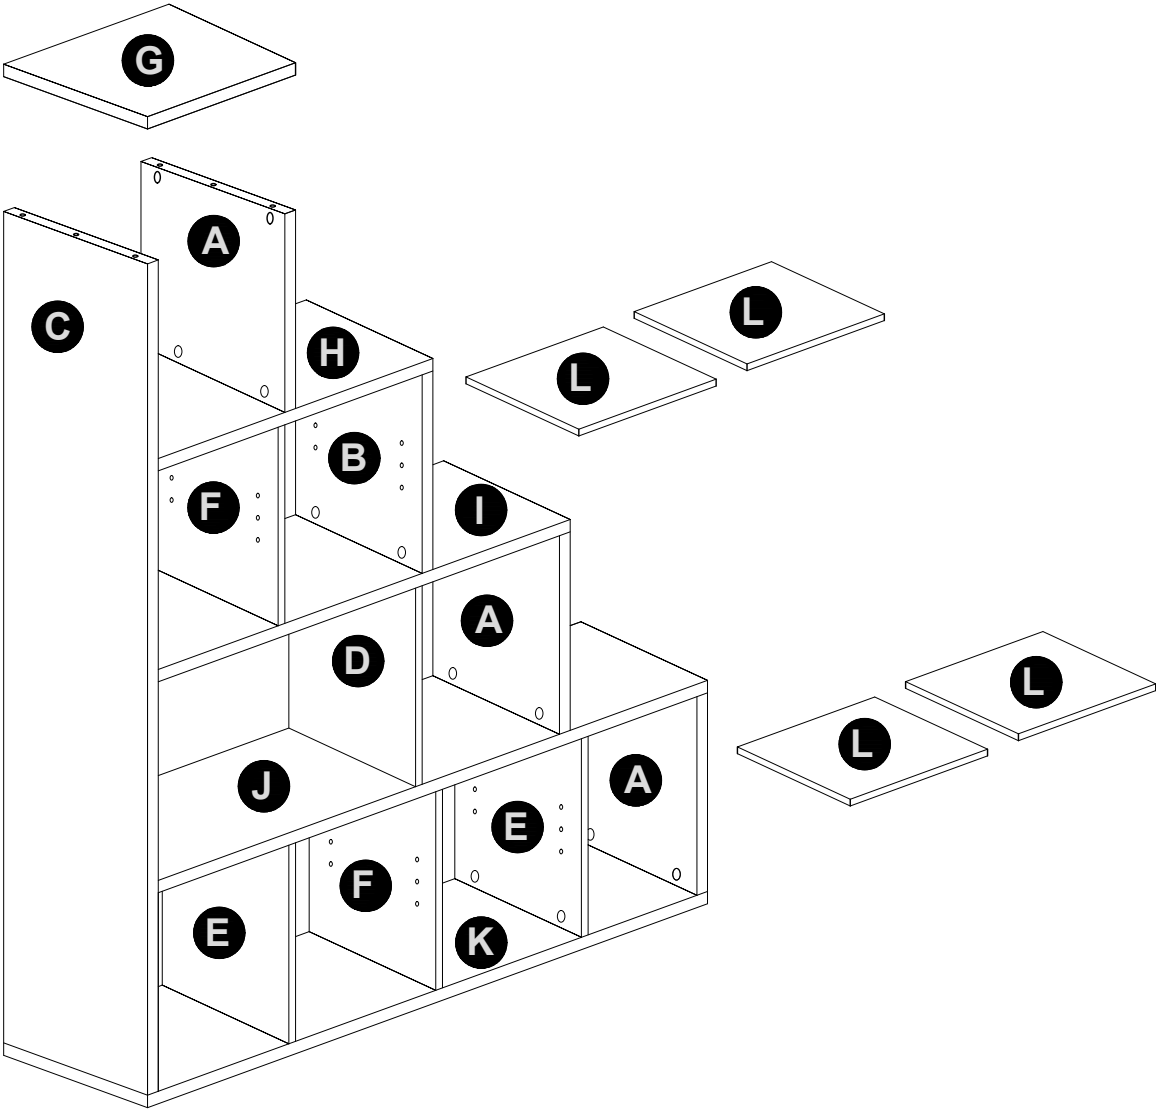


HARDWARE LIST




23X
Dia.6 x 30mm
1
WOOD
DOWEL




46X
Dia.15mm
2
LARGE
CAMLOCK




46X
M6.5
3
QUICKFIT




1X
4
GLUE 10CC




20X
Dia 15mm
5
CAMLOCK COVER
(OPTIONAL)



20X
Dia 17mm
6
CAMLOCK COVER
(OPTIONAL)



16X
Dia.5 x 16mm
7
SHELF
STUB



6X
8
LEG
COVER



2X
M3.5 x 16mm
9
FLAT HEAD
SCREW



2X
10
ANTI TIP
STRAP

Top Tips before you start!


1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not sit or stand on the product.
Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.
10. This product is constructed from re-inforced hollow board. Excessive pressure cause irreparable damage. Please do not kneel on any part of this product during assembly.

Care and Maintenance of your Furniture



- Please periodically check all fittings are re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (e.g. hot drinks) directly on to the wood surface.
- Please do not drag and pull your furniture.

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

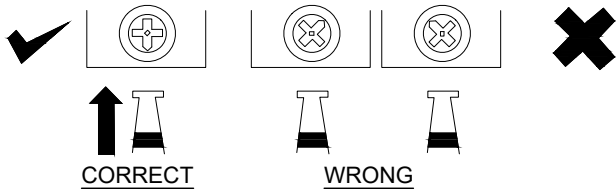


CAM-LOCK

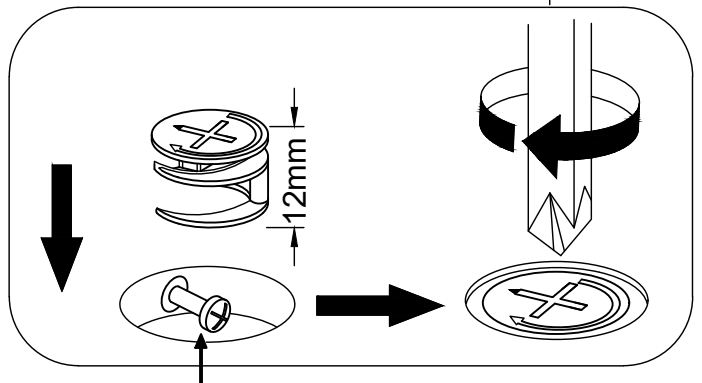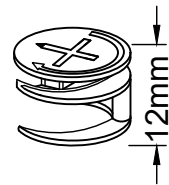


Quickfit head needs to be in centre

CAM BOLT


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

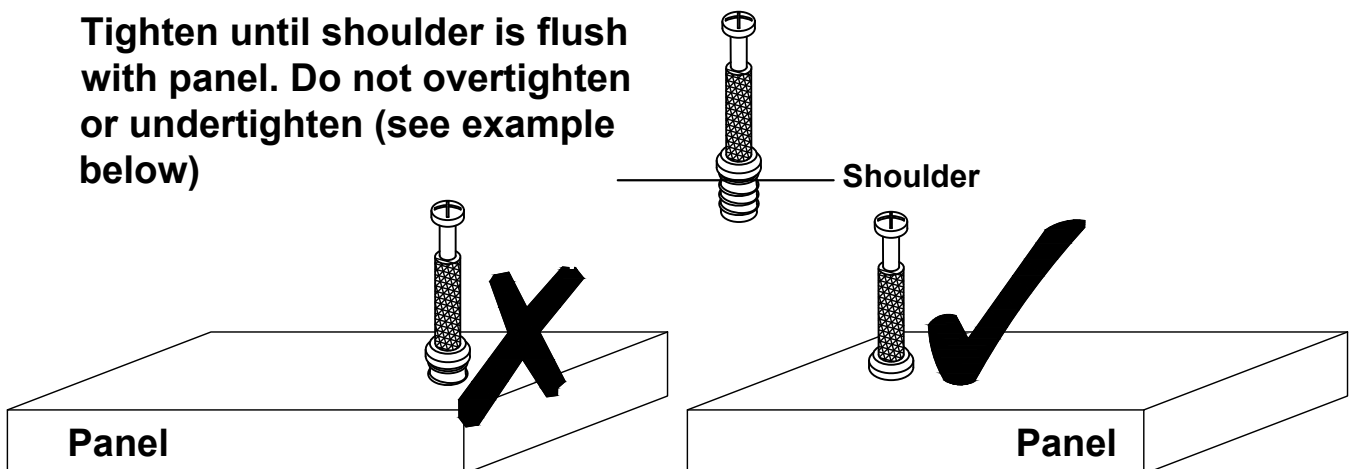


STEP 1

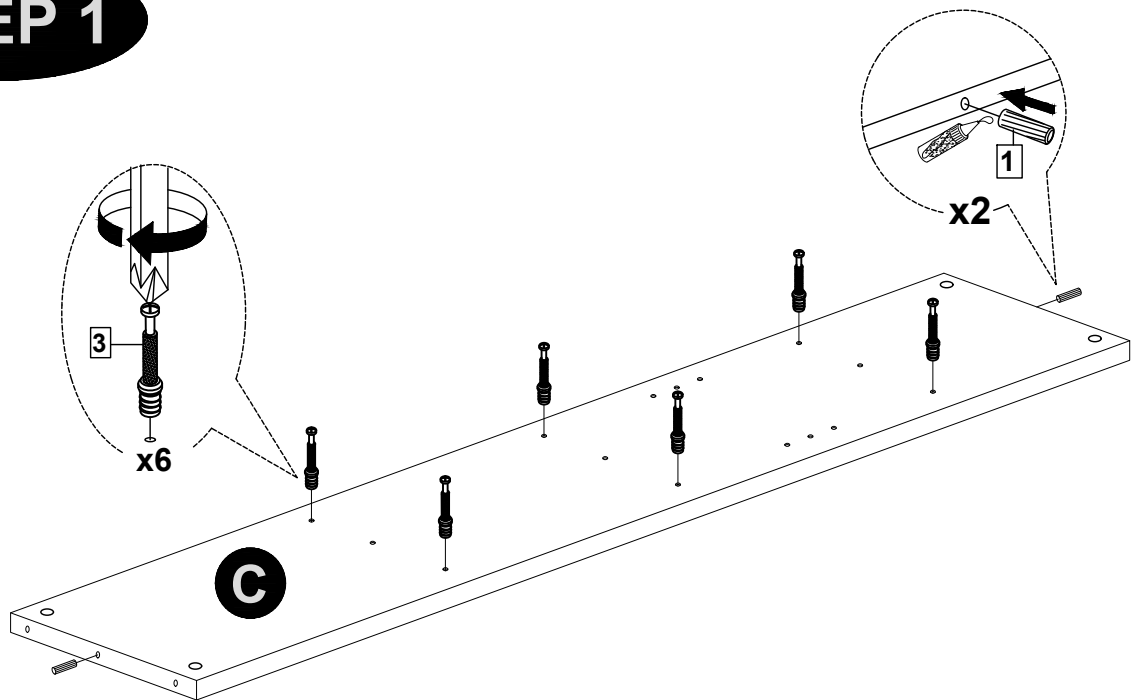

STEP 2

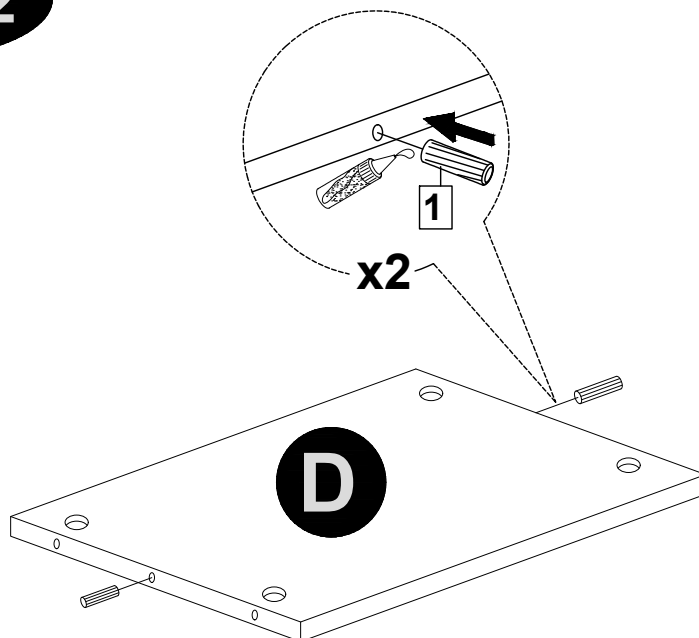


STEP 3

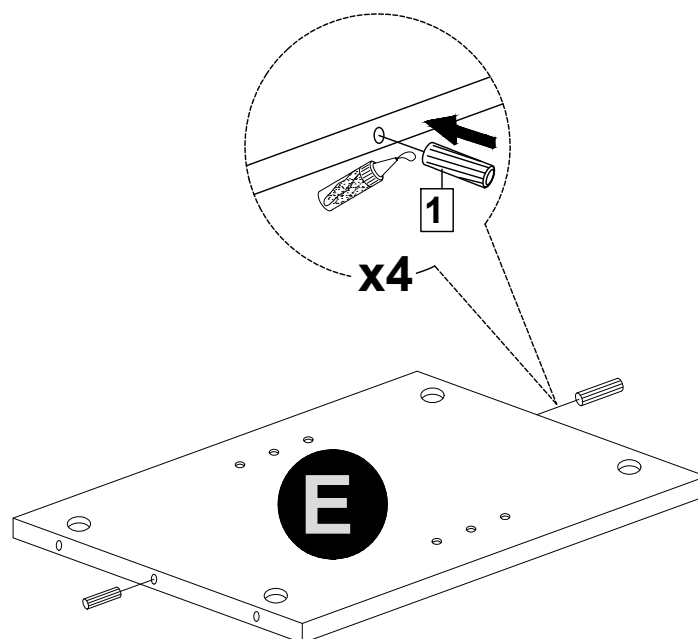


(x2)

STEP 4

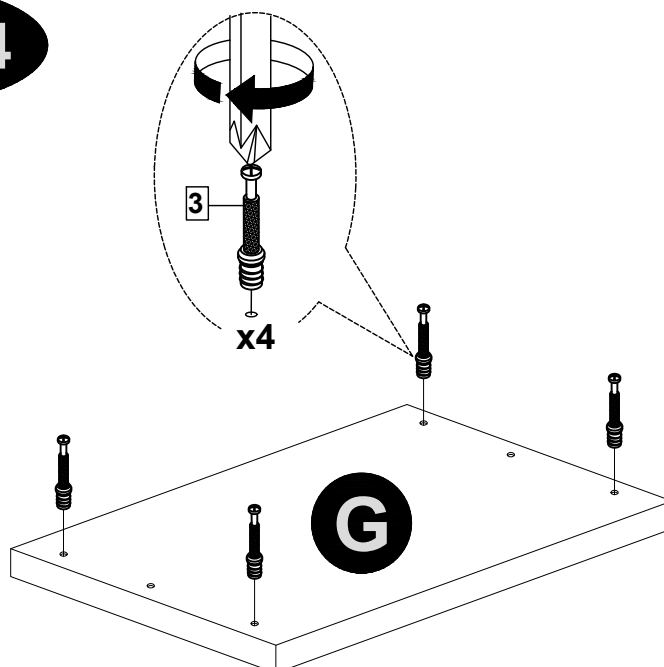


STEP 5

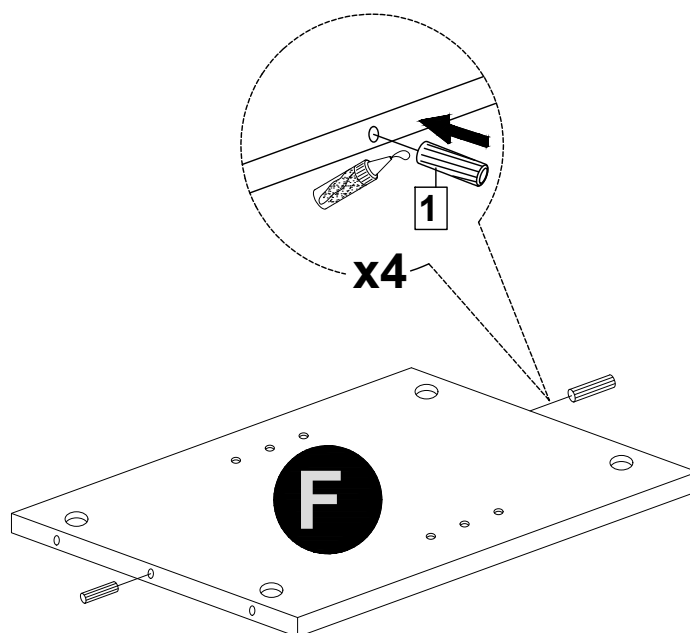


(x2)

STEP 6

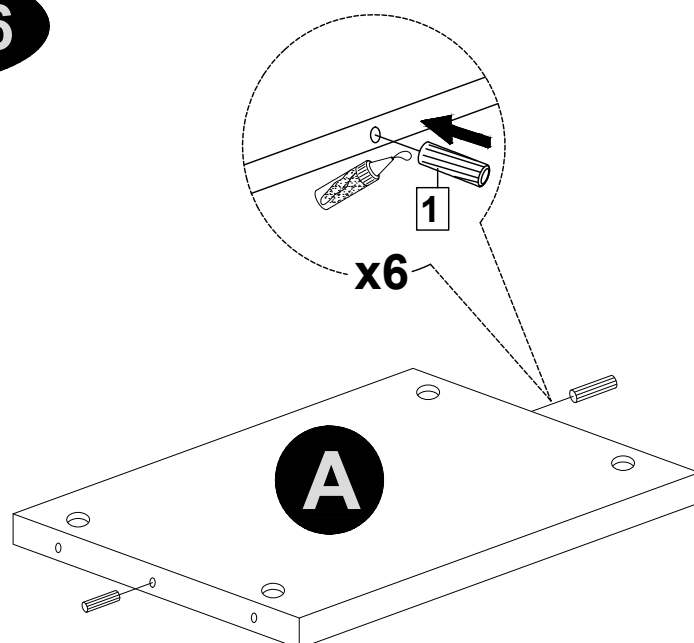


(x3)


STEP 7

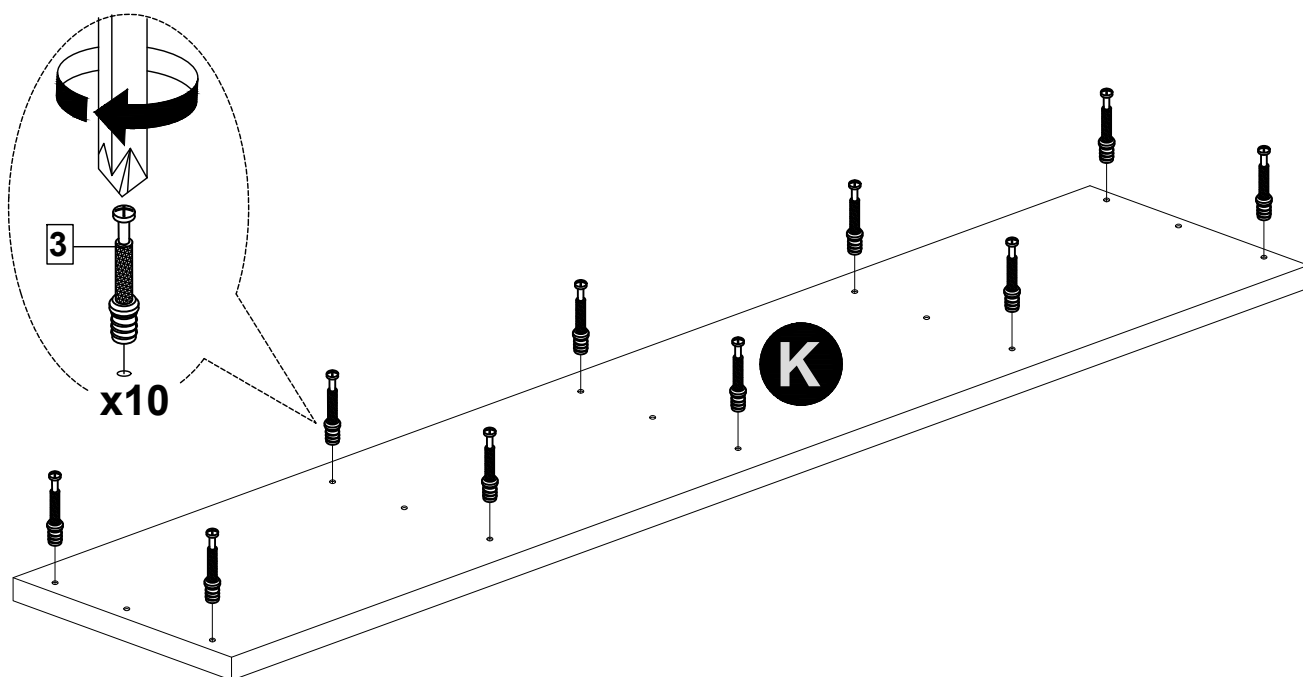


STEP 8

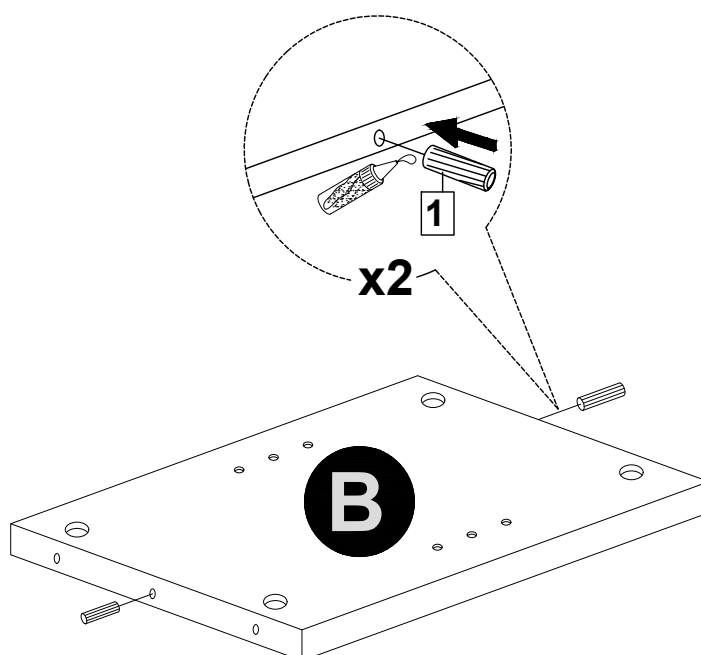


STEP 9

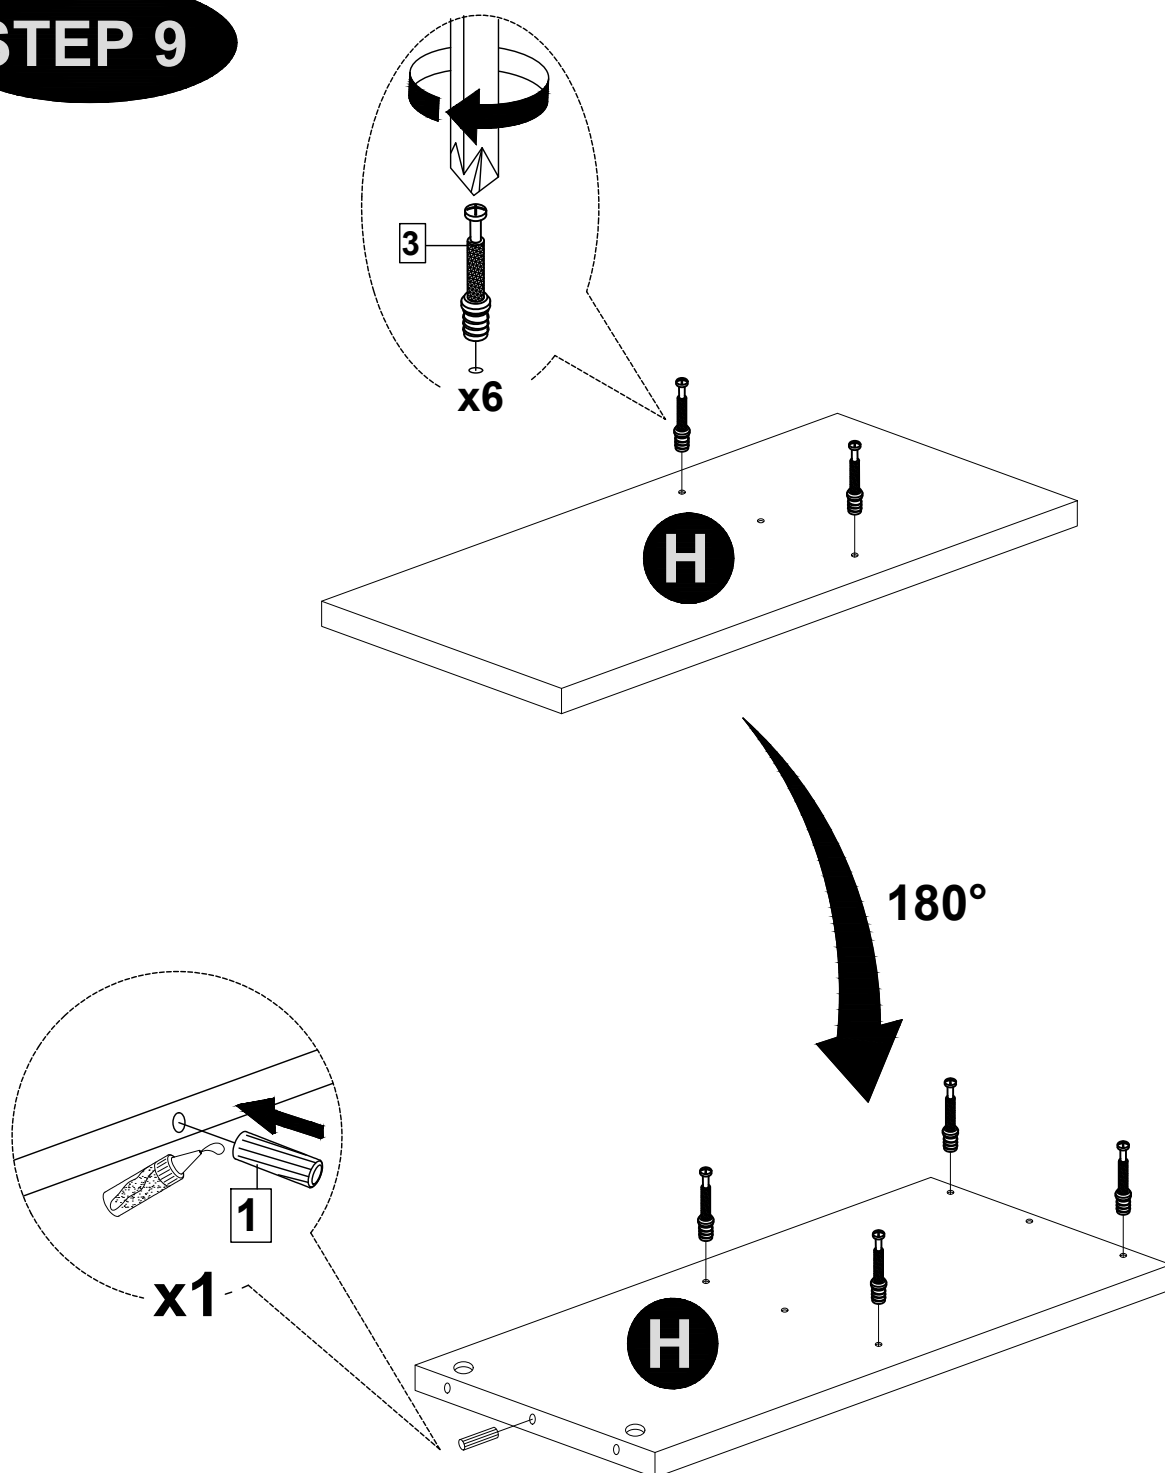


STEP 10

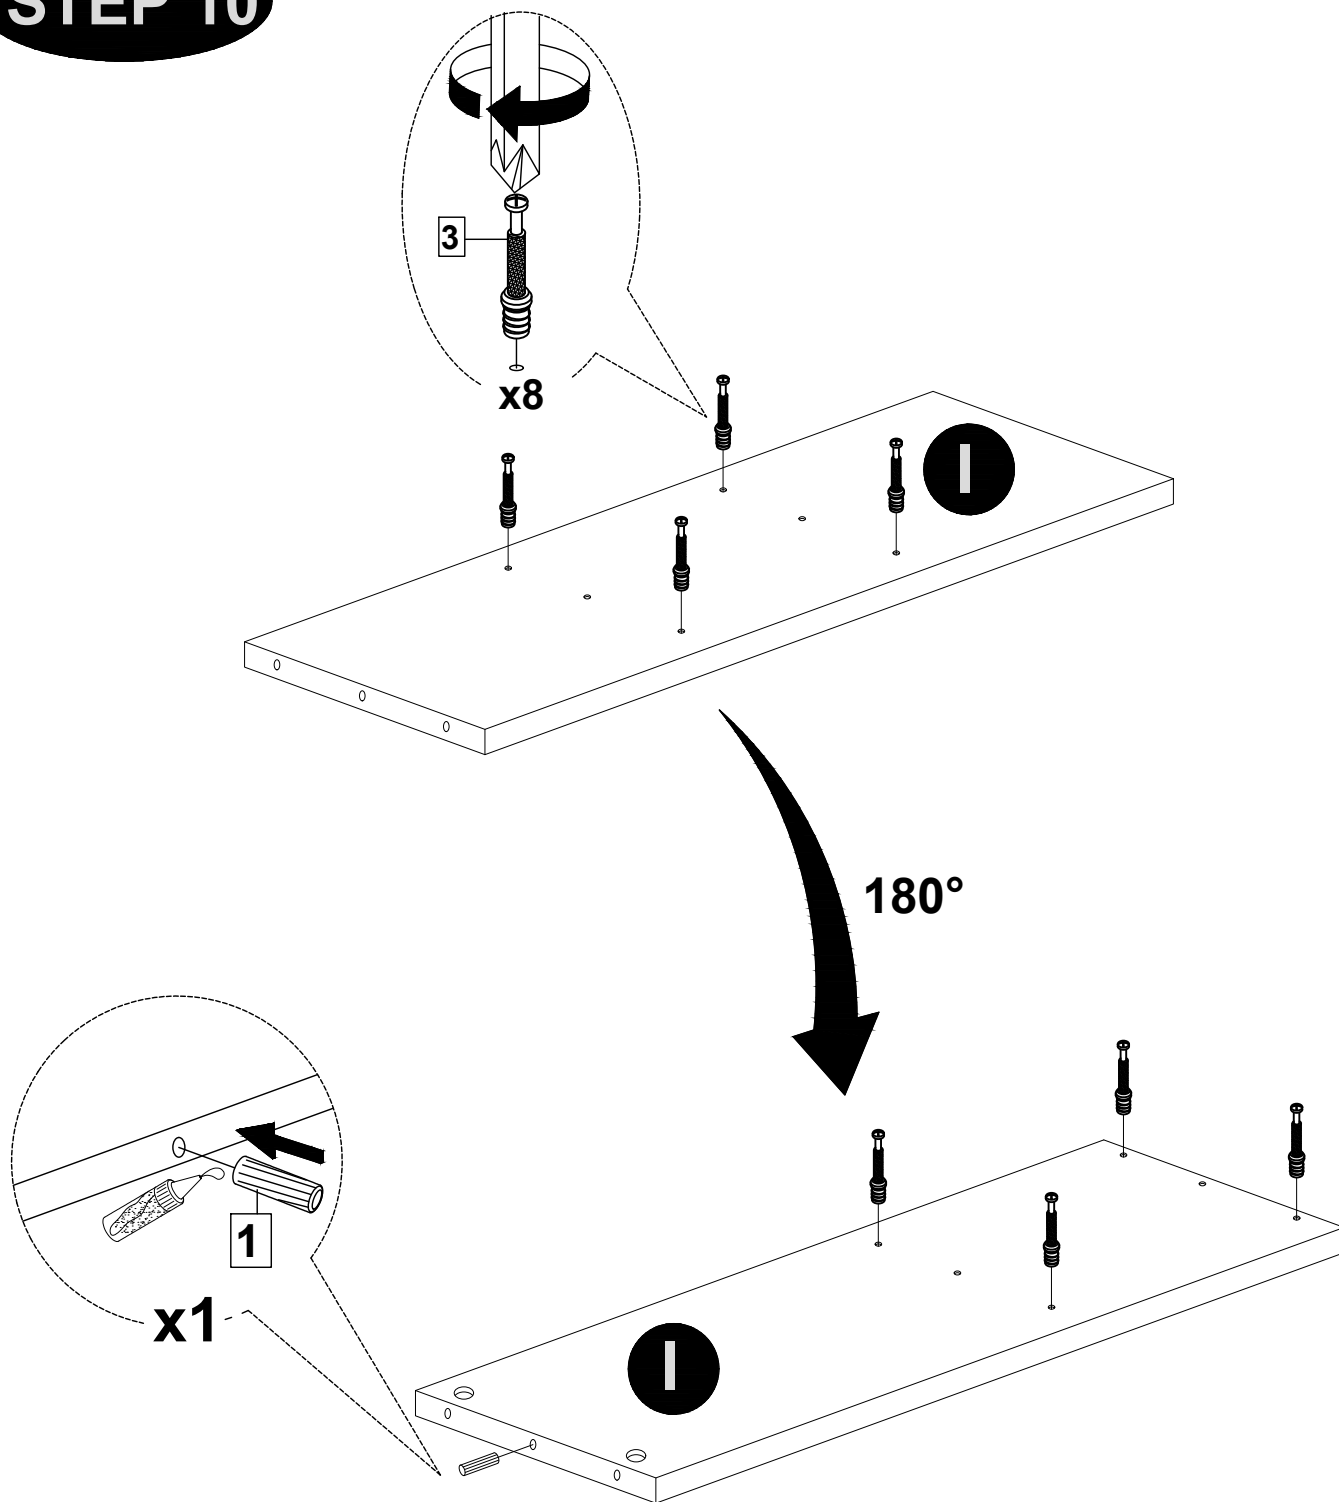


STEP 11

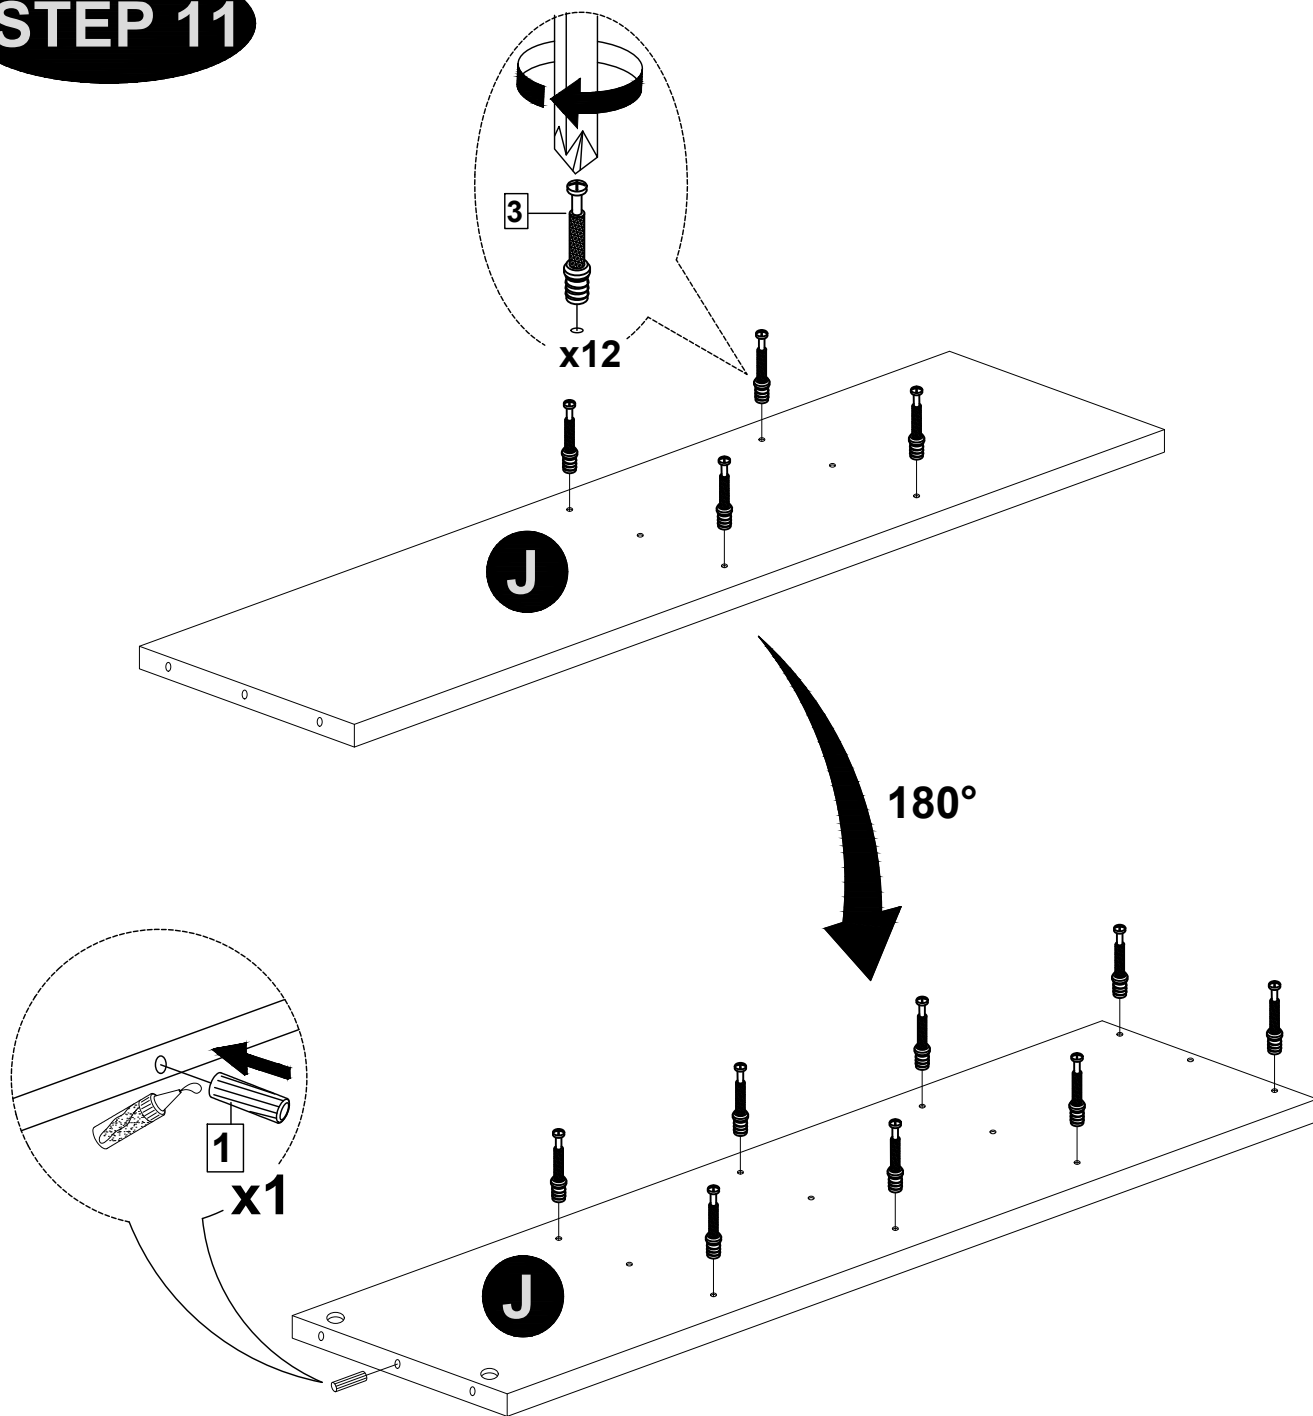


STEP 12

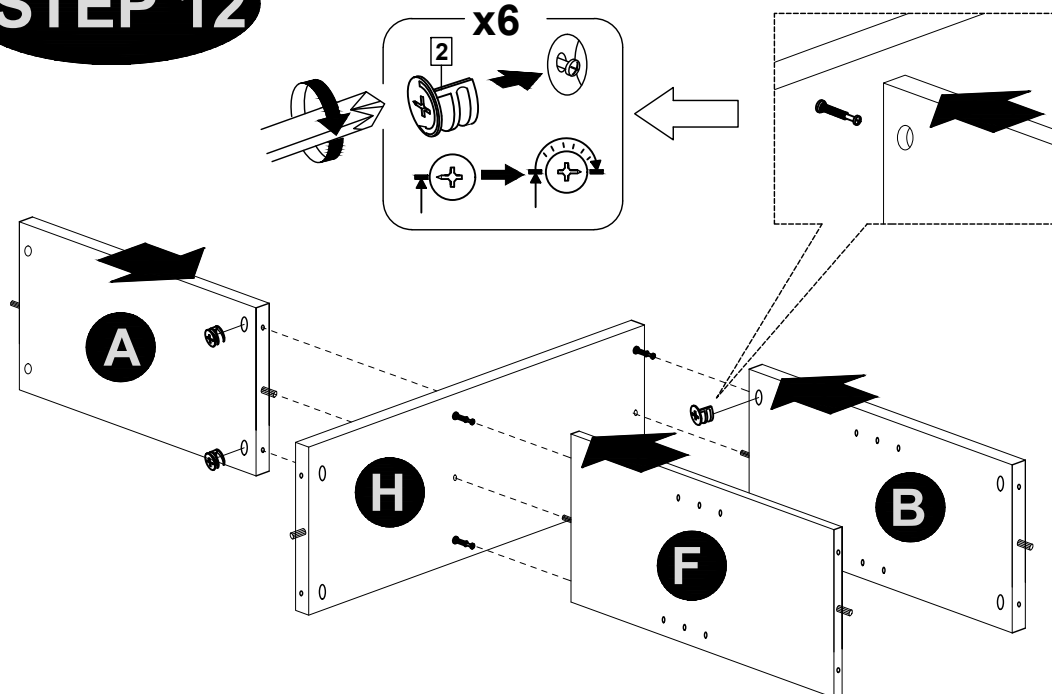


STEP 13

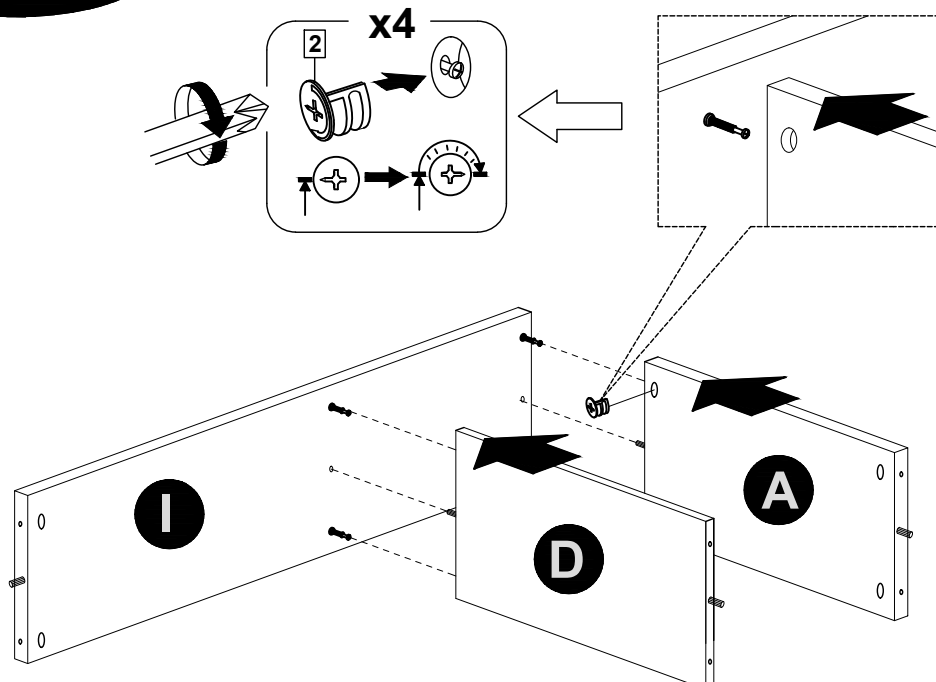


STEP 14

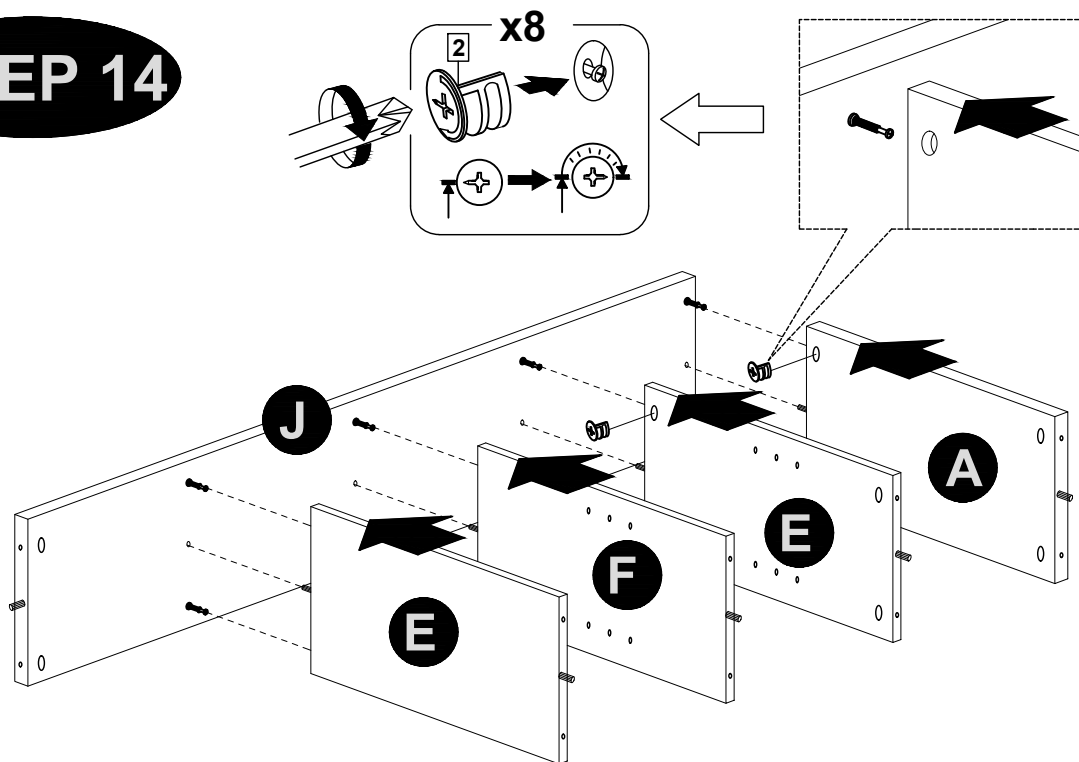


STEP 15

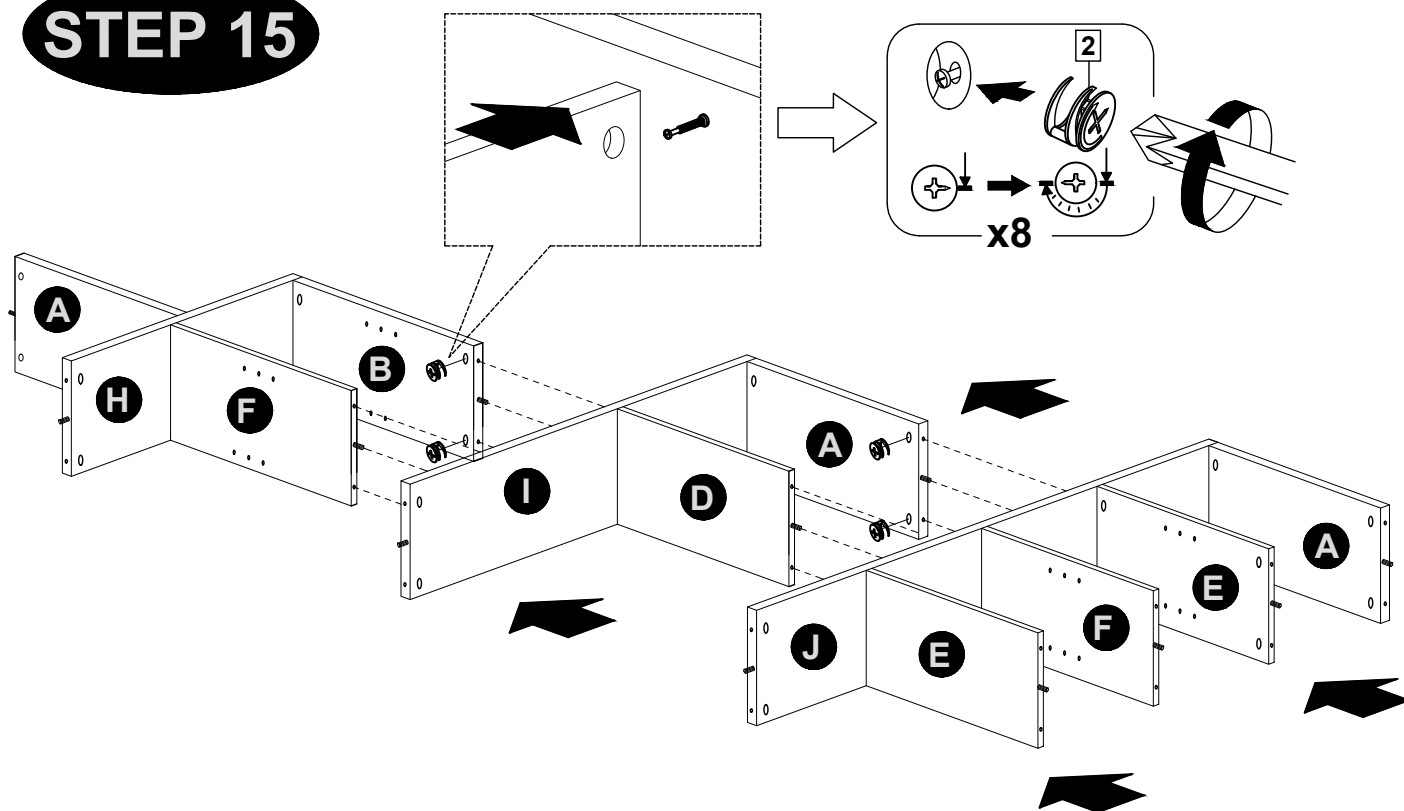


STEP 16

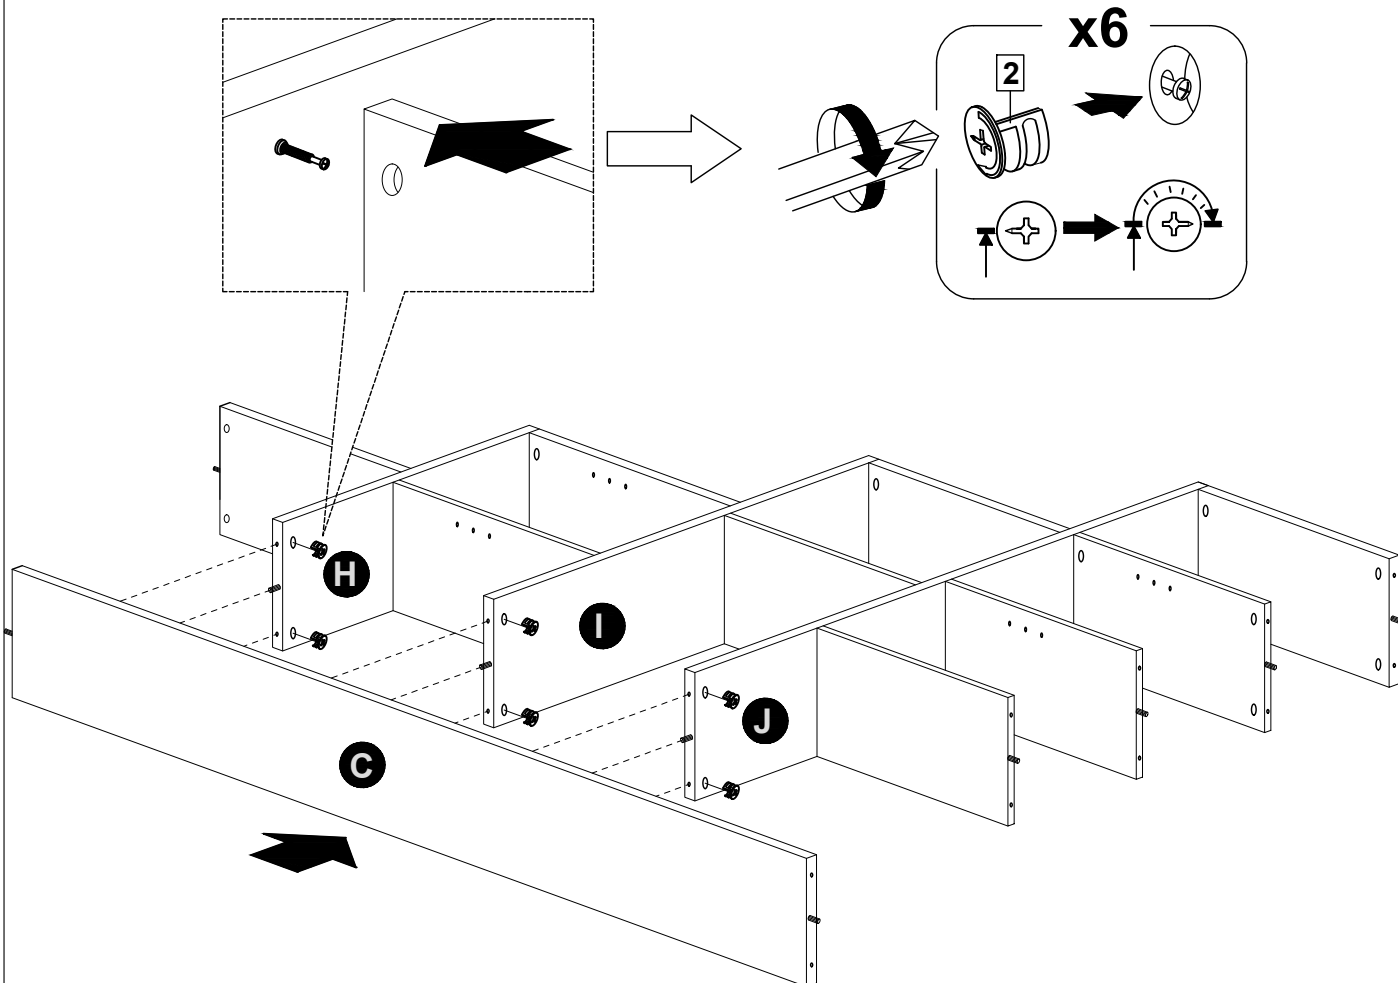


STEP 17

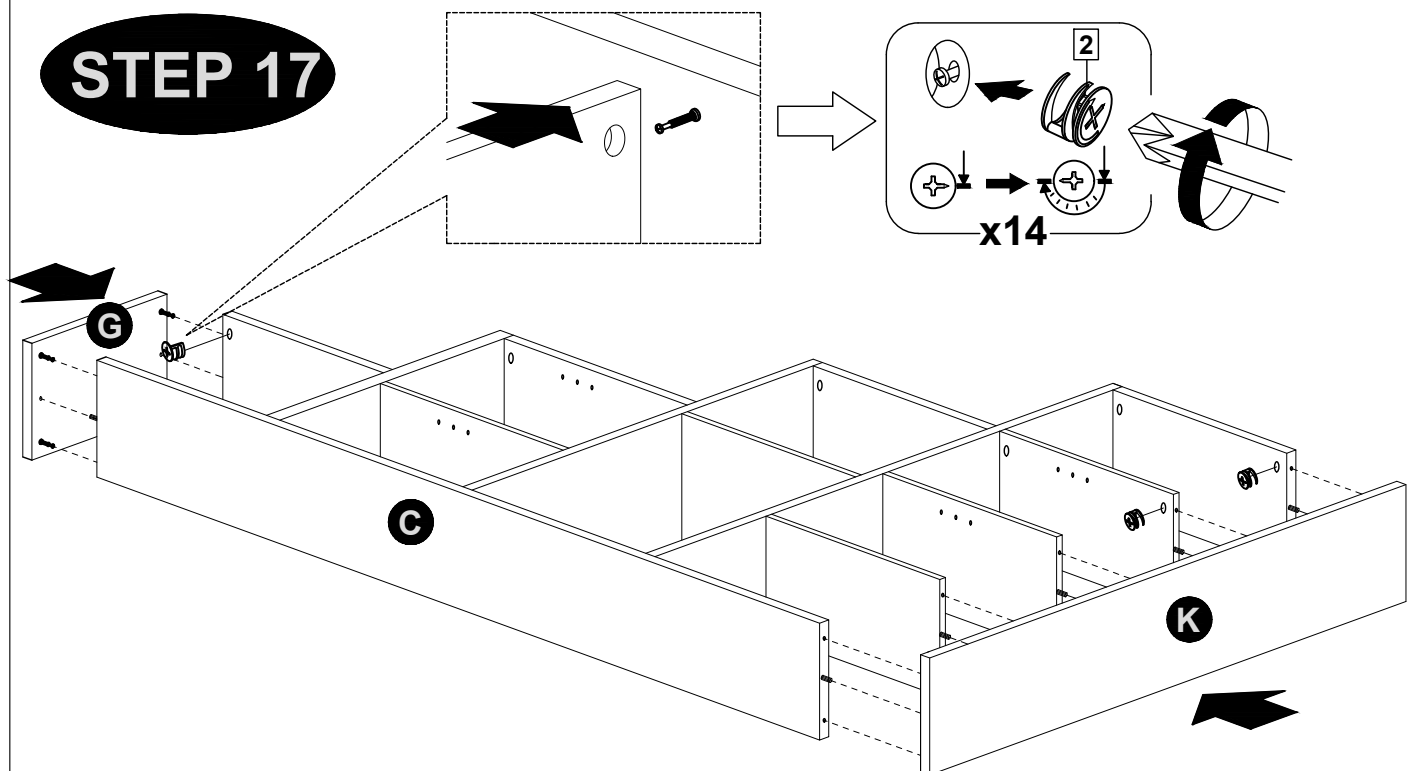


STEP 18

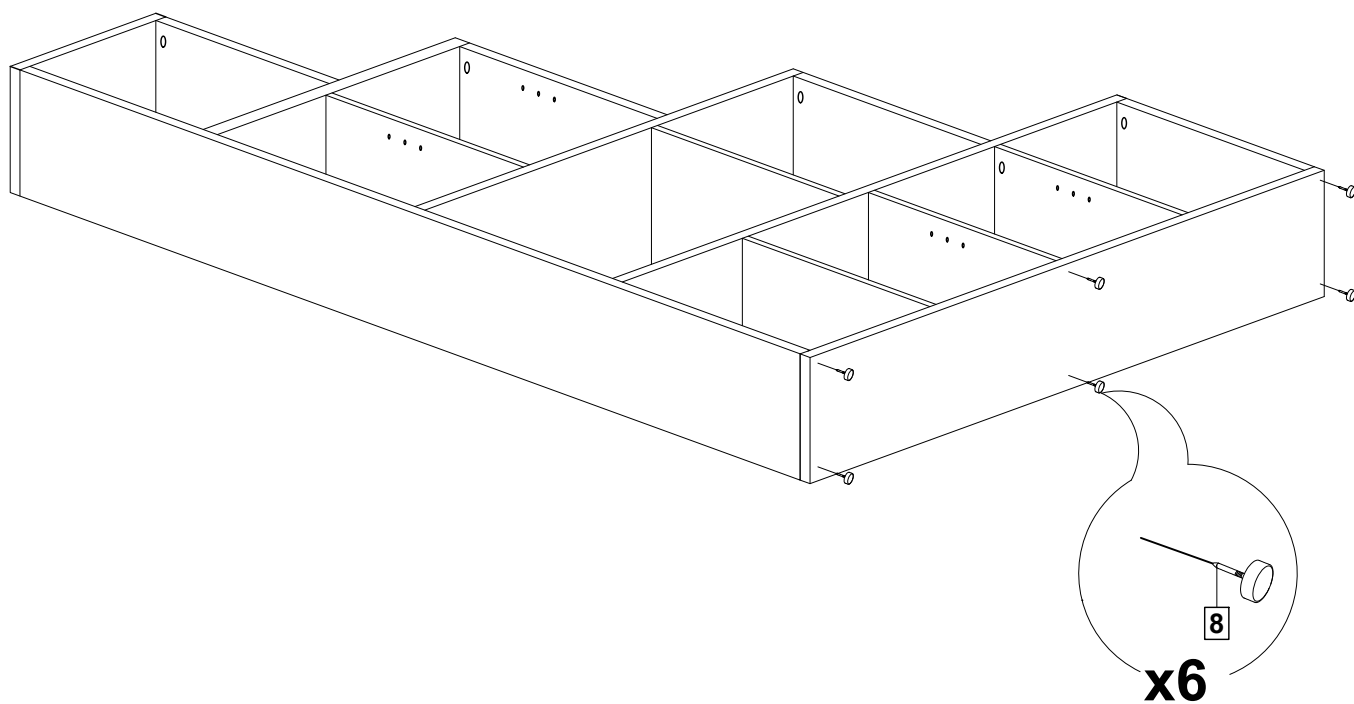


STEP 19

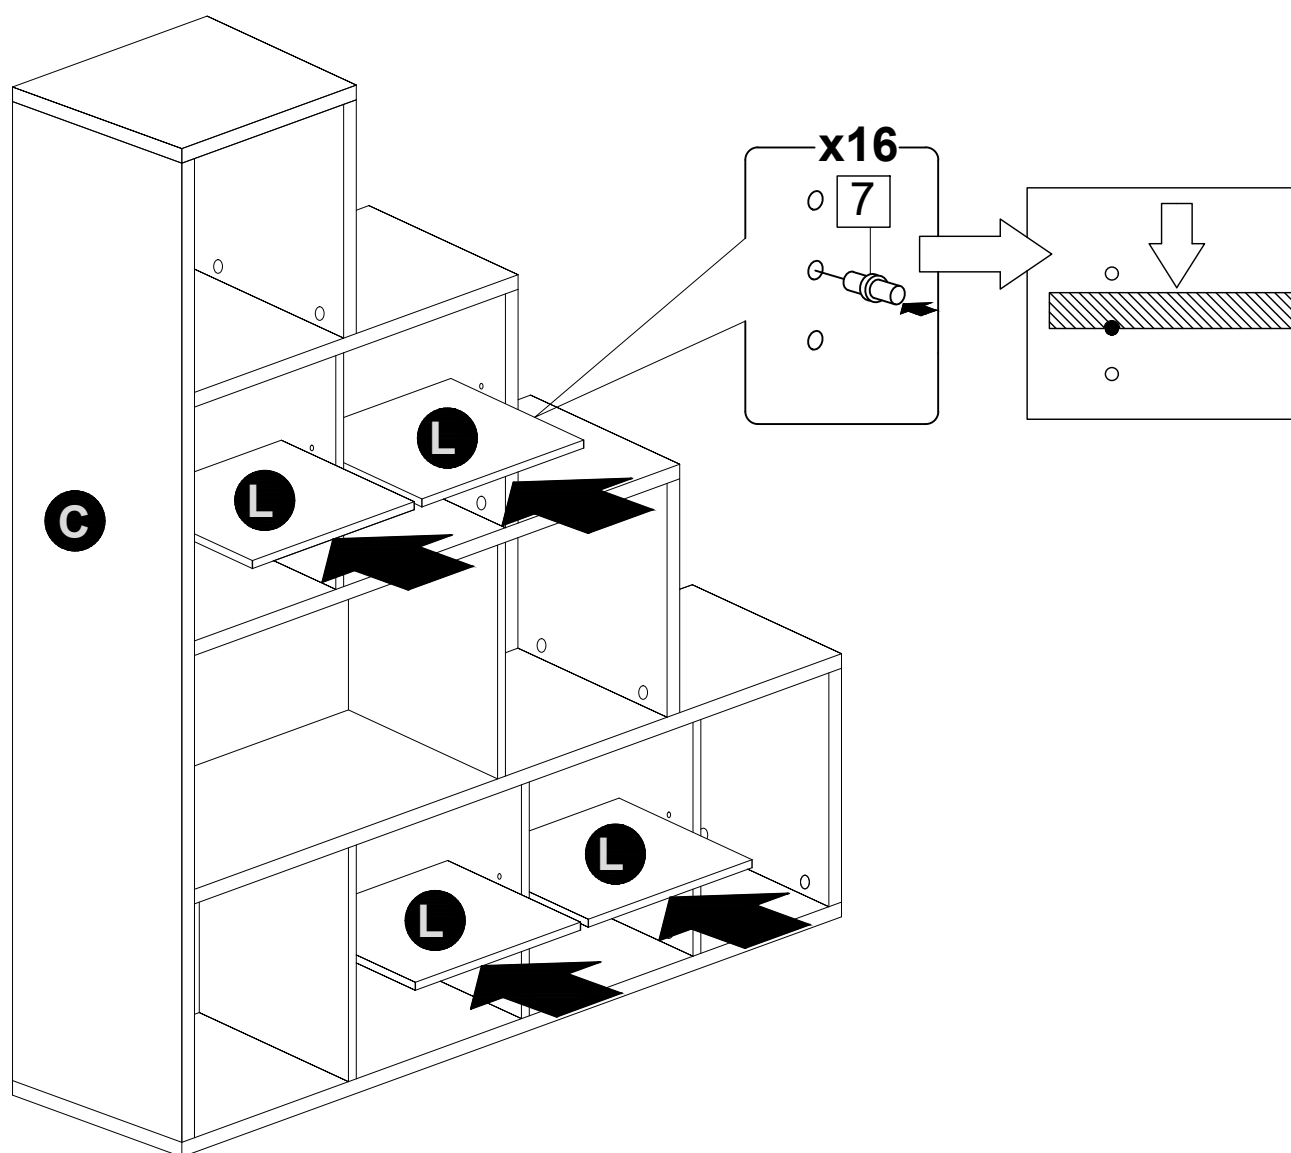


STEP 20

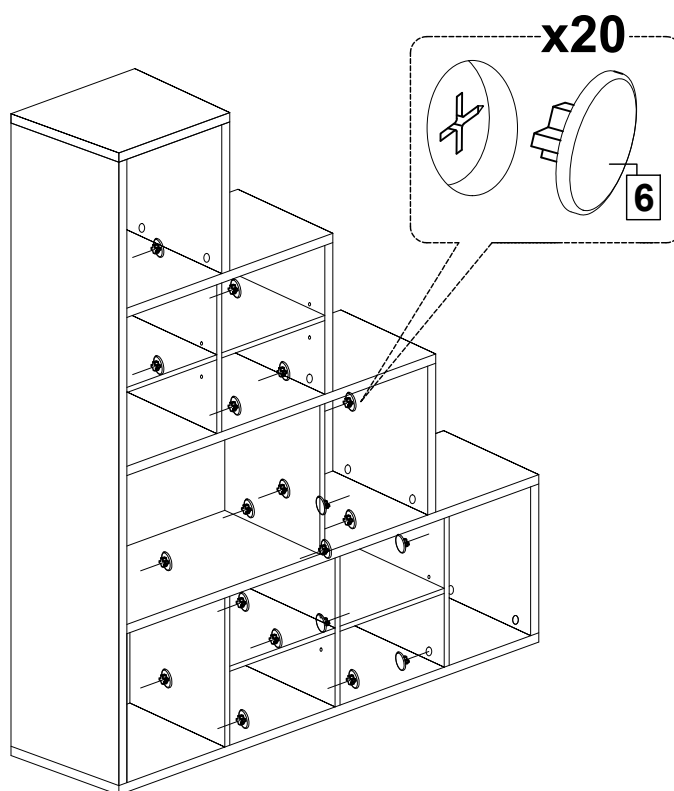

STEP 21

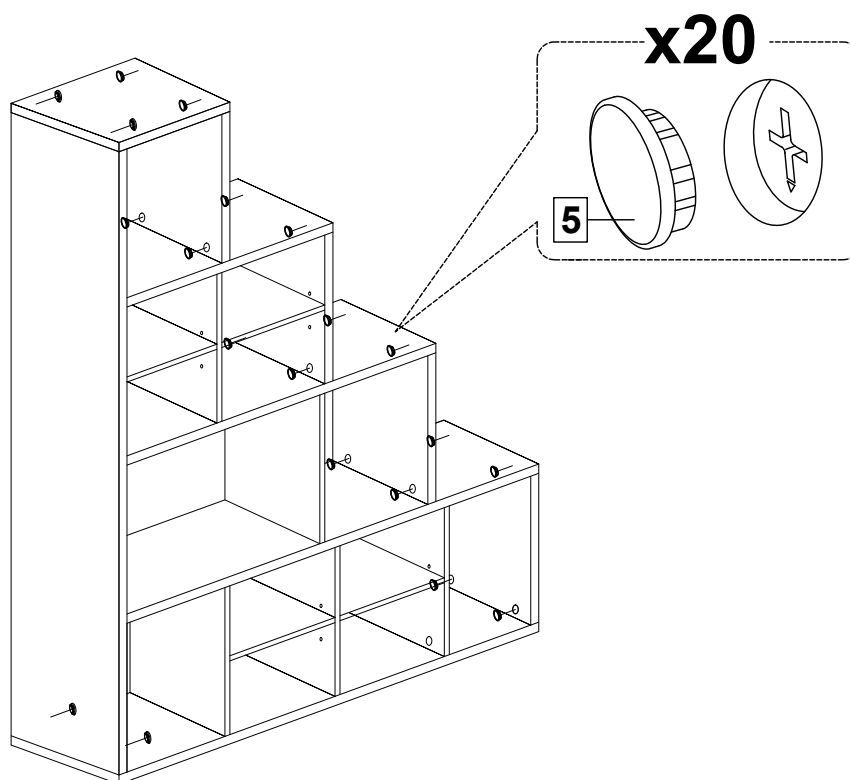


STEP 22

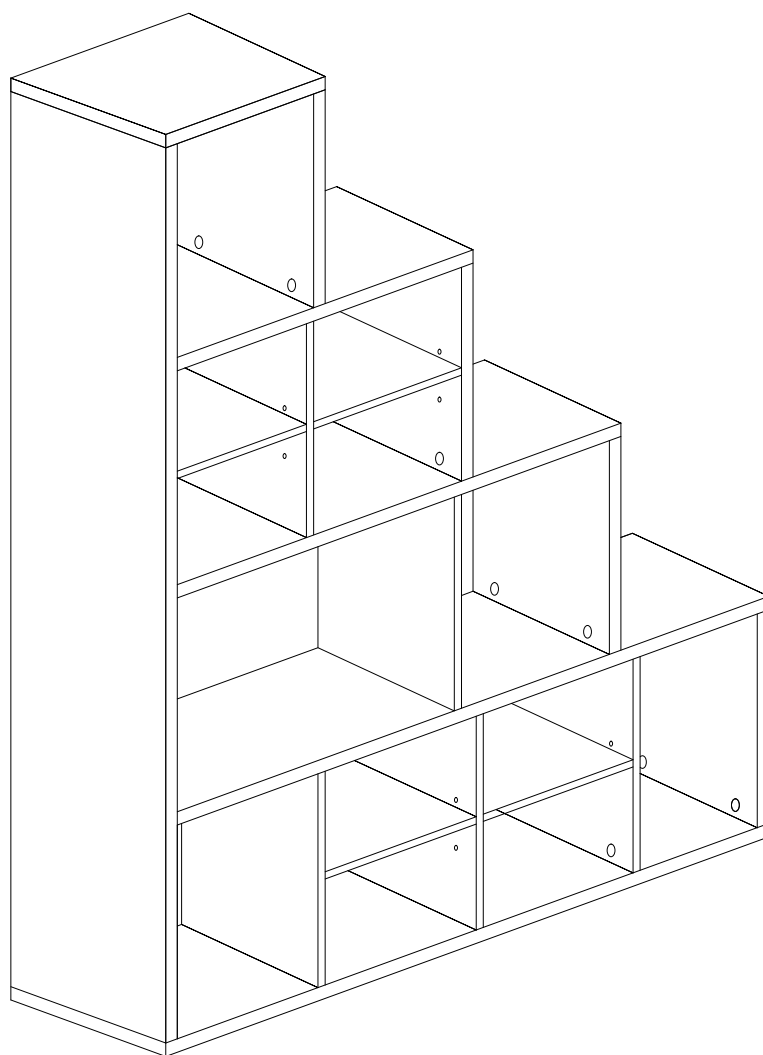

FITTING OF ANTI-TIP BRACKET


STEP 1 :

Insert screws through bracket on the cabinet.

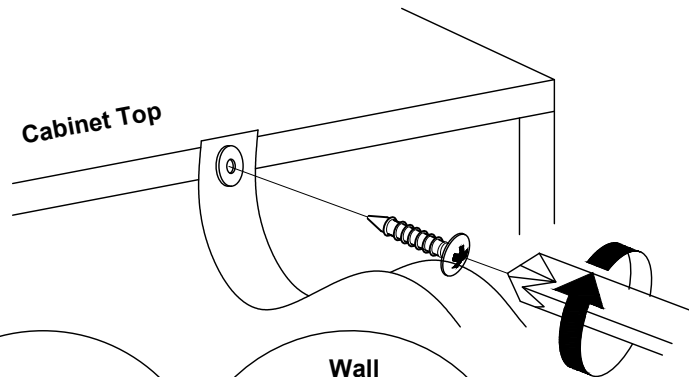

STEP 2 :


Make a mark on the wall through the bracket.

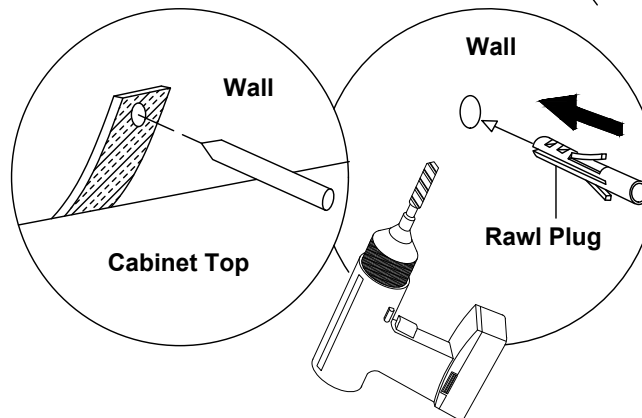

Drill a hole in the wall and insert the rawl plug.

STEP 3 :

Insert screw through bracket into hole in wall

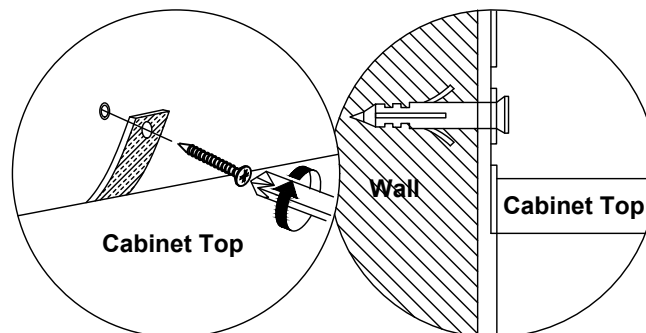

NOTE : Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used as a diameter greater than the diameter of the mounting hole on the bracket and that the fixing is safe and secure before use.

The screw supplied is to fix the anti-tip strap to the cabinet.

HARDWARE LIST



Anti-Tip Strap - 2pcs



M3.5 x 16MM - 2pcs