




BESIDE TABLE


USER MANUAL

1

ASSEMBLY INSTRUCTIONS

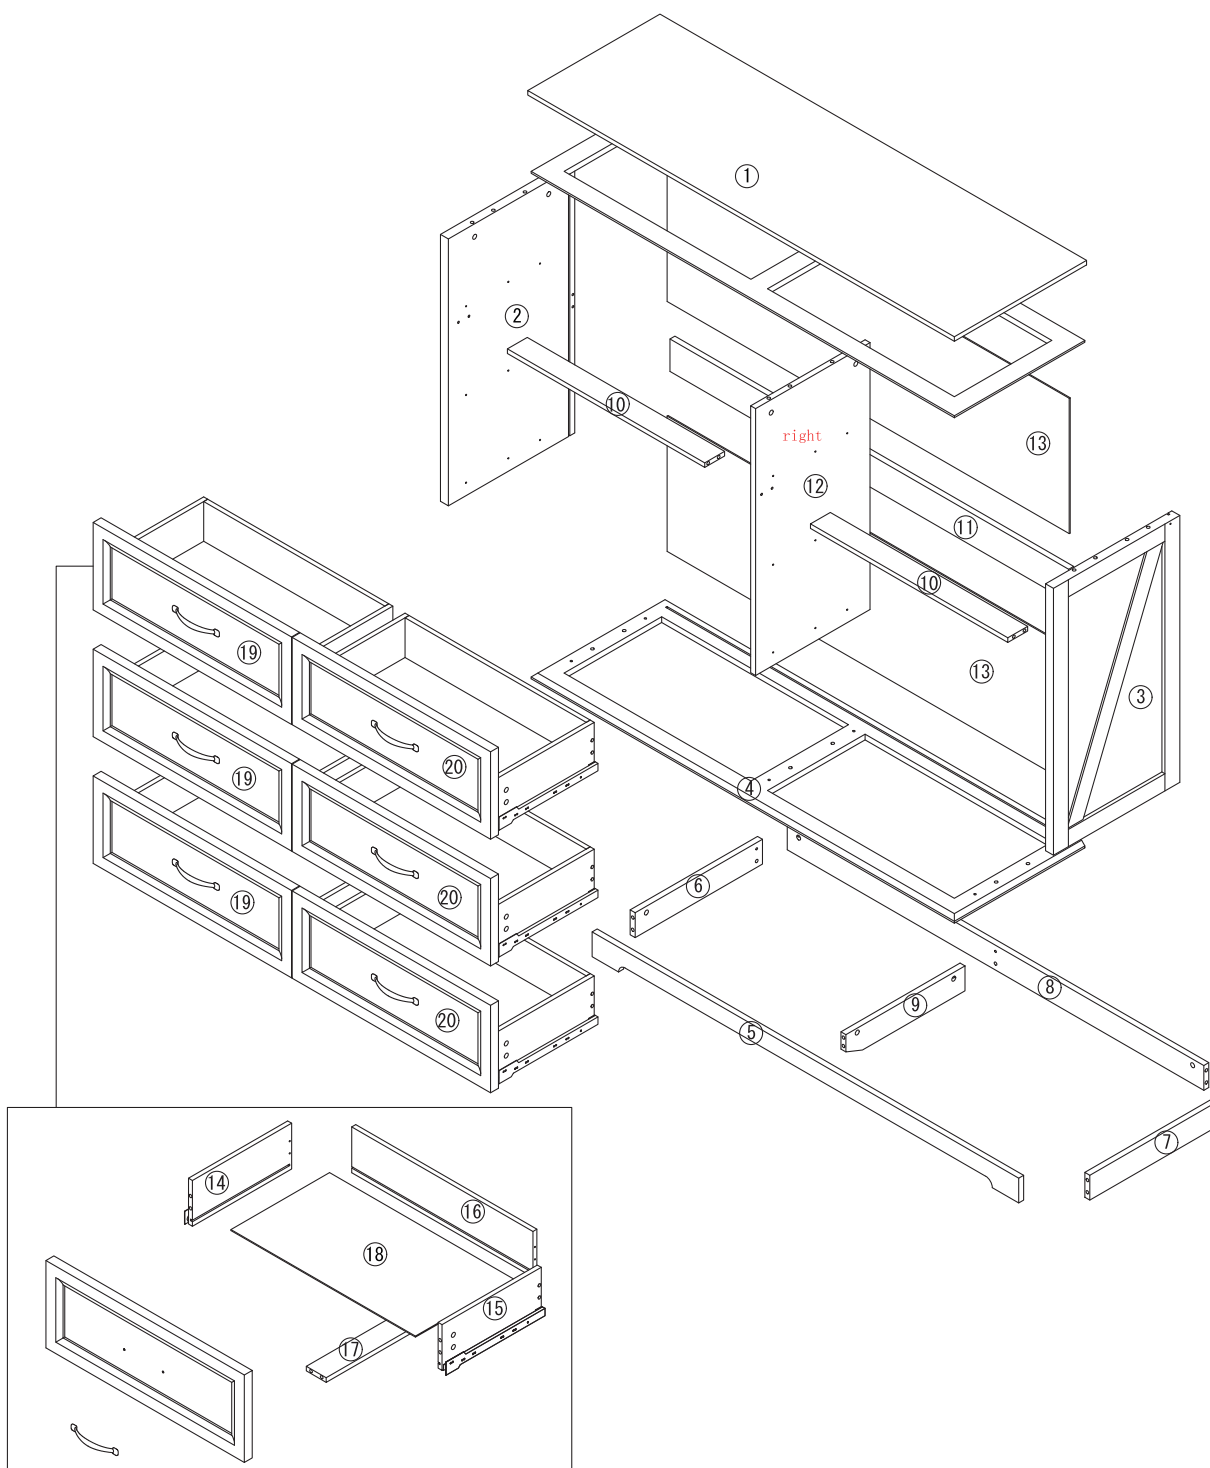


PACKAGING LIST

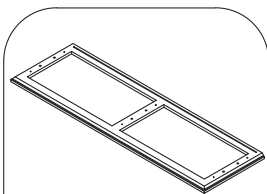


①

1 pc

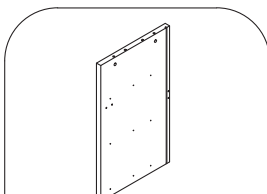


②

1 pc

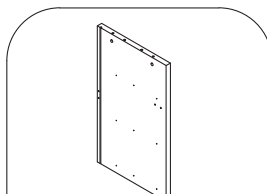


③

1 pc

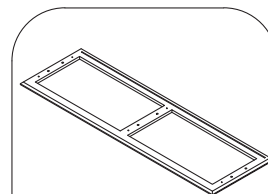


④

1 pc

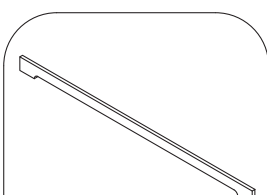


⑤

1 pc

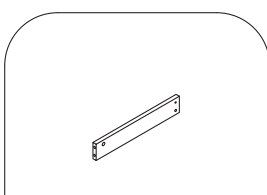


⑥

1 pc

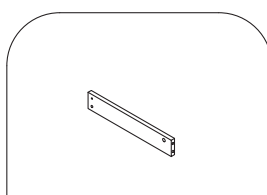


⑦

1 pc

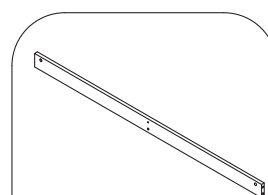


⑧

1 pc

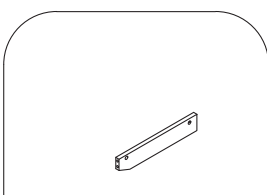


⑨

1 pc

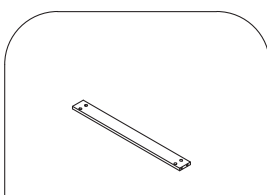


⑩

2 pcs

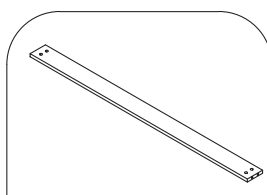


⑪

1 pc

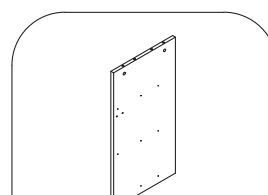


⑫

1 pc

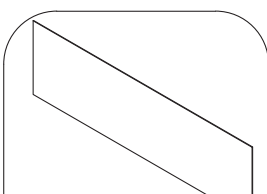


⑬

2 pcs

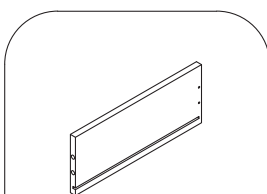


⑭

6 pcs

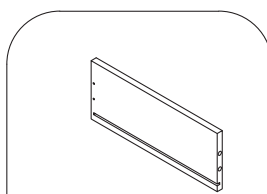


⑮

6 pcs

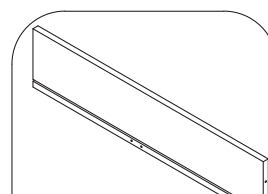


⑯

6 pcs

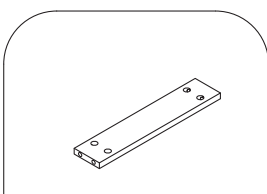


⑰

6 pcs

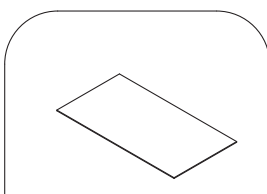


⑱

6 pcs

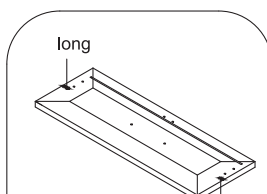

⑲


3 pcs

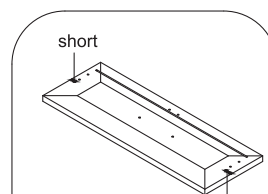


⑳

3 pcs


PACKAGING LIST

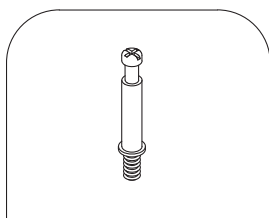


(A) 72+2 pcs

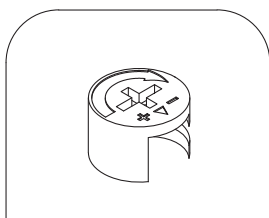

(B) 72+2 pcs

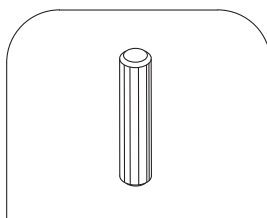


(C) 18+1 pcs

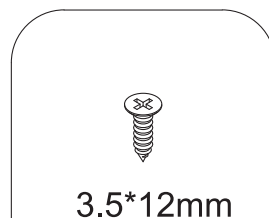


3.5*12mm


(D) 108+3 pcs

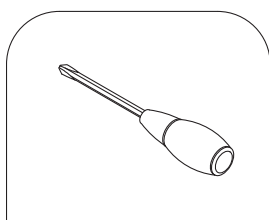

(E) 1 pc

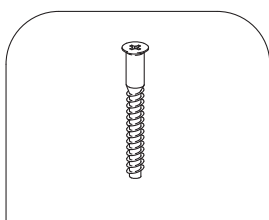


(F) 30+2 pcs

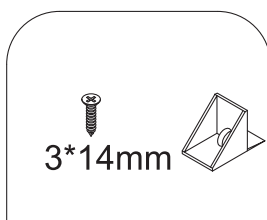


3*14mm


(G) 12+1 set

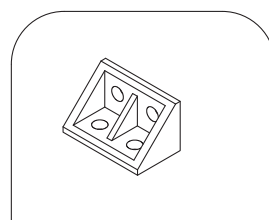


(H) 12+1 pcs

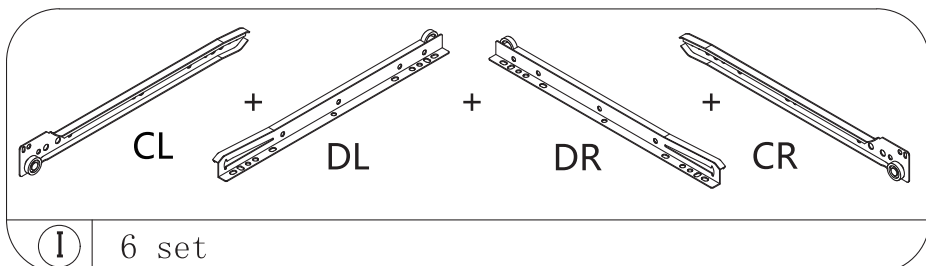


(I) 6 set

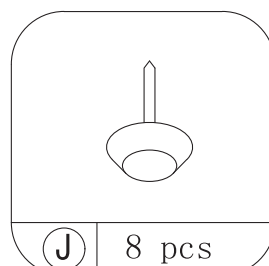

(J) 8 pcs

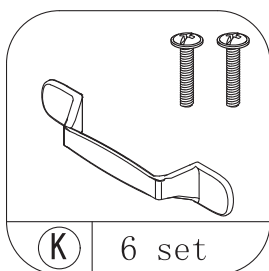

(K) 6 set

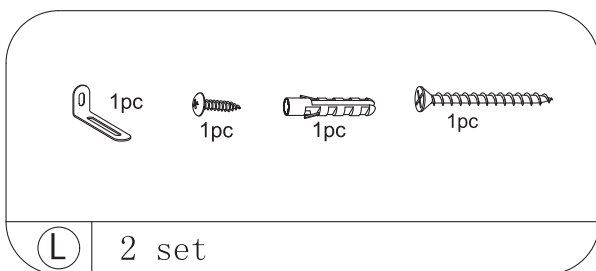

(L) 2 set

4

Recommended for two-person. Estimated time: 1 hour.

Suggested tools:




Phillips Screwdriver




Slotted Screwdriver

NOT INCLUDED


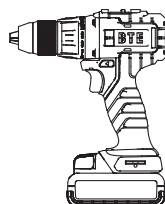


Electric Drill



Hammer

STEP 1




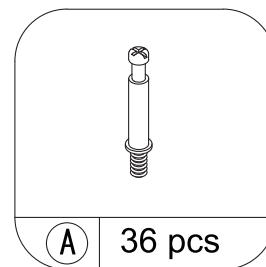
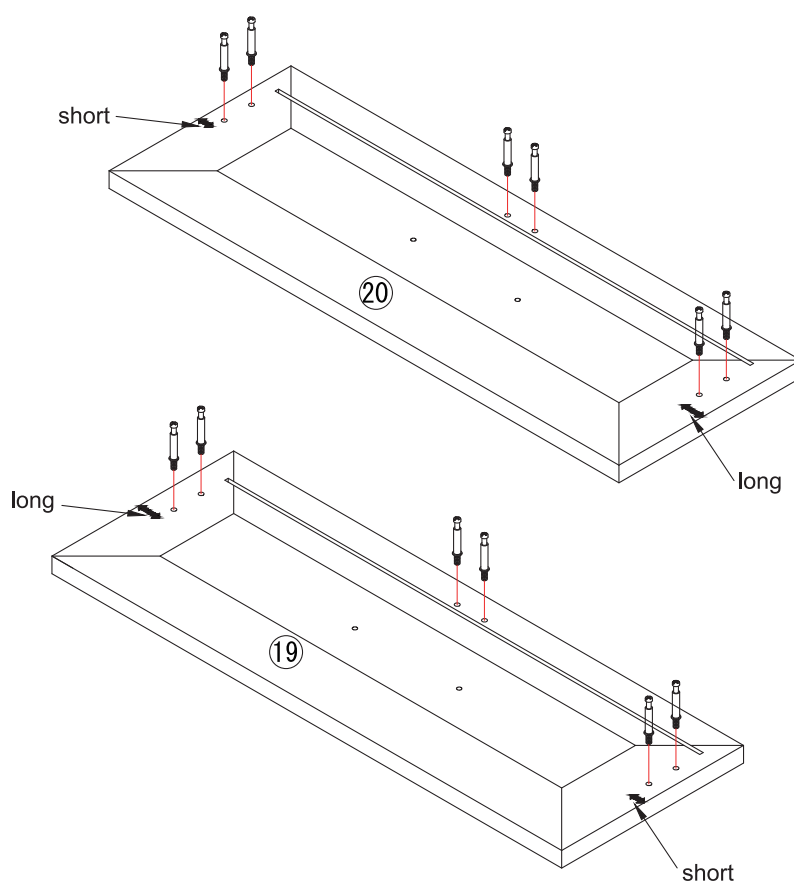


× 3

× 3

5


STEP 2

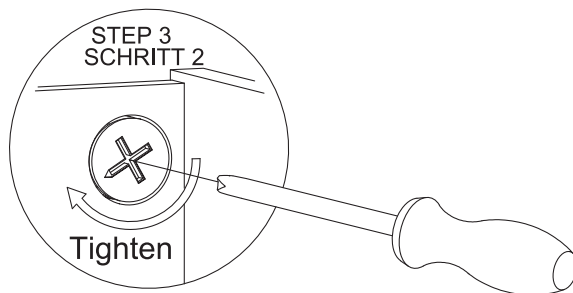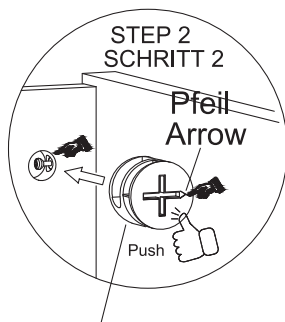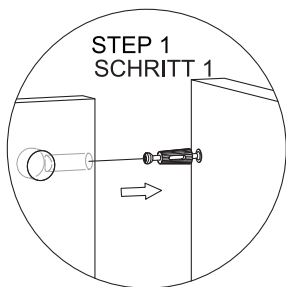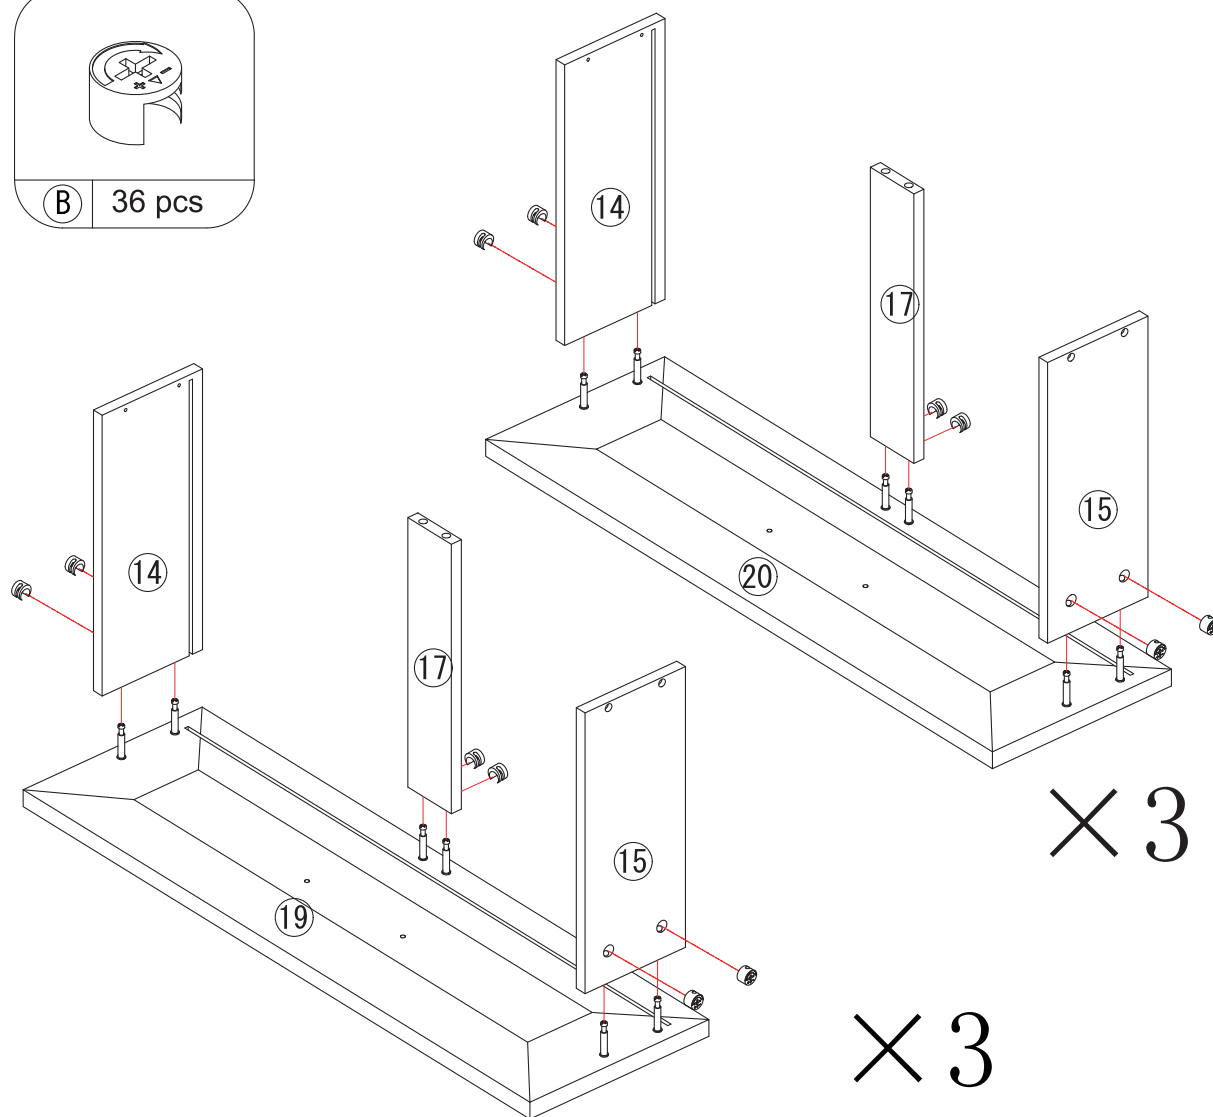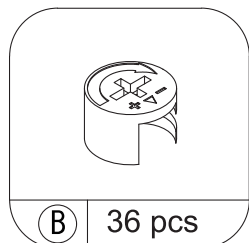

Push the KD cam all the way into the hole before tightening.



6

STEP 3

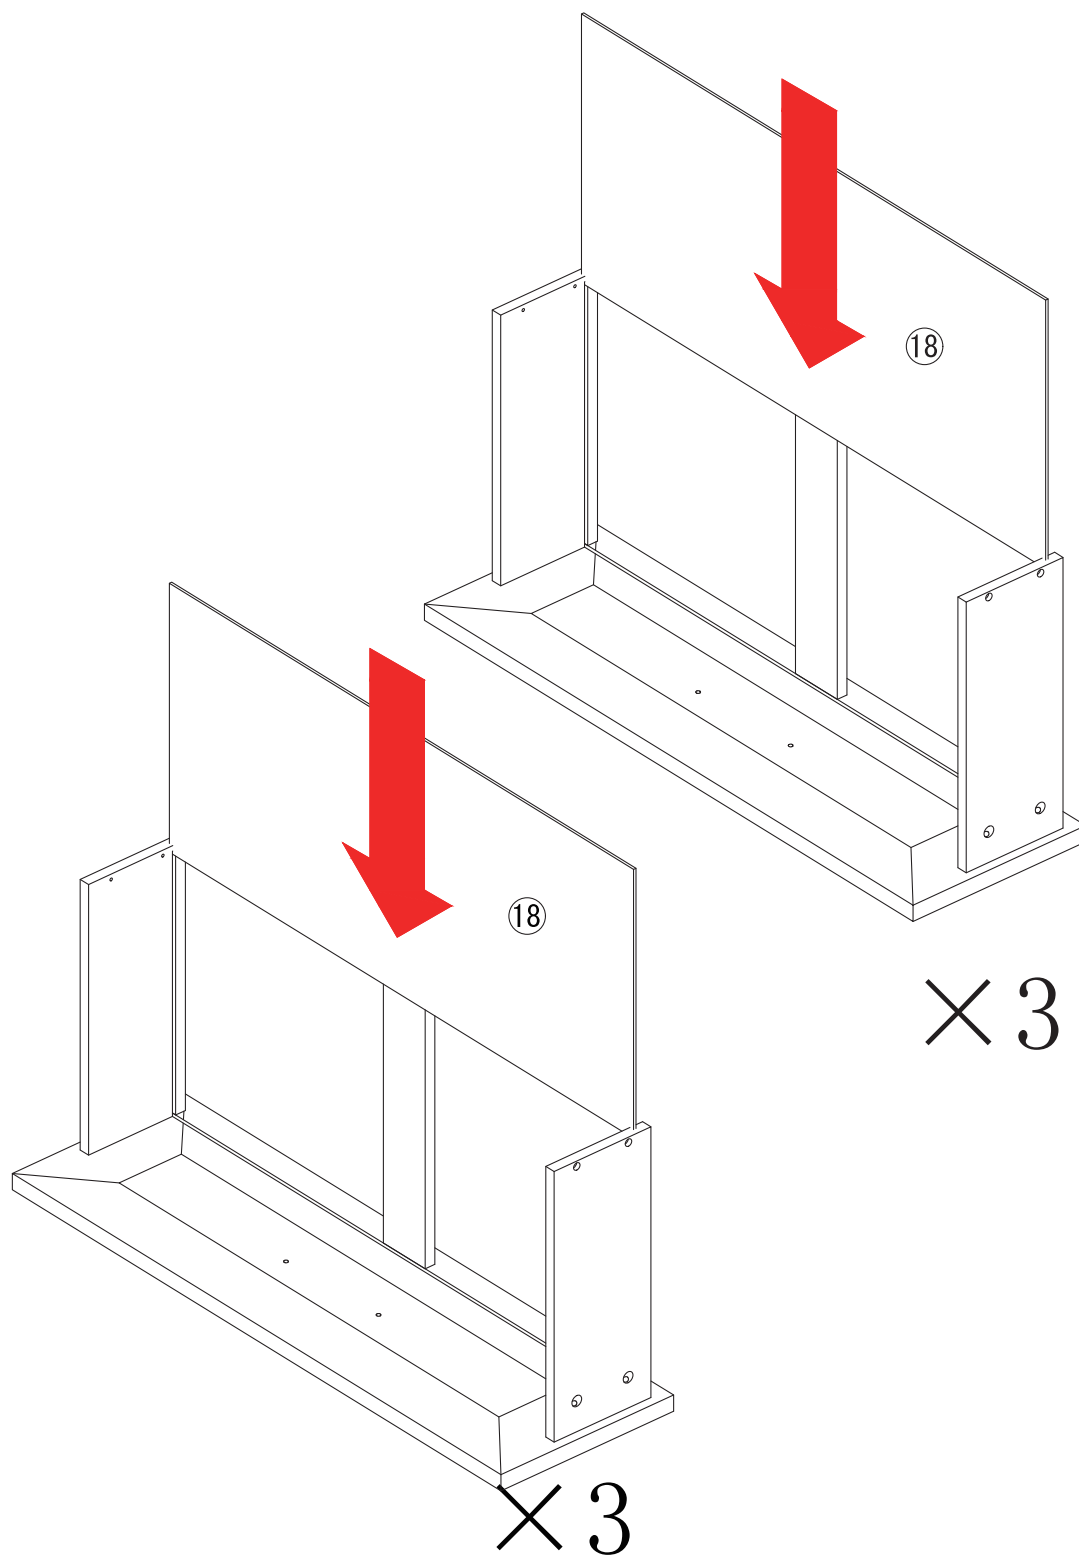




7

STEP 4

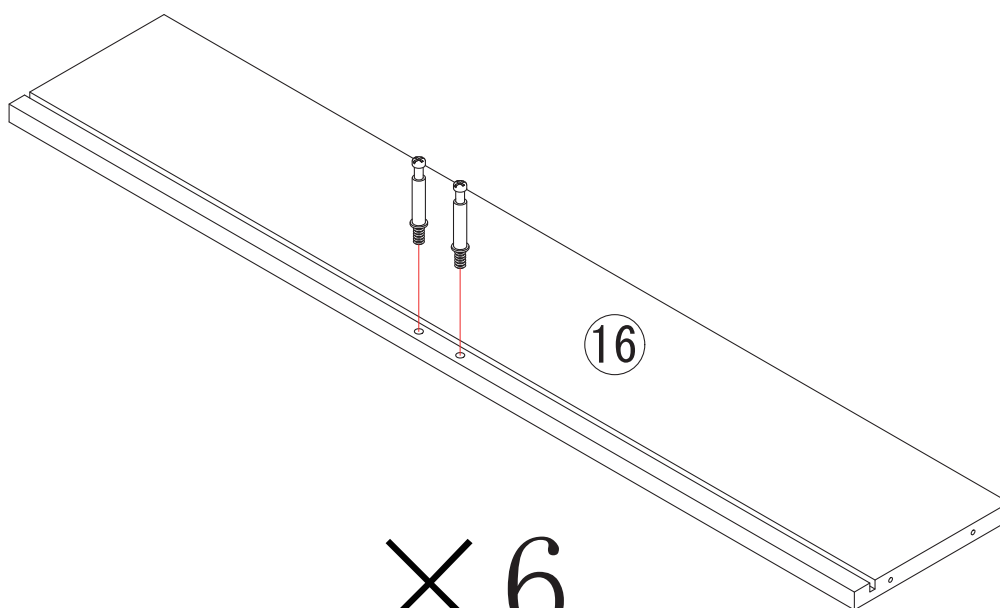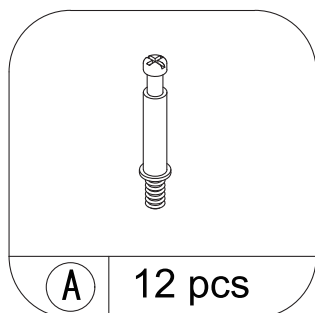




8

STEP 5

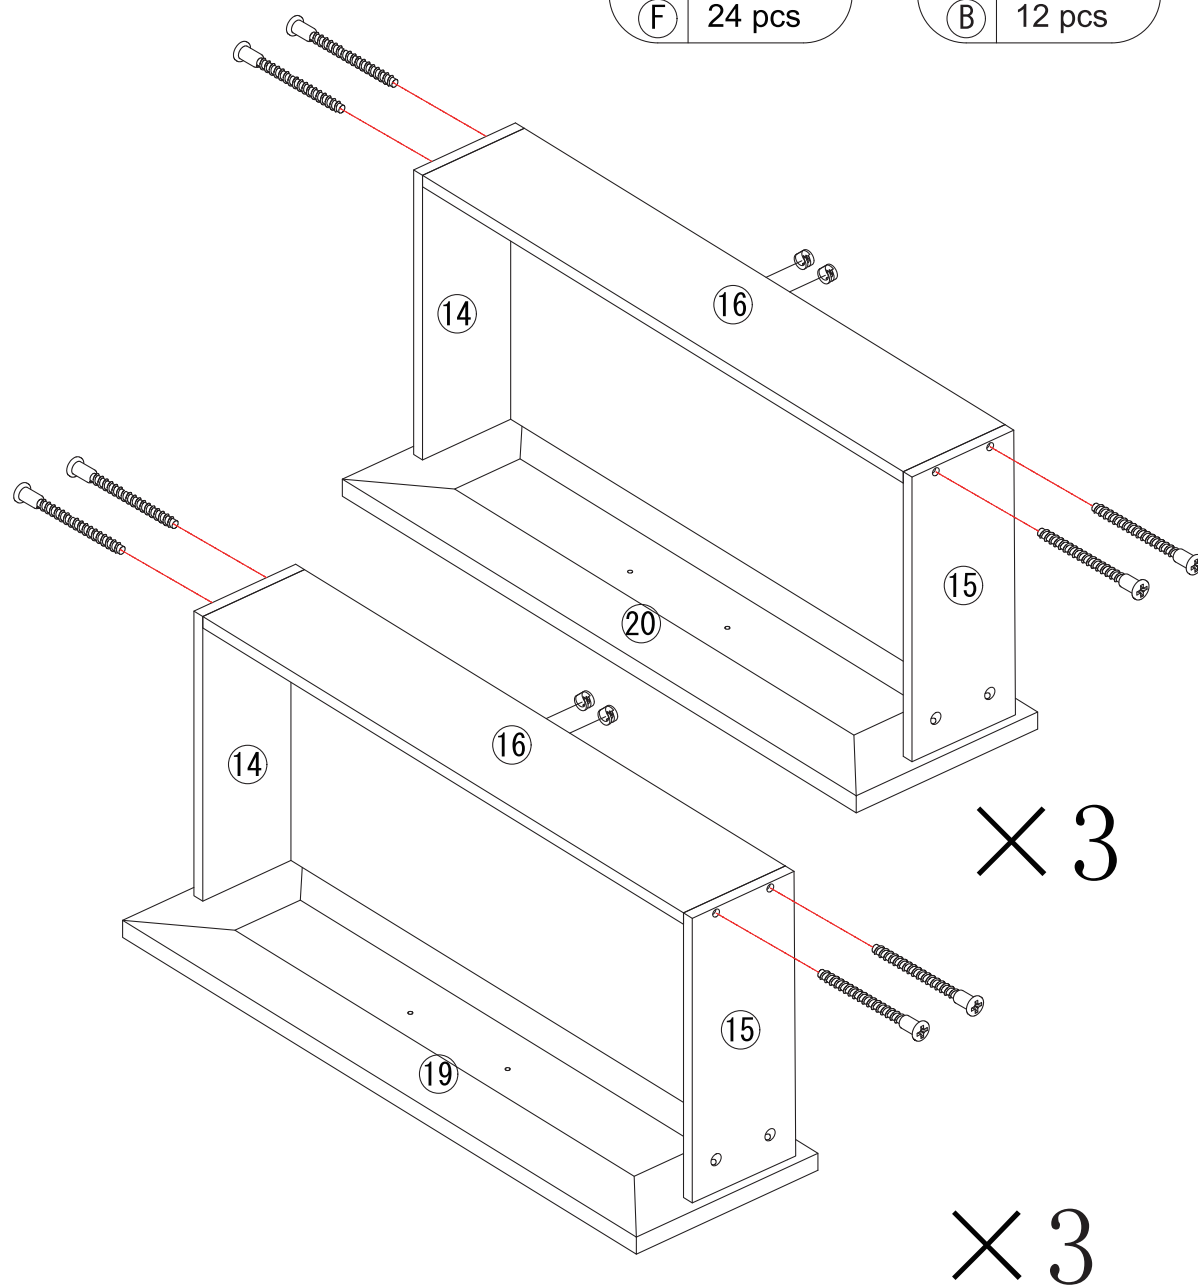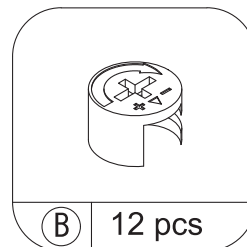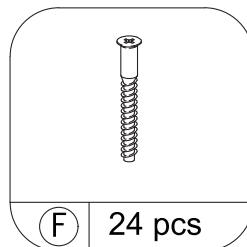





9

STEP 6

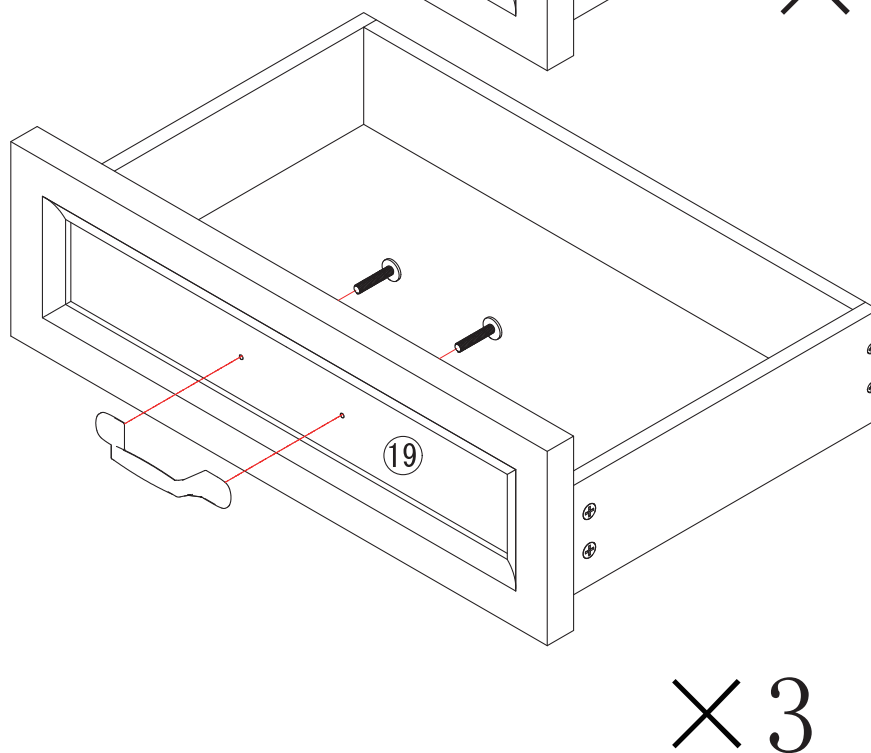
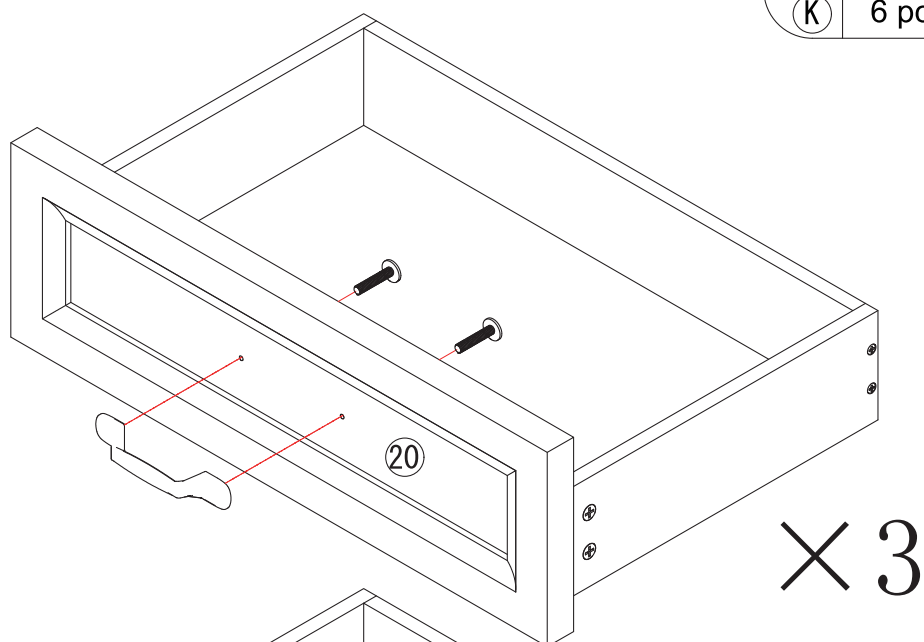
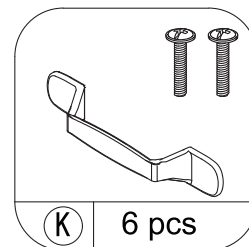


10







STEP 7

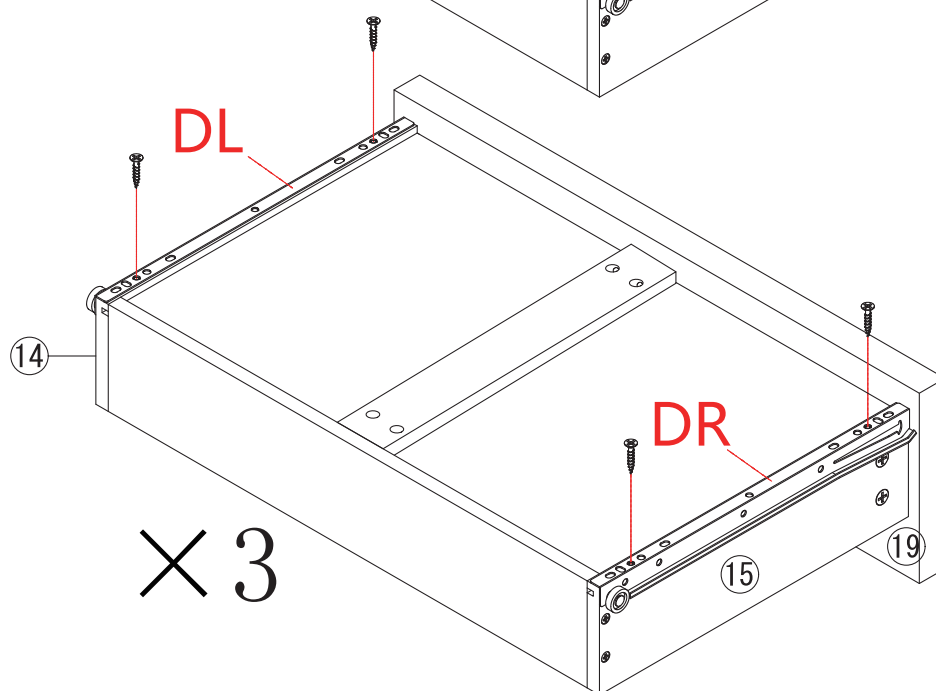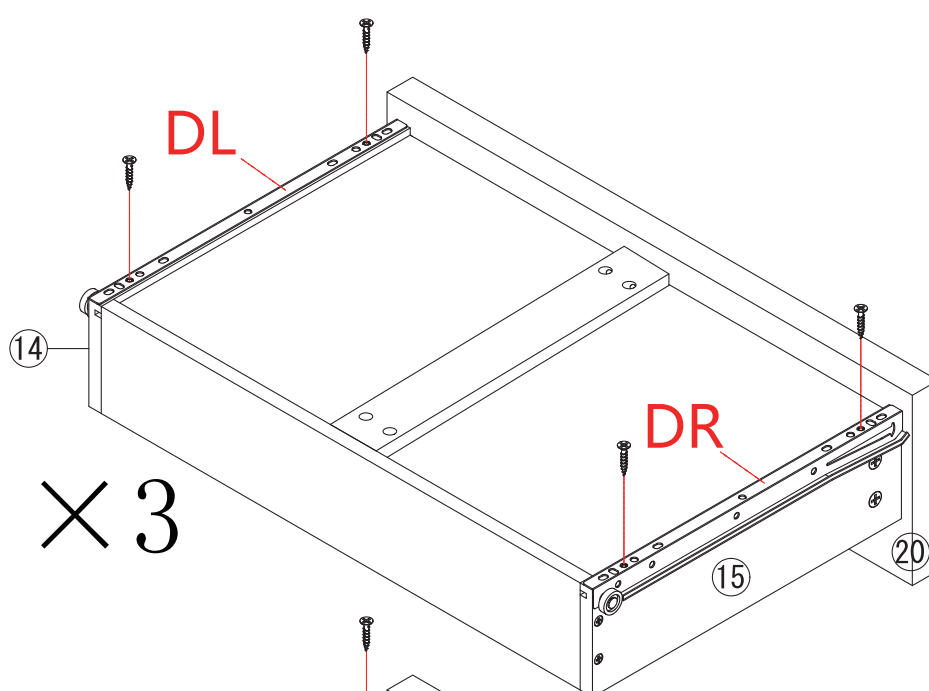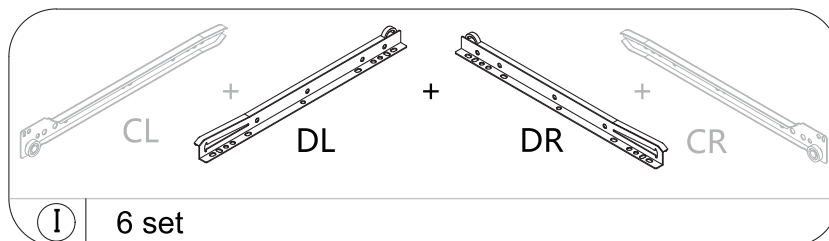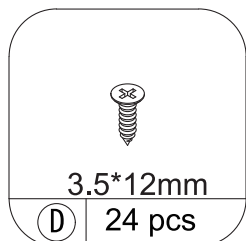

STEP 8

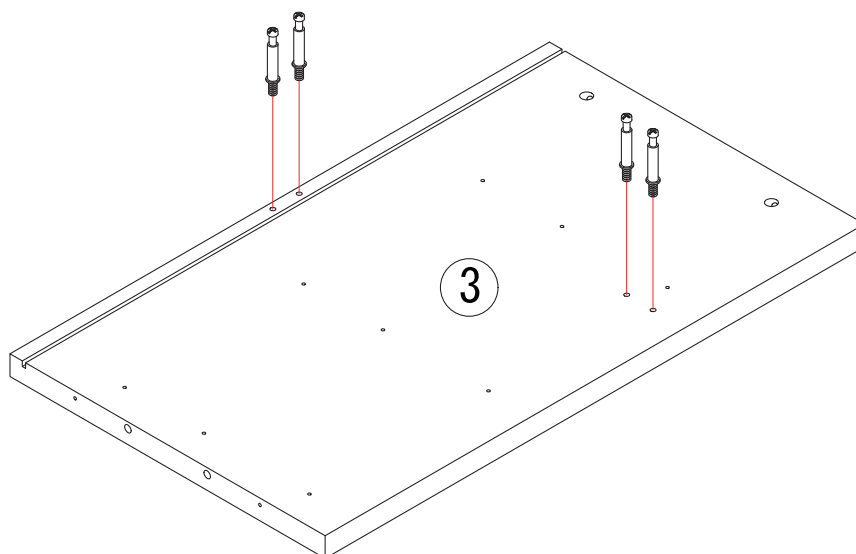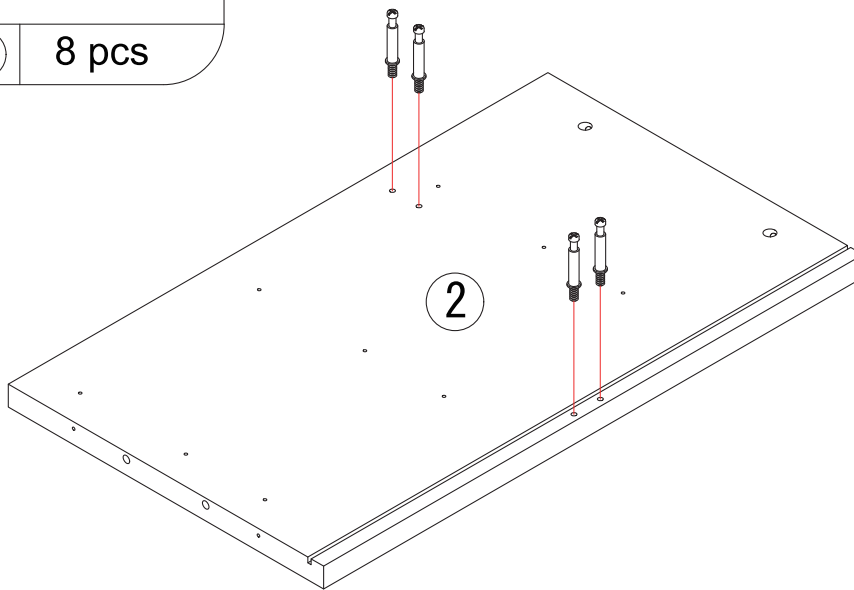
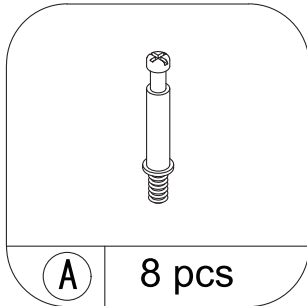


STEP 9

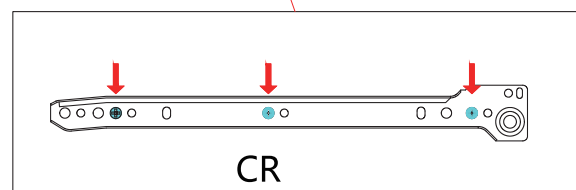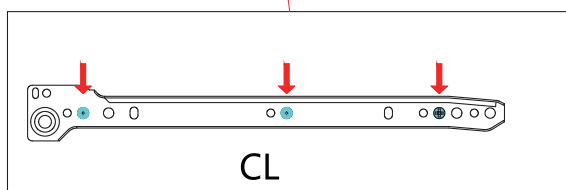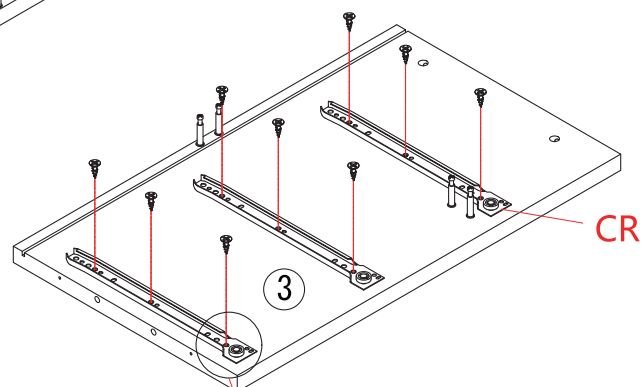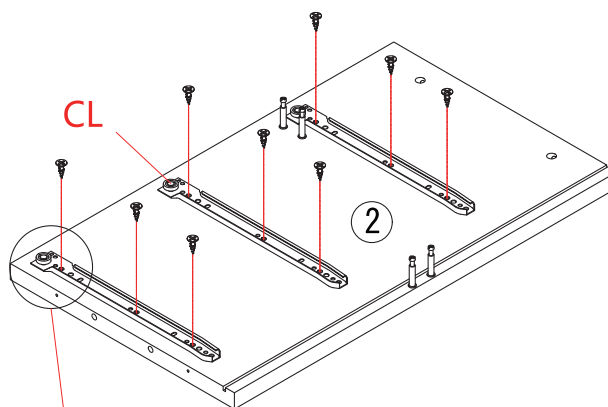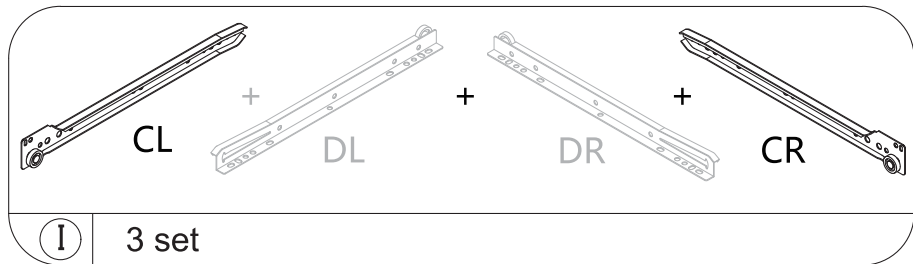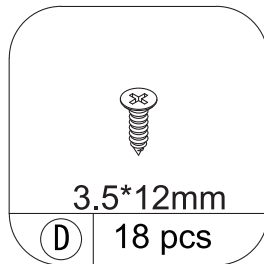


13






STEP 10

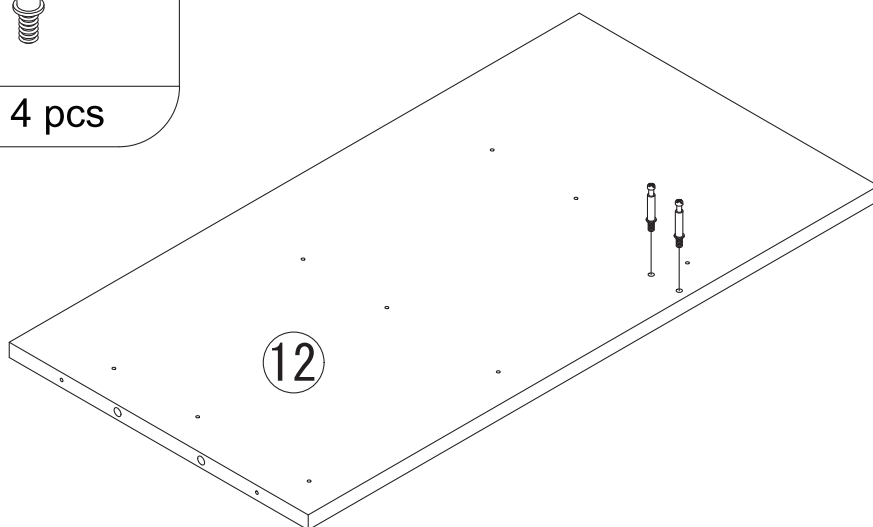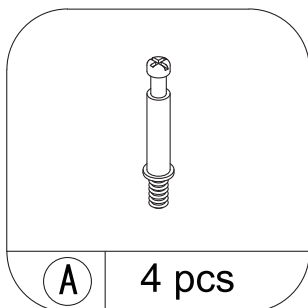

Flip 180°


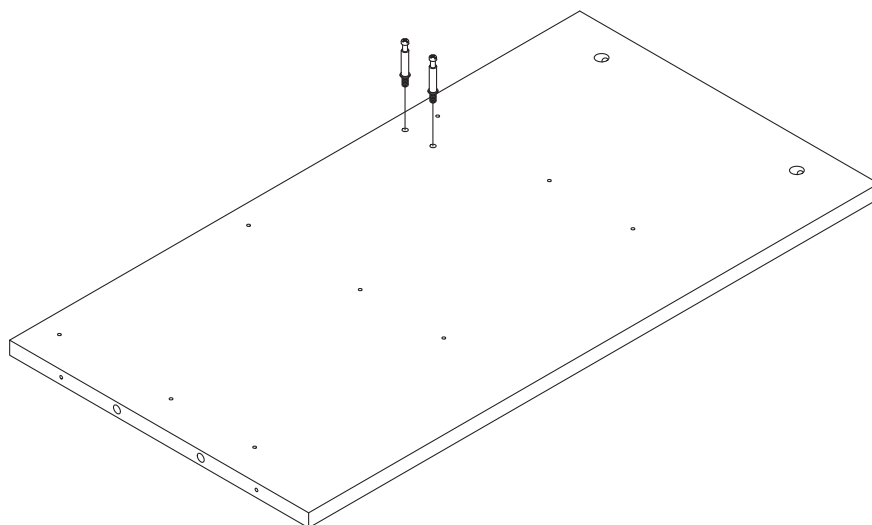


STEP 11

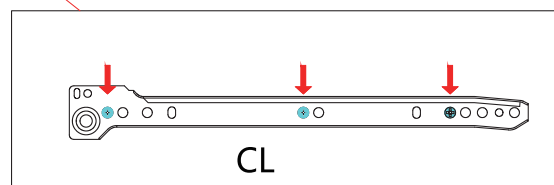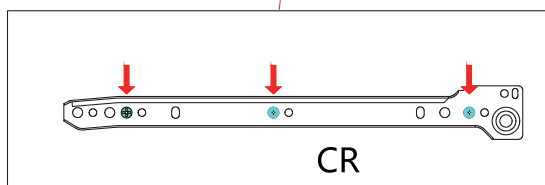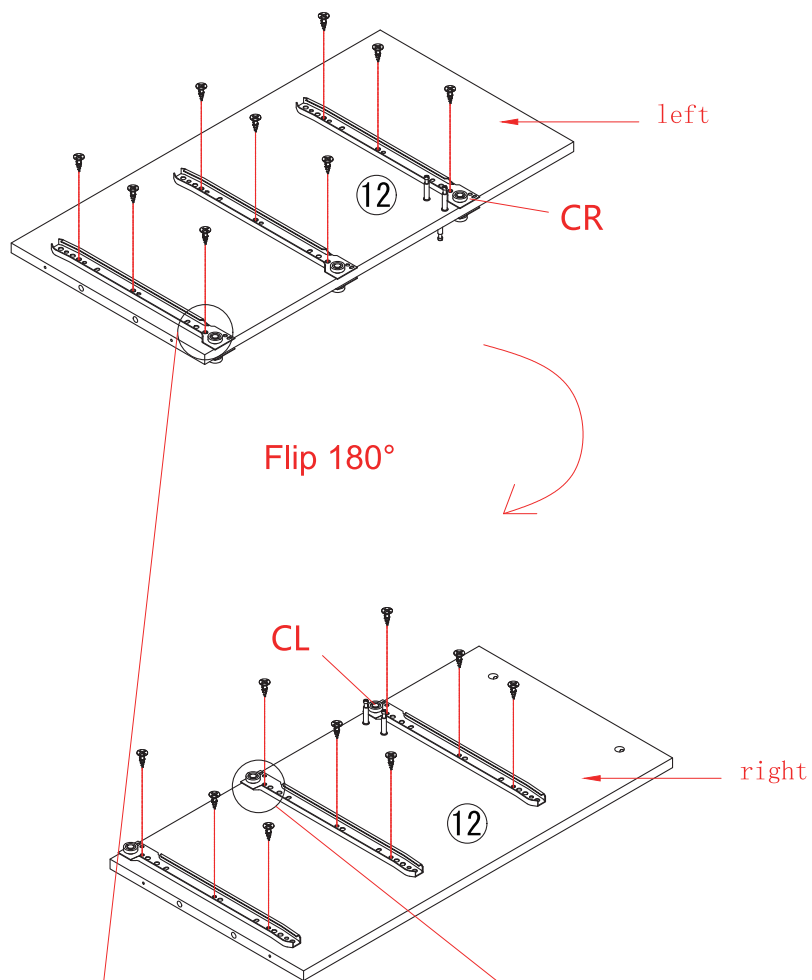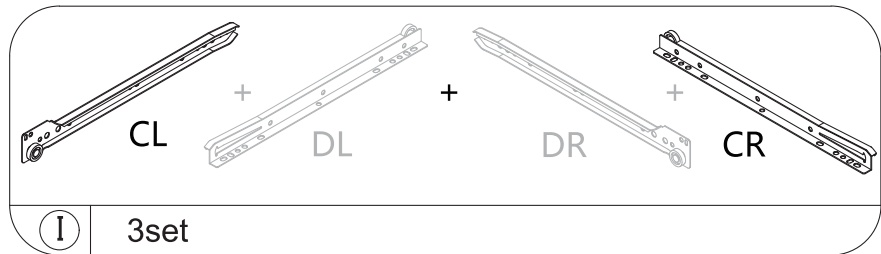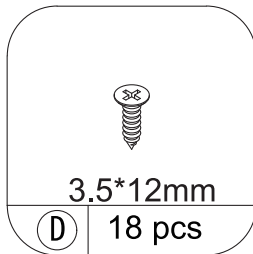


15

STEP 12

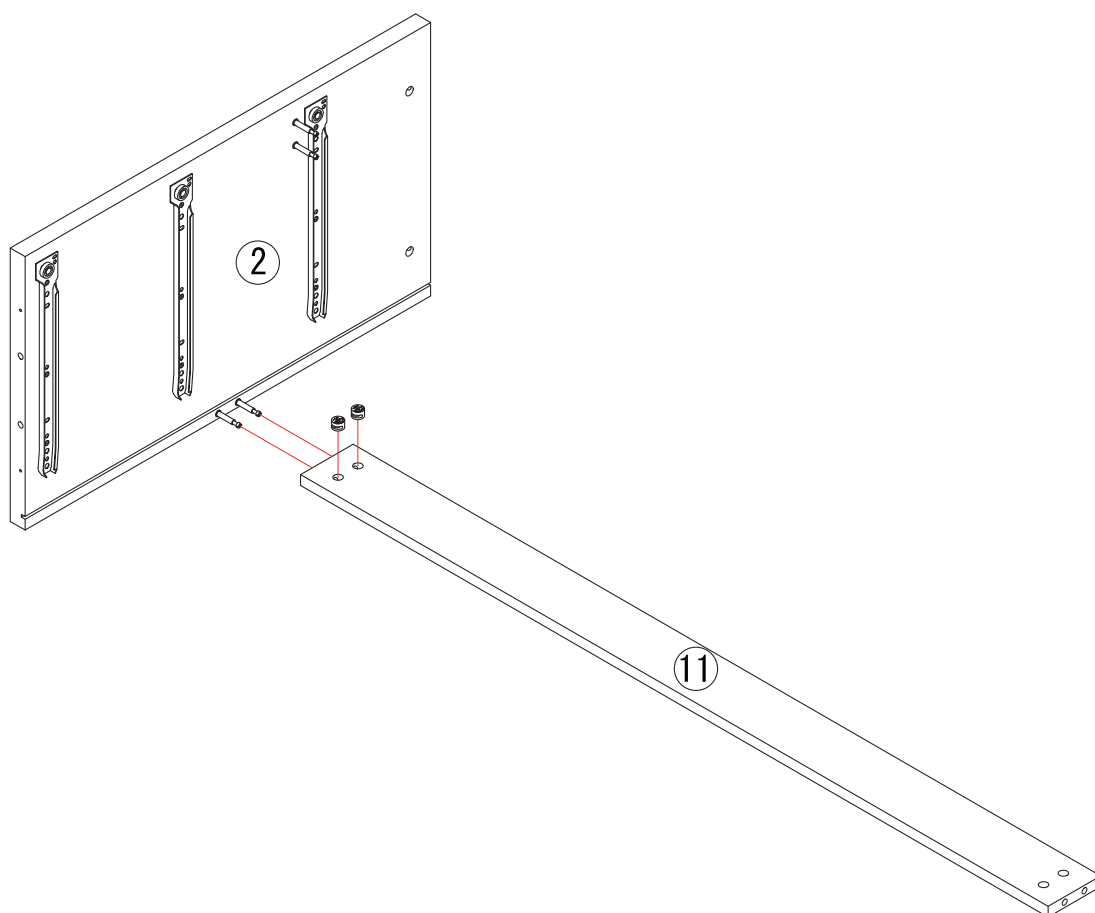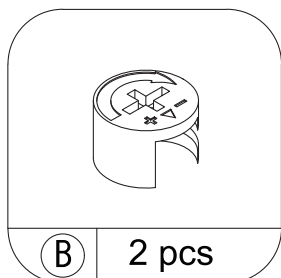



16

STEP 13

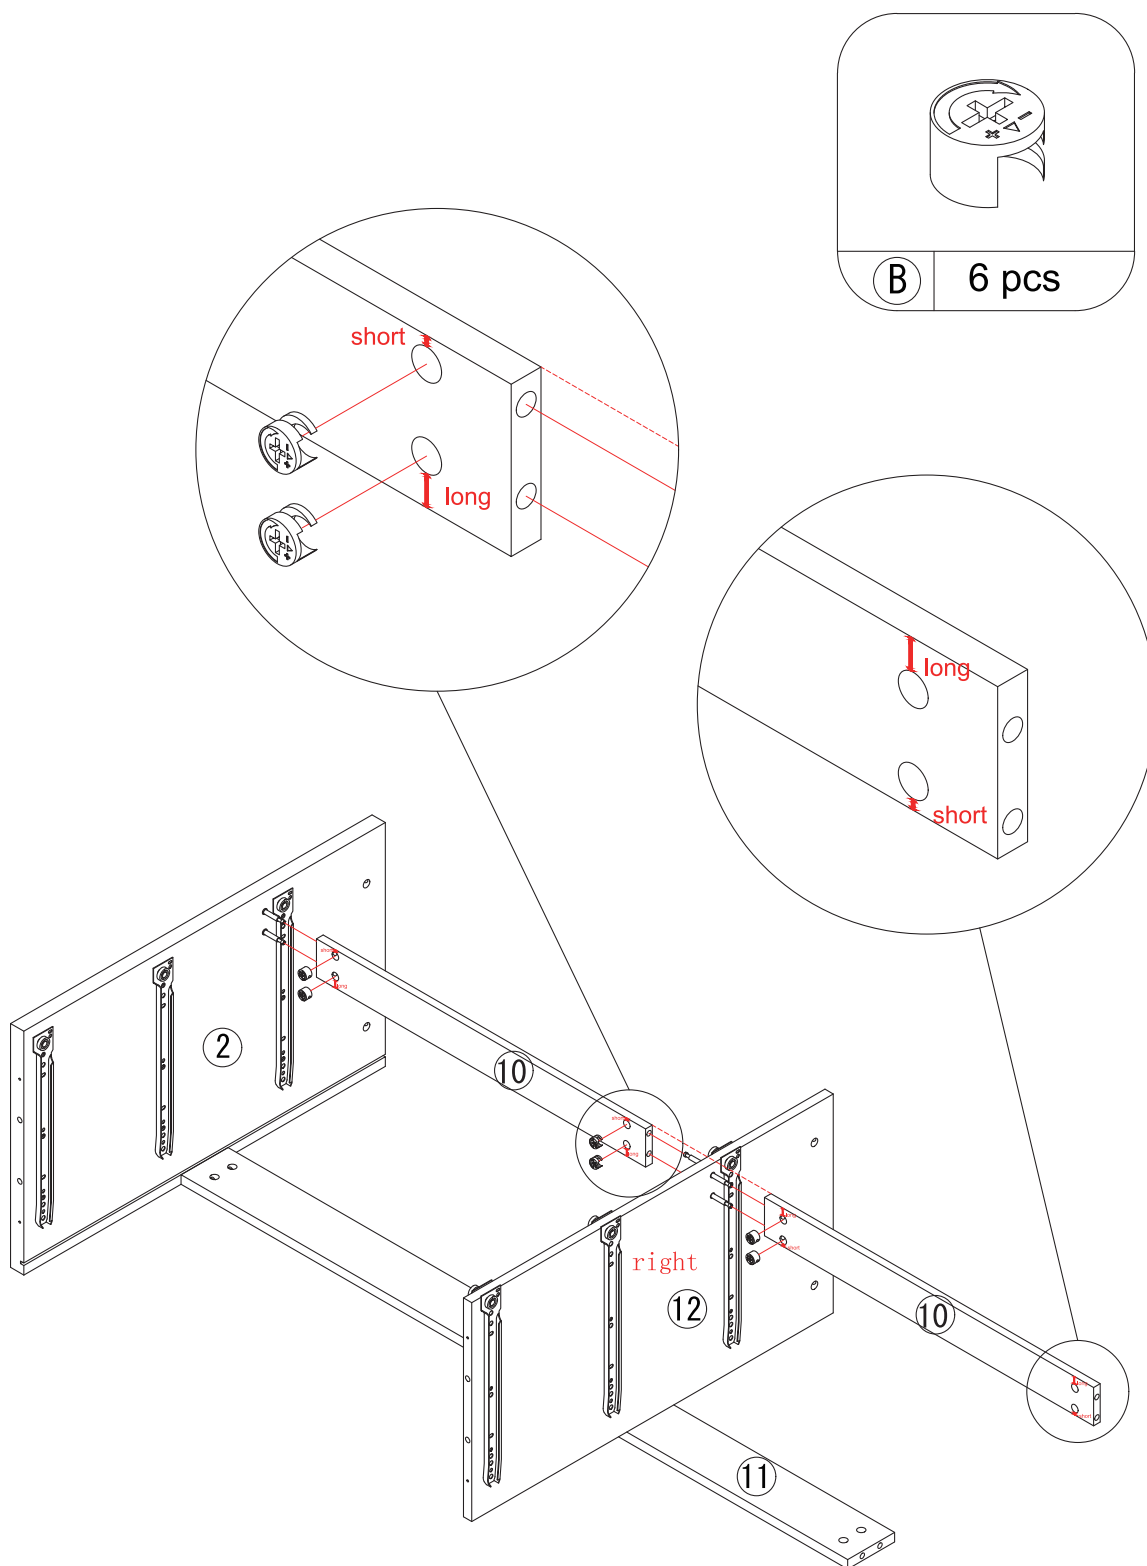


17

STEP 14

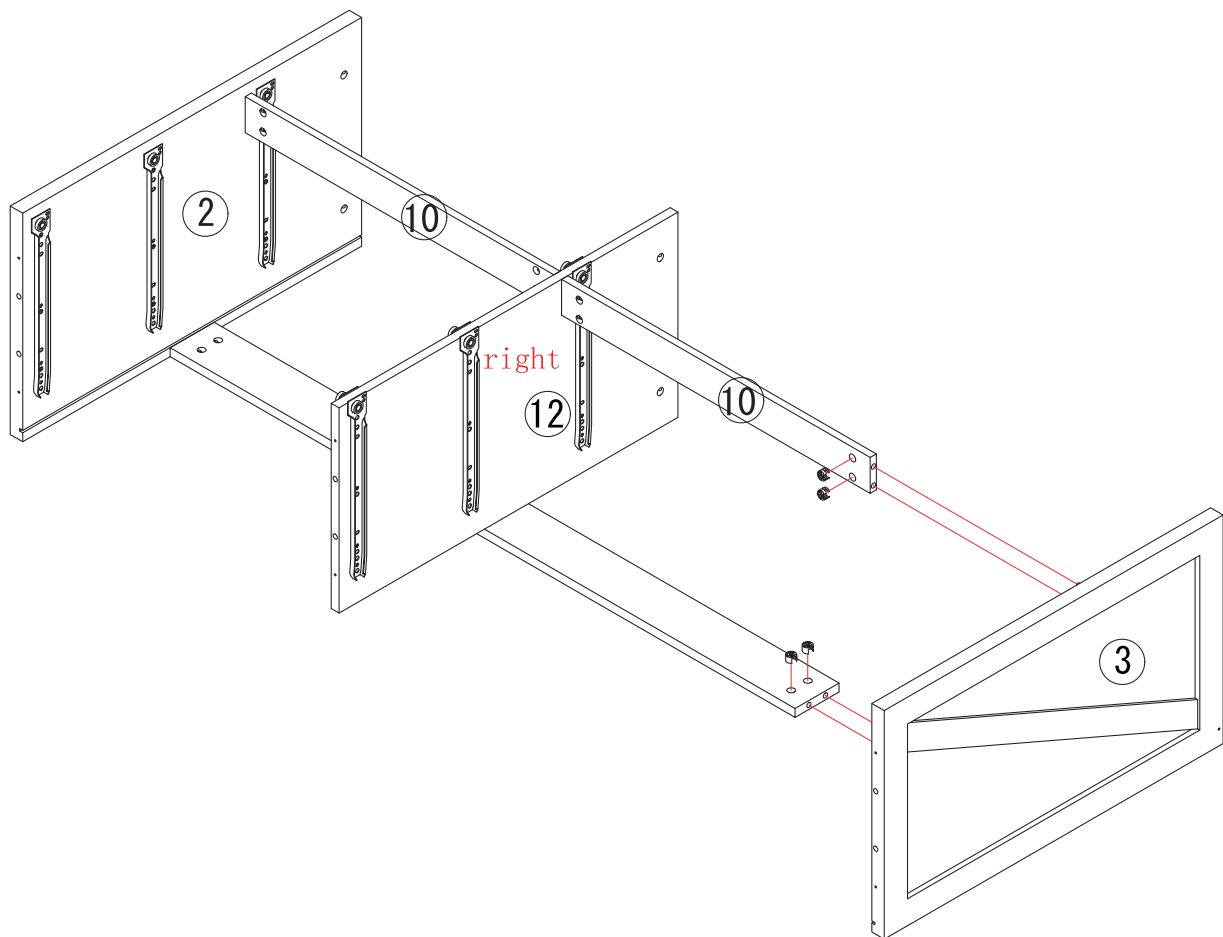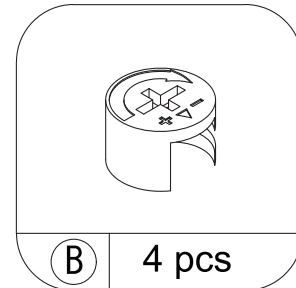



18

STEP 15

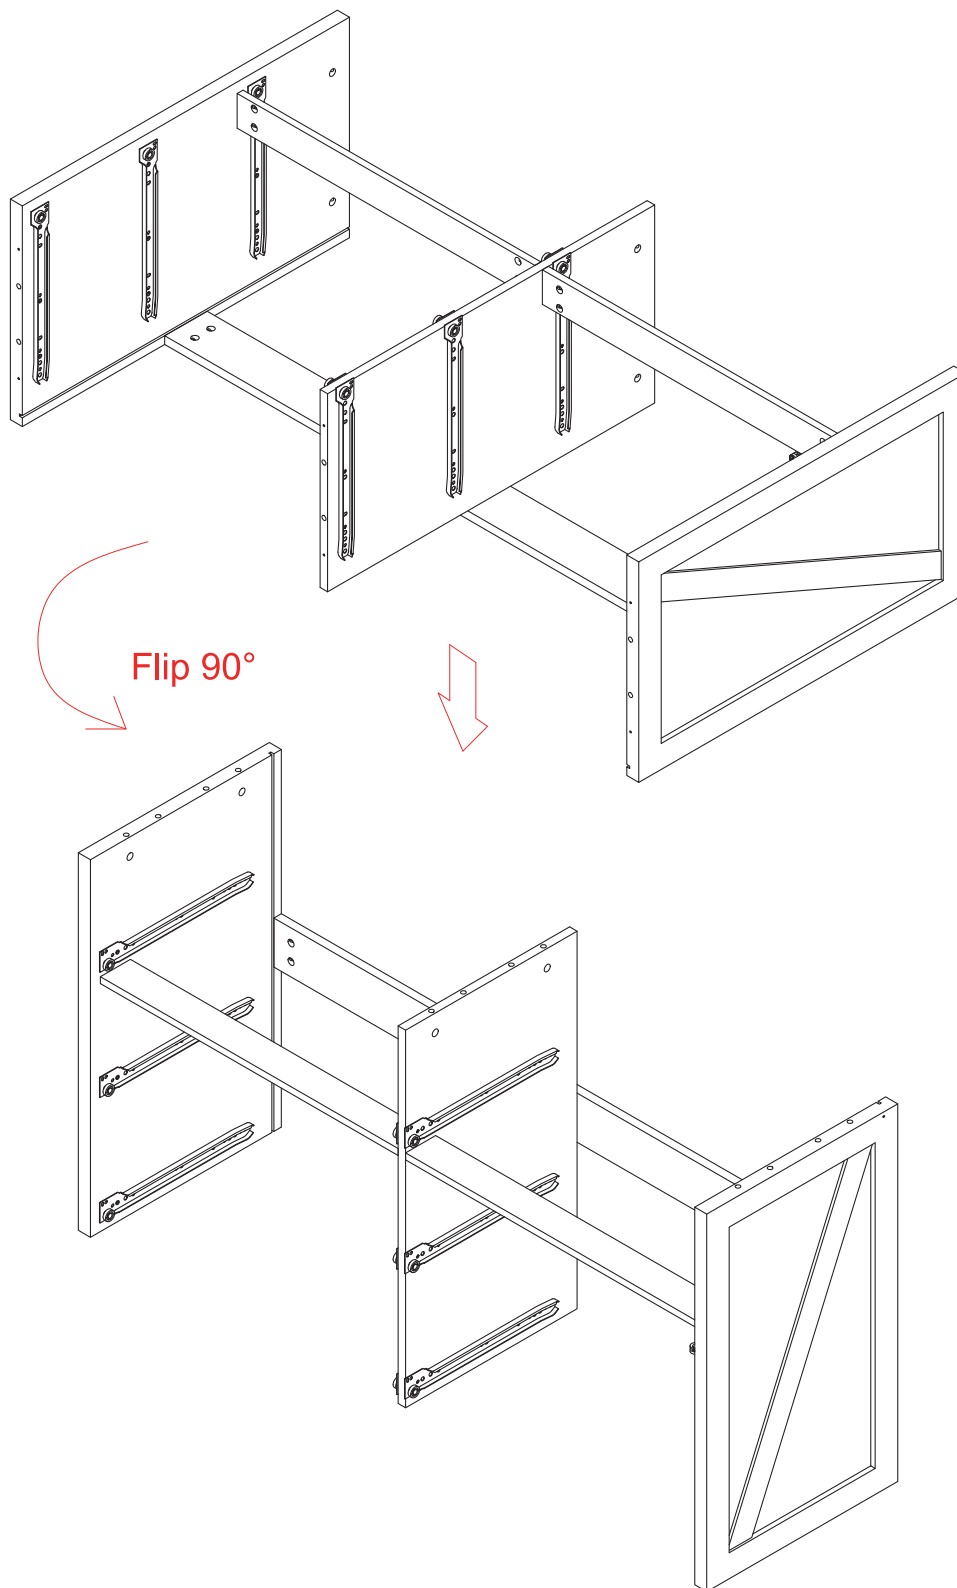




19

STEP 16

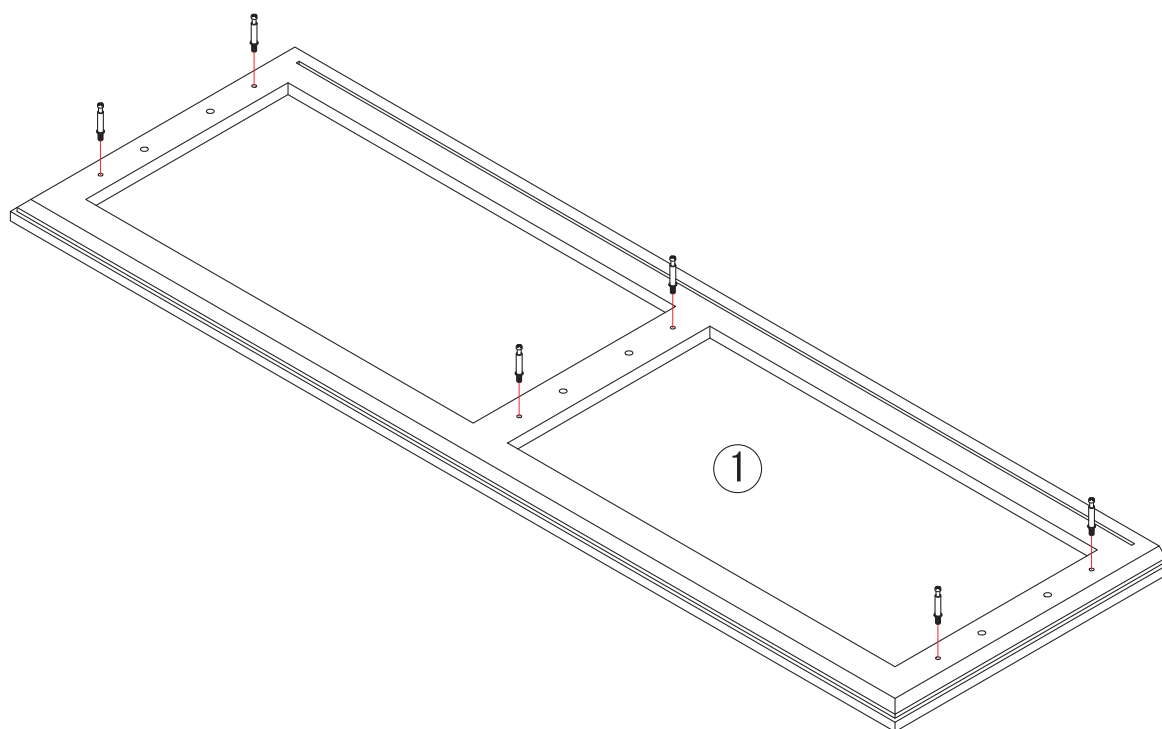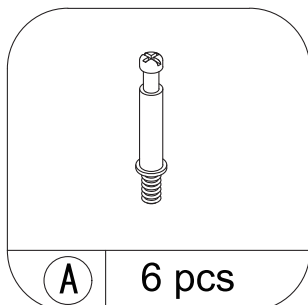


20

STEP 17

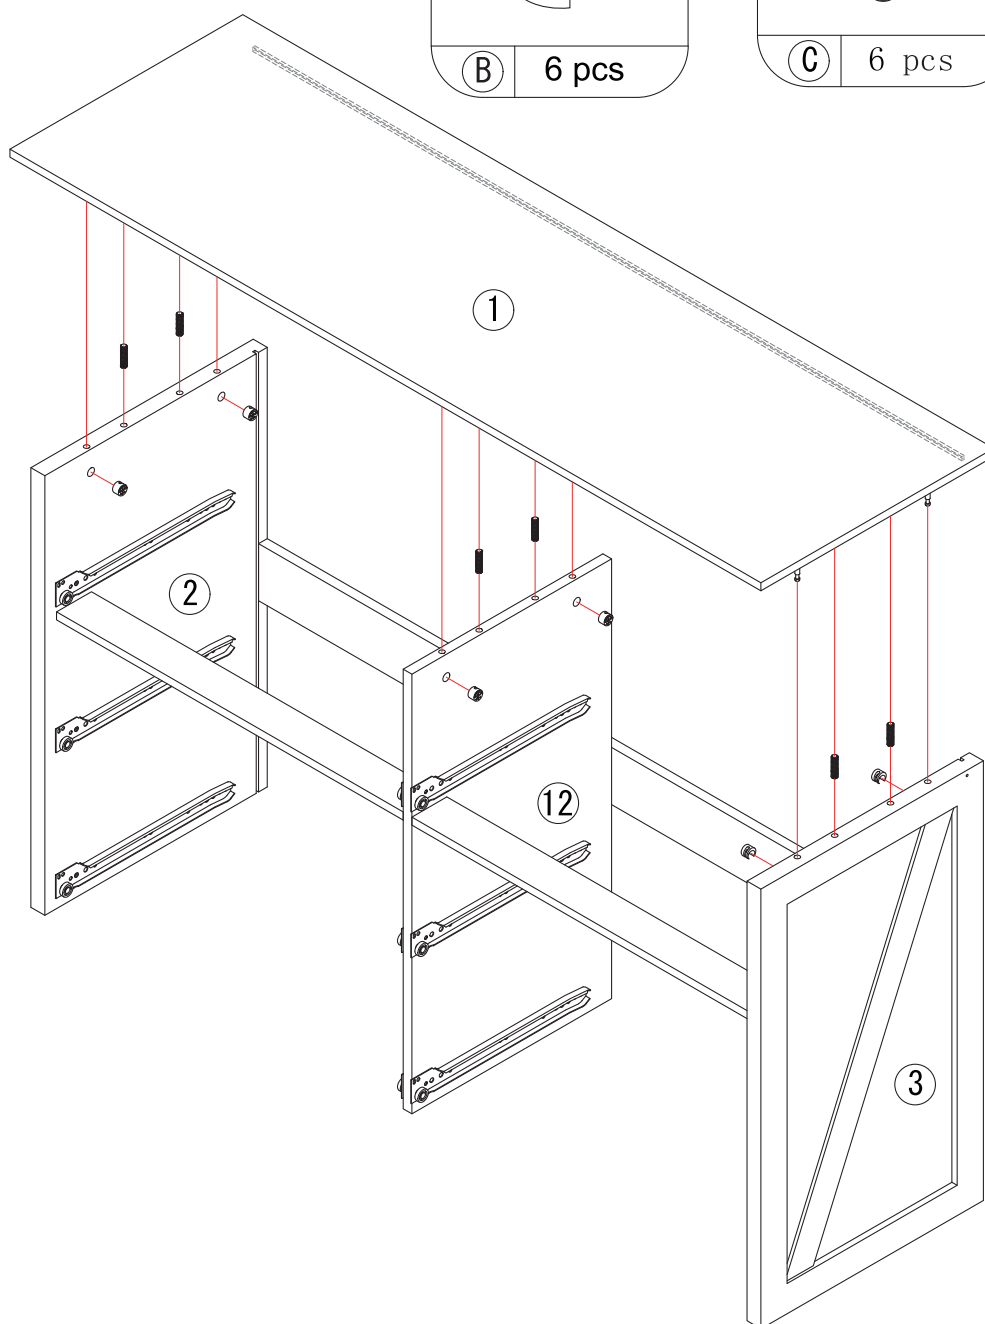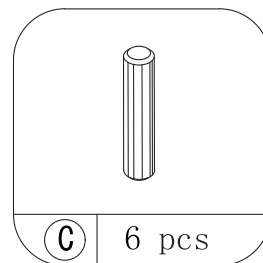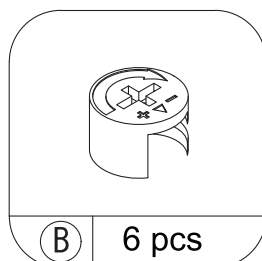


21

STEP 18

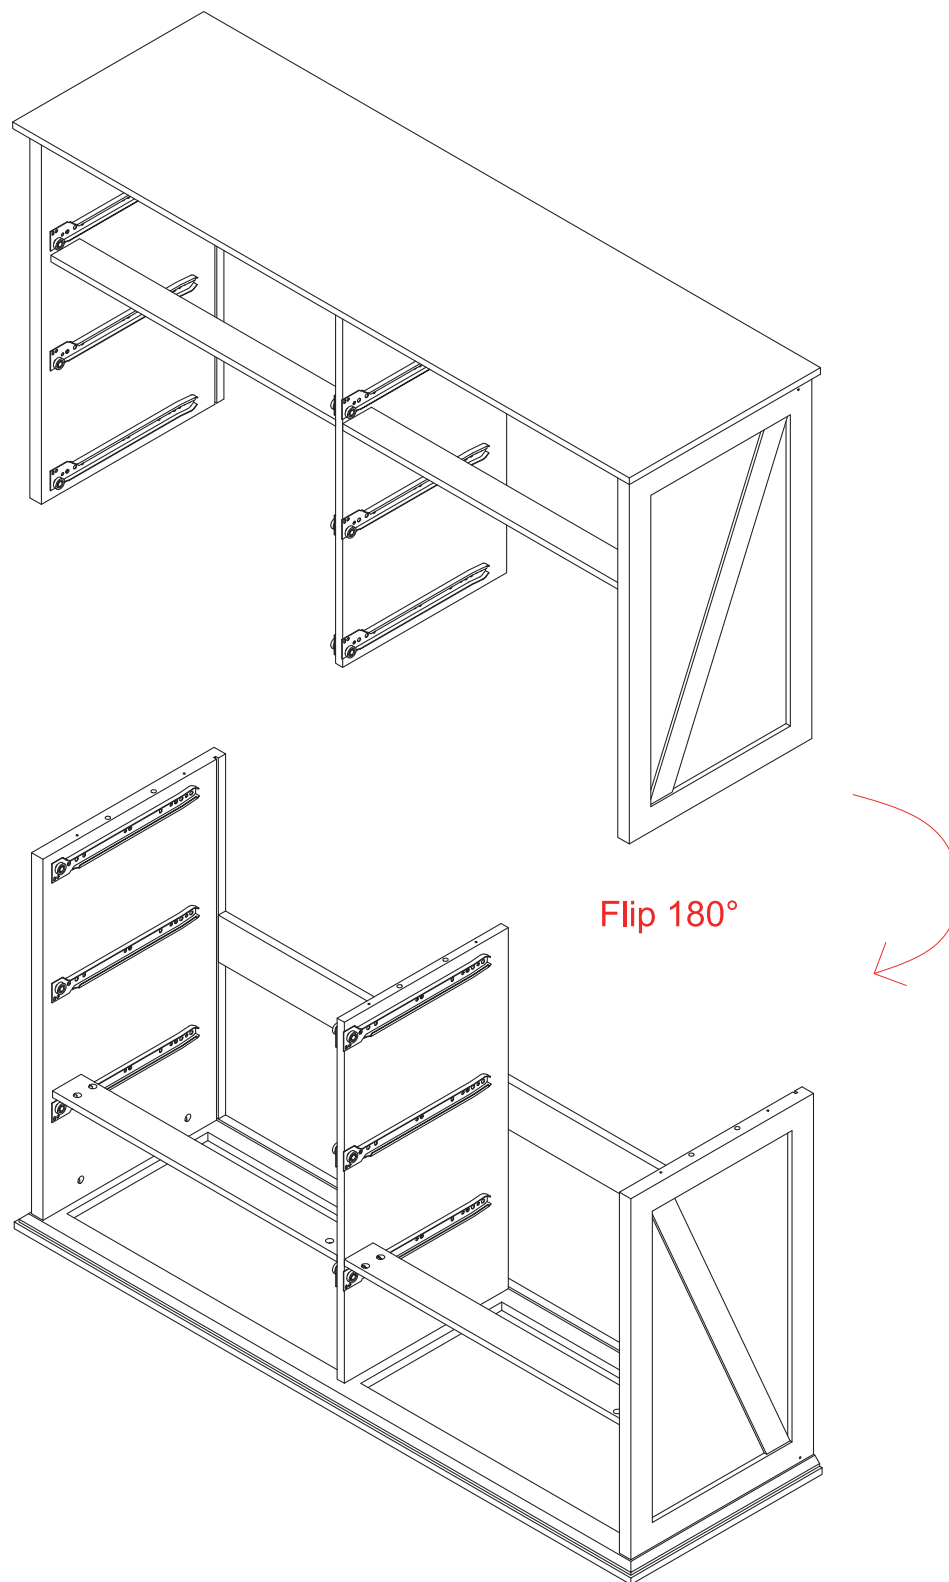


STEP 19

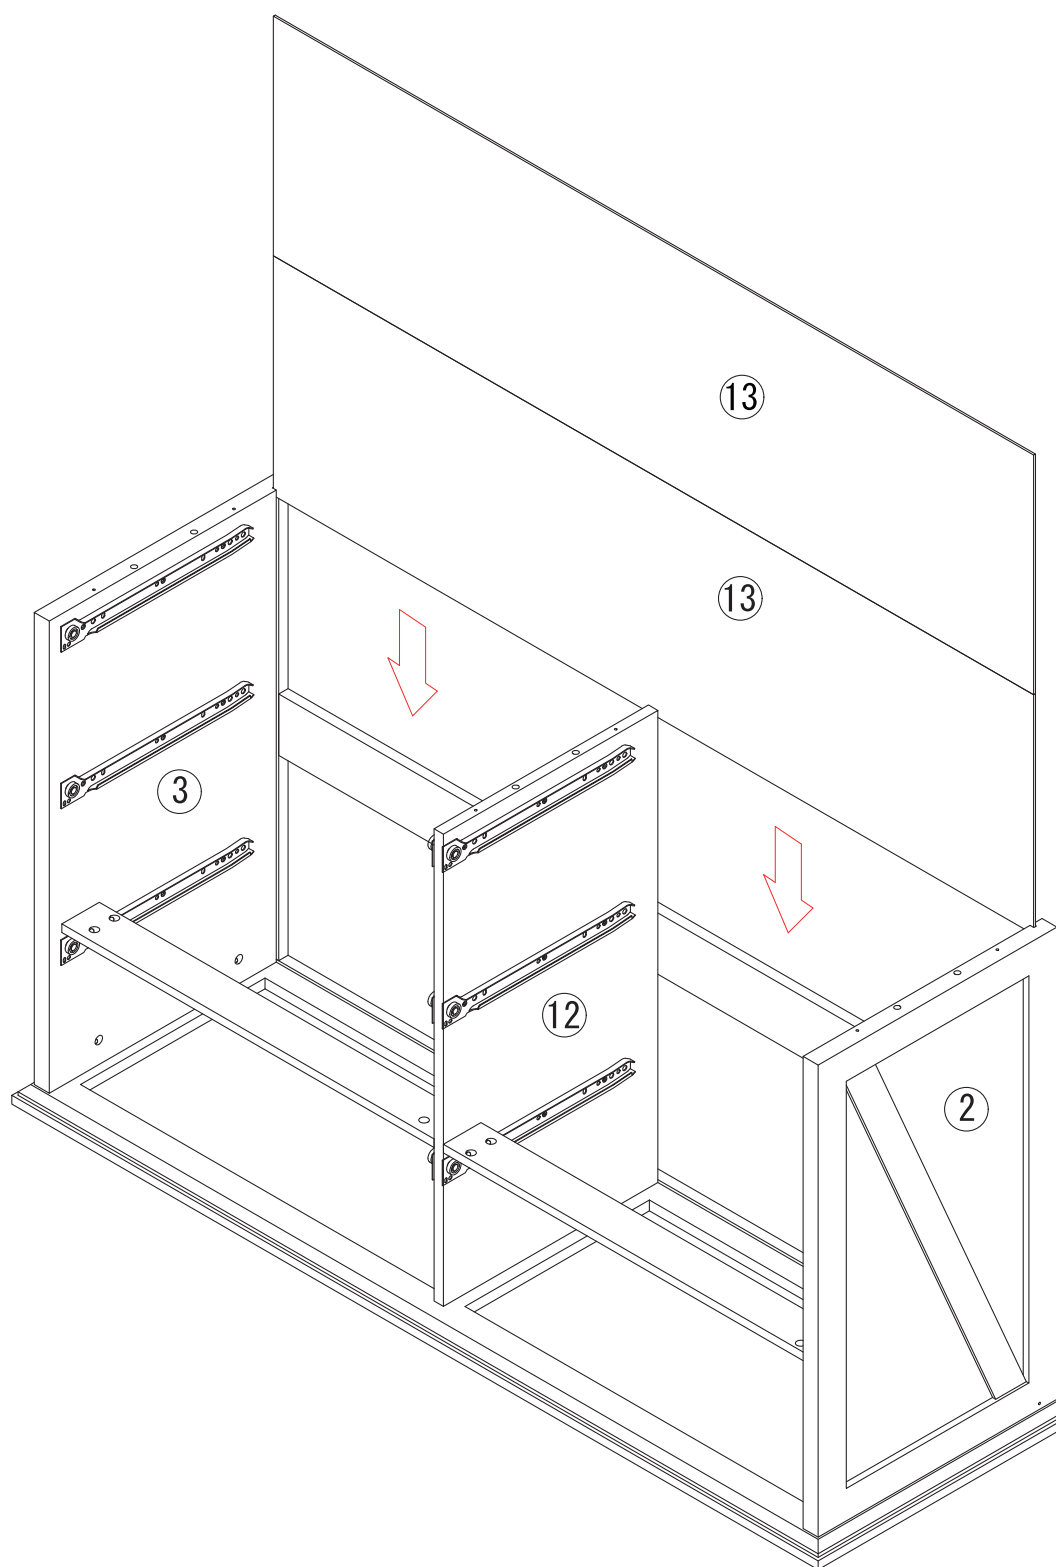



23

STEP 20

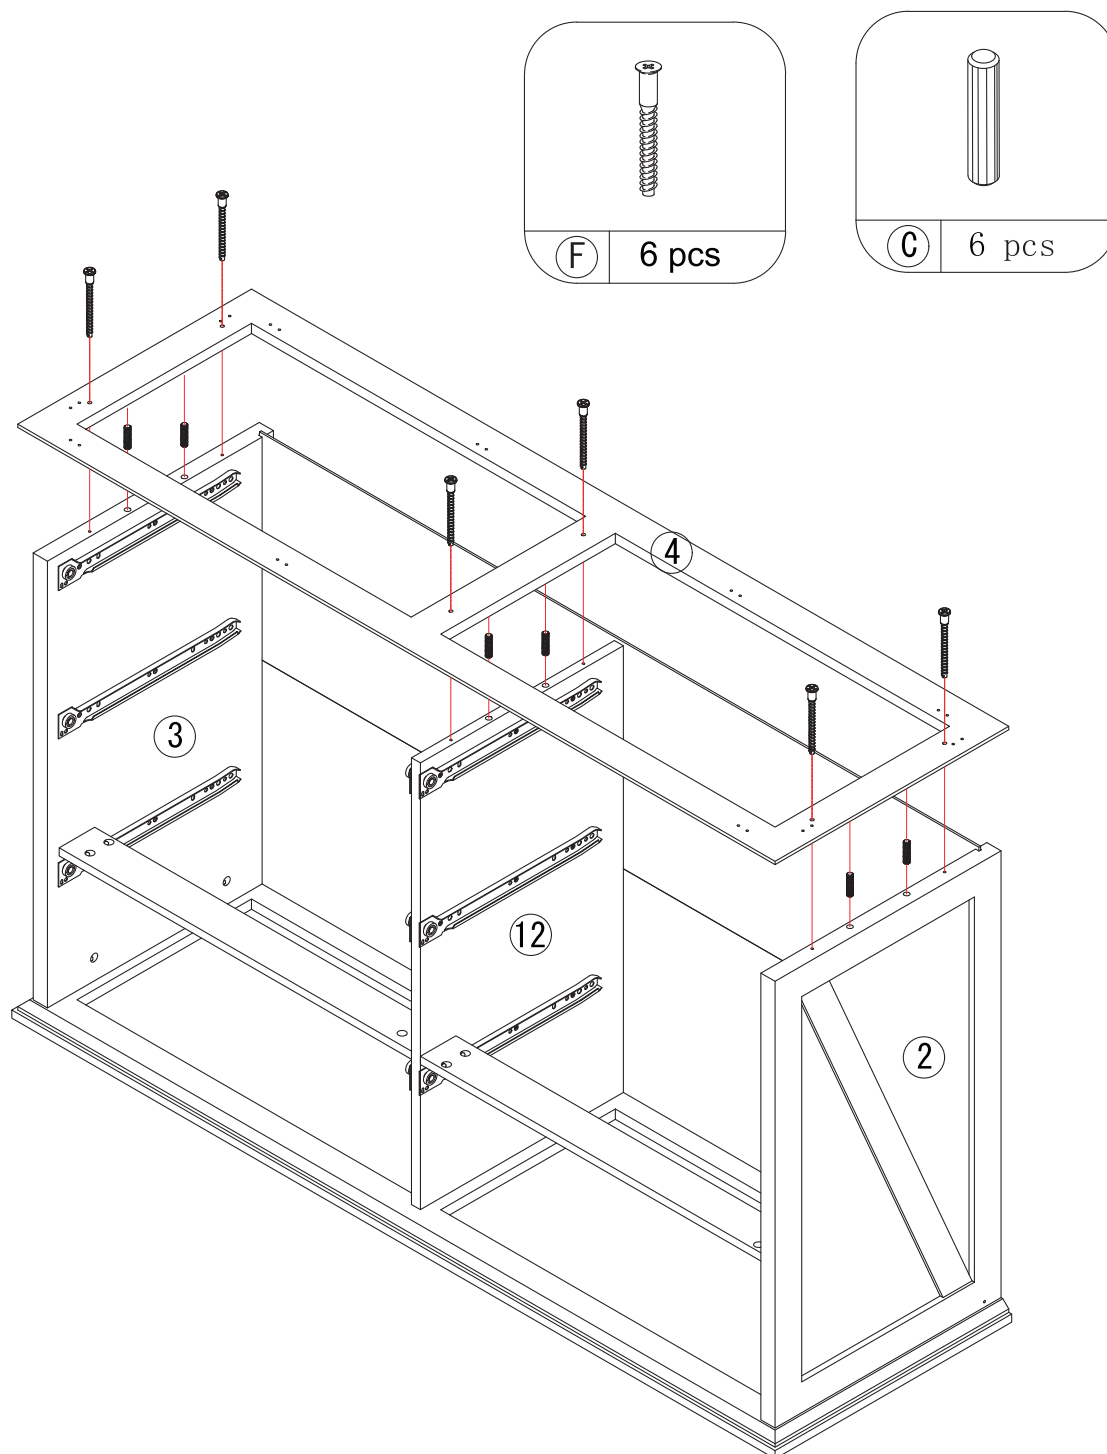




24

STEP 21





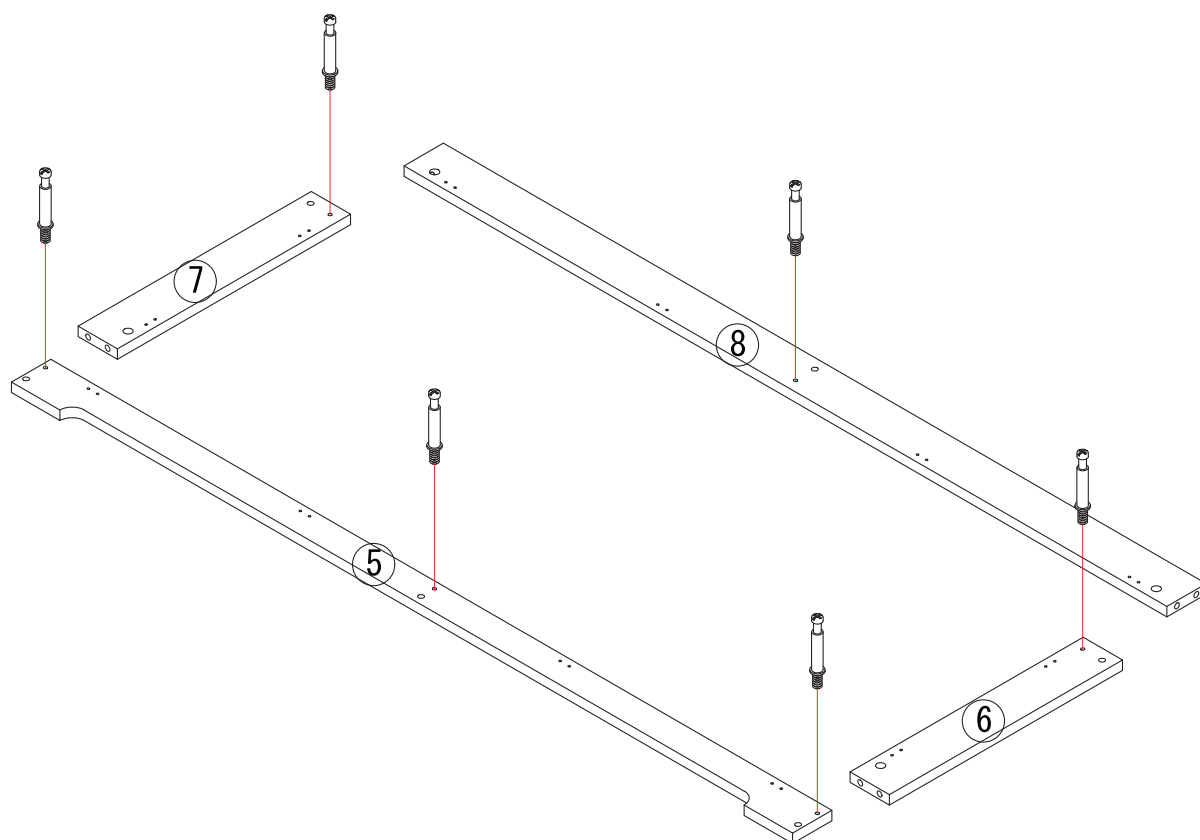
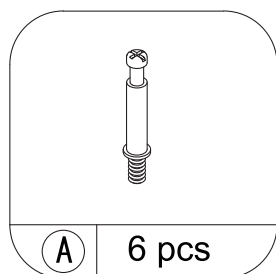


25

STEP 22


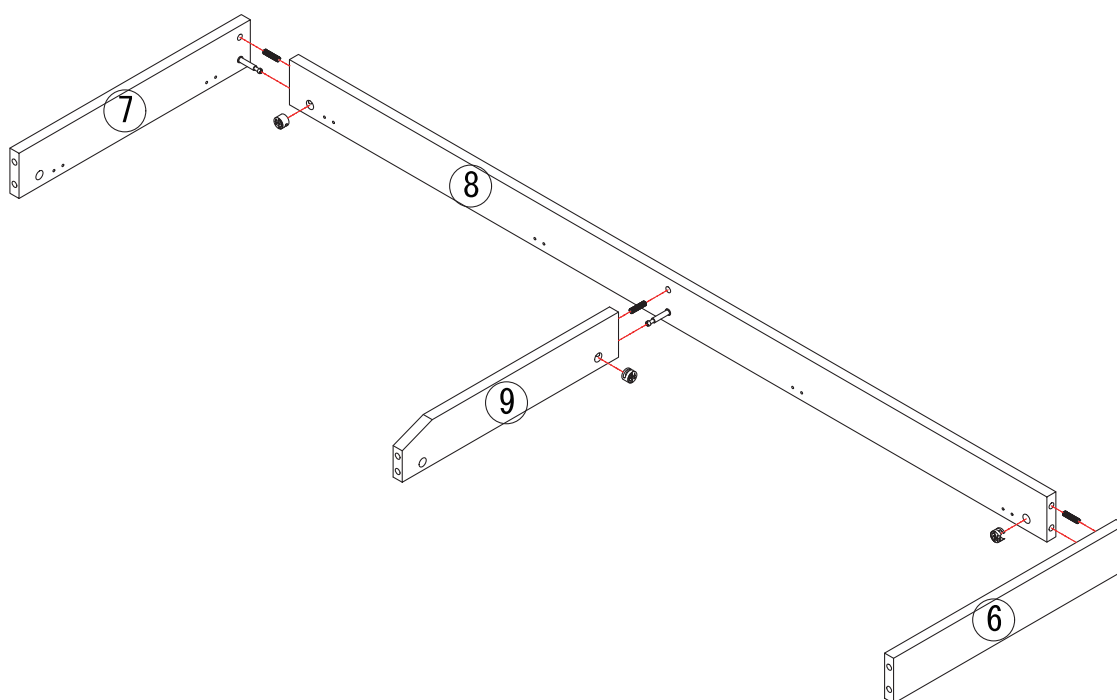
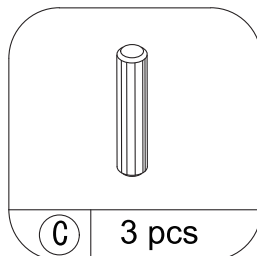
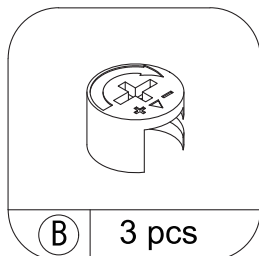


STEP 23

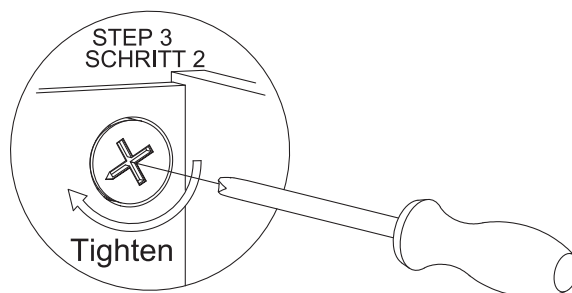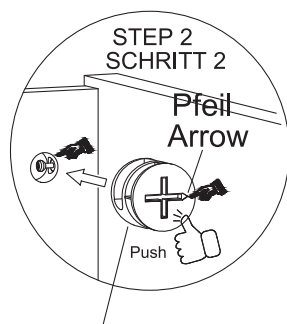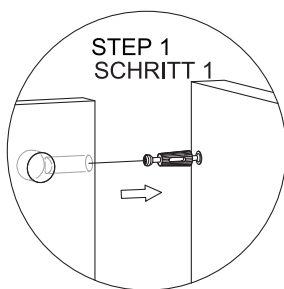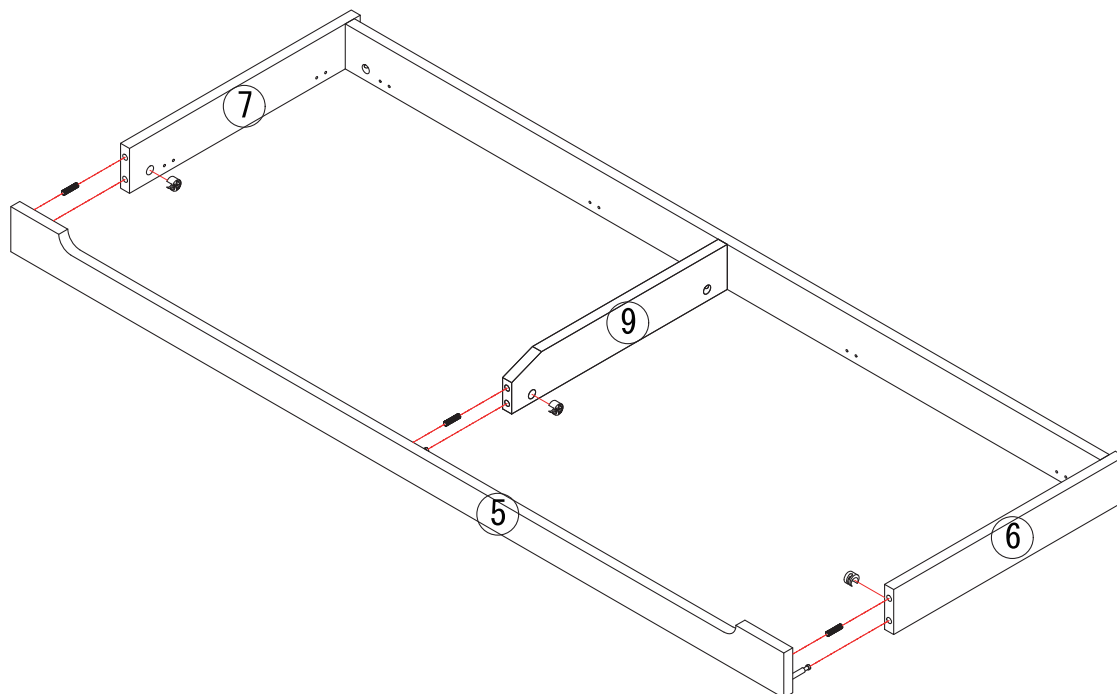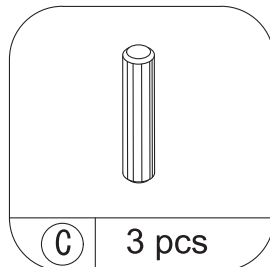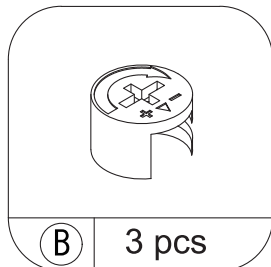



Push the KD cam all the way into the hole before tightening.

STEP 24

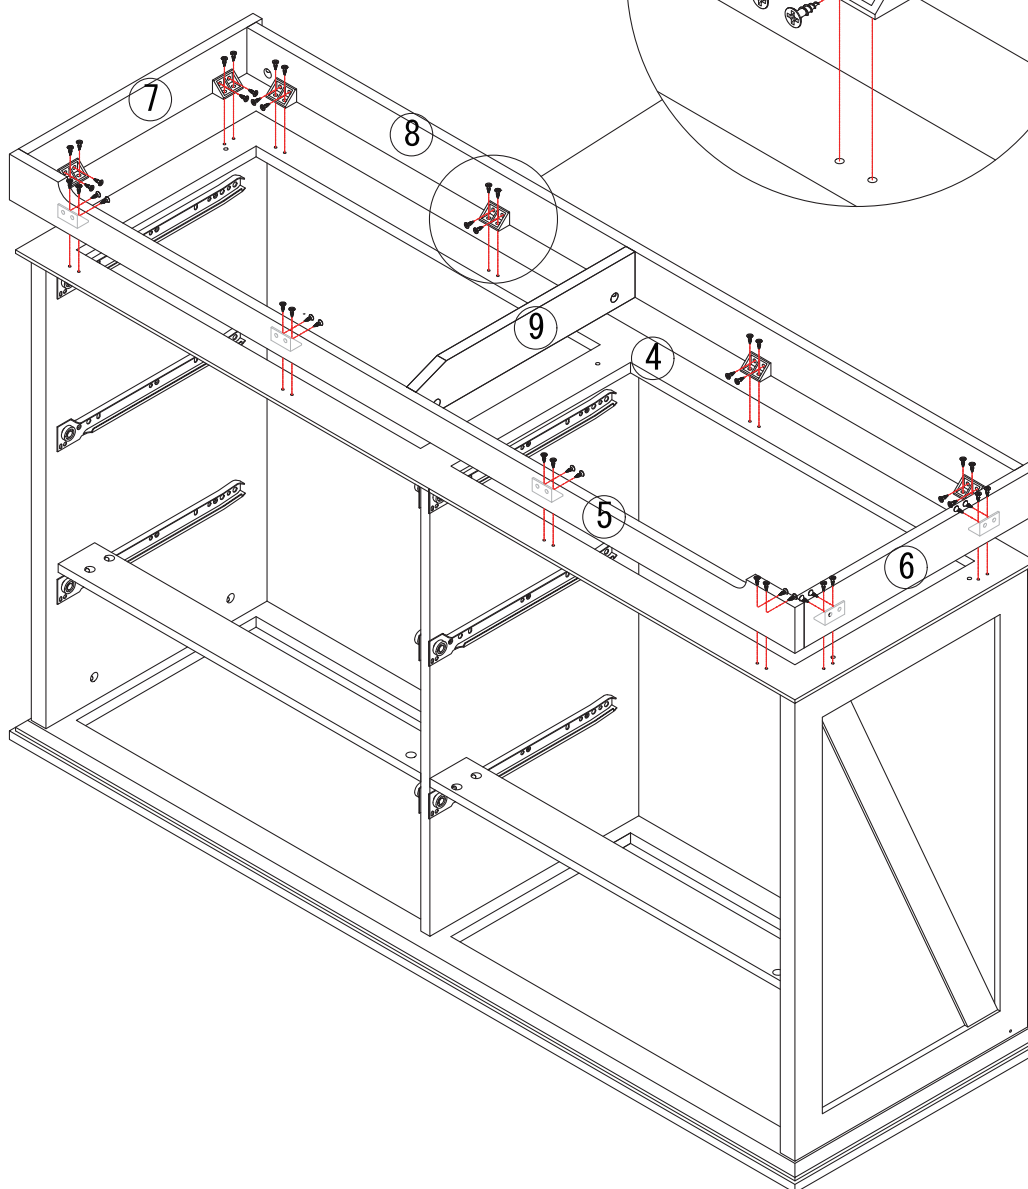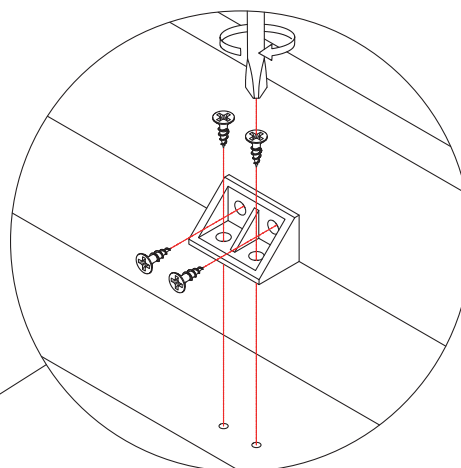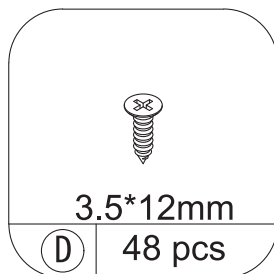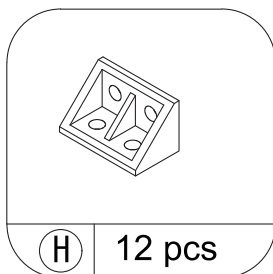


28


STEP 25

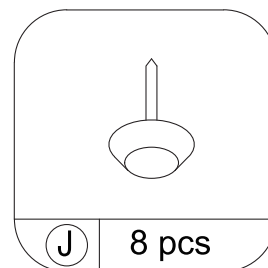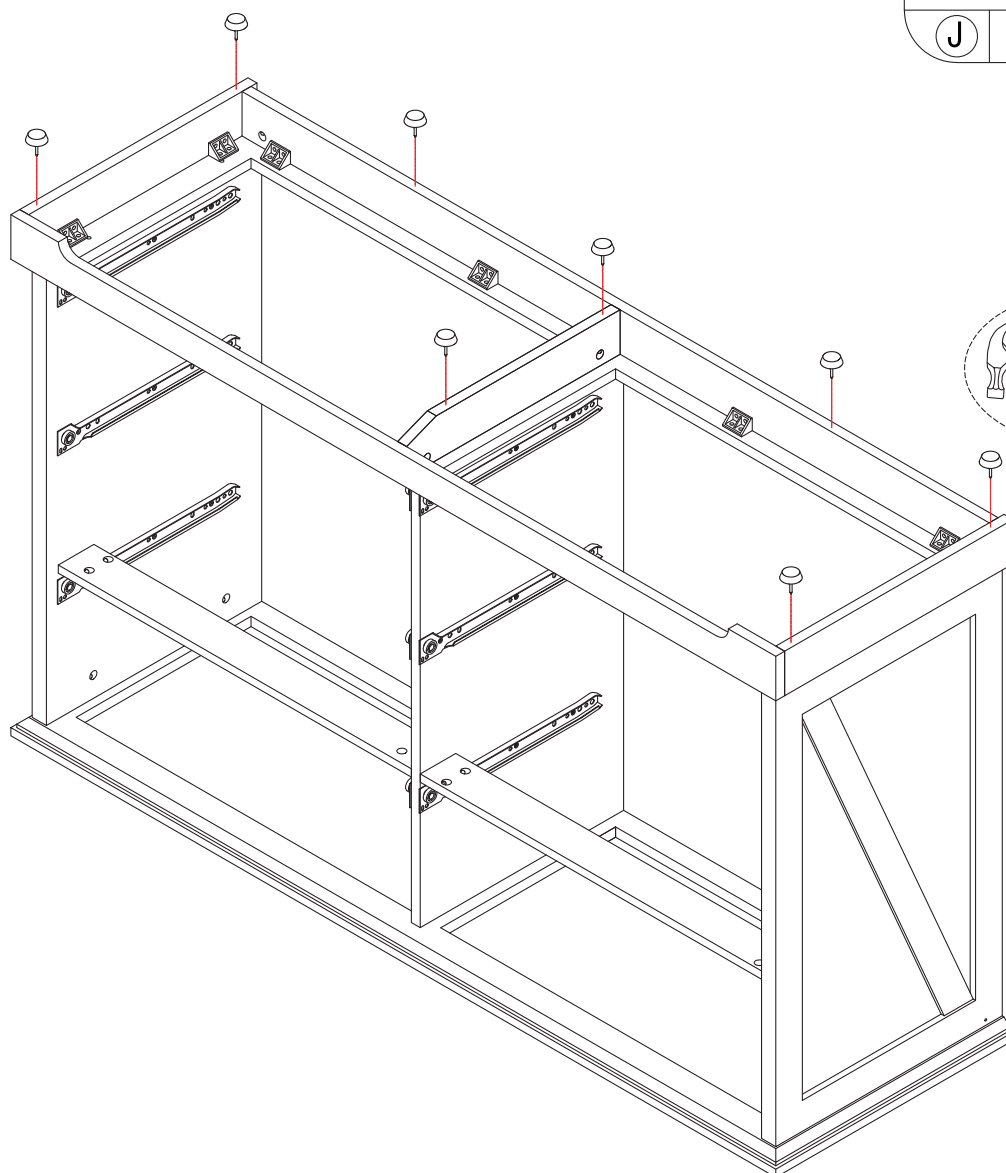

not included


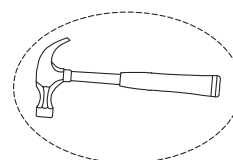


STEP 26

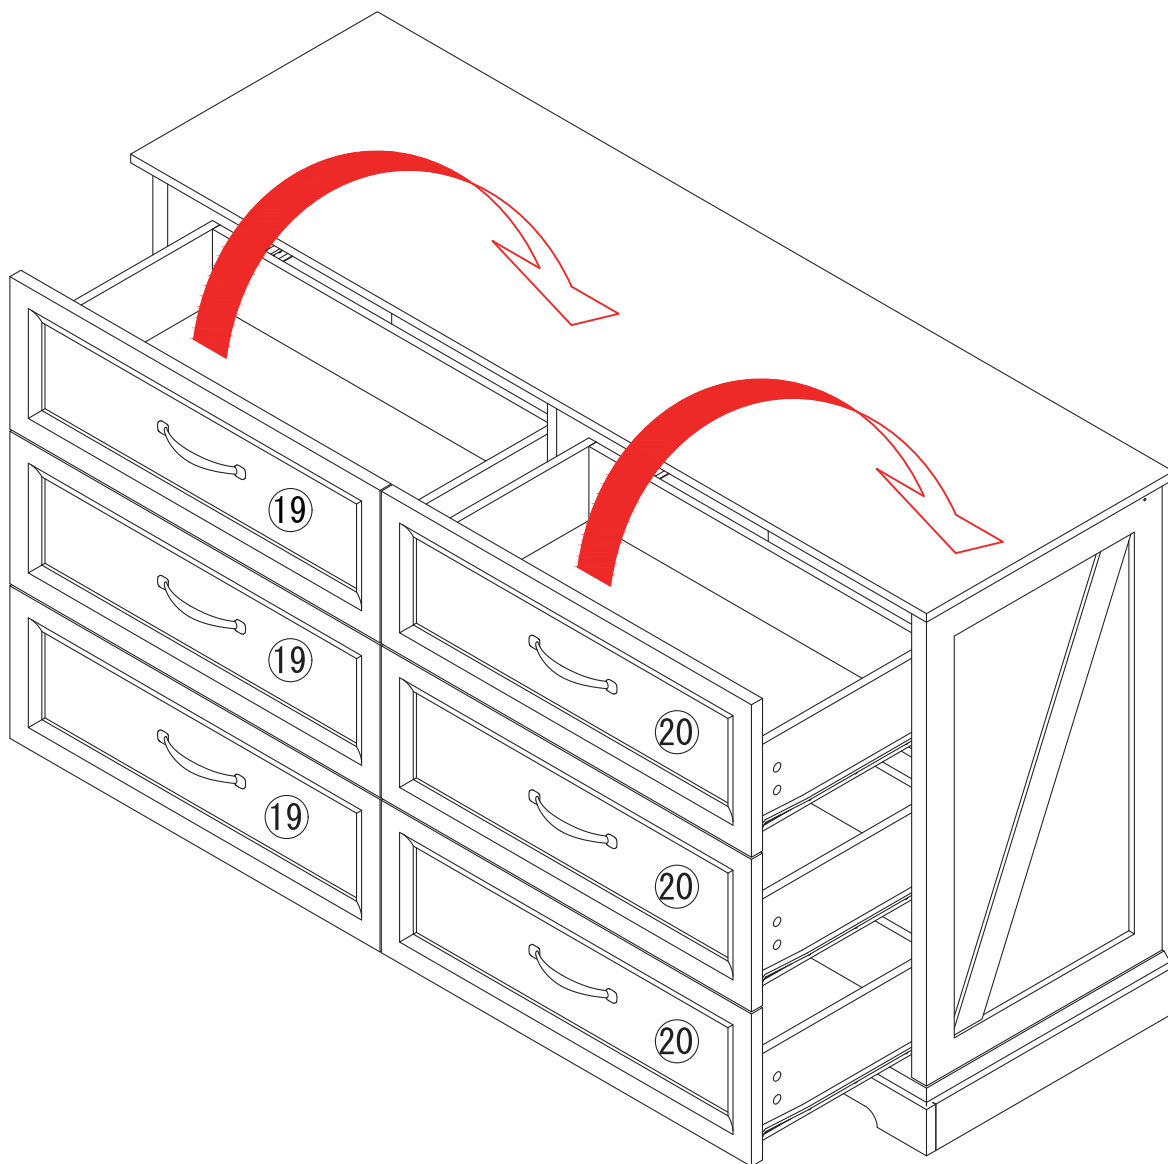

30

STEP 27

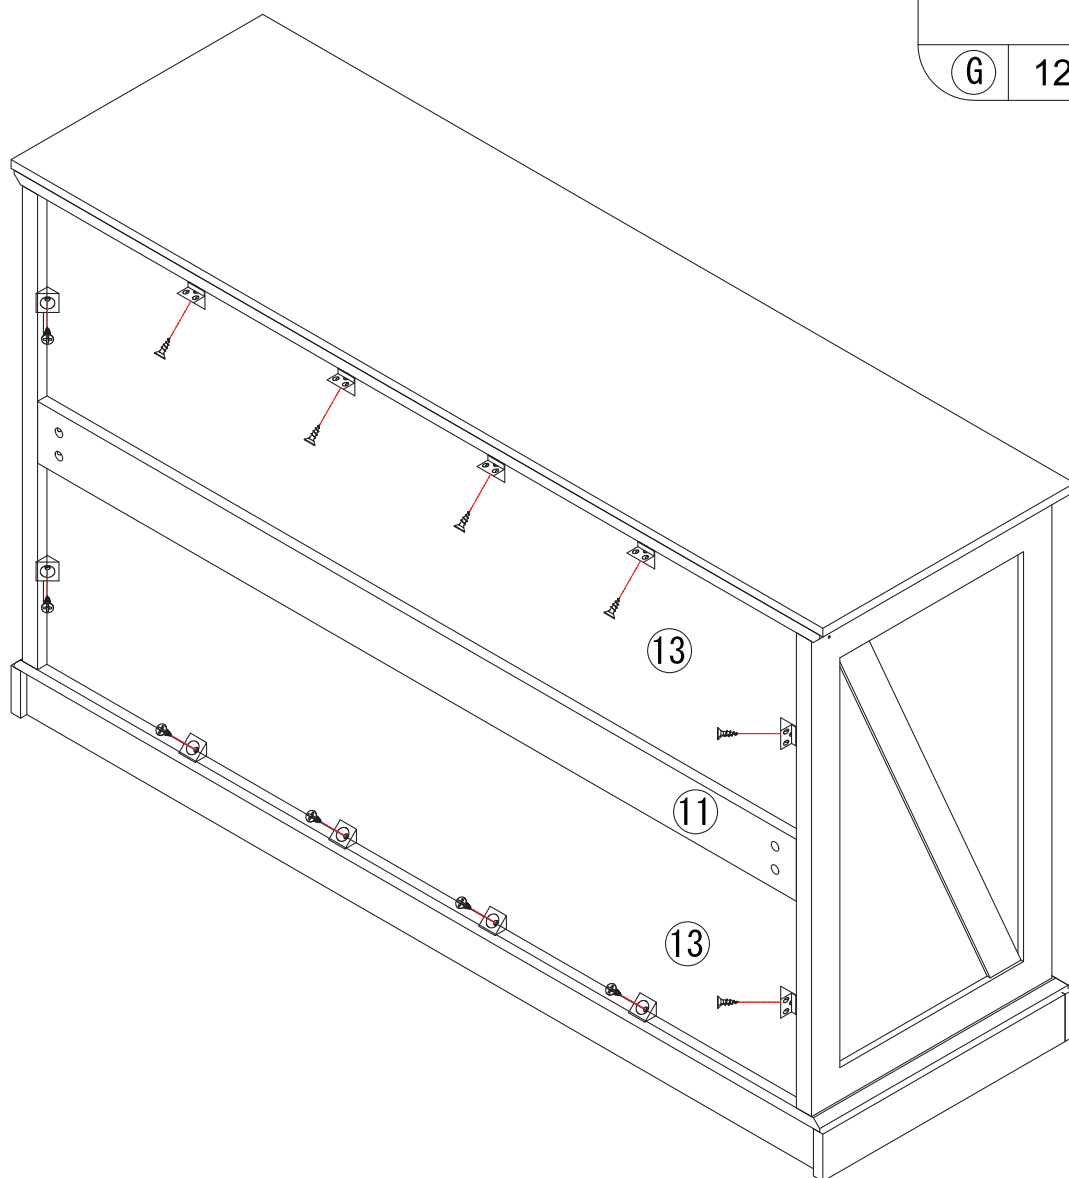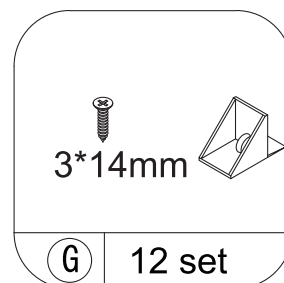

31

STEP 28



(L) 2 set

