


Line Inc

Adjustable Metal Base Assembly Instructions


Full/Queen/King/Cal King sizes

Step 1

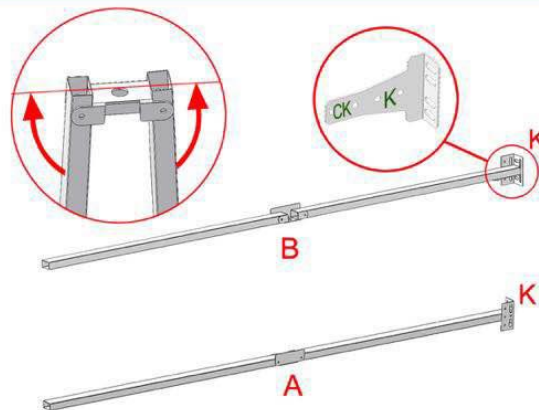


As shown in the figure, extend A and B, and lock K*2 (headboard bracket) on A and B with L*4 (small bolt).

Step 2

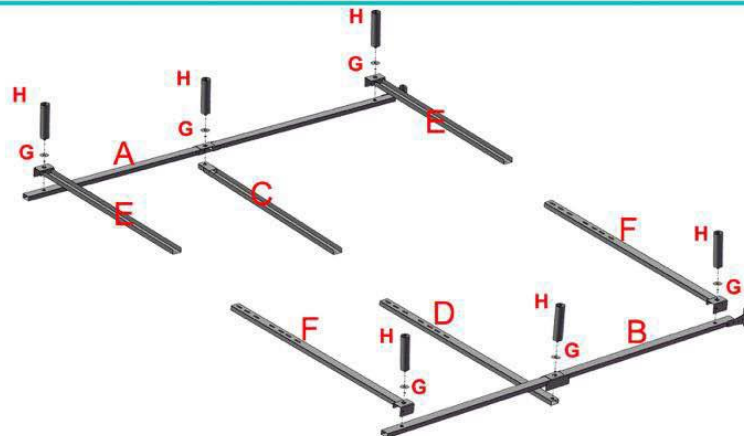


<1> Place E*2 on the sides of A, place C*1 under the middle of A, and lock H*3 and G*3 in the above three places to form one half.

<2> Place F*2 on the sides of B, place D*1 under the middle of B, and lock H*3 and G*3 in the above three places to form another half.

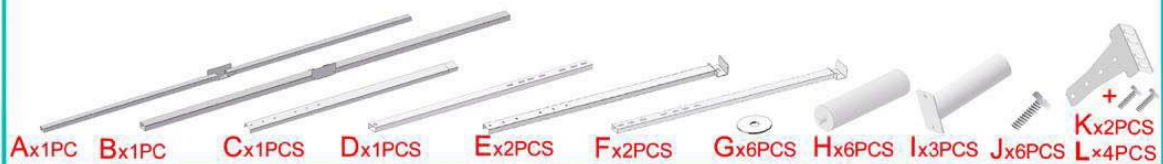

Step 3

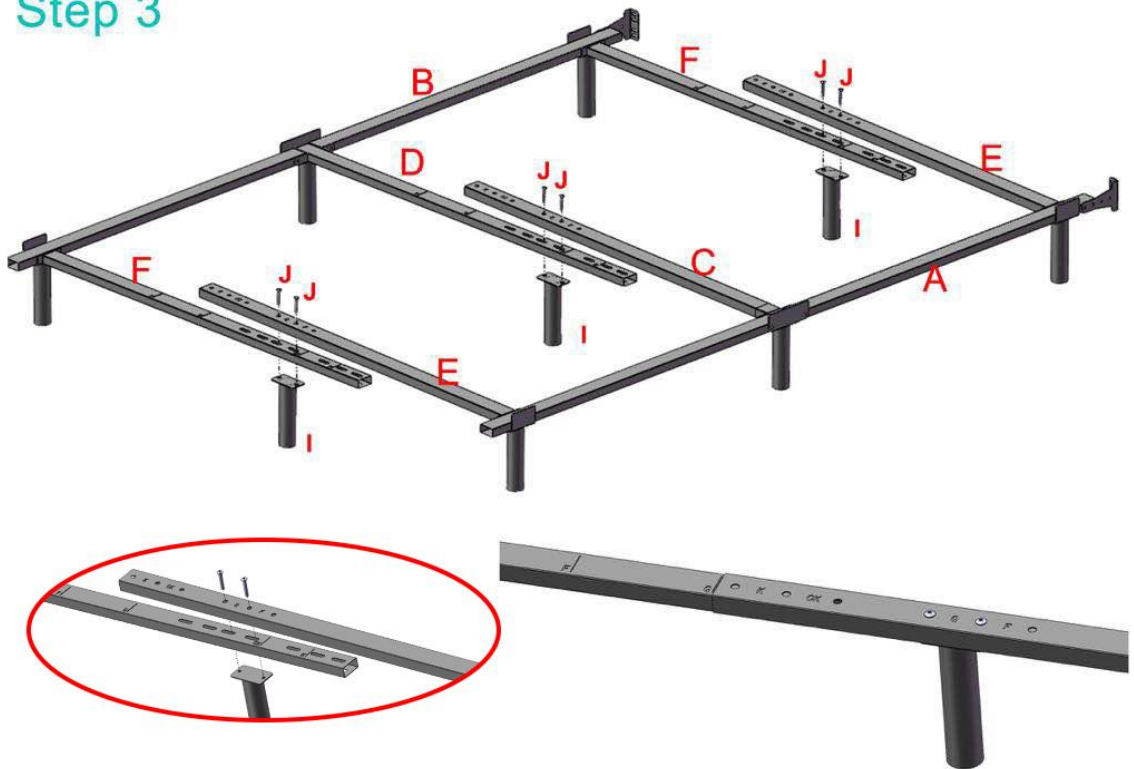

<1> Flip the left and right halves, place E*2 on top of F*2, and place C*1 on top of D*1.

<2> Adjust to the desired size. (For example, "Q size": Align the word "Q" on the C and D, and make sure that the end of the C is aligned with the tick of the word "Q" on D. If your box spring is too large or too small, you can move left and right according to actual needs.)

<3> Use J*6 to lock I*3 at the intersection of E and F, and the intersection of C and D.

Step 4

