




ASSEMBLY GUIDE

Please Note: in each installation step, screws cannot be tightened all at once. There should be some space left for adjustment. The screws can only be locked after the screws are completely installed.

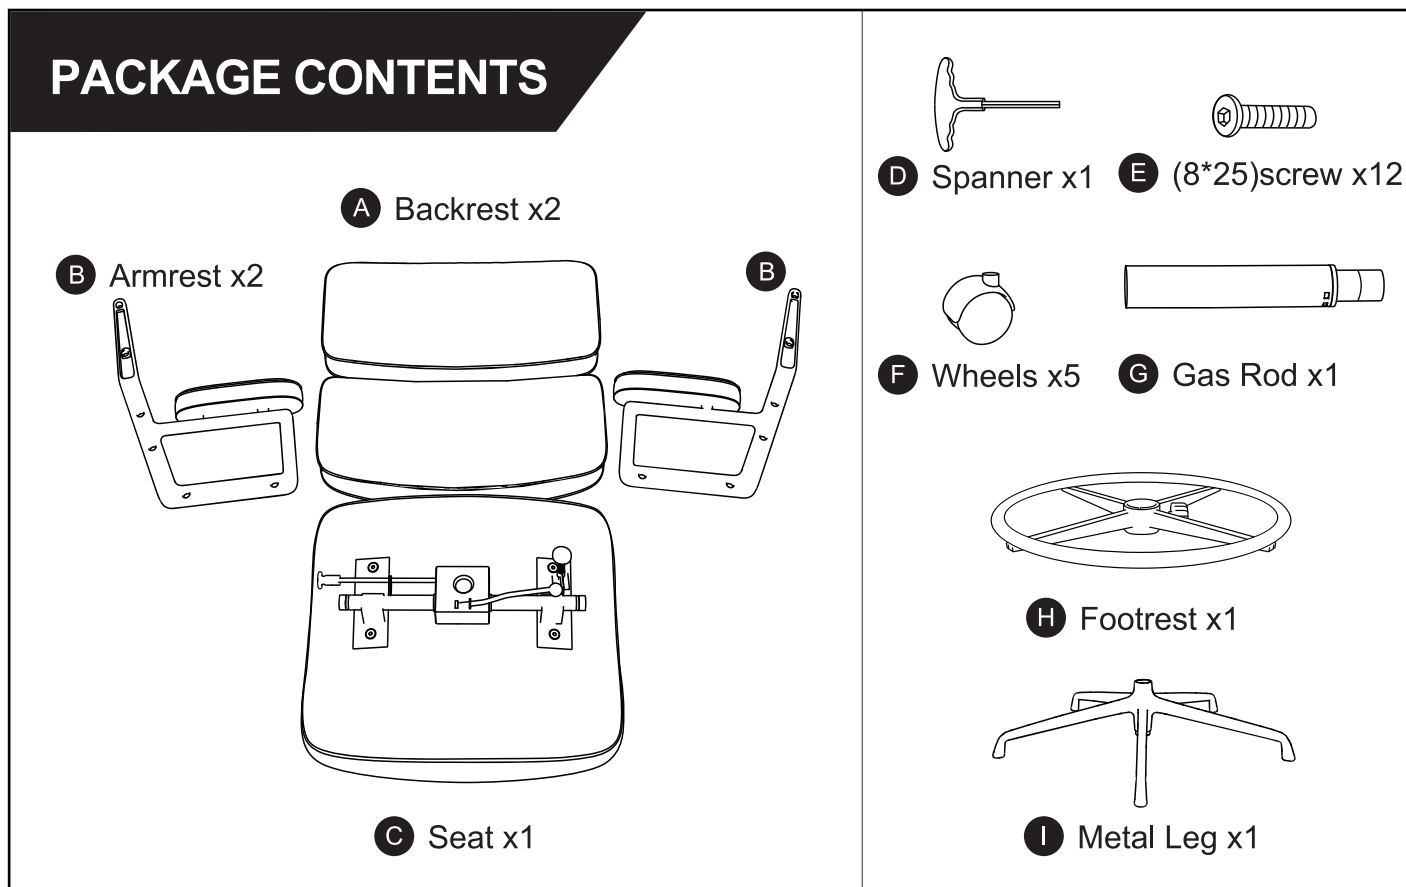


1 Screw both armrests to the seat.
(Screw in clockwise)


2 Fix the two backrests to the armrest Aluminum alloy frame with screws. (Screw in clockwise)

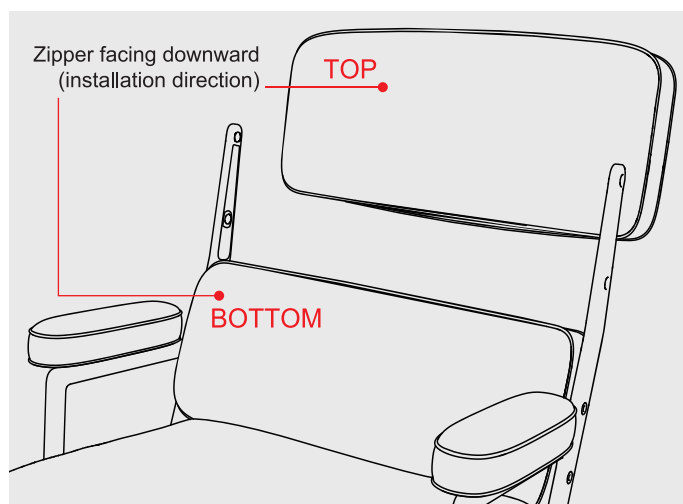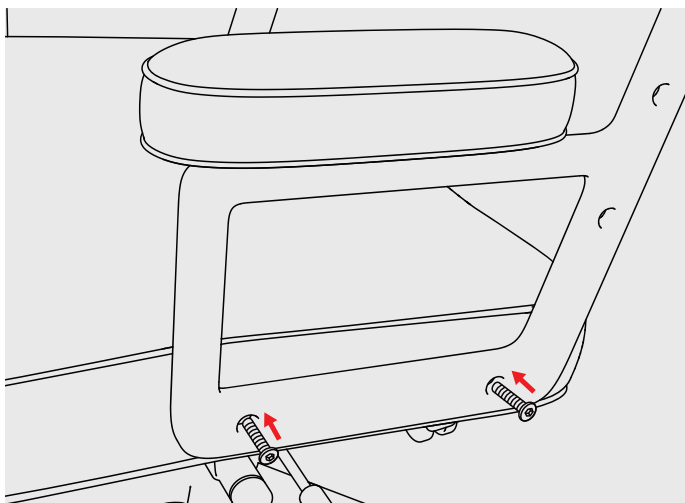


- 3** Insert the wheel into the hole of metalleg.

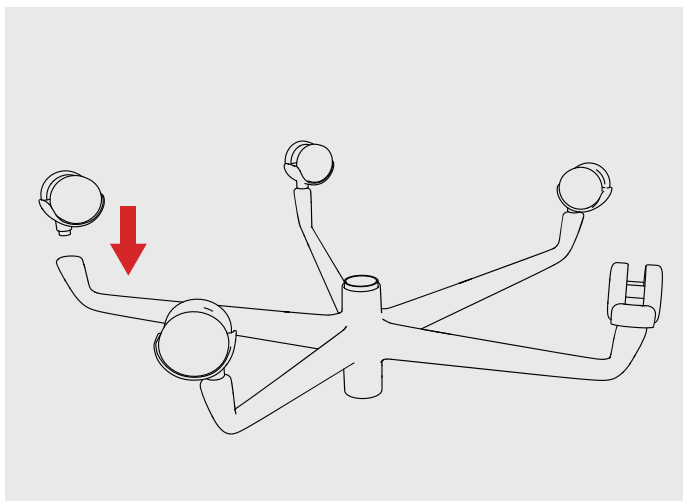


- 4** Remove the protective cap from the top of the air rod.
Insert the gas rod into the central hole of metalleg.

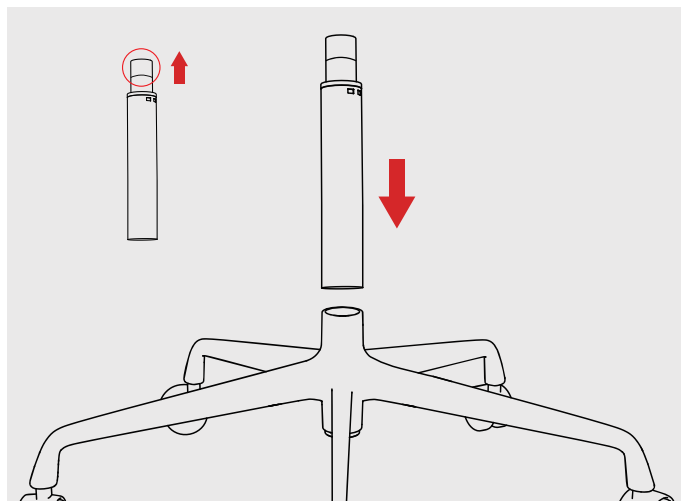

- 5** Insert the footrest and tighten the handle screw to secure it.
Note: Keep the footrest's inner plastic ring and outer metal ring assembled as one unit.

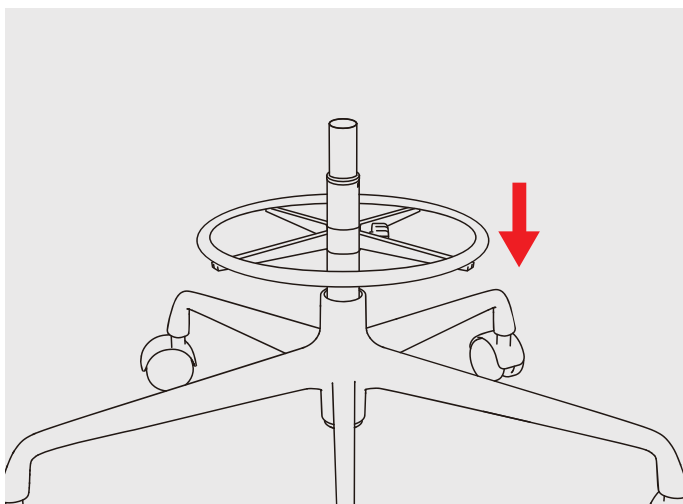

- 6** Align the installed seat into the top of gas rod.

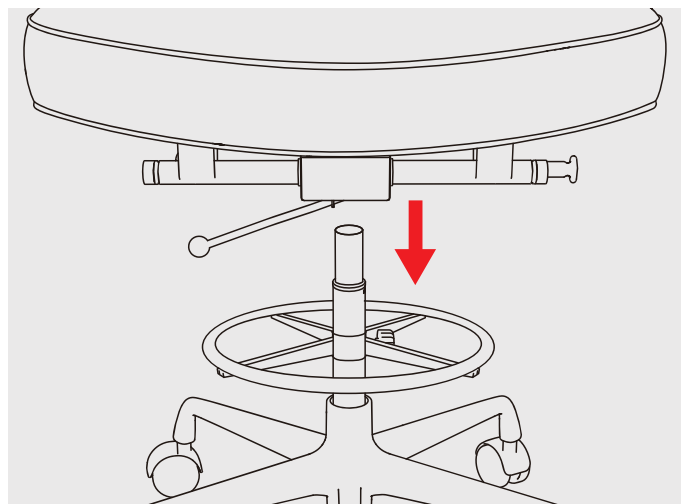

A. Seat height adjuster.

B. Seat tilting tension adjuster.

C. Tilt locking handle.

