



UESR'S MANUAL

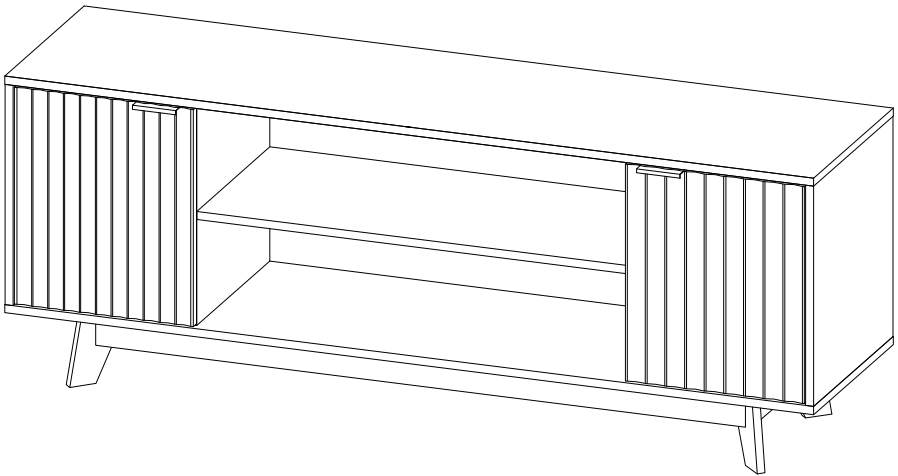

Before You Start



1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.
4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.
5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off. (Using an electric screwdriver can increase assembly speed).

Useful Tips


Assembly Personnel Required: 1-2 People

- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.
- Use a hammer to gently tap in the compression pins.
- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.
- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.
- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.
- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



Board Identification

Not actual size

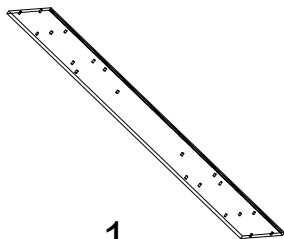


1

BOTTOM BOARD

1500*390mm

Qty: 1

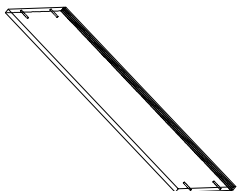


2

MIDDLE BOARD

800*373mm

Qty: 1




3

MID-LEFT BOARD

470*373mm

Qty: 1




4

MID-RIGHT BOARD

470*373mm

Qty: 1

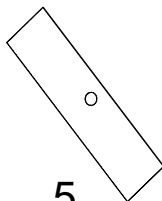


5

BACK BOARD

808*237mm

Qty: 2

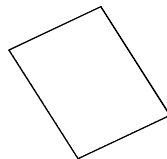


6

BACK BOARD

482*329mm

Qty: 2

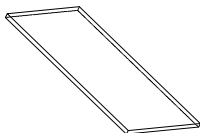


7

SHELF BOARD

350*316mm

Qty: 2




8

LEFT BOARD

470*389mm

Qty: 1



9


RIGHT BOARD

470*389mm


Qty: 1

Board Identification


Not actual size

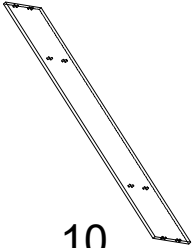


10
TOP BOARD
1500*390mm
Qty: 1

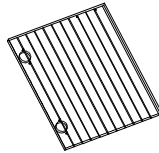


11
LEFT DOOR
464*332mm
Qty: 1

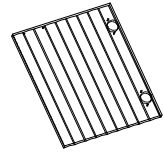

12
RIGHT DOOR
464*332mm
Qty: 1

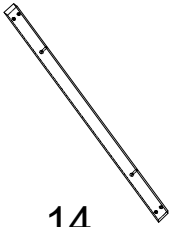


14
FRONT LEG SUPPORT
1205*60mm
Qty: 1

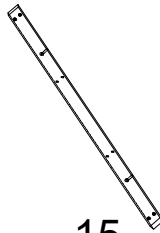


15
BACK LEG SUPPORT
1205*60mm
Qty: 1



16
SIDE LEG SUPPORT
257.5*60mm
Qty: 2




17
LEG
130*82mm
Qty: 4




18
MID-LEG
127*127mm
Qty: 2

Board Identification


Not actual size

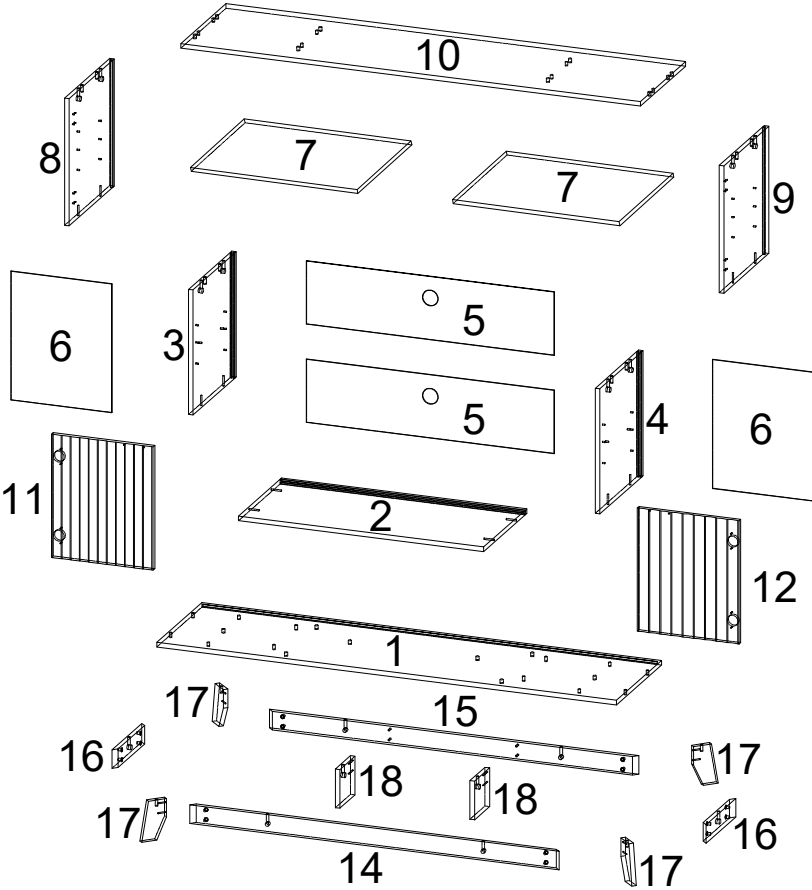


Part List

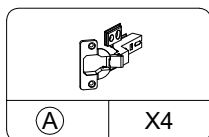


DOOR HINGE

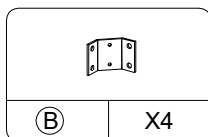


LEG SUPPORT

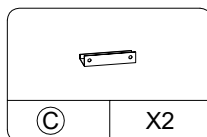


HANDLE

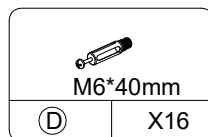


CAM BOLT
spare:1

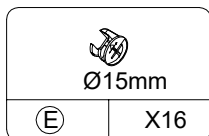


CAM LOCK
spare:1

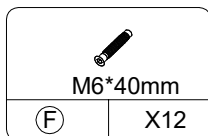


SCREW
spare:1

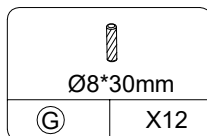


DOWEL
spare:1

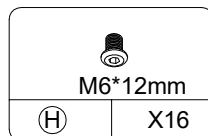



BOLT
spare:1

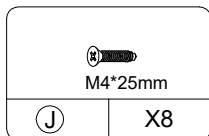


SCREW

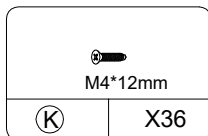



SCREW
spare:3

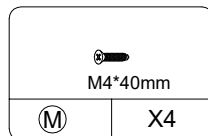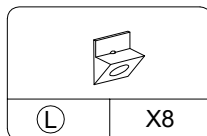

SCREW

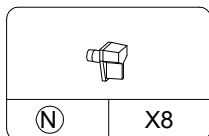

SHELF SUPPORT

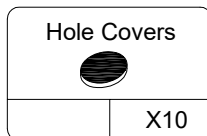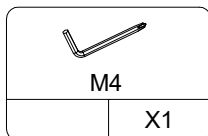


Part List


Cam Lock Fastening System

insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

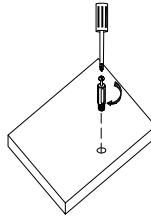

2

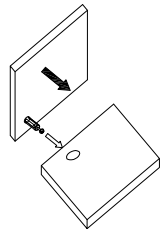


3

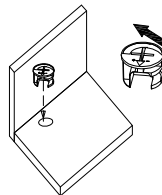

The opening must point toward the edge of the board


4

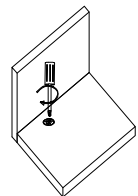


Step 1

	
M6*40	
Ⓕ	X4

	
M4	
	X1

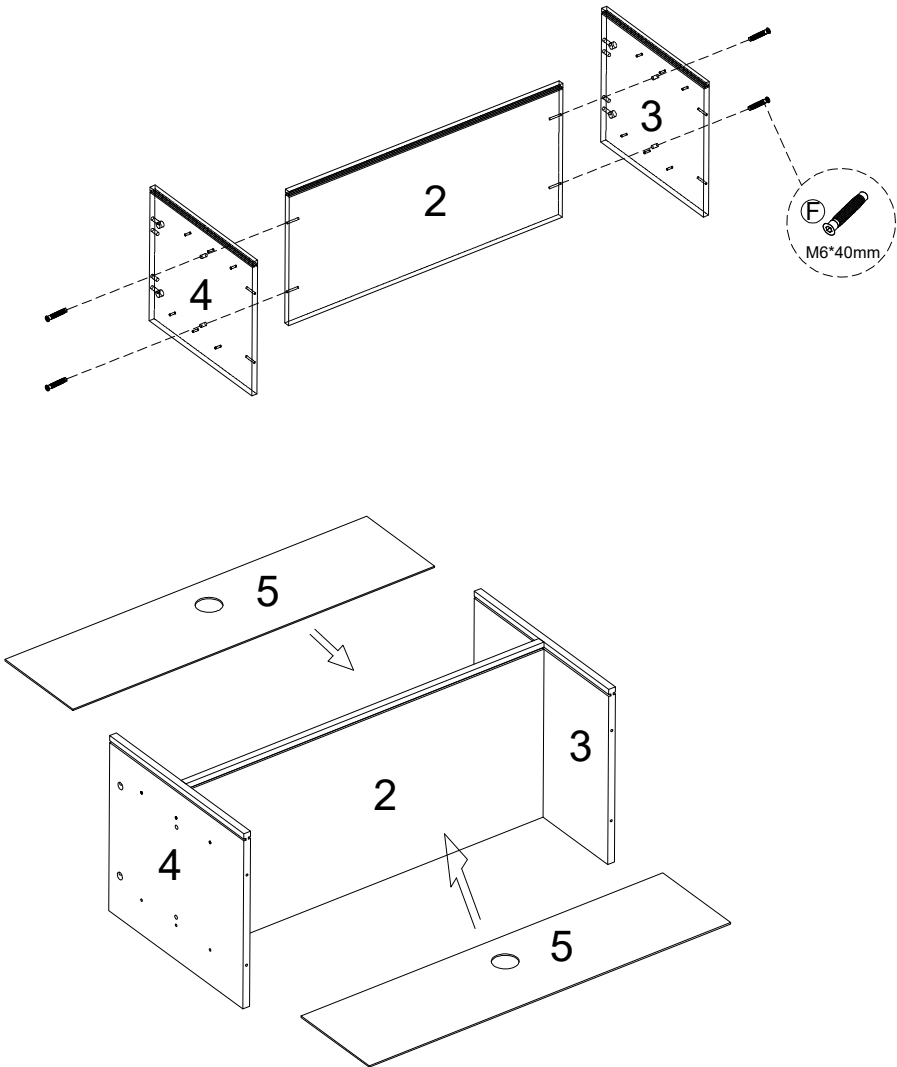


Step 2




	
M6*40mm	
Ⓓ	X16

	
M4	
	X1

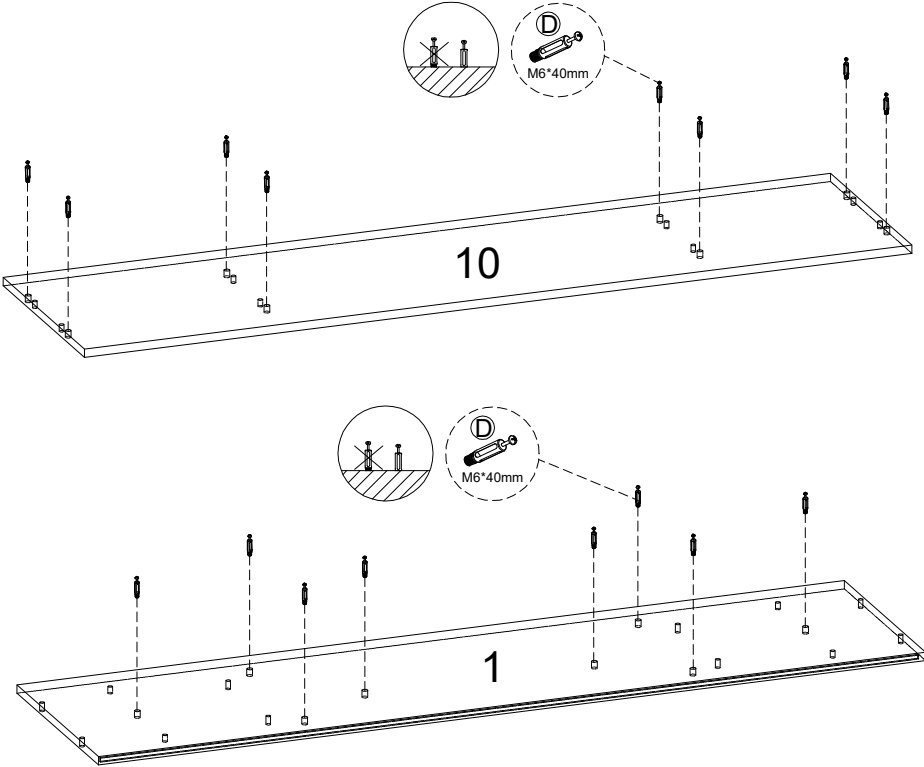


Step 3







	
Ø15mm	
(E)	X8

	
Ø8*30mm	
(G)	X8

	
M4	
	X1

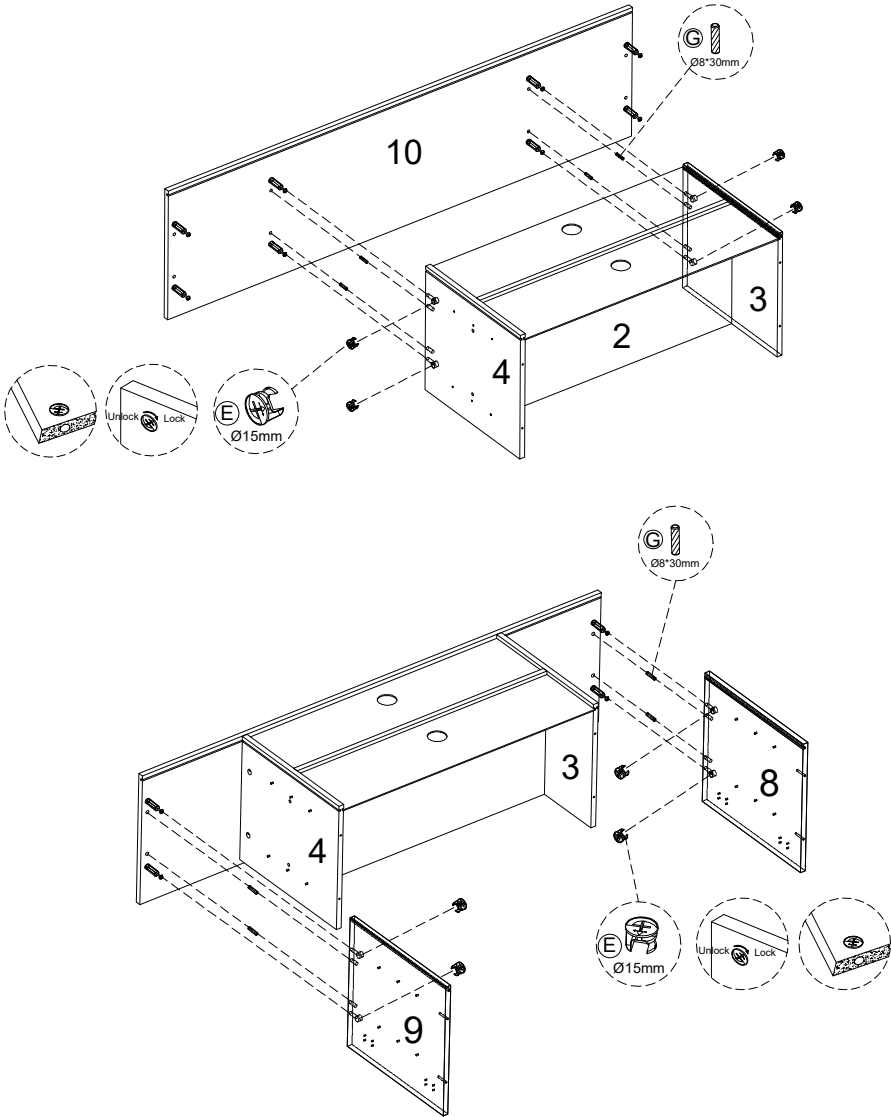


Step 4

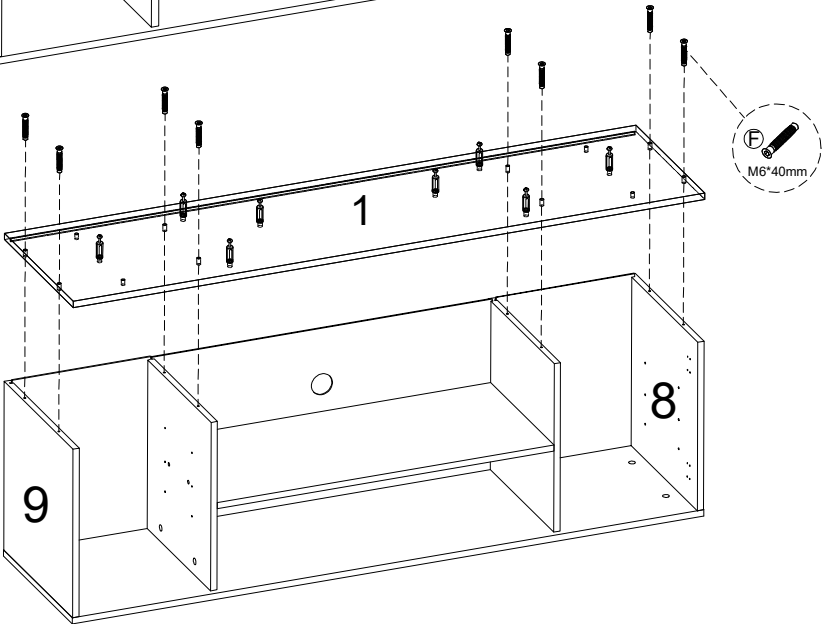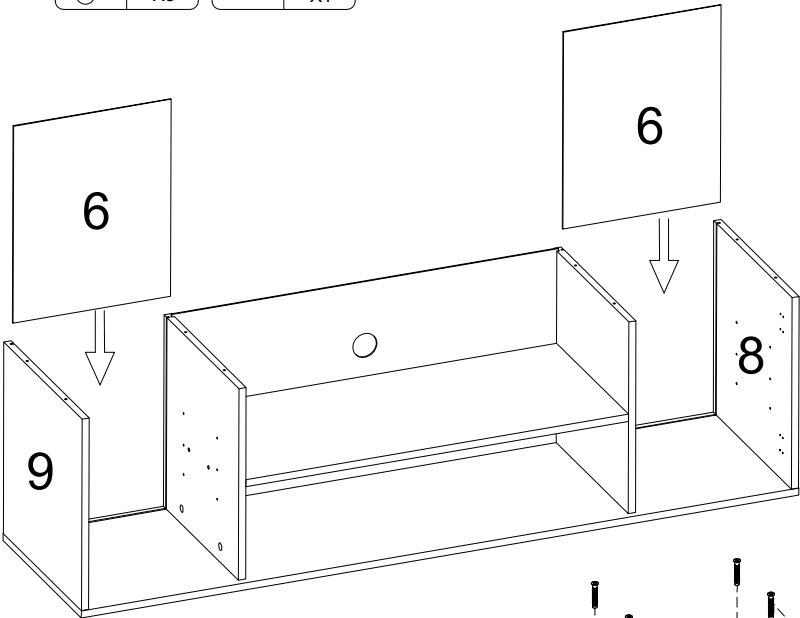


Step 5

	
Ø8*30mm	
Ⓒ	X4

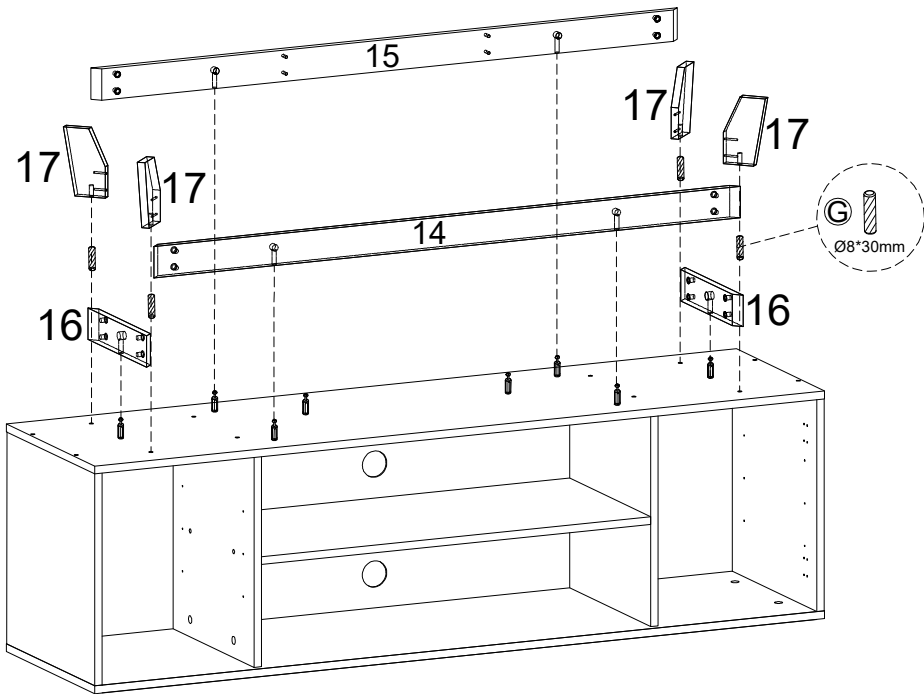

Step 6



(B)	X4


(E)	X8

(H)	X16







(J)	X8

(M)	X4





	X1

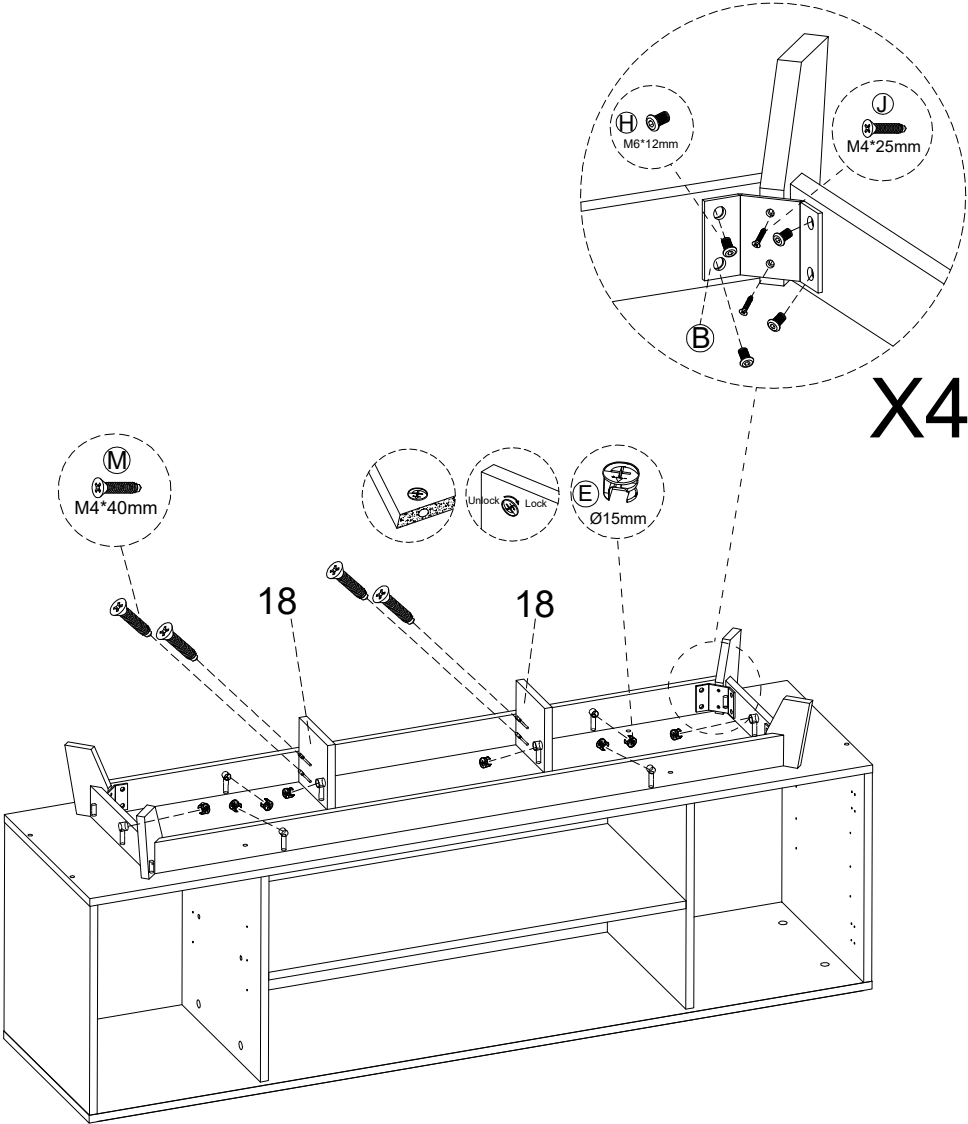


Step 7

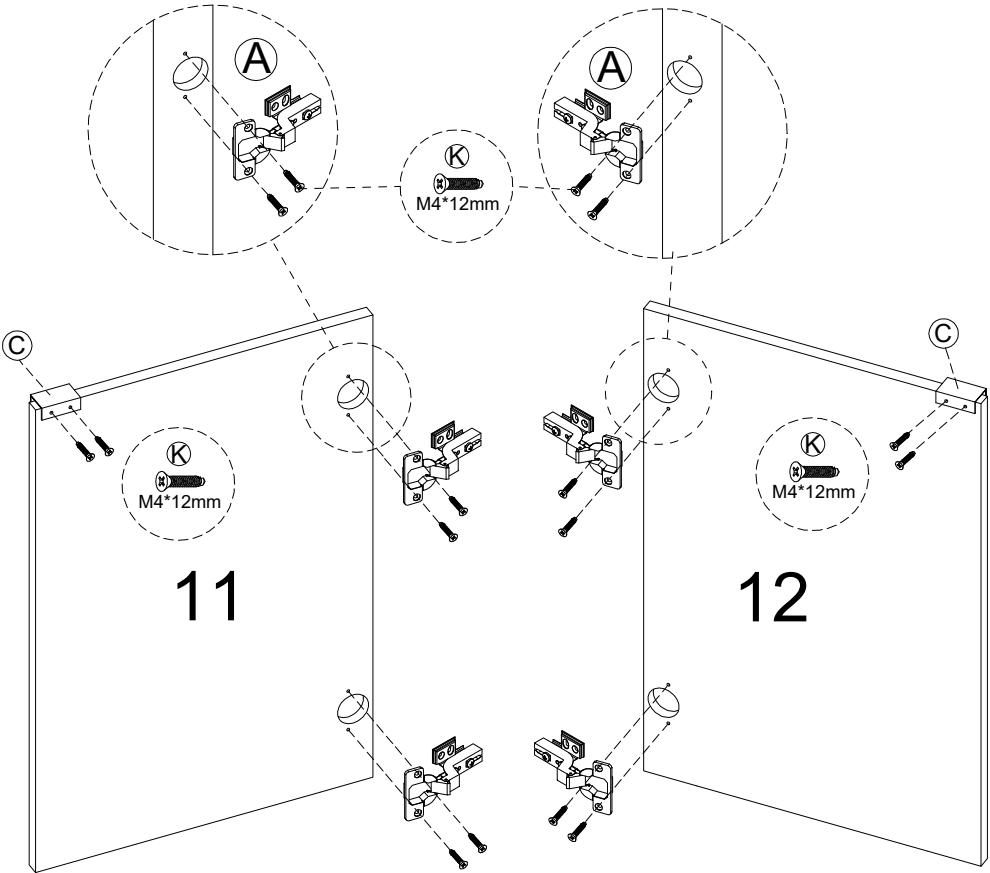

Step 8

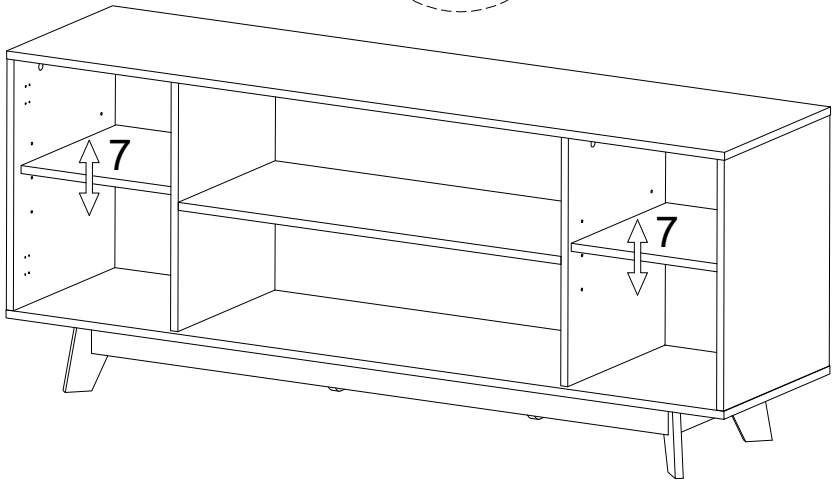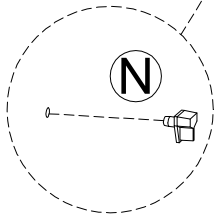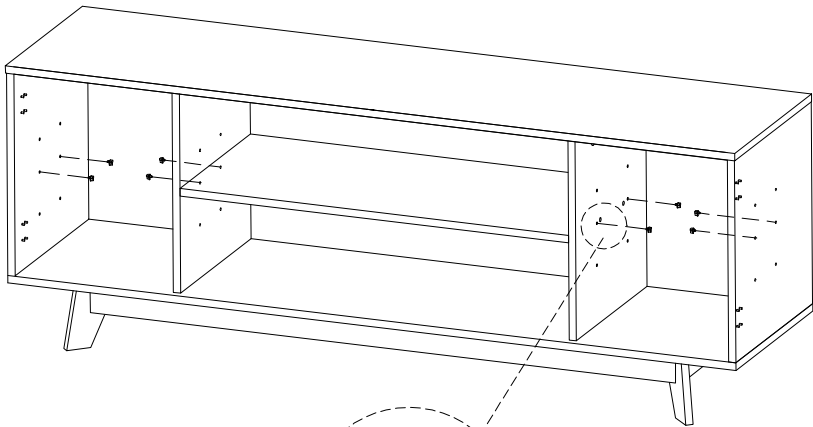


Step 9






 M4*12mm	
(K)	X24

	
(L)	X8

 M4	
	X1


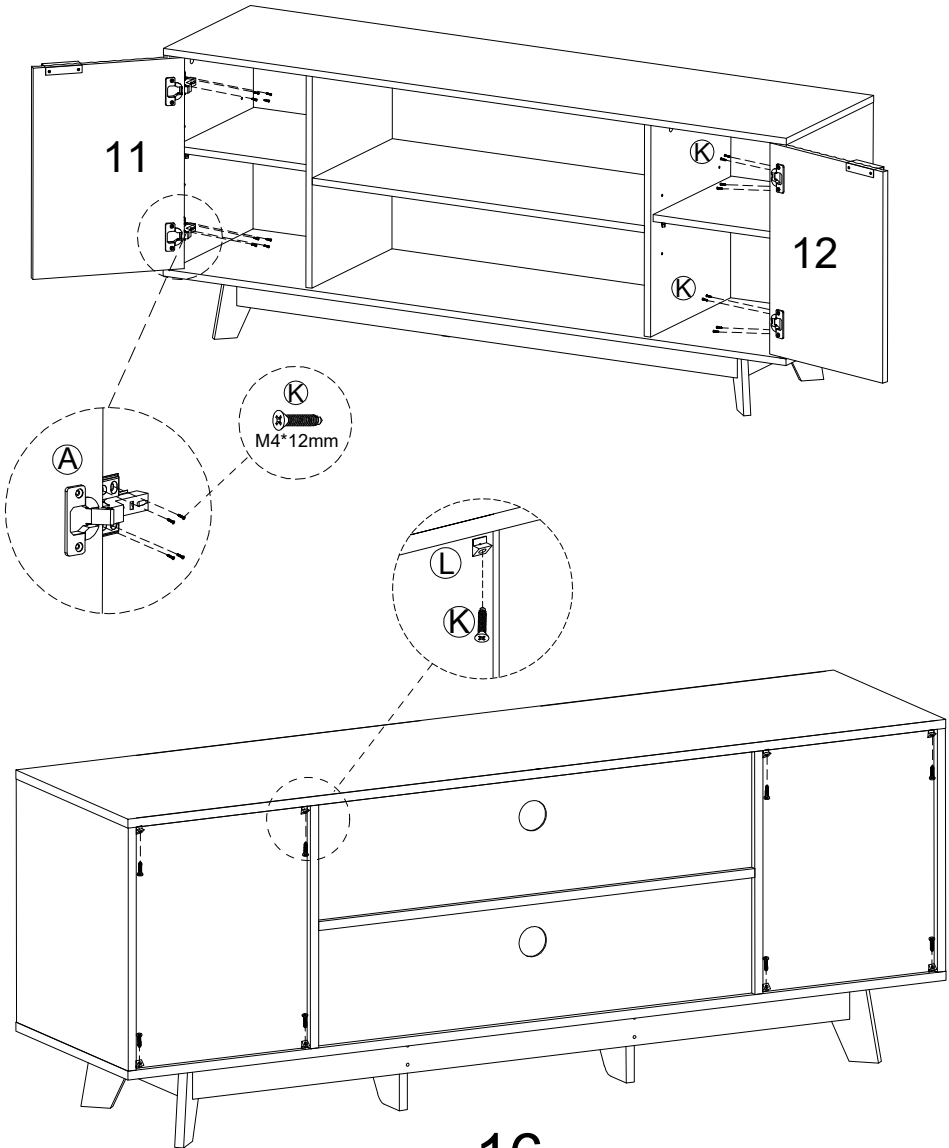


Step 10

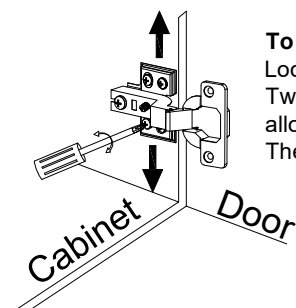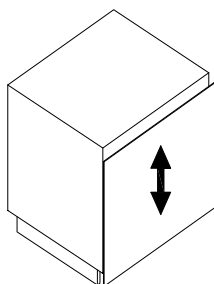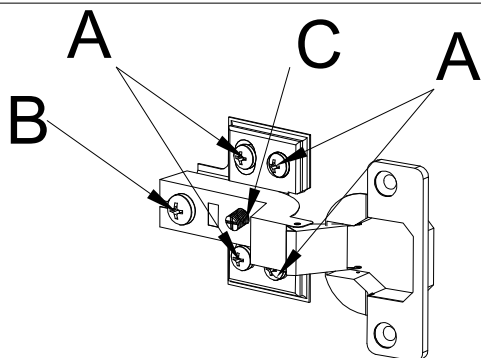



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

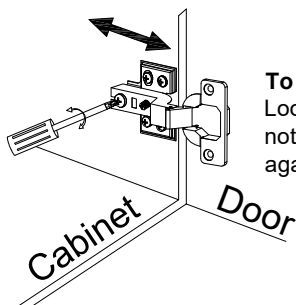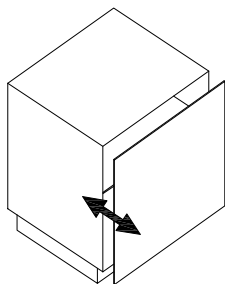

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

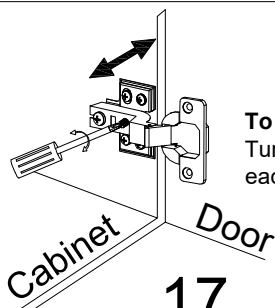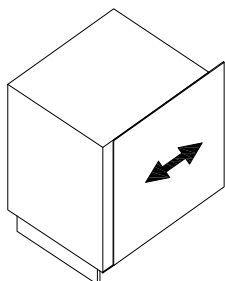

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.