

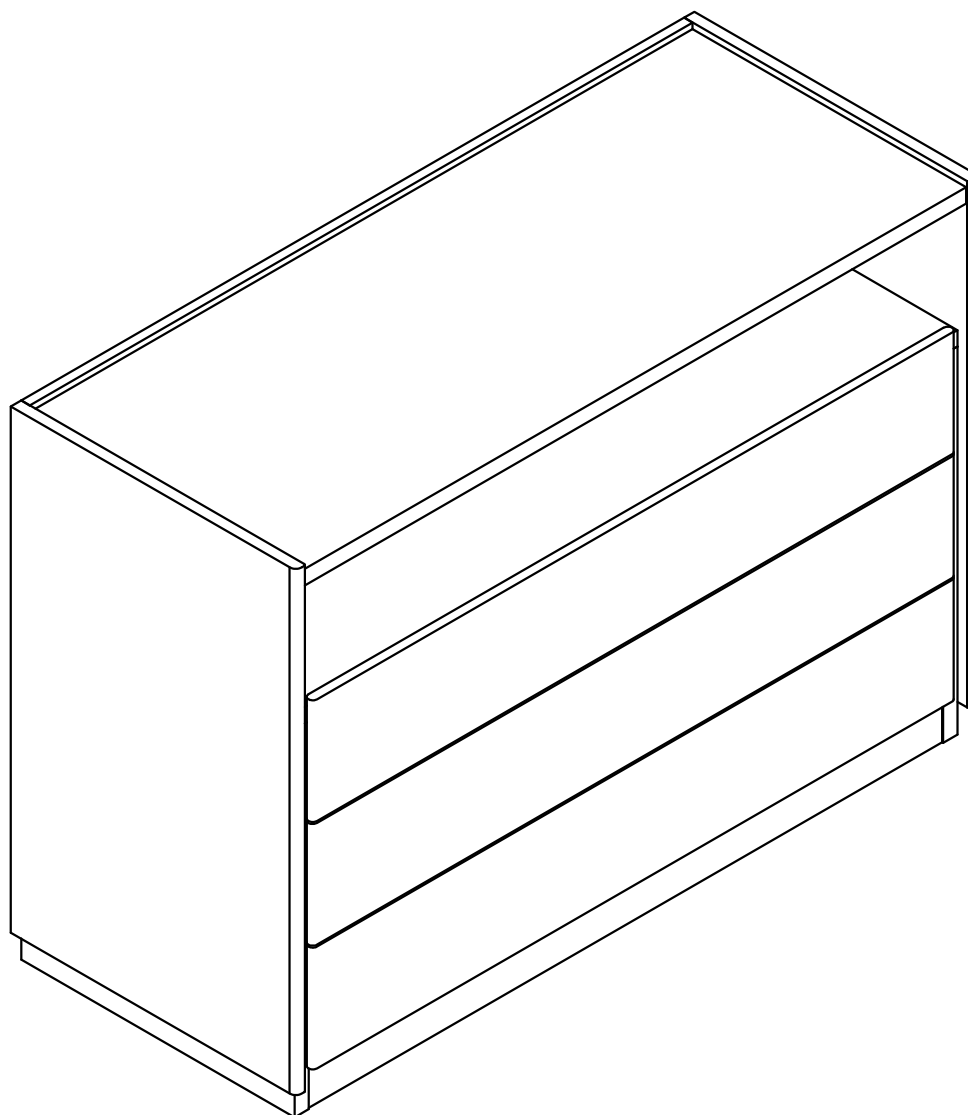
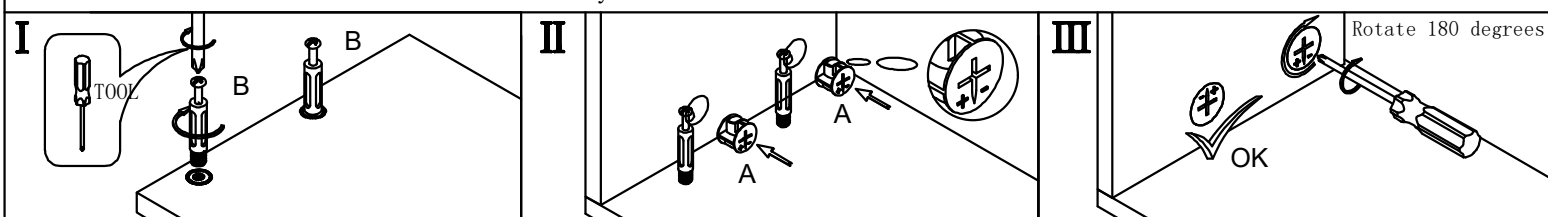






Installation Instructions















Disassembly and installation of accessories



A 36PCS  Ø12*10mm	B 36PCS  Ø6*25mm	C 12PCS  Ø8*30mm	D 38PCS  Ø3.5*14mm	E 36PCS  Ø3.5*45mm	F 3PCS  12"	G 14PCS  12*10mm
H 36PCS  Ø9*9mm	I 12PCS  Ø6*25mm	J 10PCS  Ø10*5mm	K 8PCS  Ø7*38mm	L 12PCS  Ø6*35mm	M 1PCS 	N 1PCS 

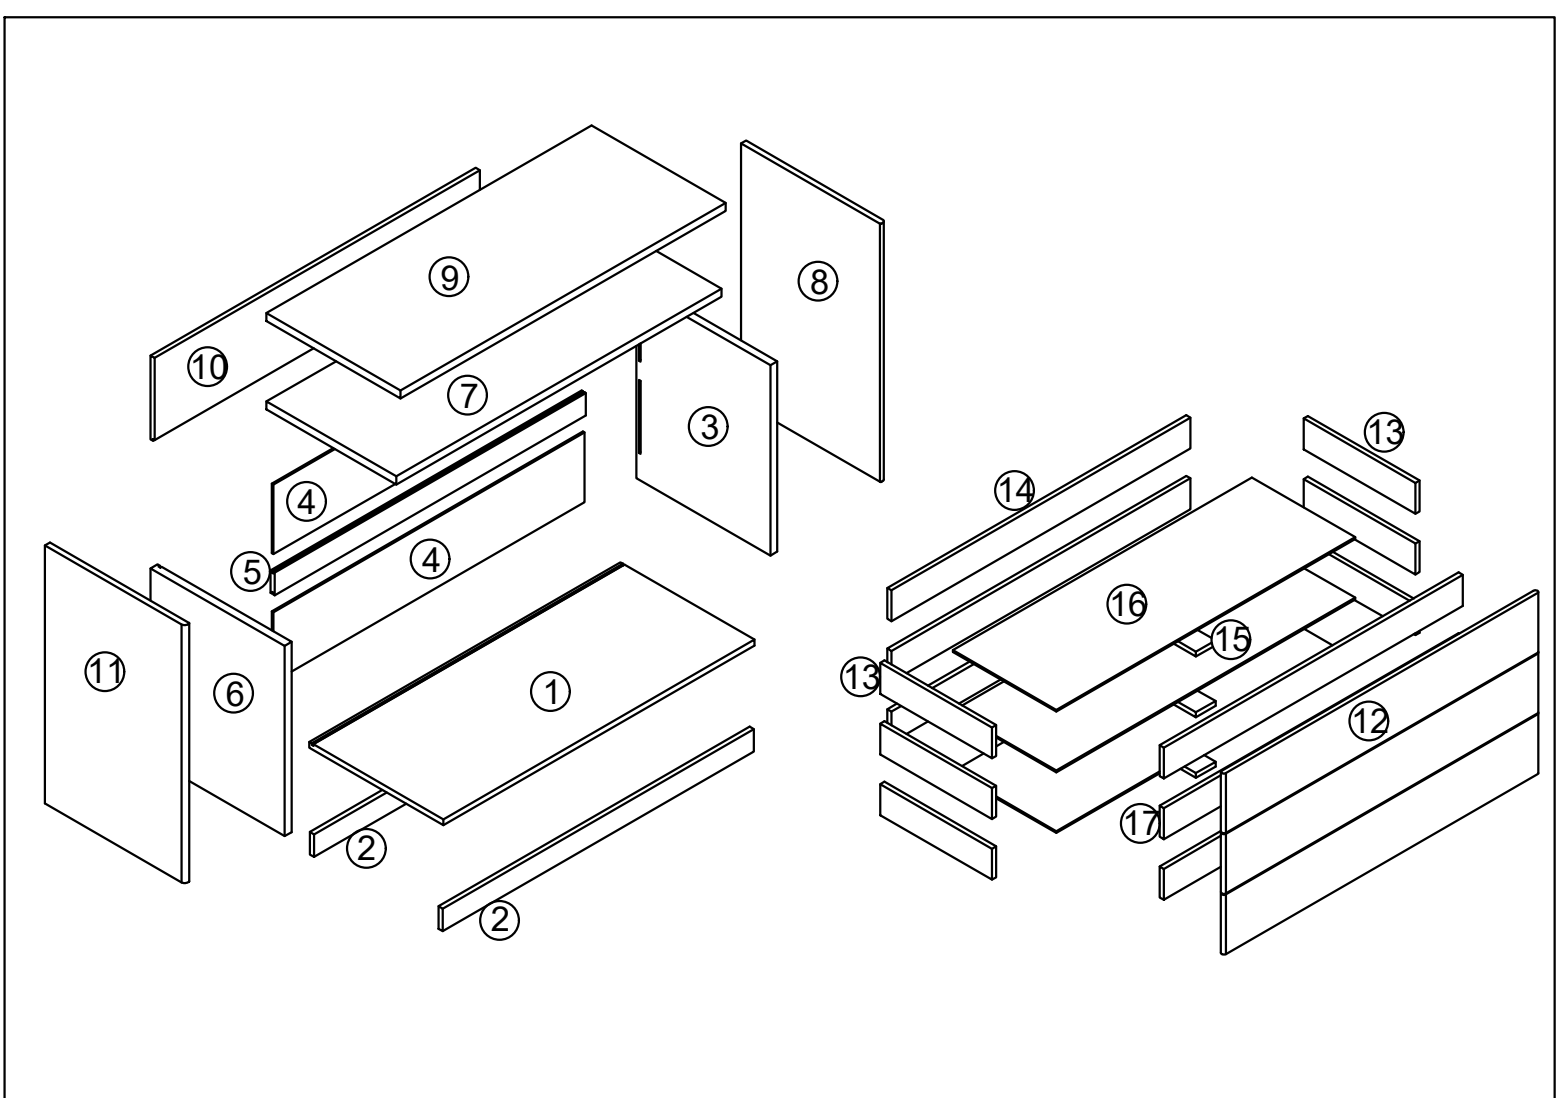

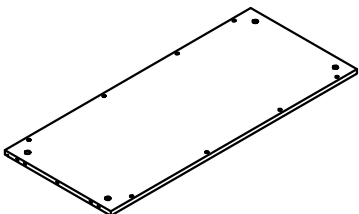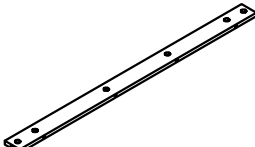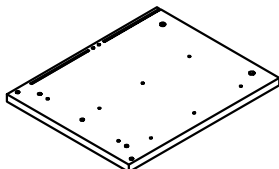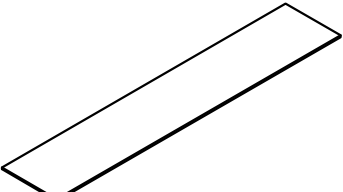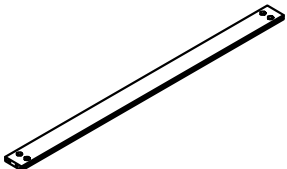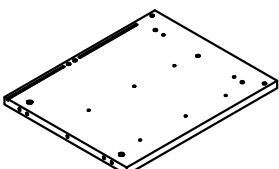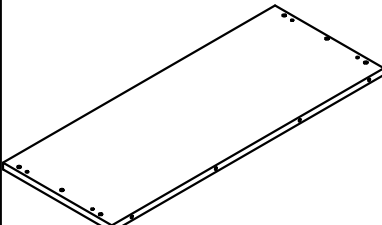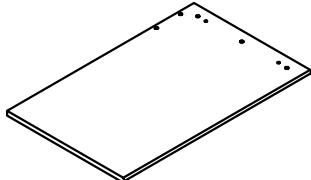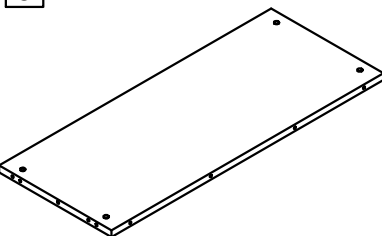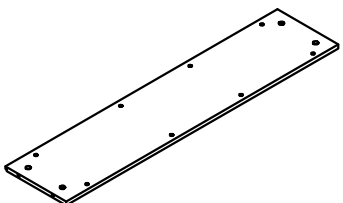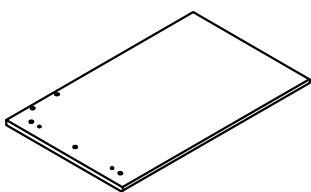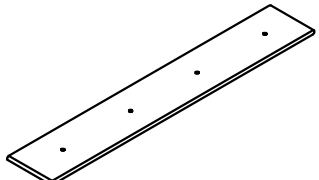 1PC	 2PCS	 1PC	 2PCS
 2PCS	 1PC	 1PC	 1PC
 2PCS	 1PC	 1PC	 3PCS

13	14	15	16	17
6PCS	3PCS	3PCS	3PCS	3PCS

STEP 1 First, install Screw B onto the plate securely.

B*5 B*5 B*6 B*4 B*5 B*5

B	34PCS
Φ6*28mm	

STEP 2

A*4

A	8PCS
Φ12*10mm	

STEP 3

J*6

J	6PCS
Φ10*5mm	

Install Foot Pad J.

STEP 4

Please install according to the method shown in the diagram.

A*3 C*2

A	5PCS
Φ12*10mm	


C	2PCS
Φ8*30mm	

STEP 5

Insert the back panel 4.


4

STEP 6

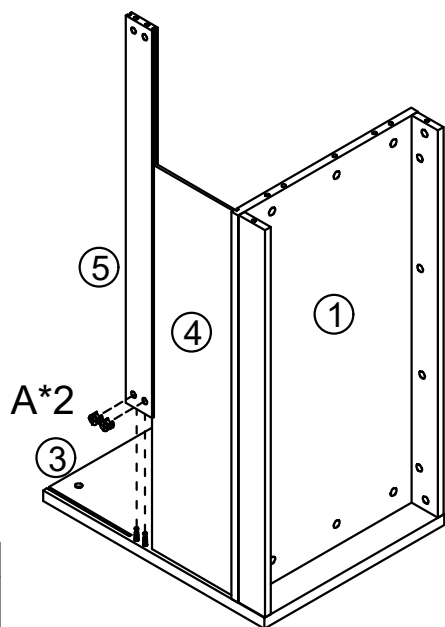

A	2PCS
Φ12*10mm	


STEP 7

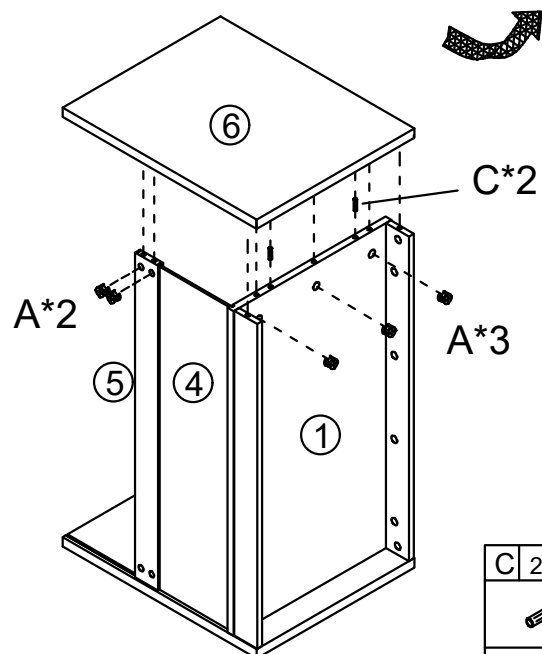

A	5PCS
Φ12*10mm	

C	2PCS
Φ8*30mm	


STEP 8

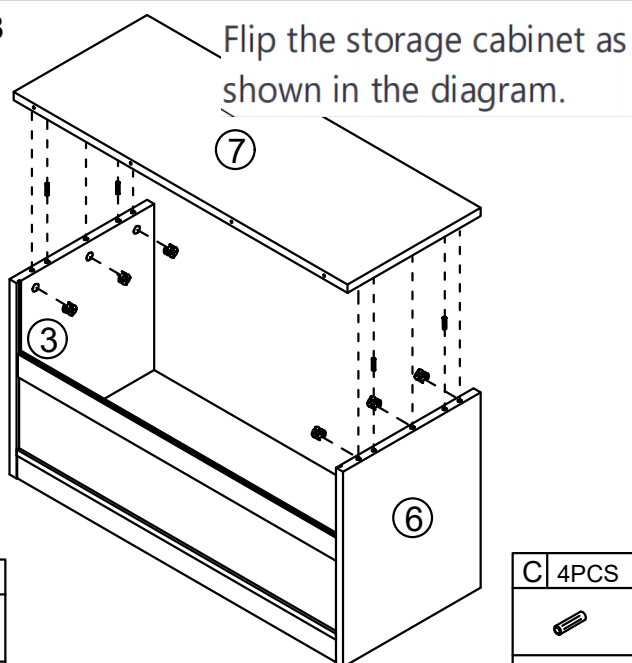

A	6PCS
Φ12*10mm	

STEP 9

Insert the back panel 4.

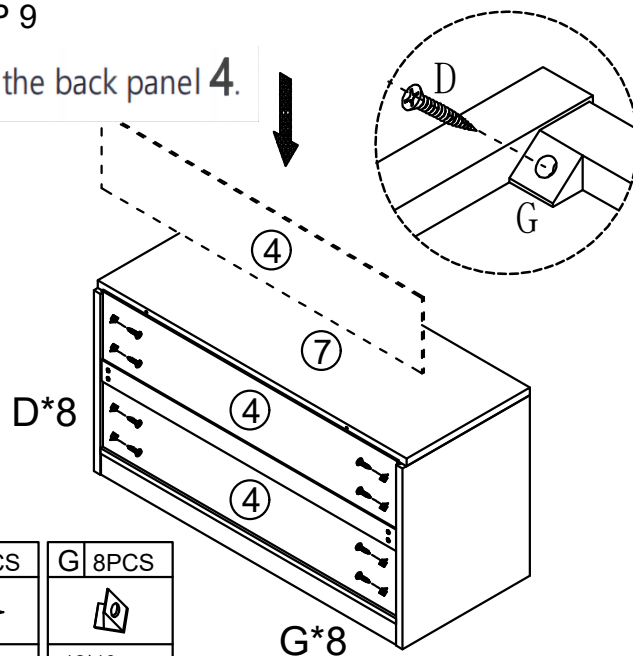


C	4PCS
Φ8*30mm	

D	8PCS
Φ3.5*14mm	

G	8PCS
12*10mm	


STEP 10

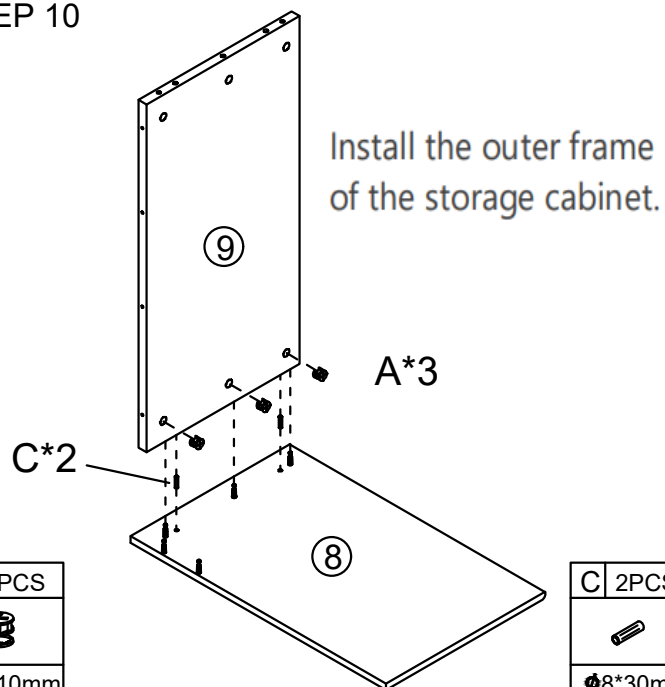

A	3PCS
Φ12*10mm	


C	2PCS
Φ8*30mm	

STEP 11

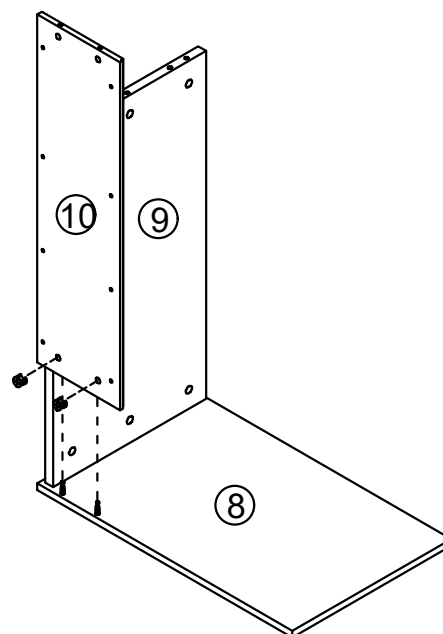

A	2PCS
Φ12*10mm	


STEP 12

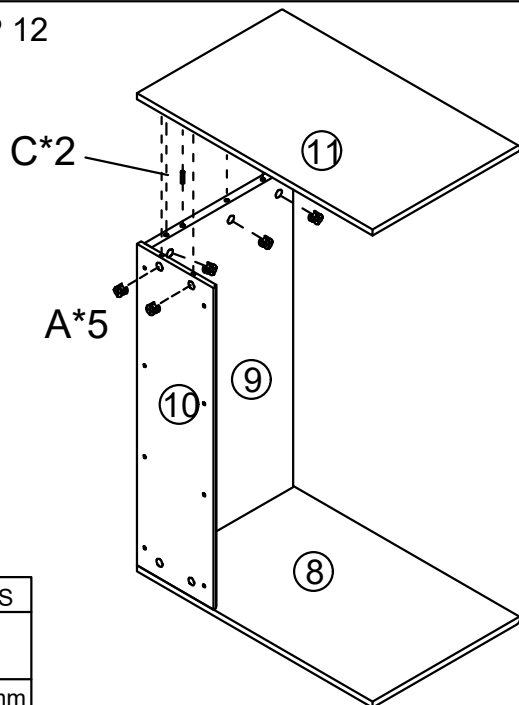

A	3PCS
	
Φ12*10mm	


C	2PCS
	
Φ8*30mm	

STEP 13

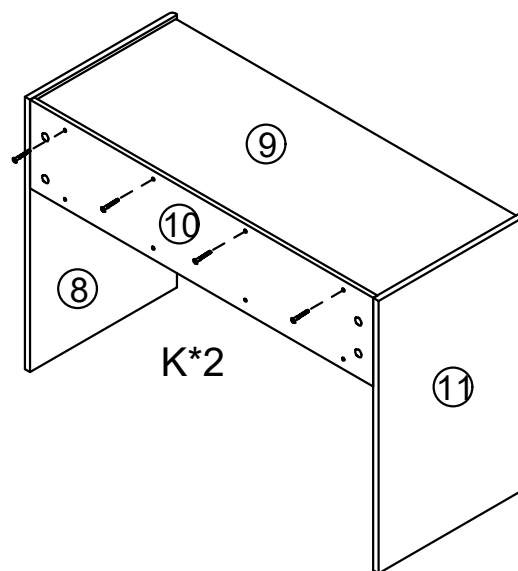

K	4PCS
	
Φ7*38mm	


STEP 14

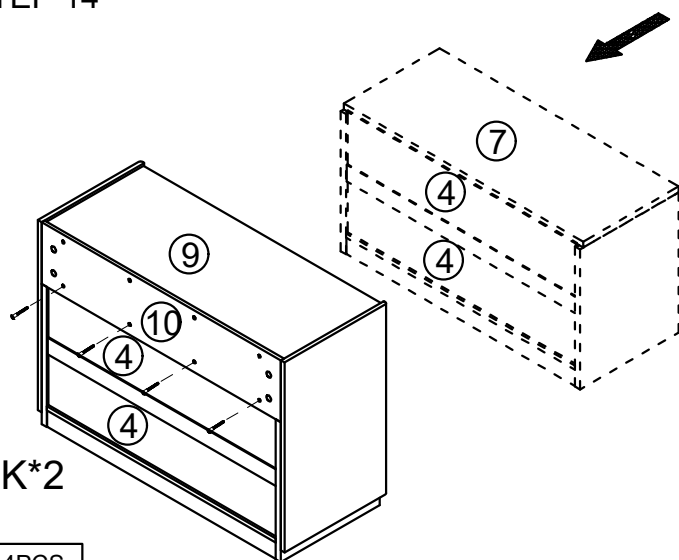

K	4PCS
	
Φ7*38mm	


Combine the storage cabinets together.

STEP 15

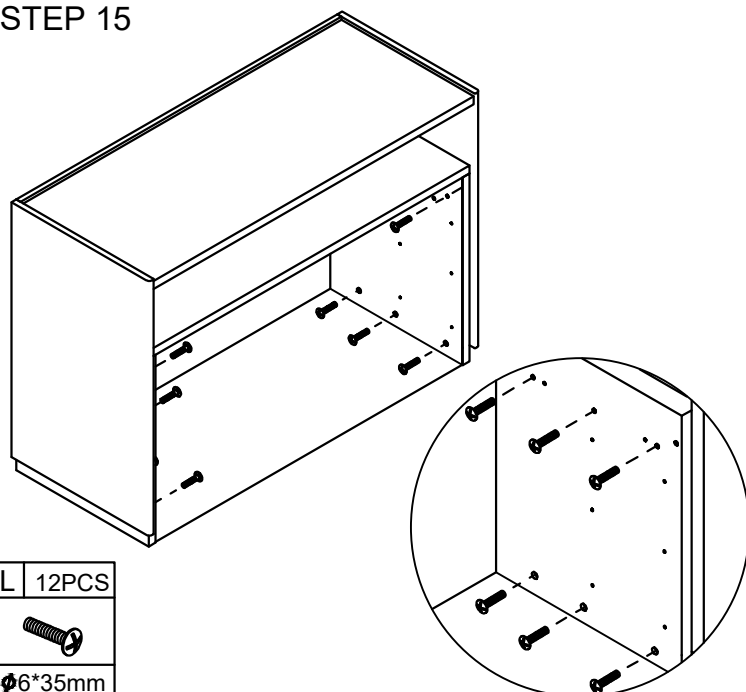



L	12PCS
	
Φ6*35mm	

STEP 16




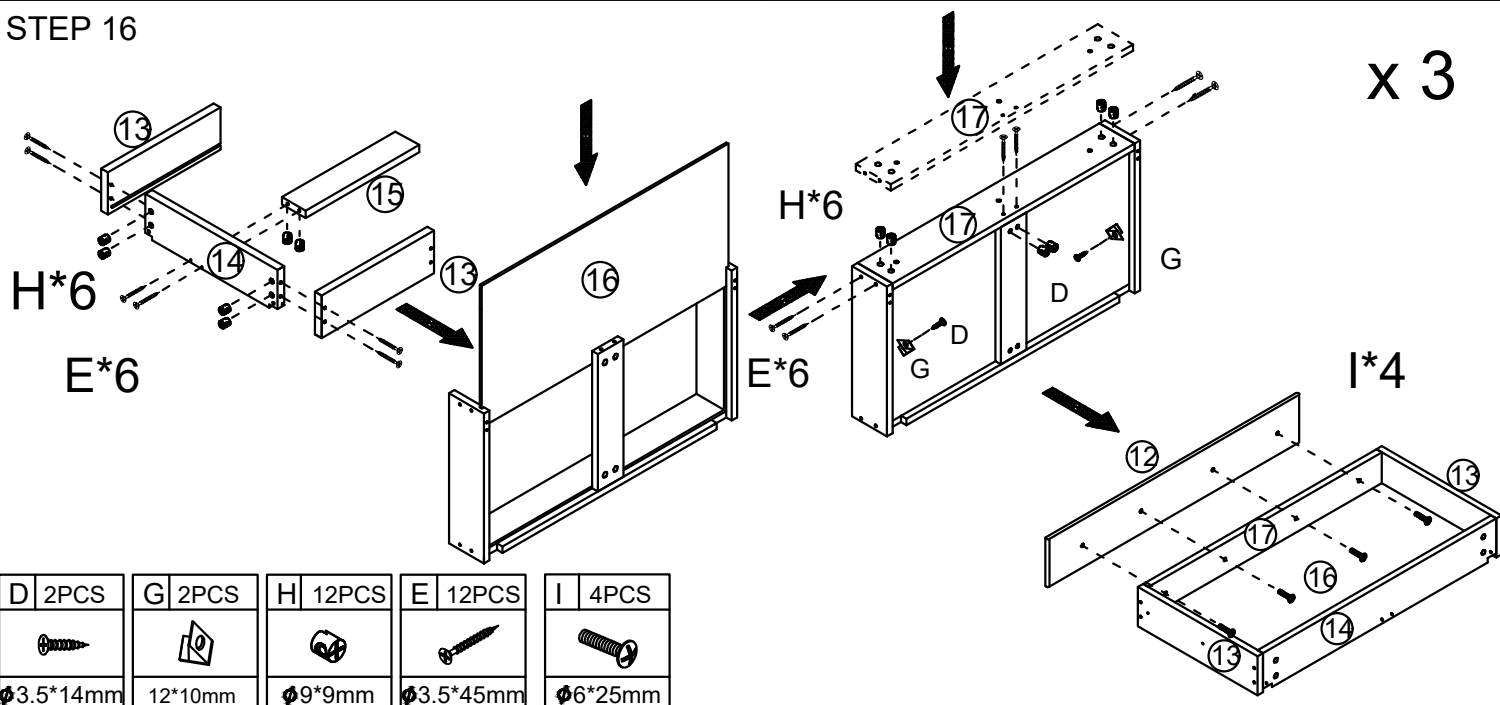


D	2PCS	G	2PCS	H	12PCS	E	12PCS	I	4PCS
									
Φ3.5*14mm		12*10mm		Φ9*9mm		Φ3.5*45mm		Φ6*25mm	

STEP 17





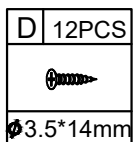
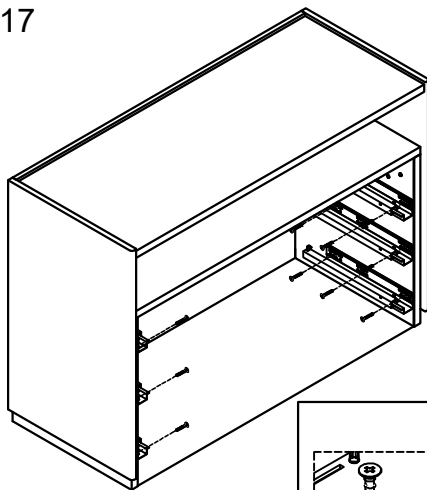


STEP 18

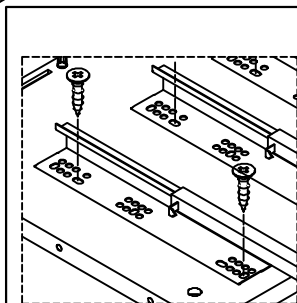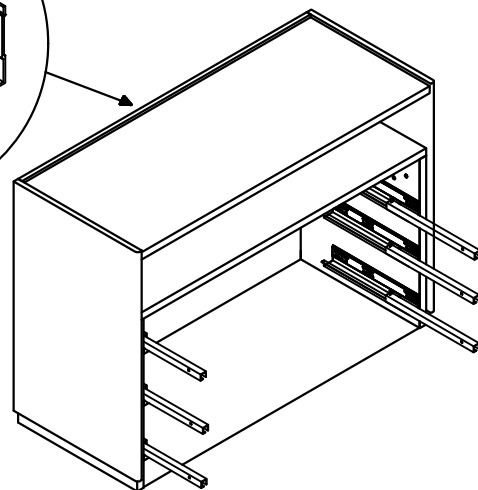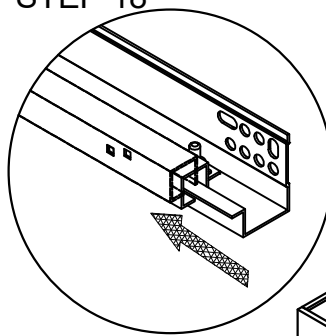


Align the holes correctly during guide rail installation.

STEP 19

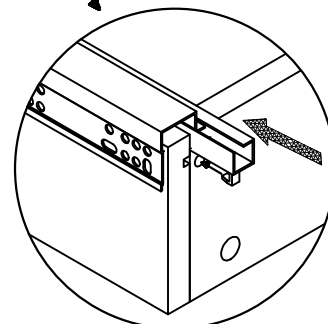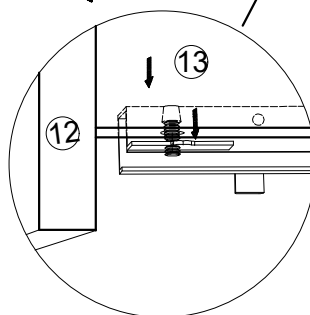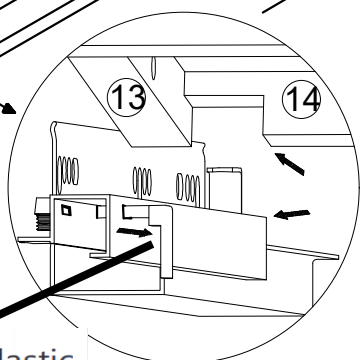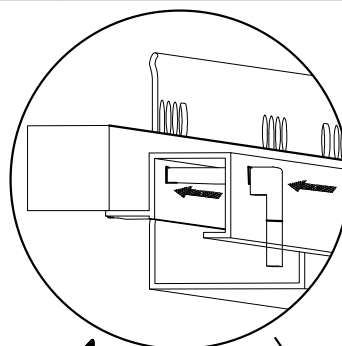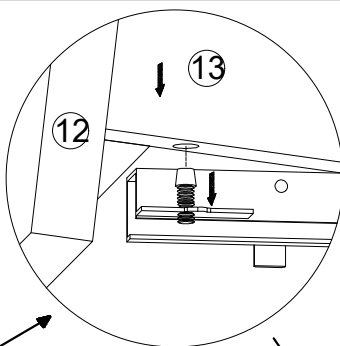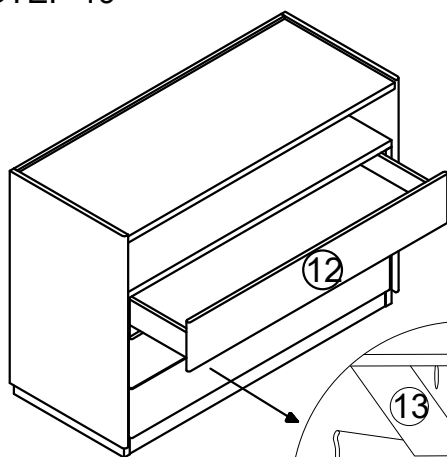


Pull out the white plastic piece and secure the drawer in place.

Guide rail installation effect drawing

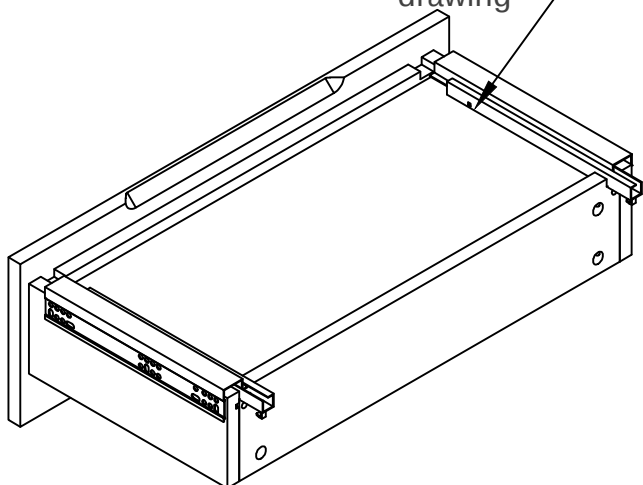

STEP 20

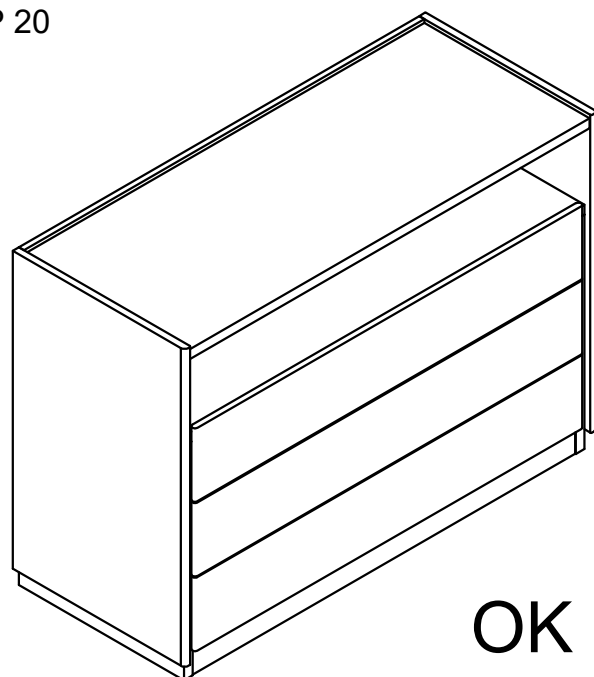

OK