

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or









NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item

* This item should be assembled on a soft surface to prevent scratching the finish during assembly

* This item may require periodic tightening

Part List and Hardware List

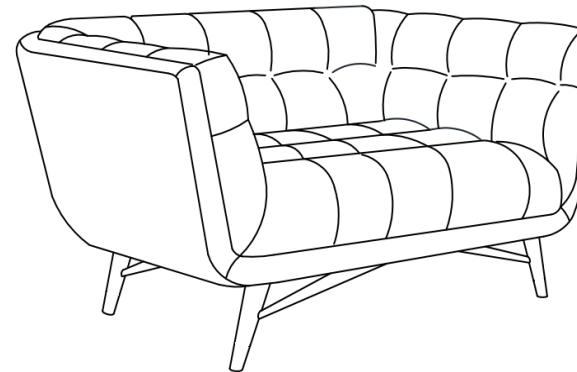
PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat		1X
B	Front Leg		2X
C	Back Leg		2X
HW1	Socket Screws 8*1.25*65MM		8X
HW2	Socket Screws 8*1.25*40MM		4X
HW3	Split Lock Washer(M8)		12X
HW4	Flat Washer(M8)		12X
HW5	Allen Key		1X

SAFAVIEH C O U T U R E

SFV4724

Dimensions: 43.31"W*34.25"D*28.94"H

Weight Capacity: 275 lbs



WARNING: DO NOT STAND ON CHAIR

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

**The legs and hardware are located underneath the
Chair in the zipper compartment**

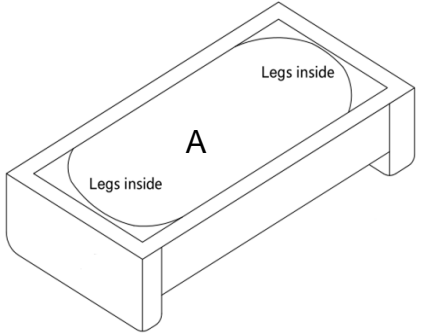
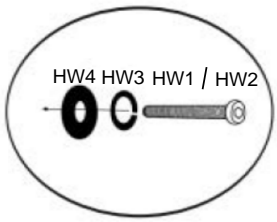
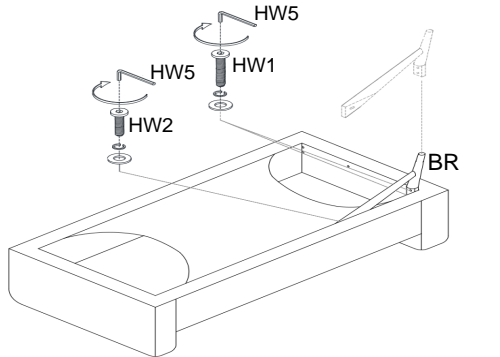
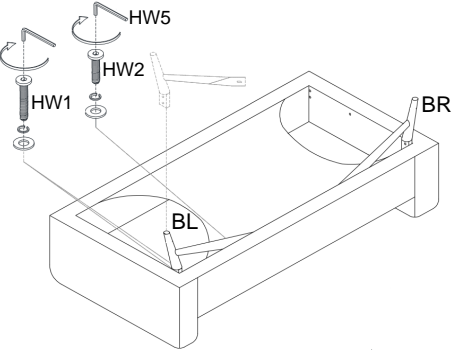
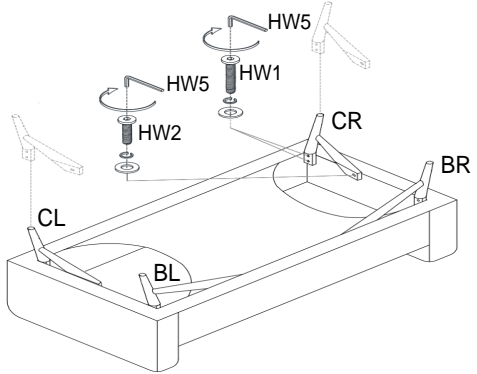
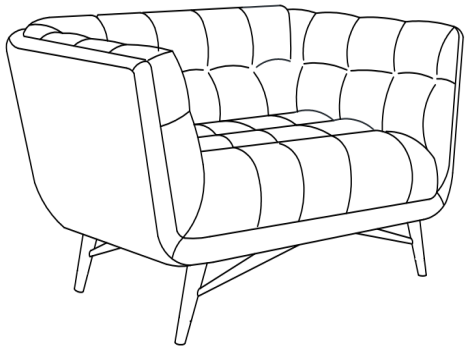
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen key

		
<p>STEP1 OPEN THE ZIPPER ON THE UNDERSIDE OF THE SEAT AND TAKE OUT LEGS AND HARDWARE</p>	<p>STEP2 PUT THE WASHERS ON THE SCREW IN THE ORDER SHOWN IN THE PICTURE</p>	<p>STEP3 ATTACH 1 PIECE OF FRONT LEG(BR) TO THE BOTTOM OF SEAT(A) BY USING 2 PIECES OF SCREWS(HW1) AND 1 PIECE OF SCREW(HW2) WITH 3 PIECES OF SPLIT LOCK WASHER(HW3) AND 3 PIECES OF FLAT WASHER(HW4) AS SHOWN. TIGHTEN ALL SCREWS BY USING ALLEN WRENCH(HW5) AS SHOWN.</p>
		
<p>STEP4 REPEAT THE SAME STEPS FOR ANOTHER 1 PIECE OF FRONT LEG(BL). TIGHTEN ALL SCREWS BY USING ALLEN WRENCH(HW5) AS SHOWN</p>	<p>STEP5 ATTACH 1 PIECE OF BACK LEG(CR) TO THE BOTTOM OF SEAT(A) BY USING 2 PIECES OF SCREW(HW1) AND 1 PIECE OF SCREW(HW2) WITH 3 PIECES OF SPLIT LOCK WASHER(HW3) AND 3 PIECES OF FLAT WASHER(HW4) AS SHOWN. REPEAT THE SAME STEPS FOR OTHER 1 PIECE OF BACK LEG(CL). TIGHTEN ALL SCREWS BY USING ALLEN WRENCH(HW5) AS SHOWN.</p>	<p>STEP6 CLOSE THE VELCRO STRIP ON THE BOTTOM OF THE SEAT(A). ASSEMBLY IS COMPLETE.</p>

The legs and hardware are located underneath the Chair in the zipper compartment