
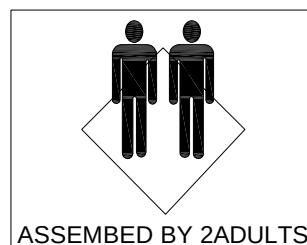
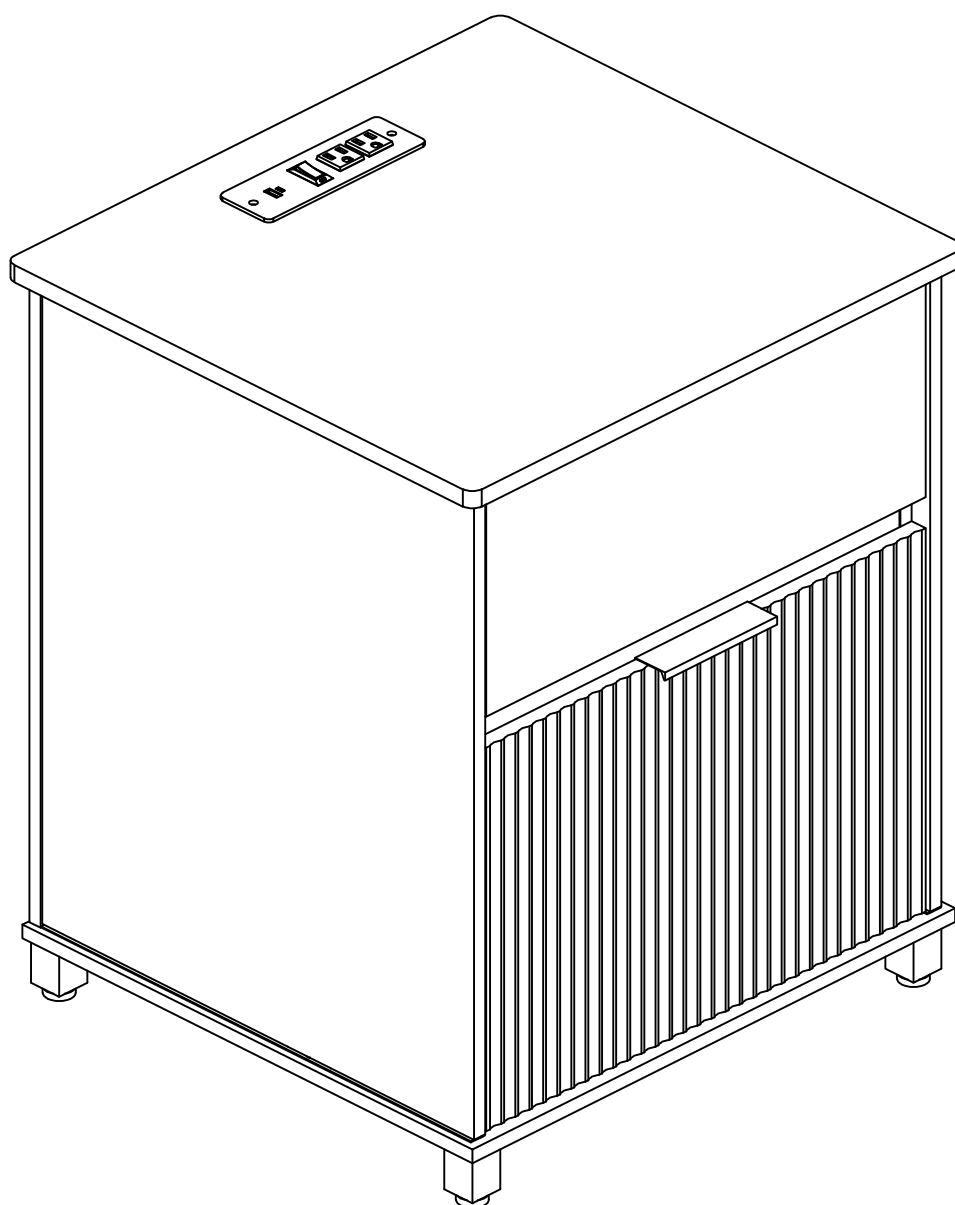
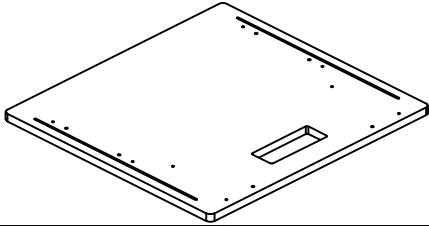
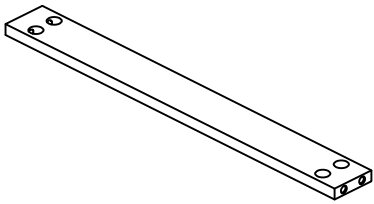
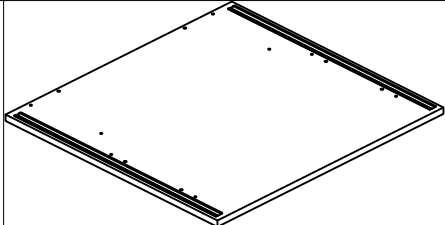
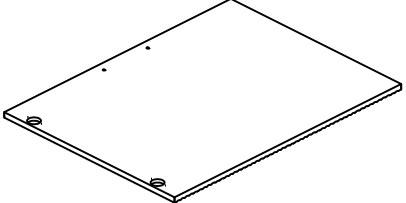
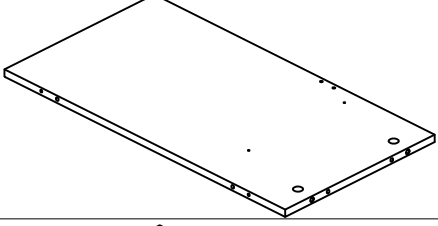
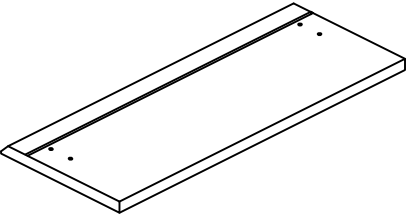
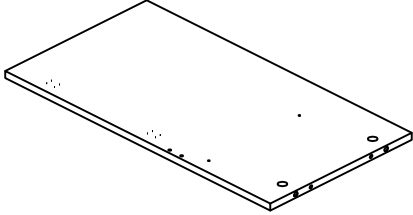
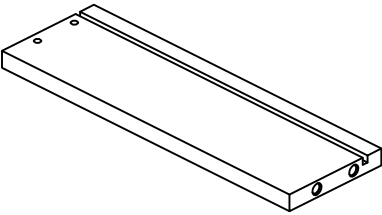
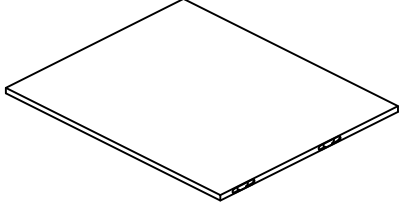
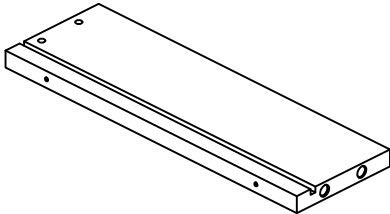
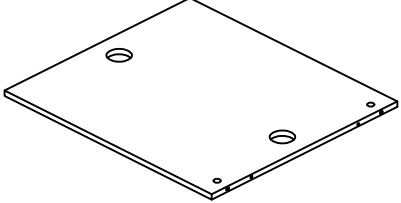
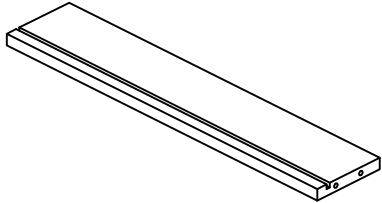
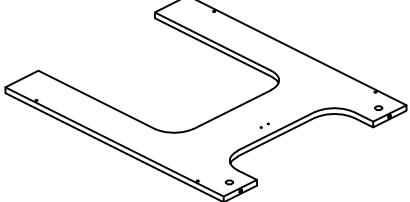









Assembly Instructions

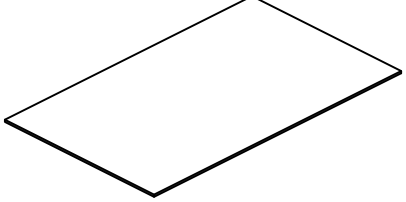


Parts List



ITEM	PART	QTY	ITEM	PART	QTY
①		1PC	⑧		1PC
②		1PC	⑨		1PC
③		1PC	⑩		1PC
④		1PC	⑪		1PC
⑤		2PCS	⑫		1PC
⑥		1PC	⑬		1PC
⑦		1PC	⑭		1PC

Hareware List

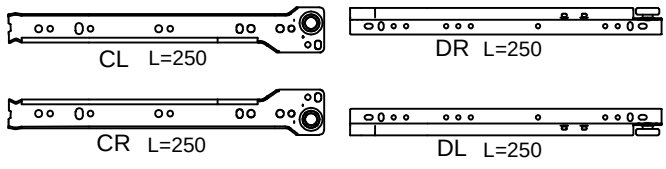

ITEM	PART	QTY	ITEM	PART	QTY
A	 Ø6x35mm	16+1PCS	J		1PC
B	 Ø15*10	16+1PCS	K		4PCS
C	 Ø6x30mm	16+1PCS	L		4PCS
D	 Ø5x38mm	16+1PCS	M		2PCS
E	 Ø6x3x12mm	20+2PCS	N		4PCS
F	 Ø8x4x12mm	26+2PCS			1PC
G		1PC			
H		2PCS			
I		1PC			

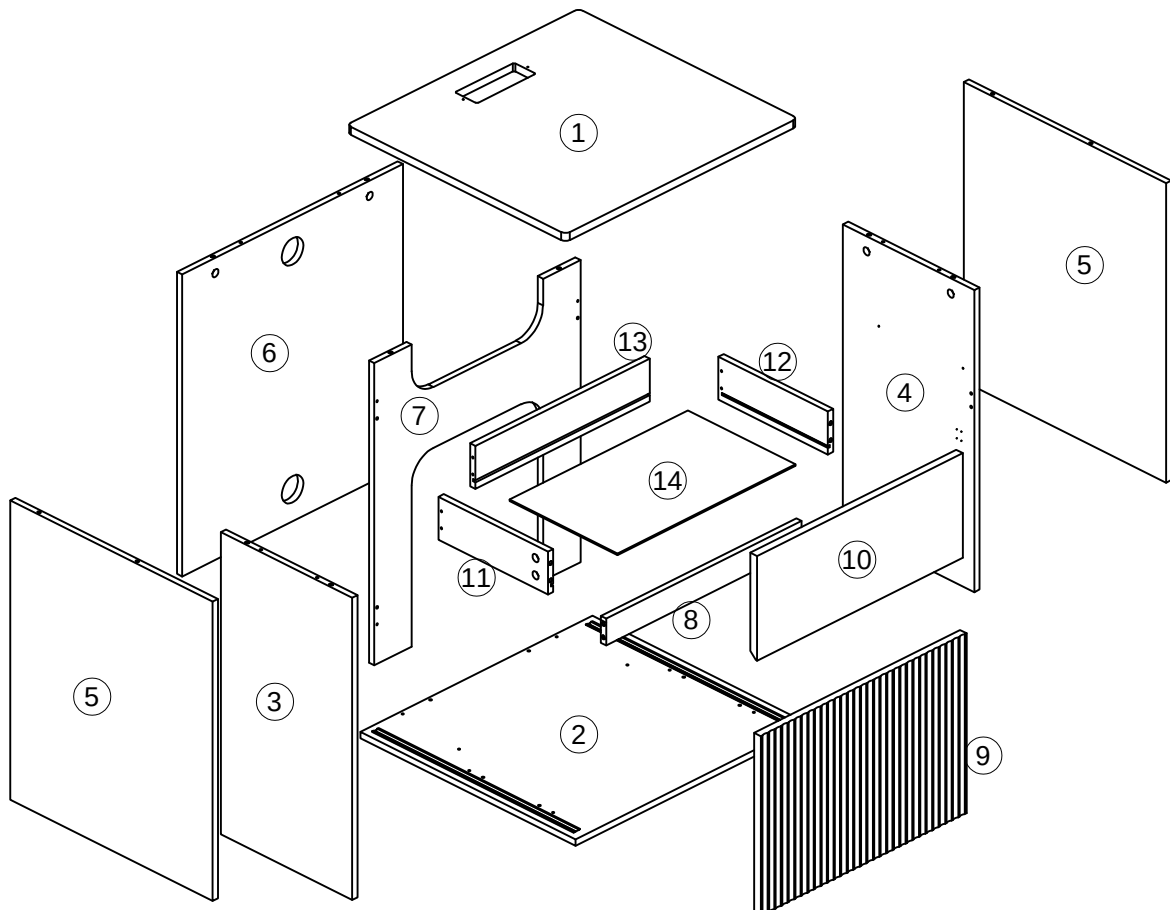


1

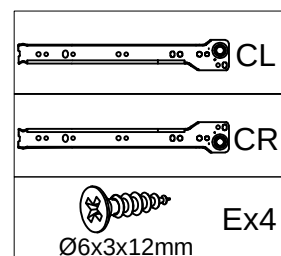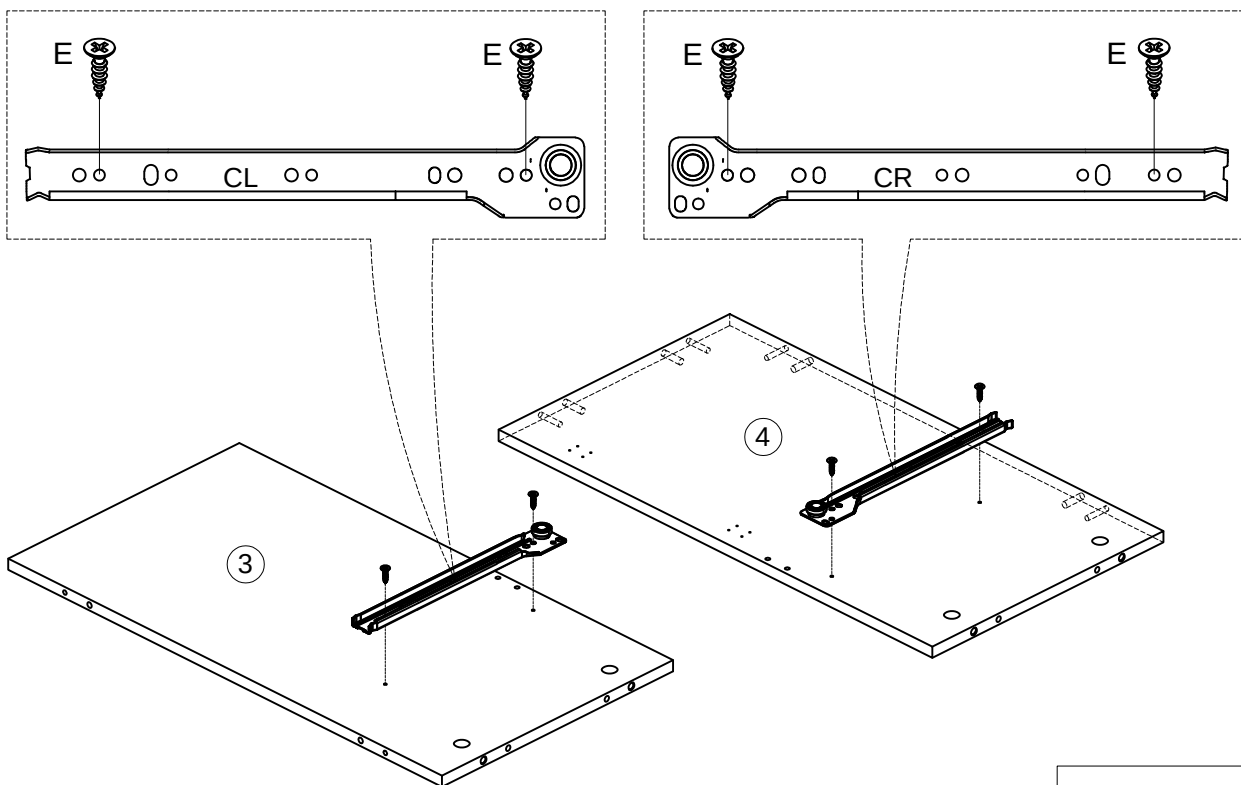

2

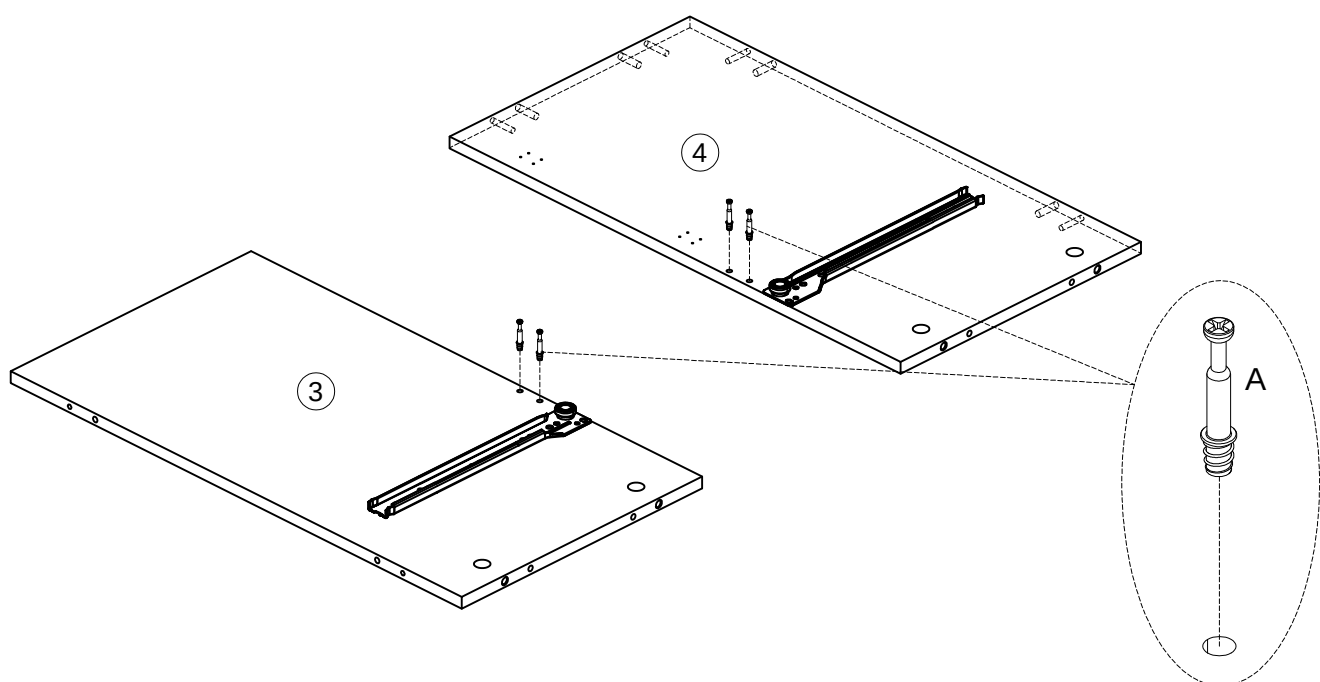


3

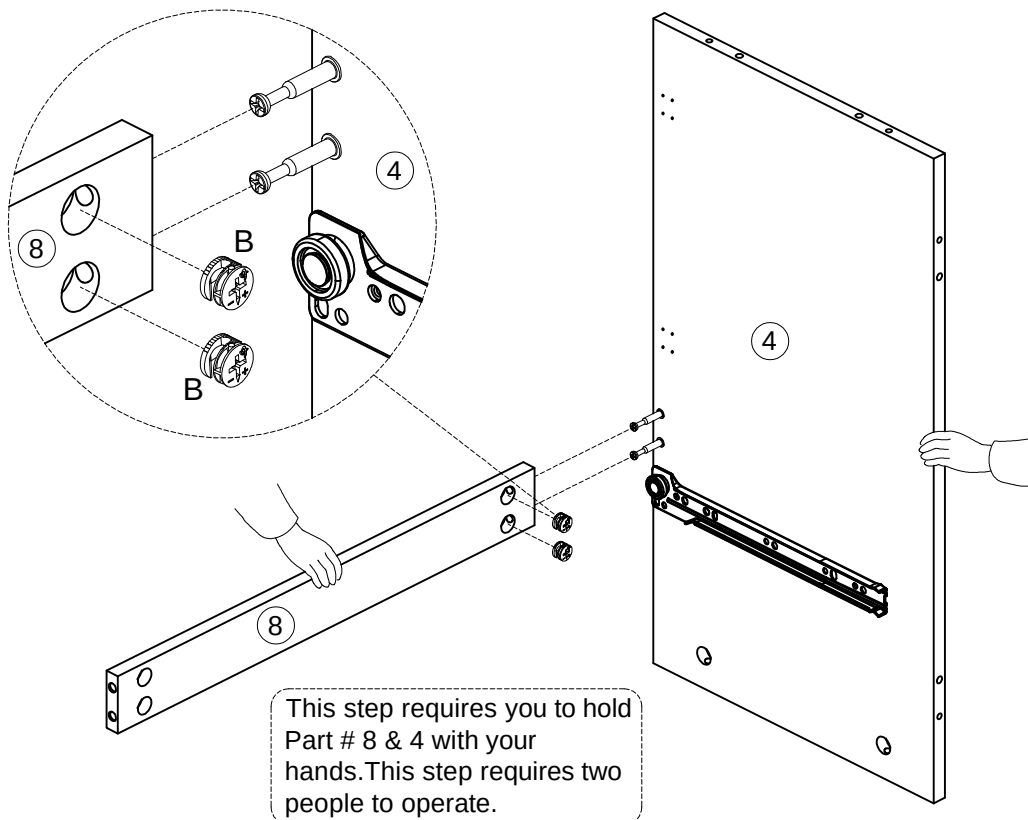



Bx2

4

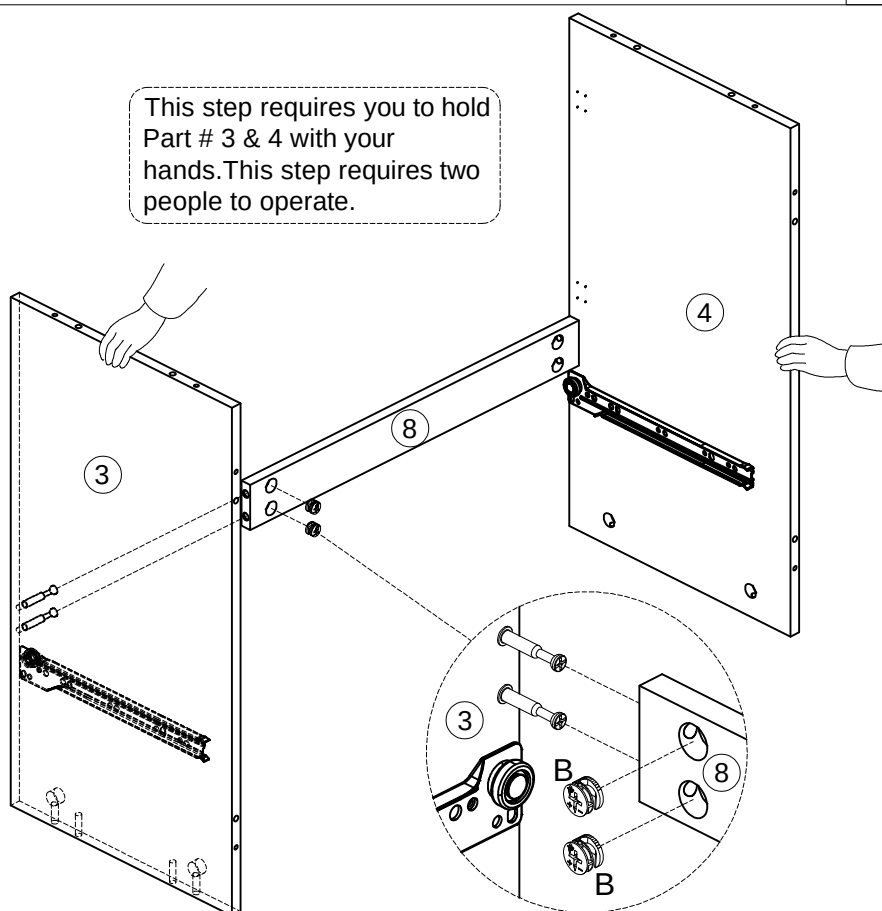

Bx2

5

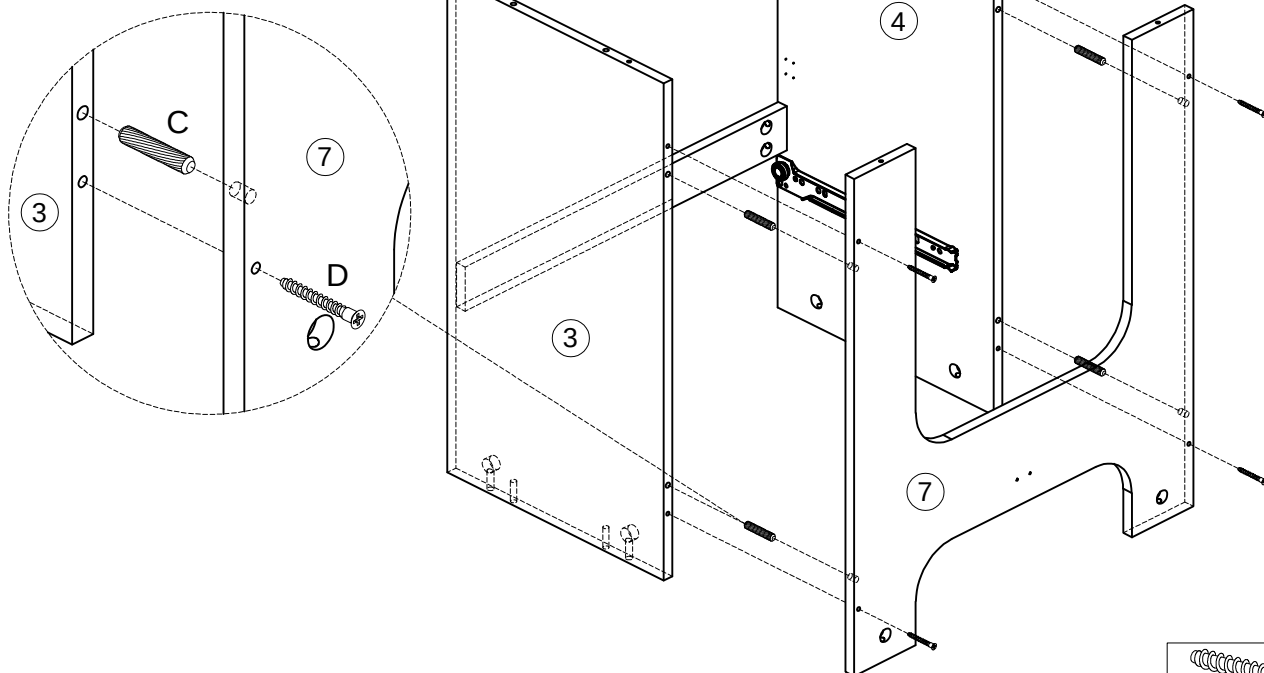


Dx4

Ø5x38mm



Cx4

6

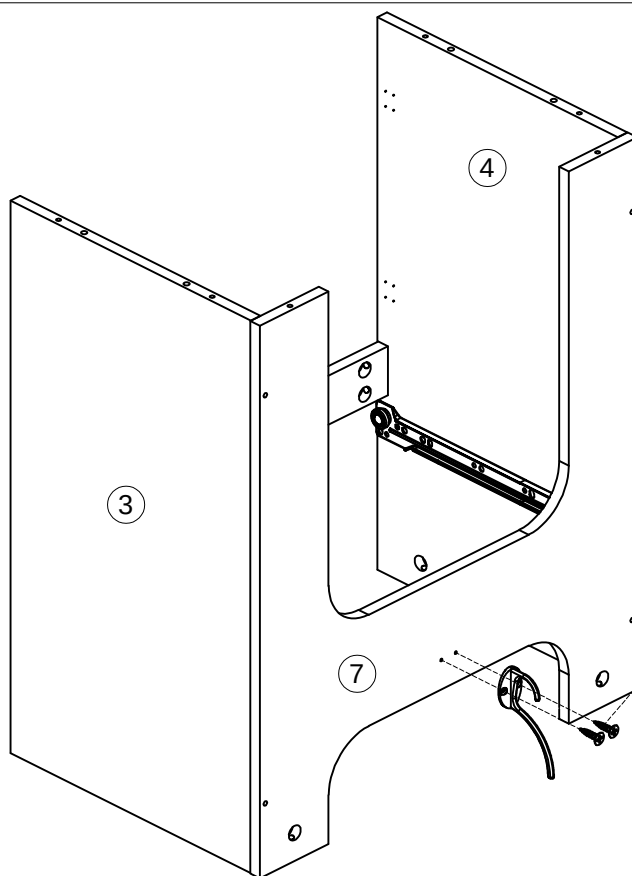


Ix1




Ex2


Ø6x3x12mm

7

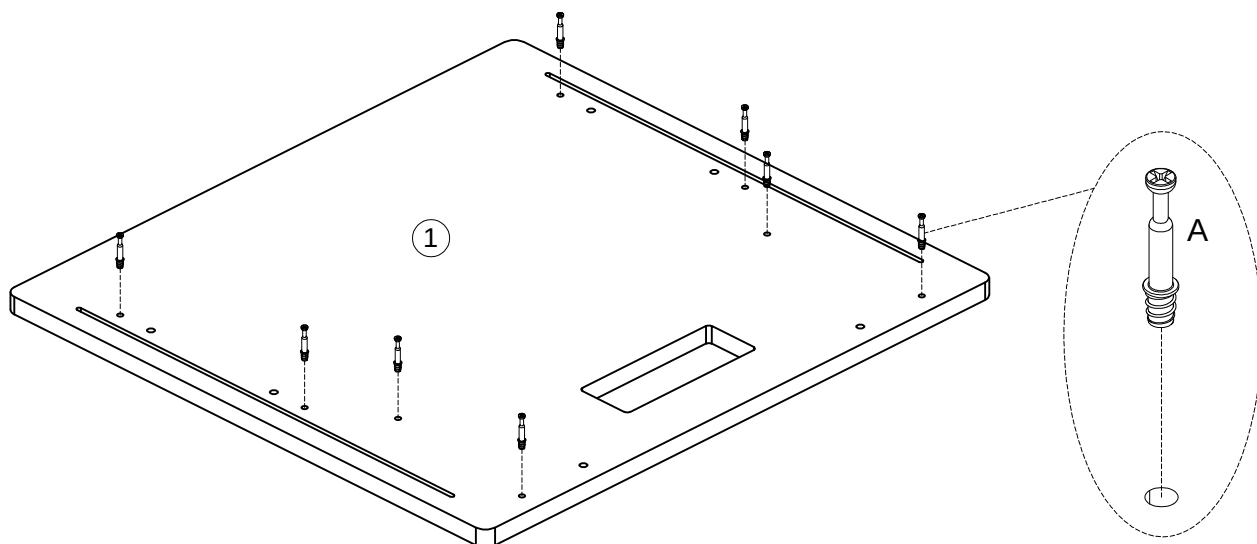

 Ax8


8

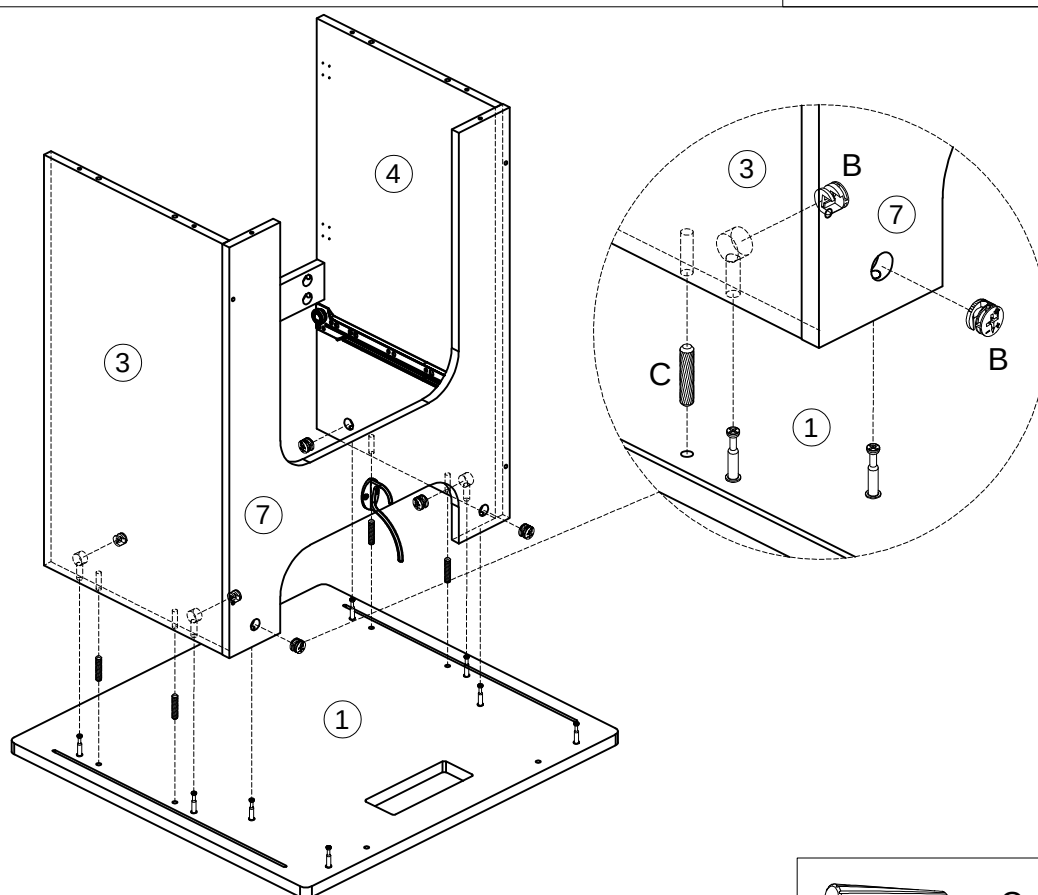

 Cx4

 Bx6

9


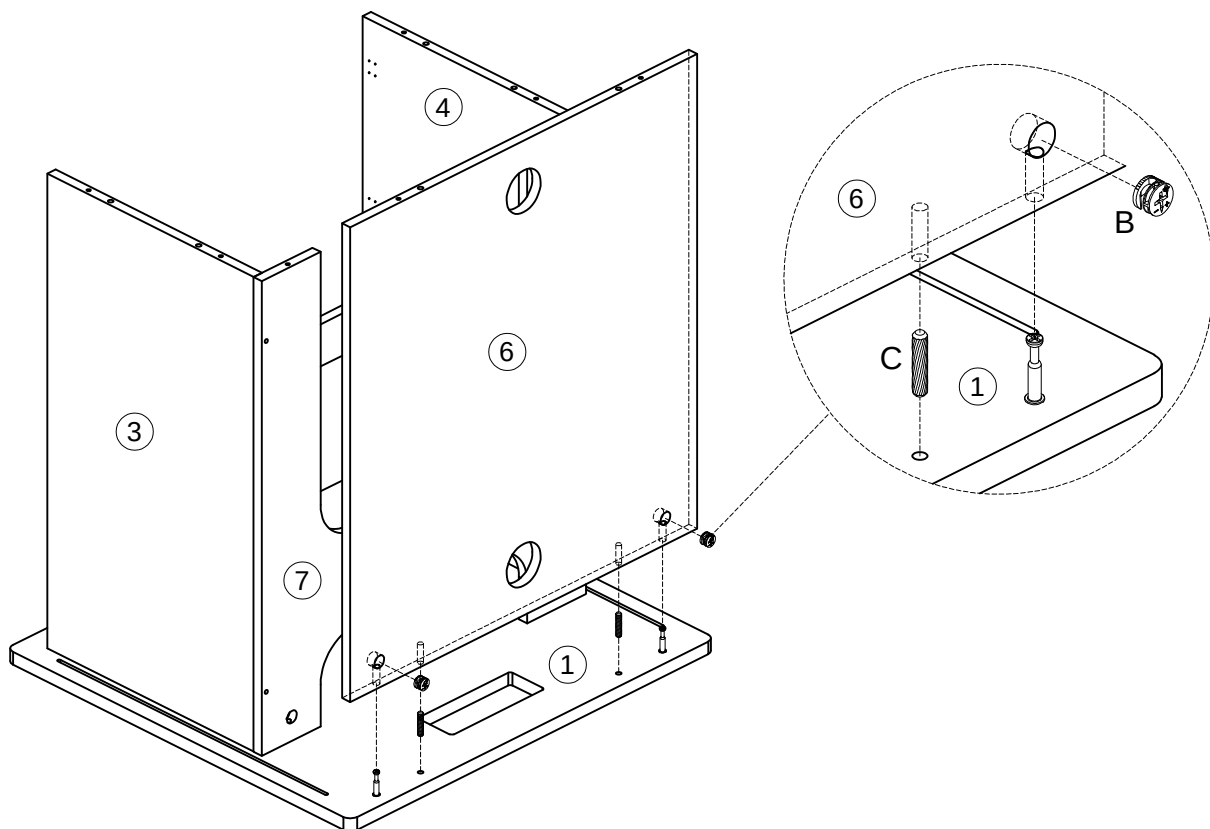


Cx2



Bx2

10

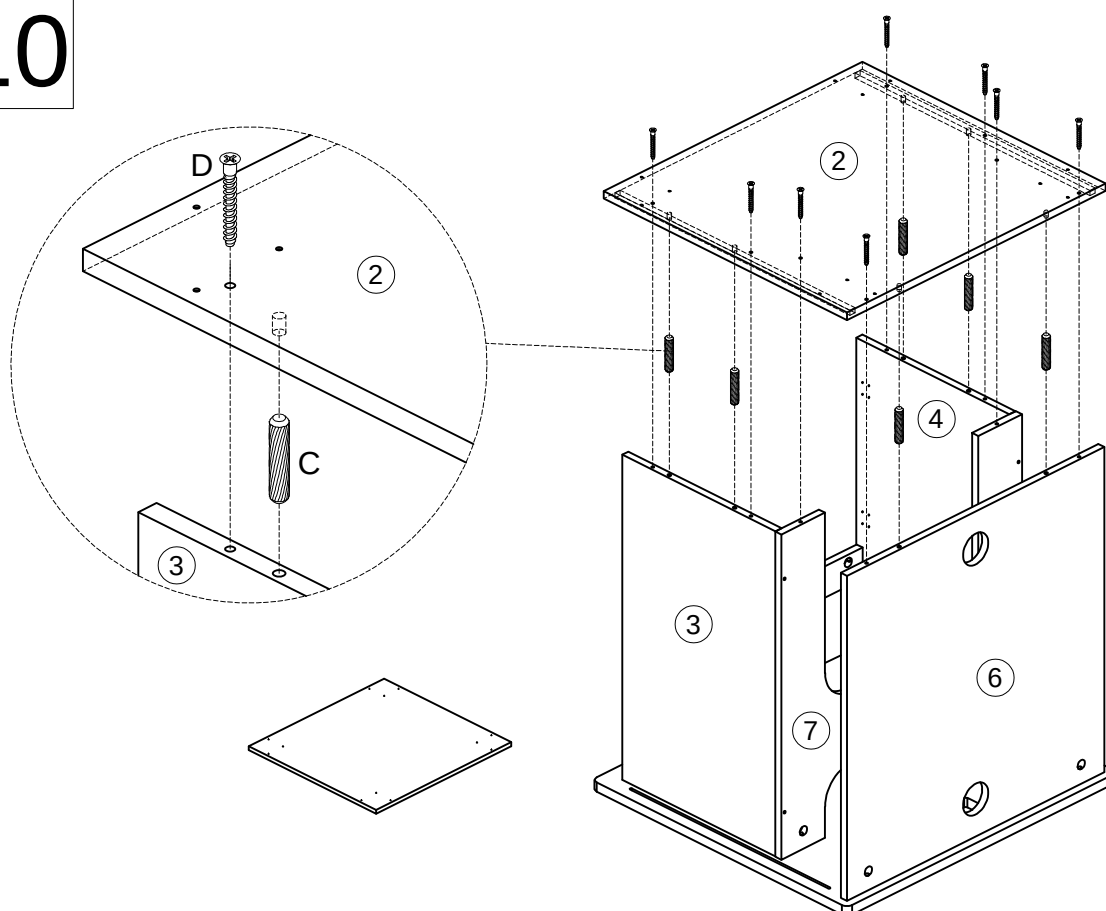




Dx8

Ø5x38mm



Cx6

11

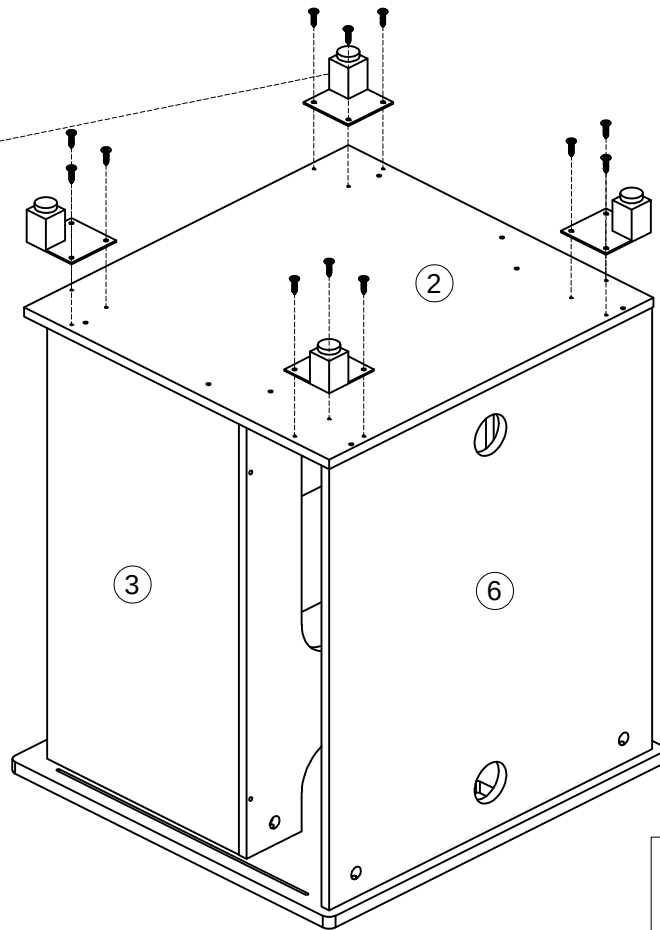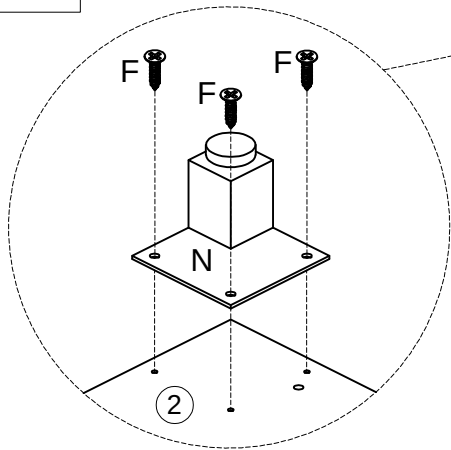




Nx4



Ø8x4x12mm



Fx12

12

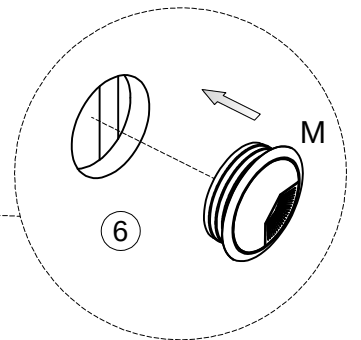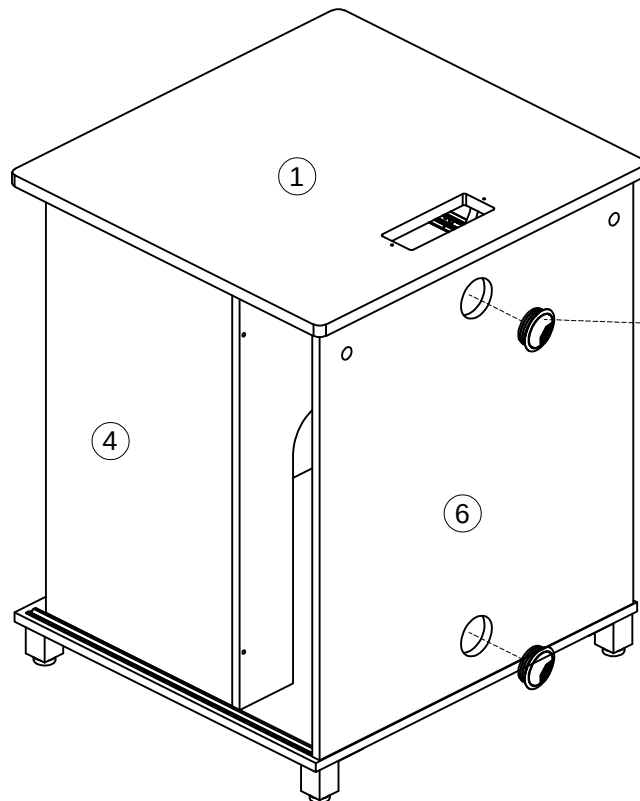
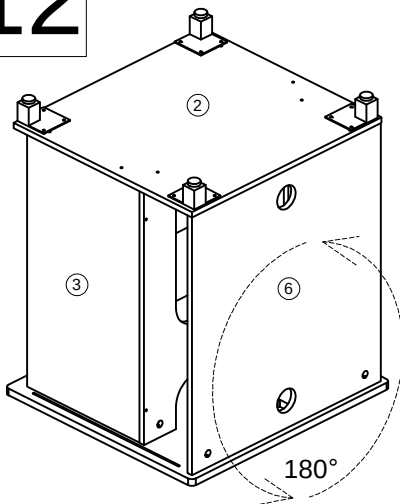


Mx2




13

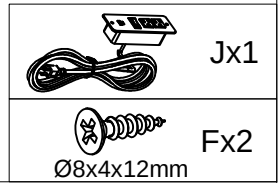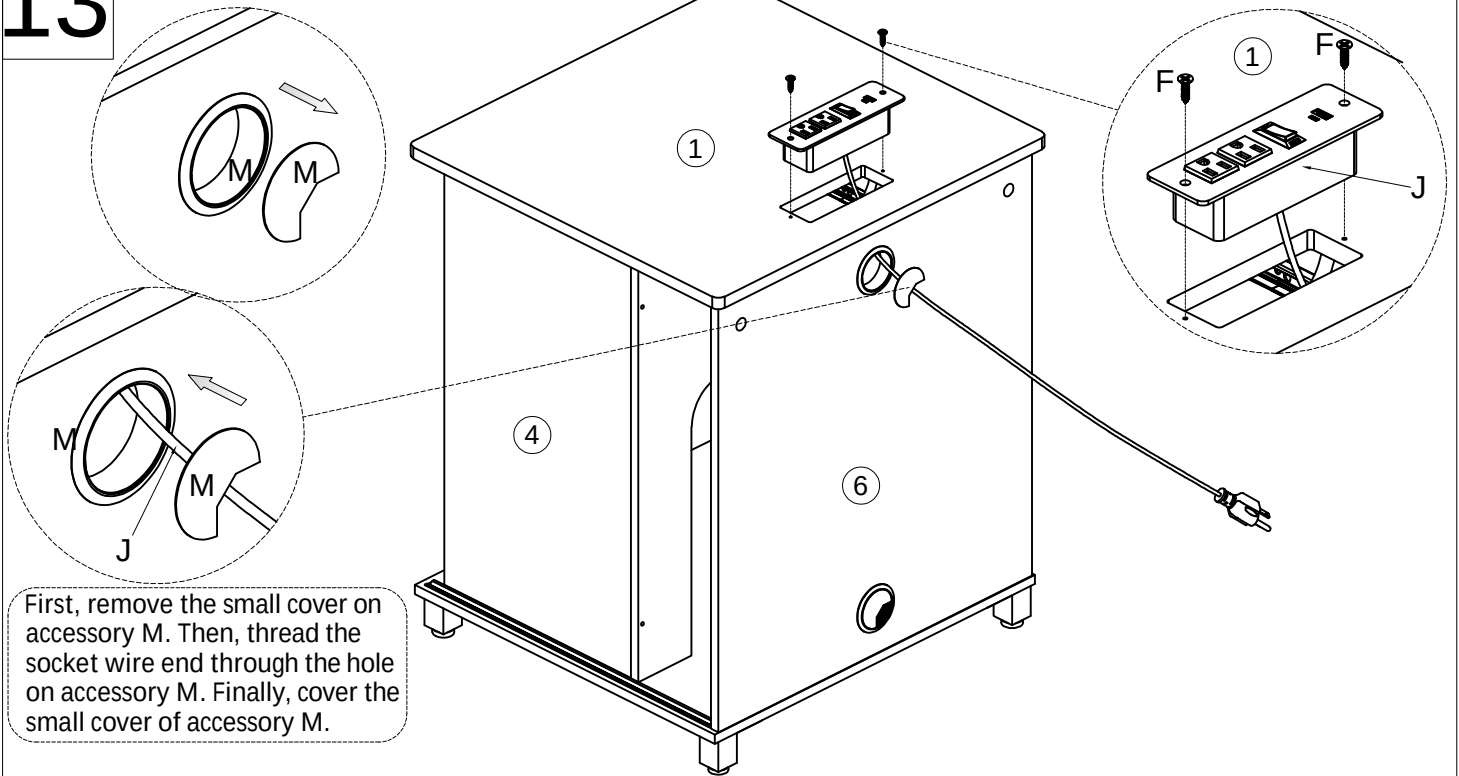


14

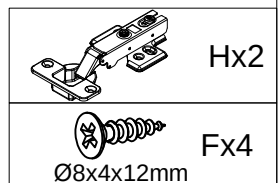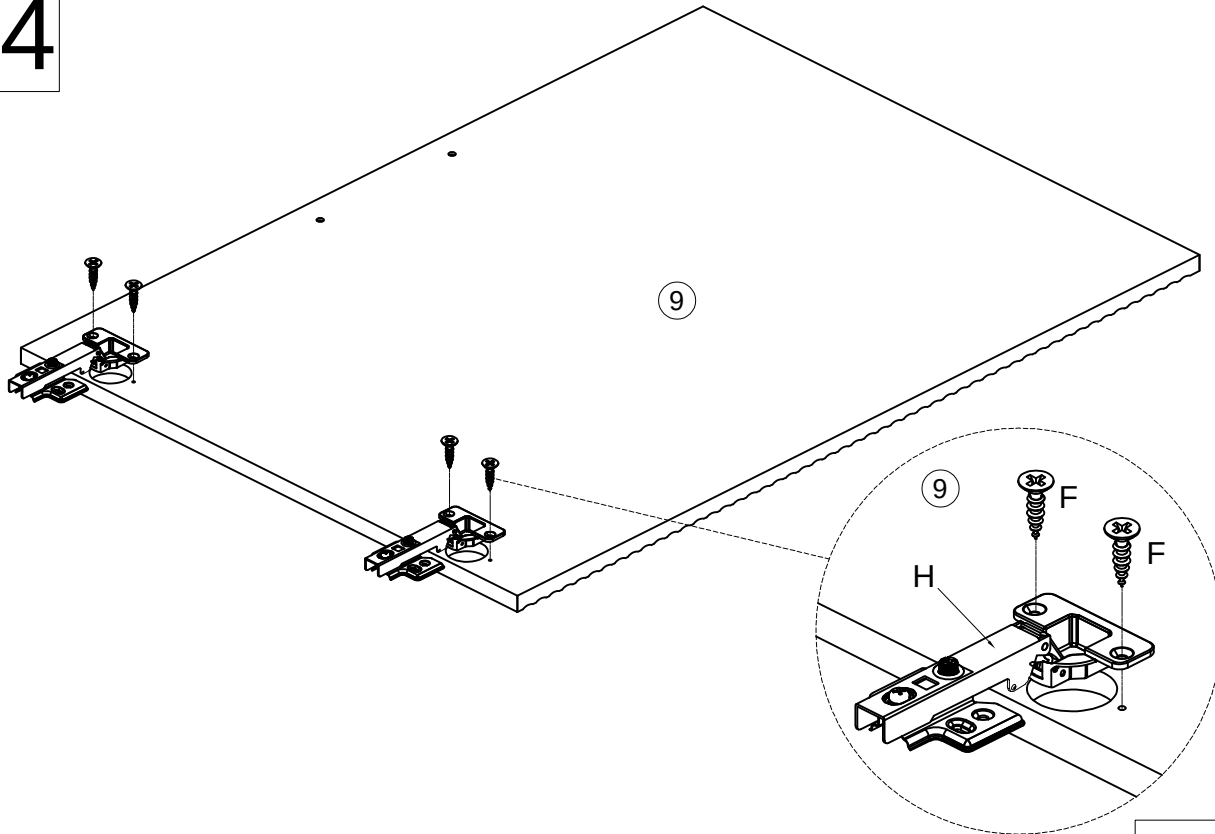


15

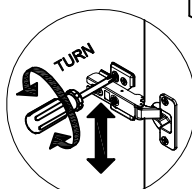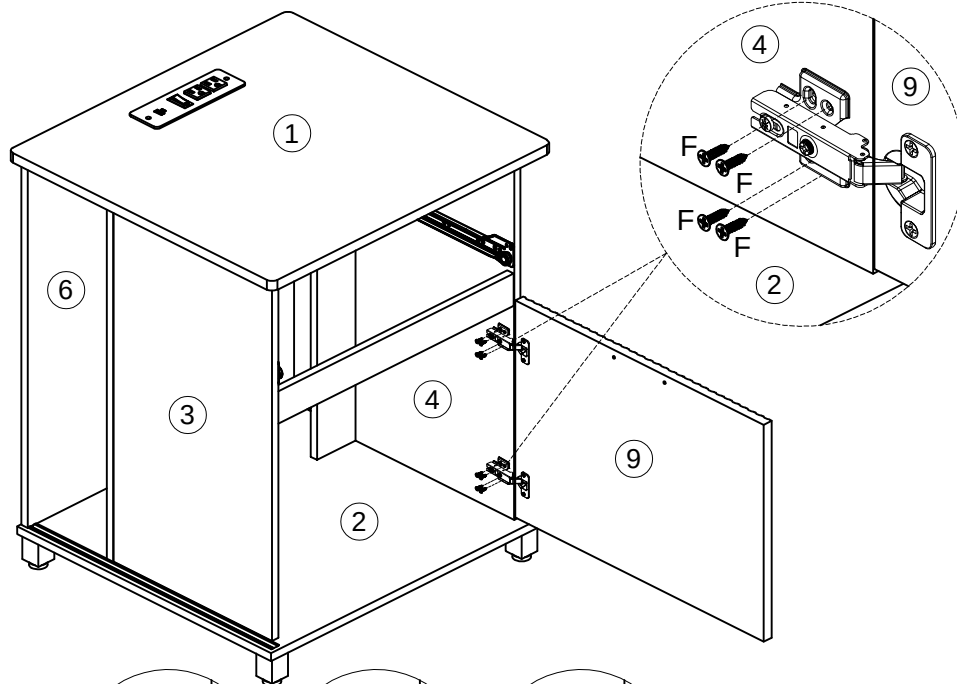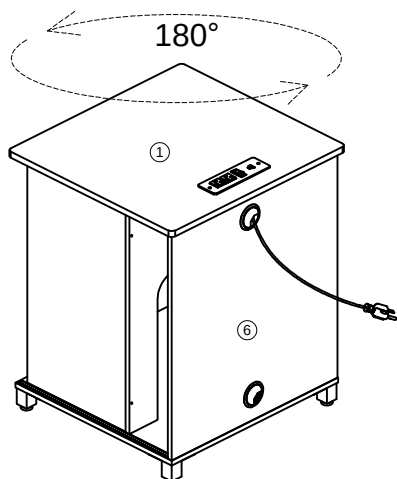

Loosen this screw and push up/down for a slight up-down adjustment of the door.

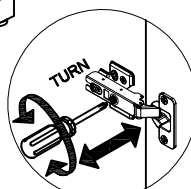


Loosen this screw for a slight left-right adjustment of the door.

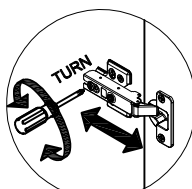


Loosen this screw and push forward/backward for a slight front-back adjustment of the door.



 Fx8
Ø8x4x12mm

16

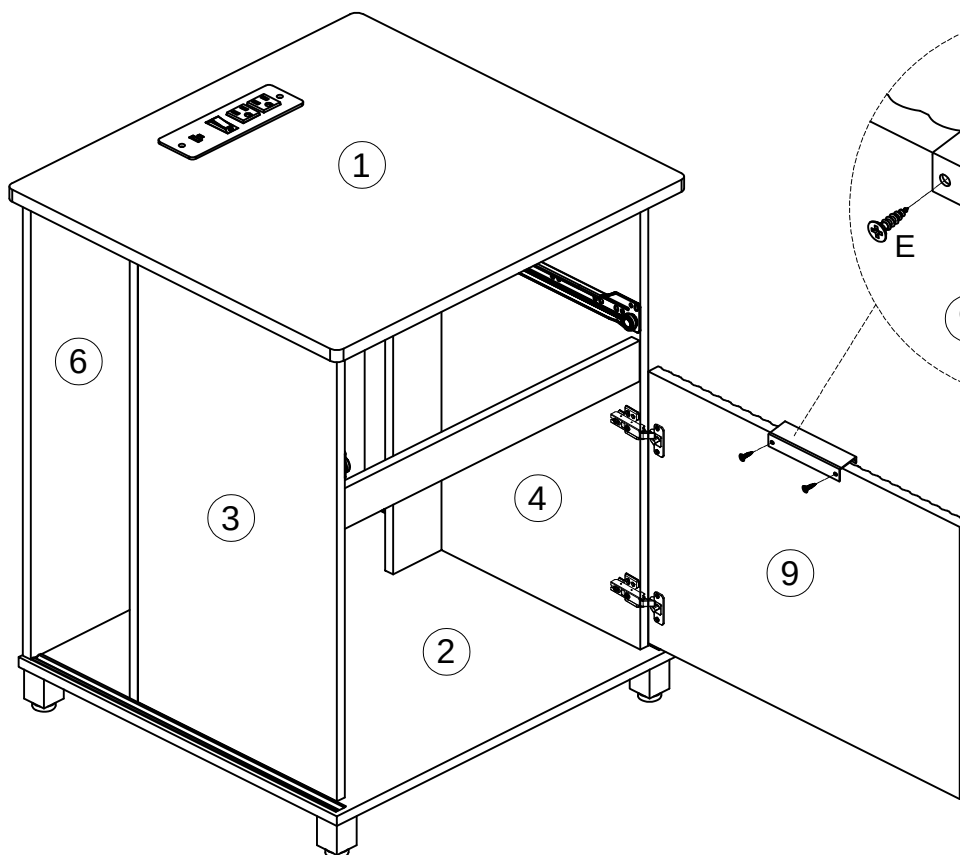


 Gx1
 Ex2
Ø6x3x12mm

17

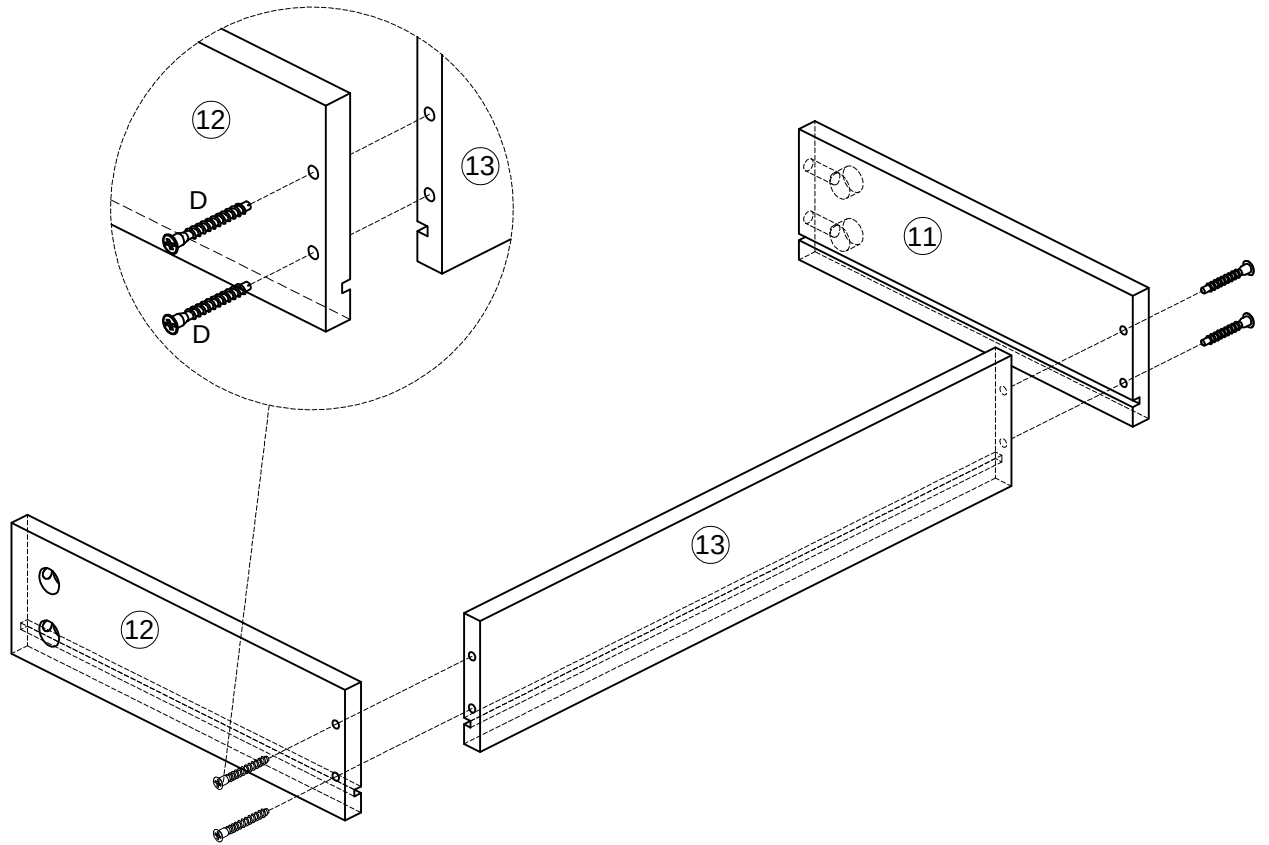


Dx4

18

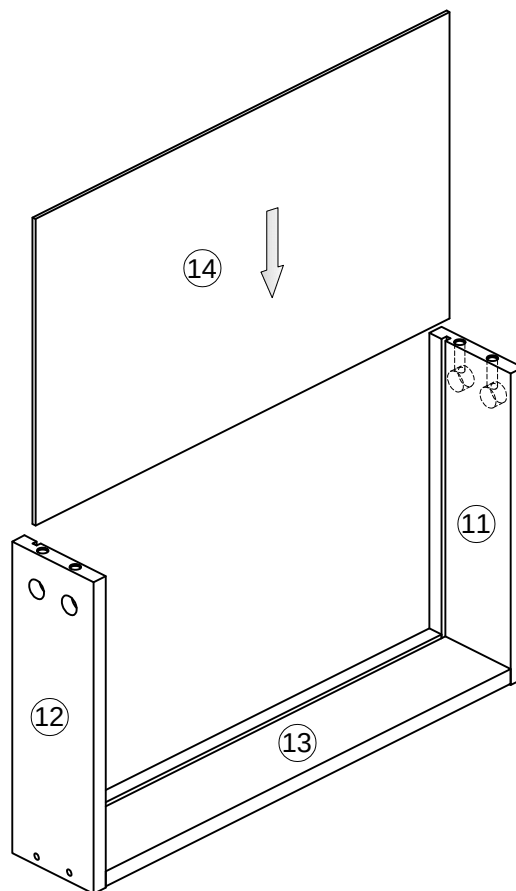


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

19

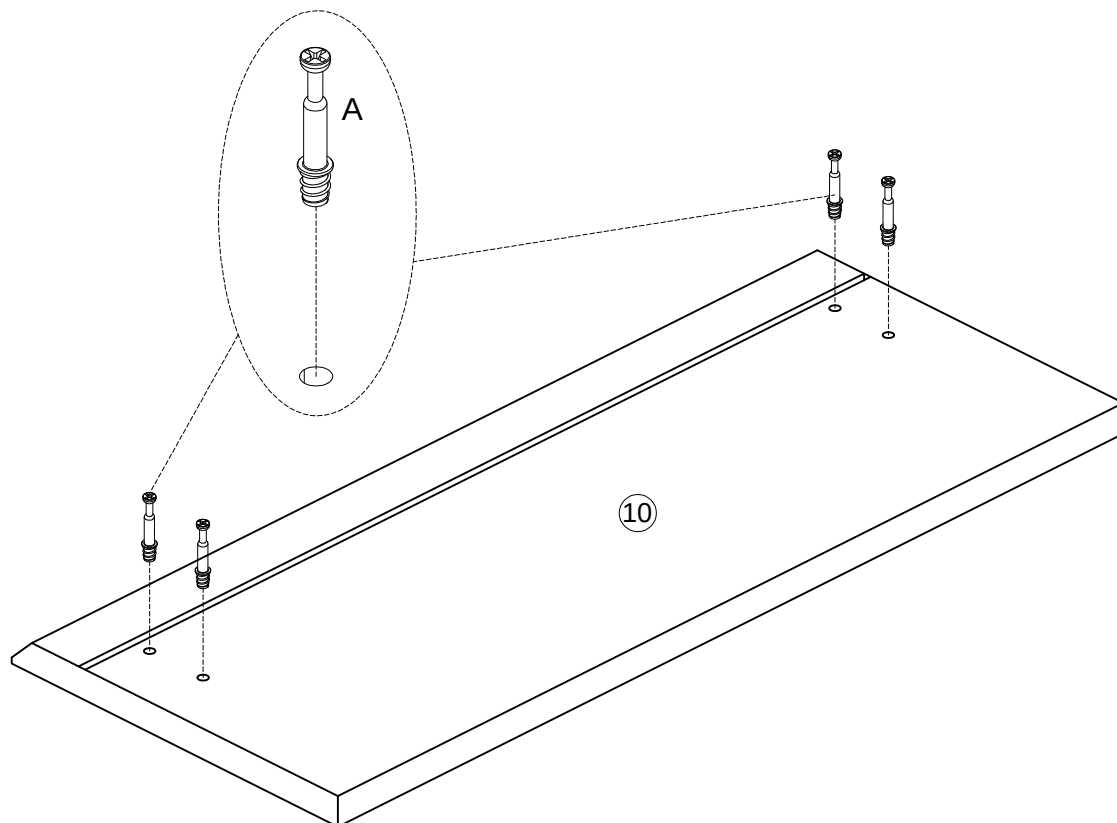

 Ax4


20

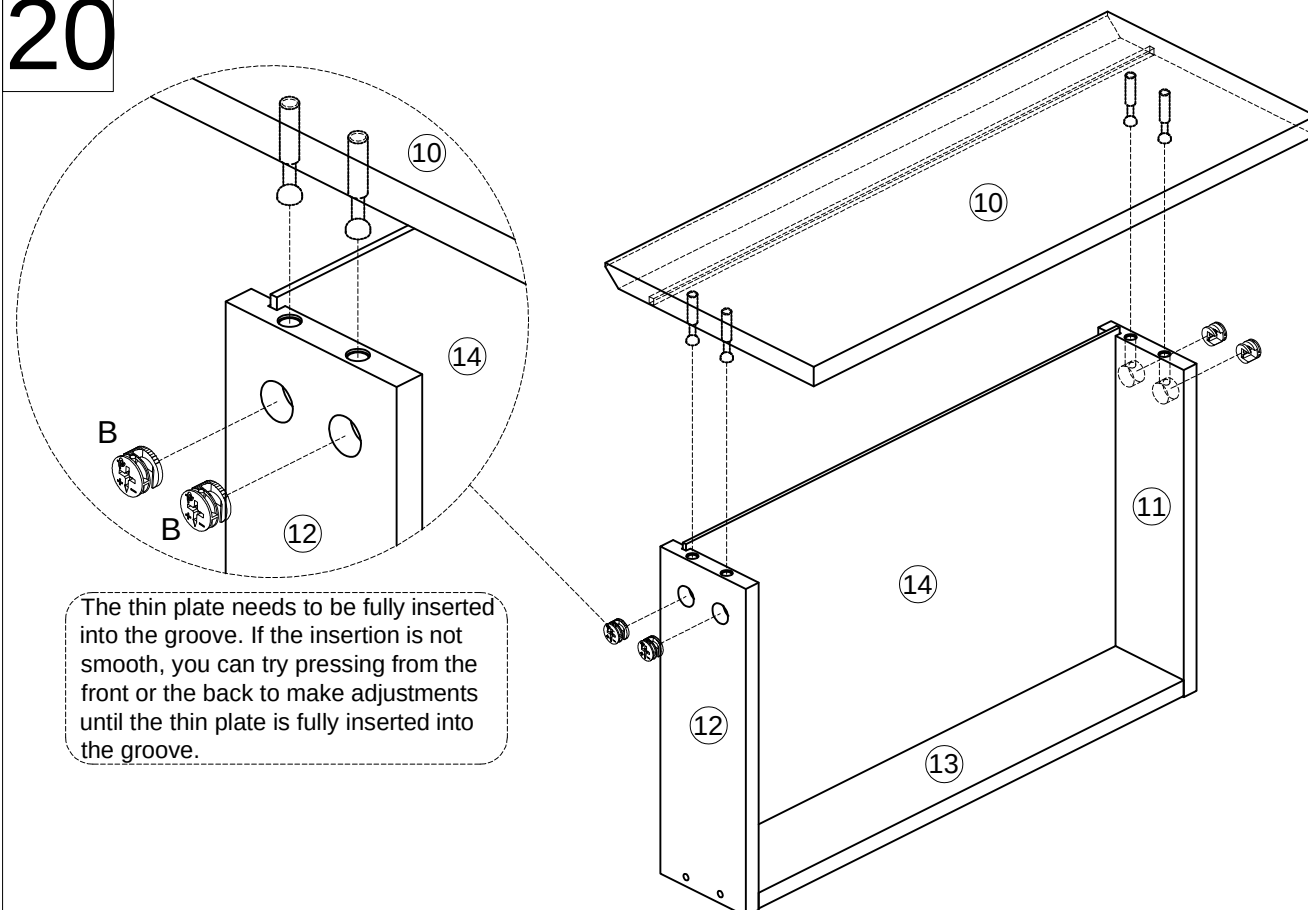


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

 Bx4


21

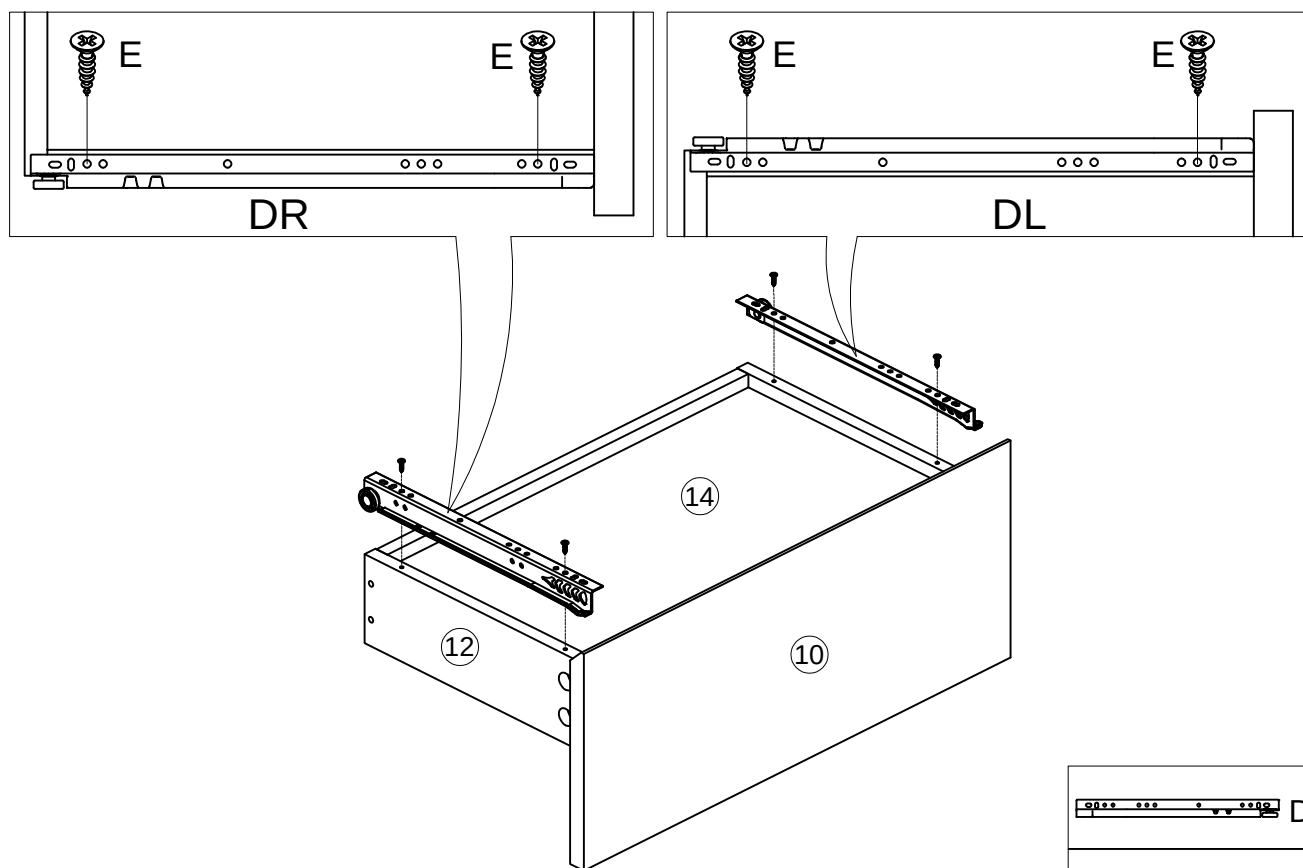


22

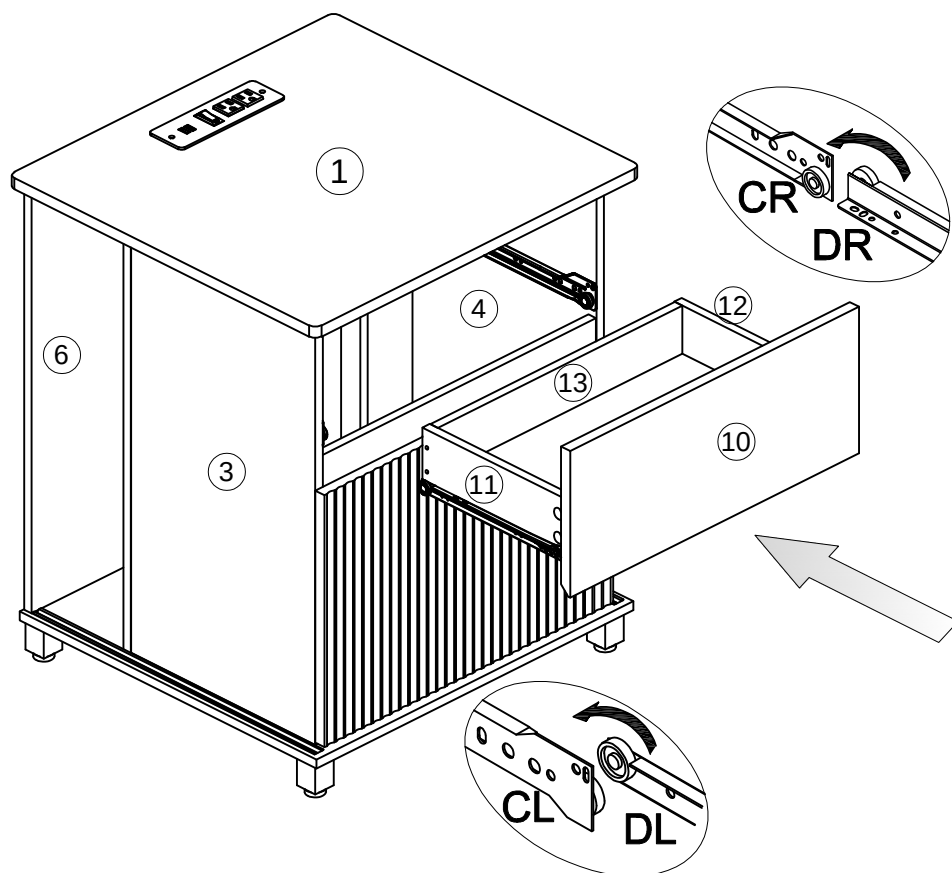



23

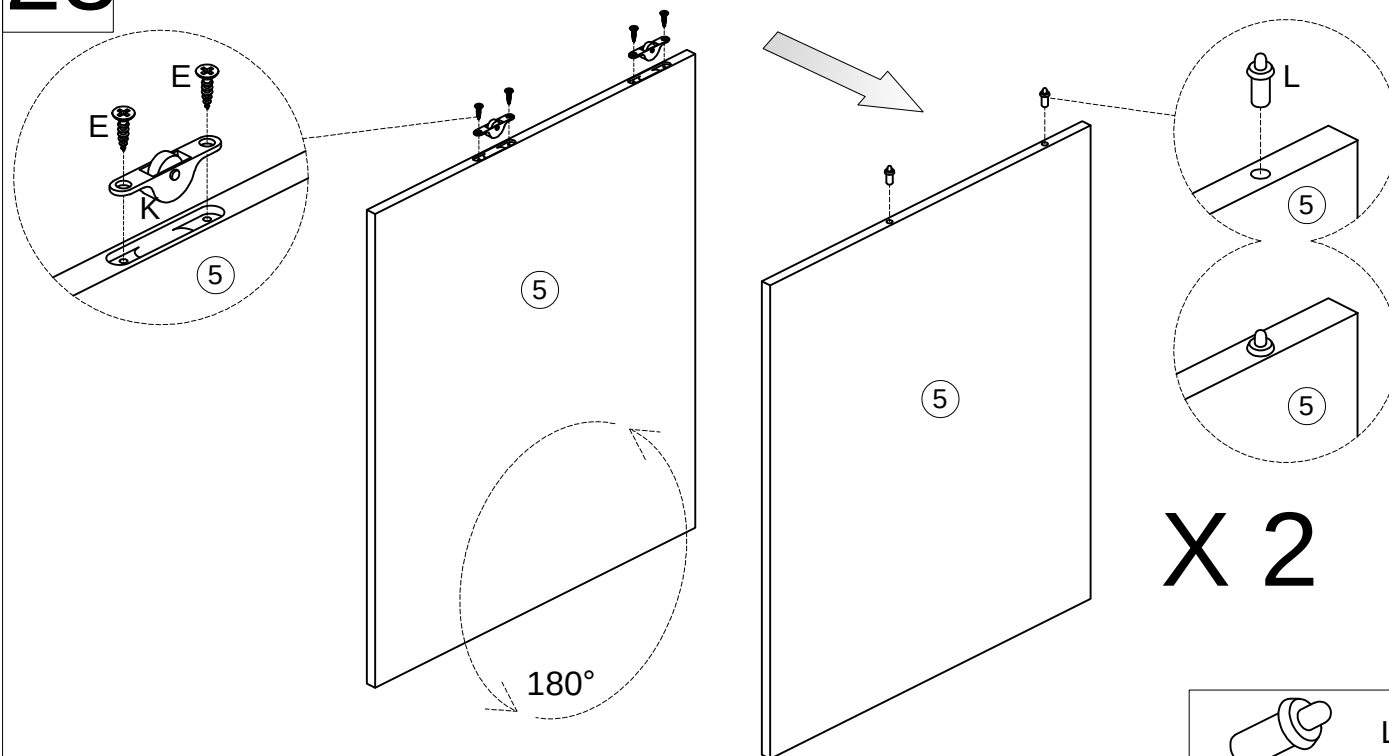



X 2

	Lx4
	Kx4
	Ex8
Ø6x3x12mm	

24

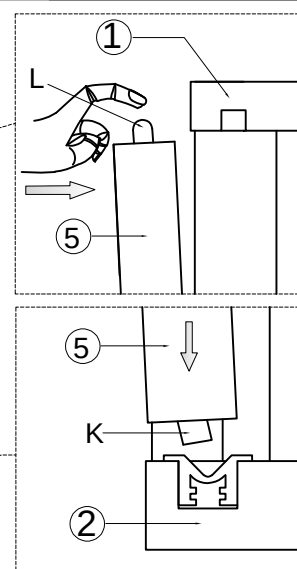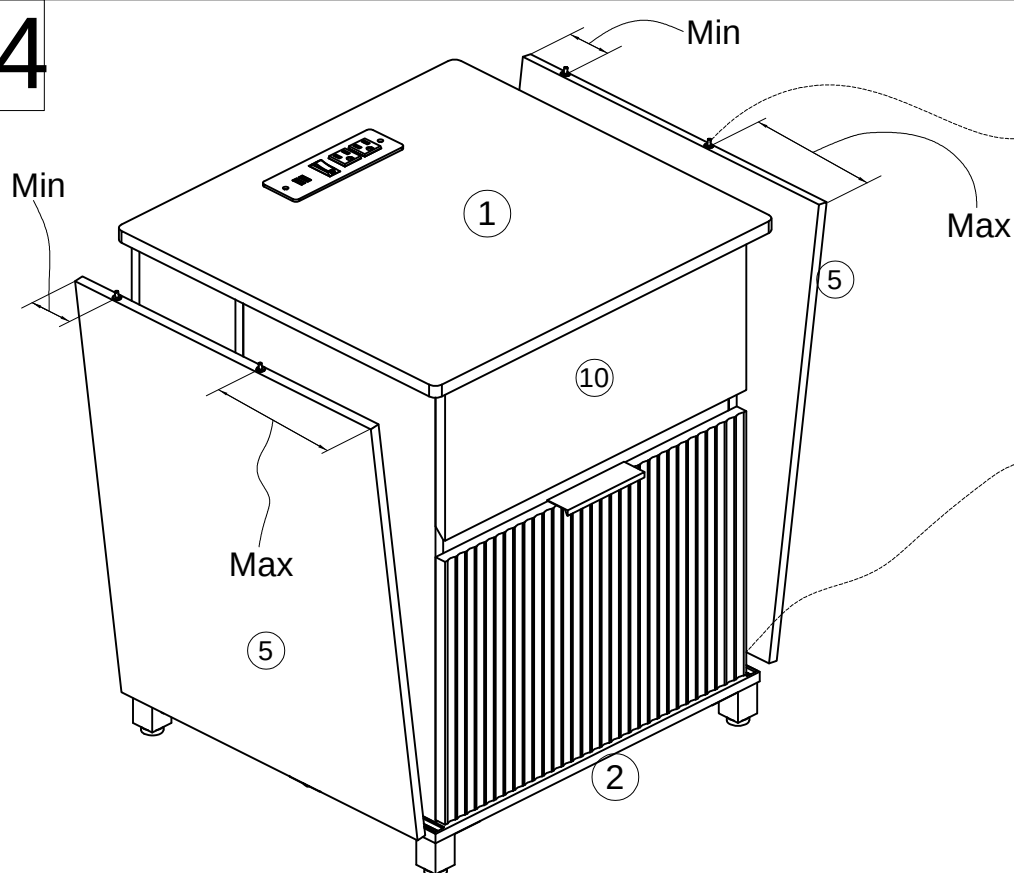

First, place the lower wheel onto the guide rail. Then, press the accessory L with your fingers and push it into Part #5, so that accessory L can fit into the groove of Part #1.

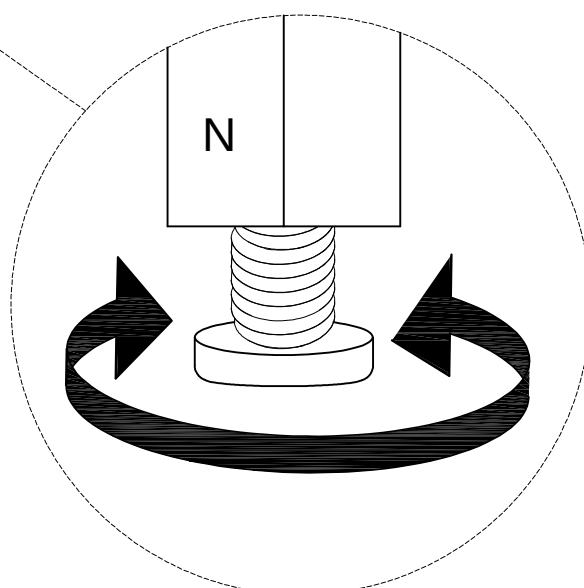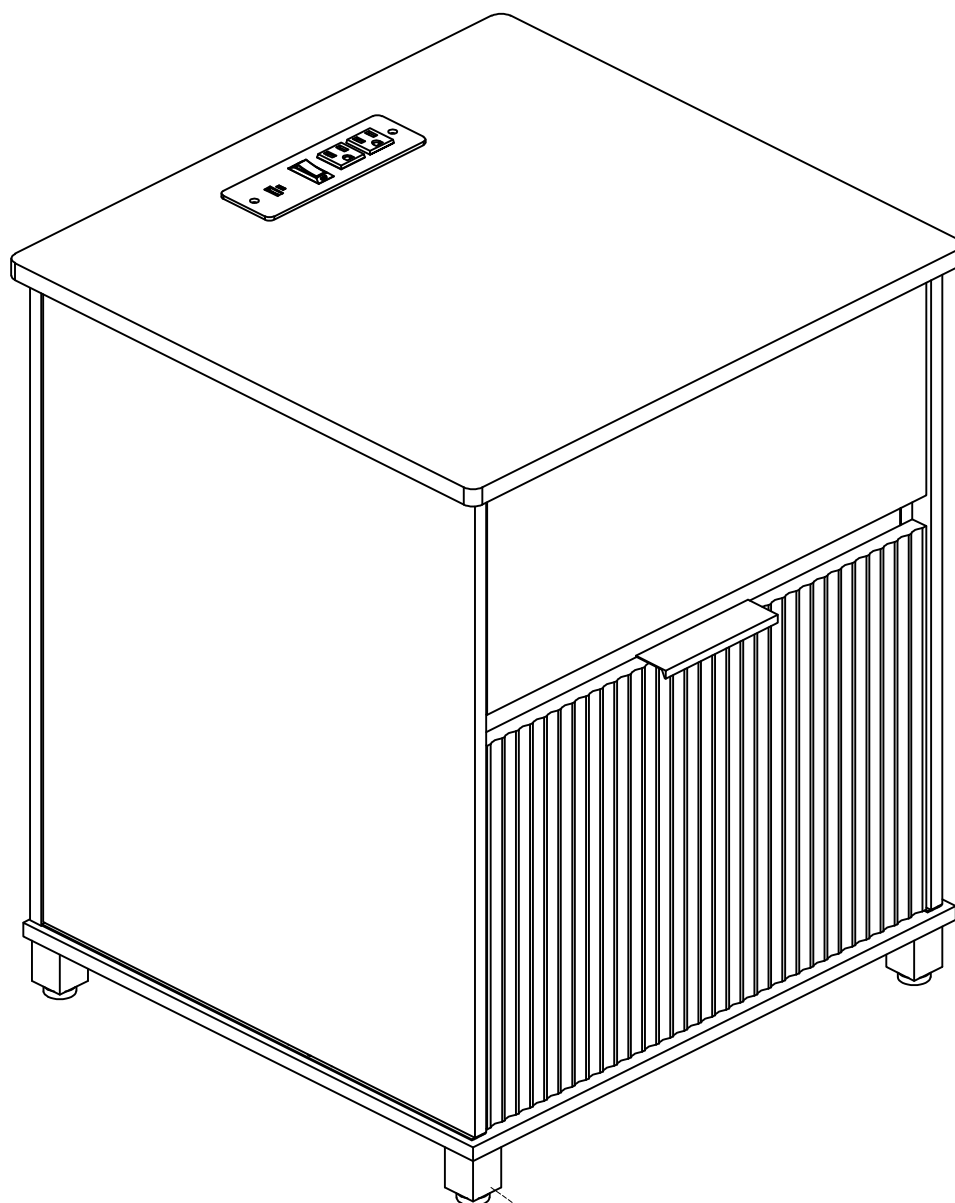

According to the ground condition, the high bottom can be rotated around and adjusted to keep the cabinet flat on the ground