


Assembly Instructions

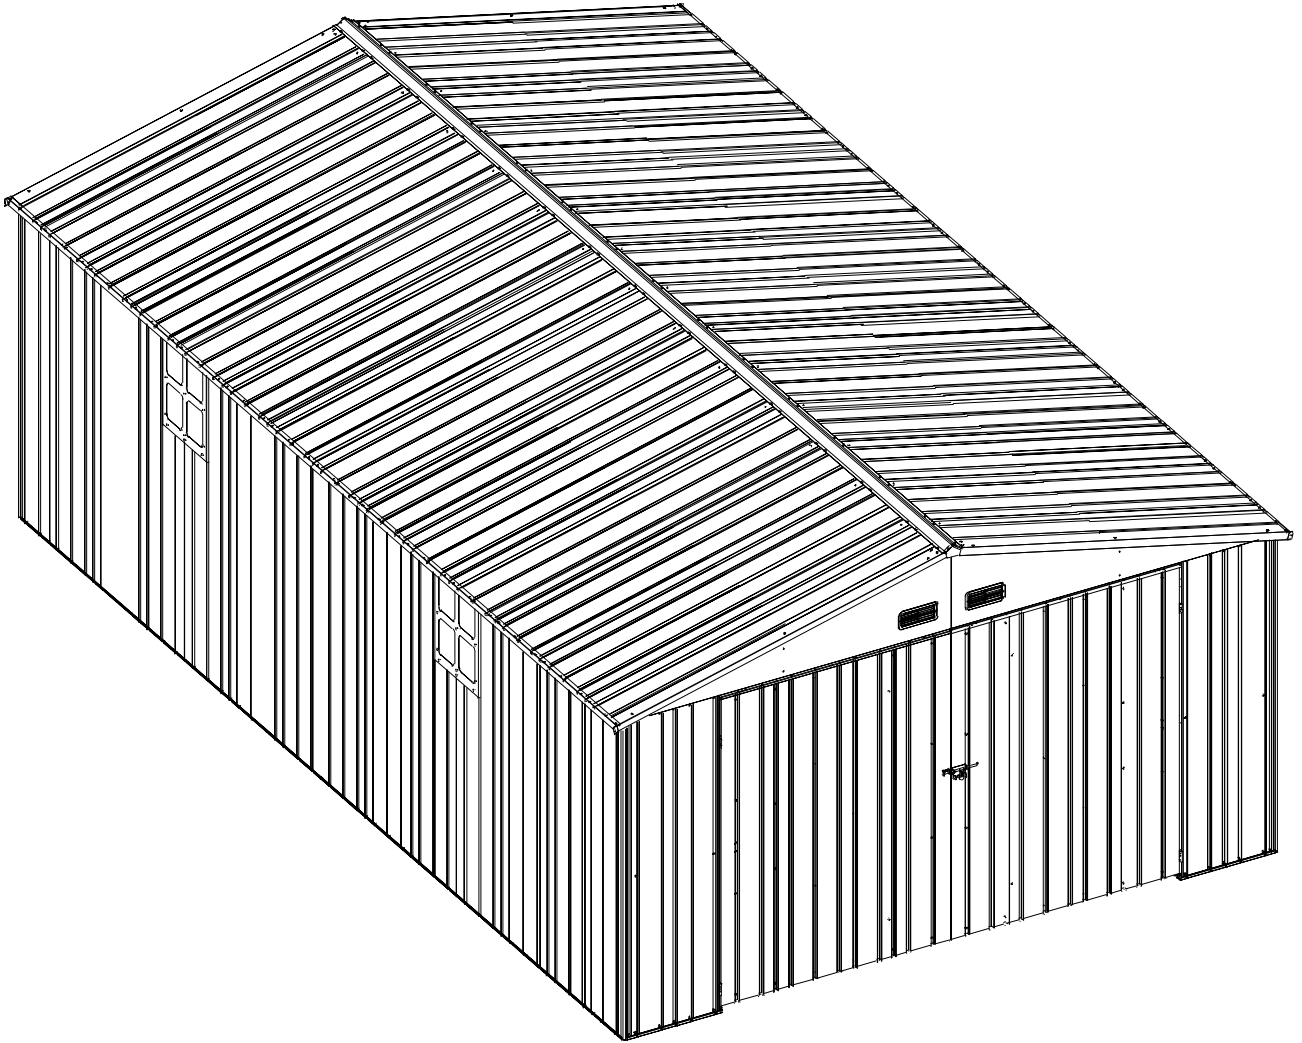

Metal Shed 10 X20.7FT Assembly Instruction

SKU:

BB26Q3-1A1A1(BOX1)

BB26Q3-1A1A2(BOX2)

BB26Q3-1A1A3(BOX3)

BB26Q3-1A1A4(BOX4)

BB26Q3-1A1A5(BOX5)

Arrive in 5 separate boxes and may not be part of the same shipment; Please install the product after receiving all the packages.

Email Address: support@wepatio.com

Service Time: 8 am - 5 pm (central time) Monday-Friday.

If no one picks up, please call several more times

Assembly Instructions

1. Assembly Advice	Page 1
2. Parts List	Page 2-3
3. Door panel installation	Page 4- 15
4. Frame installation	Page 16- 68

Customer Service Guide

Thank you for choosing our product! If you encounter missing parts, damaged packaging, or product damage upon receiving all parcels, please follow the steps below to contact our service team. We are here to assist you.

Missing Parts

Check the Parts

Compare with the included "Parts List" (refer to page [specific page/section] of the manual) and verify the missing item's name, specification, and quantity.

Please provide a clear photo of the parts list, highlighting the missing part(s) and its details, e.g., "Missing 5 pcs of M6×30mm screws."

Contact Us

Phone:

Call our customer service hotline at [901-347-2181] during working hours ([8 am - 5 pm central time]). Please provide order details (order number, purchase platform, purchase date) and a clear description of the missing parts.

Email:

Send an email to [support@wepatio.com] with the subject "Missing Parts Issue." Describe the missing part(s) in the email body and attach the parts list photo and order details.

Damaged Product or Packaging

If it affects normal use

Steps:

1. Take photos or videos clearly showing the damaged part and the extent of the damage (multi-angle shots are recommended).

2. Send the photos/videos along with your order details to [support@wepatio.com] with the subject "Damaged Product Issue."

Resolution:

We will arrange for a replacement or refund after verifying the issue.

If it does not affect normal use

Steps:

Contact our customer service team (Phone: [901-347-2181] or Email: [support@wepatio.com]) with a description of the damage and attach photos or videos.

Resolution:

We will provide repair guidance or appropriate compensation

Customer Service Email: [support@wepatio.com]

Friendly Reminder

To ensure efficient processing of your issue, please prepare relevant details (e.g., order number, purchase platform, purchase date) and clear photos or videos.

Regardless of the issue, our customer service team is dedicated to providing you with satisfactory solutions.

Thank you for your trust and support, and enjoy your product!


Assembly and Maintenance Advice

1. For safety purposes, we strongly recommend that this product is assembled by at least Four people.
2. Some components have sharp metal edges. Please be careful when handling metal components. Please wear gloves, shoes and safety goggles during assembly.
3. Lay all of the components on a soft carpet or blanket to avoid any scratches or damages.
4. DO NOT climb or stand on the roof. Heavy articles should not be leaned against the Storage Shed.
5. Keep the roof and gutter clear of snow, dirt & leaves. Allowing snow to build up on the roof may damage the product.
6. Unlike steel, if the paint finish is scratched this will not harm the aluminium underneath.
7. When your product needs cleaning, use a mild detergent solution and rinse with cold clean water. Do not use acetone, abrasive cleaners or strong detergents to clean the panels.

Tools Provided:



Tools Required when Assembly (Not Provided)

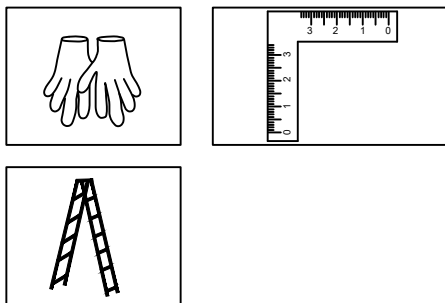

Assembly at least by two Persons



MSG004

PART	NO	QTY
	1A002	20



BB26Q3-1A1A1

PART	NO	QTY
	1A002	6
	1G006	2
	1G005	2
	1C009	2
	1G001	1
	1D002	1
	1B002	4



BB26Q3-1A1A2

PART	NO	QTY
	D358	4
	D359	4
	Y1	4

PART	NO	QTY
	1E004	26

PART	NO	QTY
	3A026	2
	3A027	2



BB26Q3-1A1A3

	PART	NO	QTY
1		2A003	3
		2A010	2
2		2B002	1
3		2B002	1
4		2B002	1
5		2B002	1
6		2C019	1
		2C020	1
		2C011	1
7		2D006	2
		2D007	2
		2H003	1
8		2L006	2
		2L007	2
		2L012	2

	PART	NO	QTY
9		2L013	2
		2M010	1
		3J008	2
10		5A005	2
		5A010	1
		5B008	2
11		5F008	2
12		5F014	2
13		5G009	2
14		5G015	2



BB26Q3-1A1A4


MSG004

	PART	NO	QTY
1		2A007	3
2		2A009	2
3		2A012	1
		2A013	1
		2M016	1
		2M017	1
4		2M008	1
		2M009	3
		2M014	4
		2M032	1
5		2R001	2
		2R005	4
6		4C001	1
		6A004	2
7		3G007	2
		3G008	2
8		3H004	1
		3H005	5
		3H006	1
9		3J007	2
		3J012	4

	PART	NO	QTY
10		4A001	1
		4A002	3
11		4A028	1
		4A029	1
12		4B001	2
13		4B002	2
14		4B006	1
		4B007	1
15		5E003	2
16		5H002	4
		5J004	2
		5K004	4
17		2S002	1
18		6A003	1

PART	NO	QTY
	D310	2
	D311	2
	D353	2
	D354	18
	D355	14
	D356	2
	D438	4
	D490	2
	H170	9
	H127	210
	H145	2
	H147	1
	S63 M4X12	25
	S74 M4X8	1020
	M08 M5	1
	M25 M4	1070
	S75 M4X10	54
	J156	39
	Z40 M5X40	39
	J211	4
	H164	2



Tools Provided:

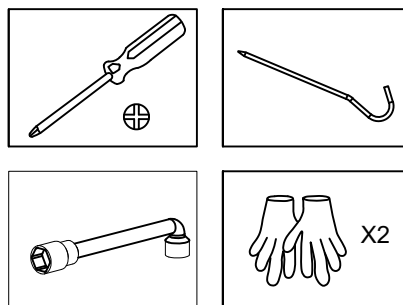




BB26Q3-1A1A5

PART	NO	QTY
	1G006	1
	1G005	1
	4A002	1
	4A029	1
	D354	3
	H170	3
	S74	12
	M4X8	
	M25	21
	M4	
	S75	9
	M4X10	
	H164	1

Left Door

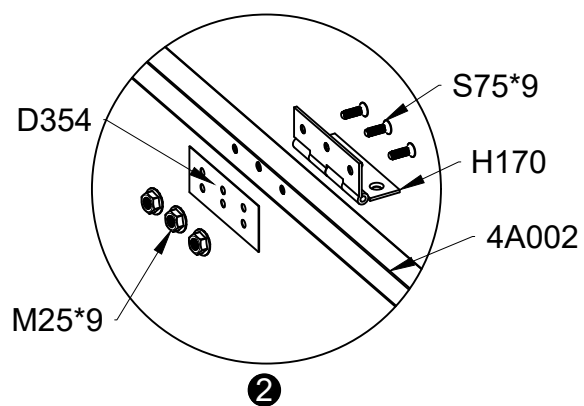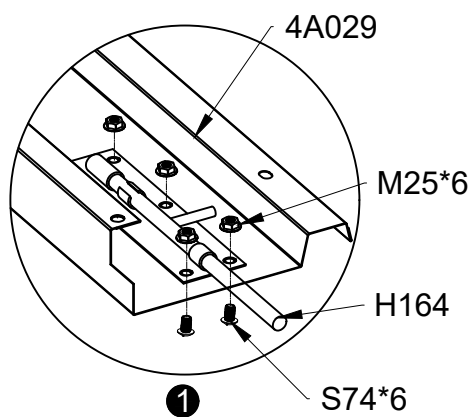


Please stack the door frames of the door panels according to the instructions above.

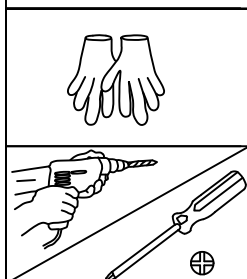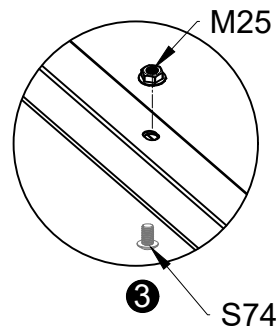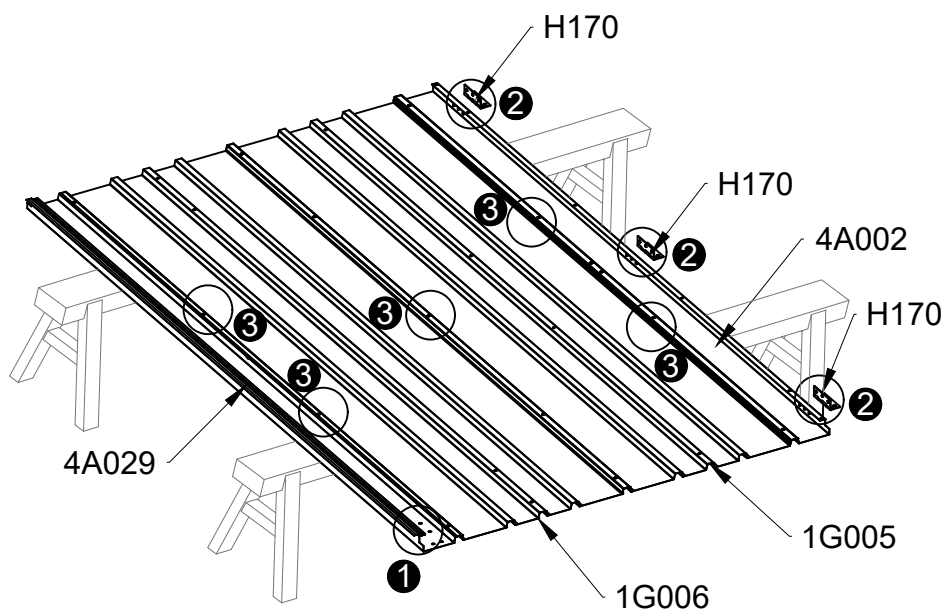


PART	NO	QTY
	4B002	1
	4B007	1
	H147	1
	M08 M5	1


Left Door

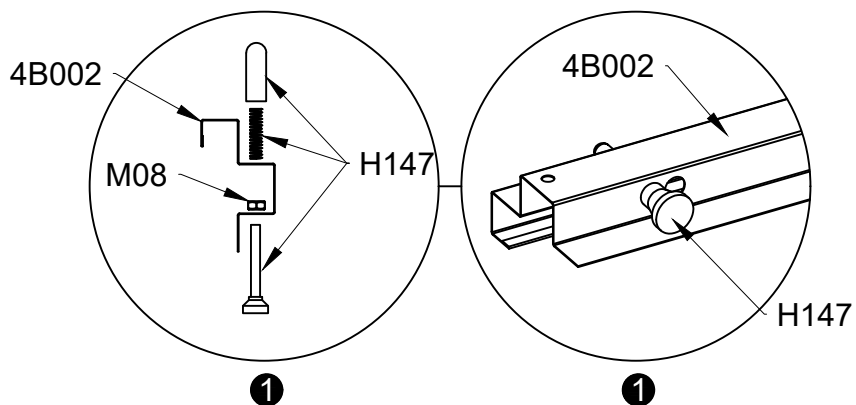

Please pay attention to the direction of the latch

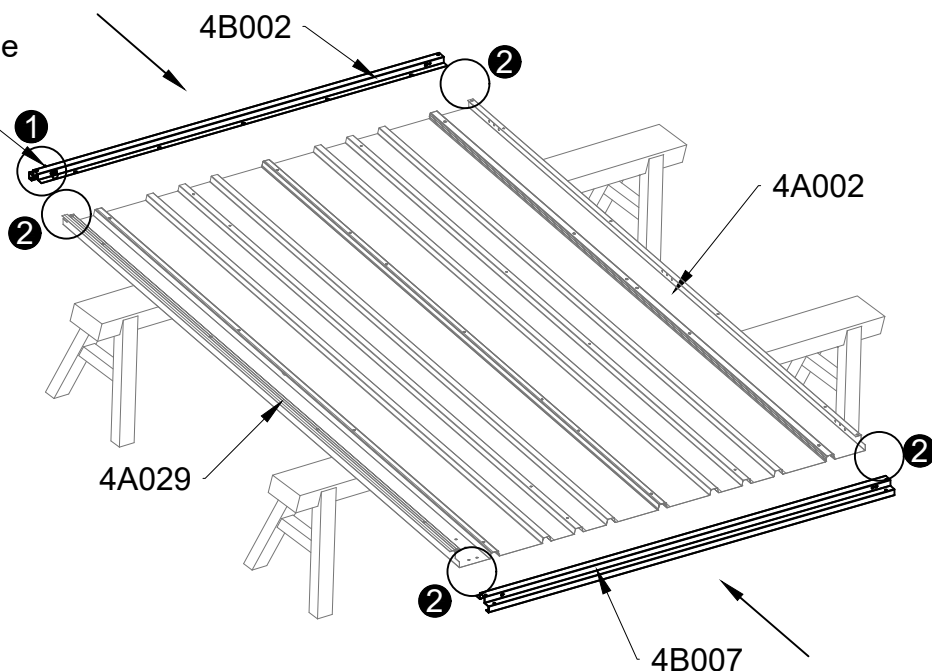


4A002/4A029

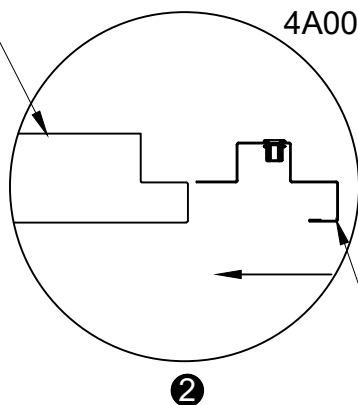


4A002/4A029

4B002/4B007

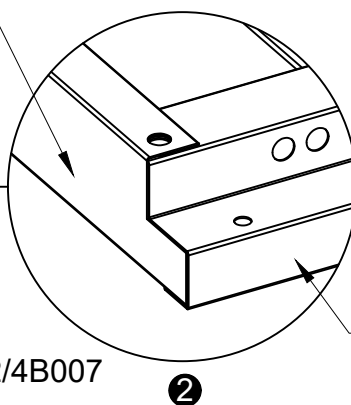


4B002/4B007

Pay attention to the connection method between 4A002/4A029 and 4B002/4B007.



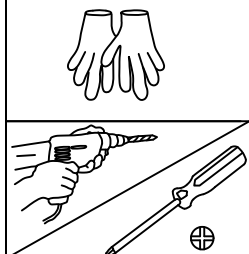


PART	NO	QTY
└	2R005	2
	S74 M4X8	16
	M25 M4	
	M25 M4	12

Left Door



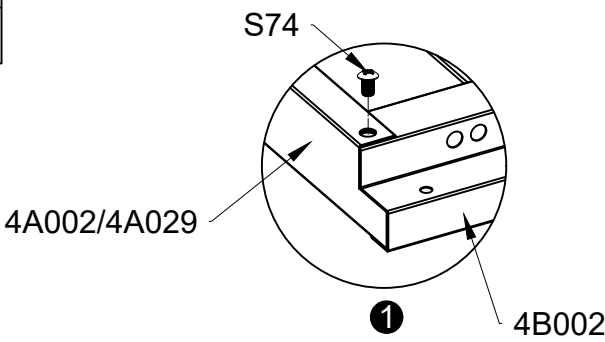


Make sure to fully insert the door panel before tightening the screws.

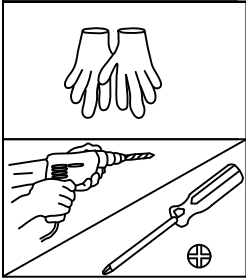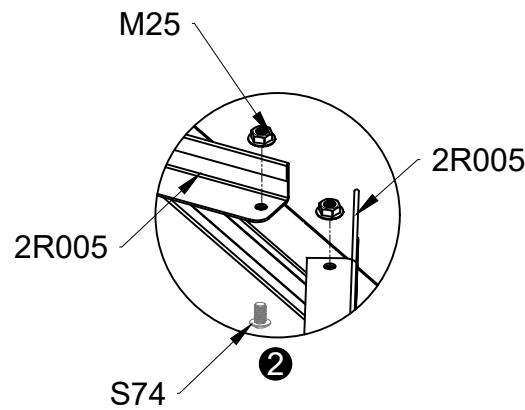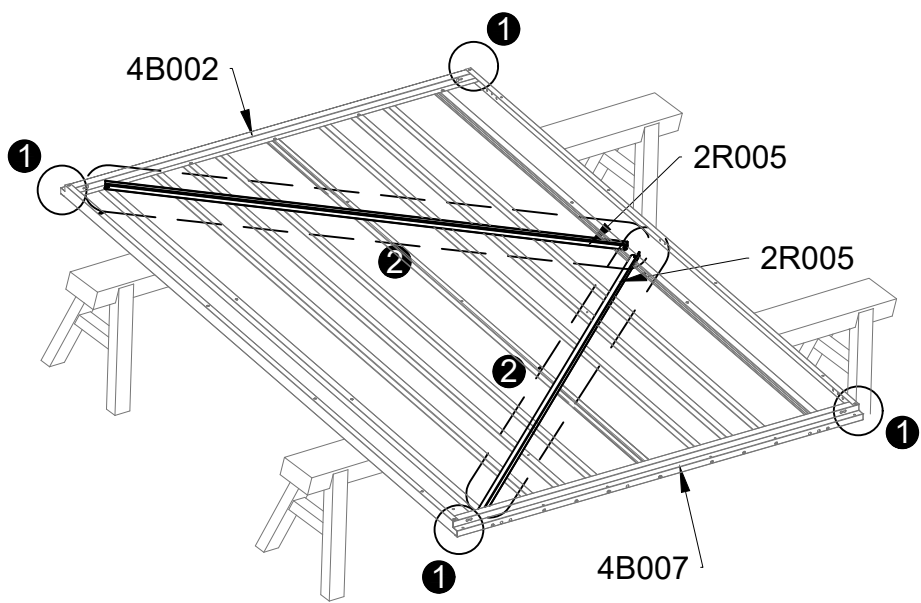




PART	NO	QTY
	S74	14
	M4X8	
	M25	14
	M4	

Left Door

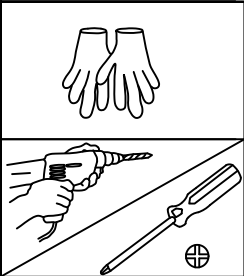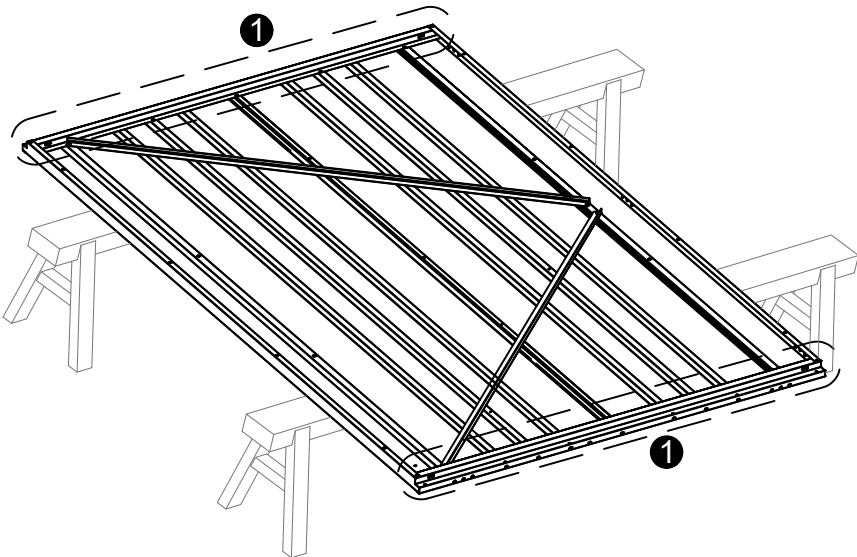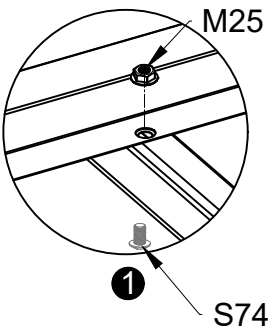



PART	NO	QTY
	4C001	1
	S74 M4X8	4
	M25 M4	4

Left Door

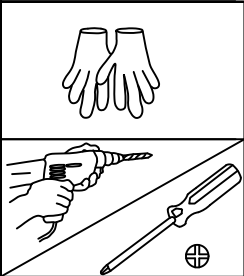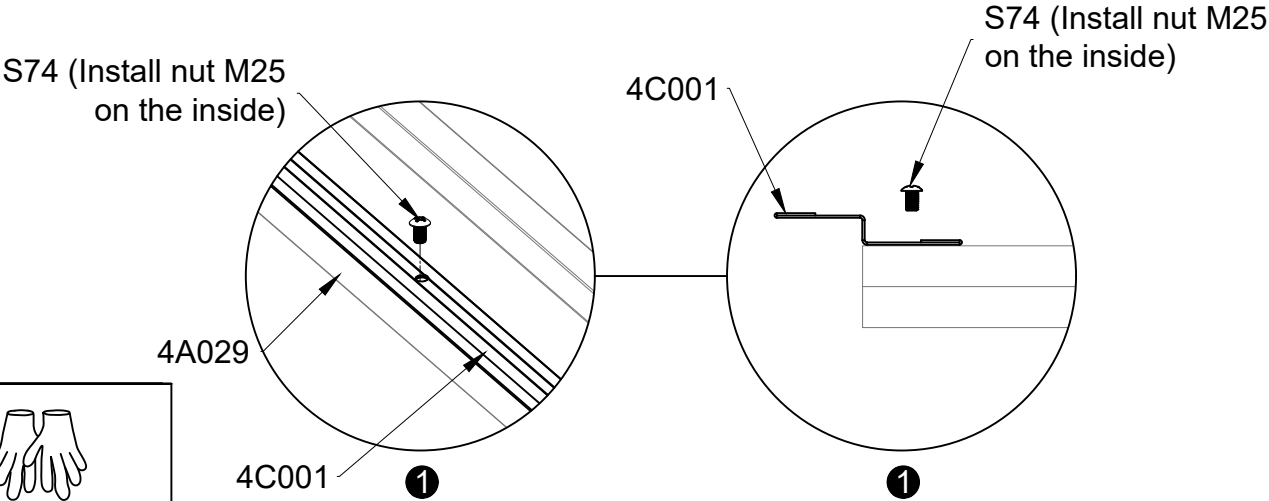
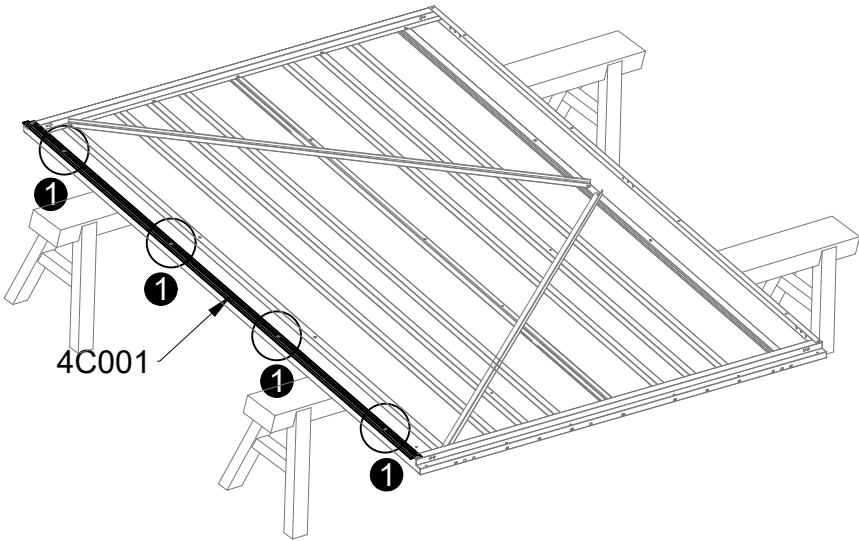


PART	NO	QTY
	1G006	1
	1G005	1
	4A028	1
	4A002	1
	D354	3
	H170	3
	S74 M4X8	12
	M25 M4	21
	S75 M4X10	9
	H164	1

Right Door

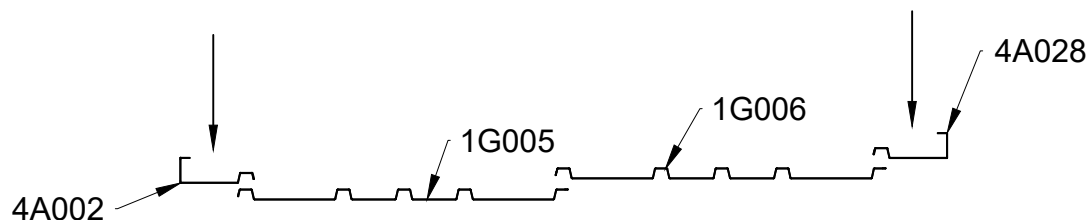
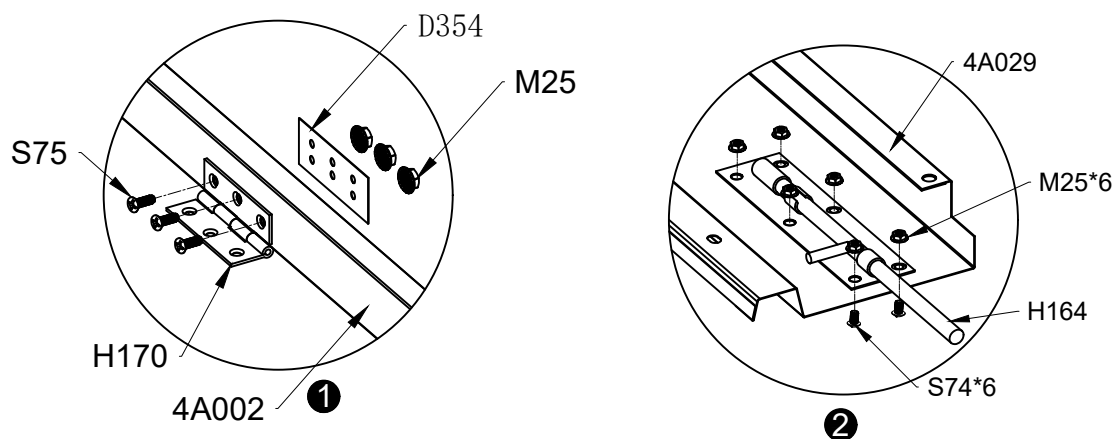


Please stack the door frames of the door panels according to the instructions above.

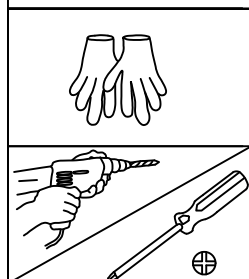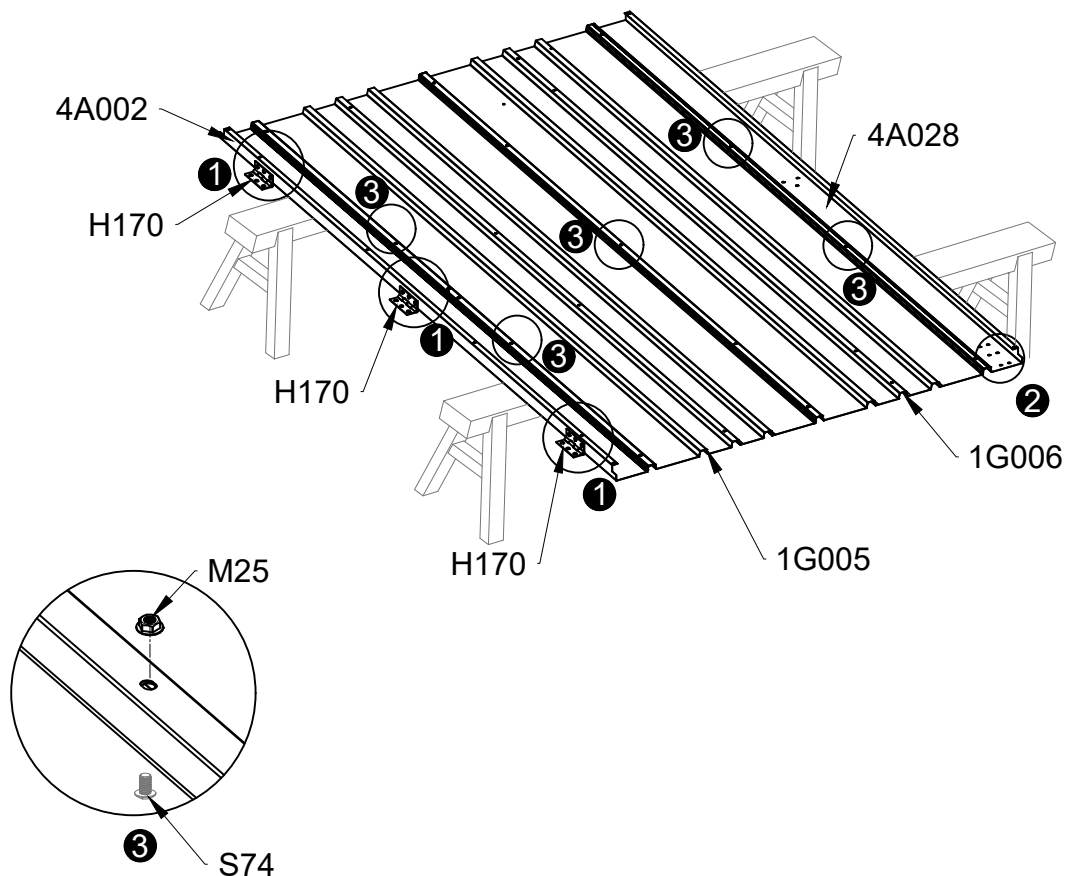


PART	NO	QTY
	4B002	1
	4B006	1

Right Door

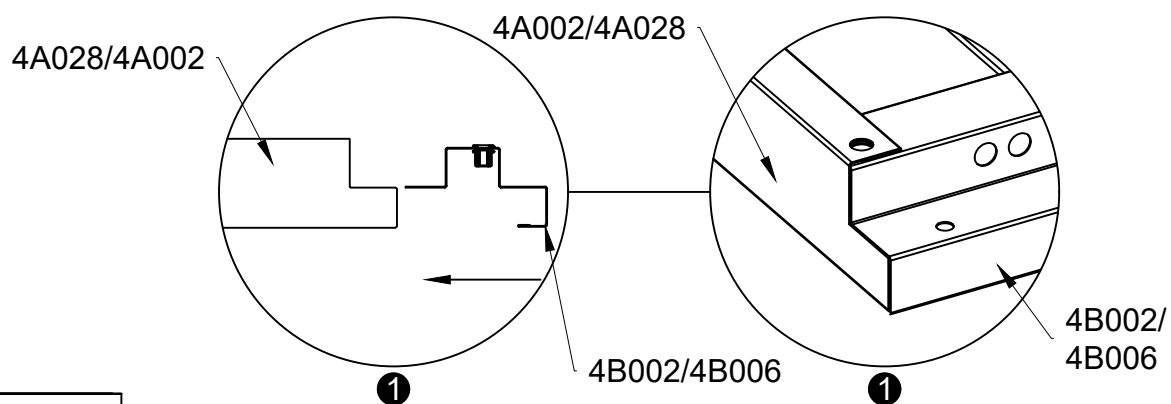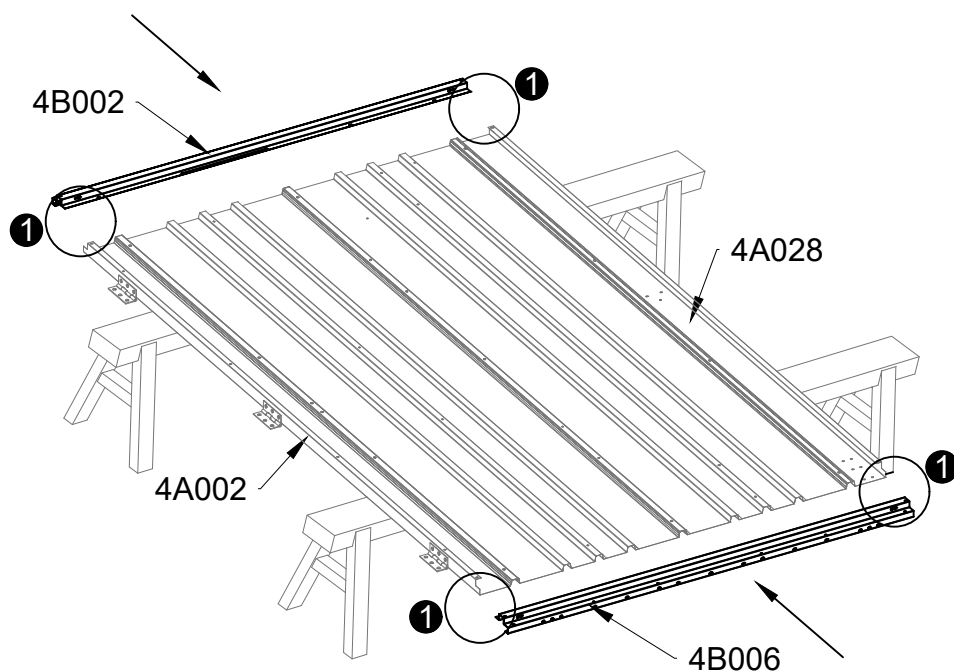


Pay attention to the connection method between 4A028/4A002 and 4B002/4B006.



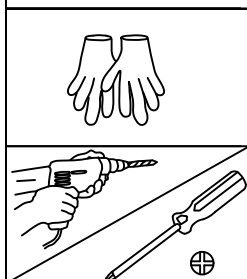


PART	NO	QTY
	2R005	2
	S74 M4X8	16
	M25 M4	12

Right Door



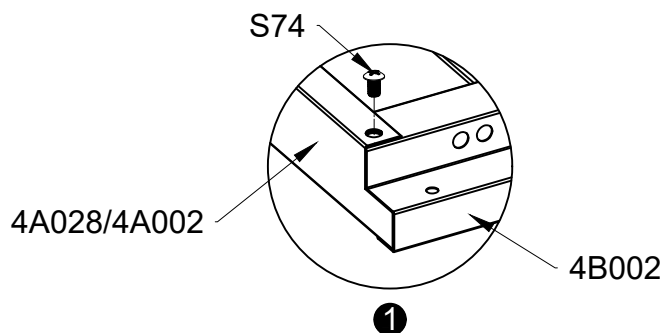


Make sure to fully insert the door panel before tightening the screws.

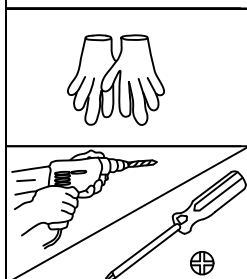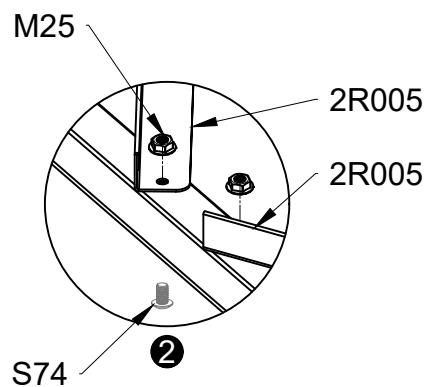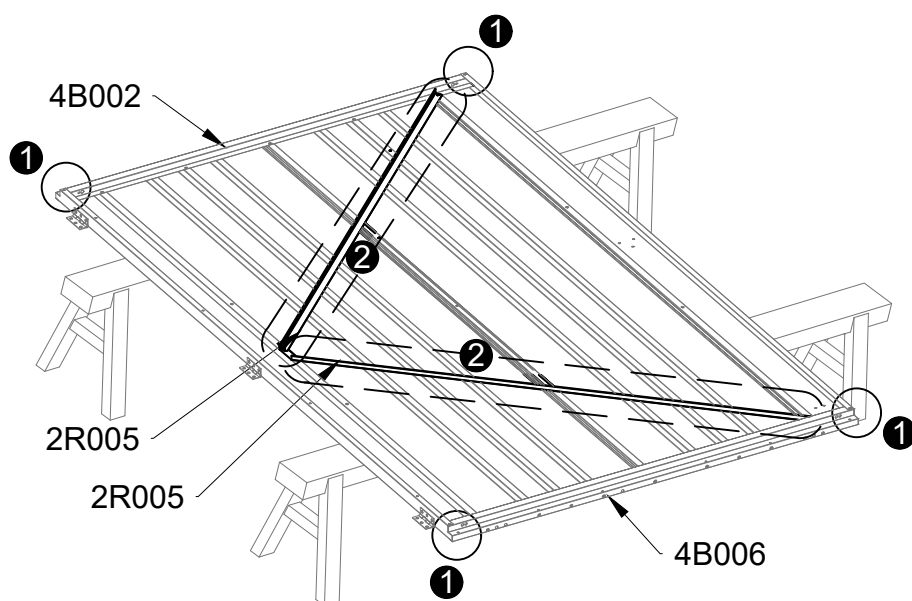






PART	NO	QTY
	S74	14
	M4X8	
	M25	14
	M4	

Right Door

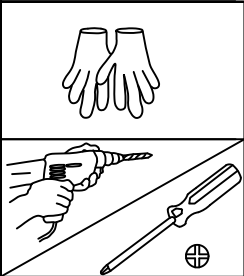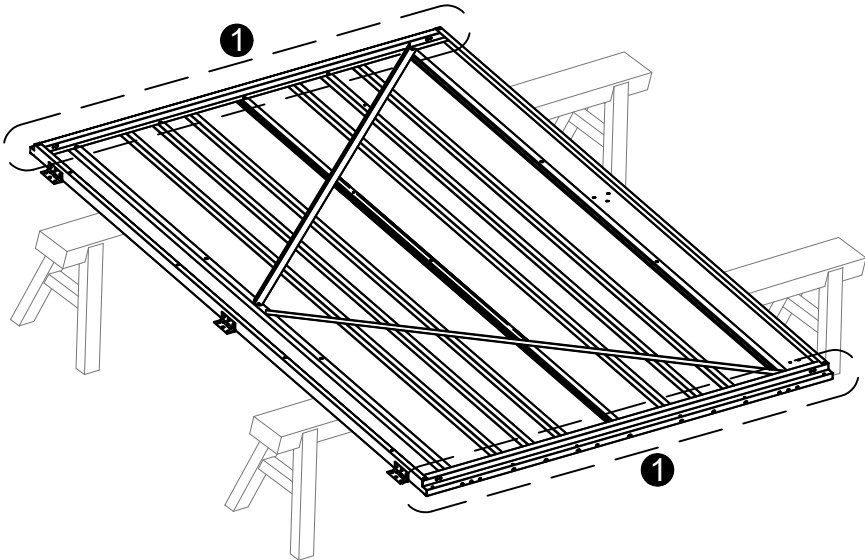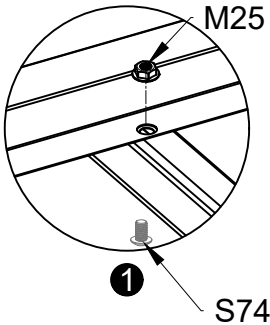



PART	NO	QTY
	1G001	1
	4A001	1
	4A002	1
	H170	3
	D354	3
	S74	4
	M4X8	
	S75	9
	M4X10	
	M25	13
	M4	

back door

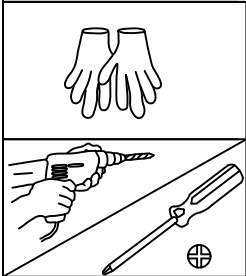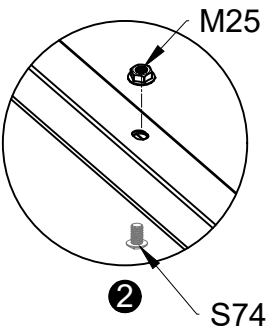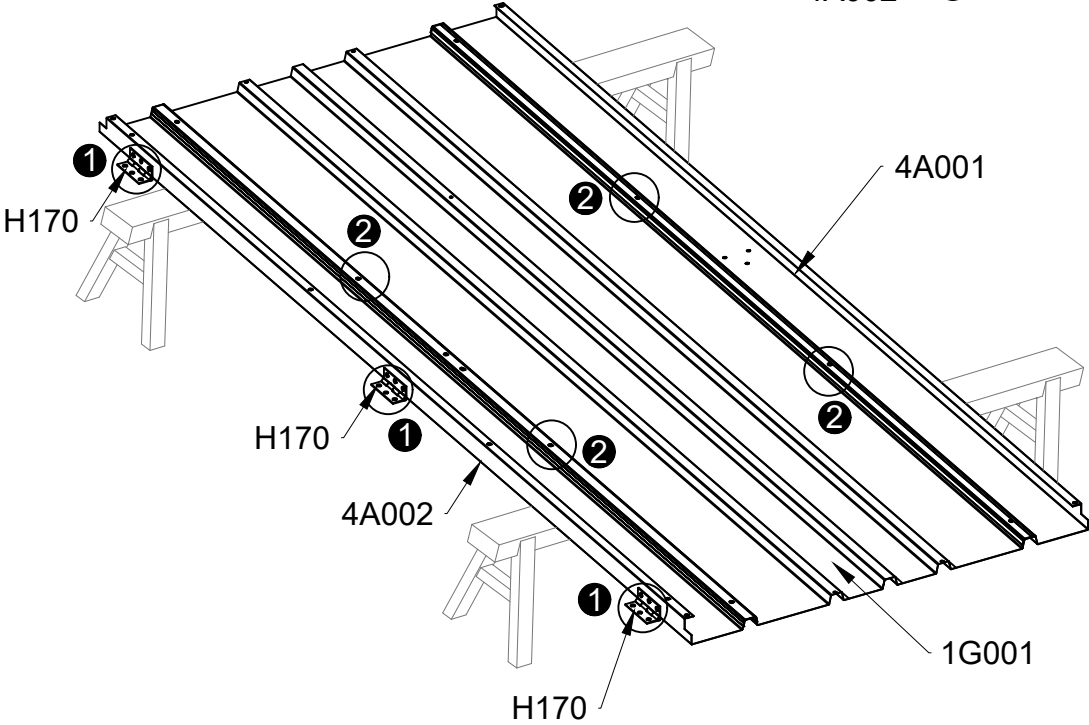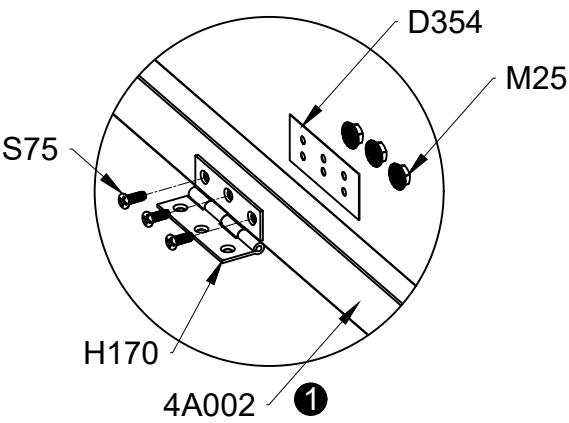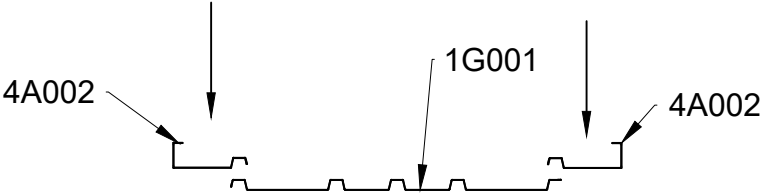


PART	NO	QTY
	4B001	2
	S74 M4X8	4

back door


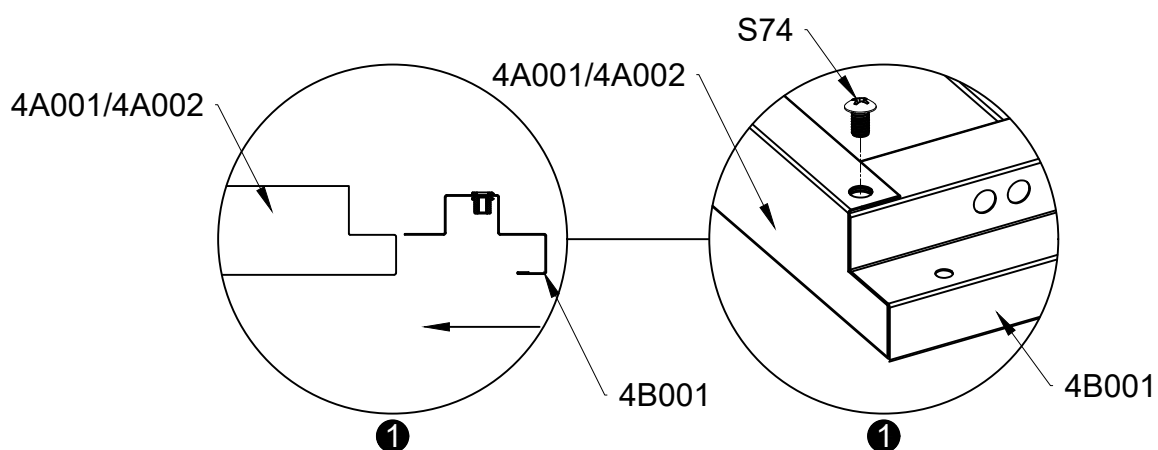
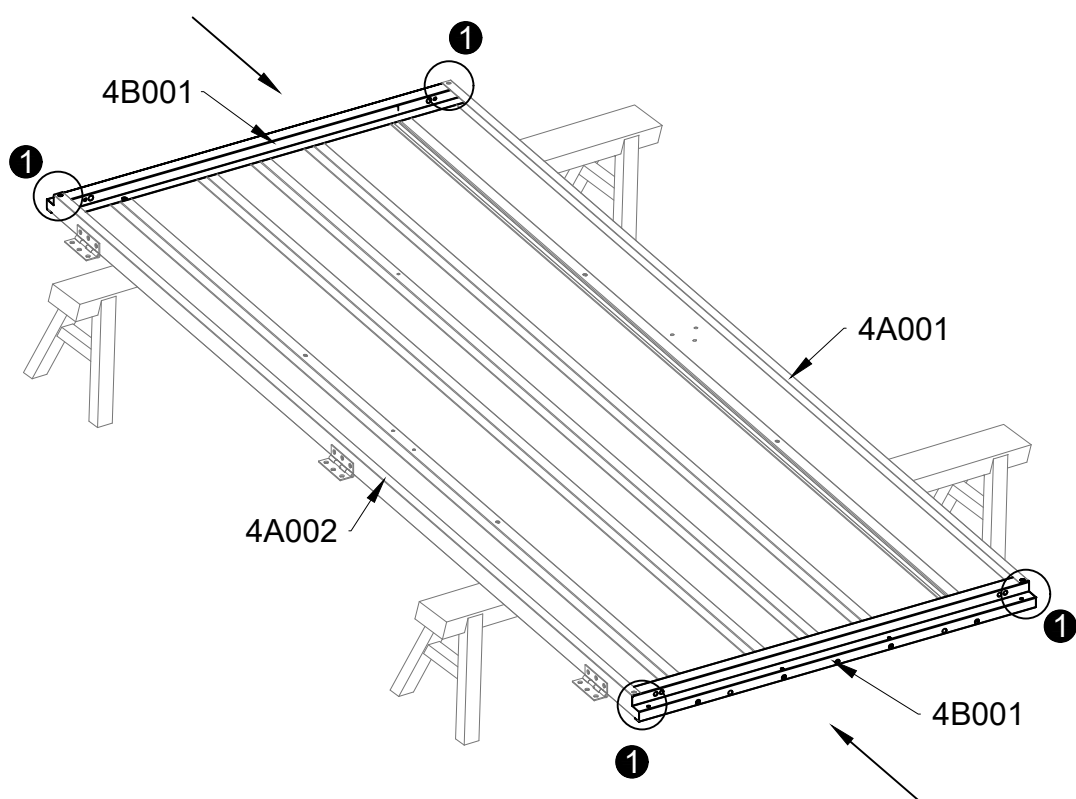


Pay attention to the connection method
between 4A001/4A002 and 4B001.

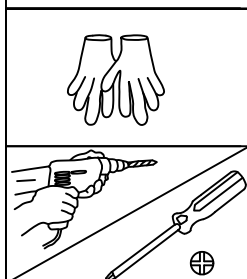








PART	NO	QTY
	2R001	2
	S74 M4X8	12
	M25 M4	12

back door

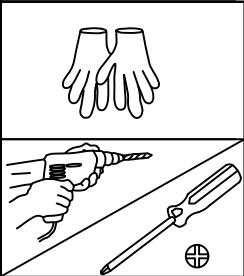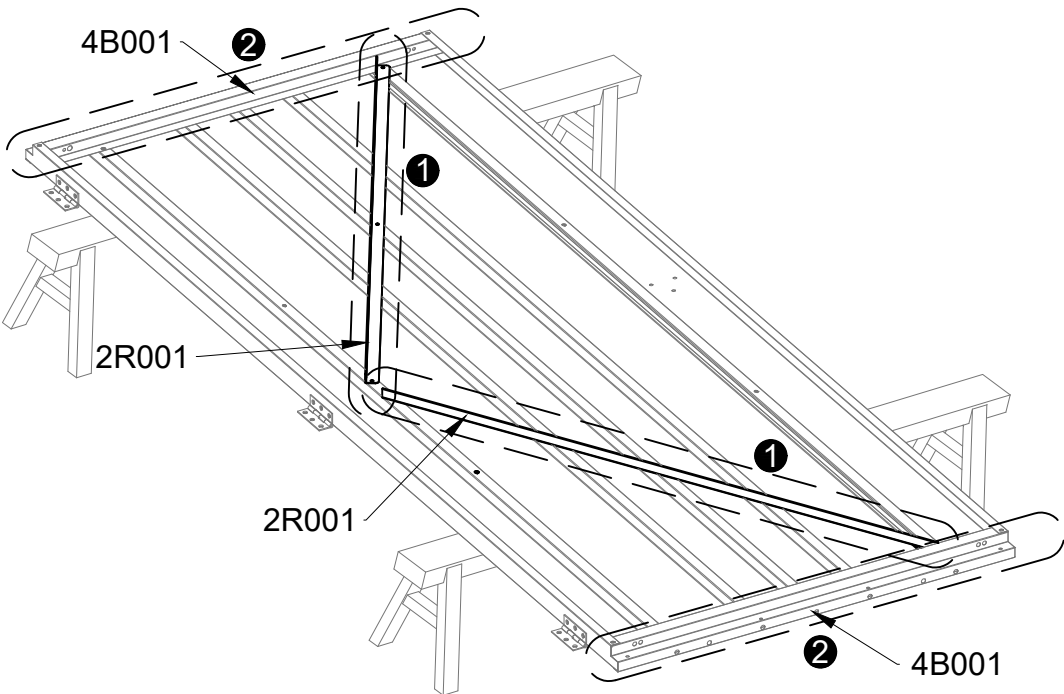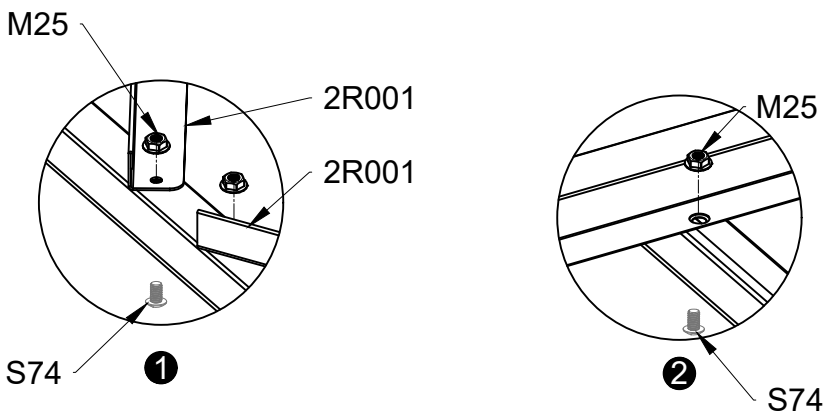


PART	NO	QTY
	2A003	3
	2A007	3
	2A009	2
	2A010	2
	2A012	1
	2A013	1
	D355	14
	D438	4
	6A004	2
	S74 M4X8	56
	M25 M4	56






There is a semicircle mark here, please pay attention to the direction with the notch

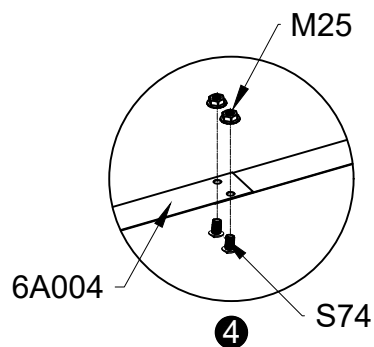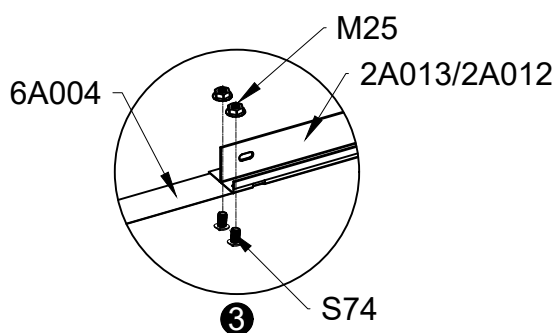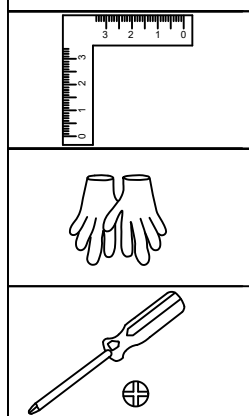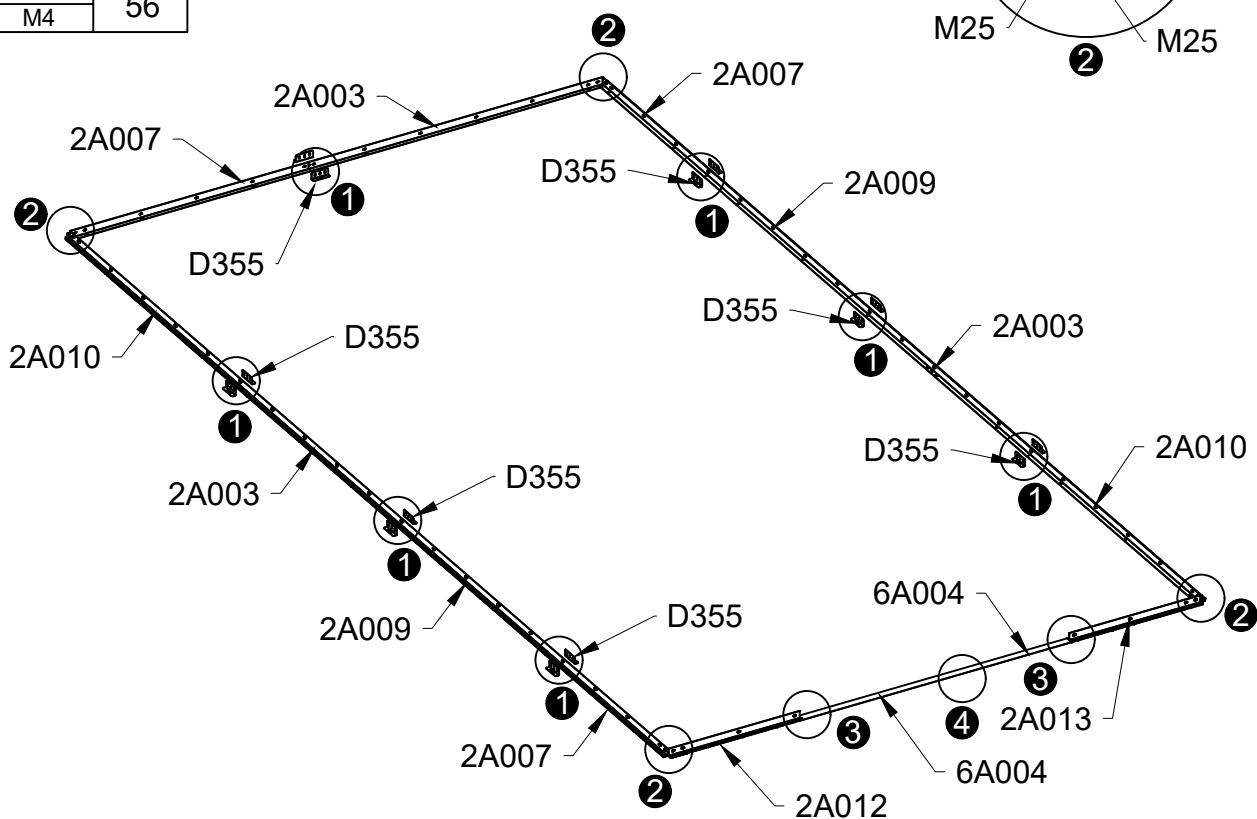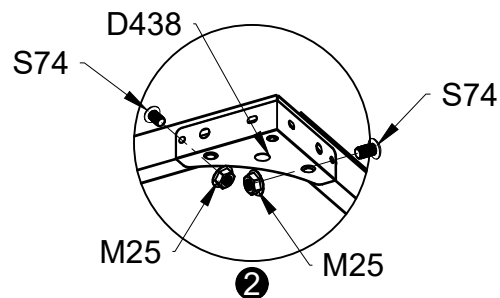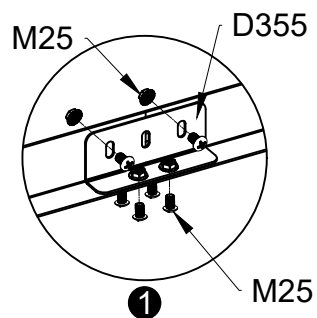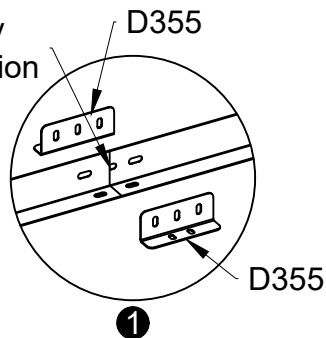




PART	NO	QTY
	J156	39
	Z40 M5X40	39

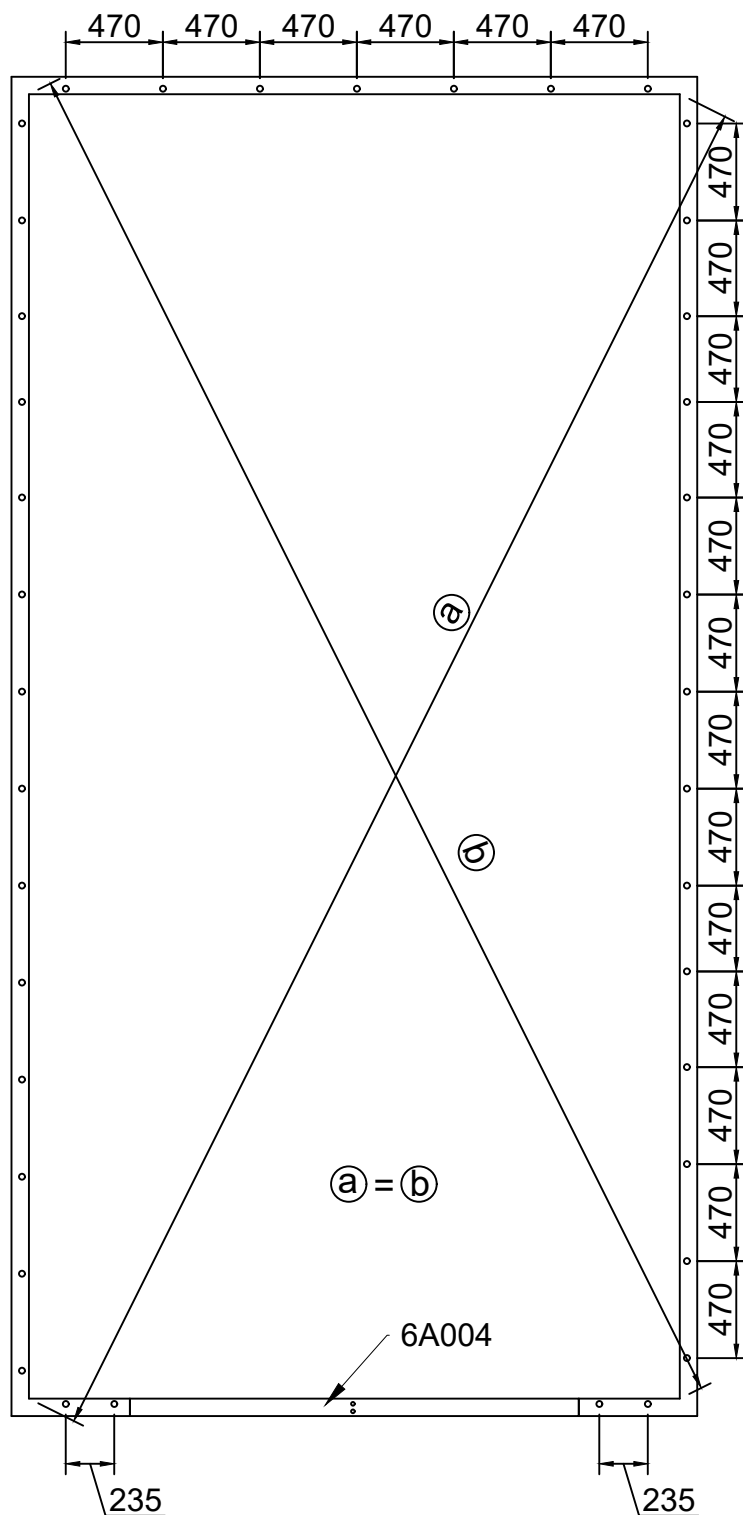


(Profile 6A004 is used for positioning. After securing the foundation with expansion screws, you can choose whether to remove it, as it will not affect the product's use.)

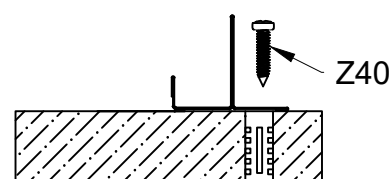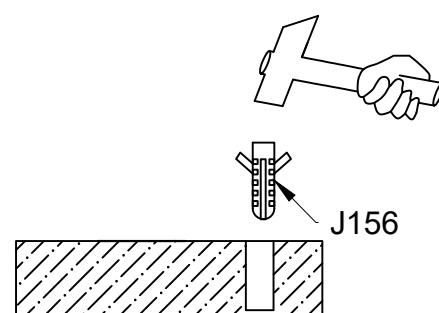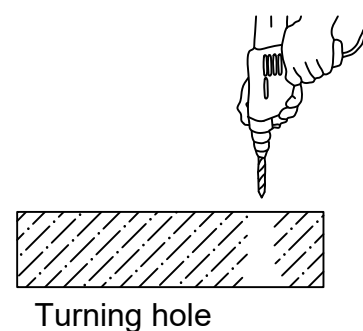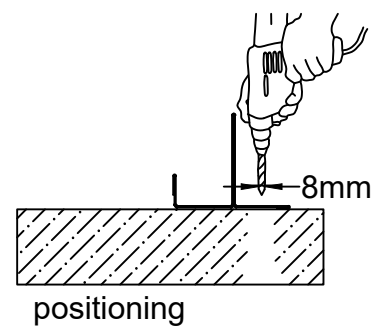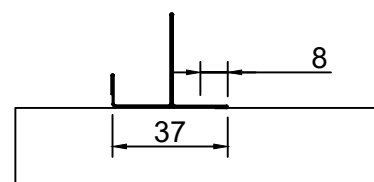




PART	NO	QTY
	2B002	1
	S74 M4X8	2
	M25 M4	2

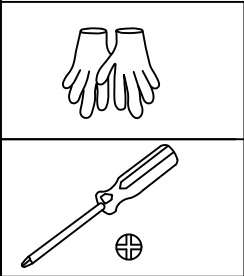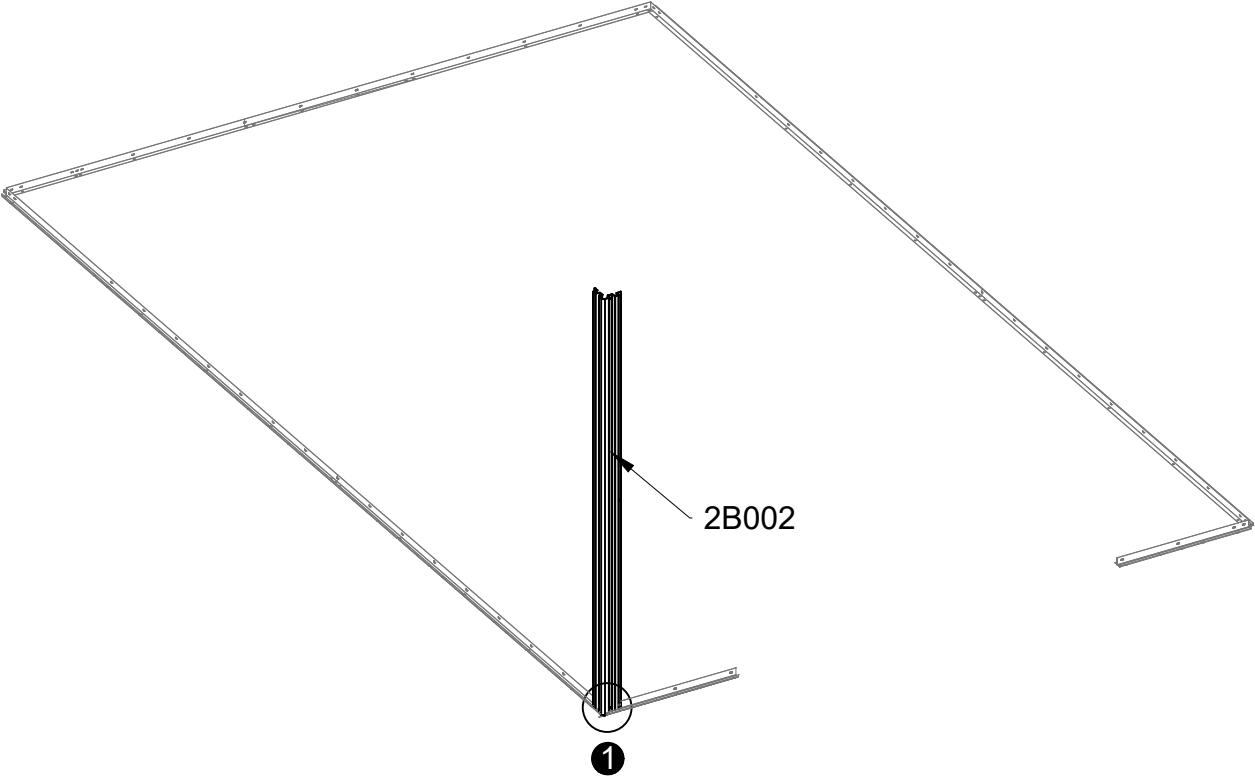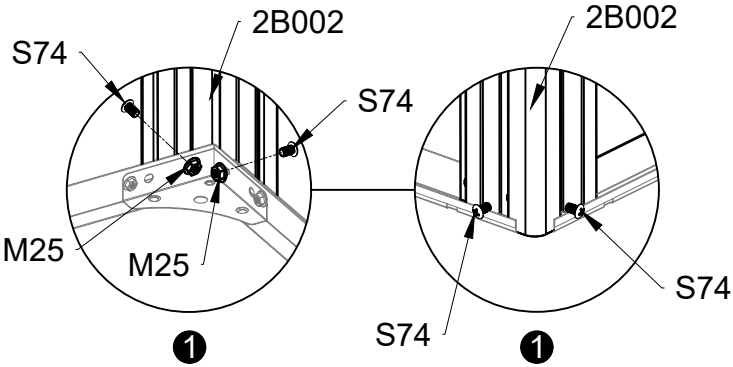

PART	NO	QTY
	1A002	1
	1C009	1
	2C020	1
	S74	7
	M4X8	
	M25	7
	M4	






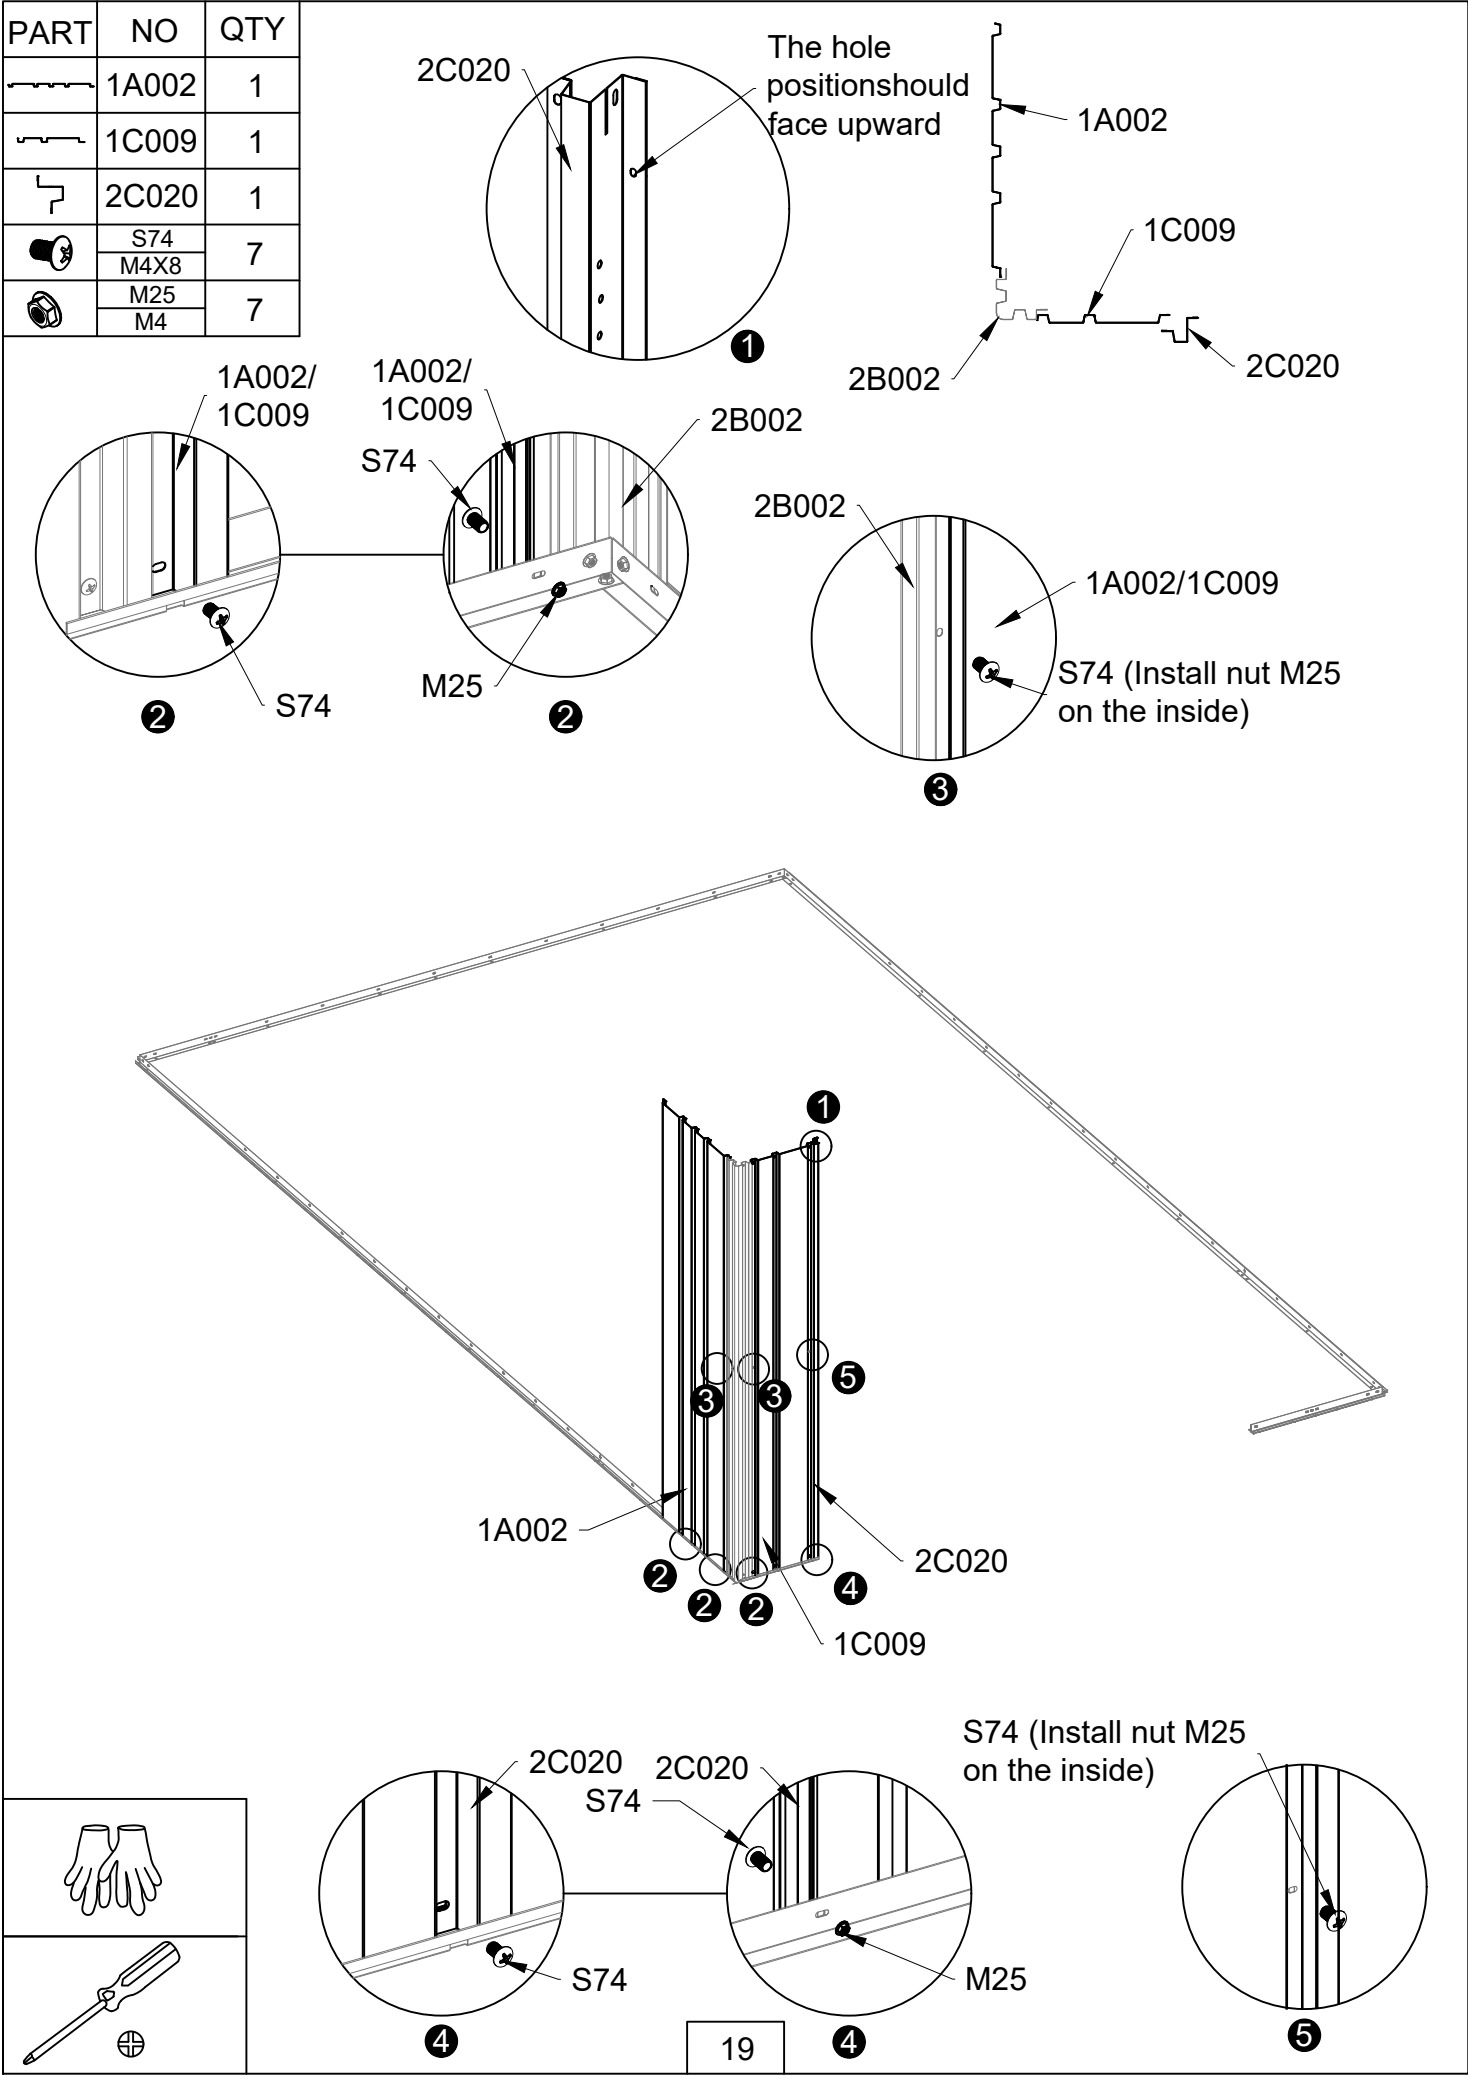


PART	NO	QTY
	2B002	1
	S74 M4X8	2
	M25 M4	2

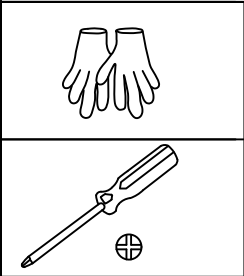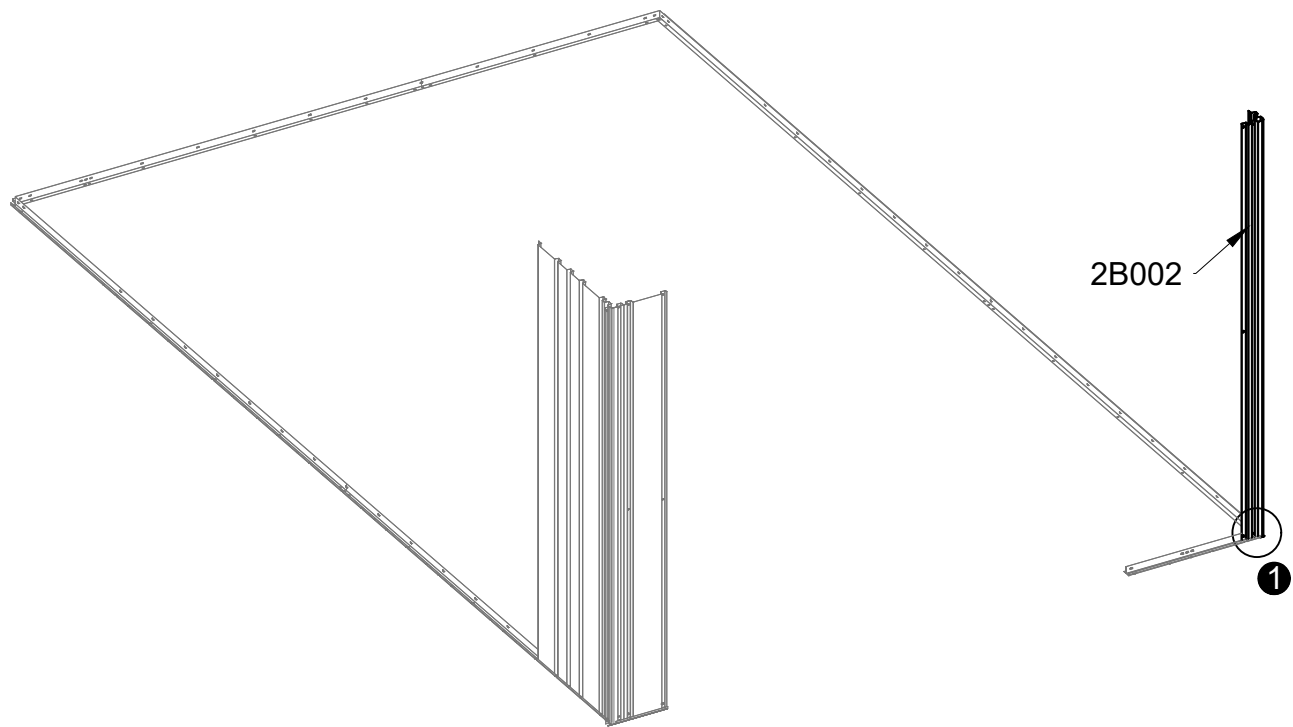
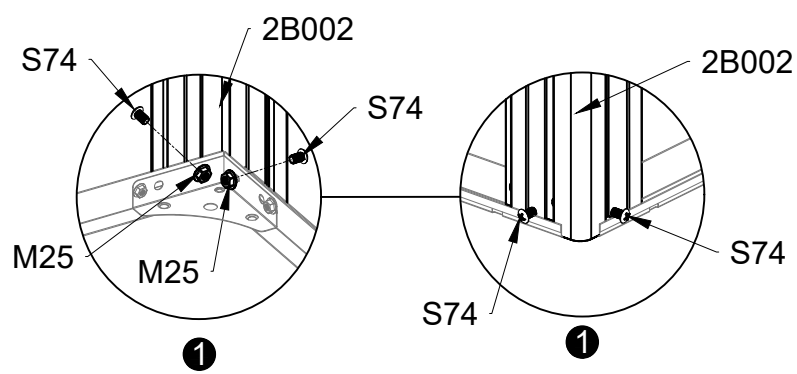


PART	NO	QTY
	1A002	1
	1C009	1
	2C019	1
	S74	7
	M4X8	
	M25	7
	M4	



The hole positions should face upward

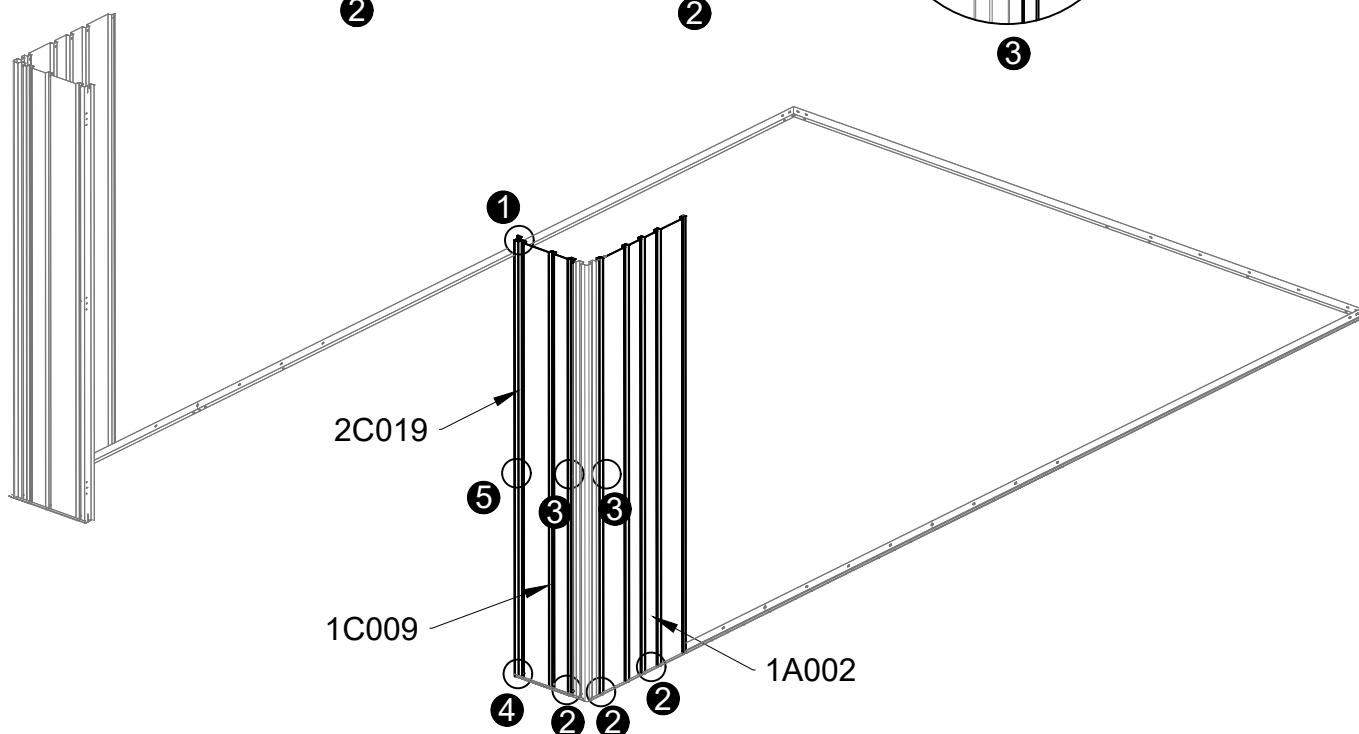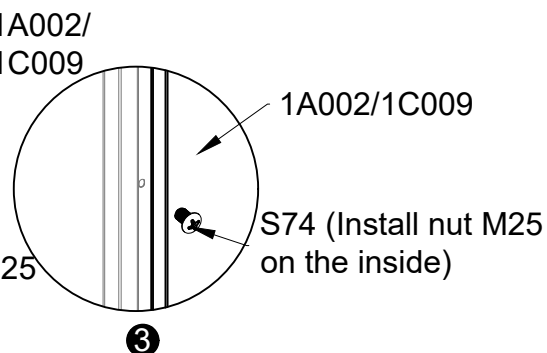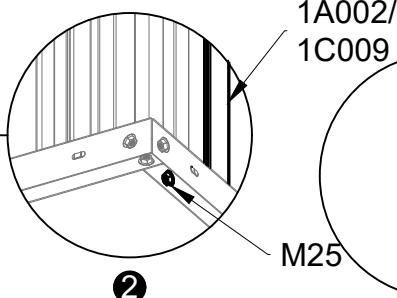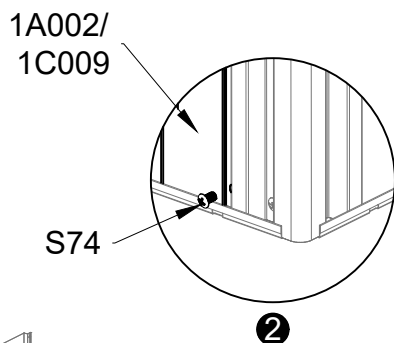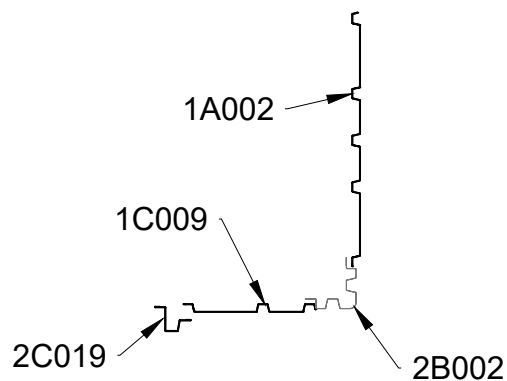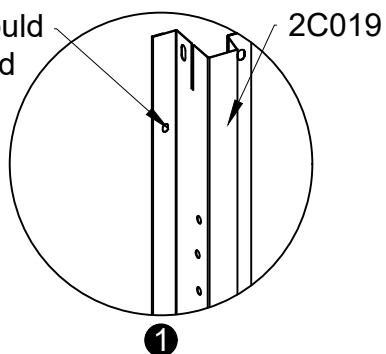




To facilitate installation, adjust the orientation of the view.

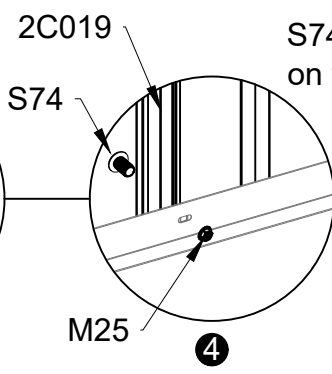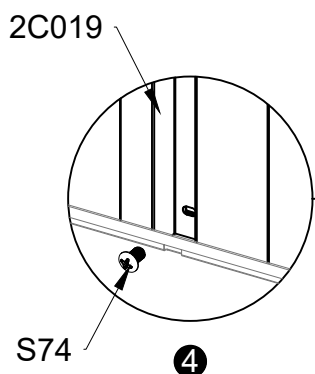





S74 (Install nut M25 on the inside)

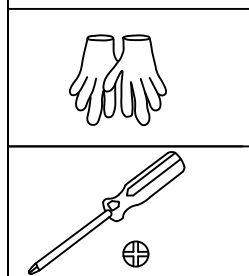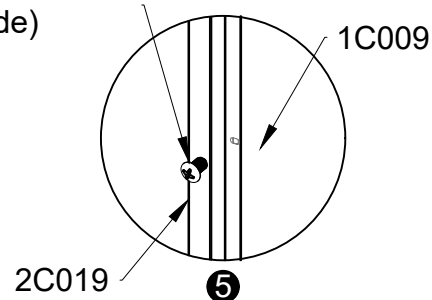






PART	NO	QTY
	2B002	1
	S74 M4X8	2
	M25 M4	2

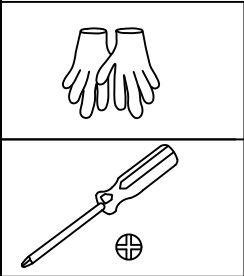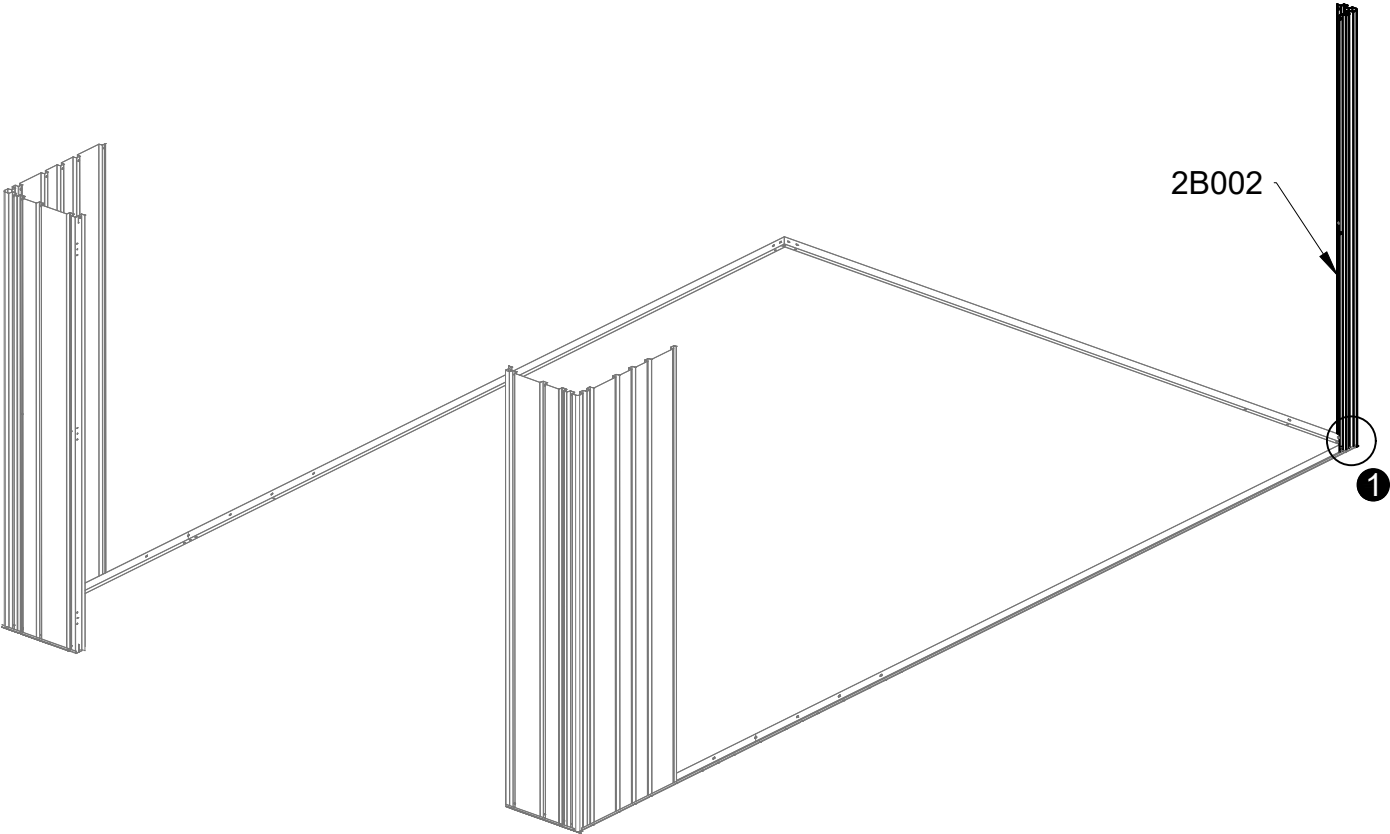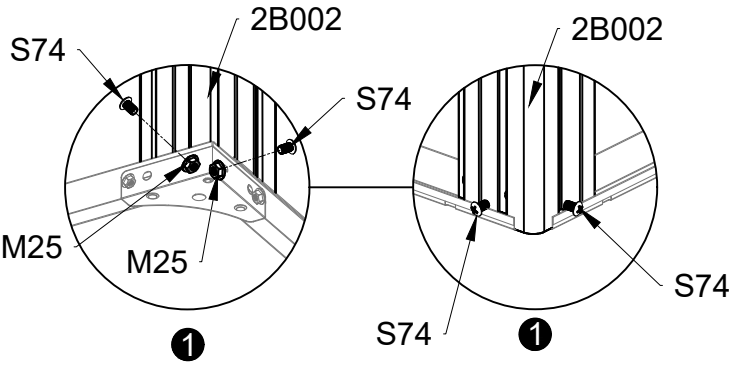




PART	NO	QTY
	1A002	1
	S74	3
	M4X8	
	M25	3
	M4	

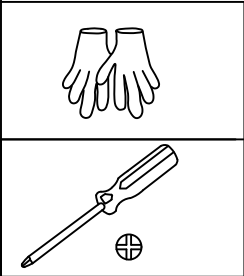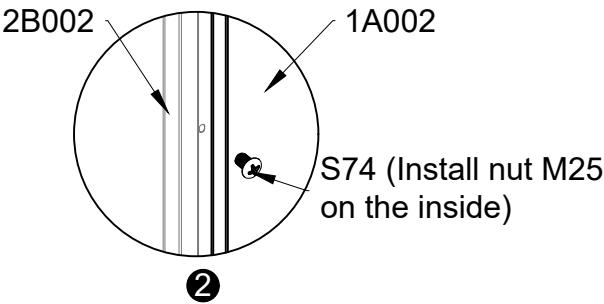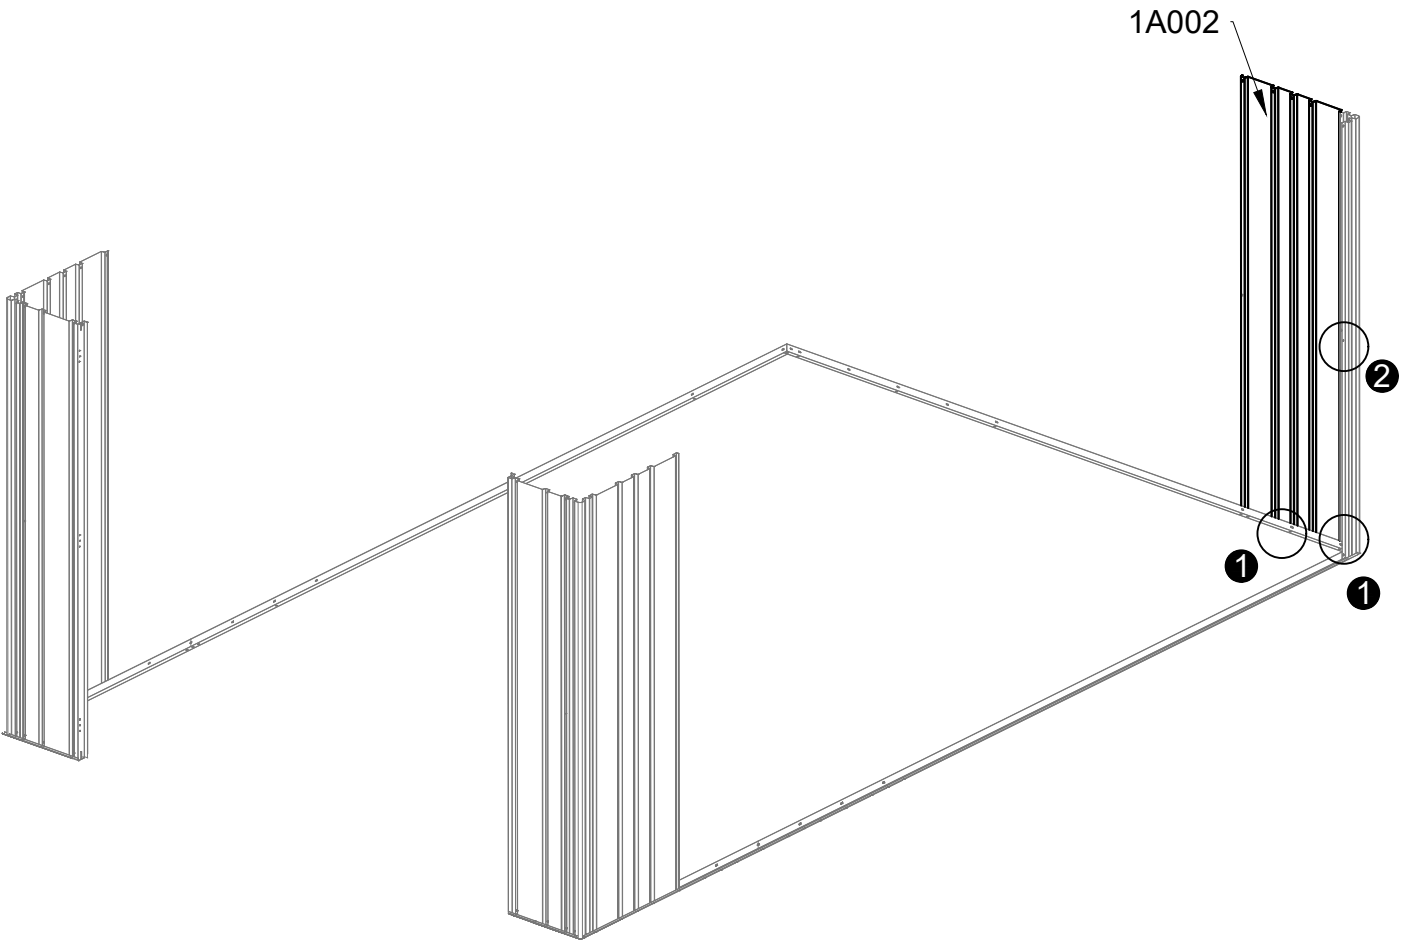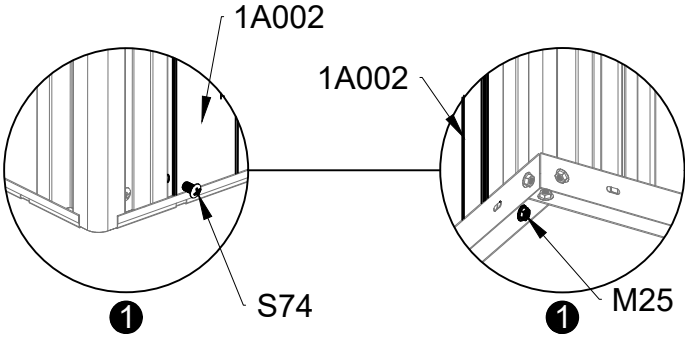





PART	NO	QTY
	1A002	1
	S74	3
	M4X8	
	M25	3
	M4	

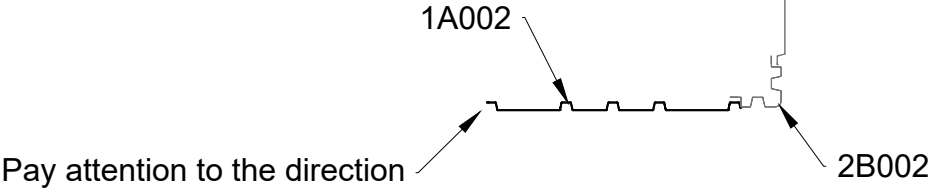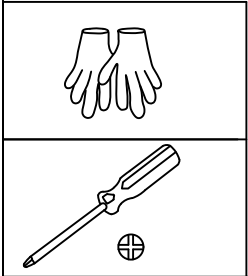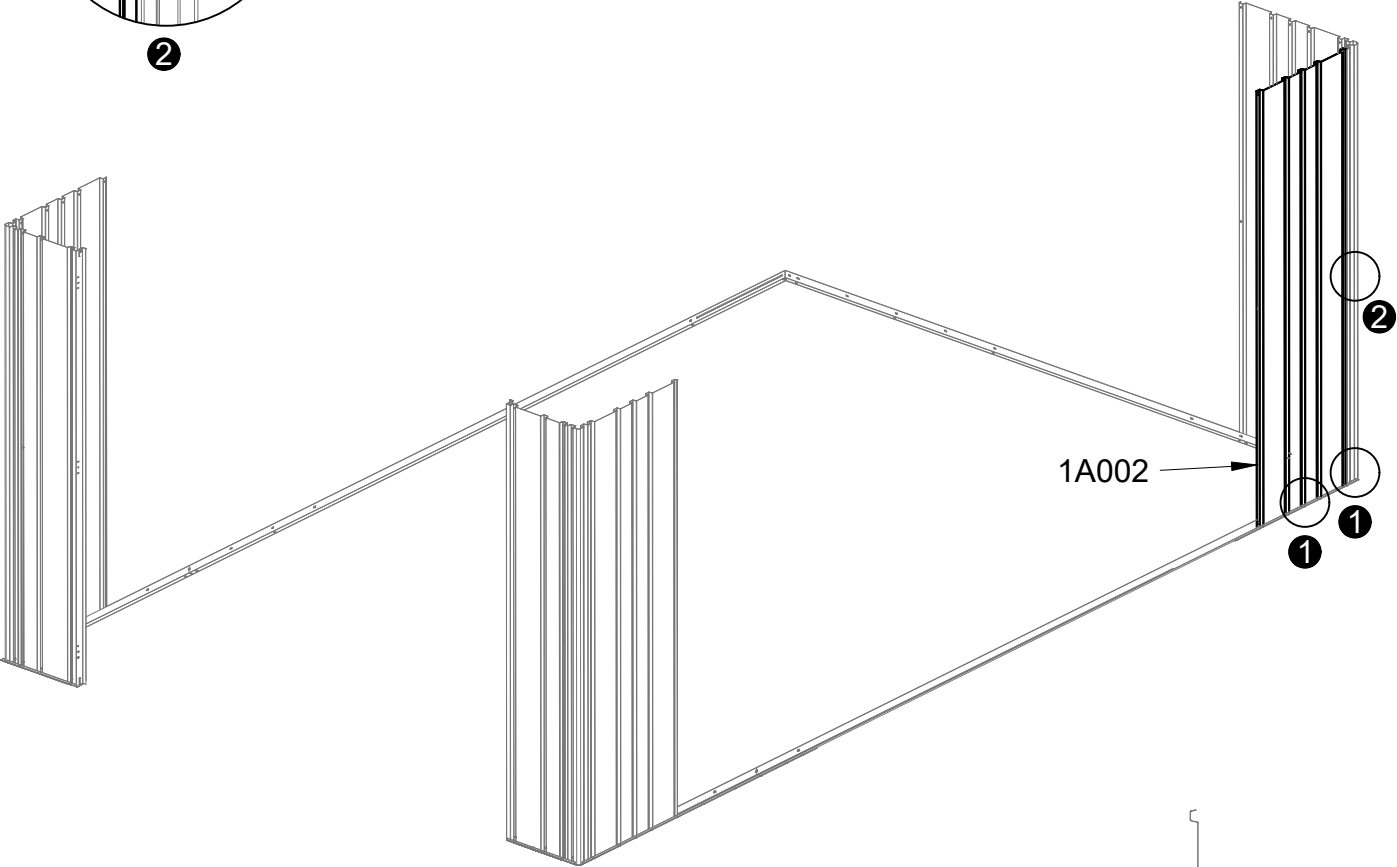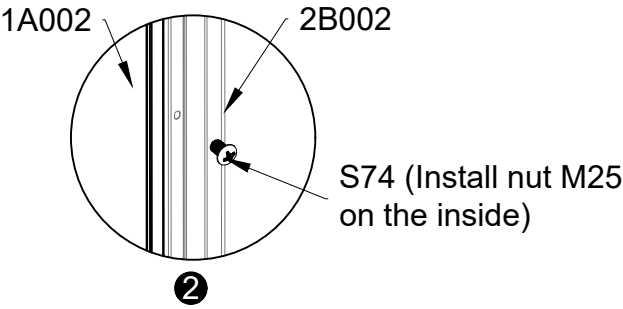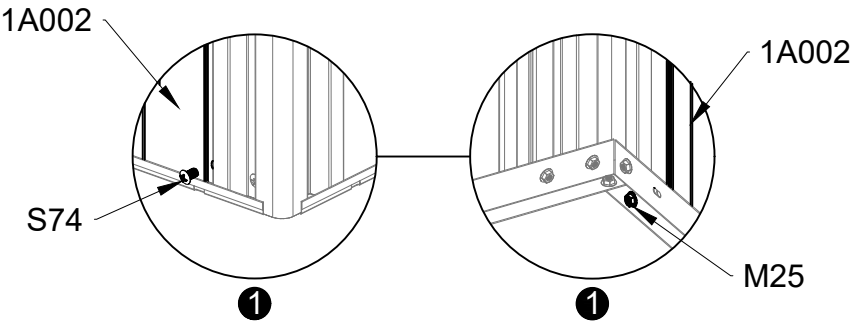




PART	NO	QTY
	2B002	1
	S74 M4X8	2
	M25 M4	2

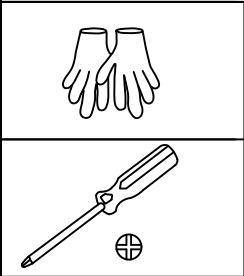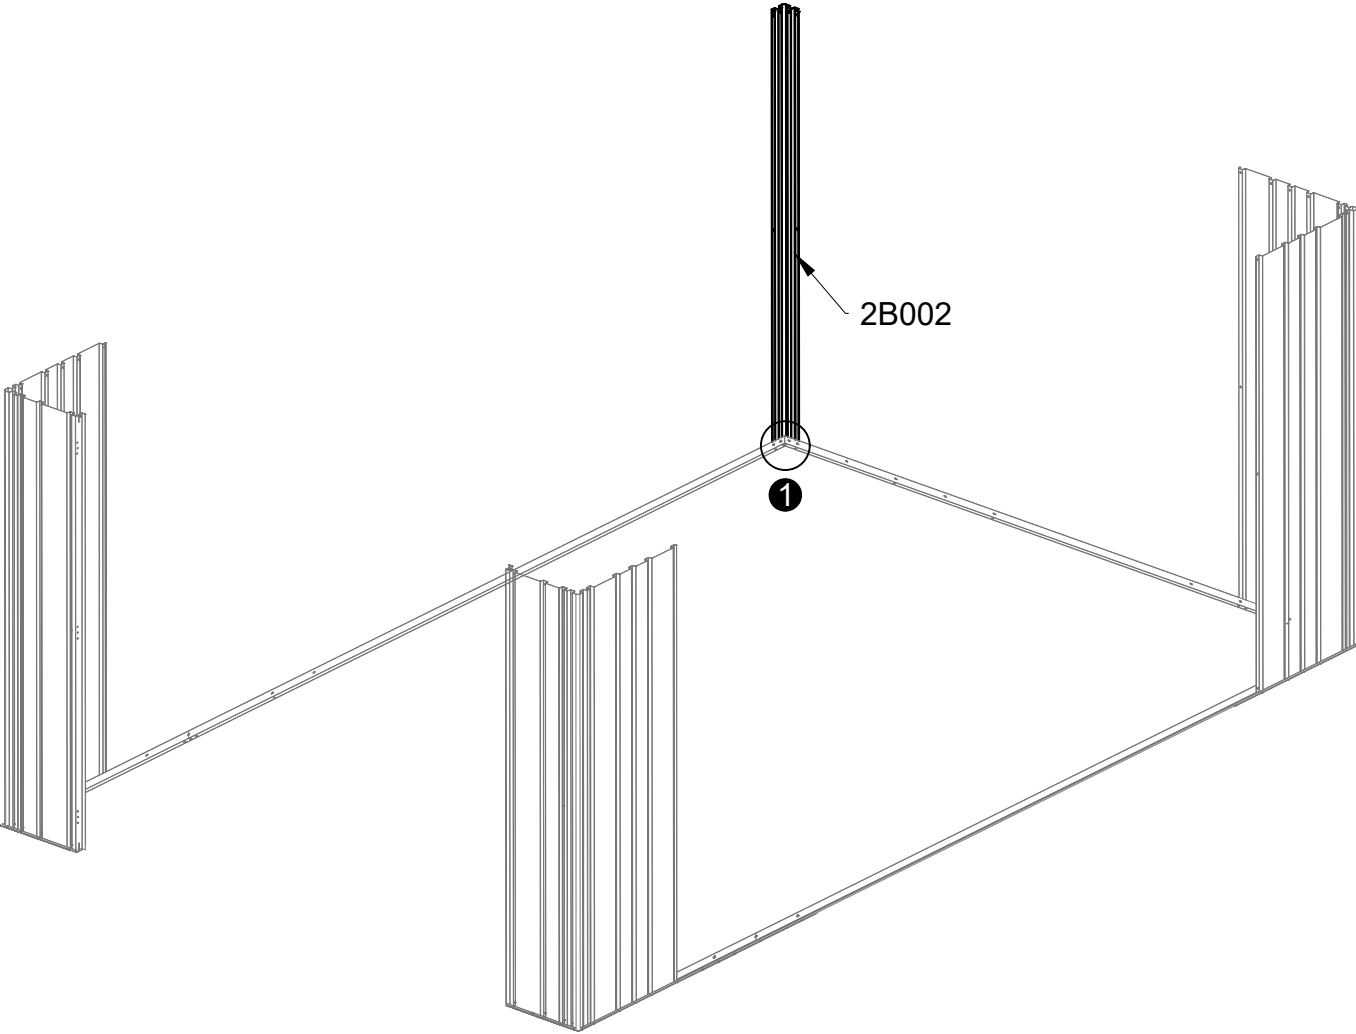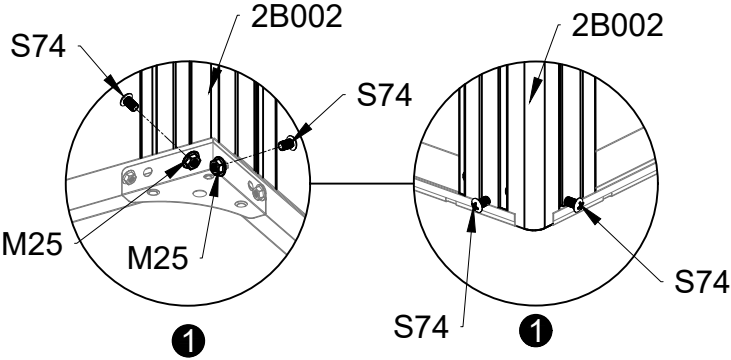


PART	NO	QTY
	1A002	2
	S74	6
	M4X8	
	M25	6
	M4	

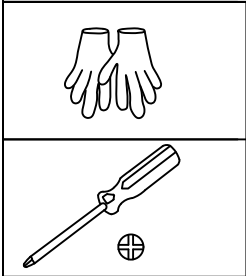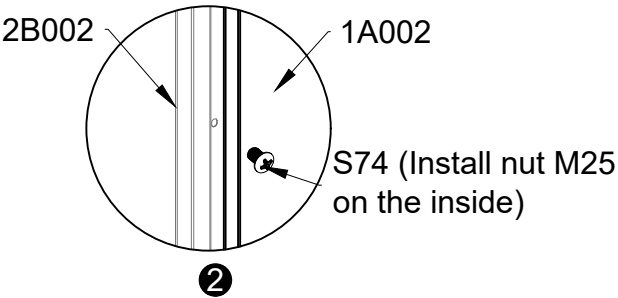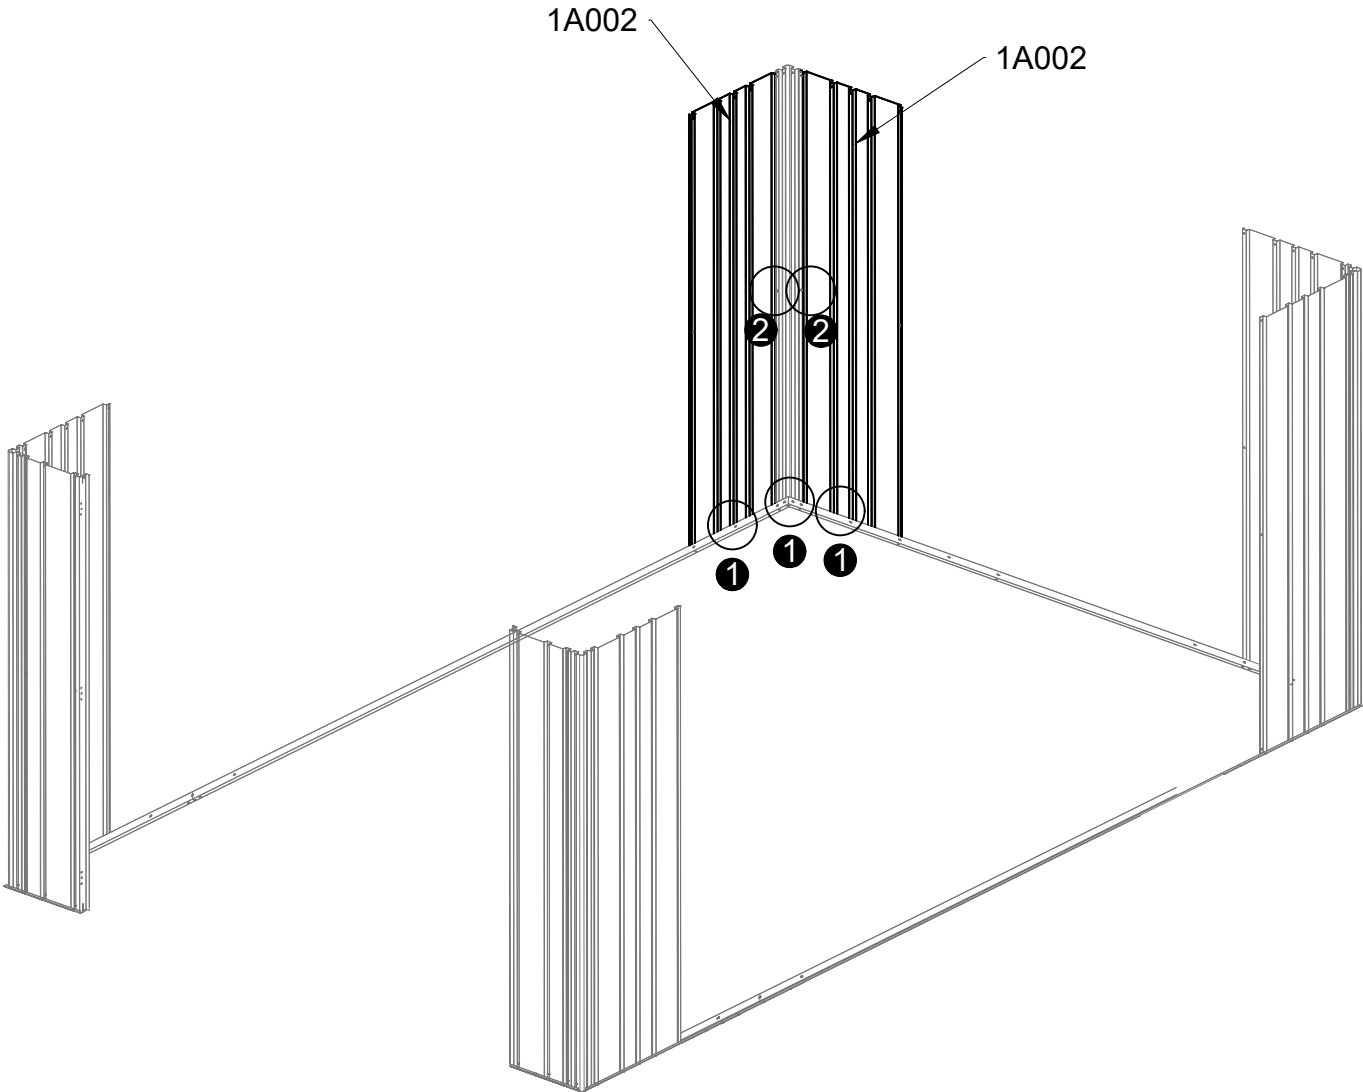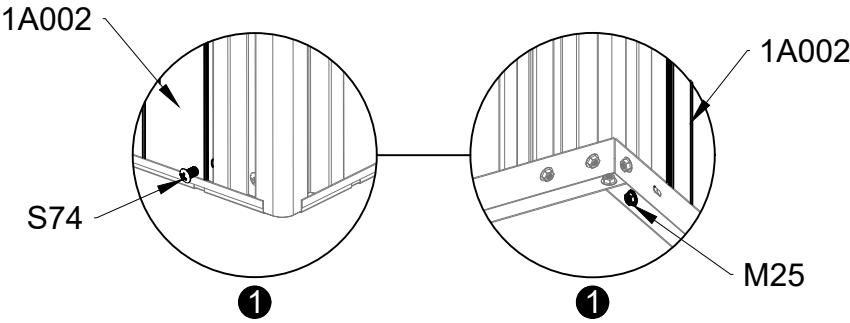



PART	NO	QTY
	2D006	1
	2D007	1
	S74	4
	M4X8	
	M25	4
	M4	

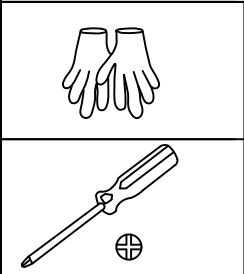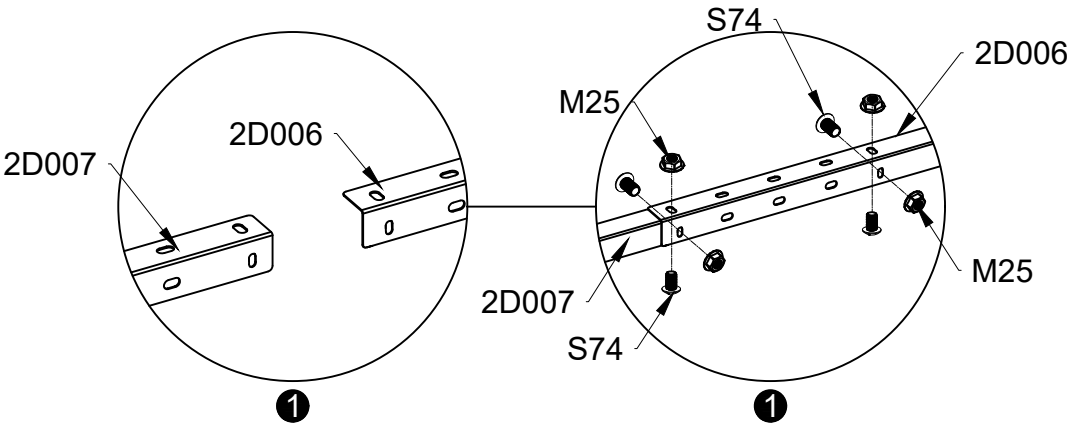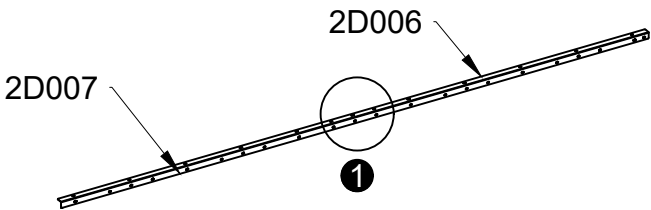






PART	NO	QTY
	S74	6
	M4X8	
	M25	6
	M4	

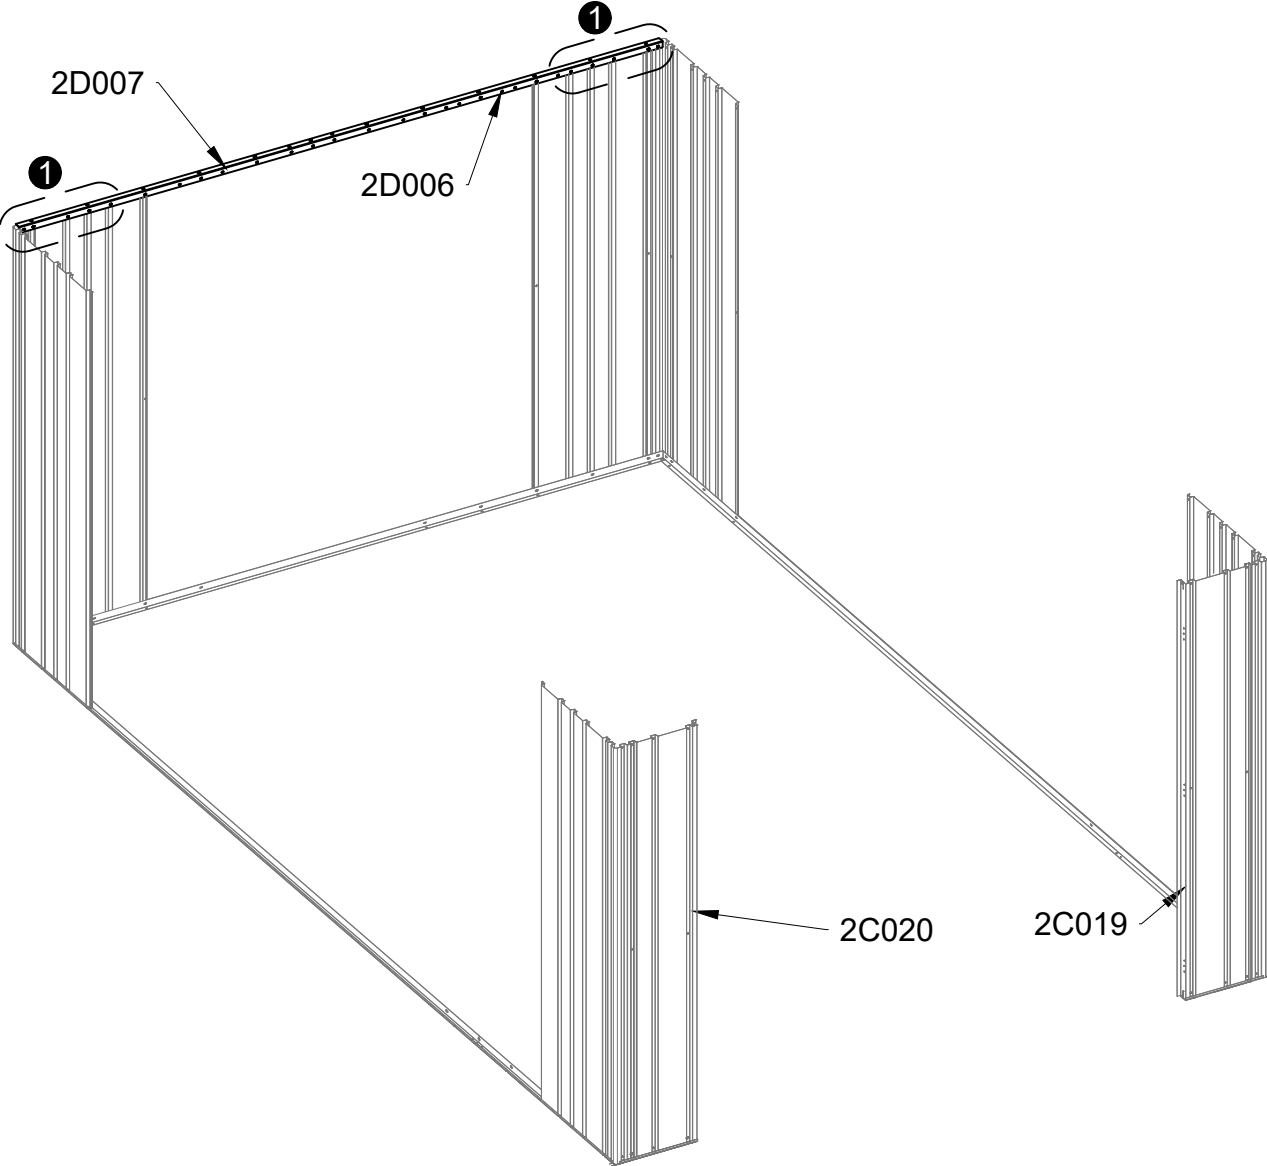




To facilitate installation, adjust the orientation of the view.

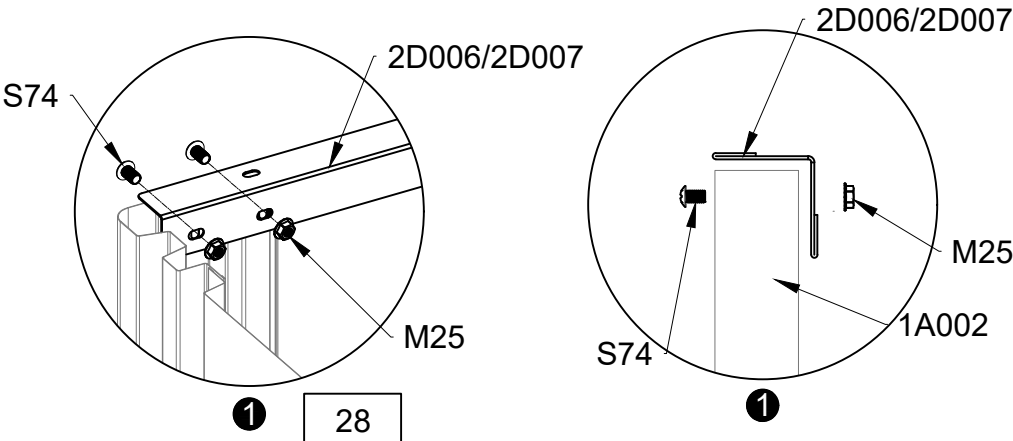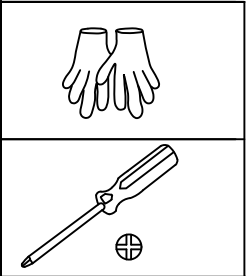




PART	NO	QTY
	2D006	1
	2D007	1
	2H003	1
	S74	9
	M4X8	
	M25	9
	M4	

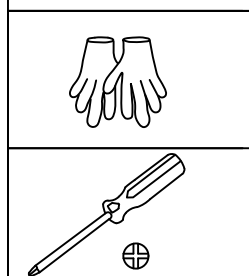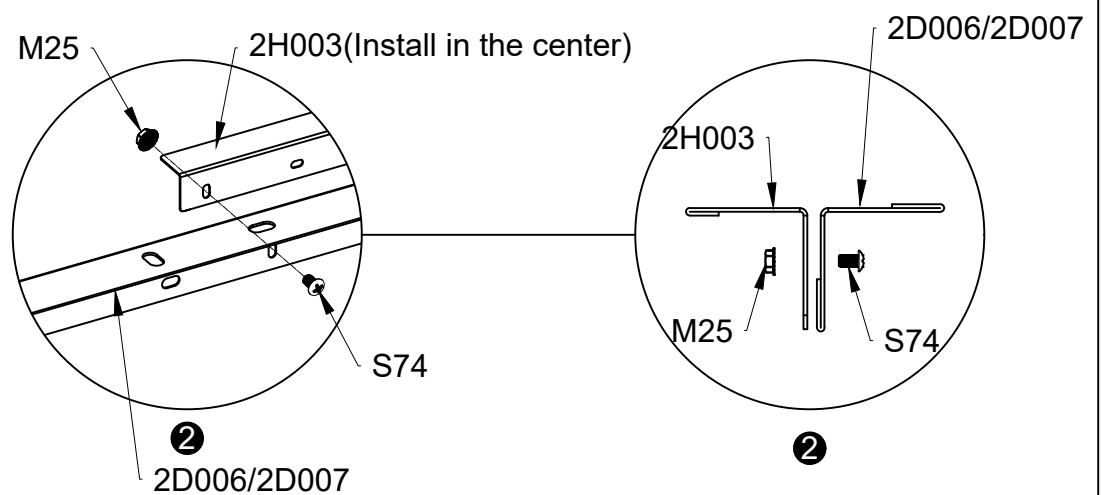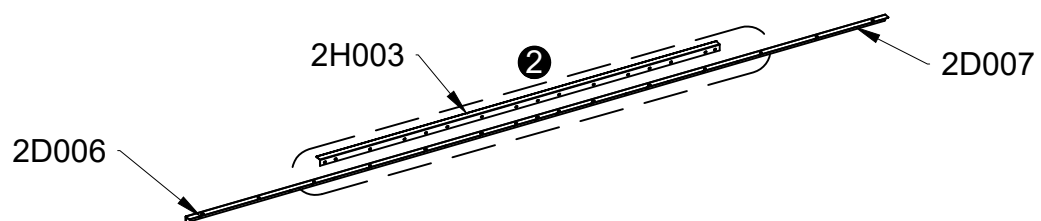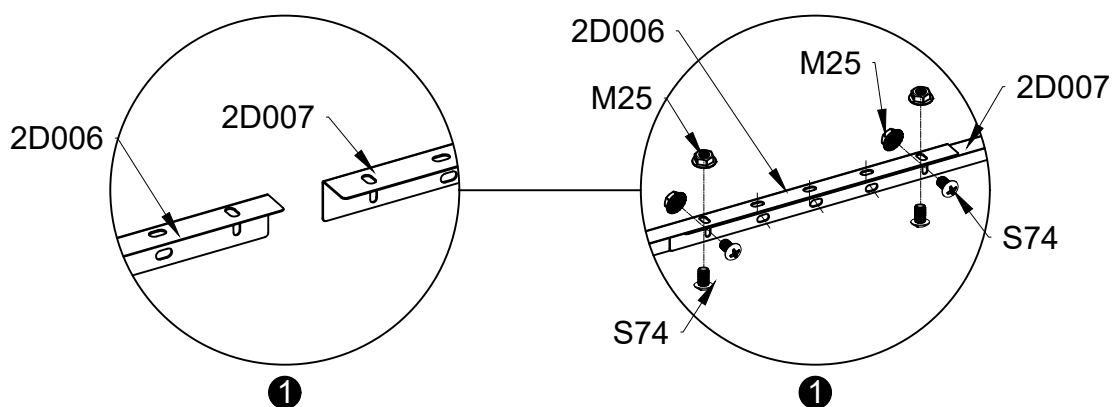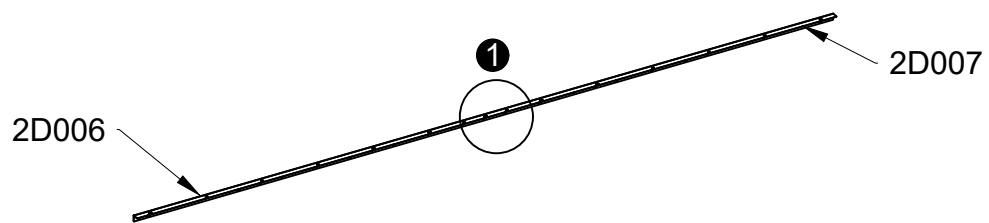




PART	NO	QTY
	S74	8
	M4X8	
	M25	8
	M4	

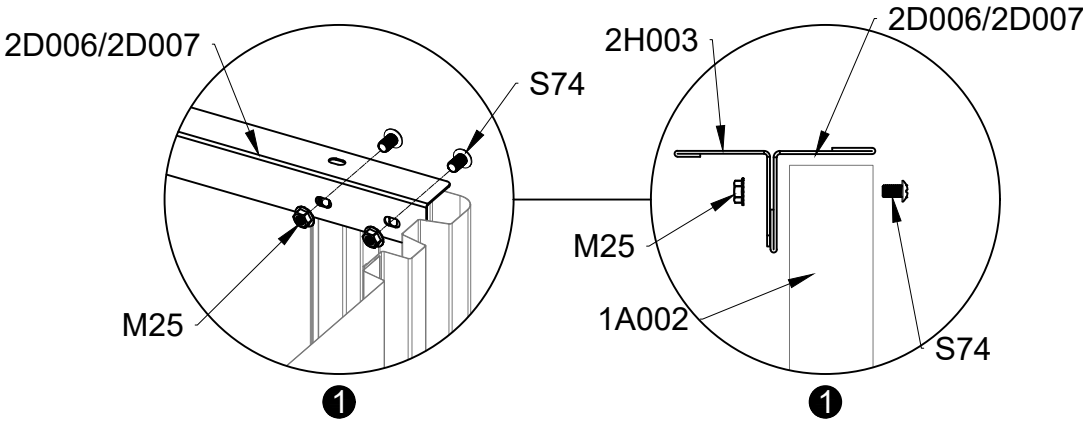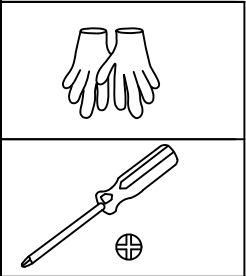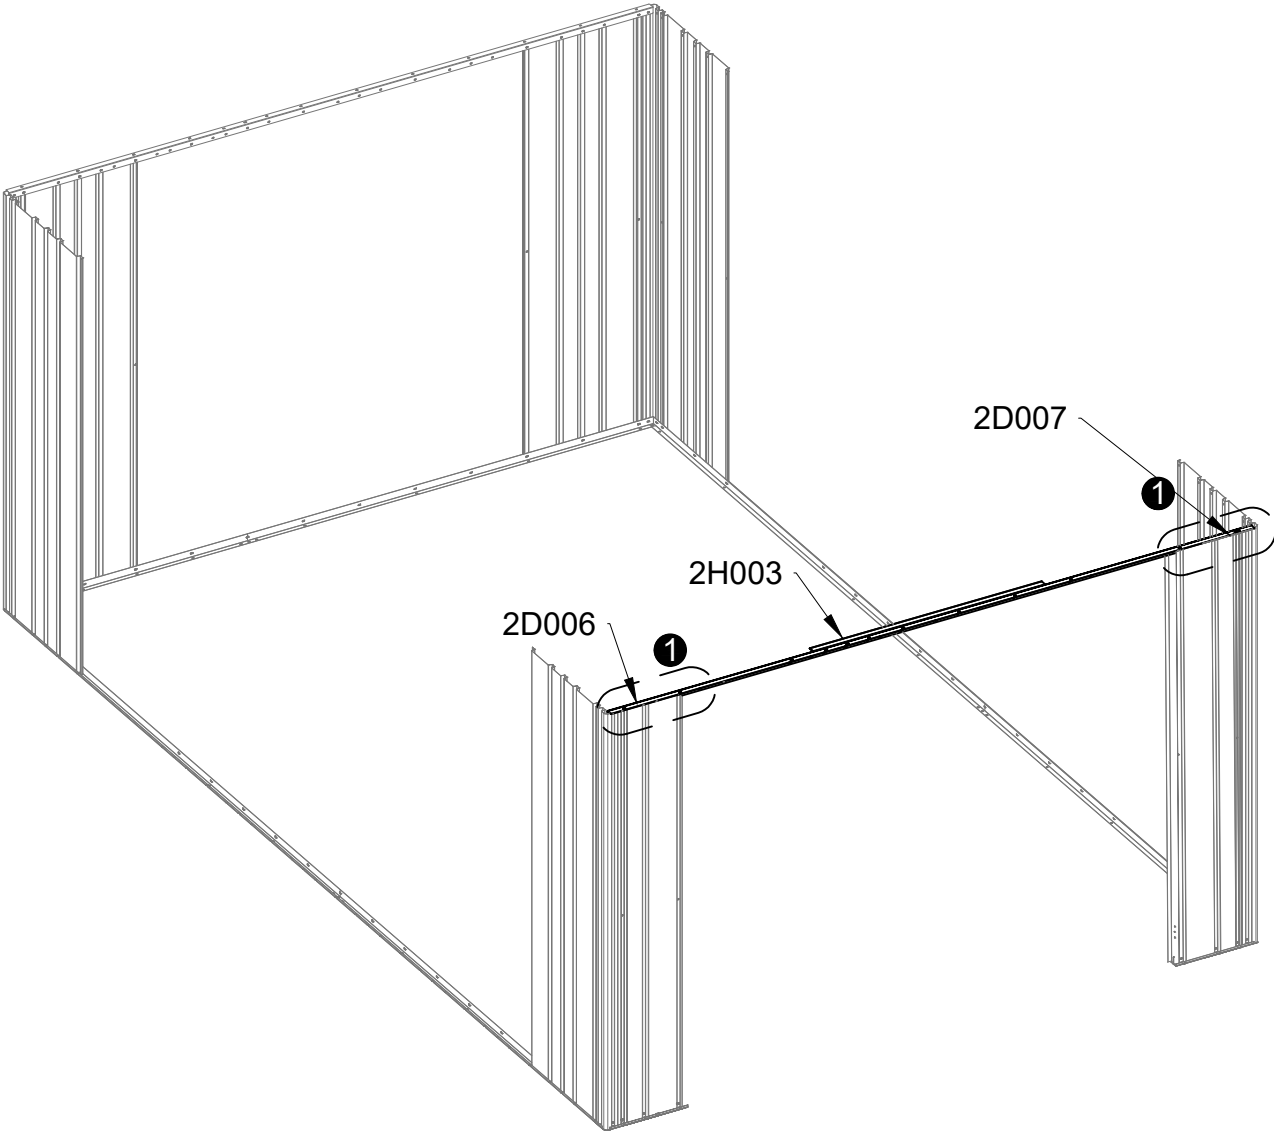





PART	NO	QTY
	2L006	2
	2L007	2
	2L012	2
	2L013	2
	S74	24
	M4X8	
	M25	24
	M4	

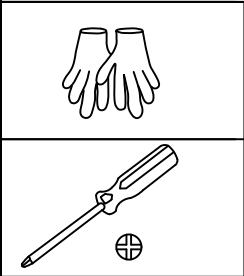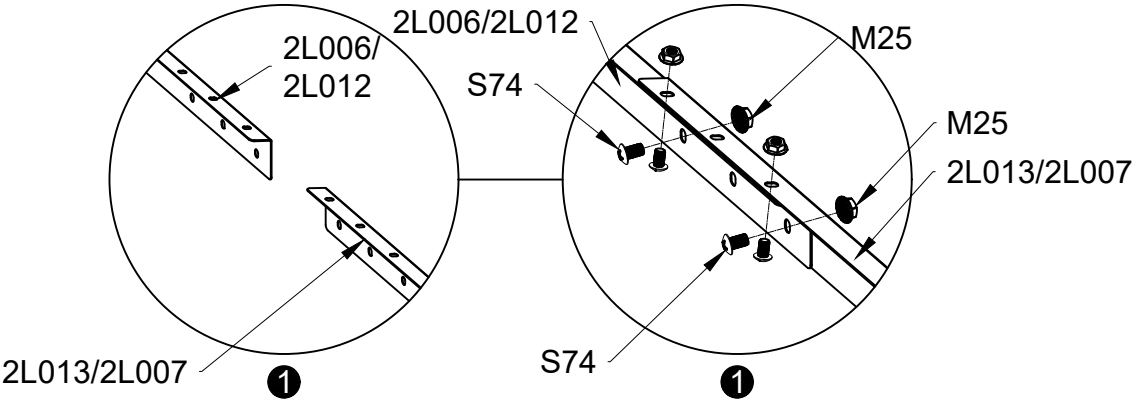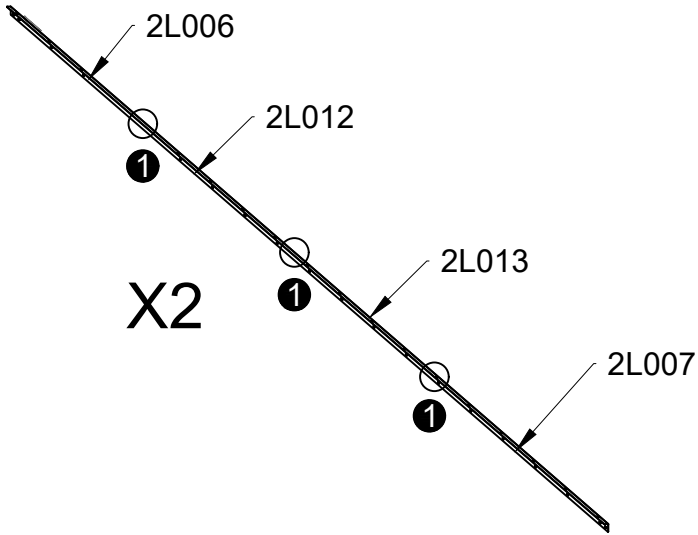




PART	NO	QTY
	S74	12
	M4X8	
	M25	12
	M4	

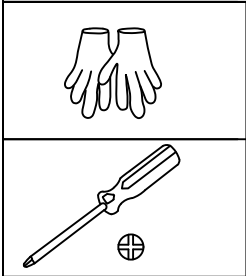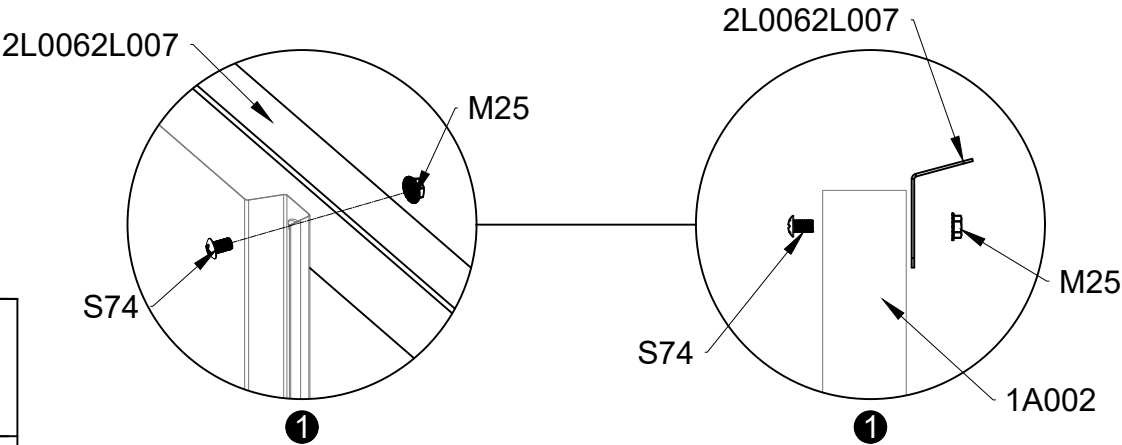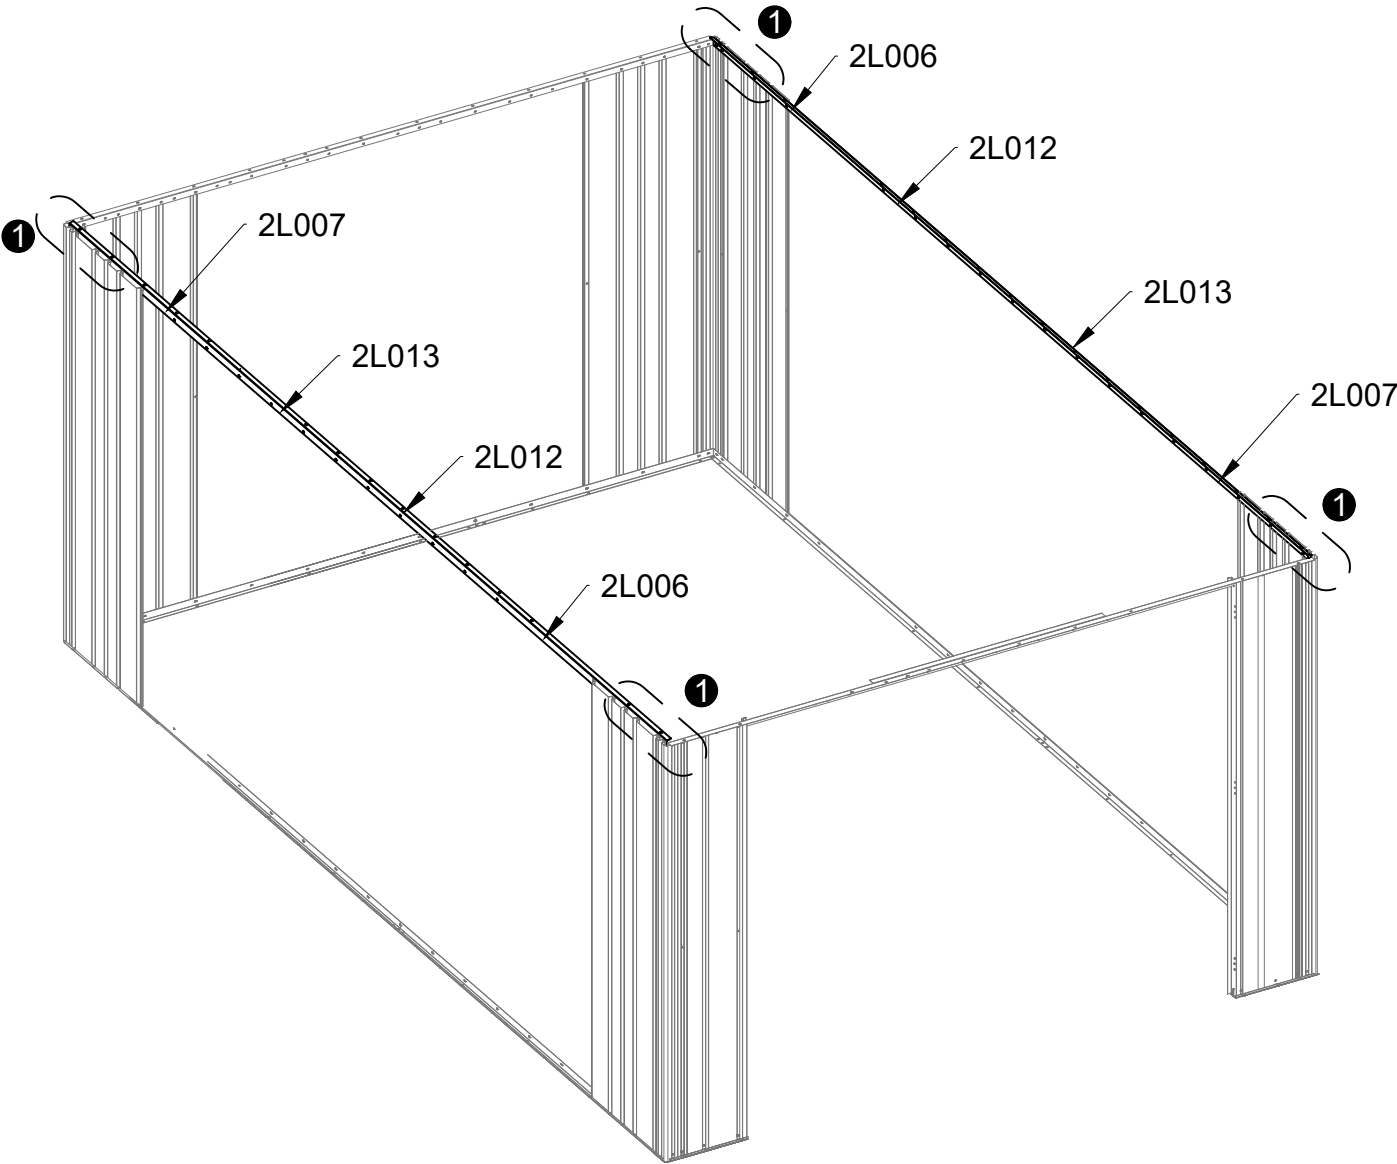




PART	NO	QTY
	1A002	1
	1D002	1
	S74	4
	M4X8	
	M25	4
	M4	

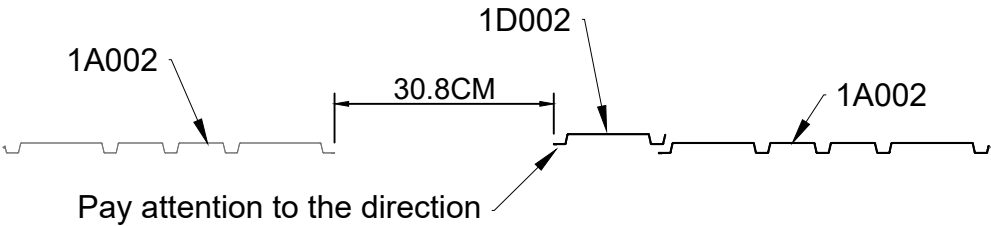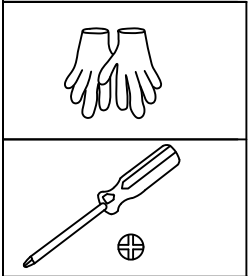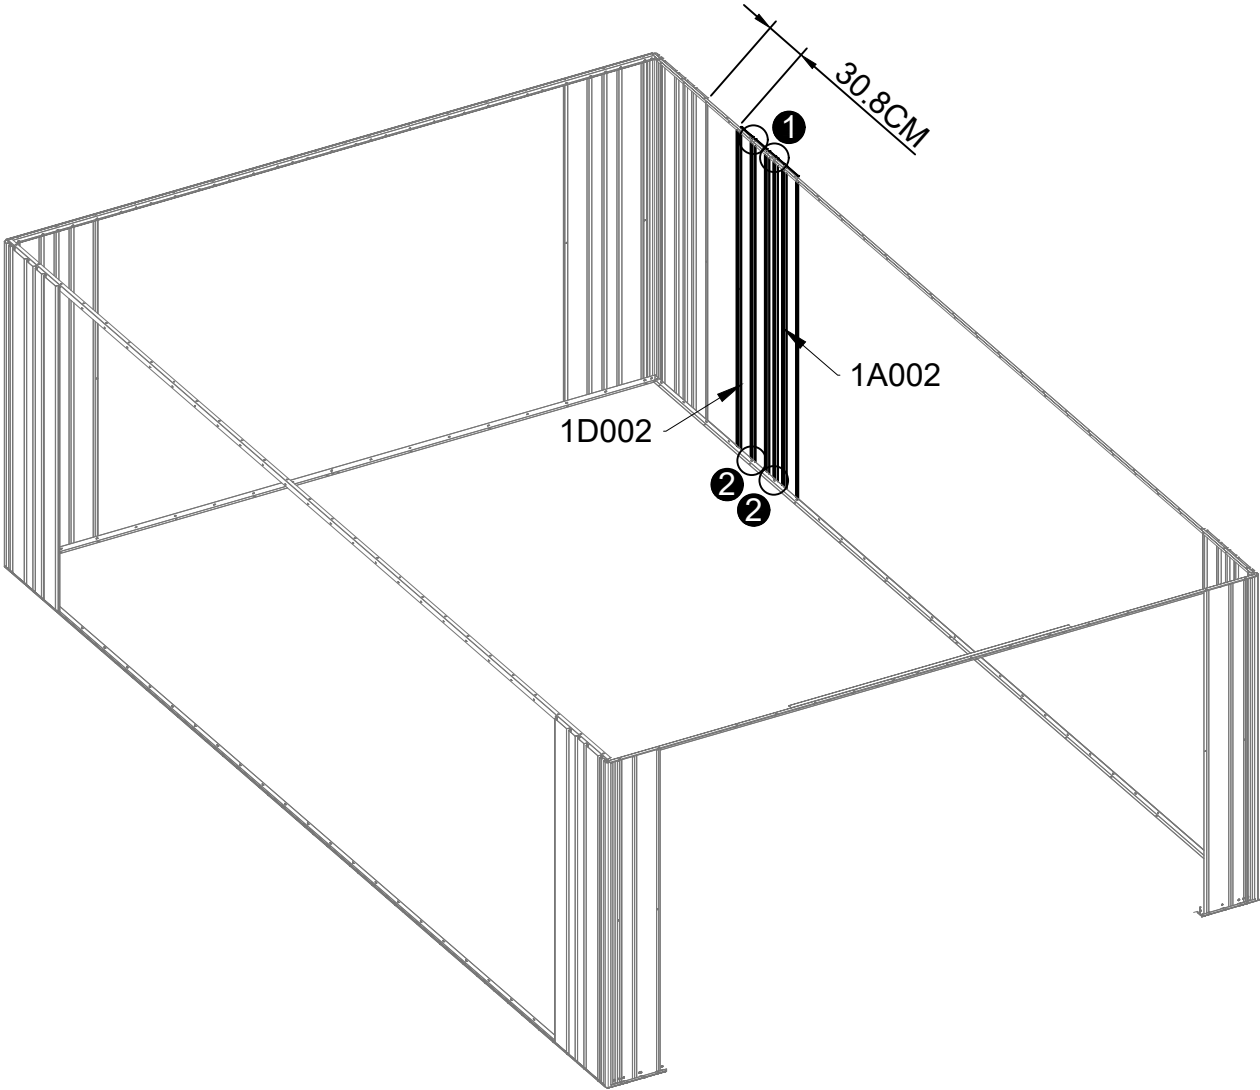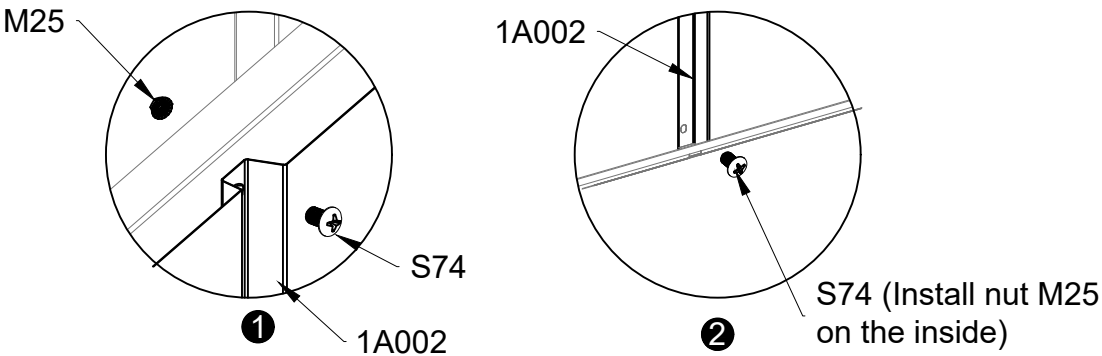




PART	NO	QTY
	2M008	1
	2M009	1
	S74 M4X8	4
	M25 M4	
	M4	4

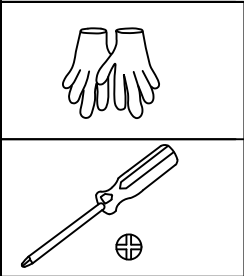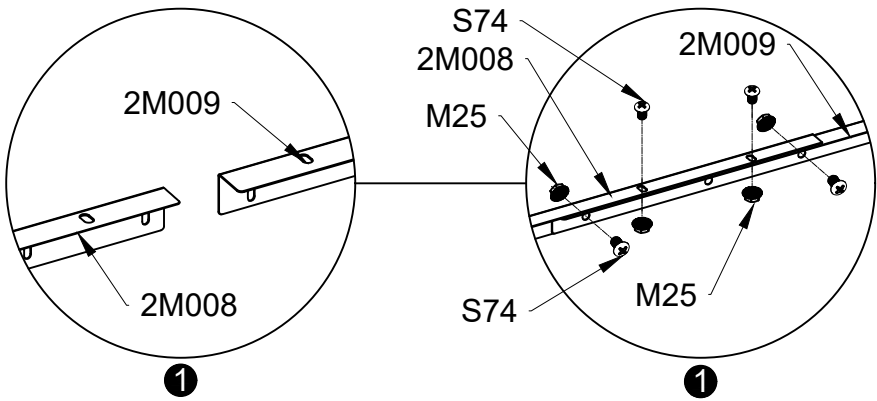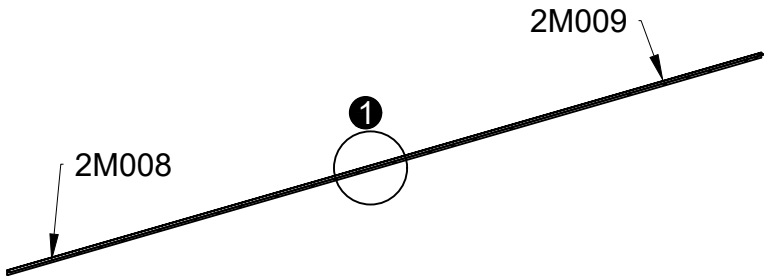




PART	NO	QTY
	S74	4
	M4X8	
	M25	4
	M4	

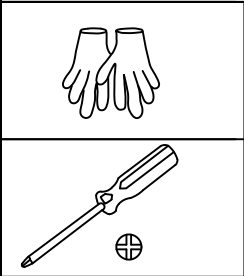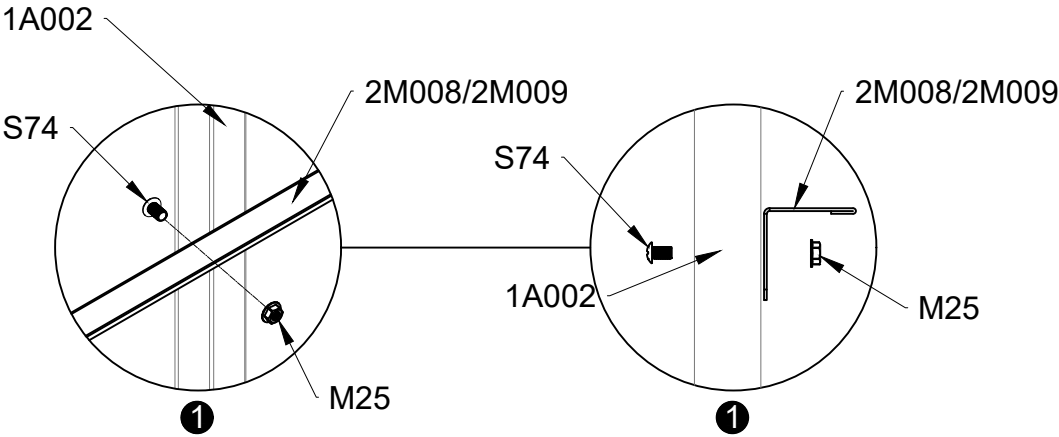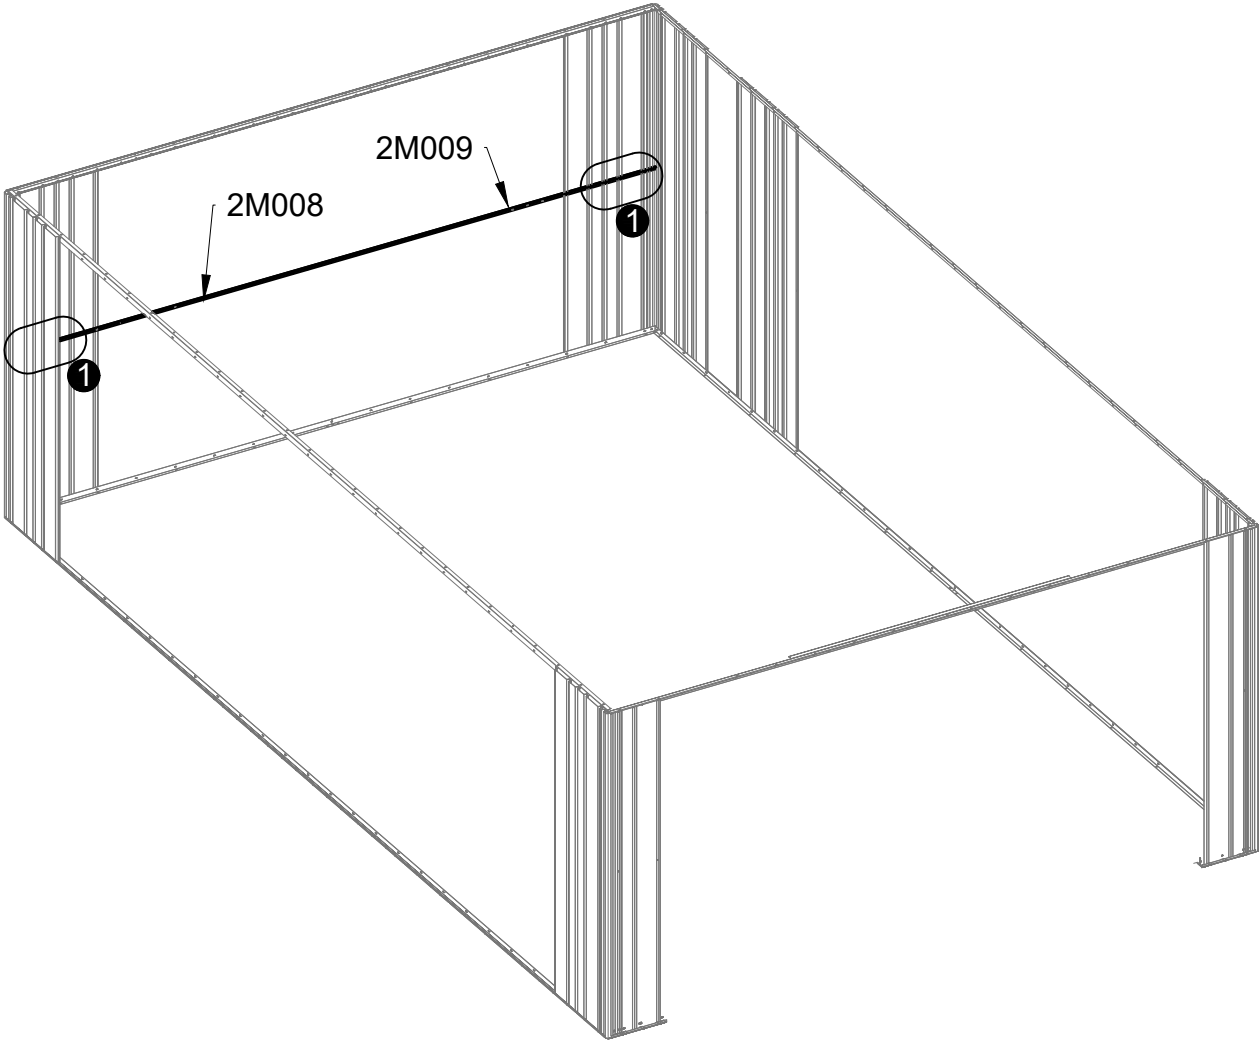


PART	NO	QTY
	2M009	2
	2M010	1
	2M014	4
	2M032	1
	S74	24
	M4X8	
	M25	24
	M4	

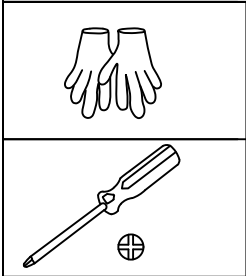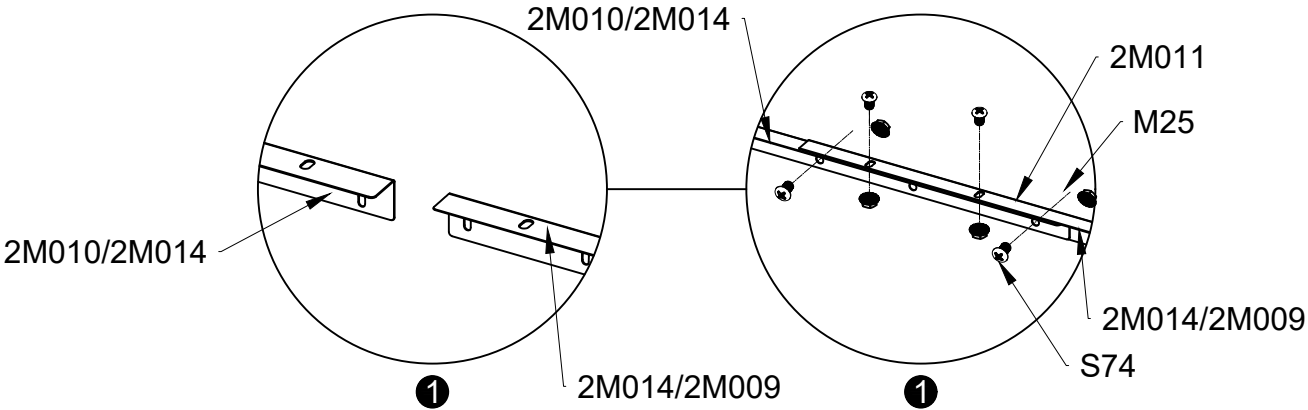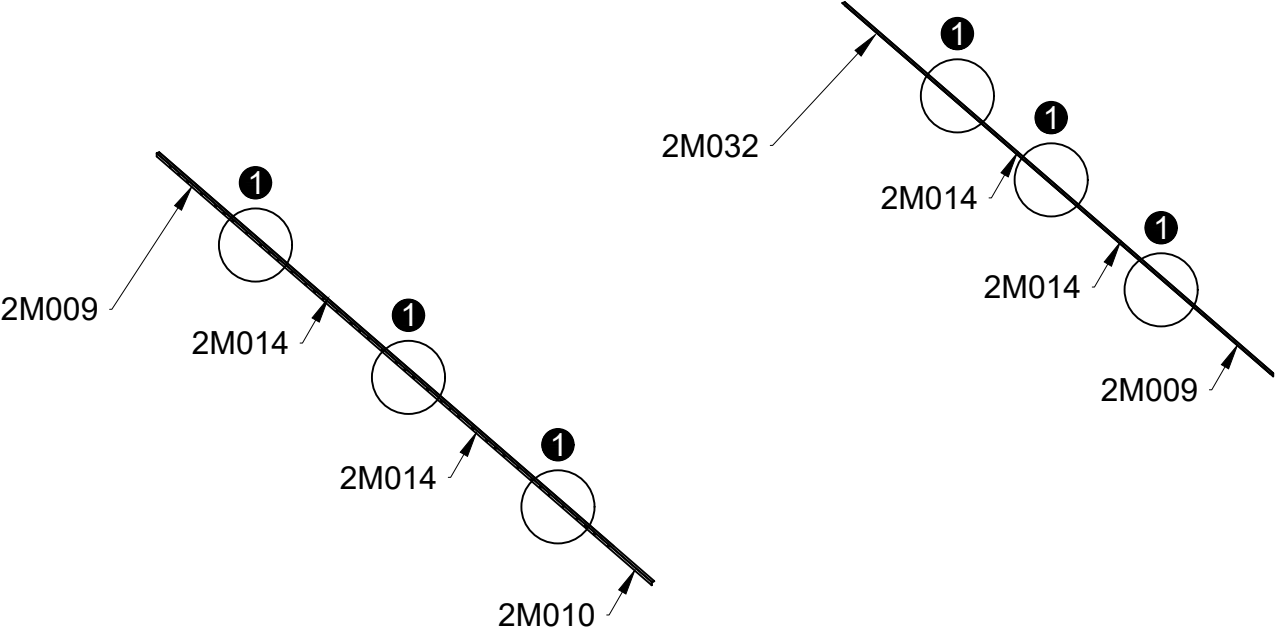


PART	NO	QTY
	S74	8
	M4X8	
	M25	8
	M4	

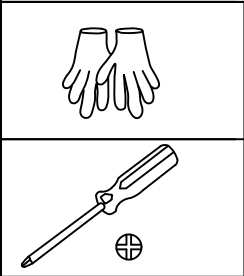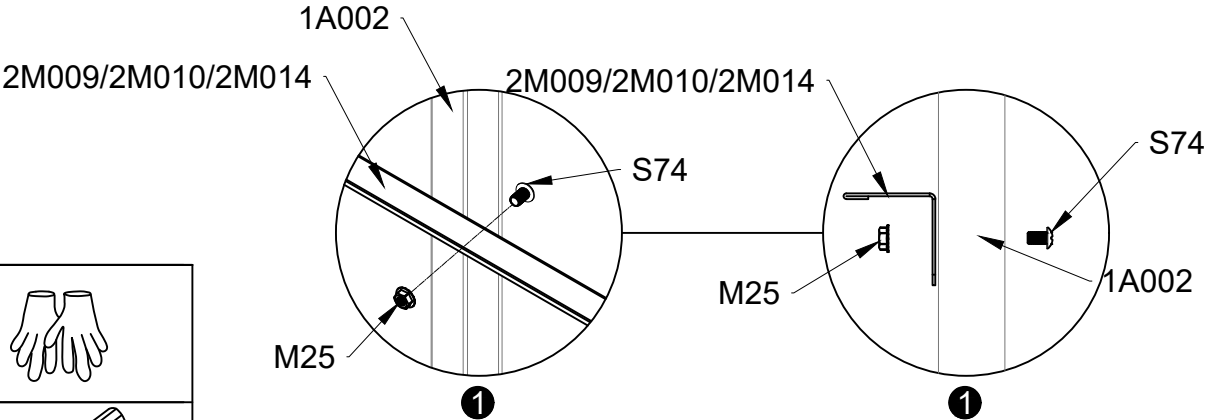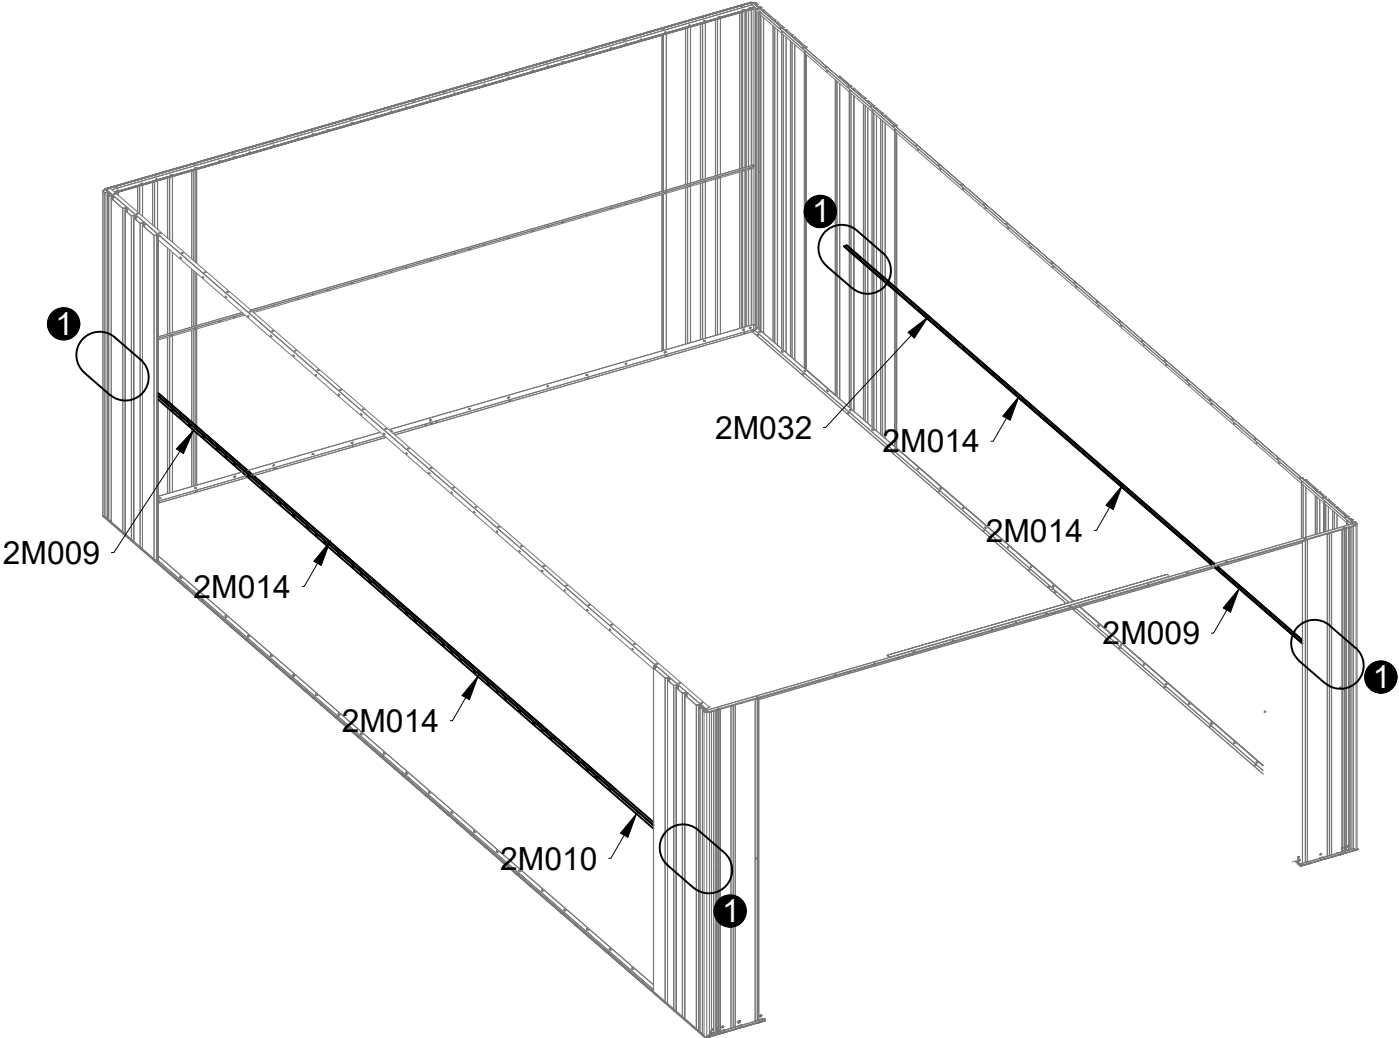


PART	NO	QTY
	2M016	1
	2M017	1
	S74 M4X8	6
	M25 M4	6

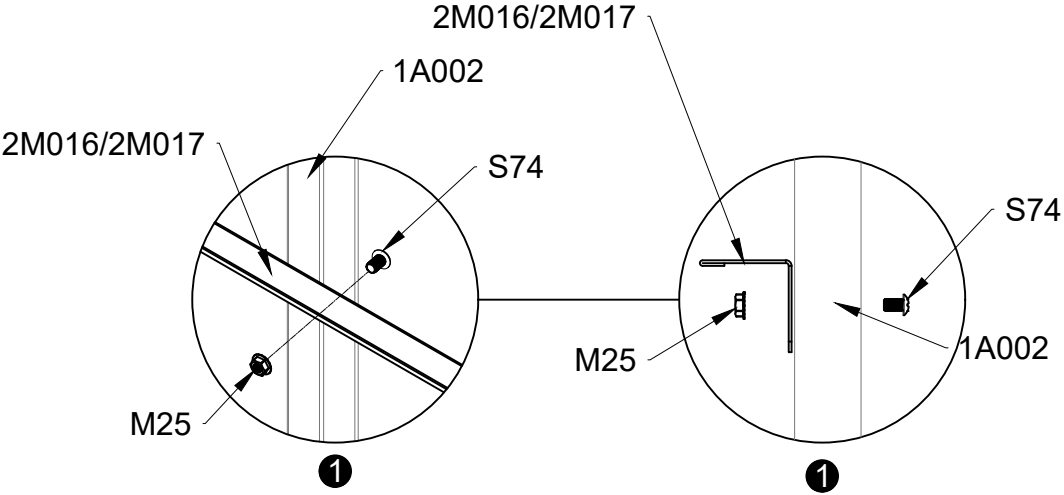


Please remove M25 and S74 before installing 2M016 and 2M017.

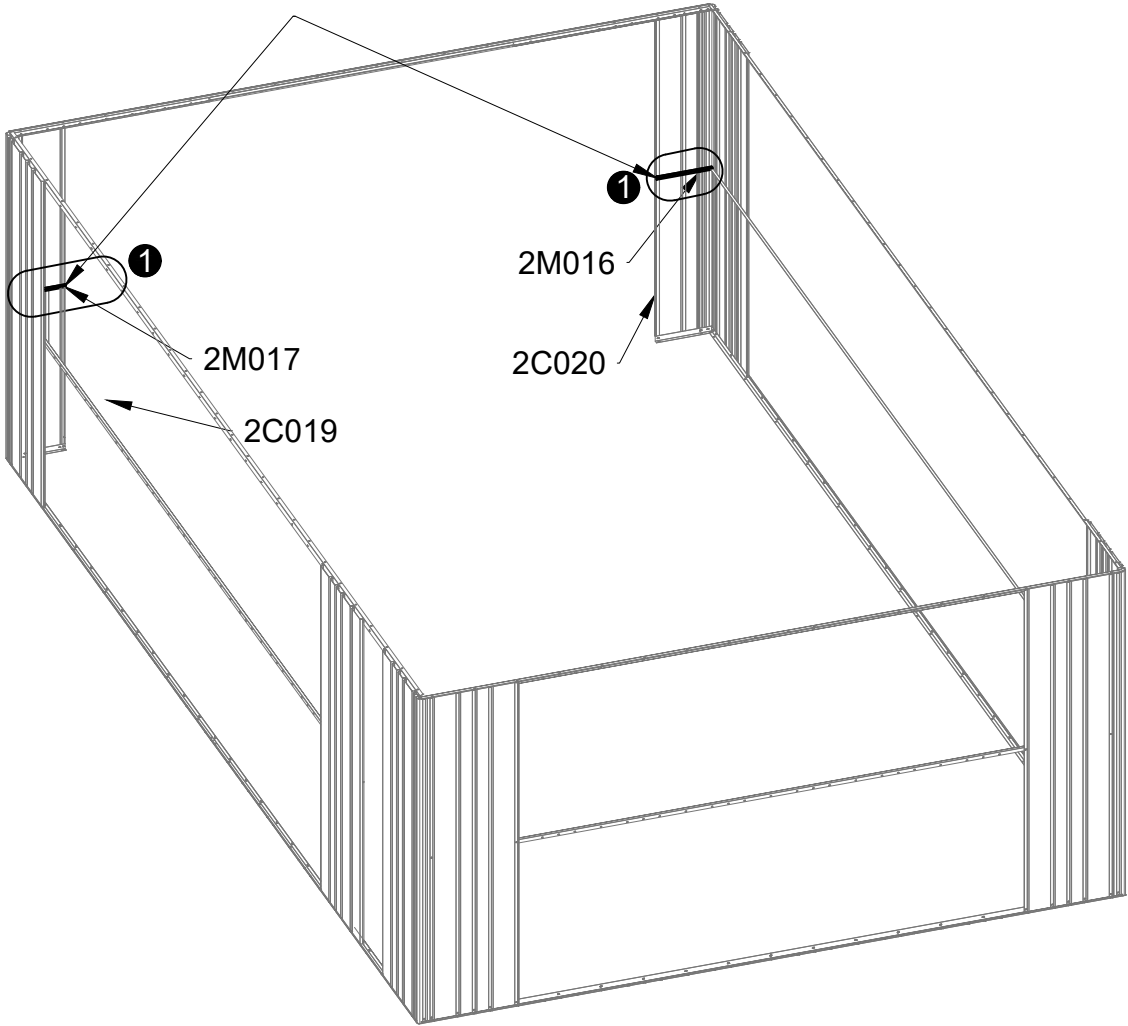


To facilitate installation, adjust the orientation of the view.




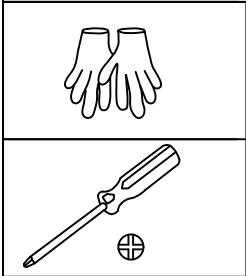


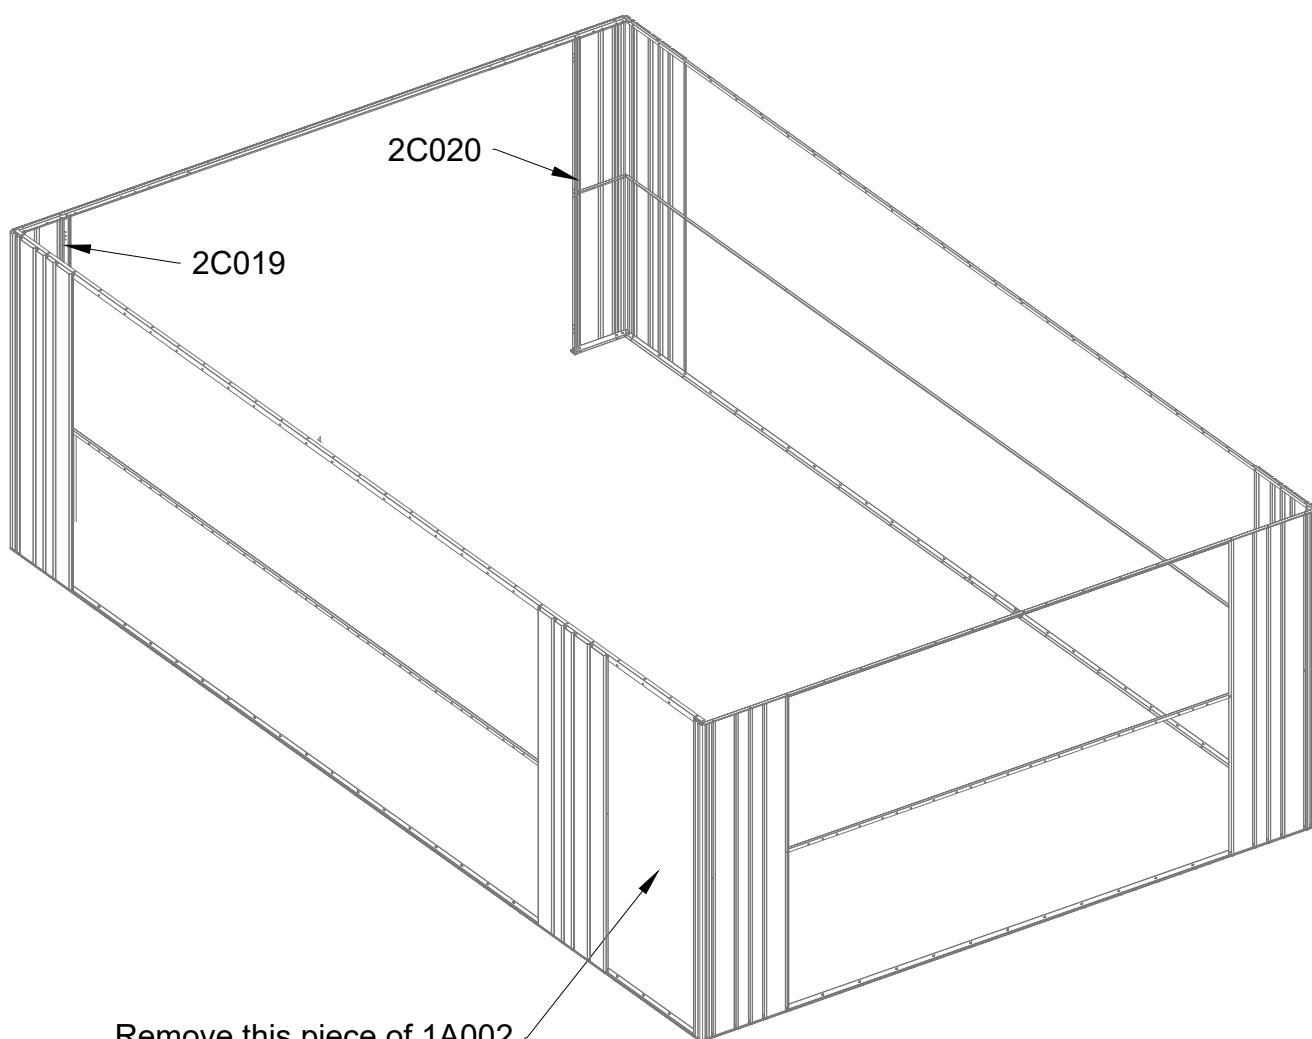






To facilitate installation, adjust the orientation of the view.

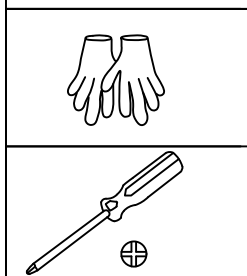

PART	NO	QTY
	2C011	1
	2S002	1
	S74	6
	M4X8	
	M25	6
	M4	

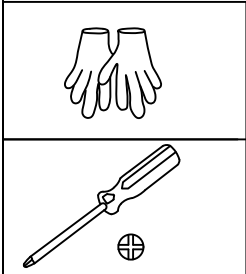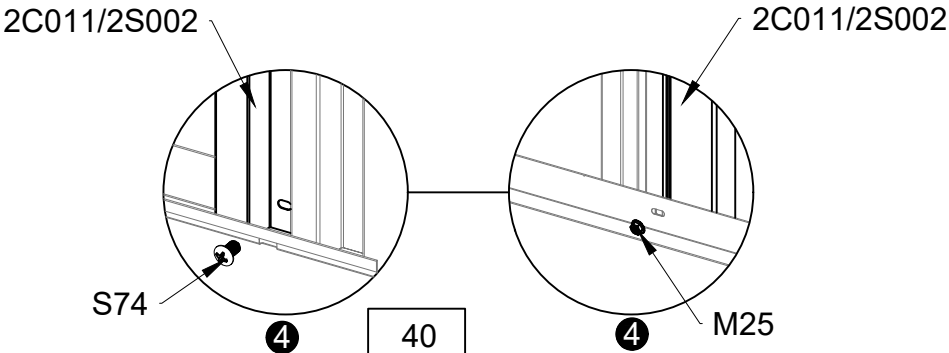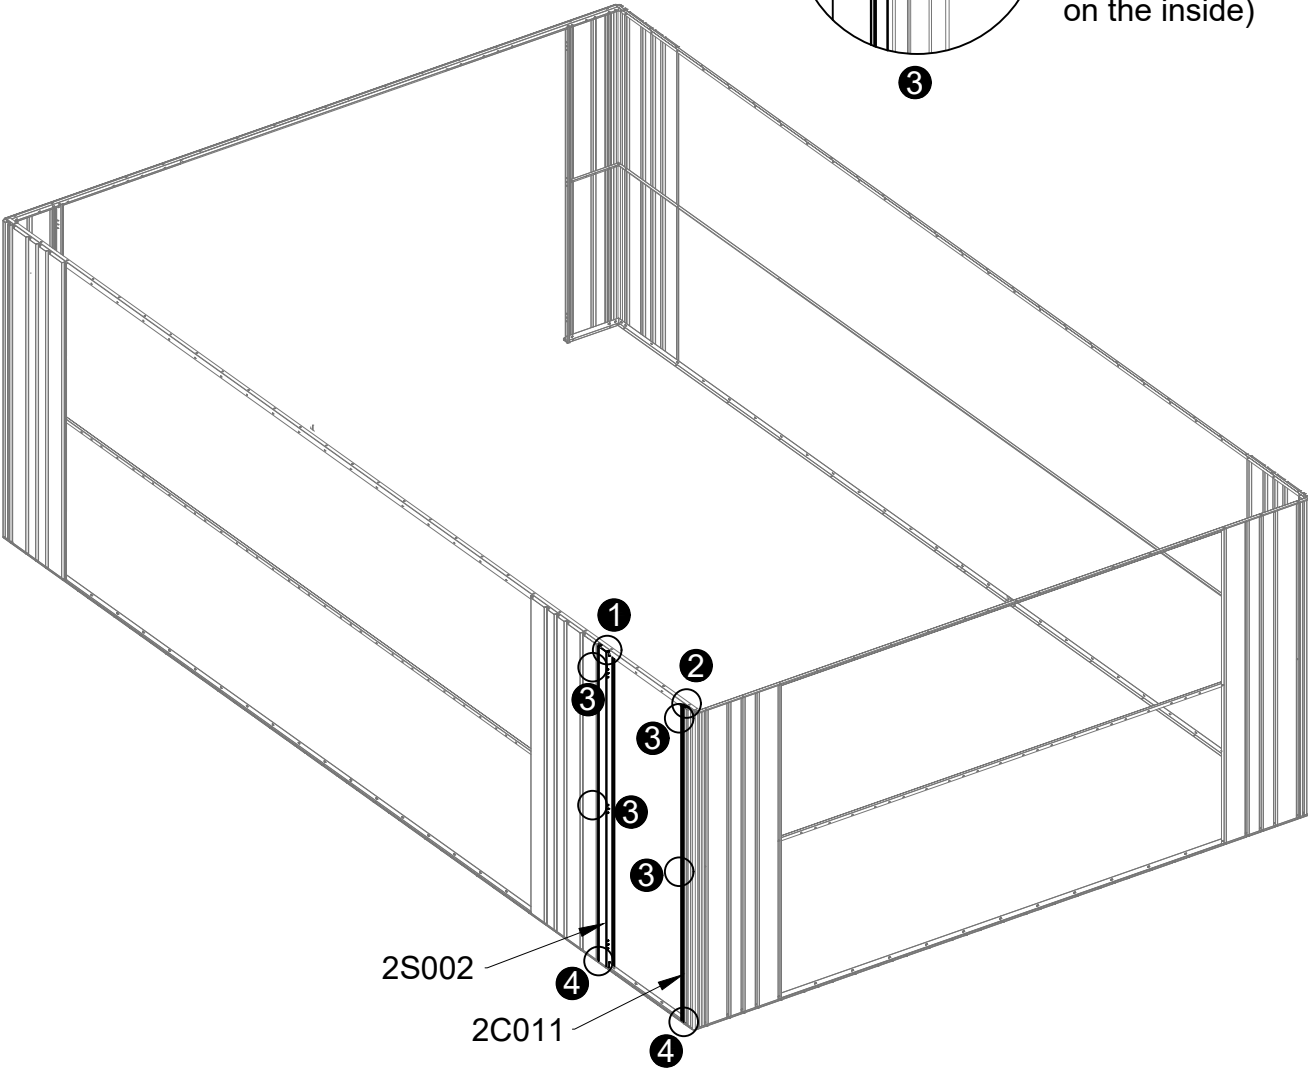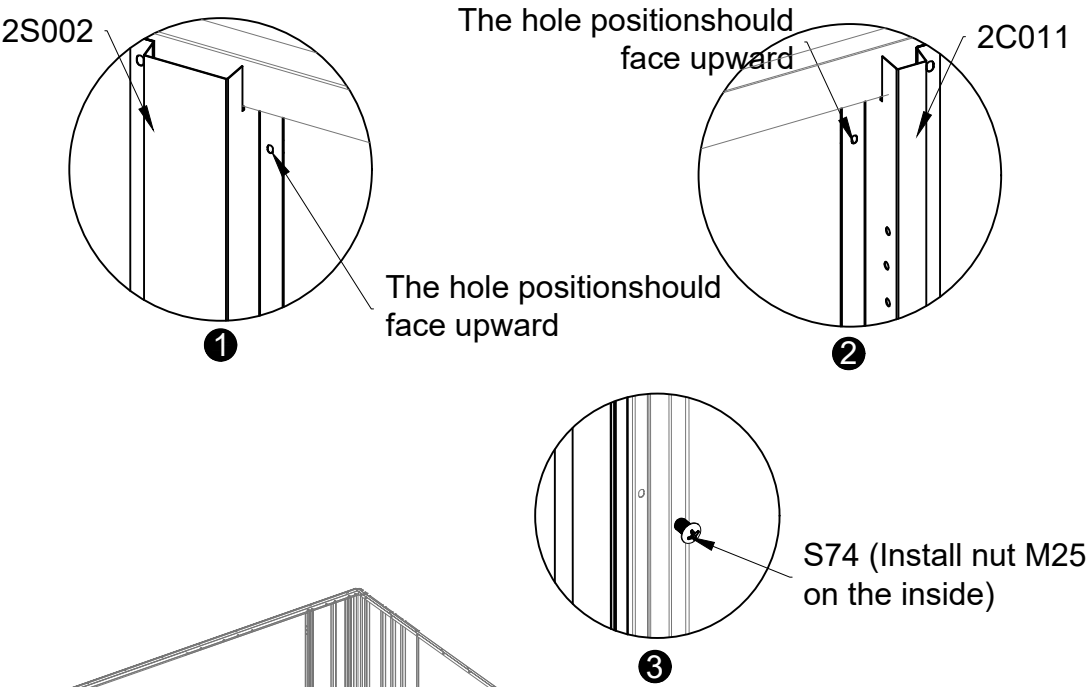


PART	NO	QTY
	6A003	1
	S74 M4X8	4
	M25 M4	4

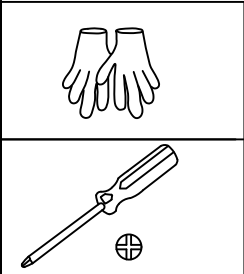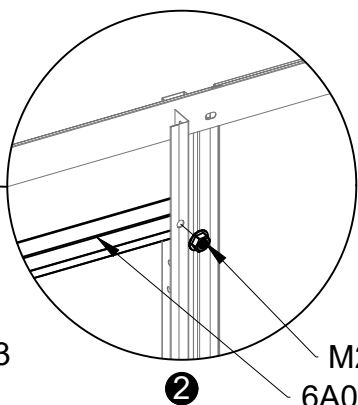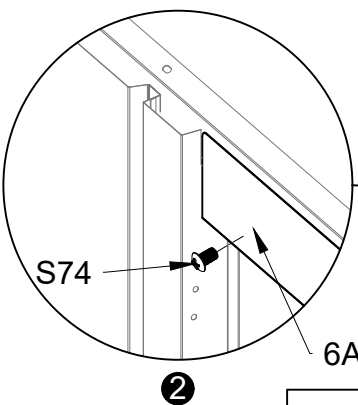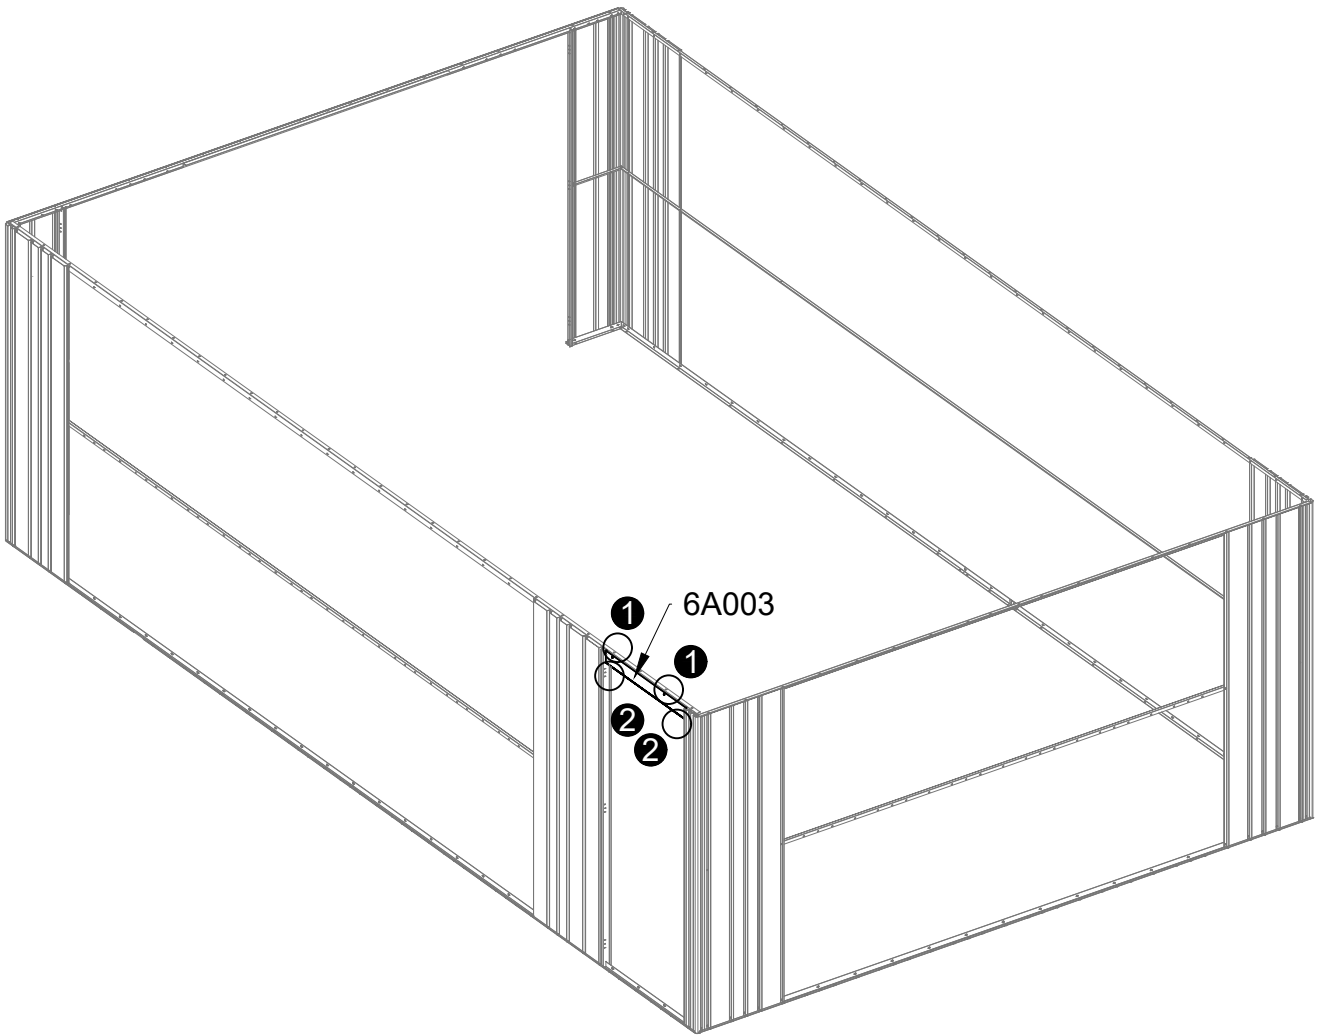
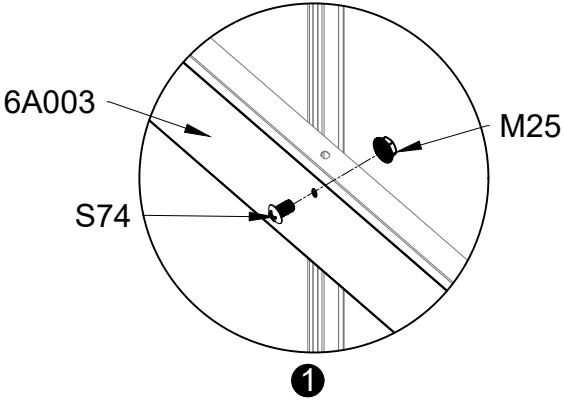


PART	NO	QTY
	5H002	4
	5J004	2
	D490	2
	5K004	4
	S74 M4X8	64
	M25 M4	64



S74 (Install nut M25
on the inside)

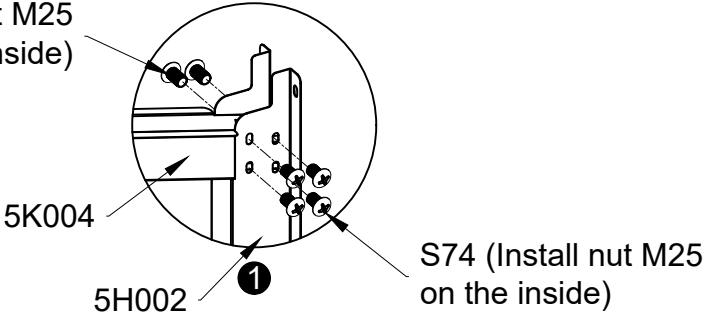





S74 (Install nut M25
on the inside)

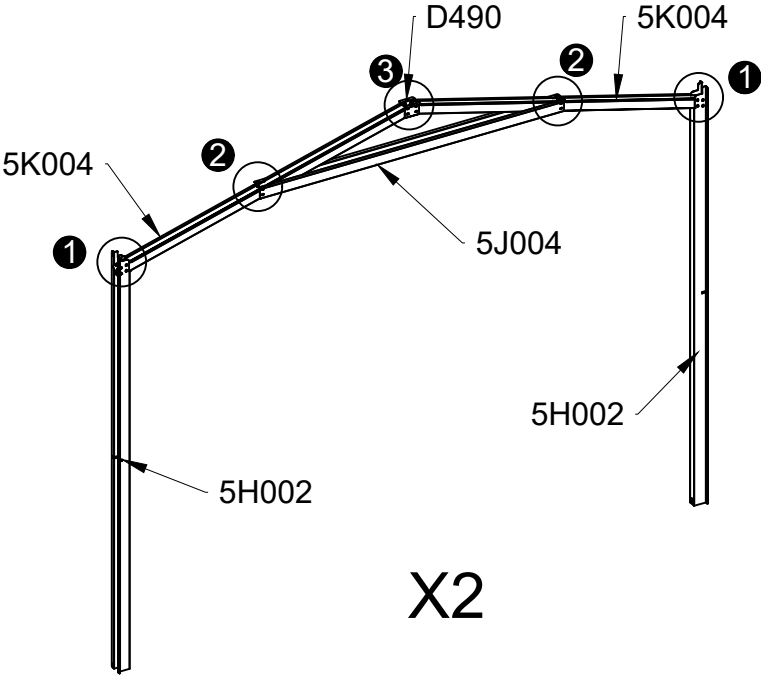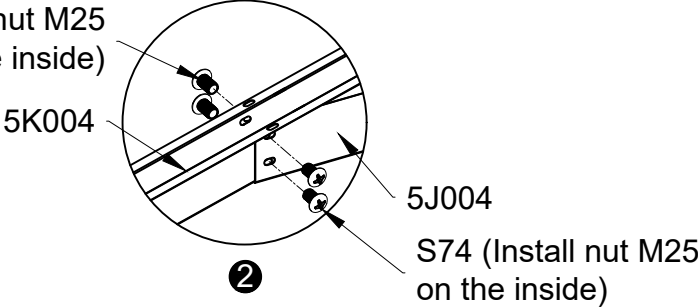



S74 (Install nut M25
on the inside)

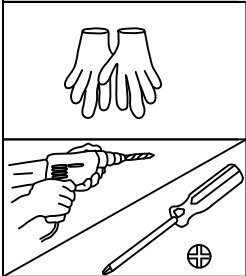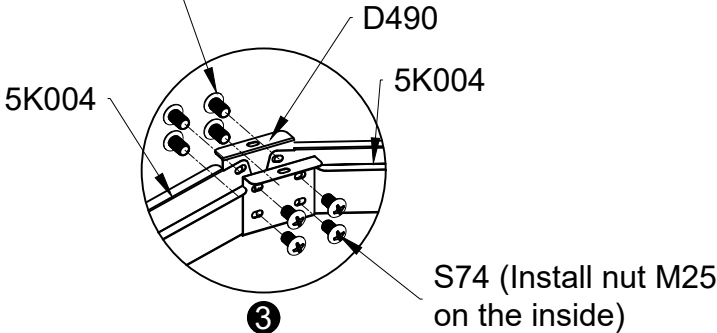

PART	NO	QTY
	S74	16
	M4X8	
	M25	16
	M4	

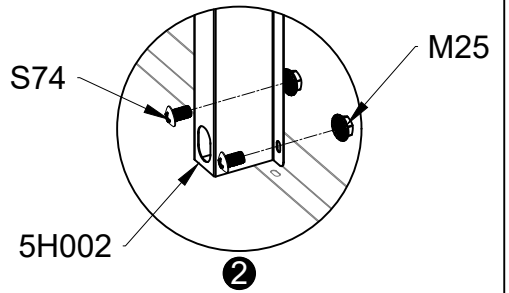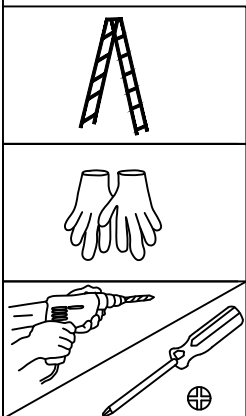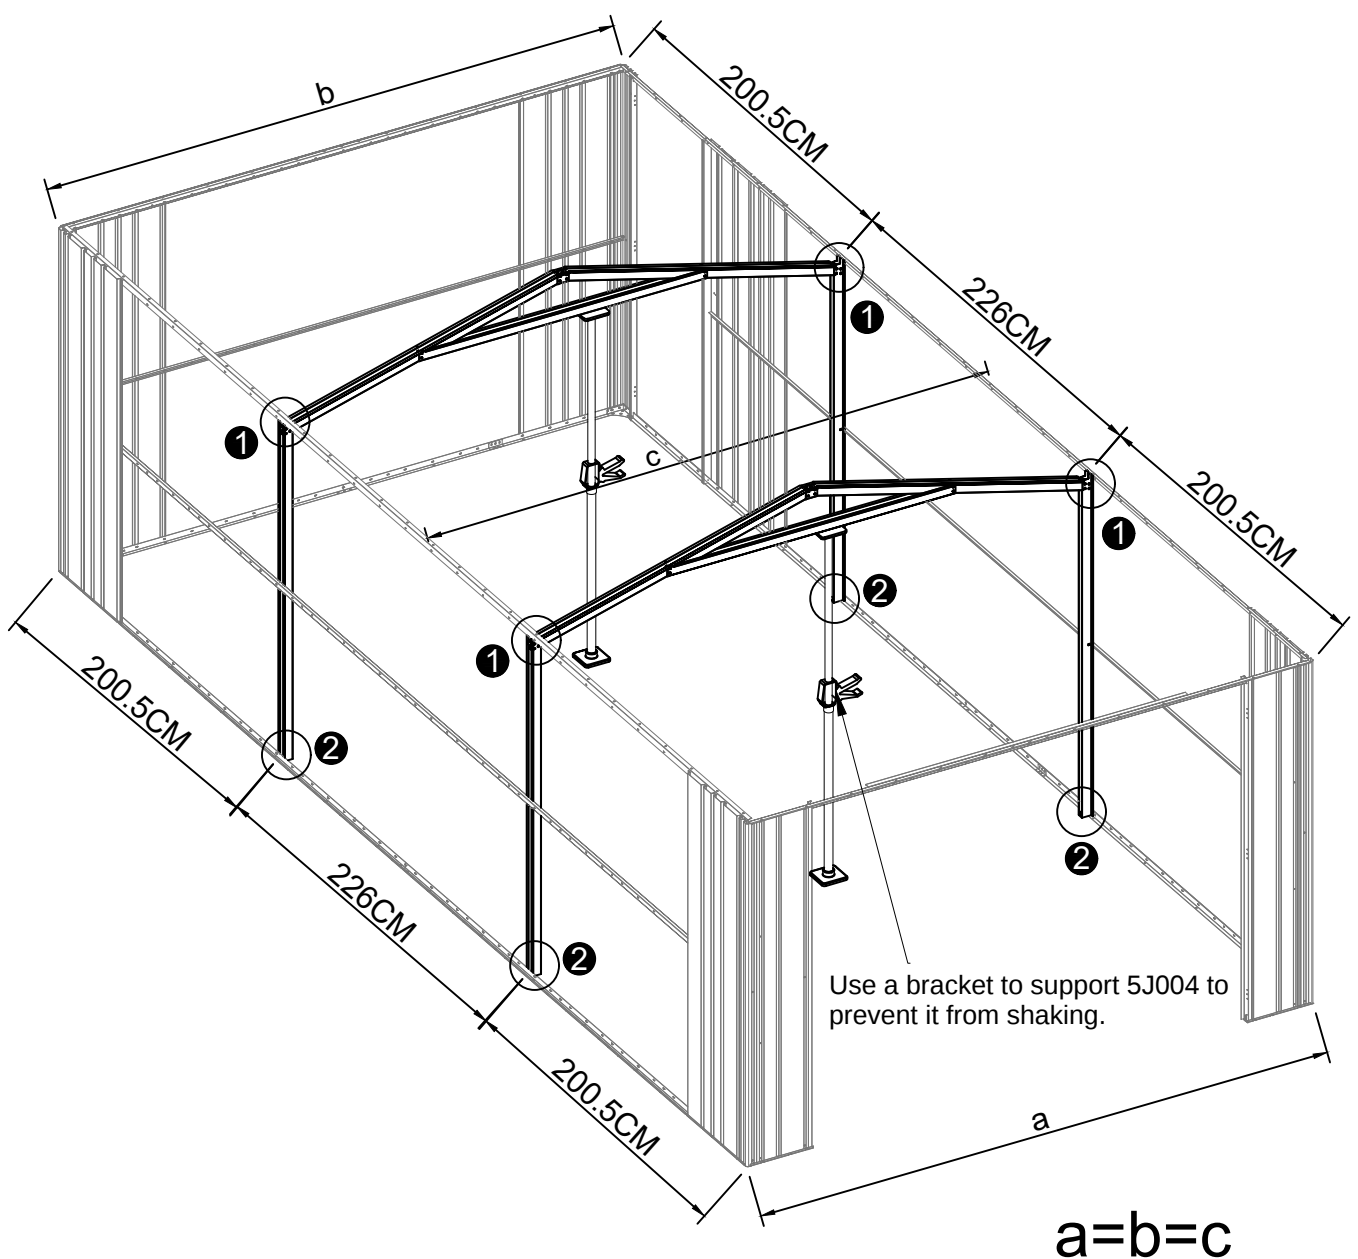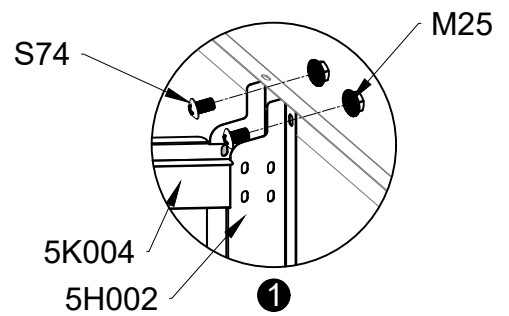


PART	NO	QTY
	1A002	22
	1B002	4
	S74 M4X8	157
	M25 M4	157

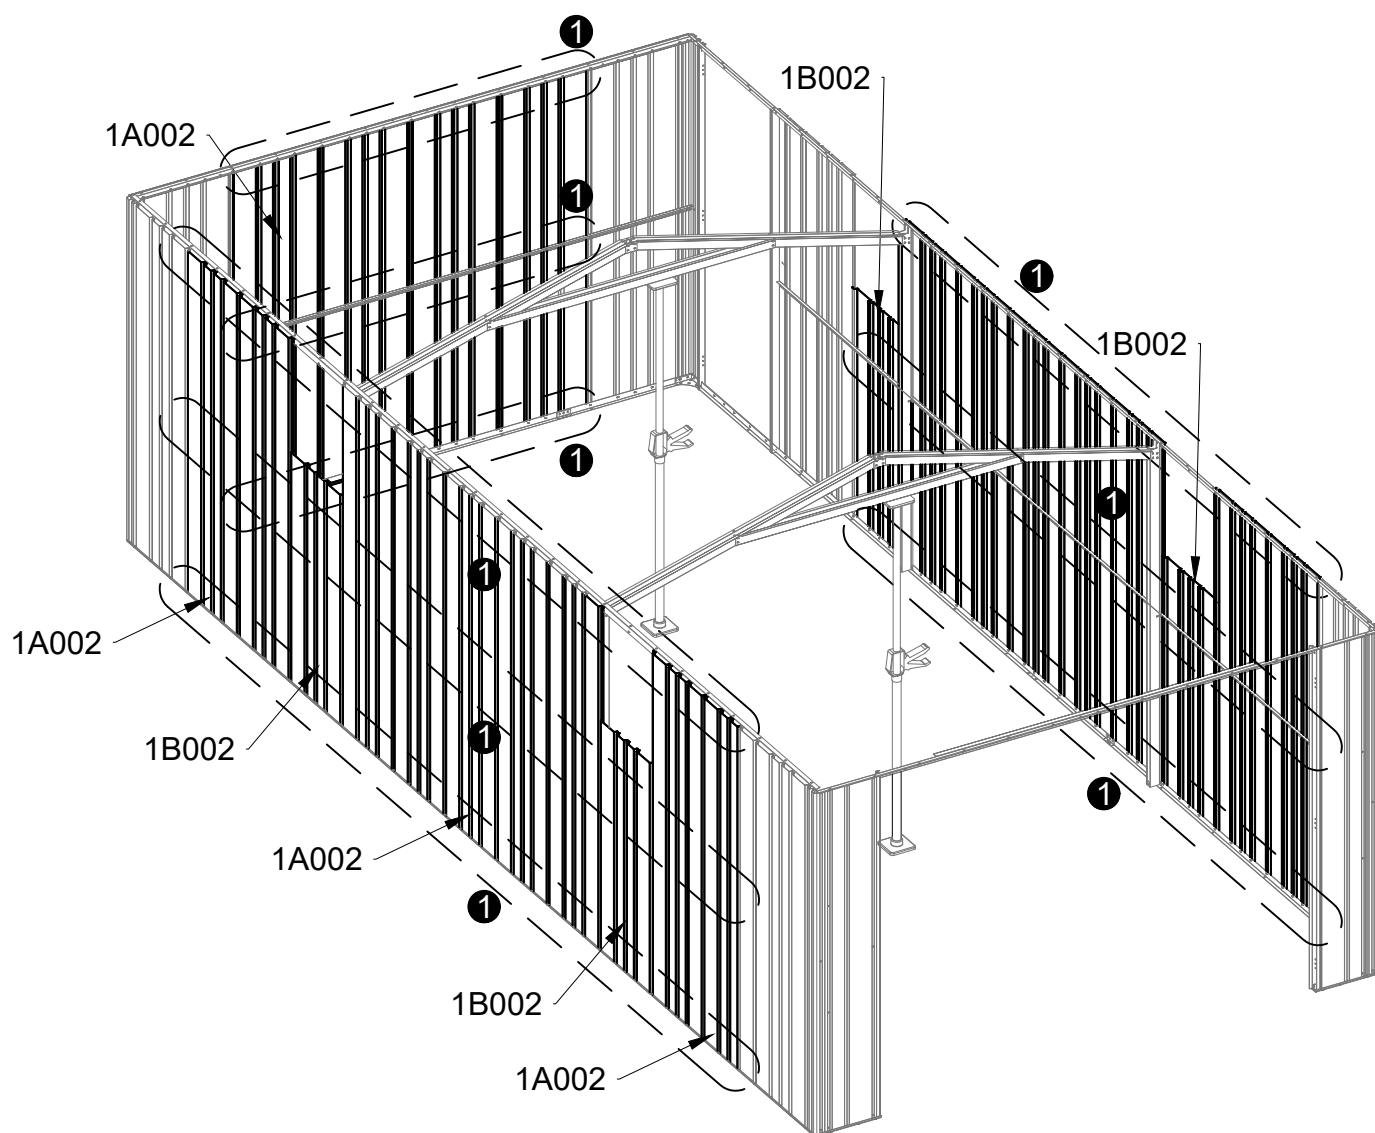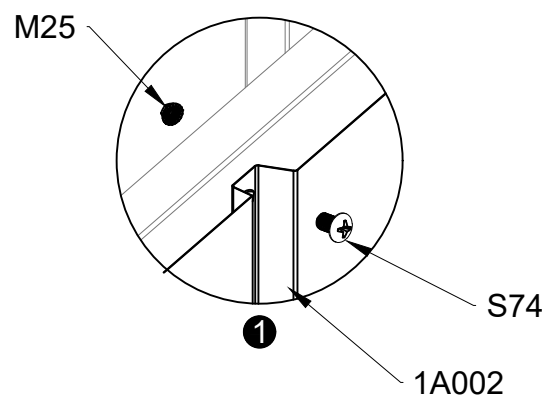


1B002 above is the installation of the window position can be adjusted according to the actual situation of the individual position





Do not install S74 at the top of 1A002 near the window side (1B002) for now.

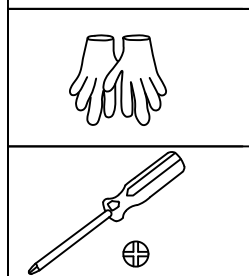





PART	NO	QTY
	D358	4
	D359	4
	Y1	4
	S74	60
	M4X8	
	M25	60
	M4	

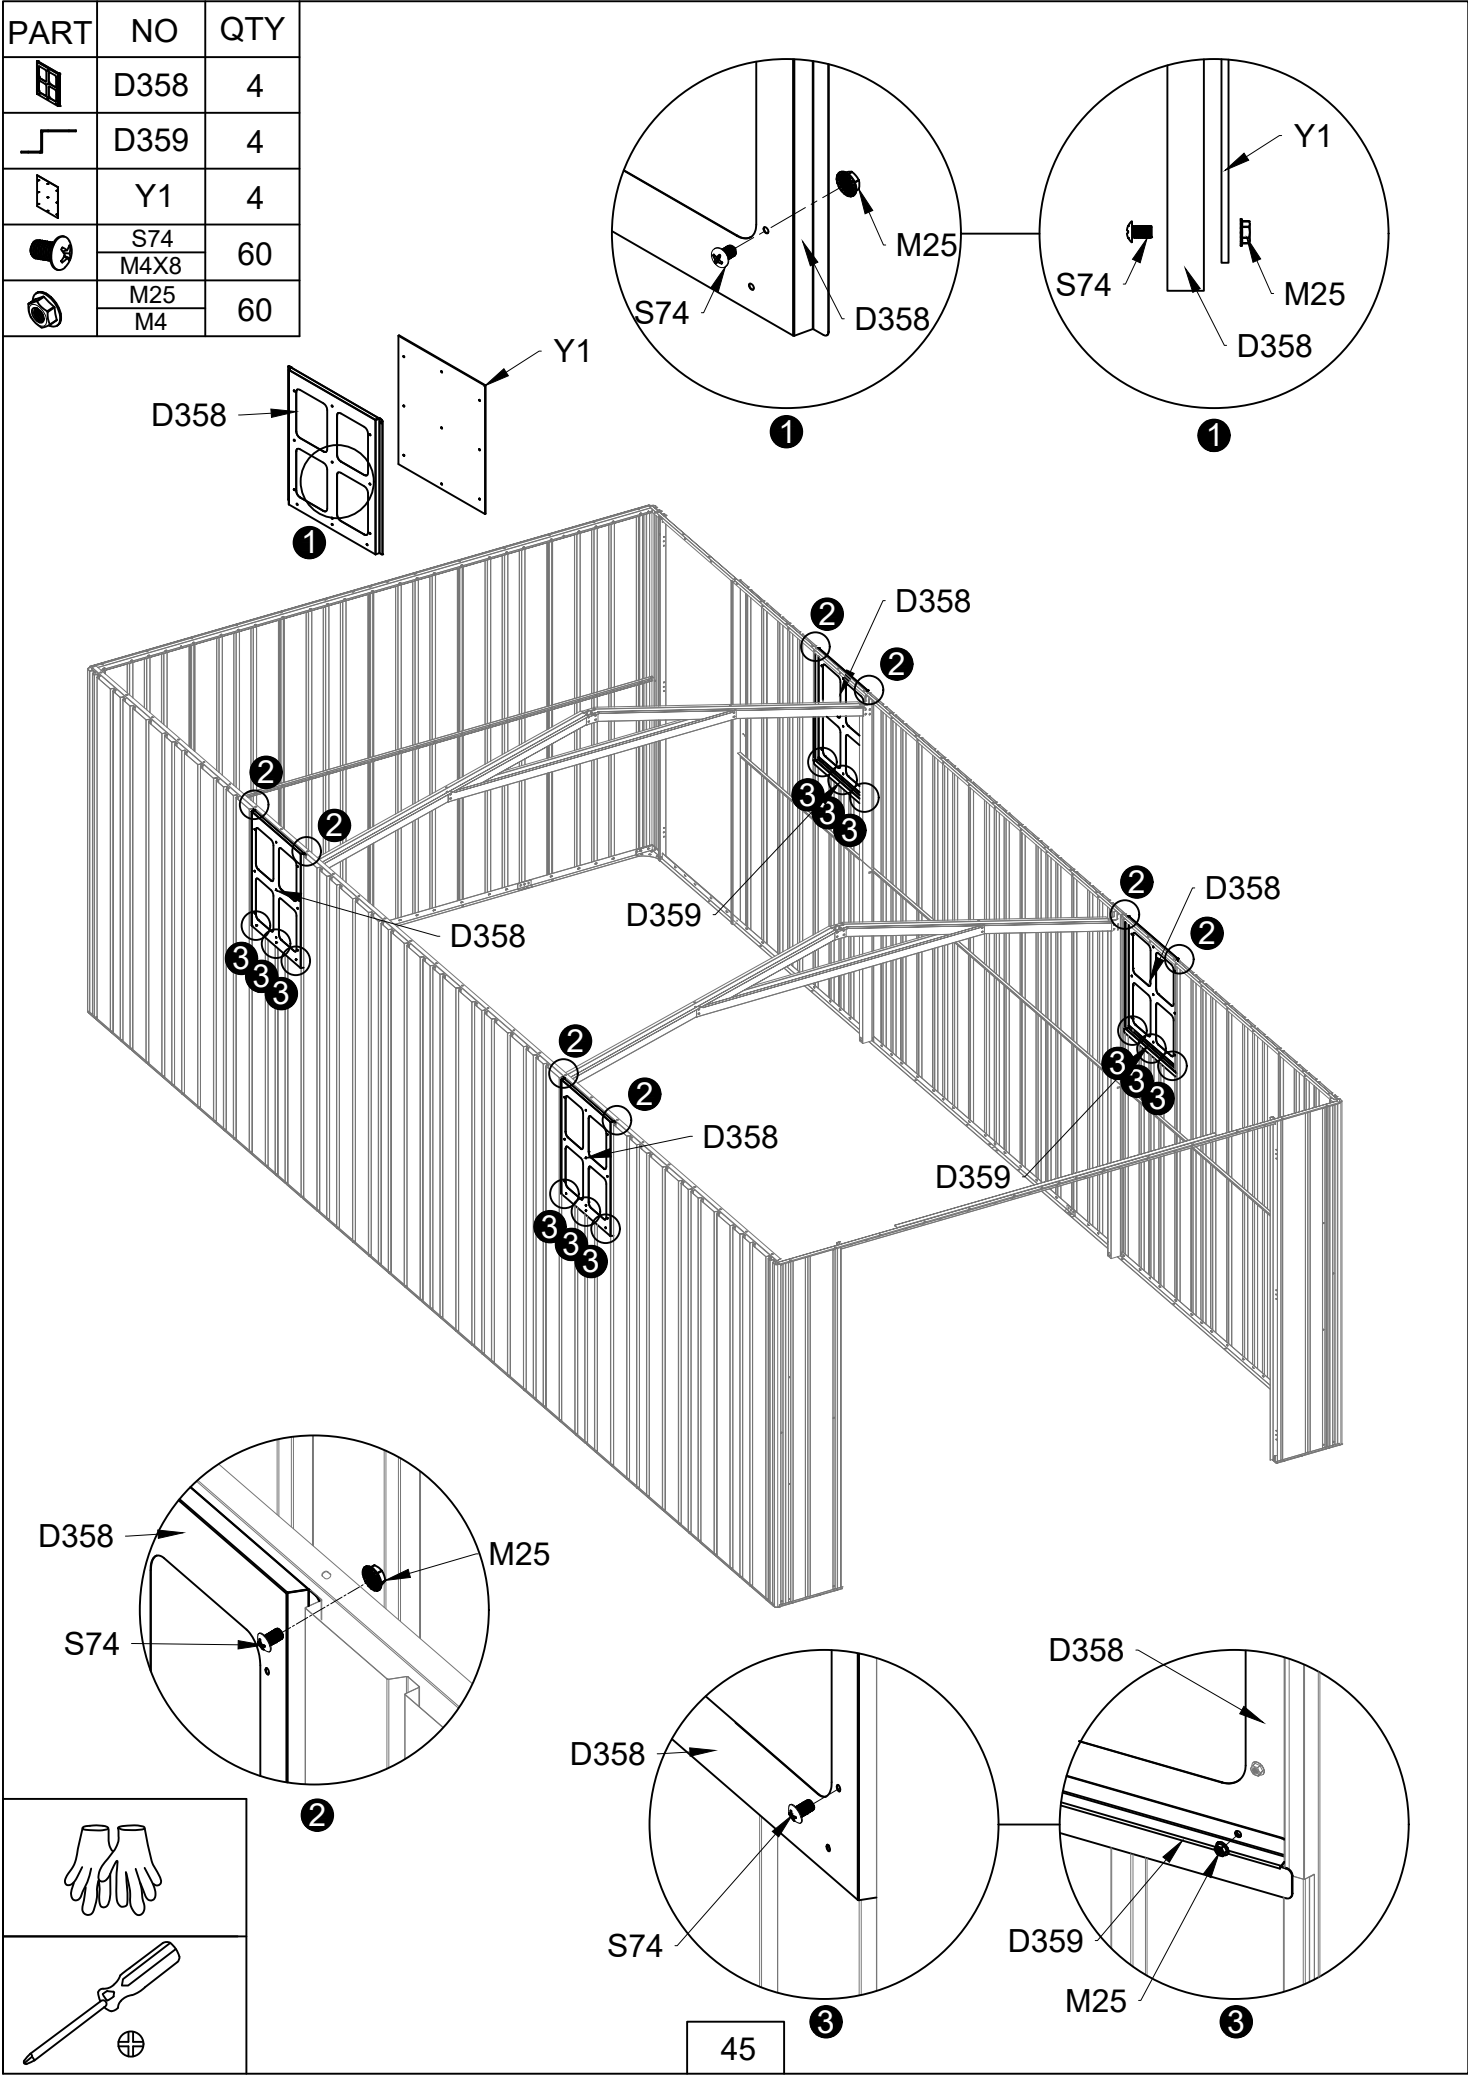




PART	NO	QTY
	3A026	2
	3A027	2
	D310	2
	D311	2
	J211	4
	S74	16
	M4X8	
	M25	
	M4	16

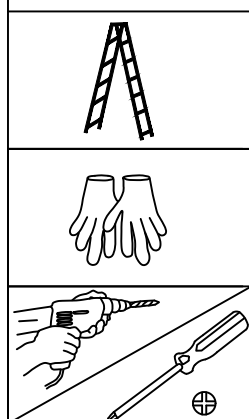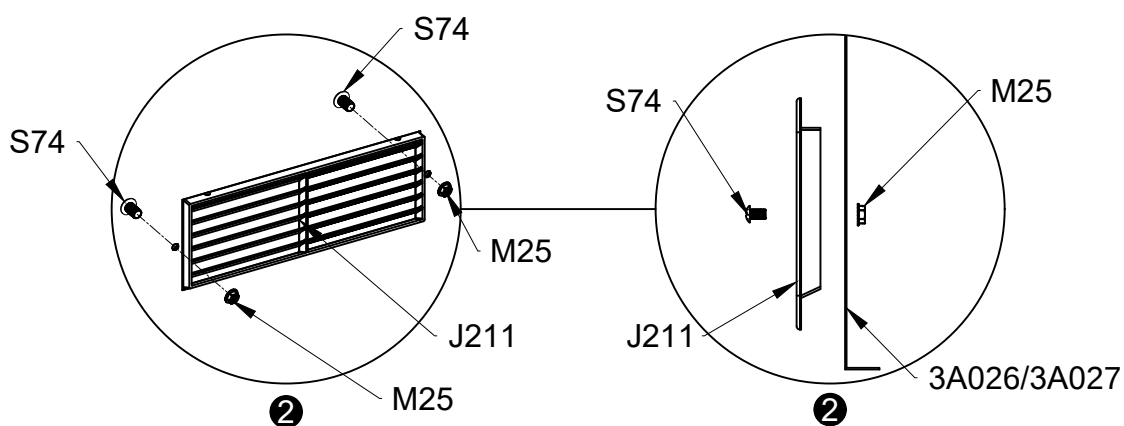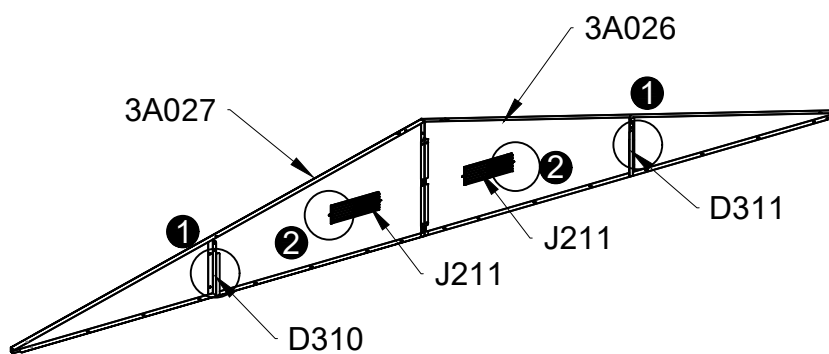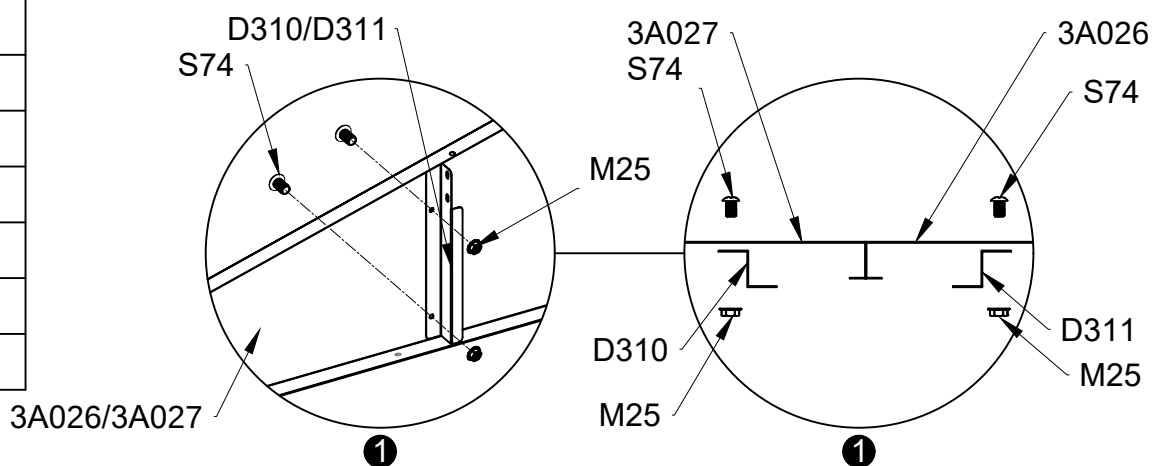





PART	NO	QTY
	S74	42
	M4X8	
	M25	42
	M4	

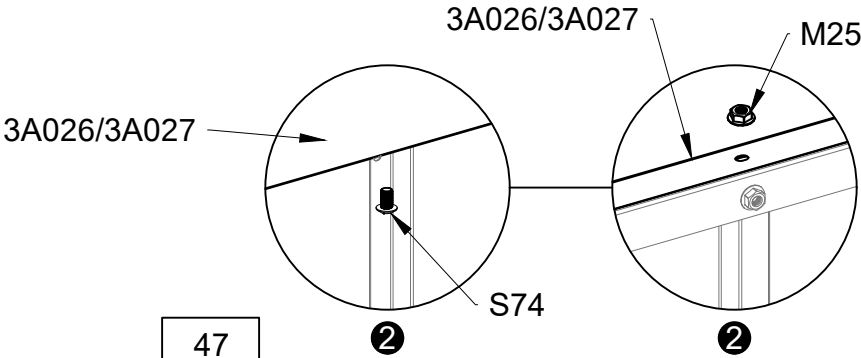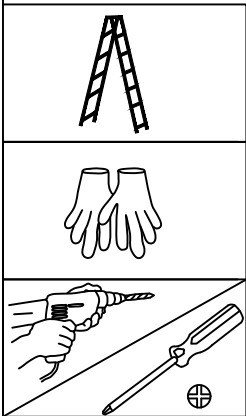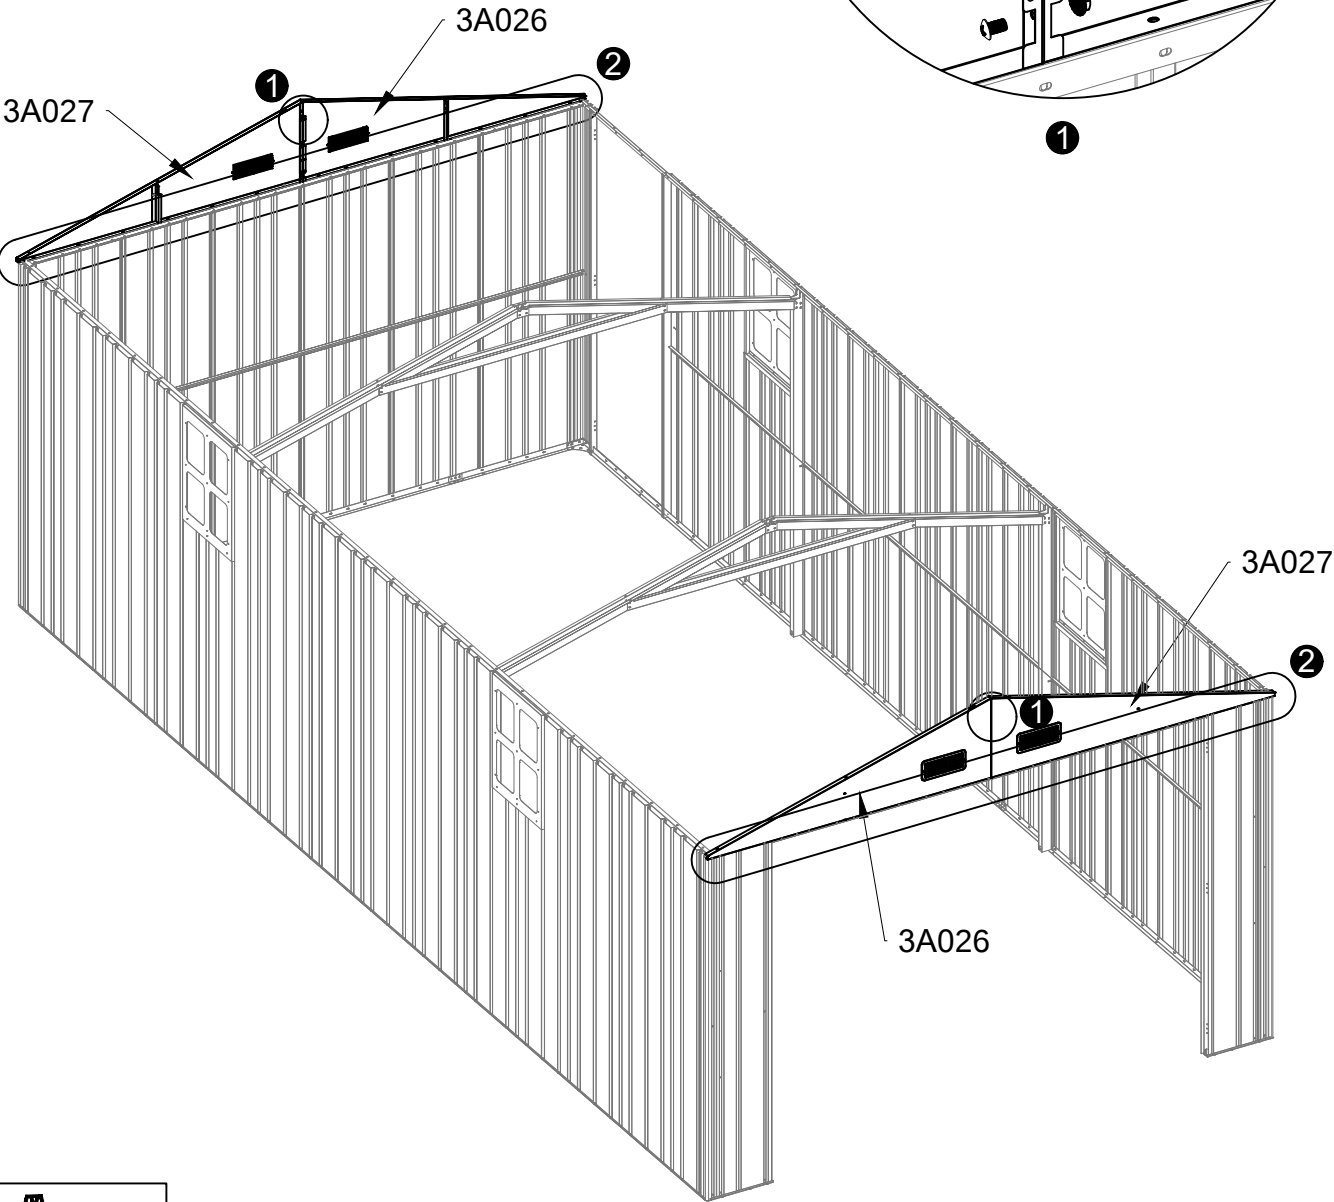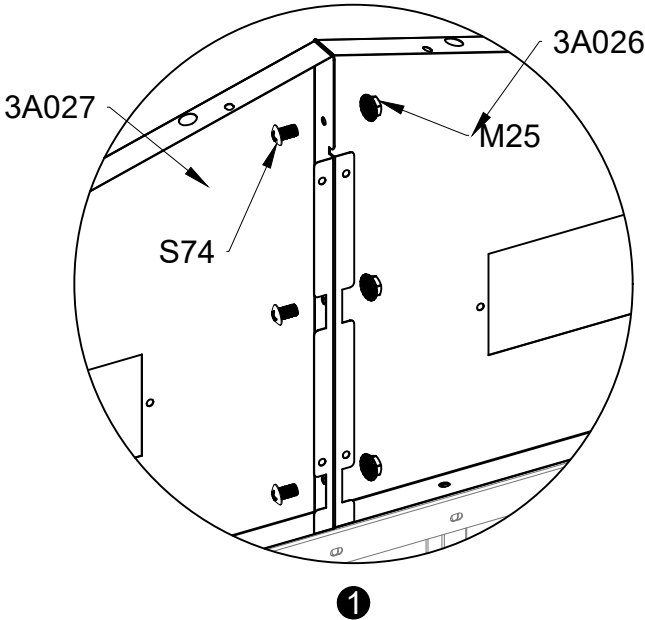




PART	NO	QTY
[	5F008	2
[	5F014	2
[	5G009	2
[	5G015	2
	S74	24
	M4X8	
	M25	24
	M4	

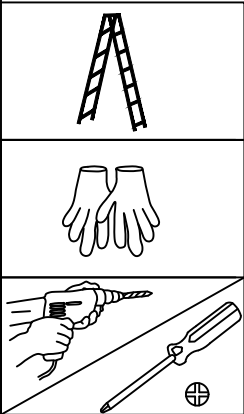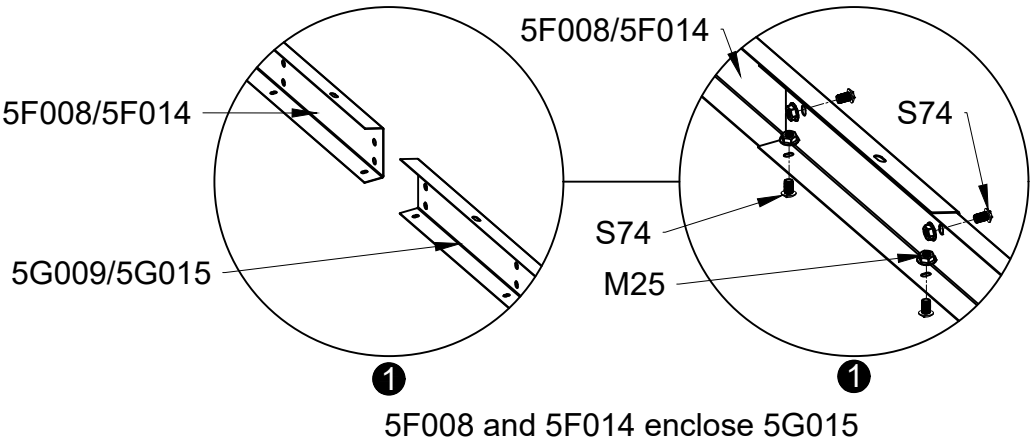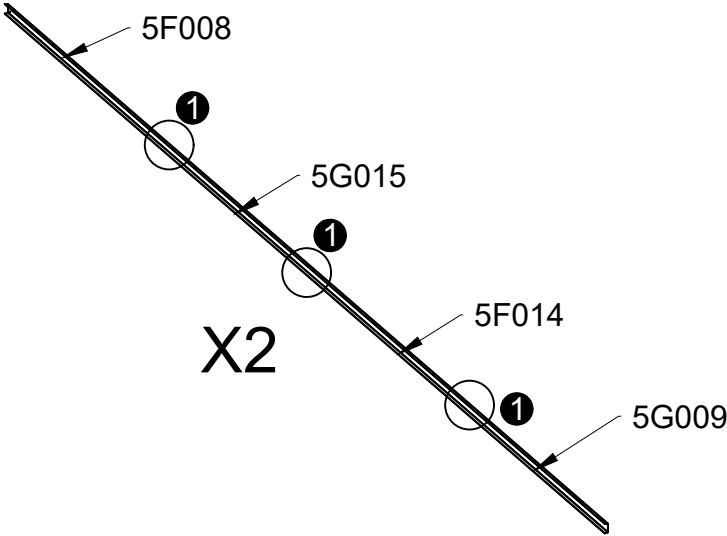


PART	NO	QTY
	S74	16
	M4X8	
	M25	16
	M4	

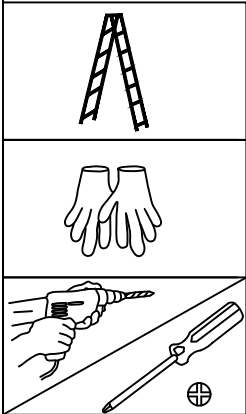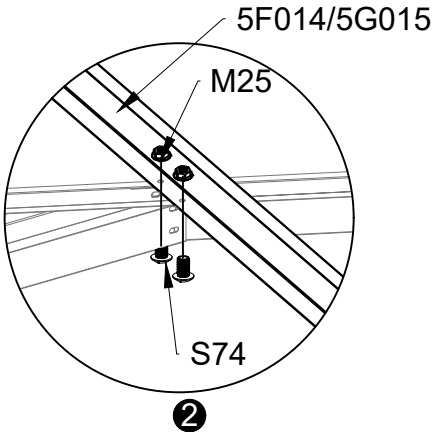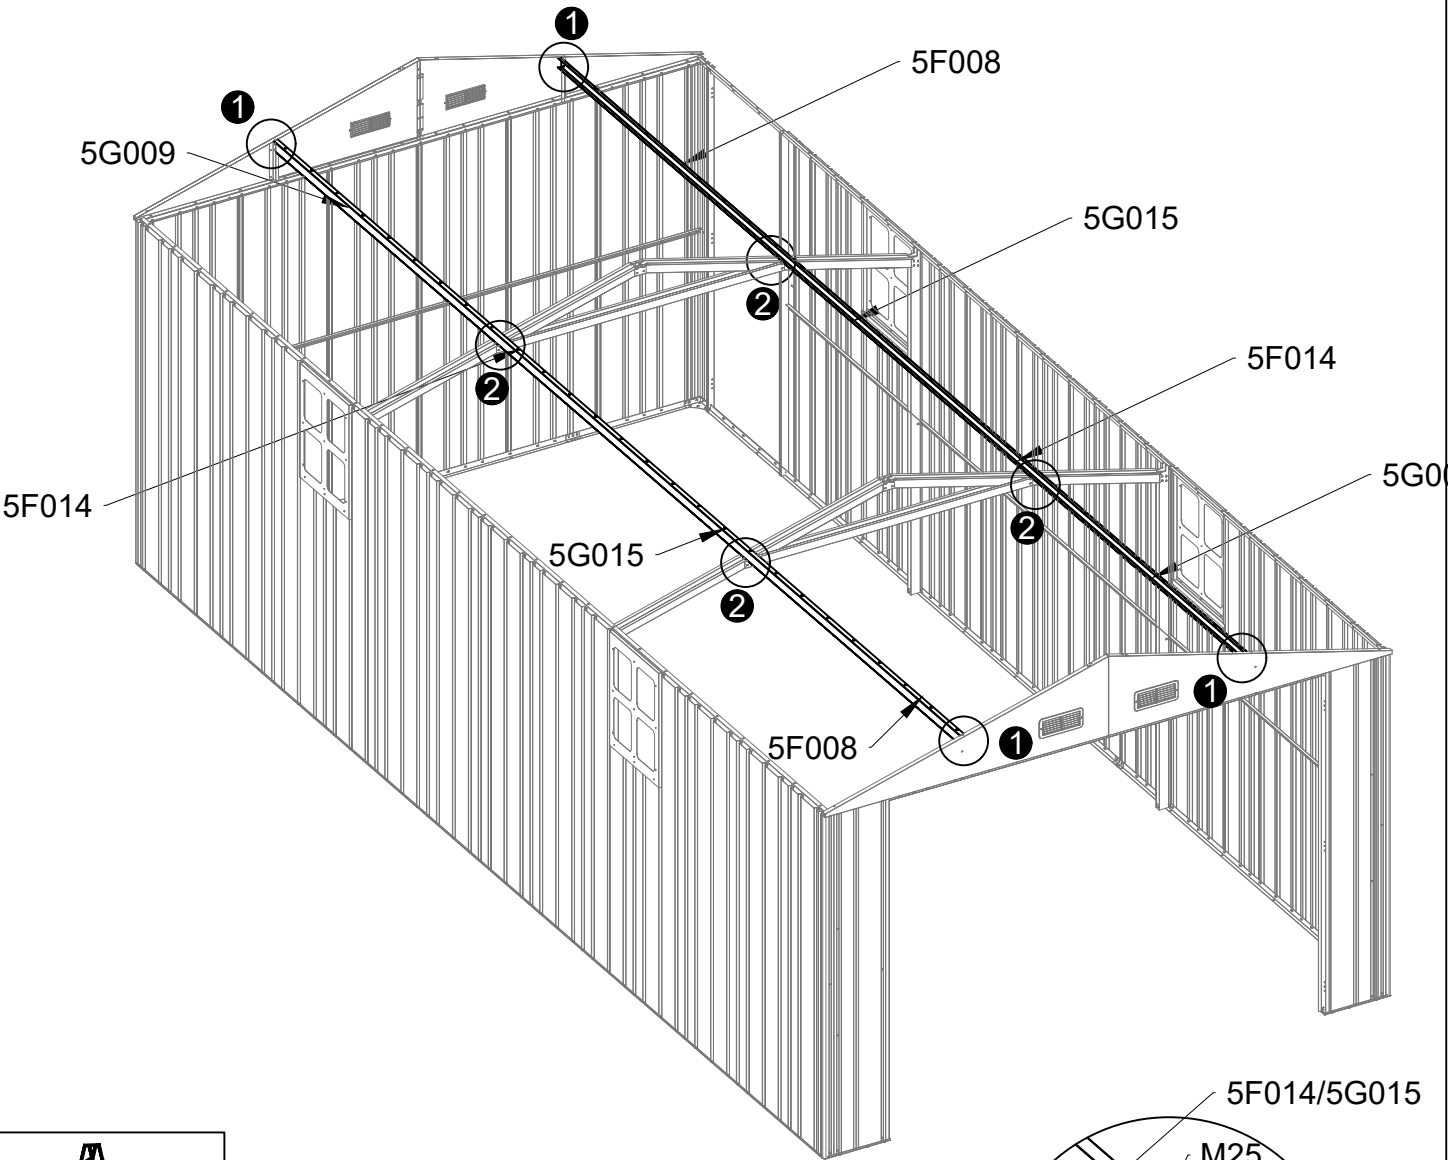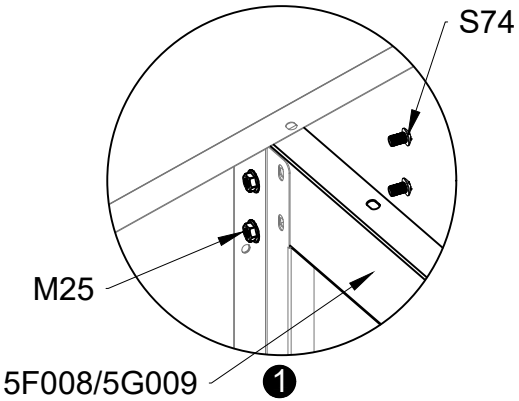





PART	NO	QTY
	D353	2
	S74 M4X8	4
	M25 M4	4

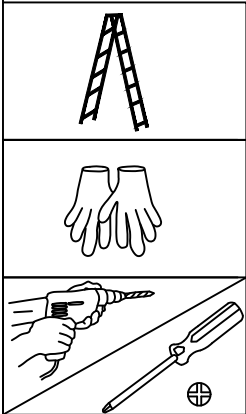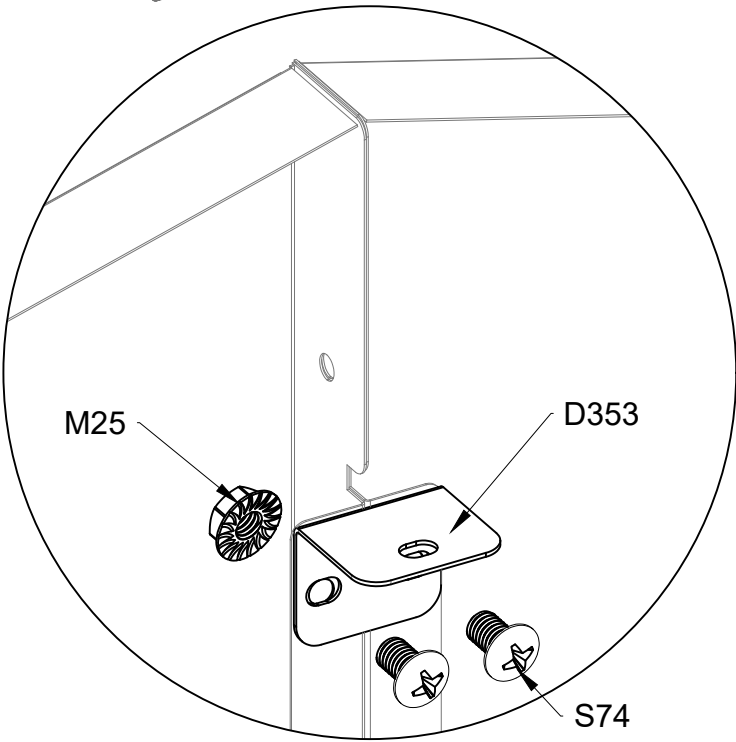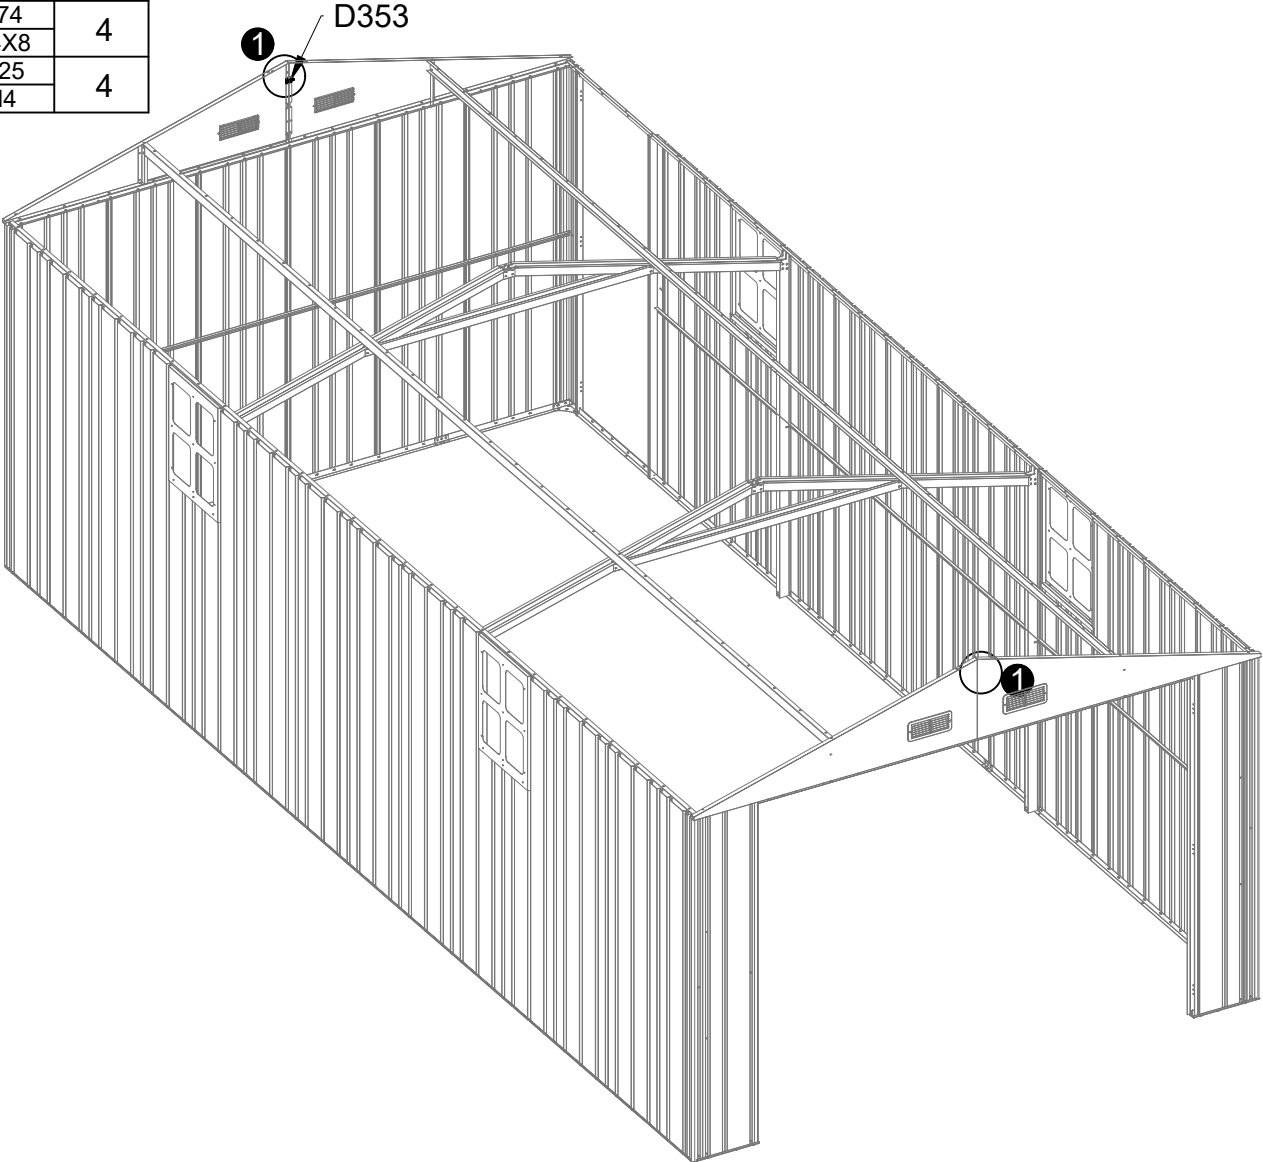


PART	NO	QTY
	5A005	2
	5B008	2
	5A010	1
	S74 M4X8	12
	M25 M4	12

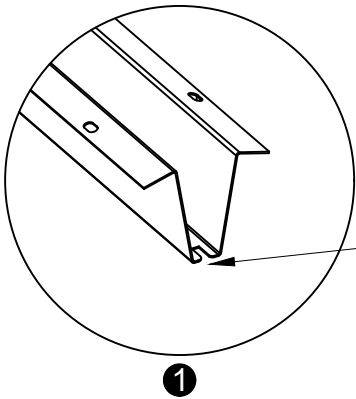



There are slots at both ends; there are no slots at the connection

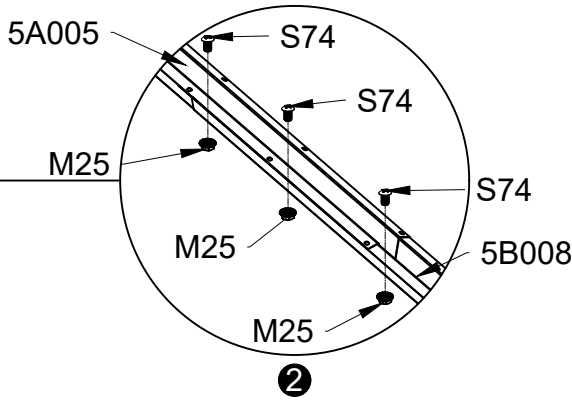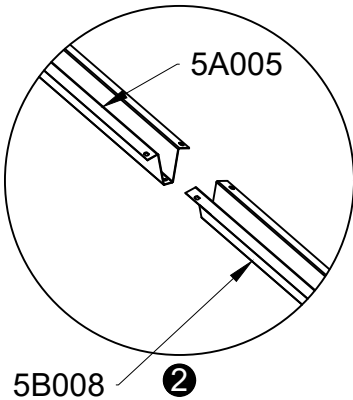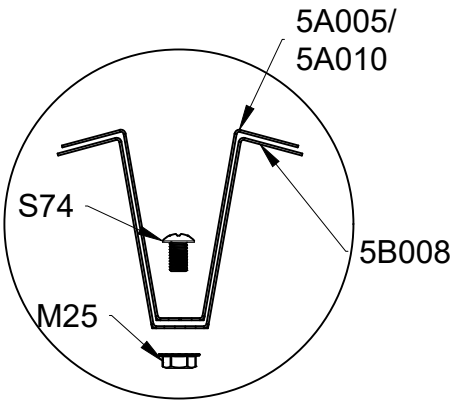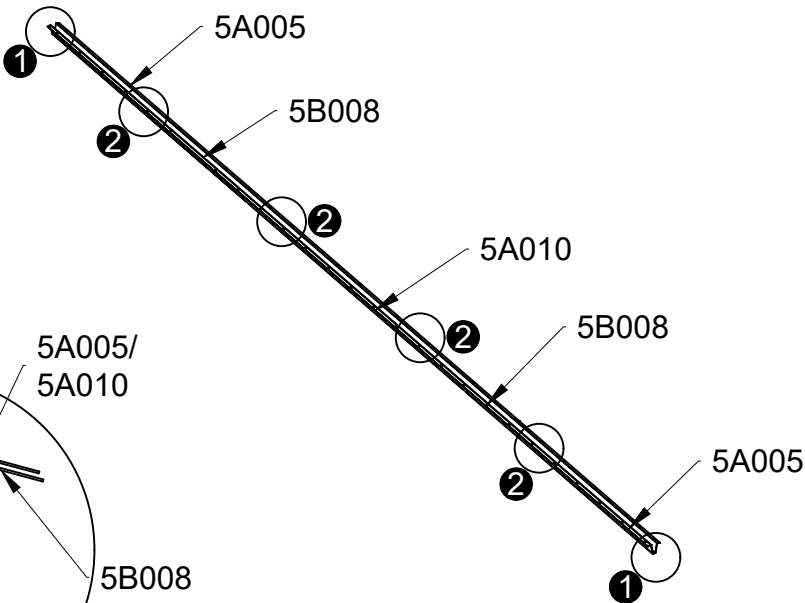





5B008 enclose 5A005 and 5A010

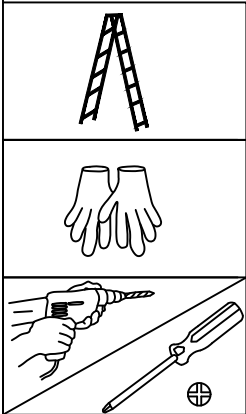





PART	NO	QTY
	S74	6
	M4X8	
	M25	6
	M4	

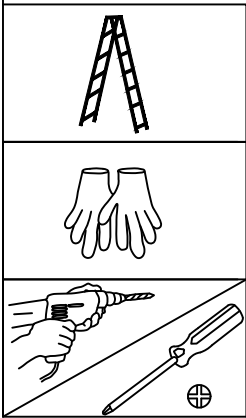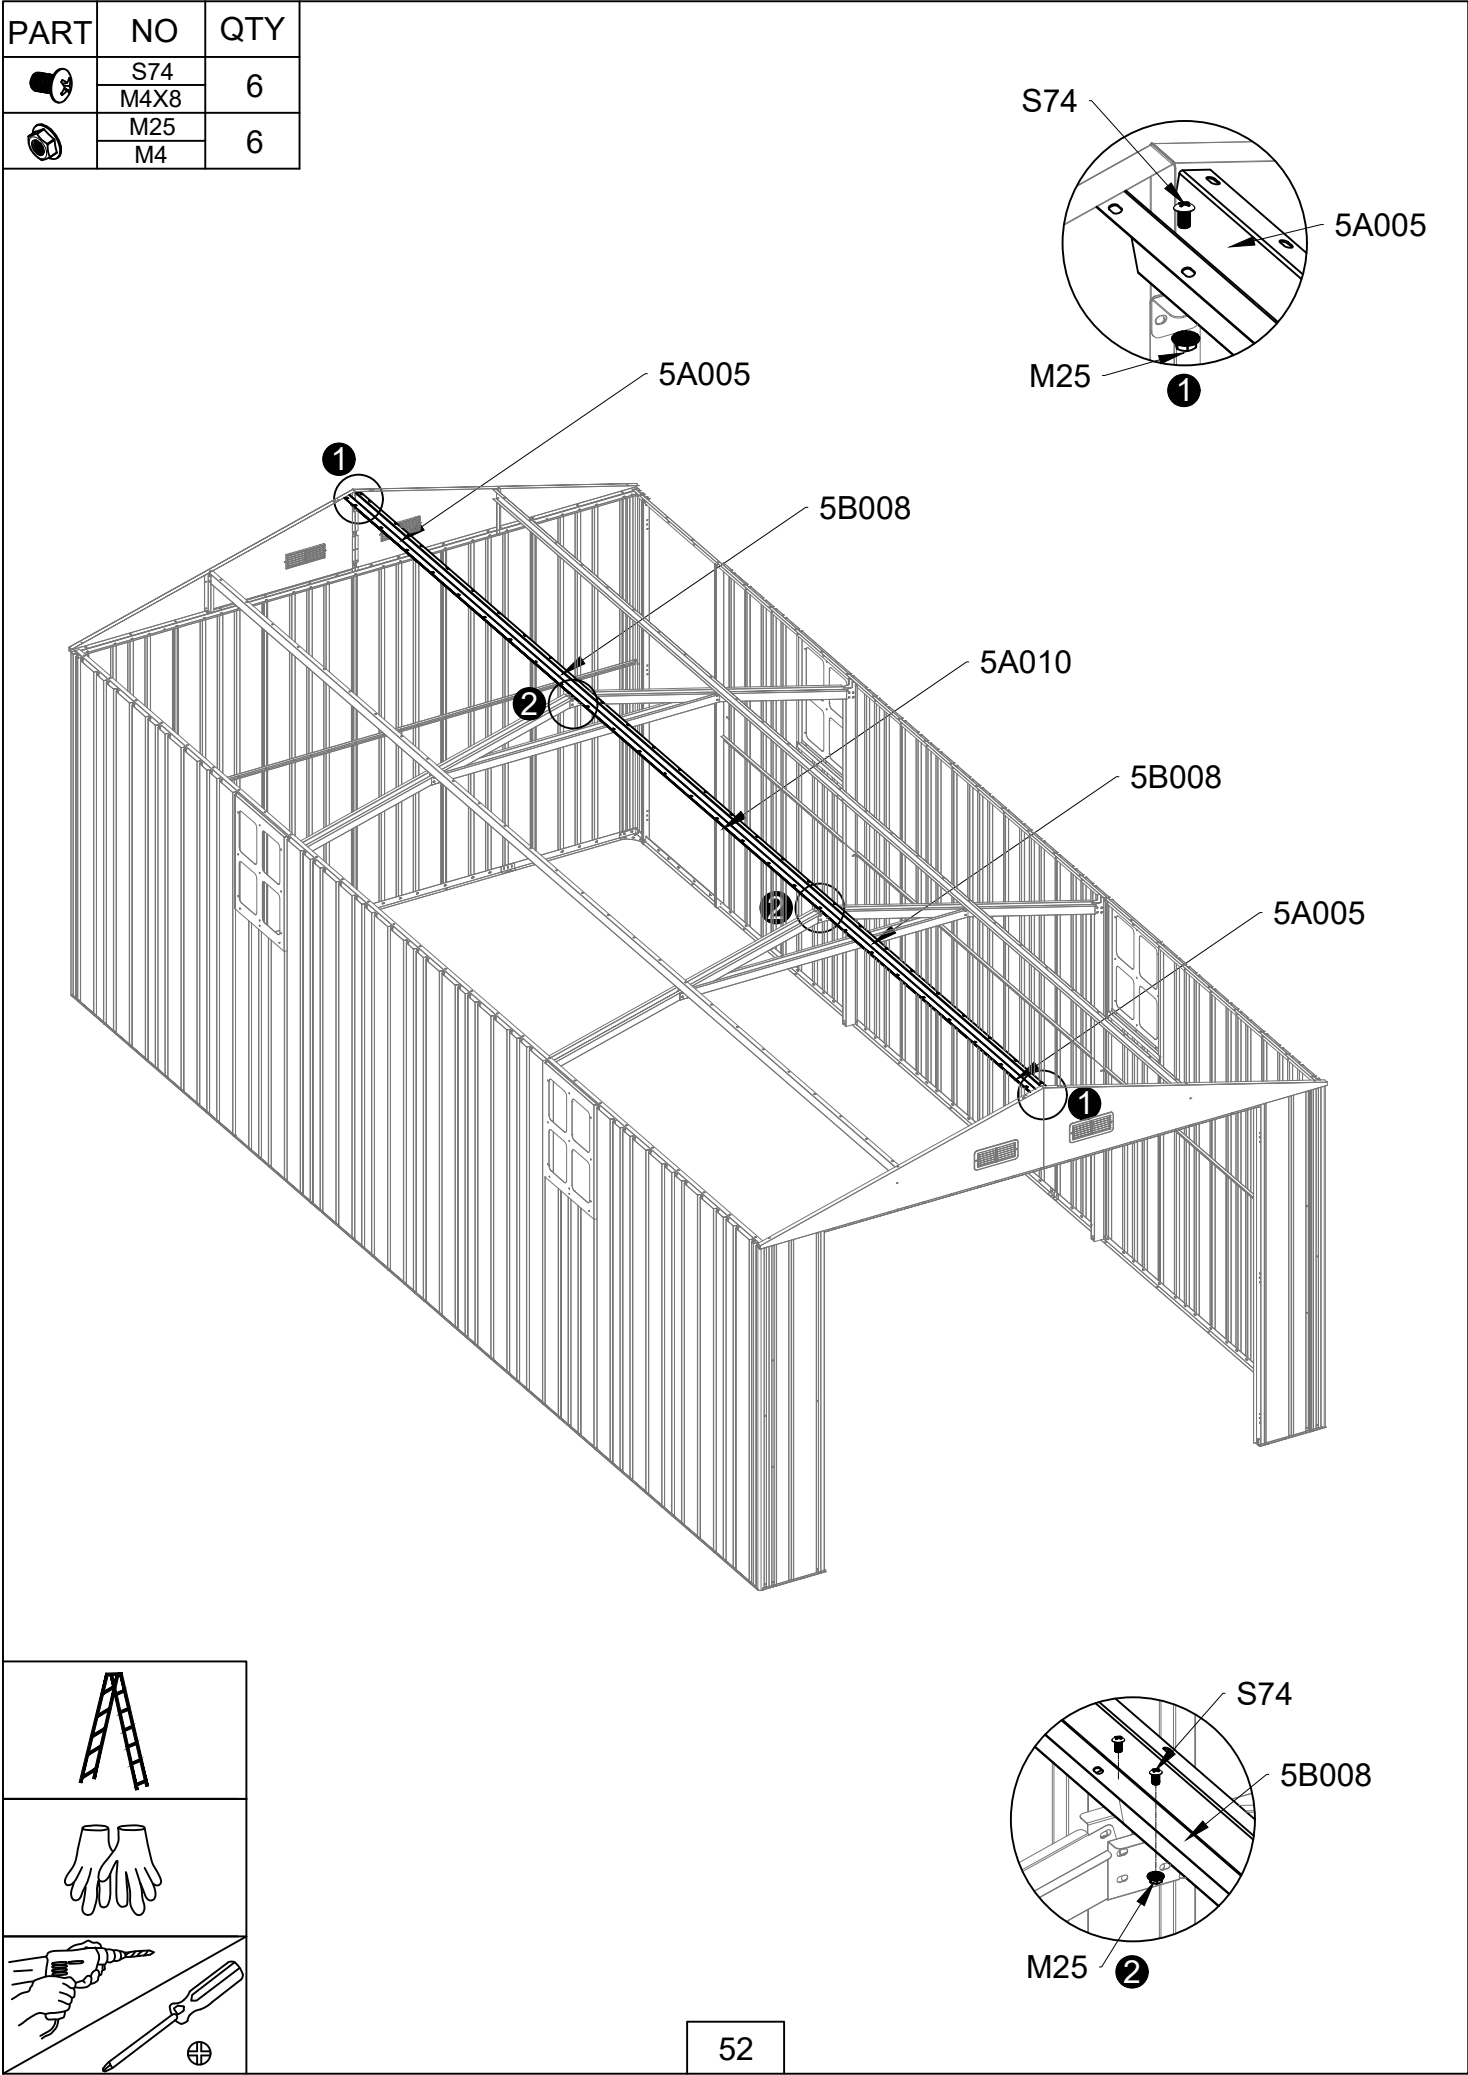






PART	NO	QTY
	5E003	2
	S74	6
	M4X8	
	M25	6
	M4	

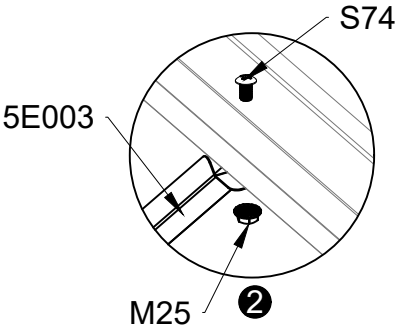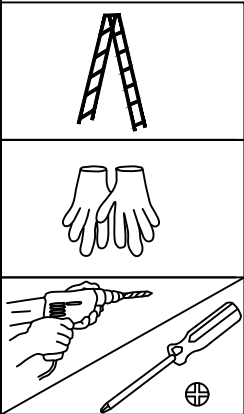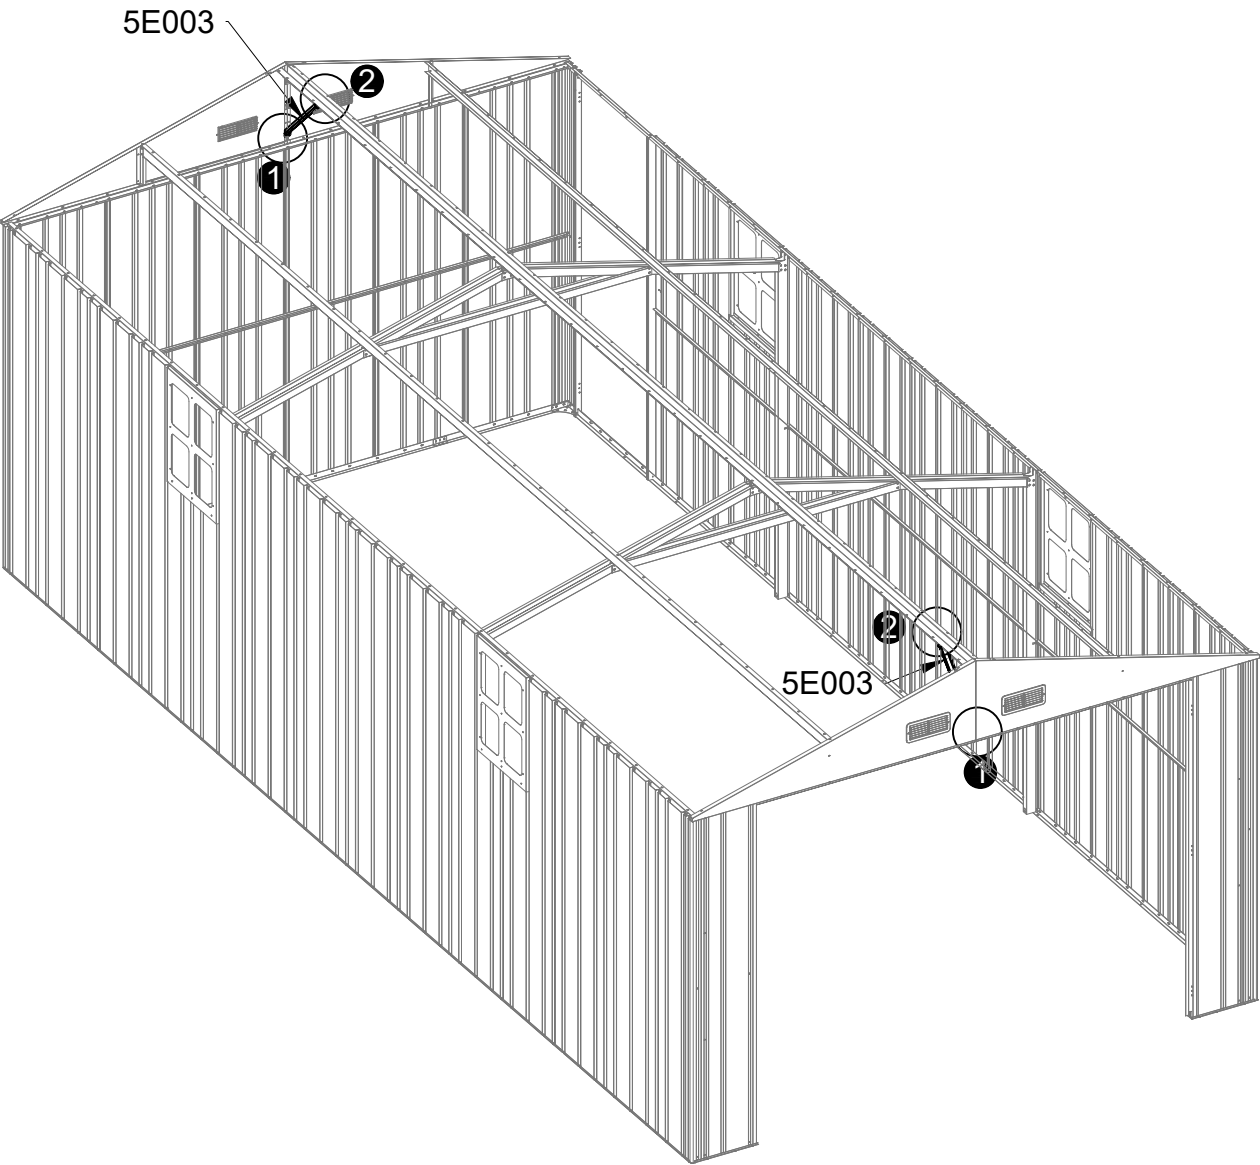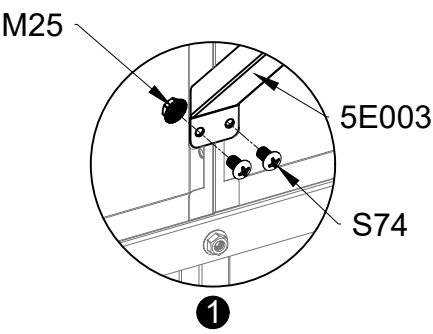


PART	NO	QTY
	3G007	2
	3G008	2
	S74 M4X8	12
	M25 M4	12
	H127	12

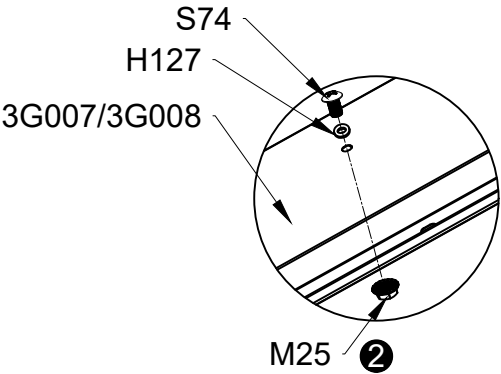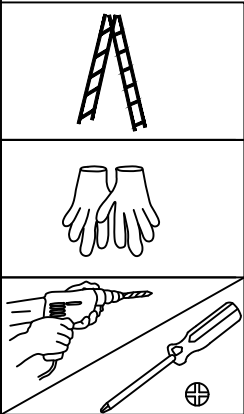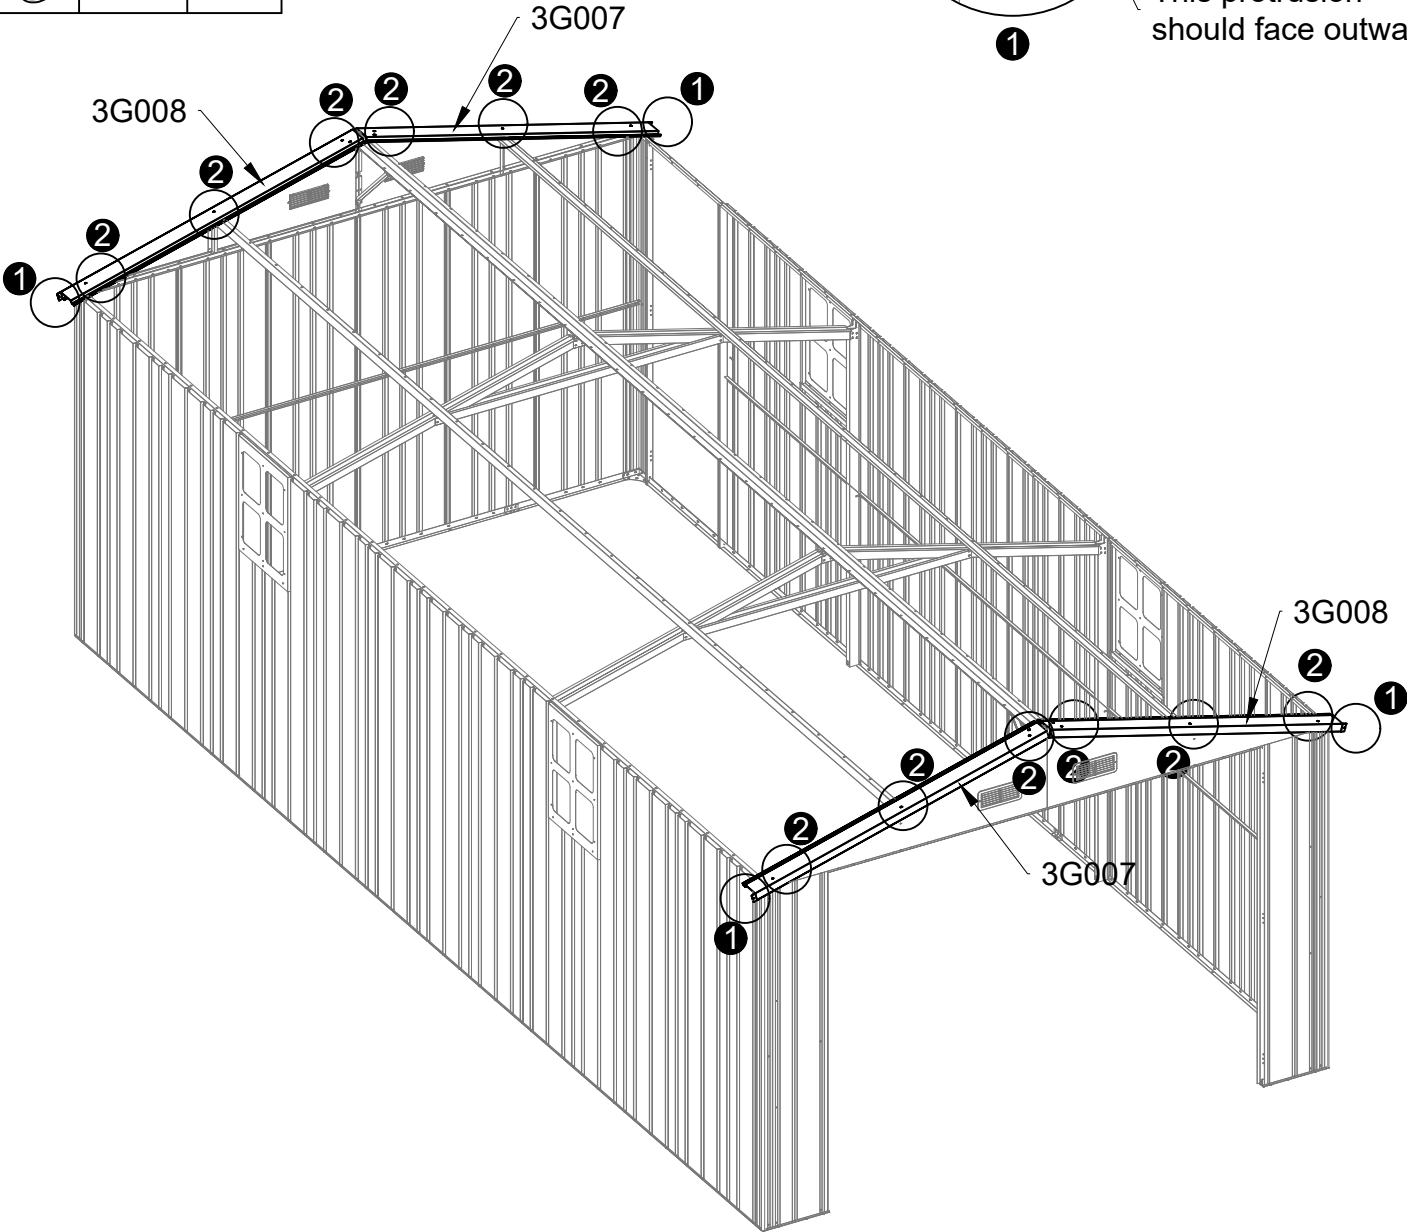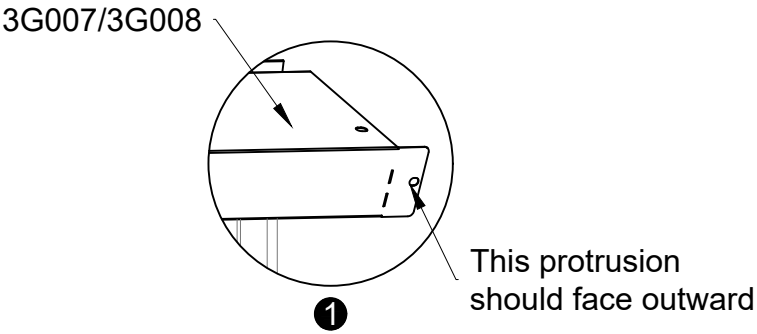




PART	NO	QTY
	1E004	4
	S74	24
	M4X8	
	M25	24
	M4	
	H127	24

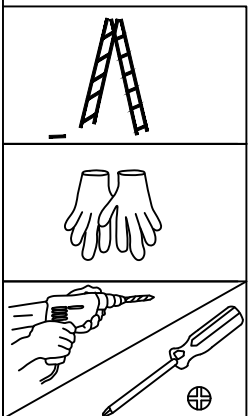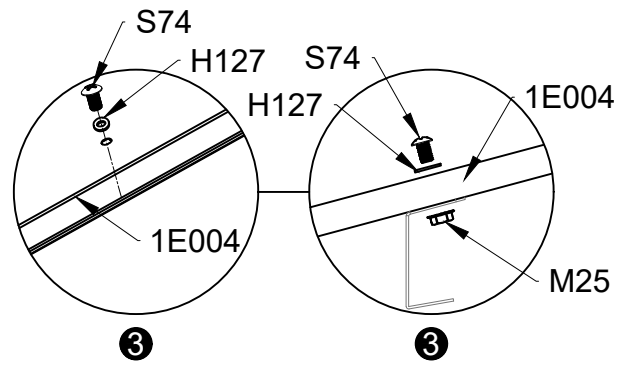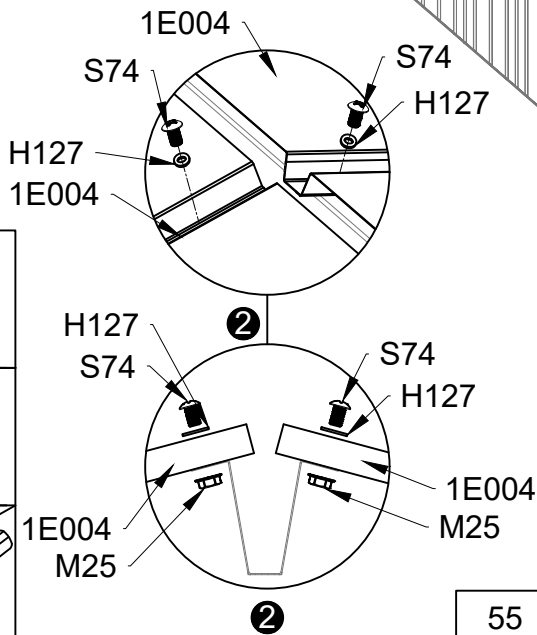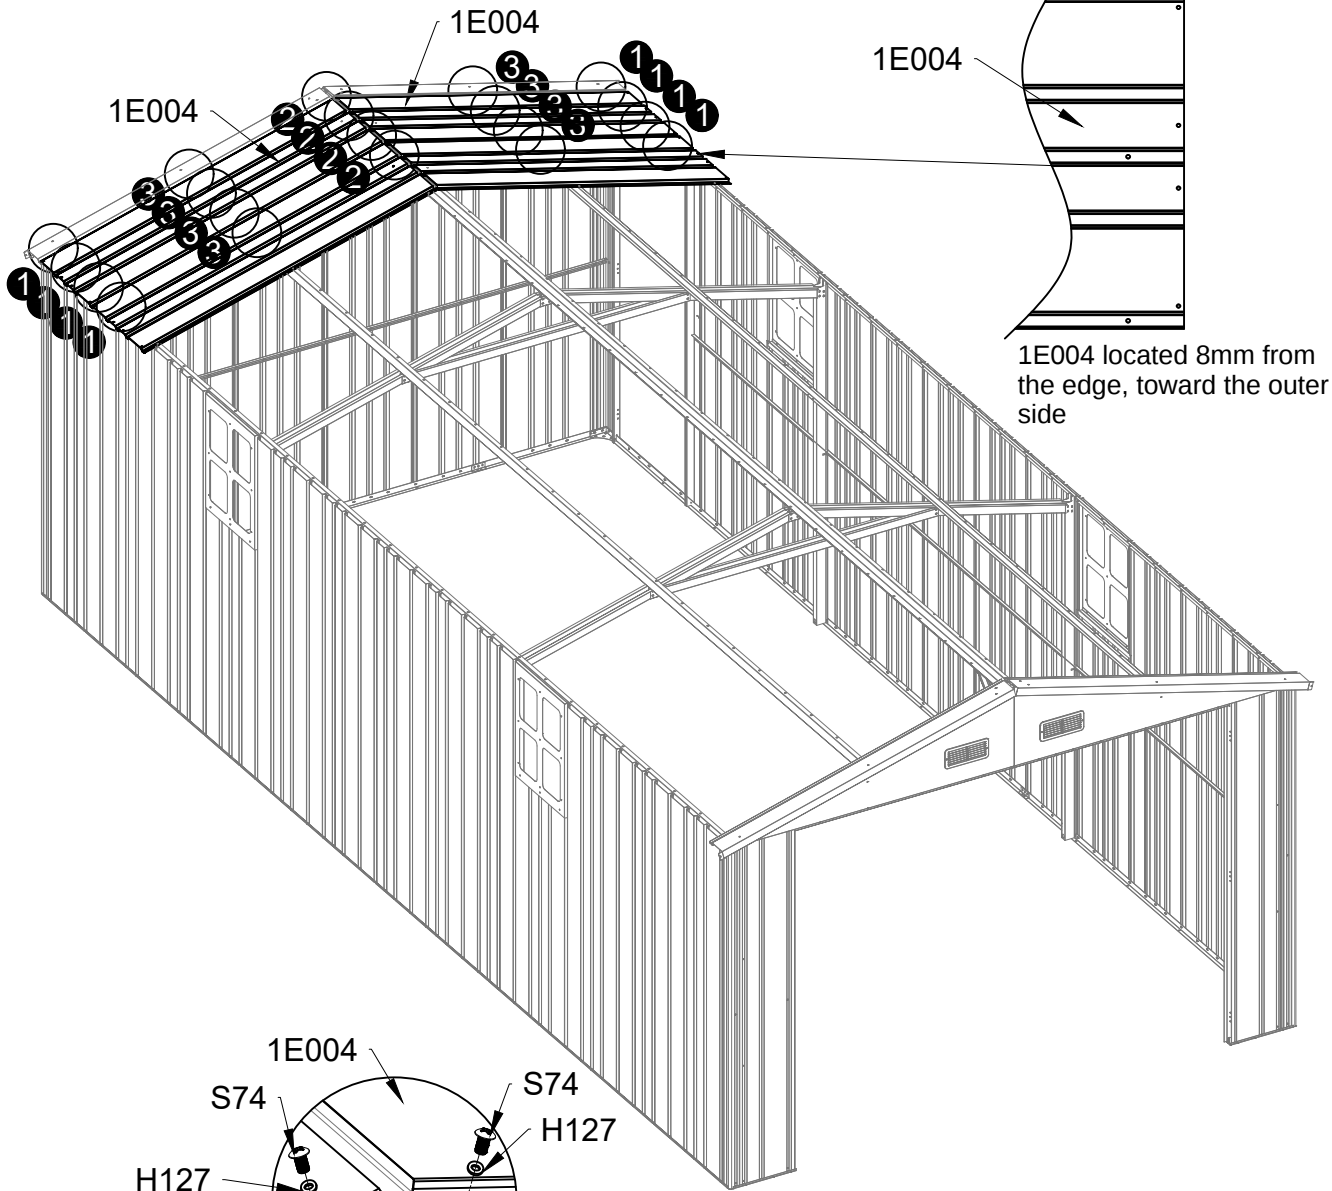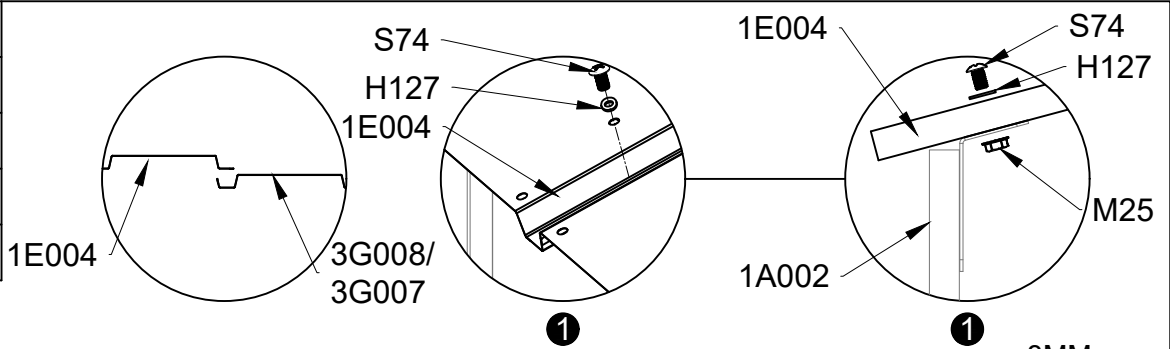





PART	NO	QTY
	3H004	1
	D356	1
	S74	6
	M4X8	
	M25	6
	M4	
	H127	6

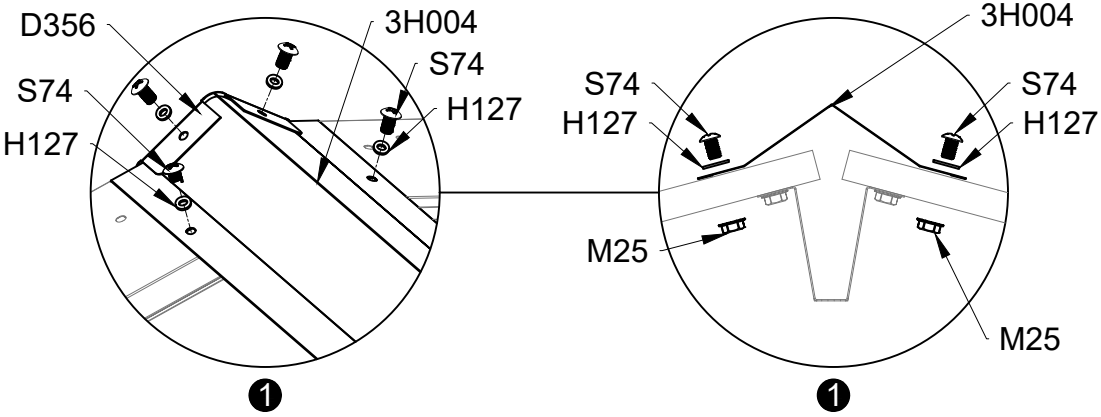





First install D356 on 3H004, then install 3H004

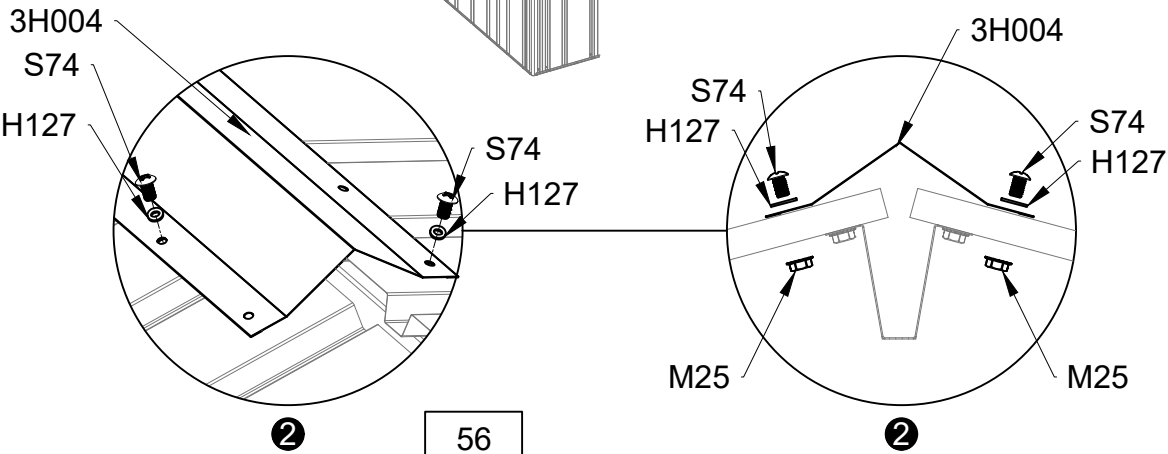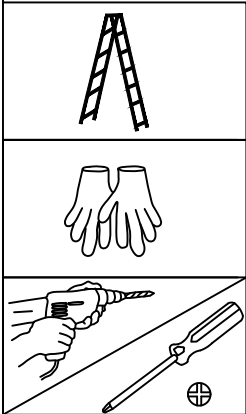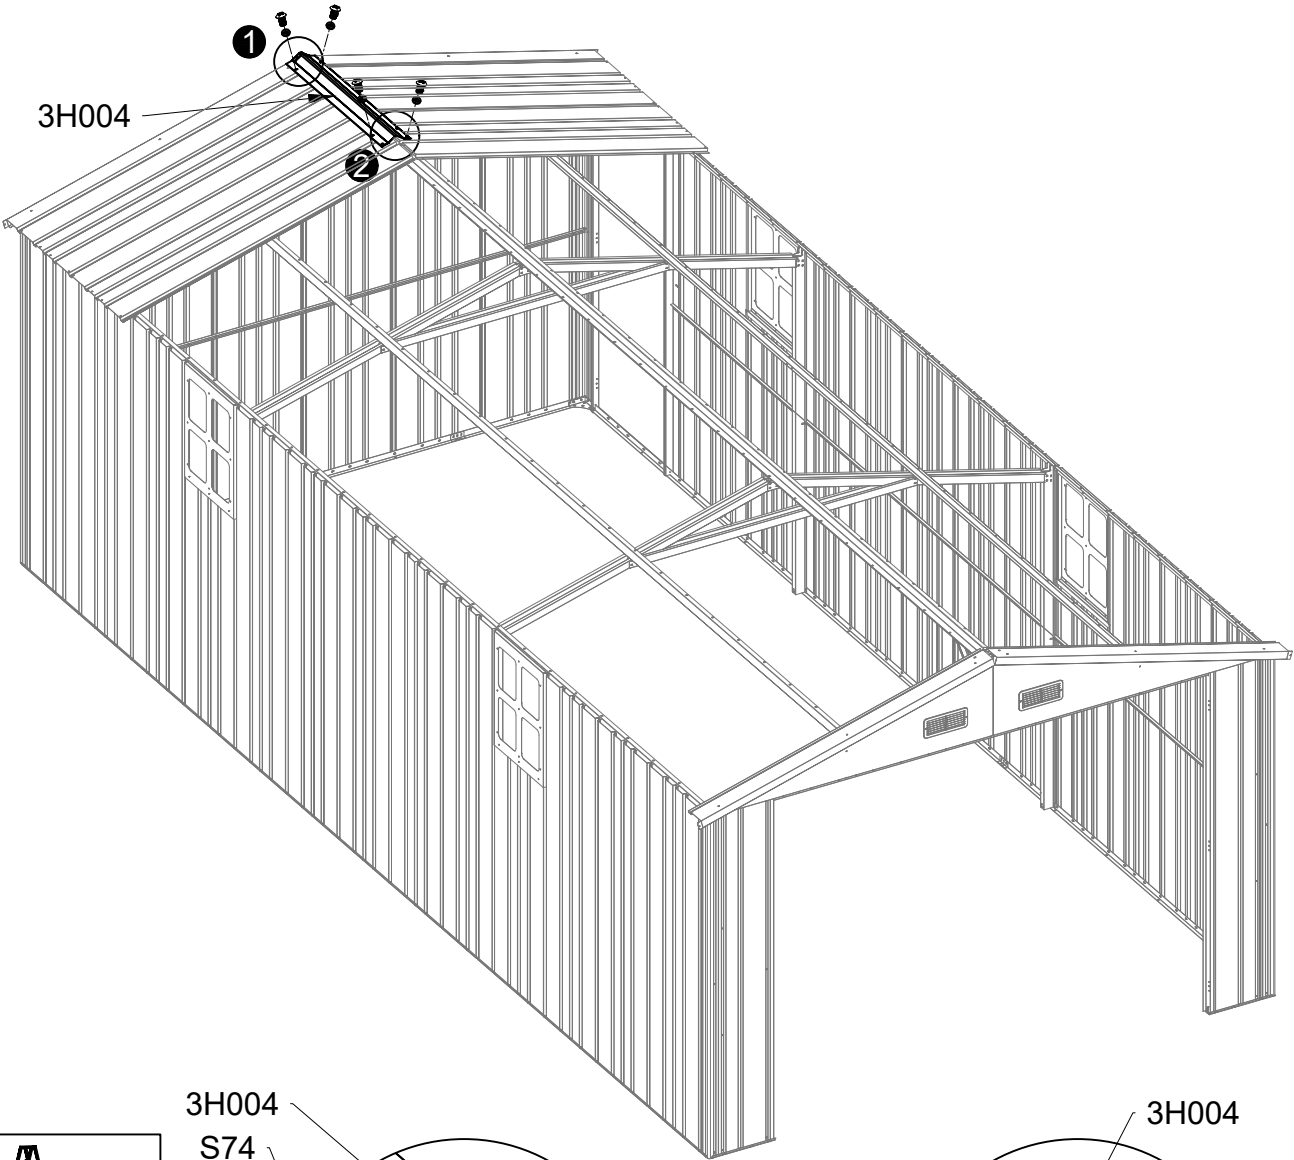





PART	NO	QTY
	1E004	4
	S74	24
	M4X8	
	M25	24
	M4	
	H127	24

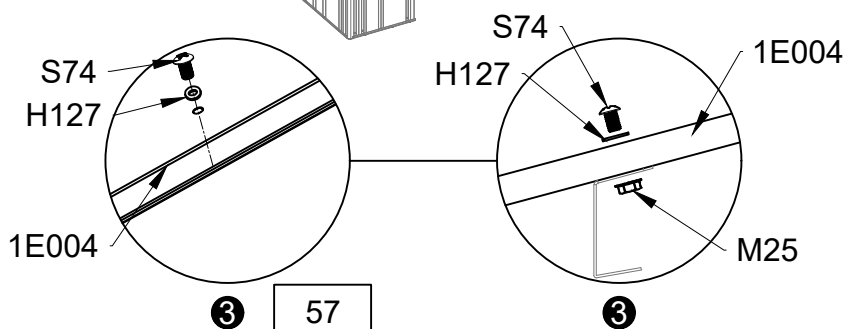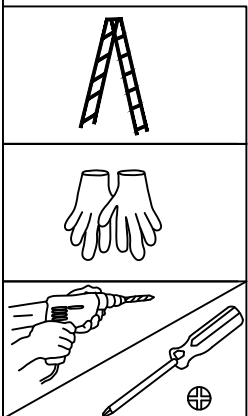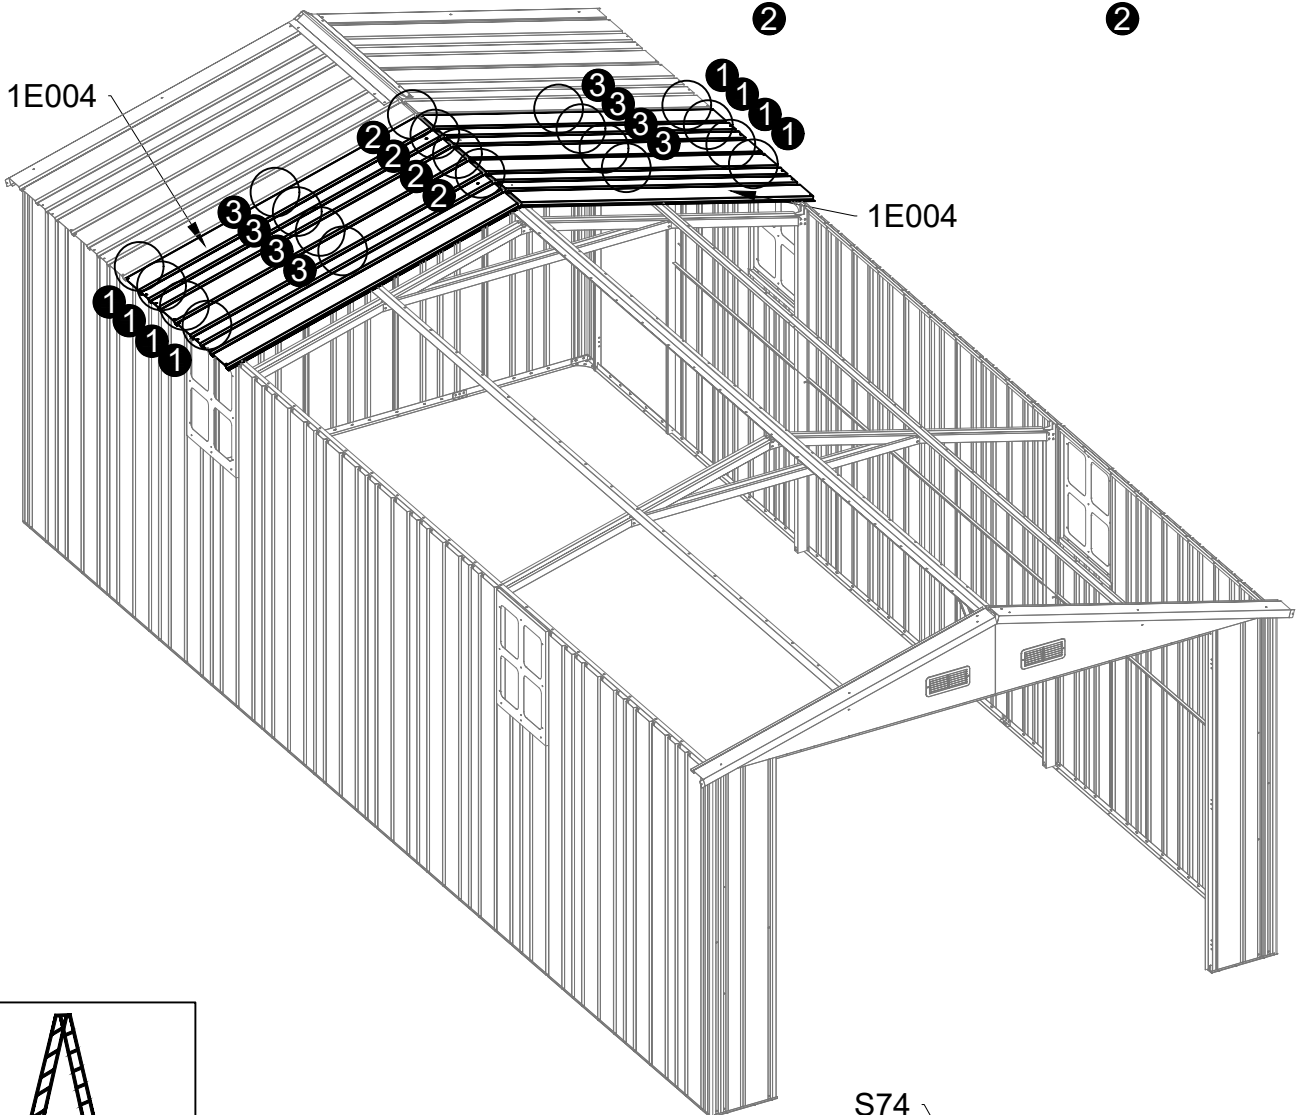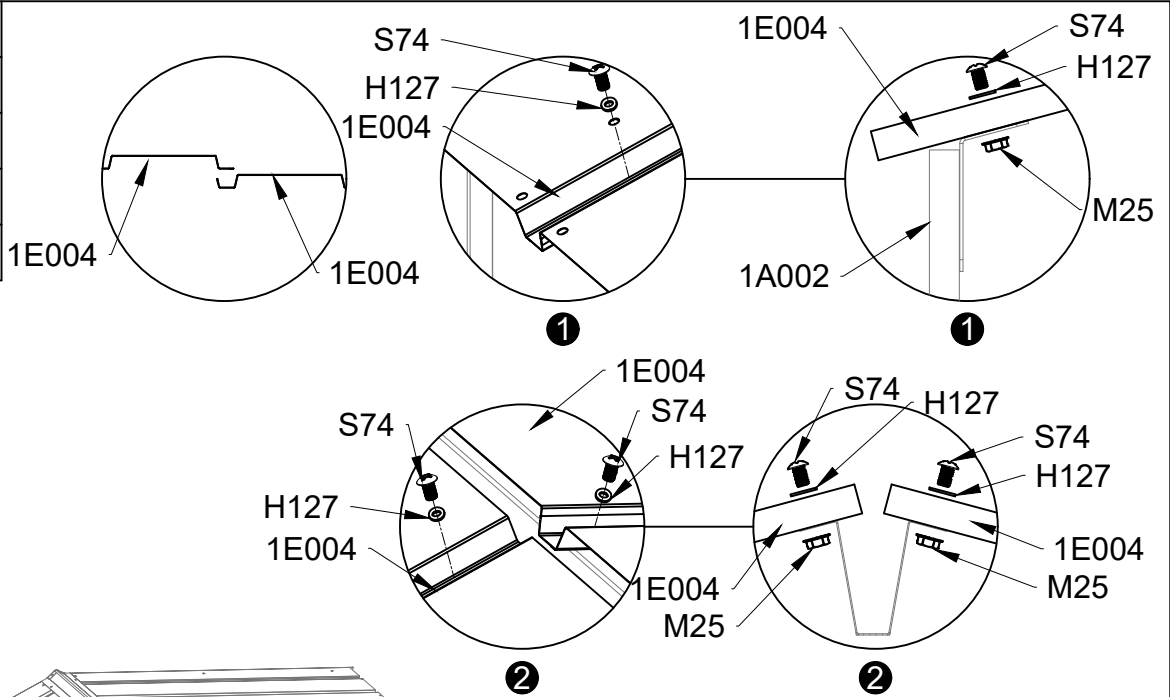





PART	NO	QTY
	3H005	1
	S74 M4X8	2
	M25 M4	2
	H127	2

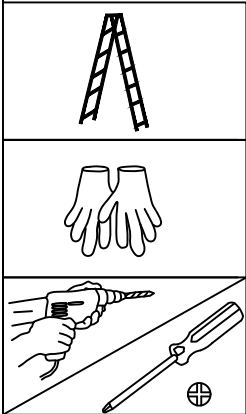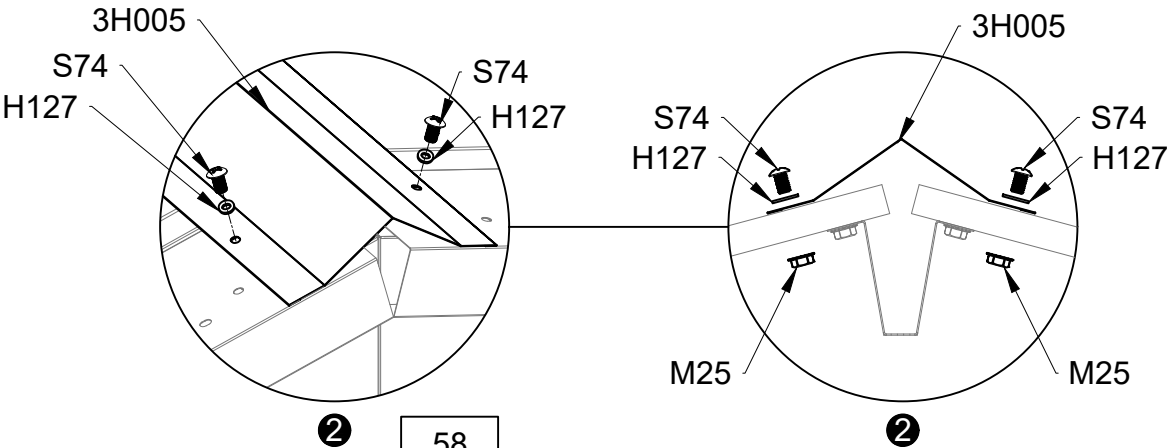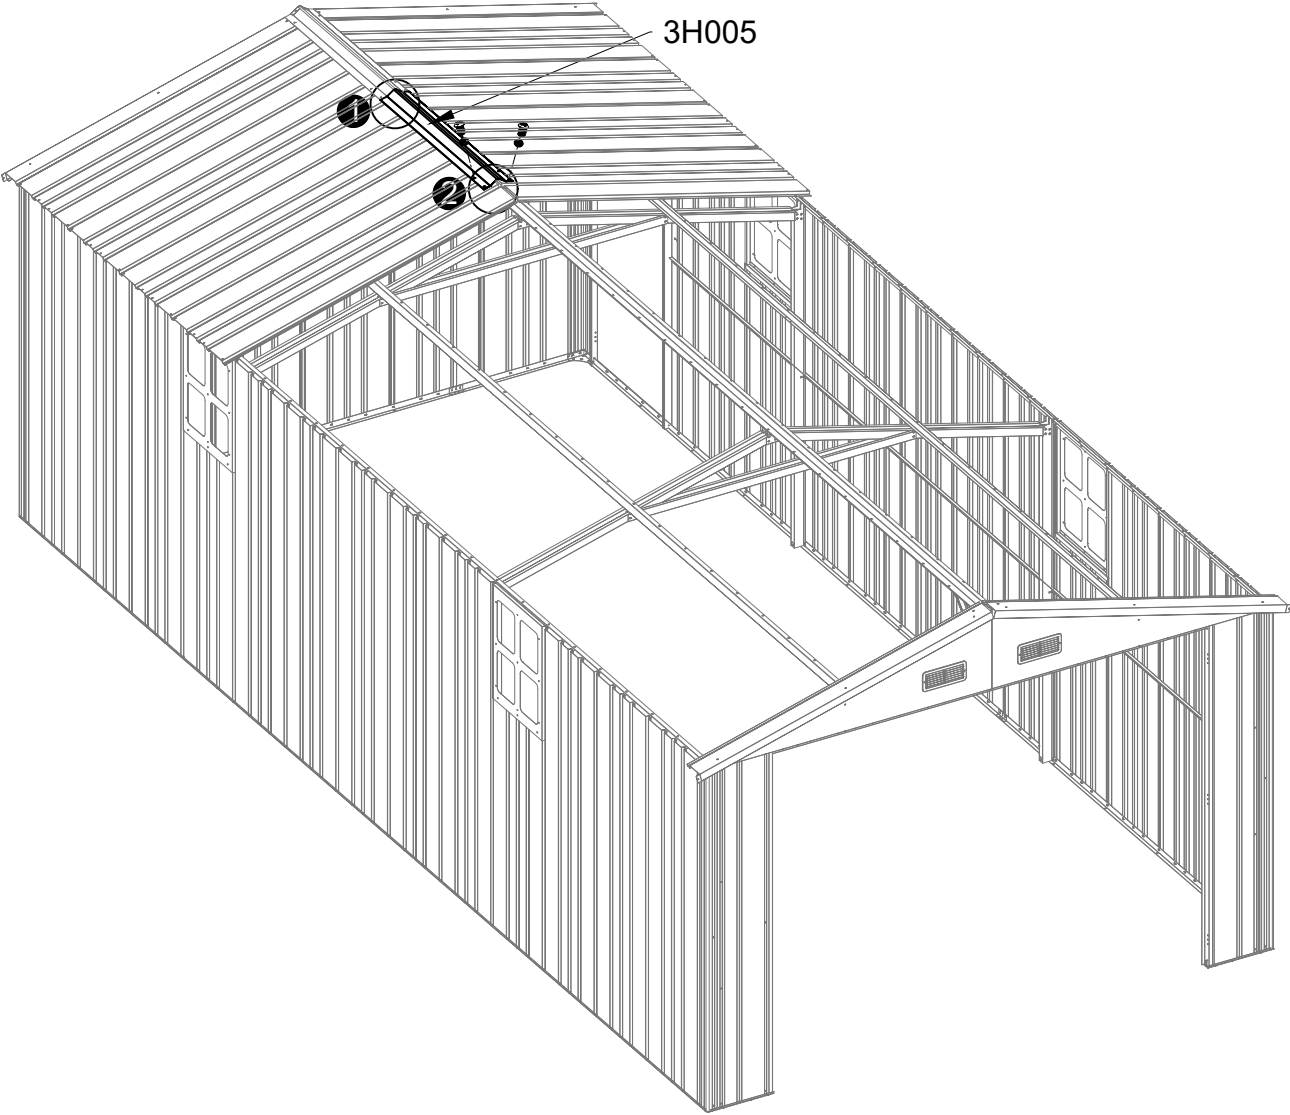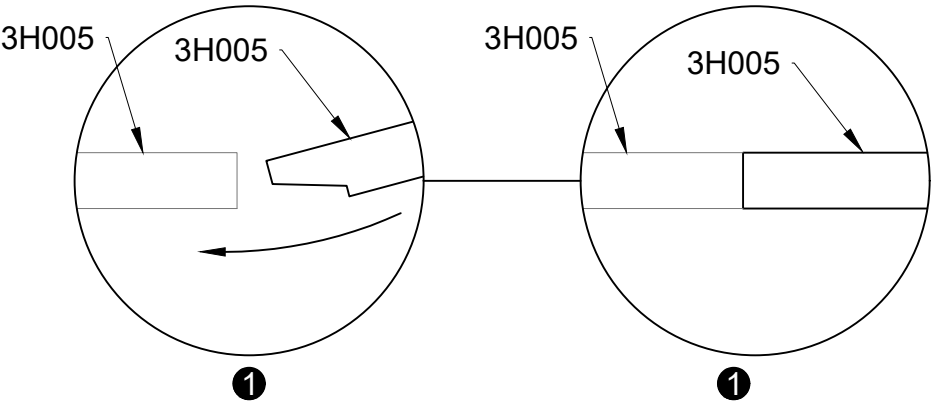

PART	NO	QTY
	1E004	4
	S74	24
	M4X8	
	M25	24
	M4	
	H127	24

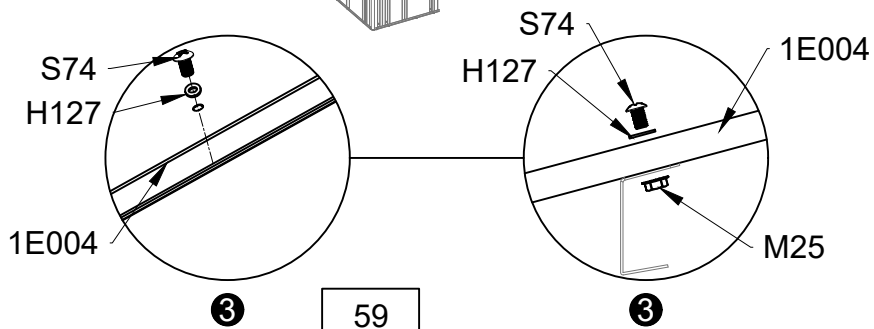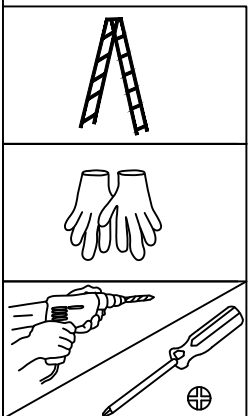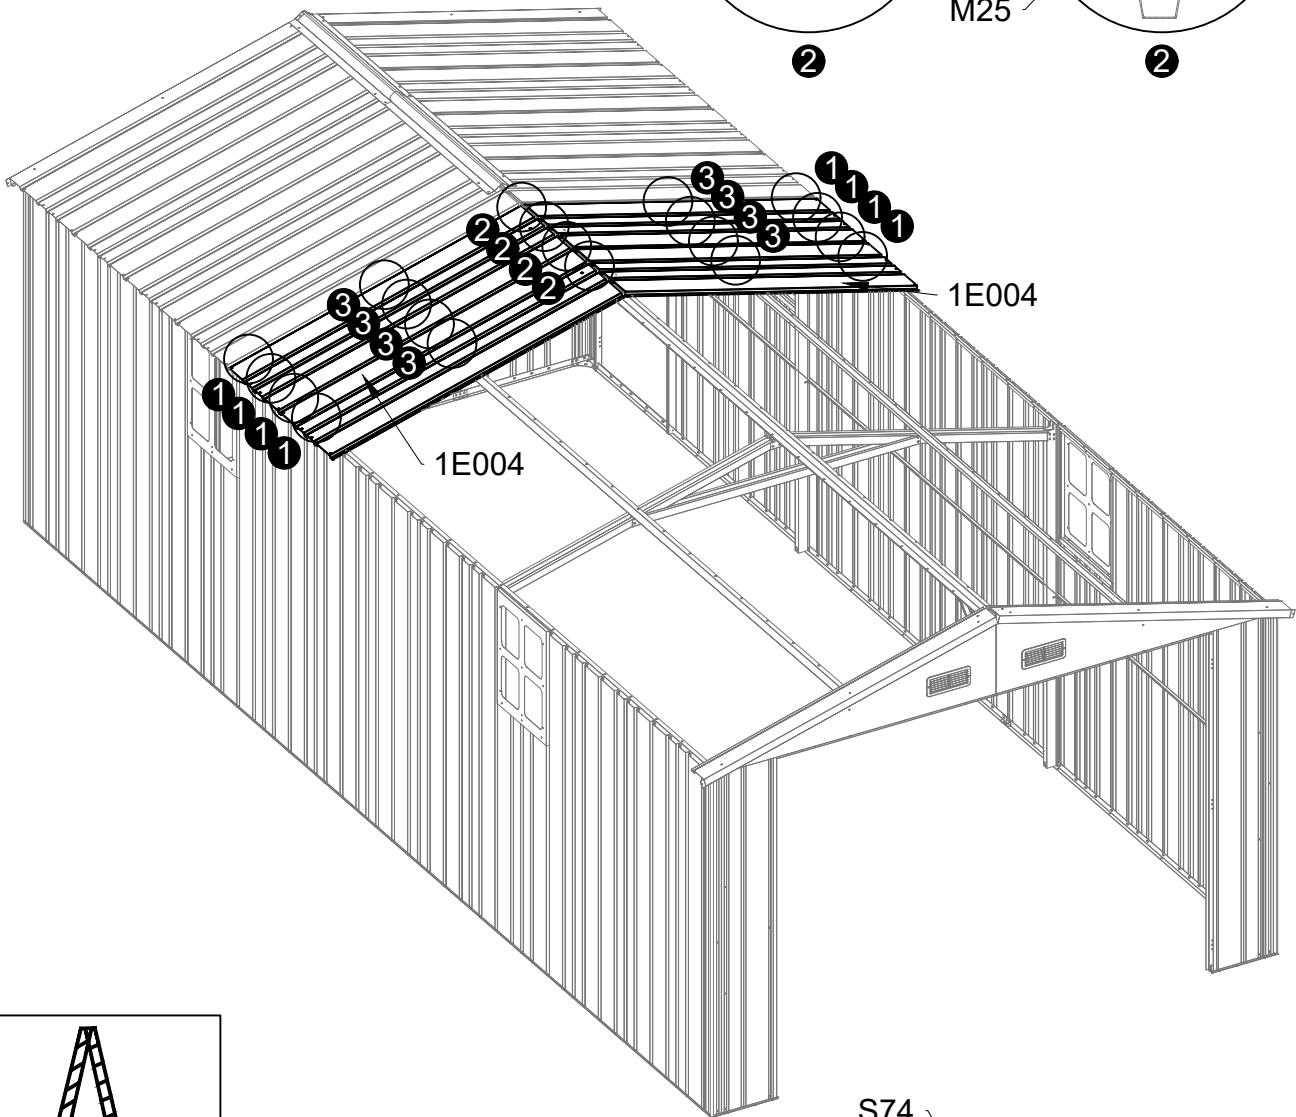
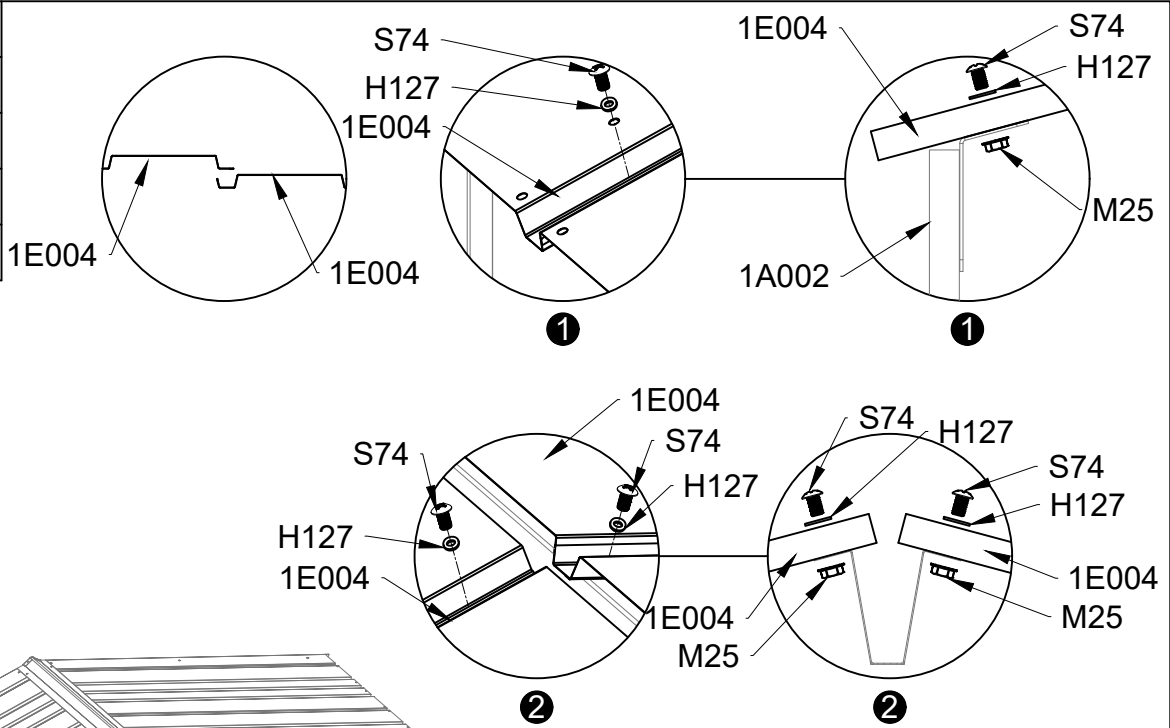


PART	NO	QTY
	3H005	1
	S74 M4X8	2
	M25 M4	2
	H127	2

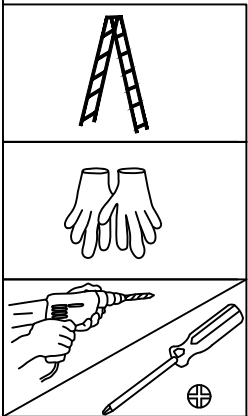
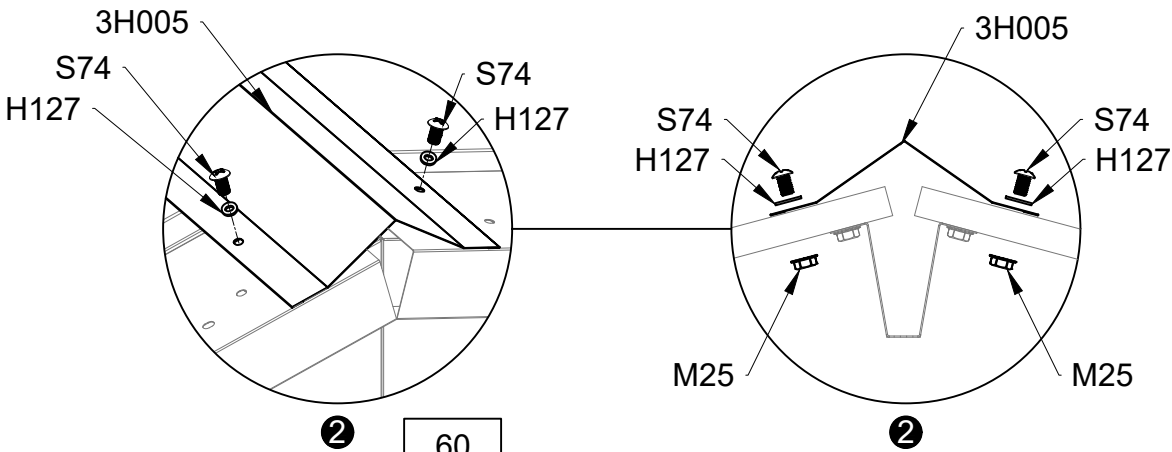
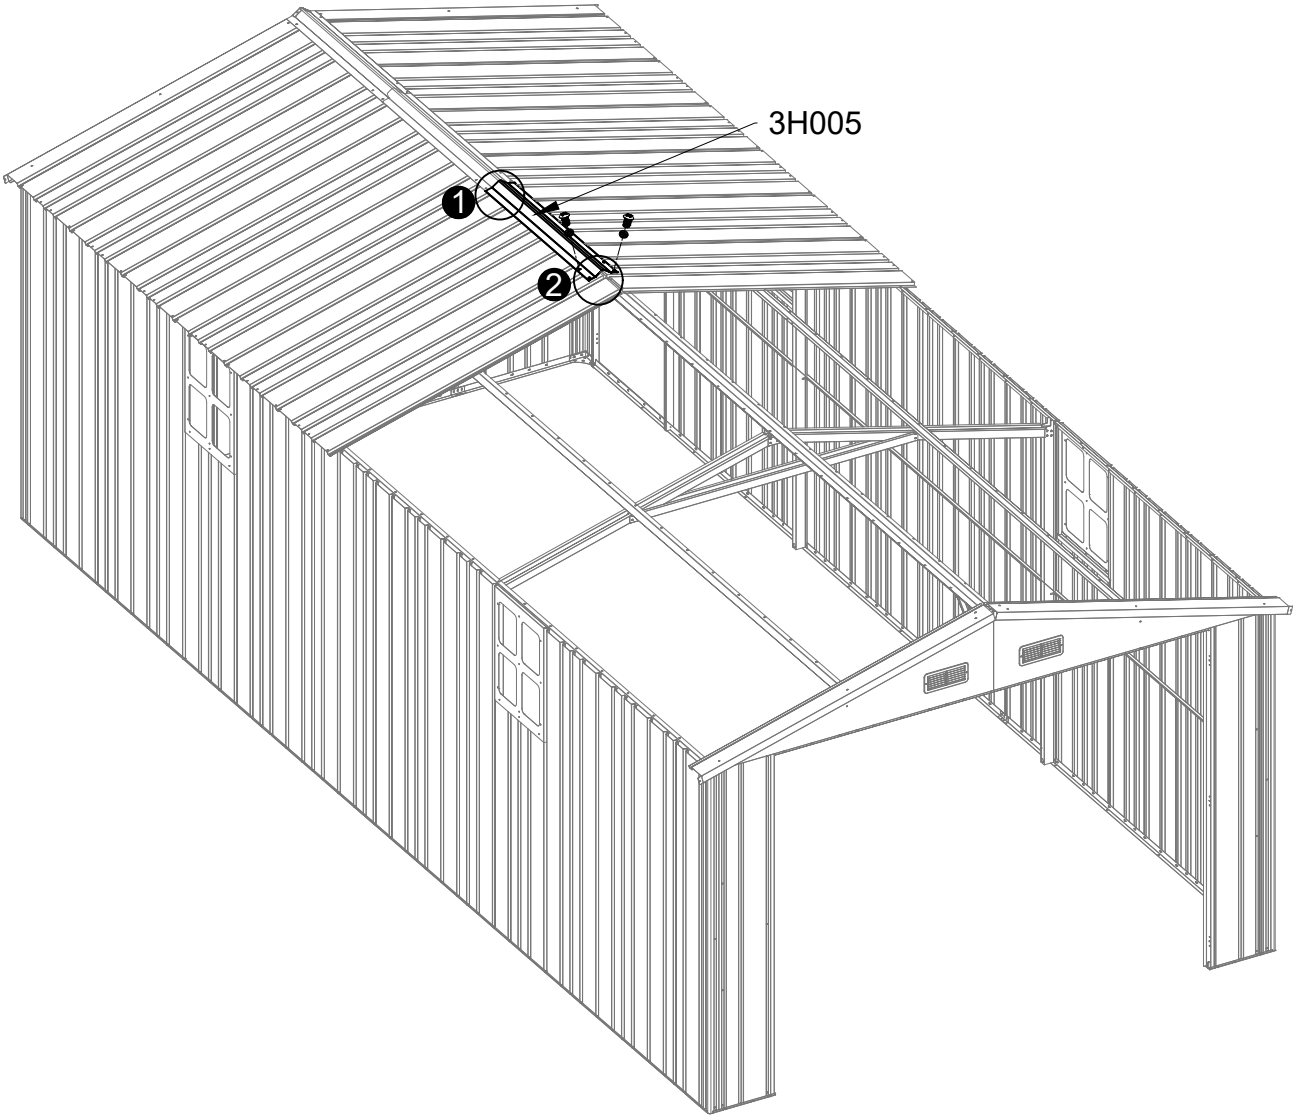
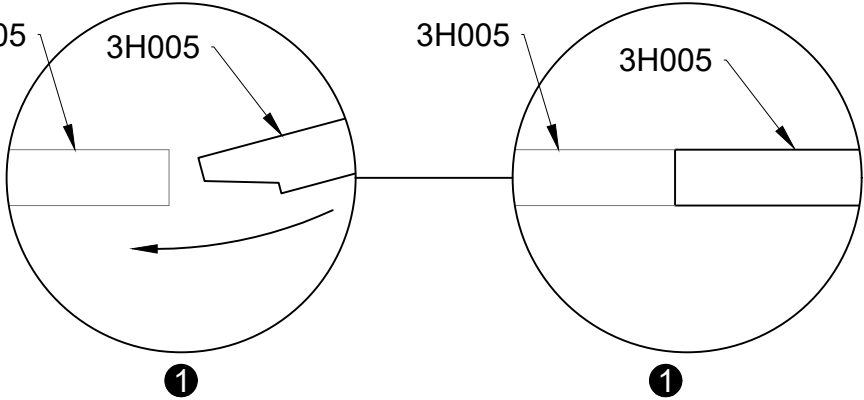


PART	NO	QTY
	1E004	12
	3H005	3
	S74 M4X8	78
	M25 M4	
		78
	H127	78


Refer to the first two pages to install 12 pieces of 1E004 and 3 strips of 3H005.

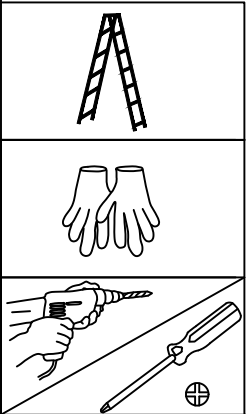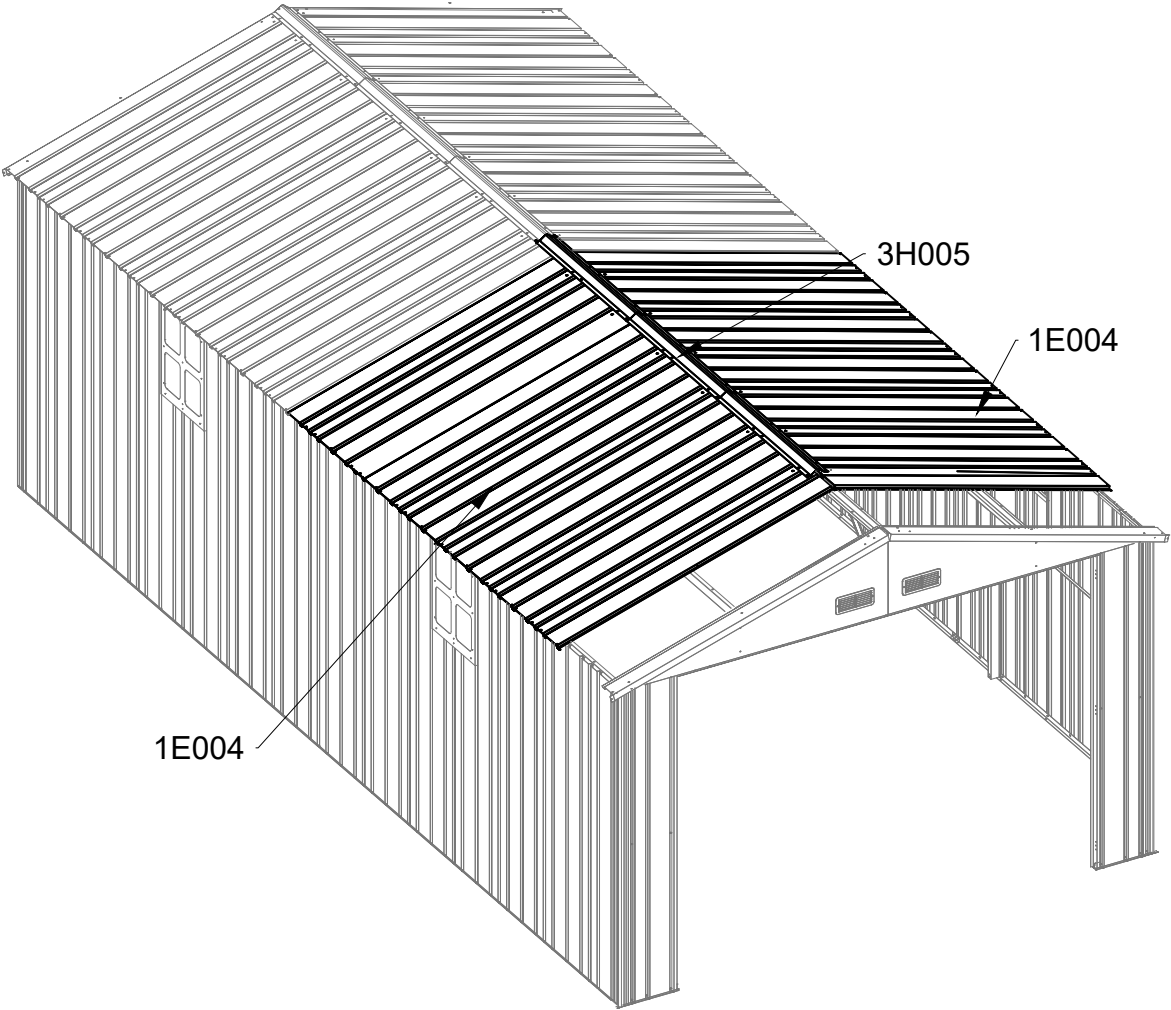





PART	NO	QTY
	1E004	2
	S74	18
	M4X8	
	M25	18
	M4	
	H127	18

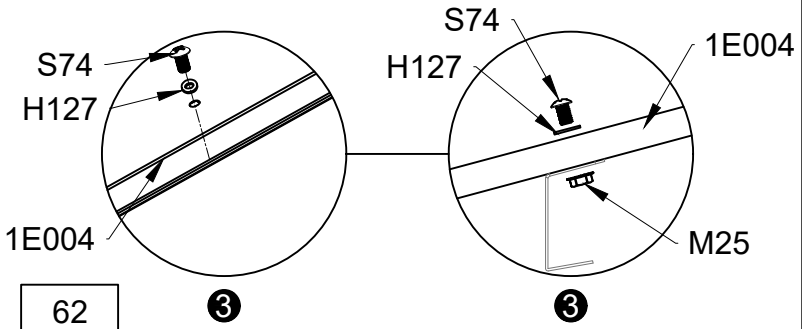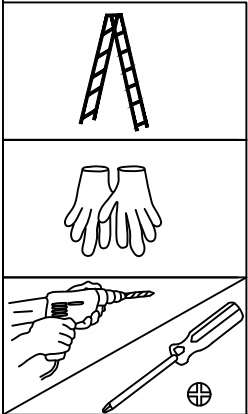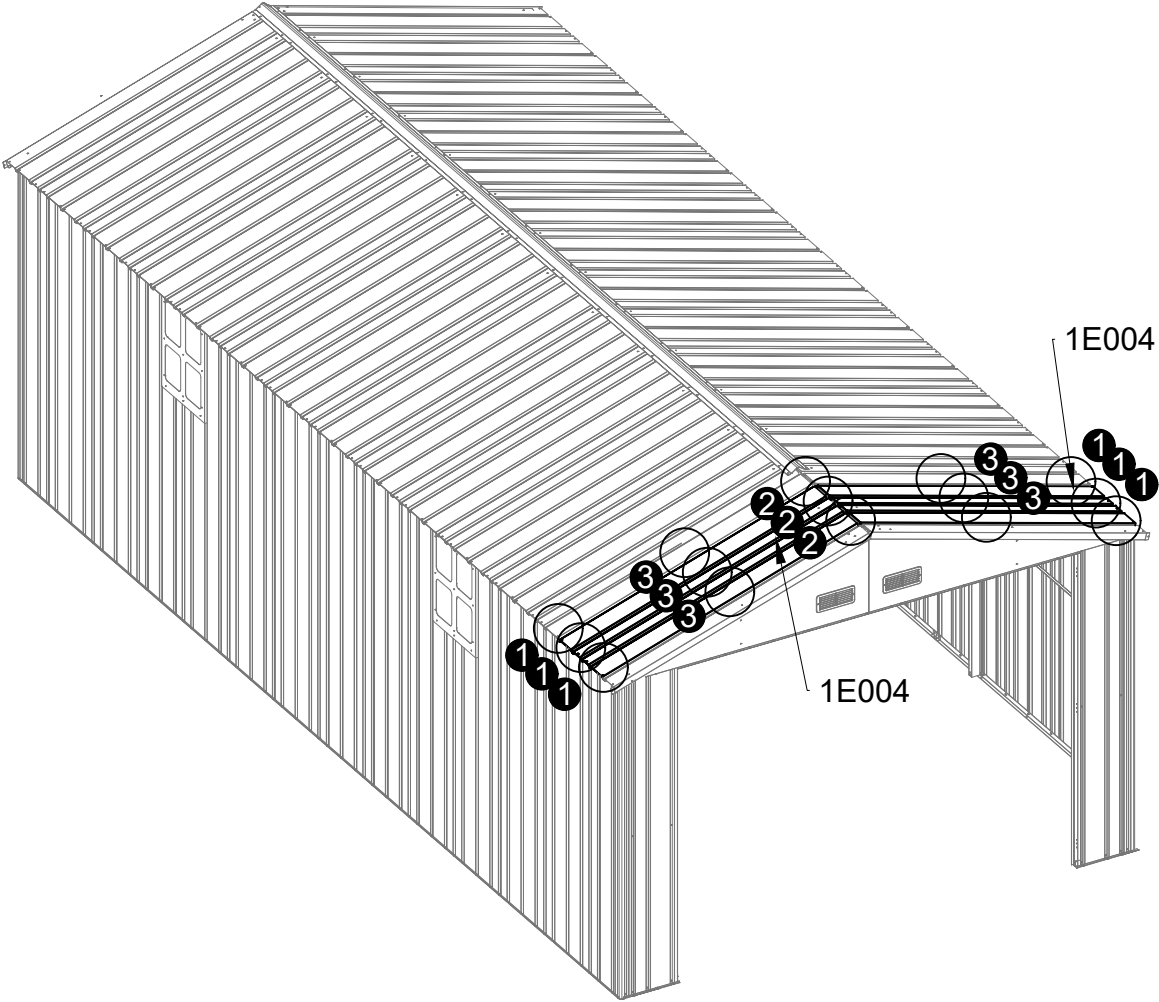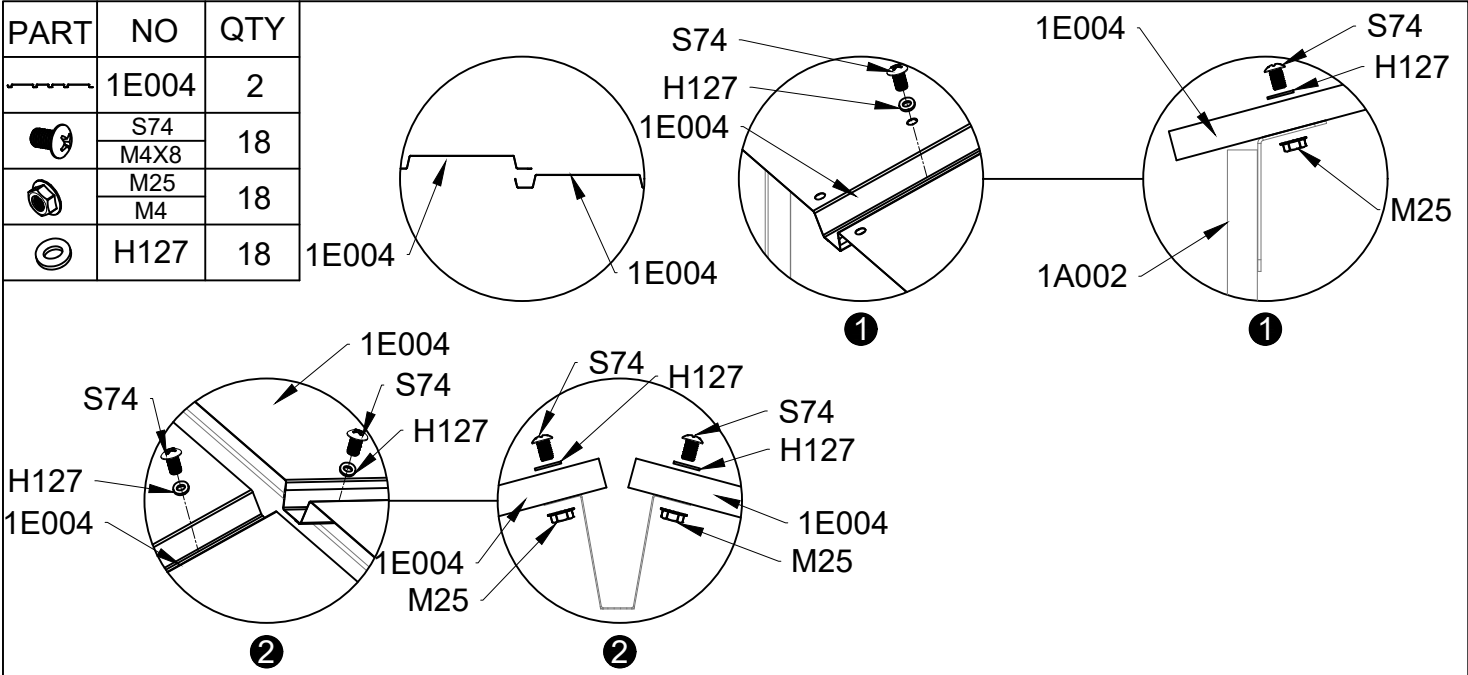




PART	NO	QTY
	3H006	1
	D356	1
	S74 M4X8	4
	M25 M4	4
	H127	4

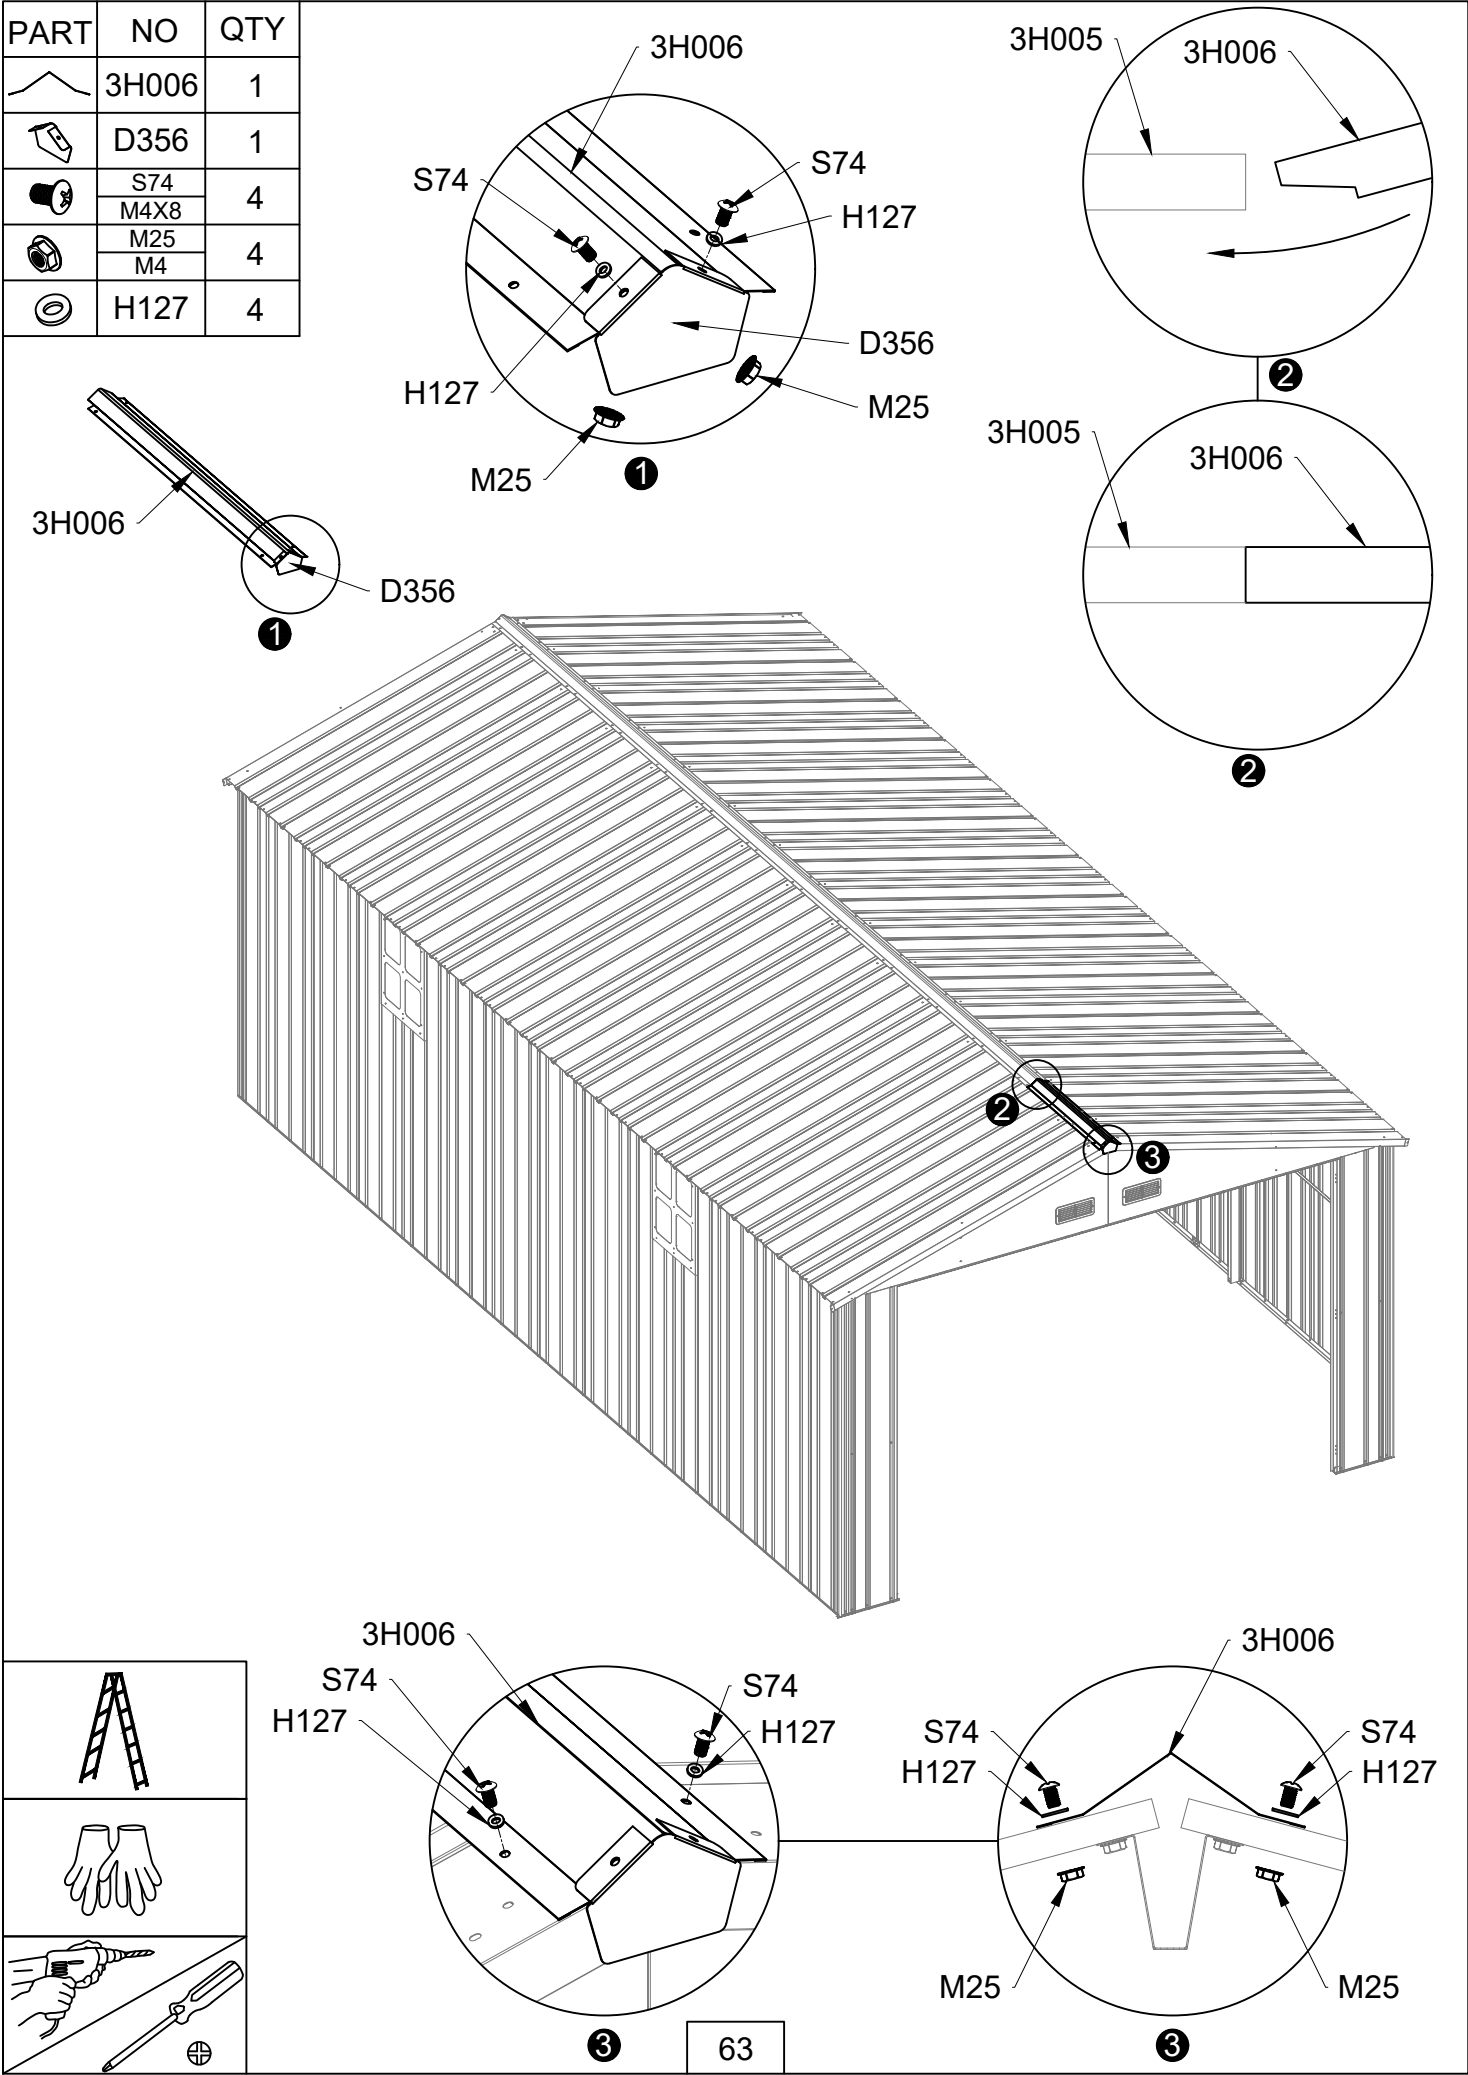




PART	NO	QTY
	3J008	2
	3J007	2
	3J012	4
	S74	76
	M4X8	
	M25	76
	M4	

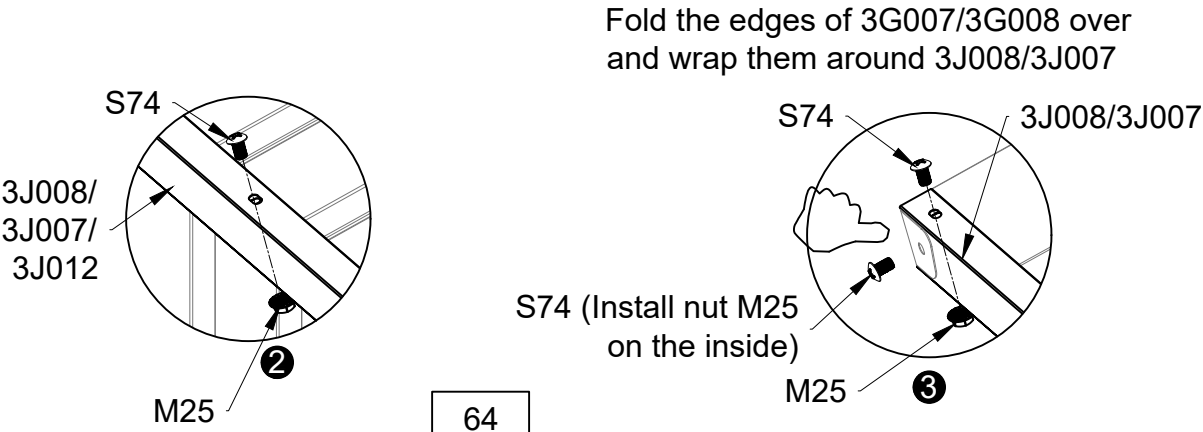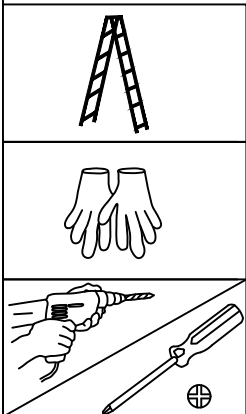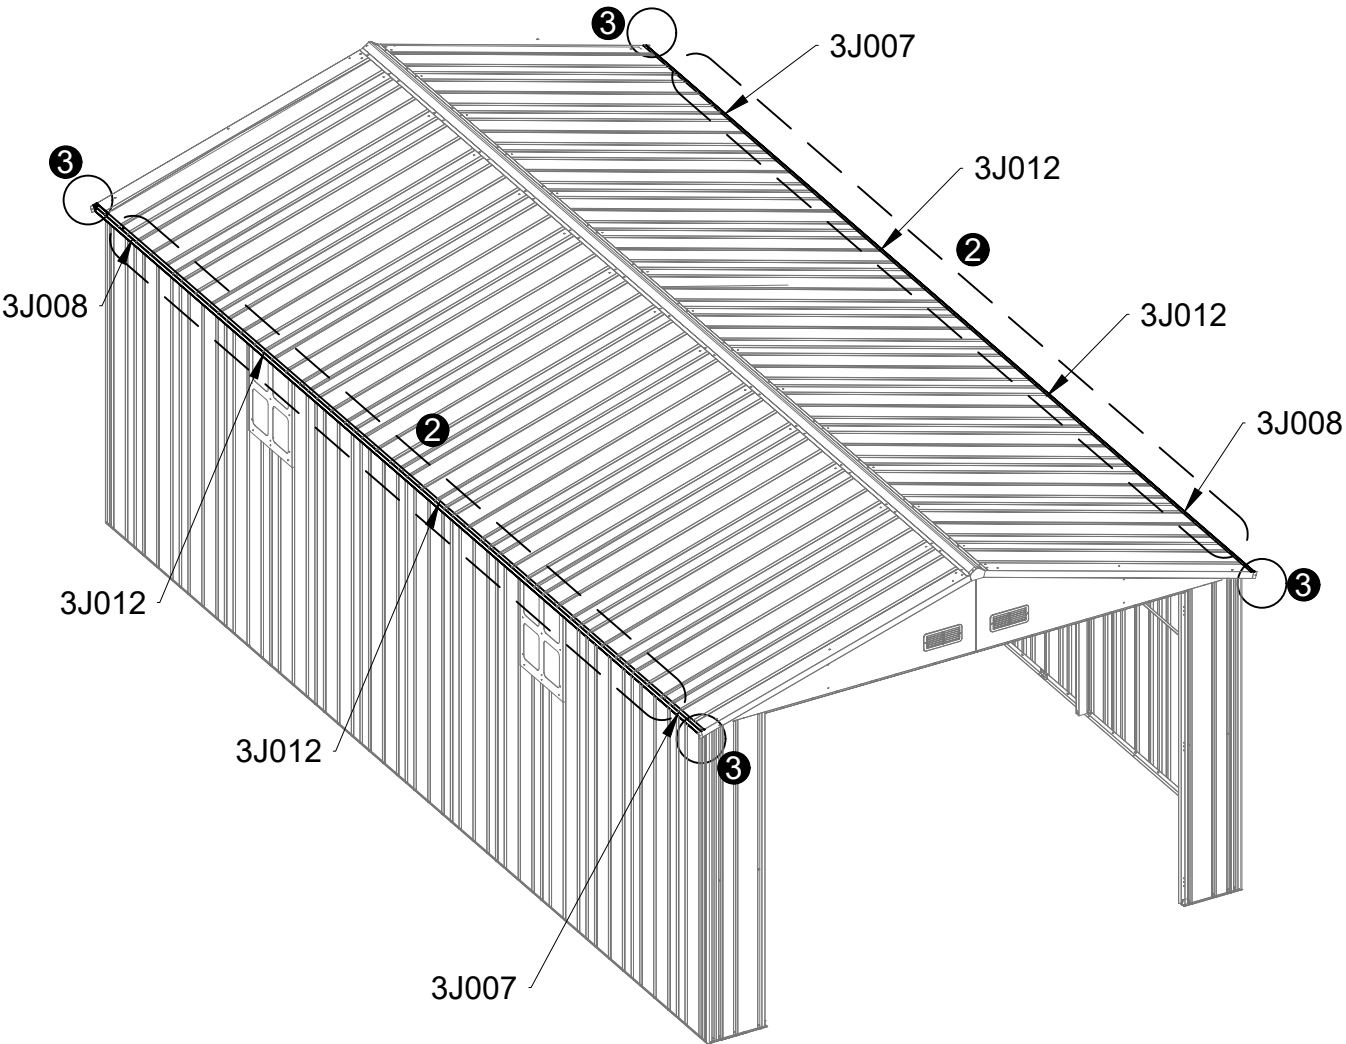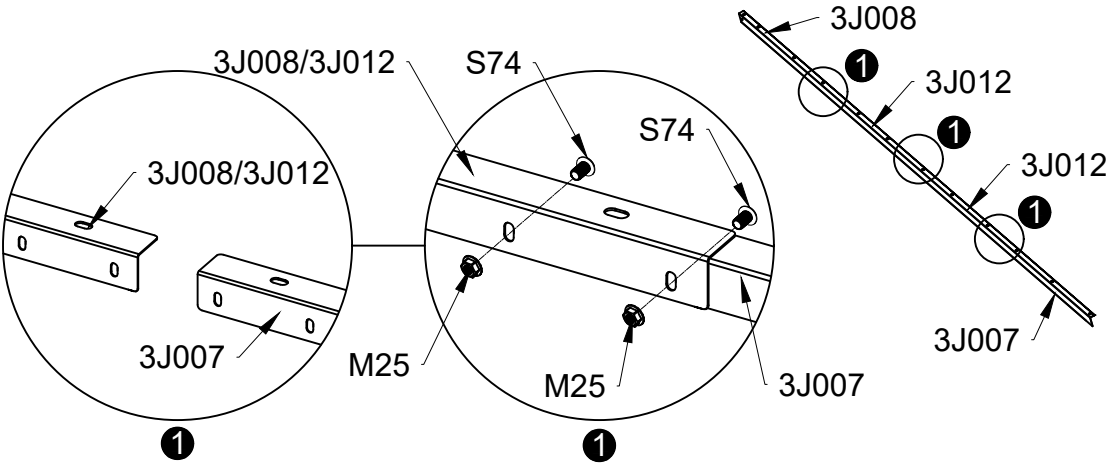




PART	NO	QTY
	D354	6
	S75 M4X10	18
	M25 M4	18

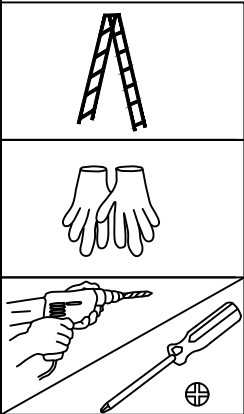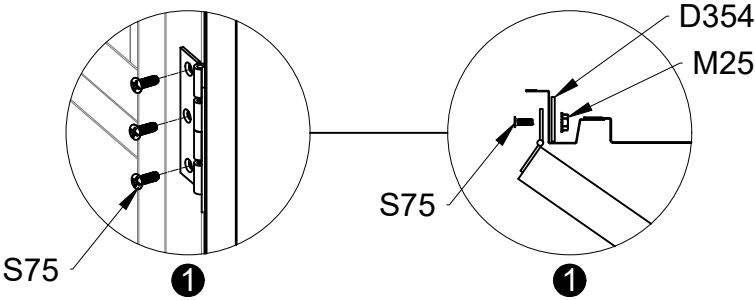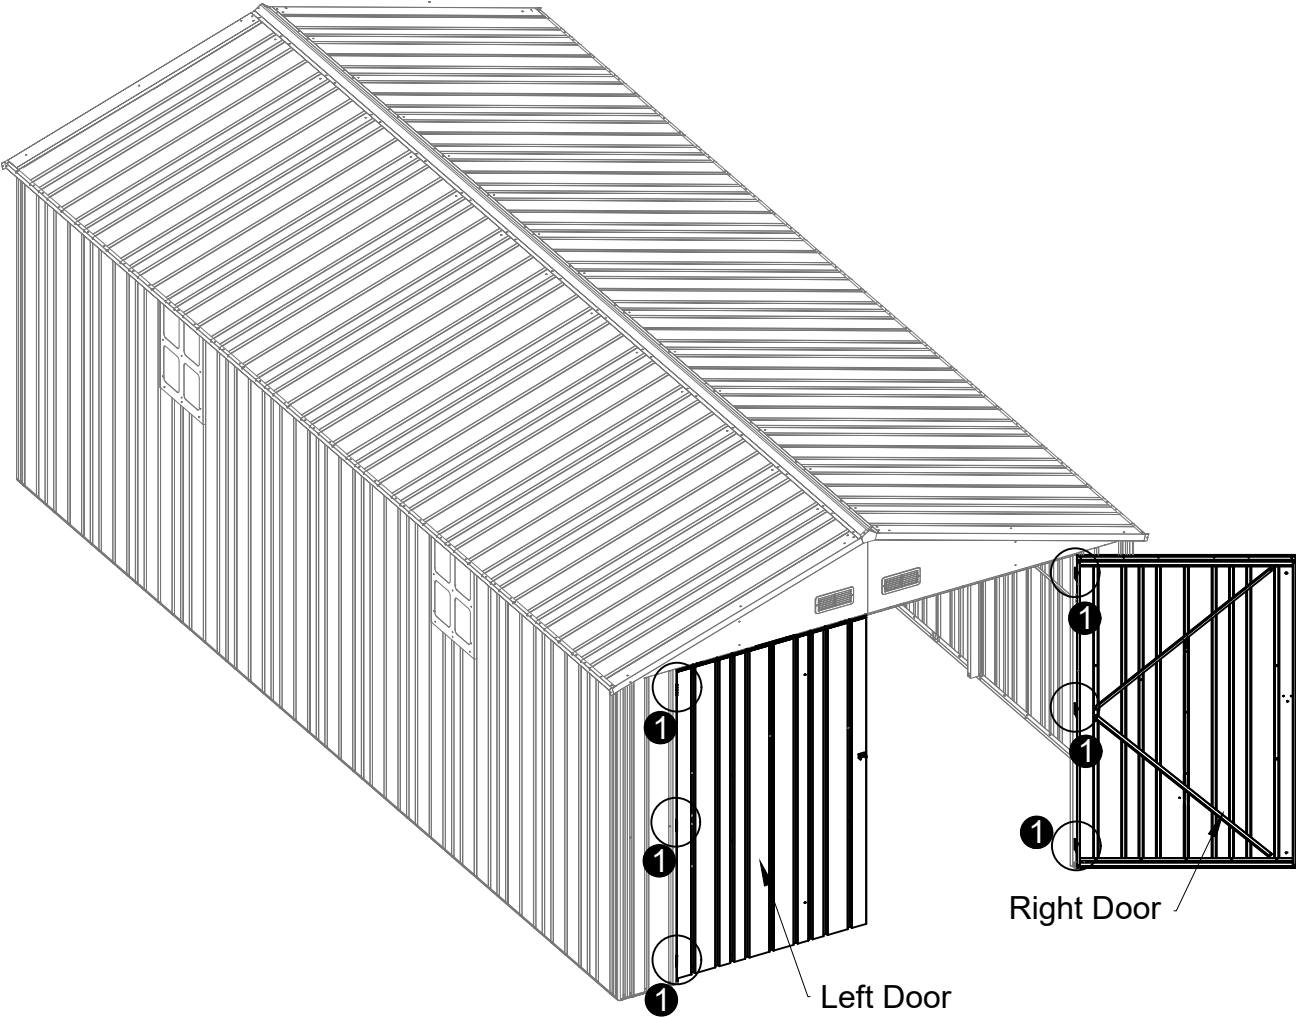

PART	NO	QTY
	D354	3
	S75	9
	M4X10	
	M25	9
	M4	

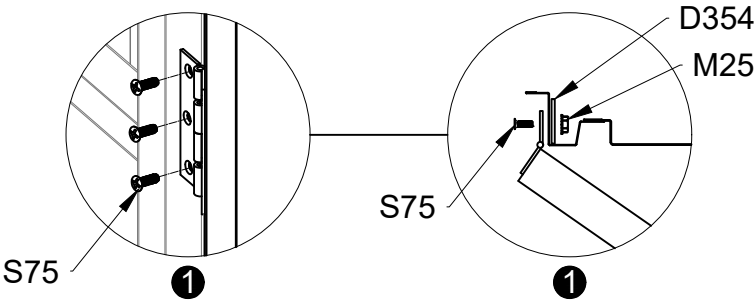
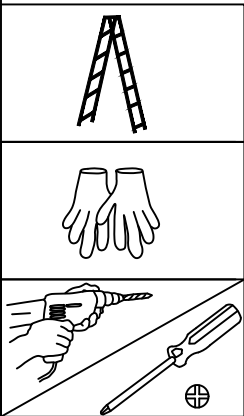
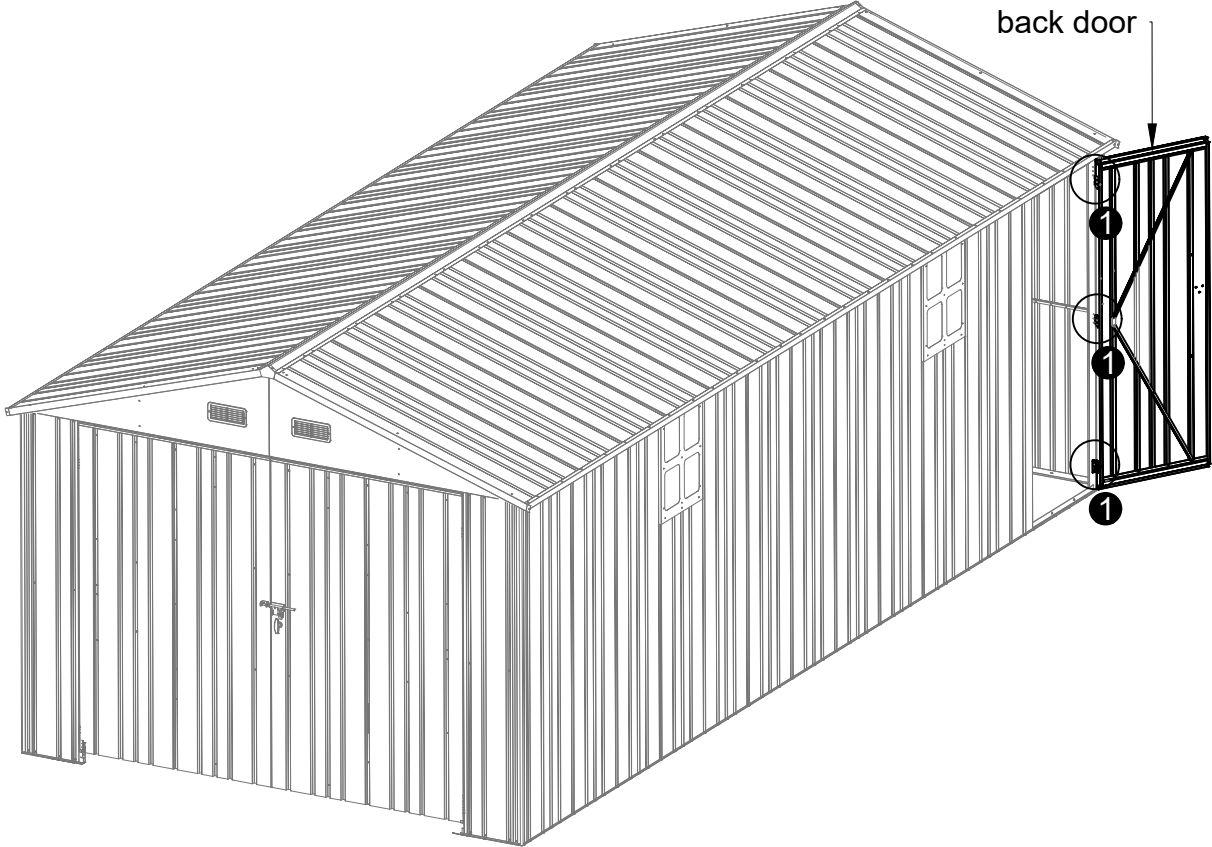


PART	NO	QTY
	H145	2
	S74	10
	M4X8	
	M25	10
	M4	

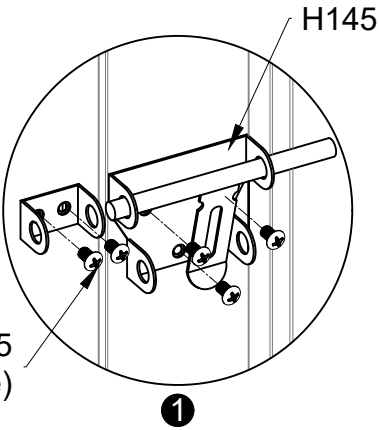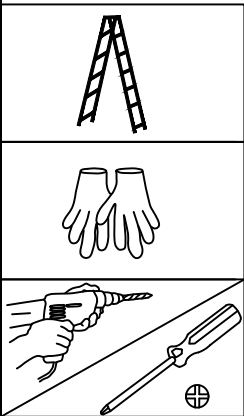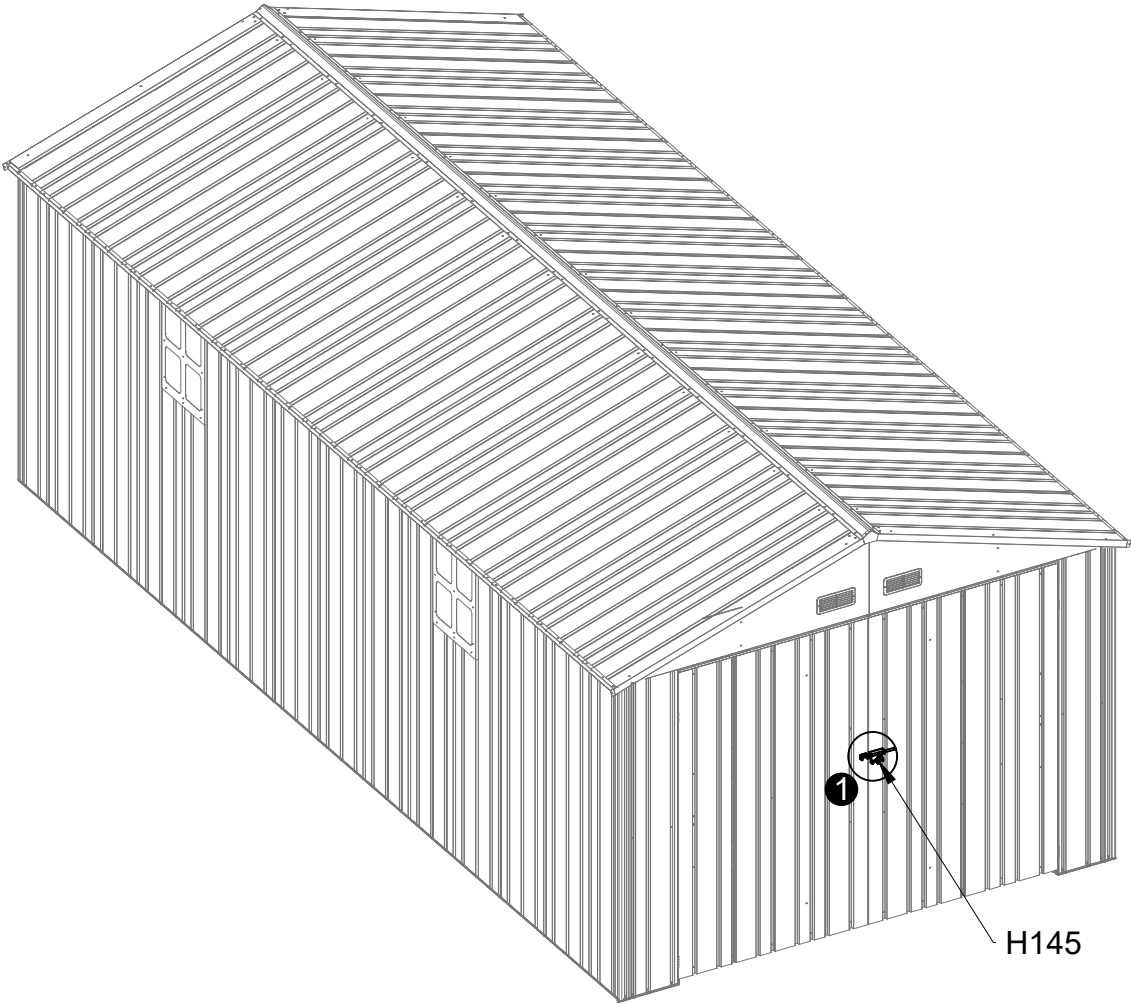

S74 (Install nut M25
on the inside)

The rear door is installed using the same
method.

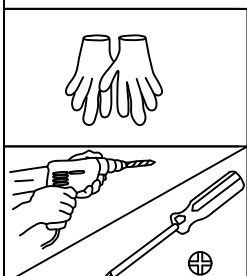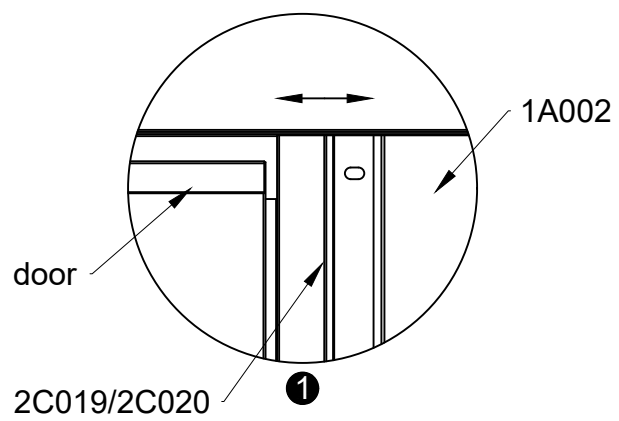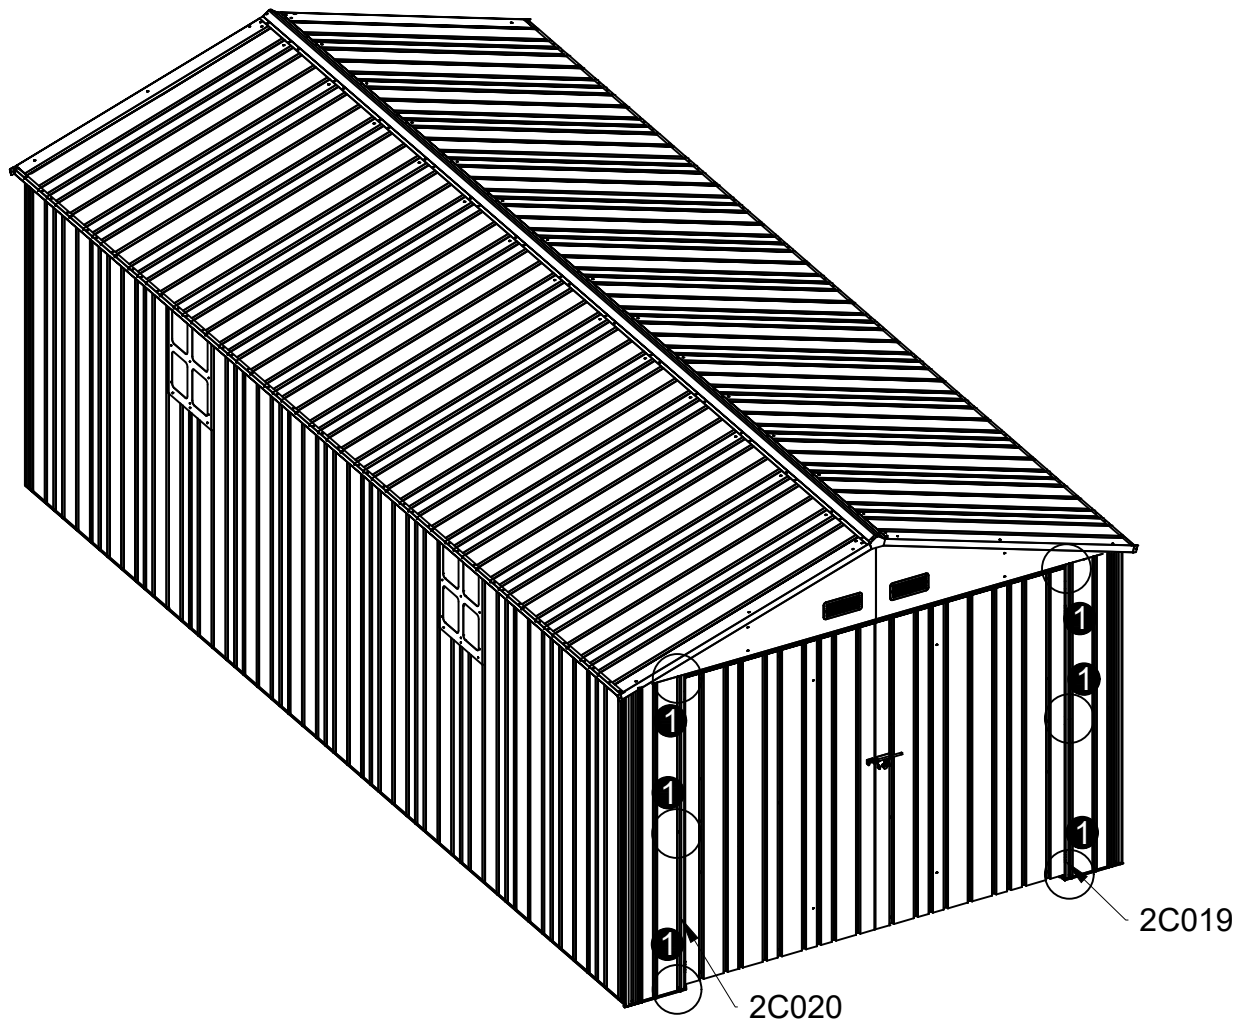

You can adjust the parallelism of the door by moving 2C019/2C020 left or right using these six screws.