



ASSEMBLY INSTRUCTIONS

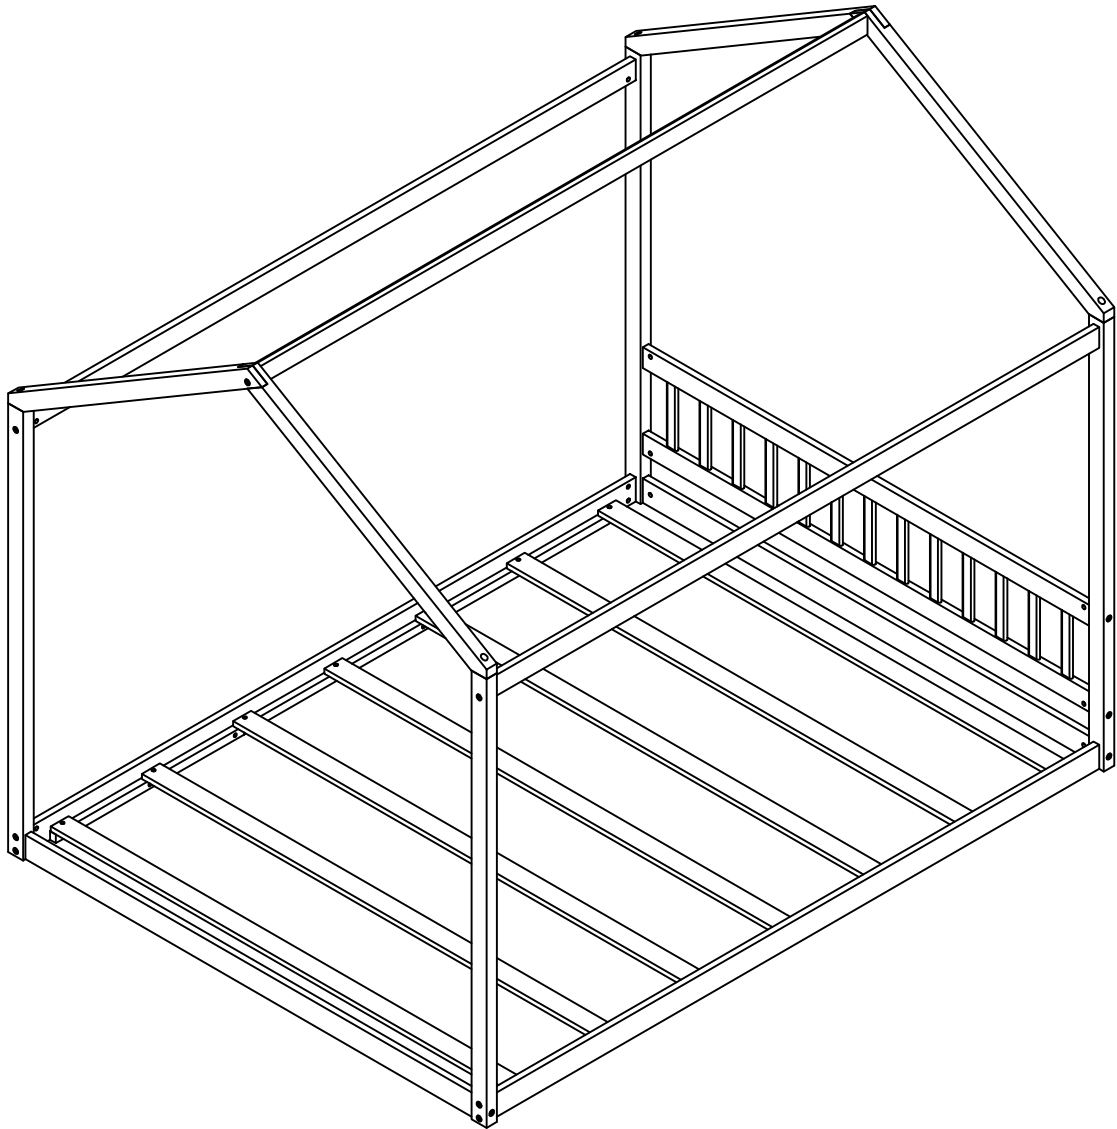

DETAIL VIEW

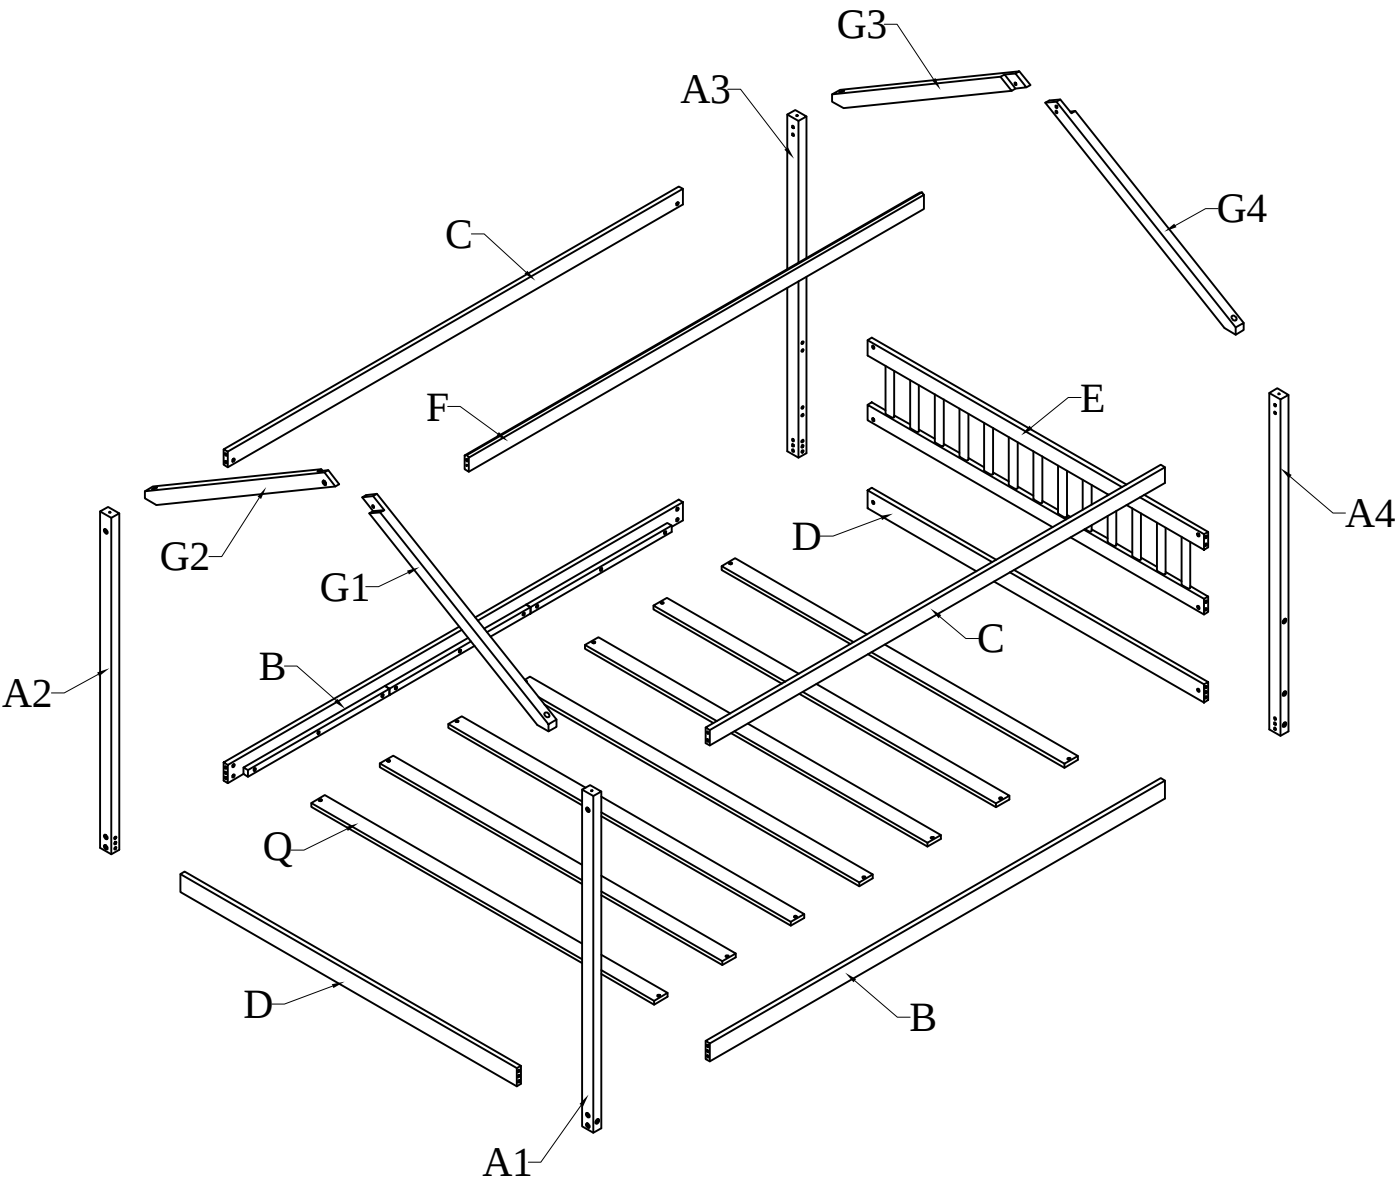


BOX

A1



Front leg - left (1pc)

A2



Back leg - left (1pc)

A3




Back leg - right (1pc)

A4




Front leg - right (1pc)

B

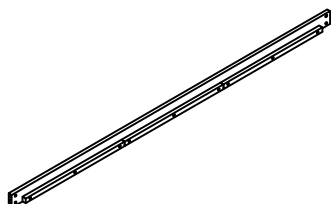


Side rail (2pcs)

C

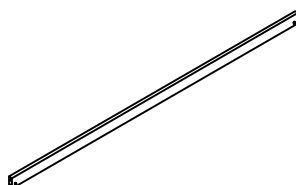


Guardrail (2pcs)

D

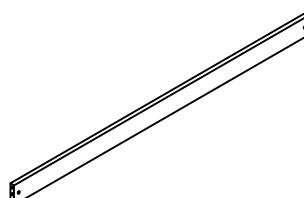


Horizontal rail (2pcs)

E

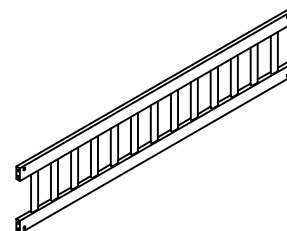


Side frame (1pc)

F

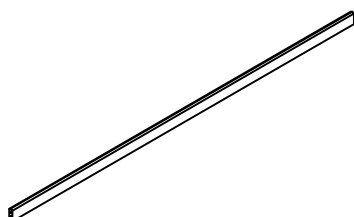


Guard rail top (1pc)

G1

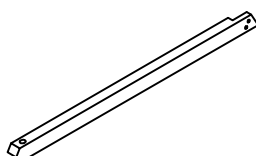


Vertical bar front - left
(1pc)

G2

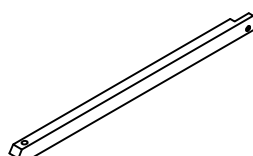


Vertical bar back - left
(1pc)

G3

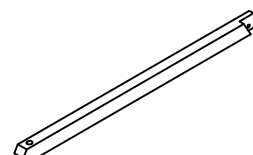


Vertical bar back - right
(1pc)

G4

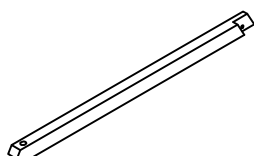







Vertical bar front - right
(1pc)


Q

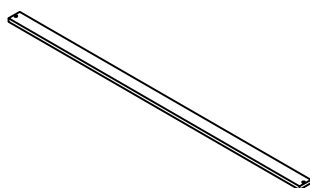

Slats (7pcs)


HARDWARE LIST

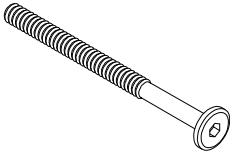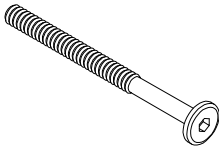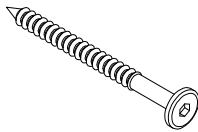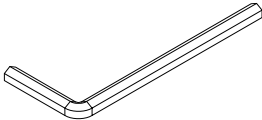1  Hex - Head bolts Ø1/4" * 90 - 8pcs	2  Hex - Head bolts Ø1/4" * 80 - 12pcs	3  Horizontal - Hold bolts Ø1/4" - 20pcs	4  Hexagonal bolts catch wood Ø6 * 70 - 6pcs
5  Wood crews M4 * 25 - 14pcs	6  Wood dowel Ø8 * 30 - 22pcs	7  Allen key K4 - 1pc	




Assembly Tools Required (Not Included)


STEP 1

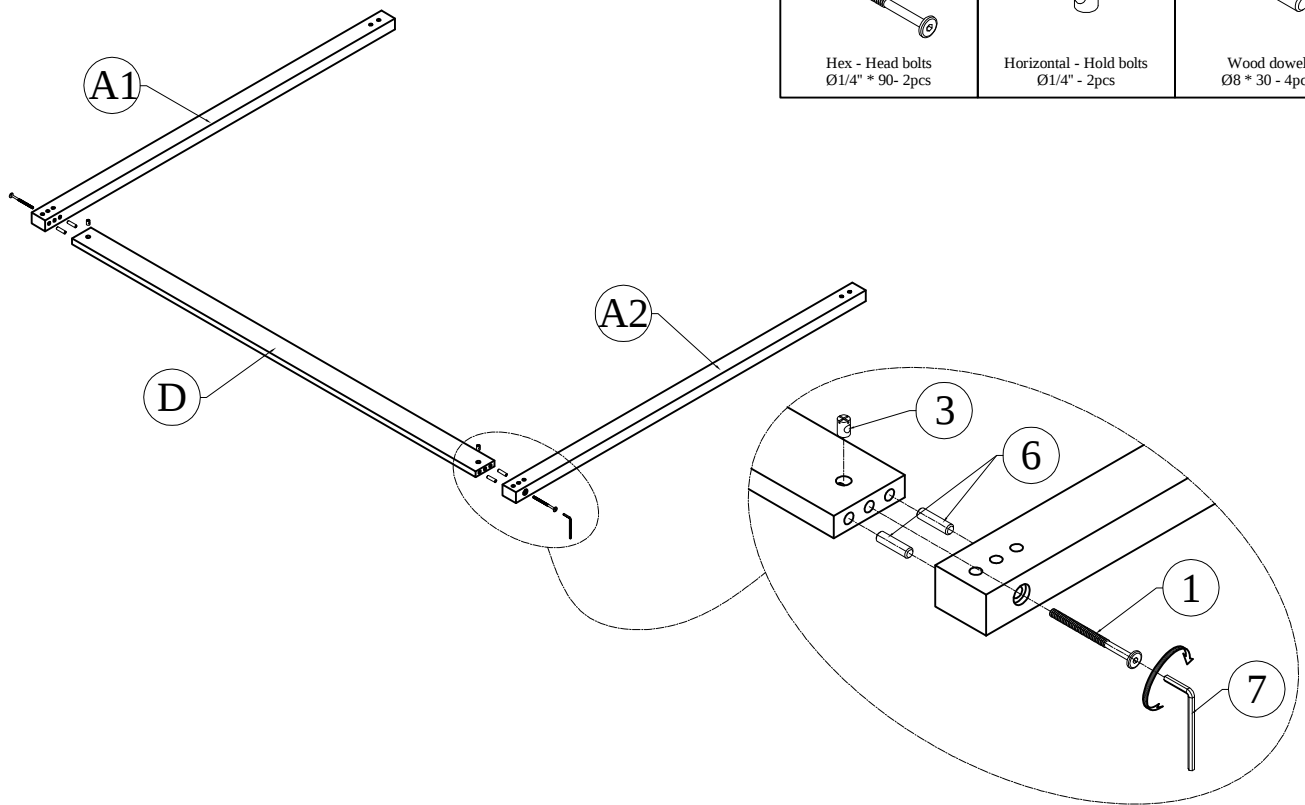


STEP 2

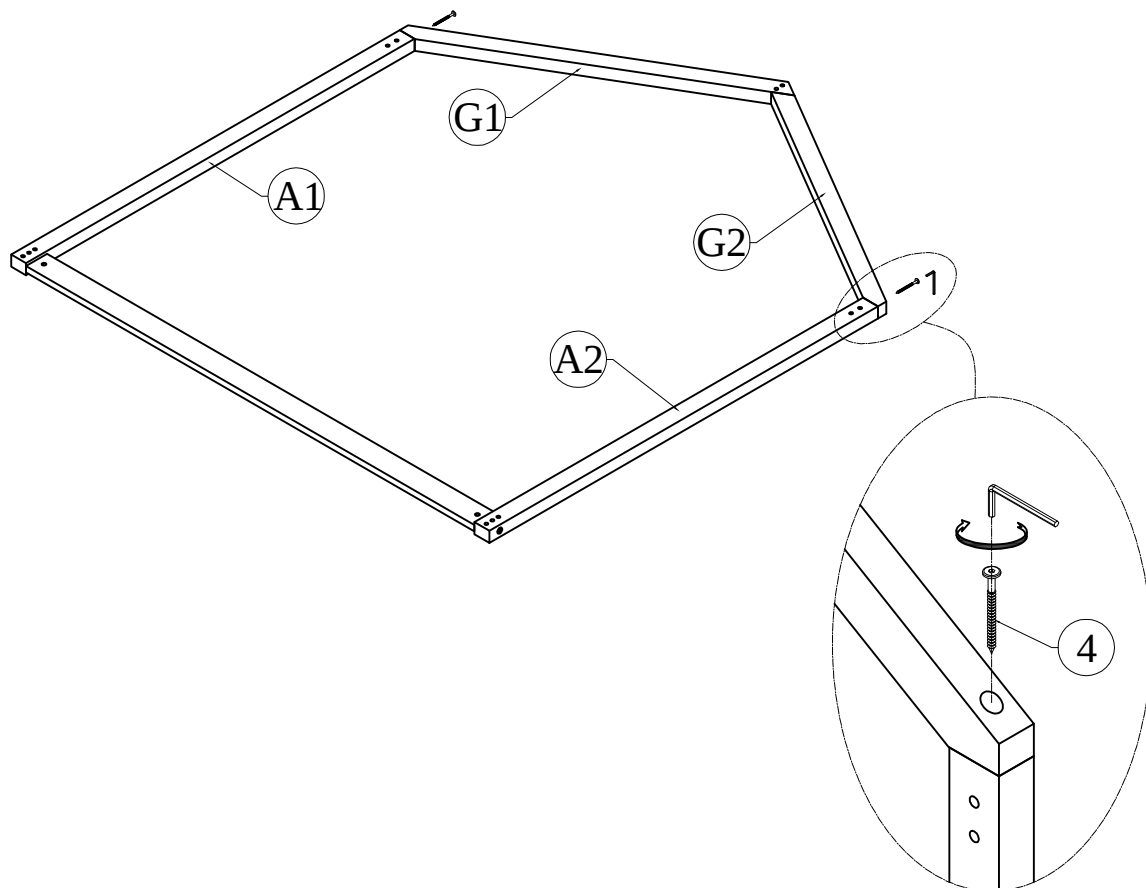

STEP 3

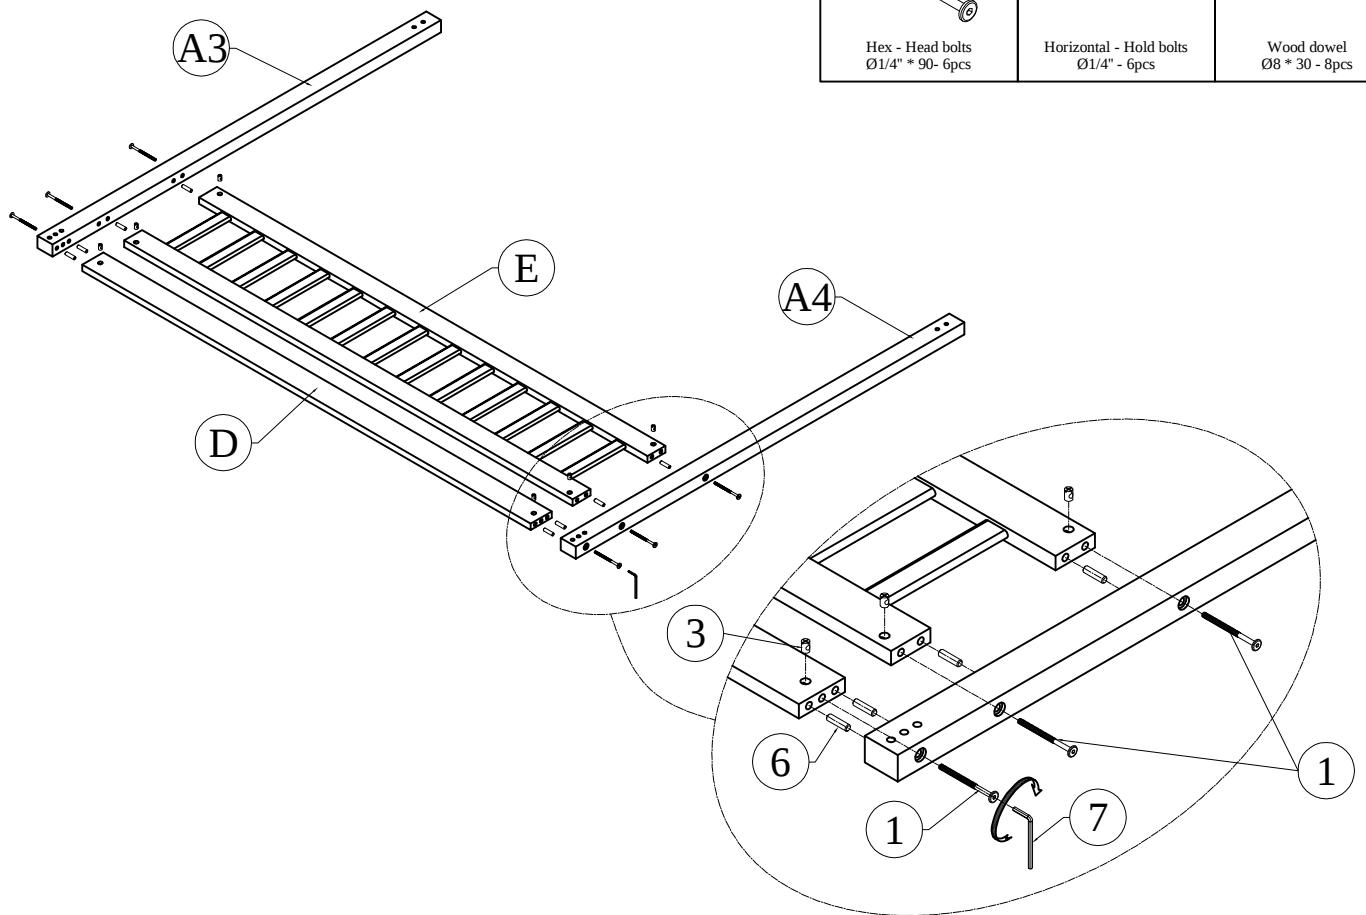

STEP 4

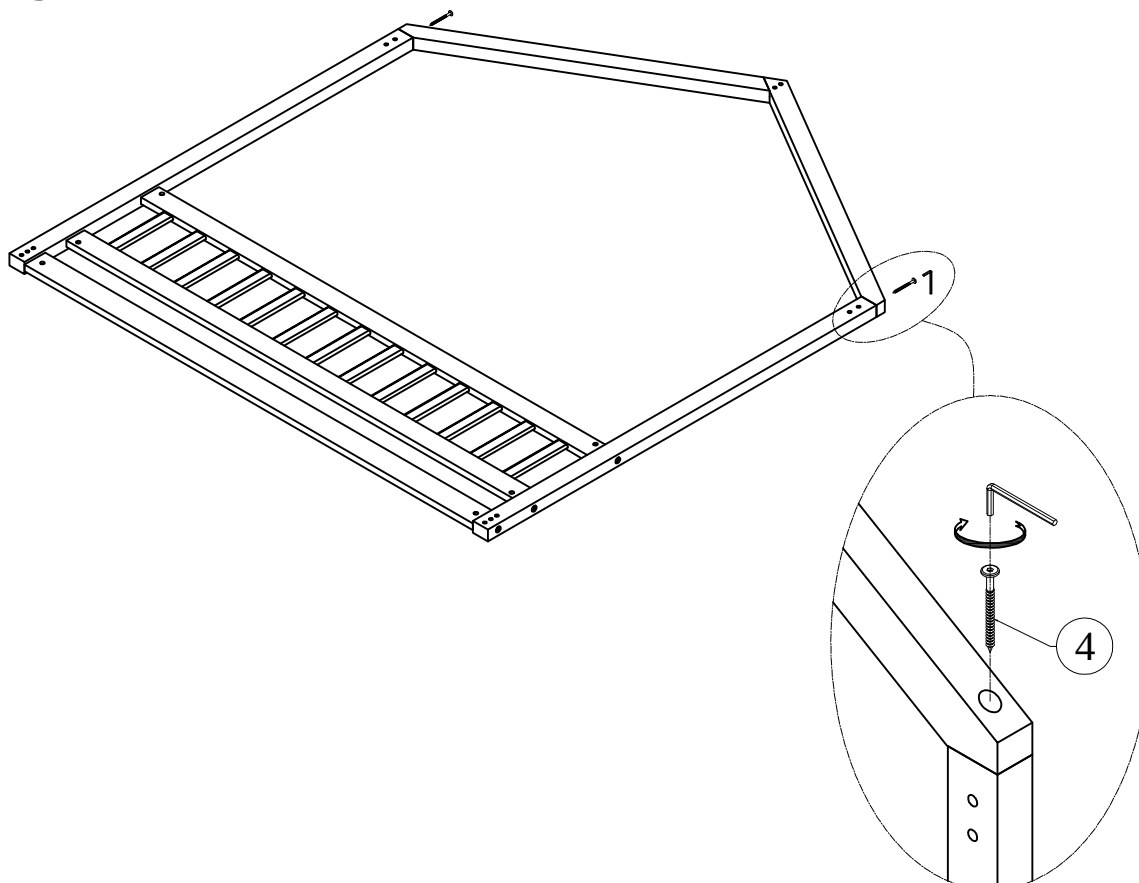

4

Hexagonal bolts catch wood
Ø6 * 70 - 2pcs

STEP 5

2



Hex - Head bolts
Ø1/4" * 80 - 12pcs

3



Horizontal - Hold bolts
Ø1/4" - 12pcs

4




Hexagonal bolts catch wood
Ø6 * 70 - 2pcs

6



Wood dowel
Ø8 * 30 - 10pcs


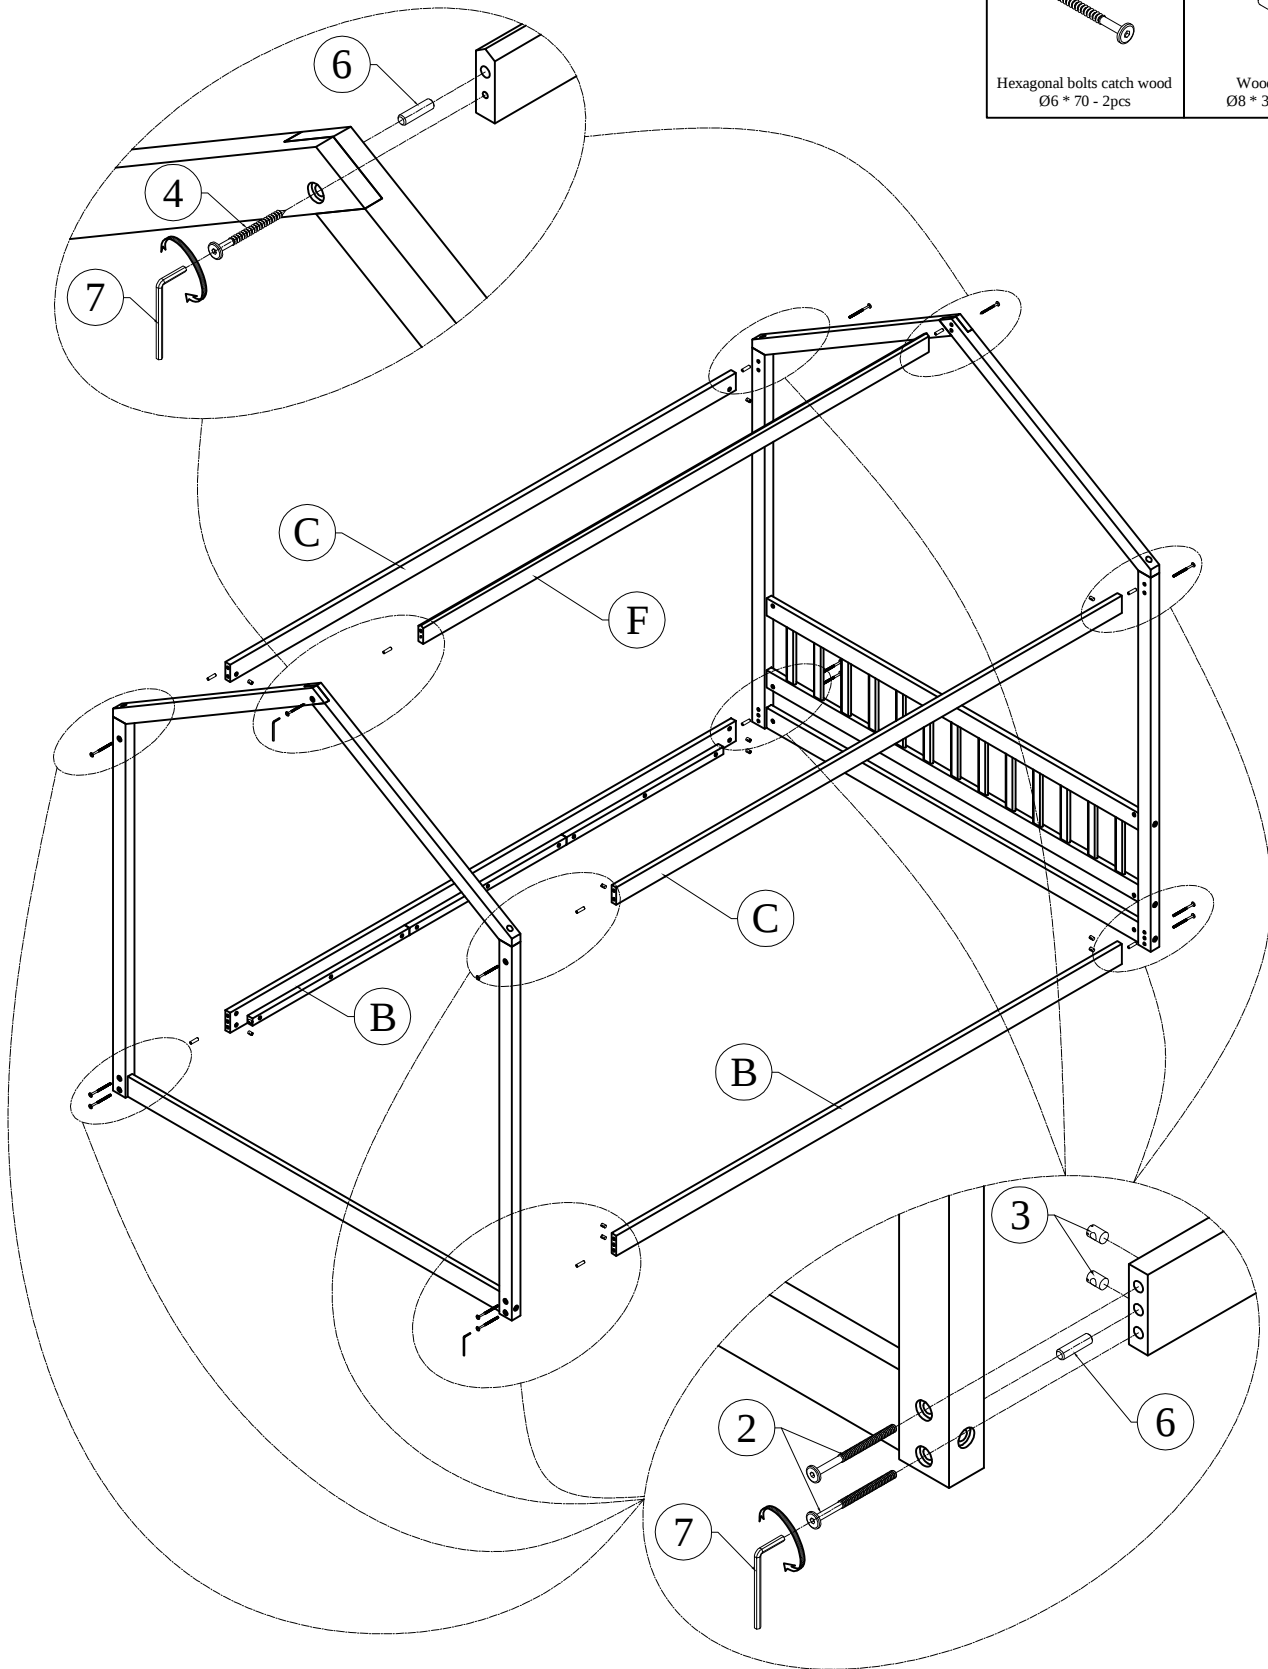


STEP 6

5



Wood crews
M4 * 25 - 14pcs

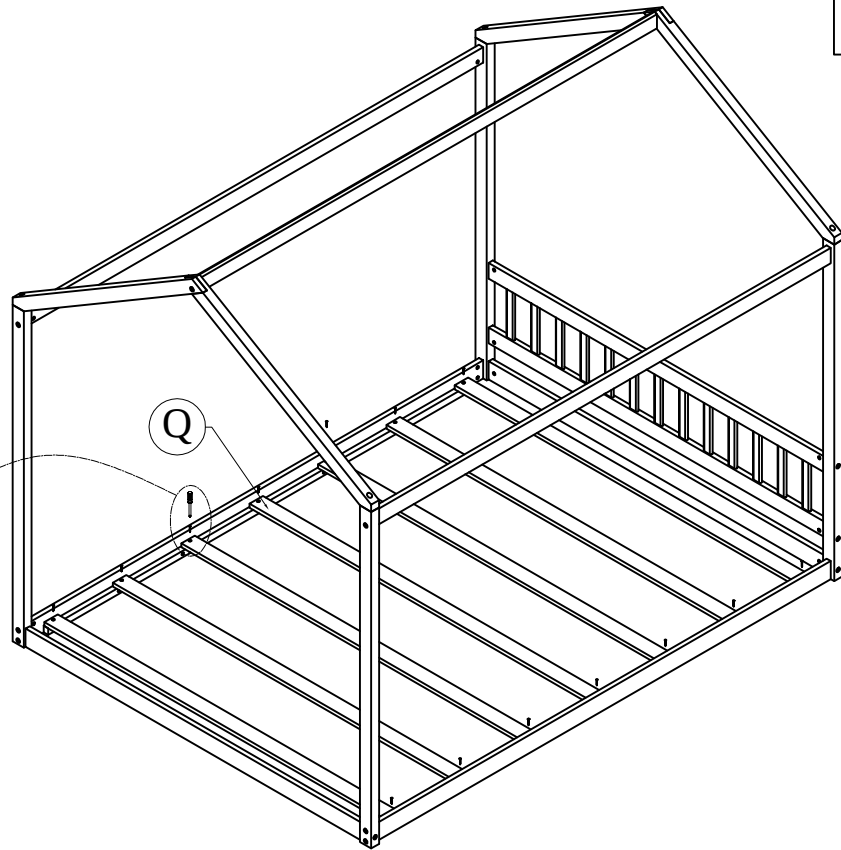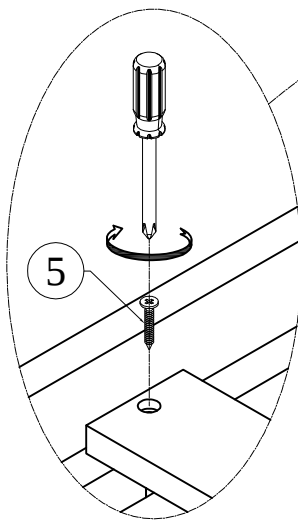

COMPLETED

