



Installation Instruction

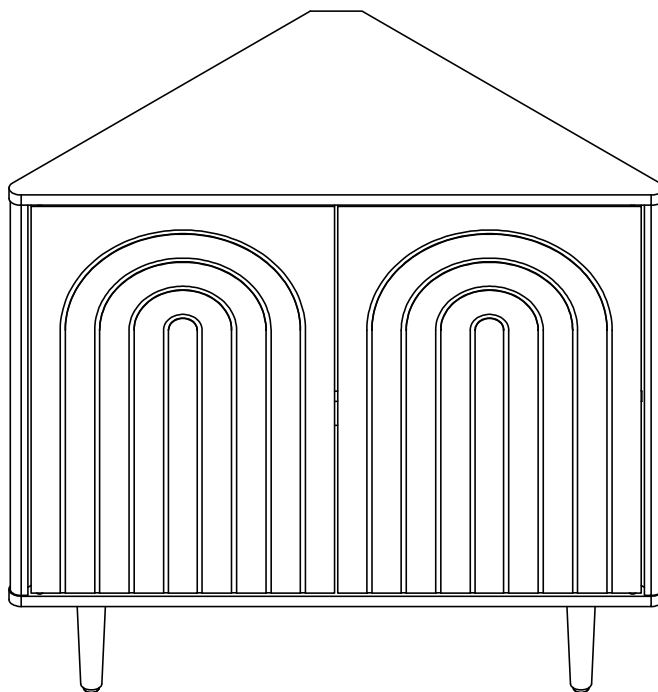


Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

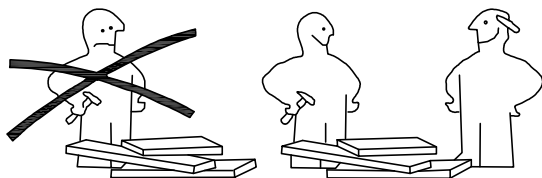


What' included


Code	Description	Qty
A	Cam Bolt M6X35MM	12
B	Cam Lock15X9MM	12
C	Wooden Dowel M8X30MM	12
D	Screw M4X40MM	8
E	Screw M3.5X14MM	14
F	Hole position sticker	12
G	The back button	4
H	Nylon Strap	2
I	Adjustable Foot	3
J	Anchor	2
K	Screw M3.0X14MM	10
L	Screw M3.0X20MM	2
M	Door Rebound Device	2
N	Door Rebound Device Holder	2
O	The metal plate	3
P	Shelf Holder	4
Q	Metal handle	2
R	The bolt	4

The Hardwares


(A)




(B)



(C)



(D)




(E)




(F)




(G)



(H)



(I)



(J)




(K)




(L)




(M)



(N)




(O)



(P)



(Q)



(R)




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)



Included Accessories



Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Backboard	1
6	The door	1
7	The door	1
8	The move layer board	1
9	Decorative strip	2
10	Solid wood feet	3

The Accessoriess

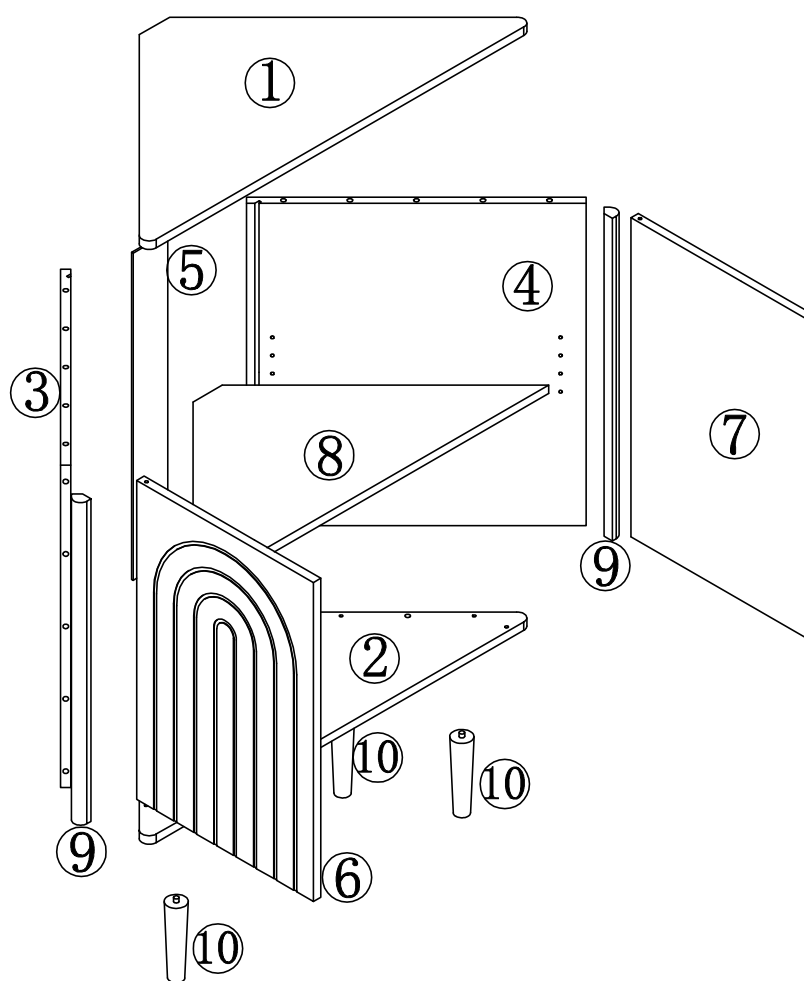


Step 1

A	×6	C	×4
			

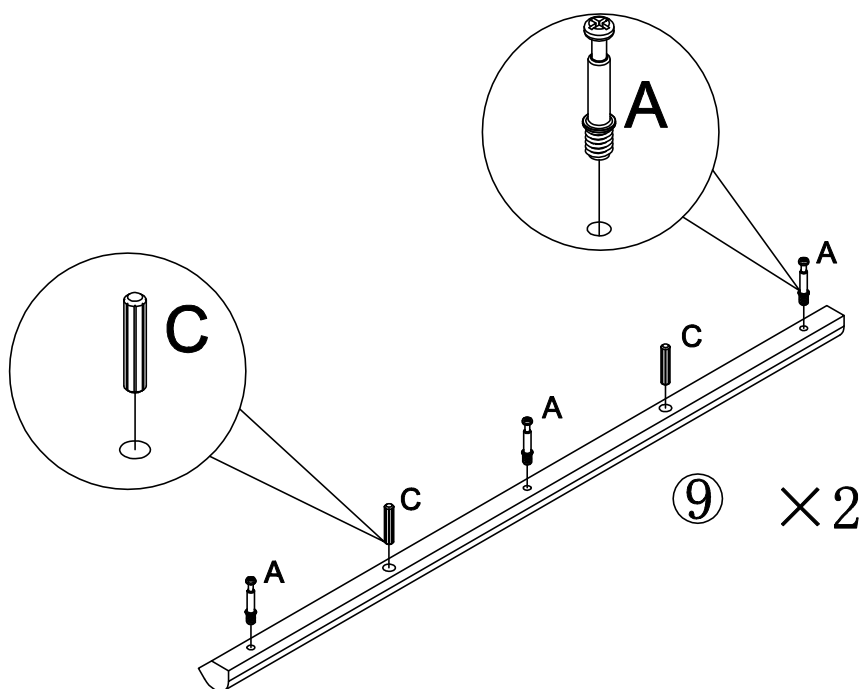

Step 2




B	×6	F	×6
			

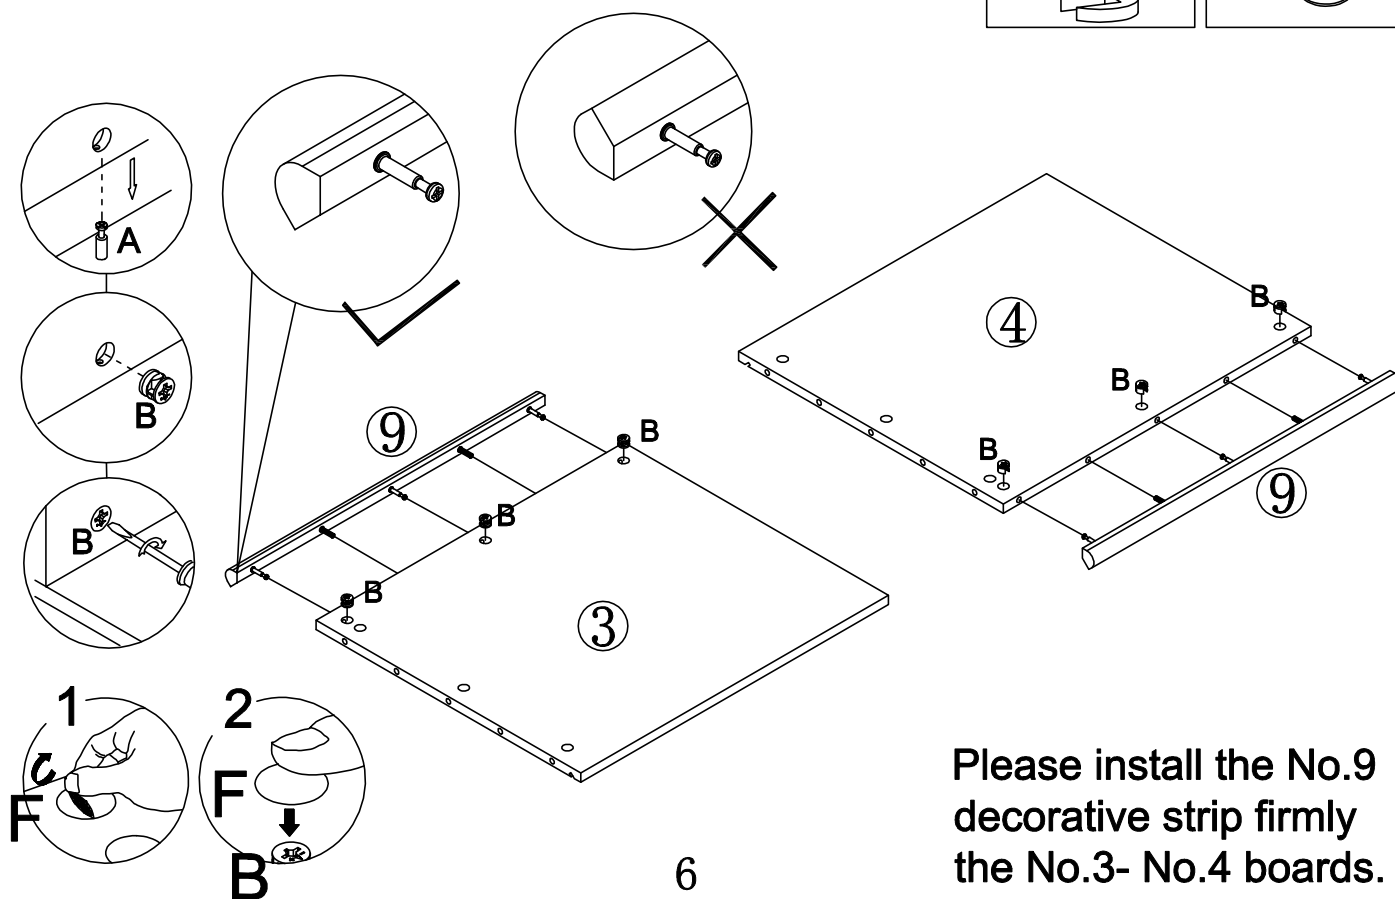


Please install the No.9 decorative strip firmly the No.3- No.4 boards.

Step 3


First, fix accessory N onto the board with accessory K, and then place accessory M on it.



A	×6	K	×4
			
M	×2	N	×2
			

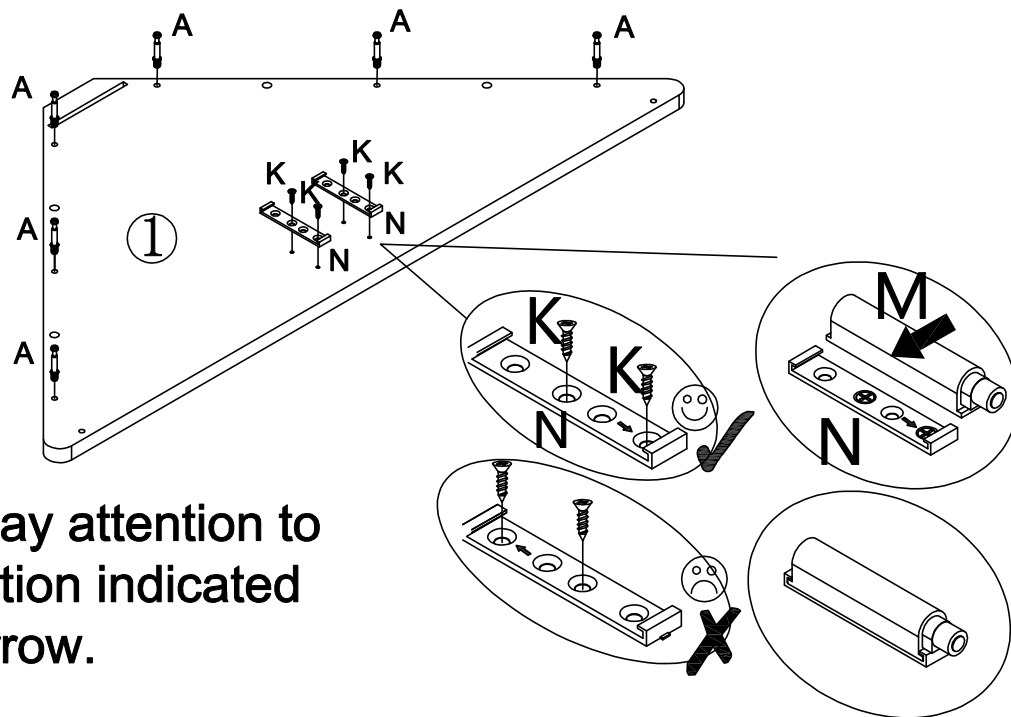


Please pay attention to the direction indicated by the arrow.



Step 4

B	×3	C	×2	F	×3
					

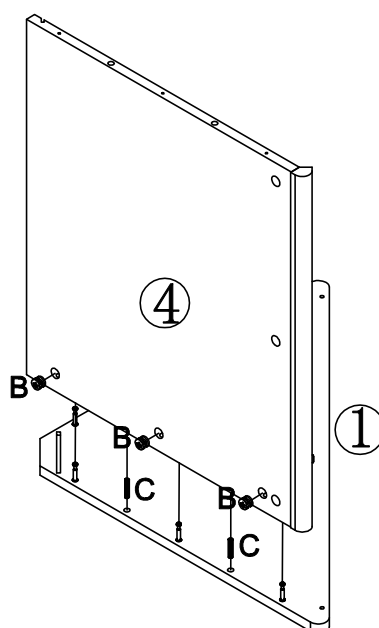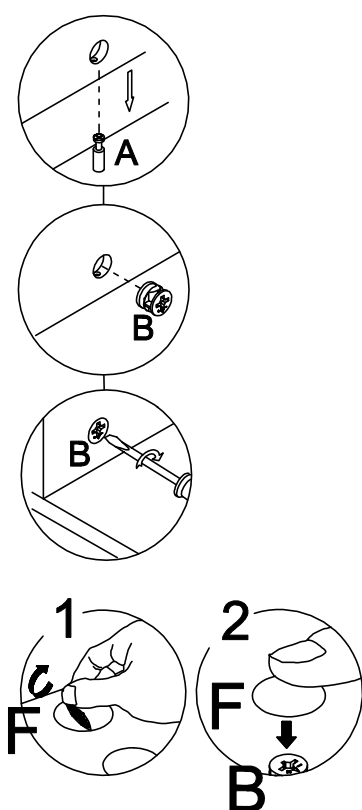



Step 5

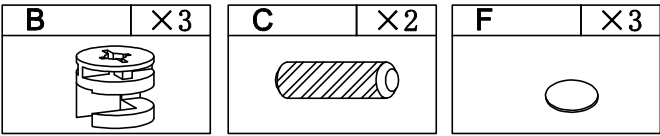B	×3	C	×2	F	×3
					

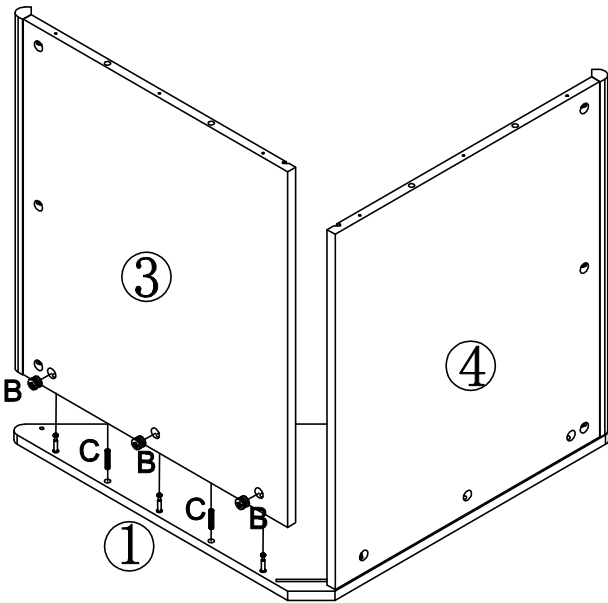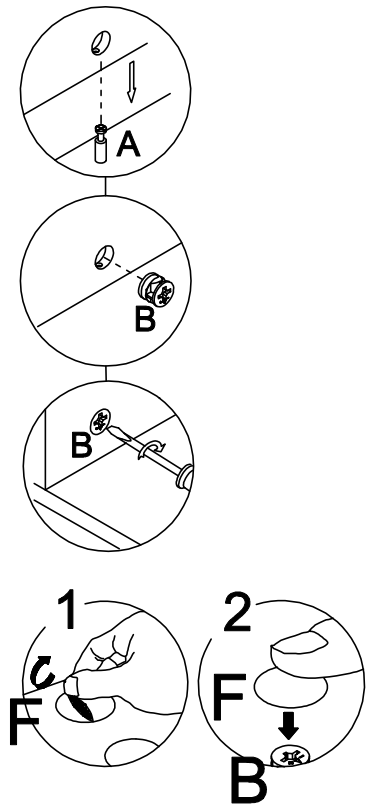



Step 6


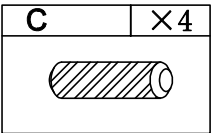
C	×4
	

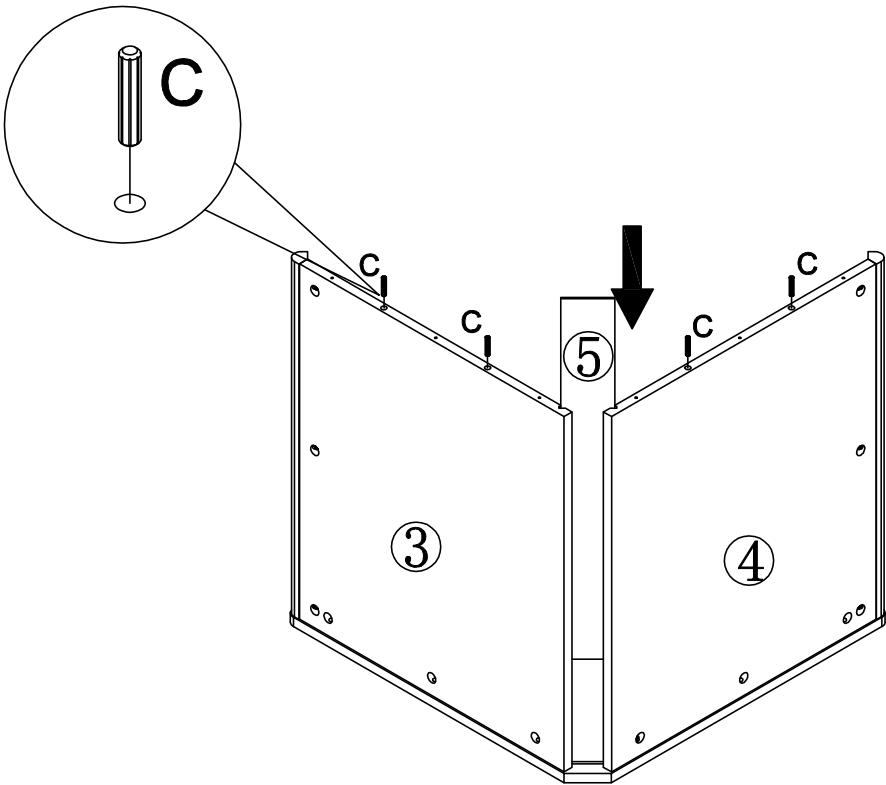


Step 7

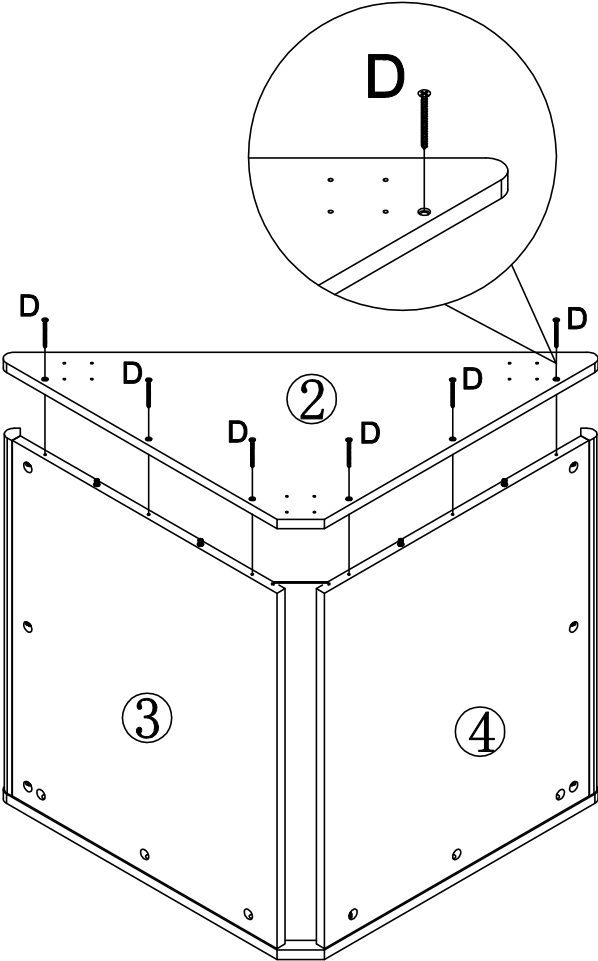


D	×6
	




Step 8

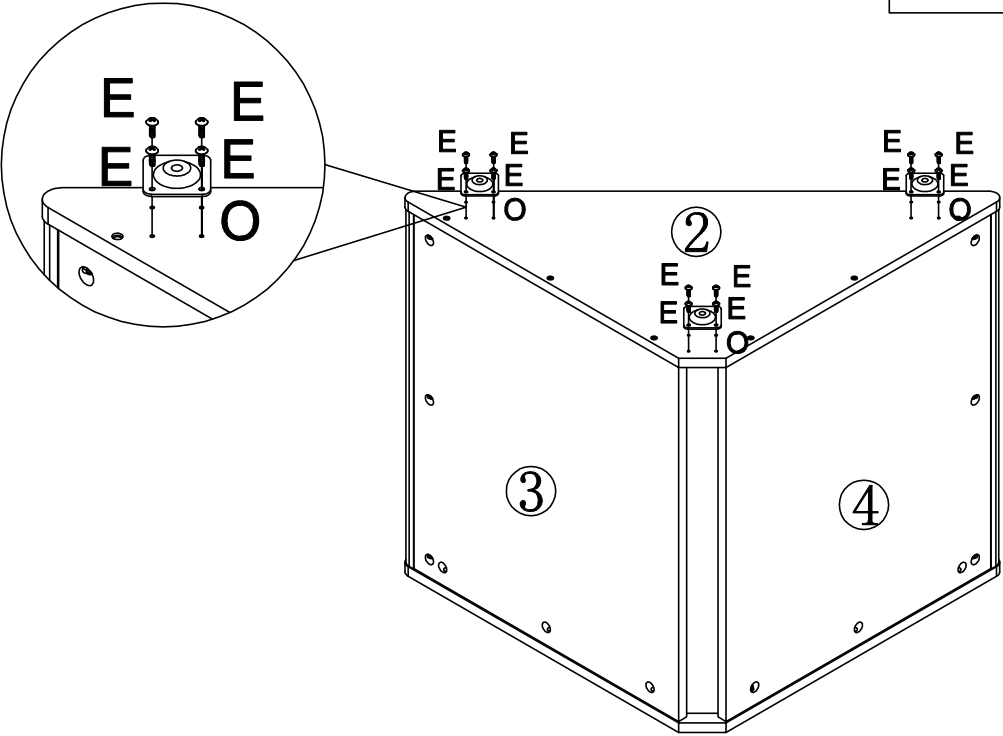



E	×12
	

O	×3
	








Step 9

I	×3
	

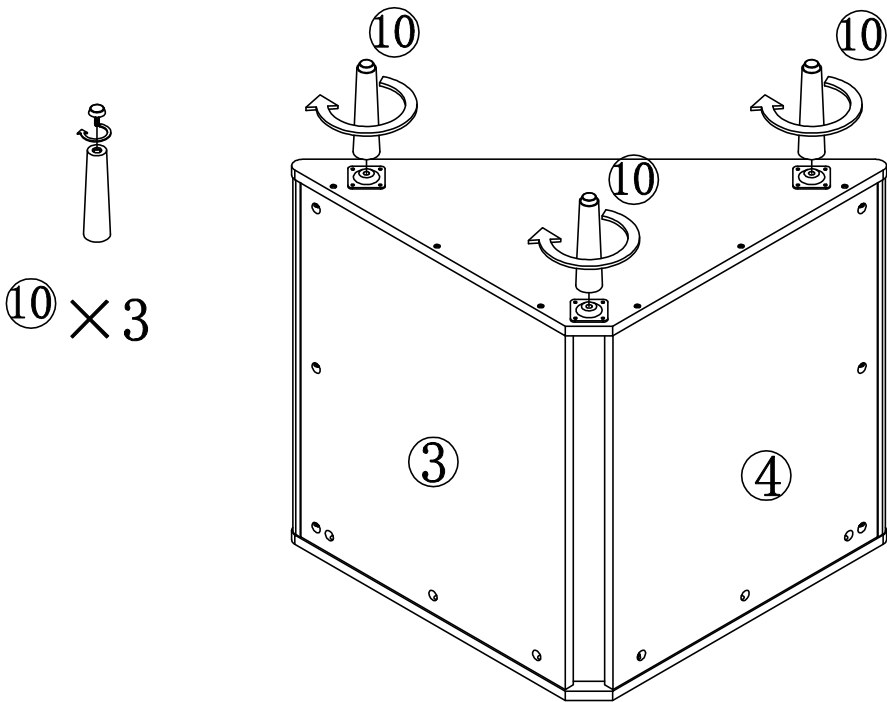


Step 10


G	×4	K	×2	L	×2
		 3.0*14		 3.0*20	
		E	×2	H	×2
					

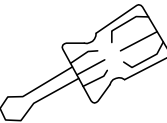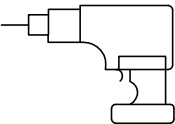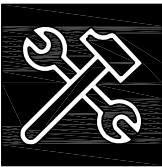
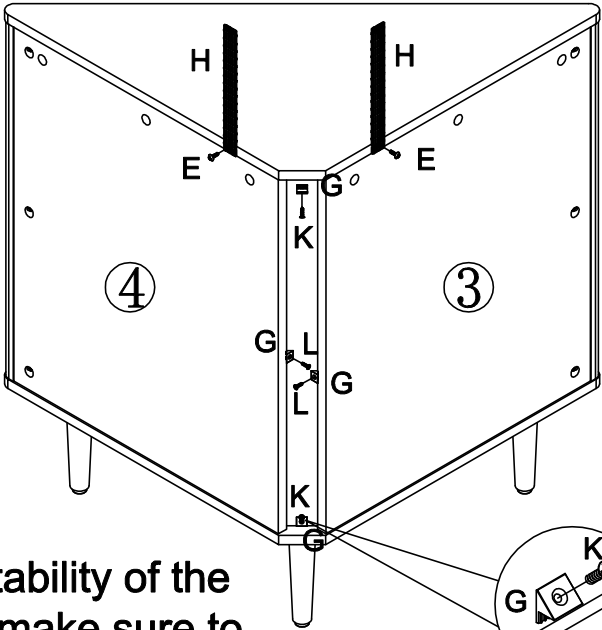


To ensure the stability of the product, please make sure to install this accessory.


Step 11

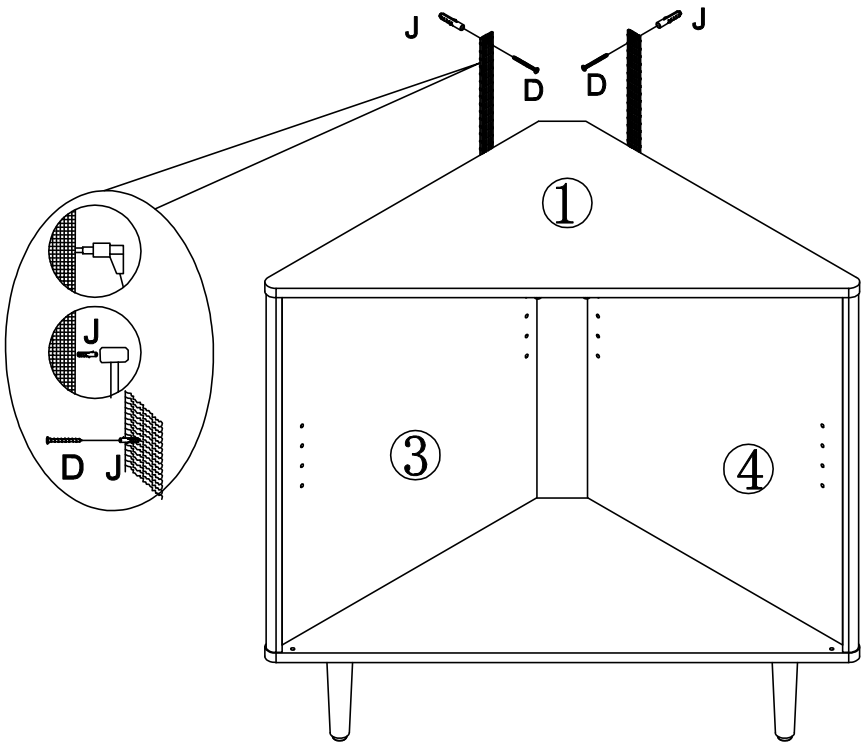


D	×2	J	×2
			




Step 12

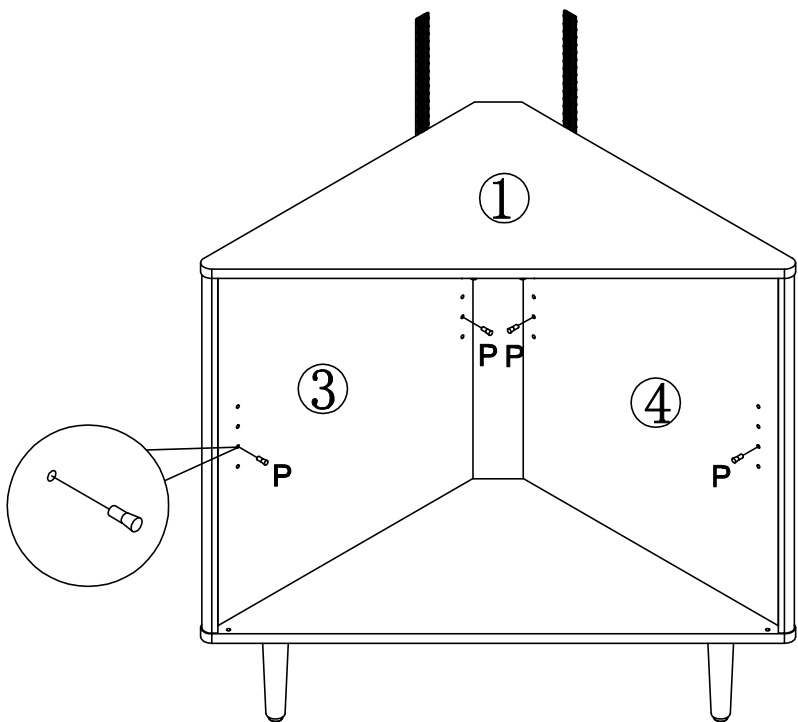

P	×4
	

Step 13

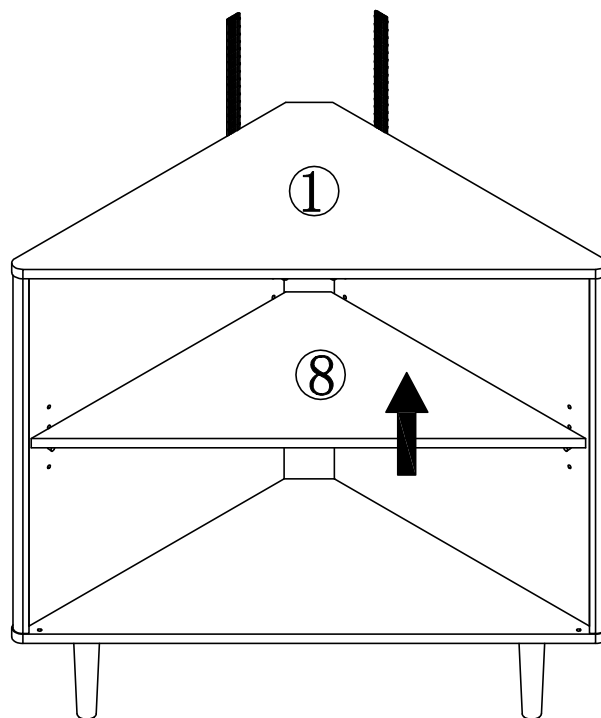


Step 14



Please make sure to distinguish the front and back sides of part Q.

K	×4	Q	×2
			


R	×4
	

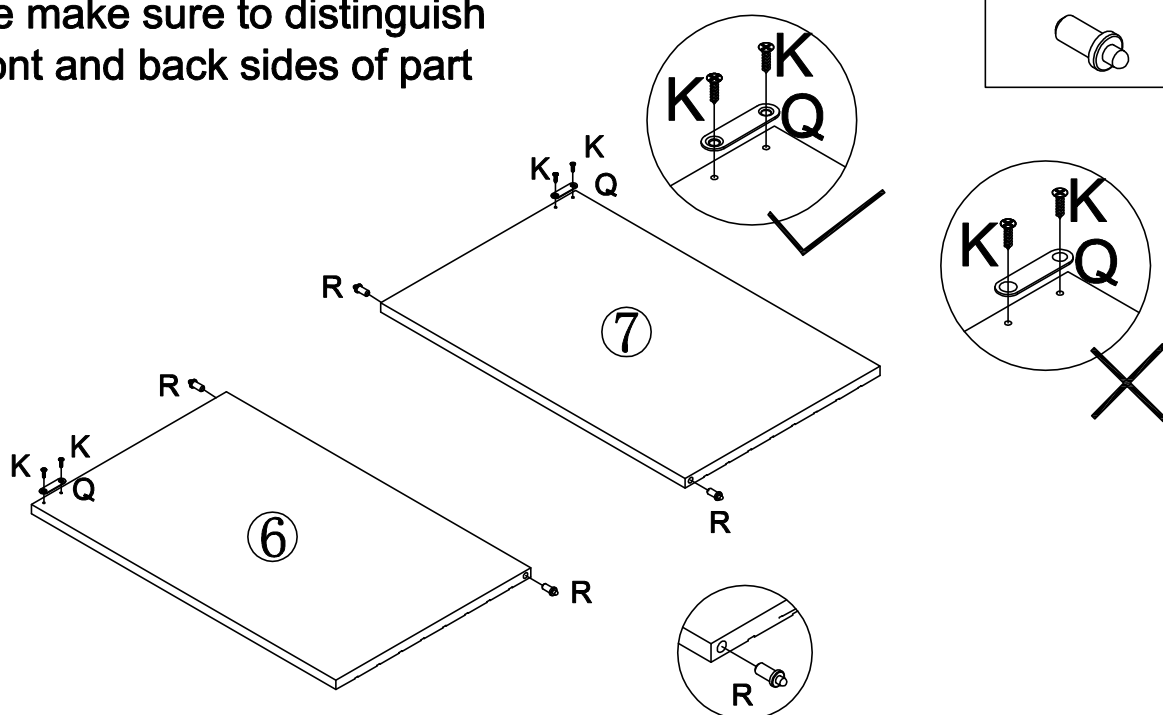

Step 15

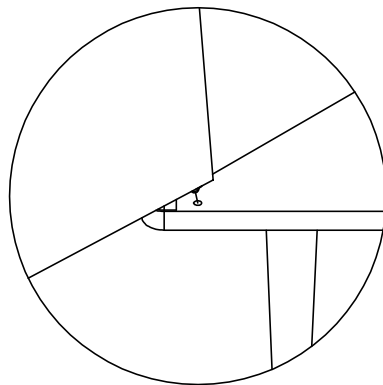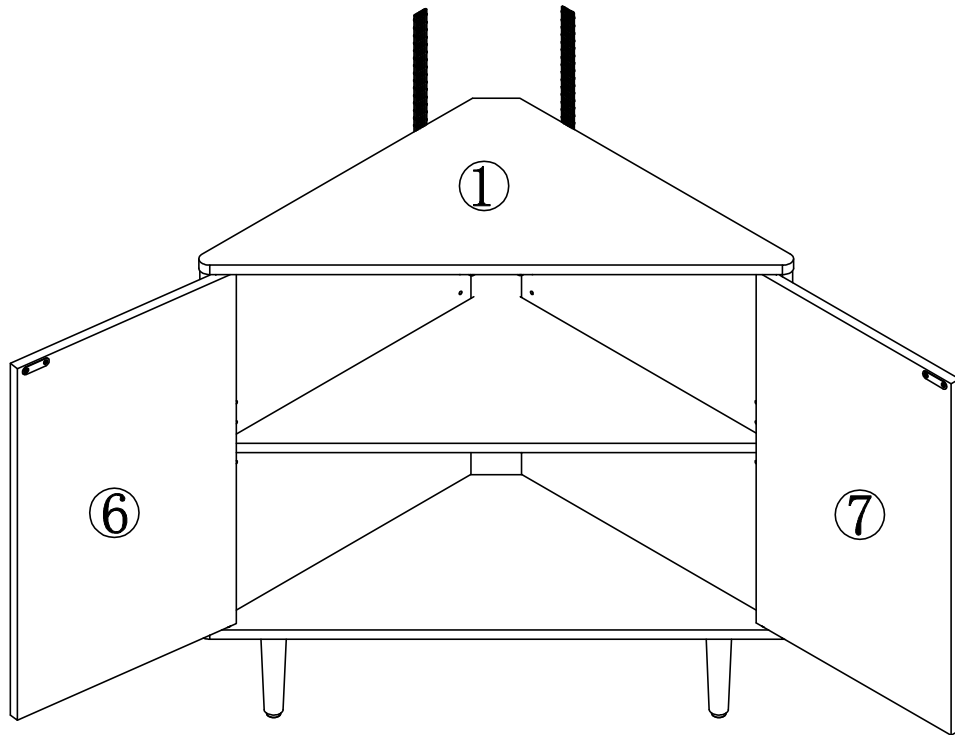


First Step

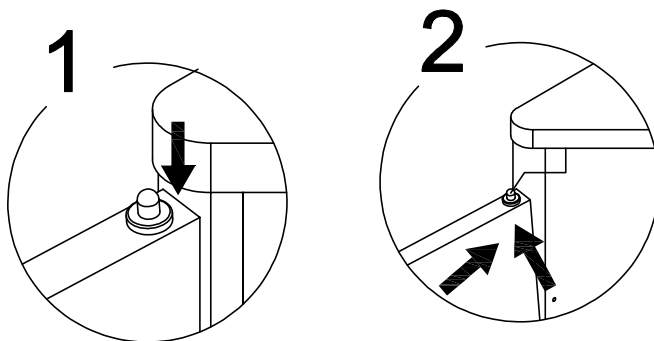

The second Step

Step 16

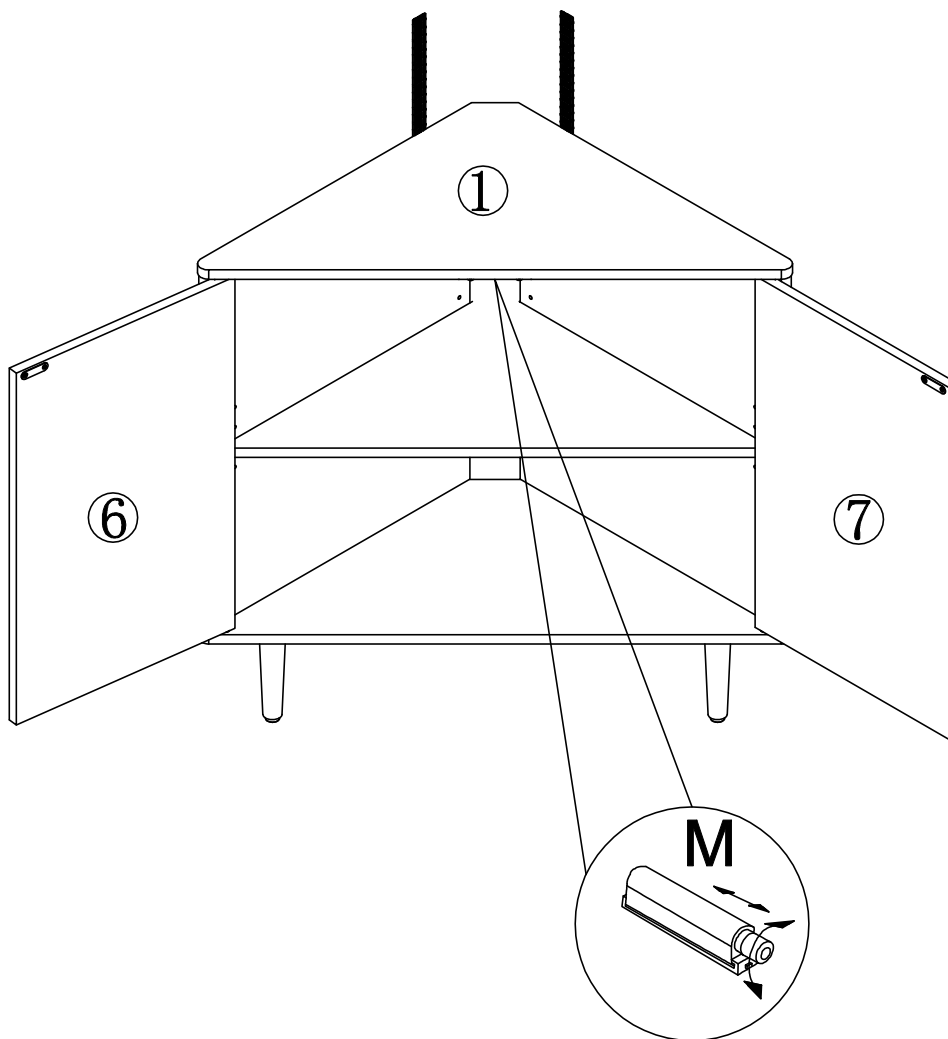

Note If the drawer does not pop out, please adjust the rebound device as shown in the figure.