


ASSEMBLY INSTRUCTIONS

LOW LOFT BED

REVERSIBLE OPTIONS

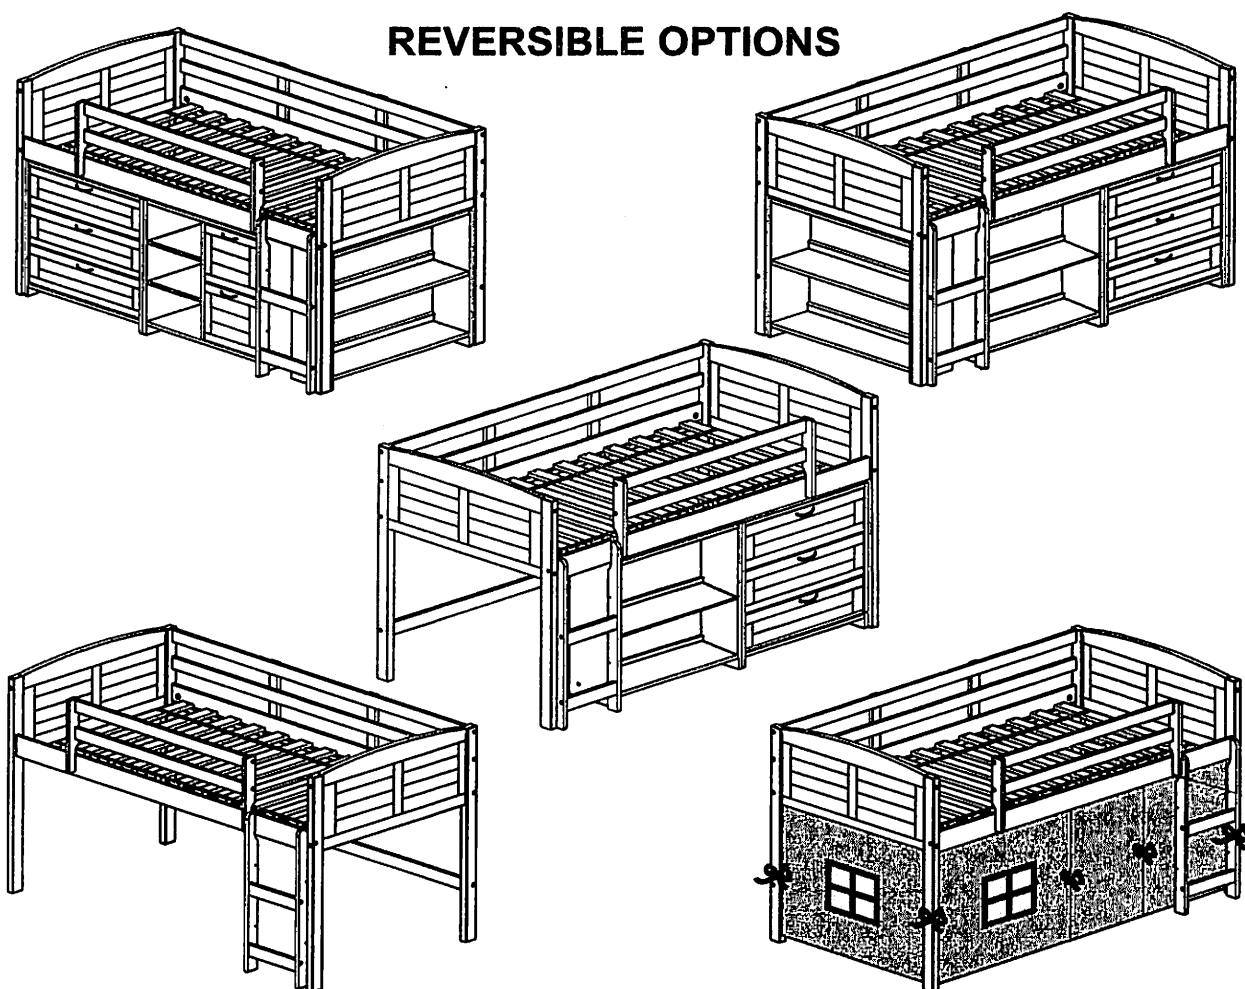

OPTIONAL SETS (THE CASES ARE SOLD SEPARATE)


3 DRAWERS CHEST LOUVER
2 DRAWERS CHEST LOUVER
SMALL BOOKCASE
HEADBOARD BOOKCASE
TENT KIT FABRIC

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not included)




(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List - LOW LOFT BED

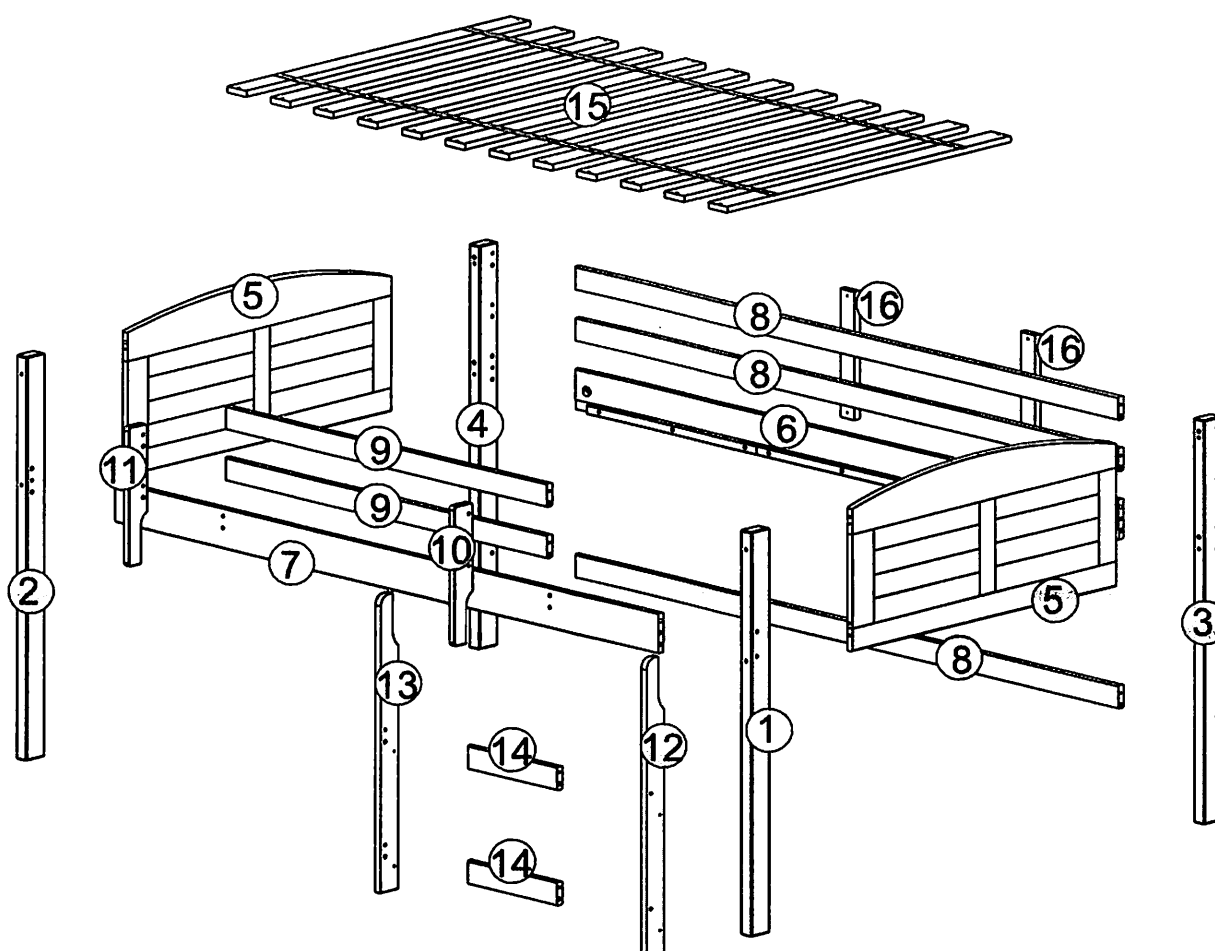

Identifying the Hardware-Identify the hardware using the illustrations below.

A  Qty 04
1/4 x 80 Screw

B  Half Moon Qty 04
1/4" Half Moon

C  Qty 06
7,0 x 80 Screw

D  Qty 08
7,0 x 100 Screw


E  Qty 30
10 x 40 Wood Dowel

F  Qty 12
7,0 x 50 Screw

G  Qty 30
4,0 x 30 Screw

H  Qty 02
4,0 x 40 Screw



I  Qty 06
3,5 x 16 Screw

J  Qty 02
Protector




K  Qty 02
Hook Ladder

L  Qty 01
Hex Screwdriver


01

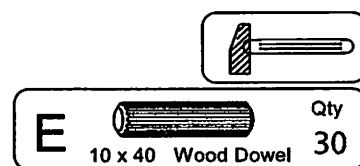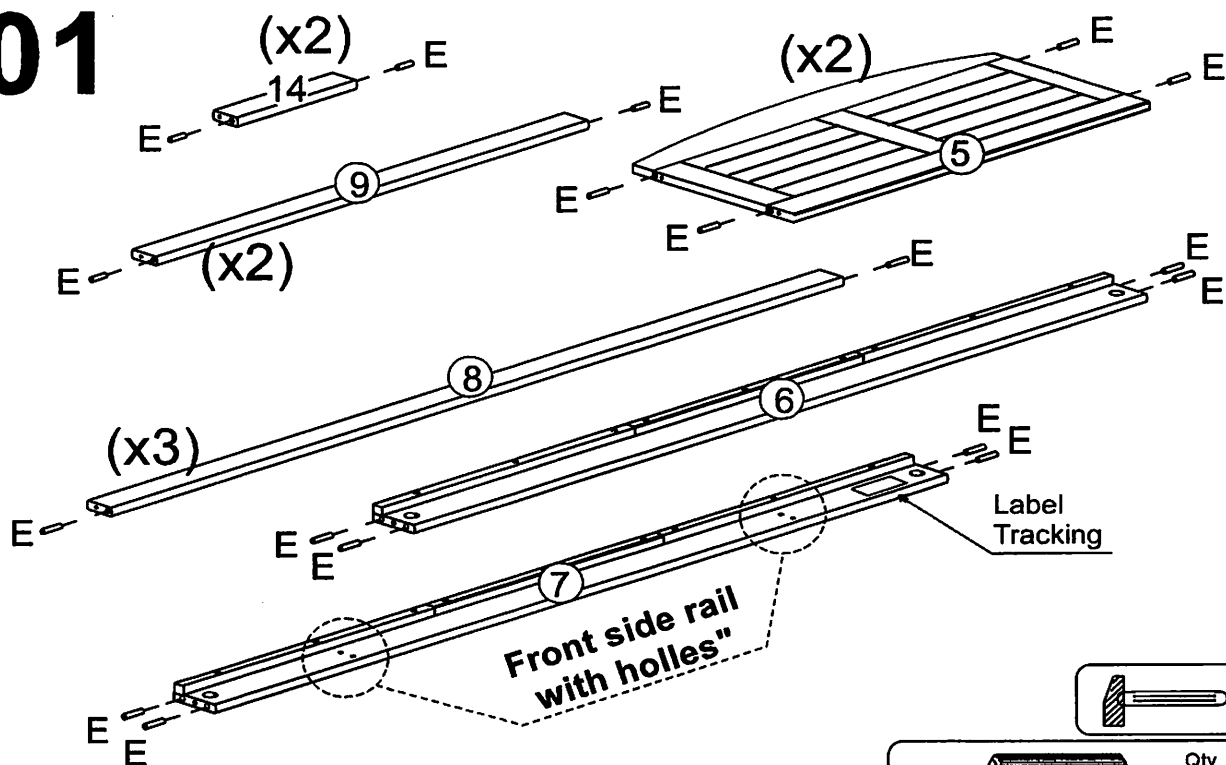

02

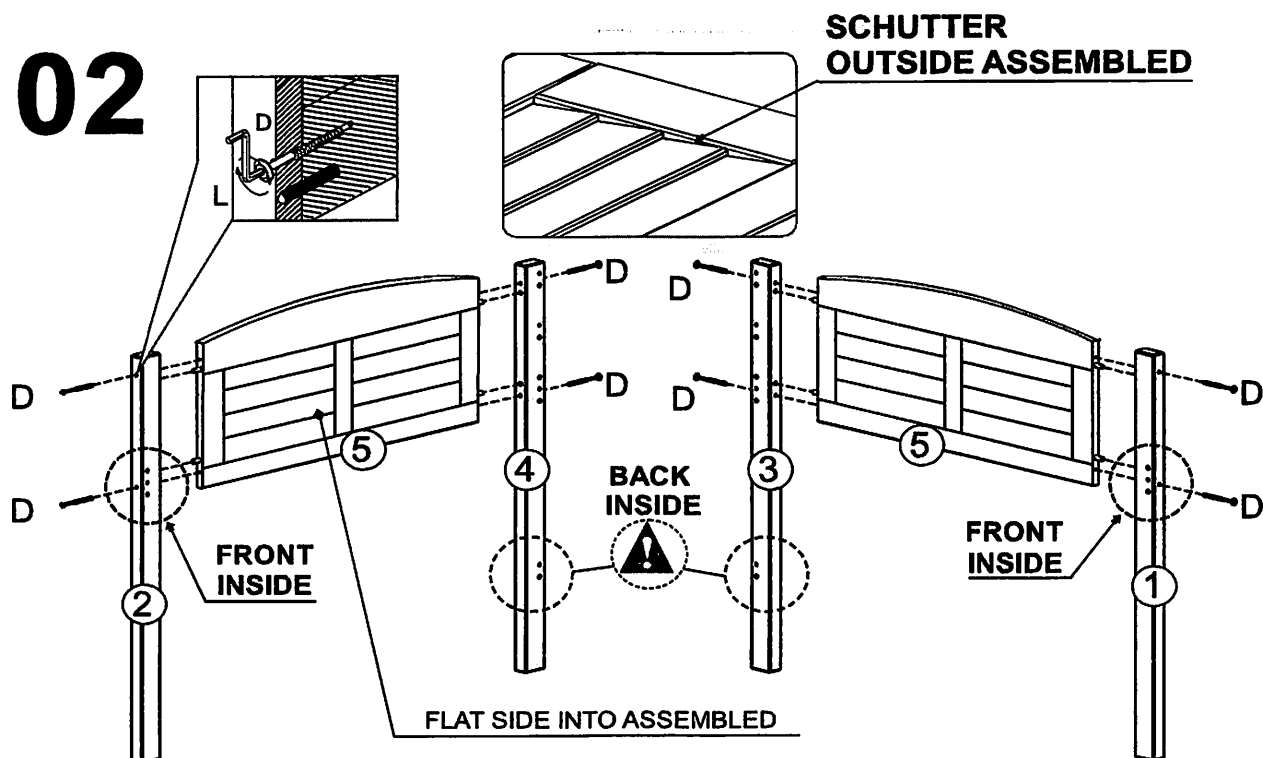

03

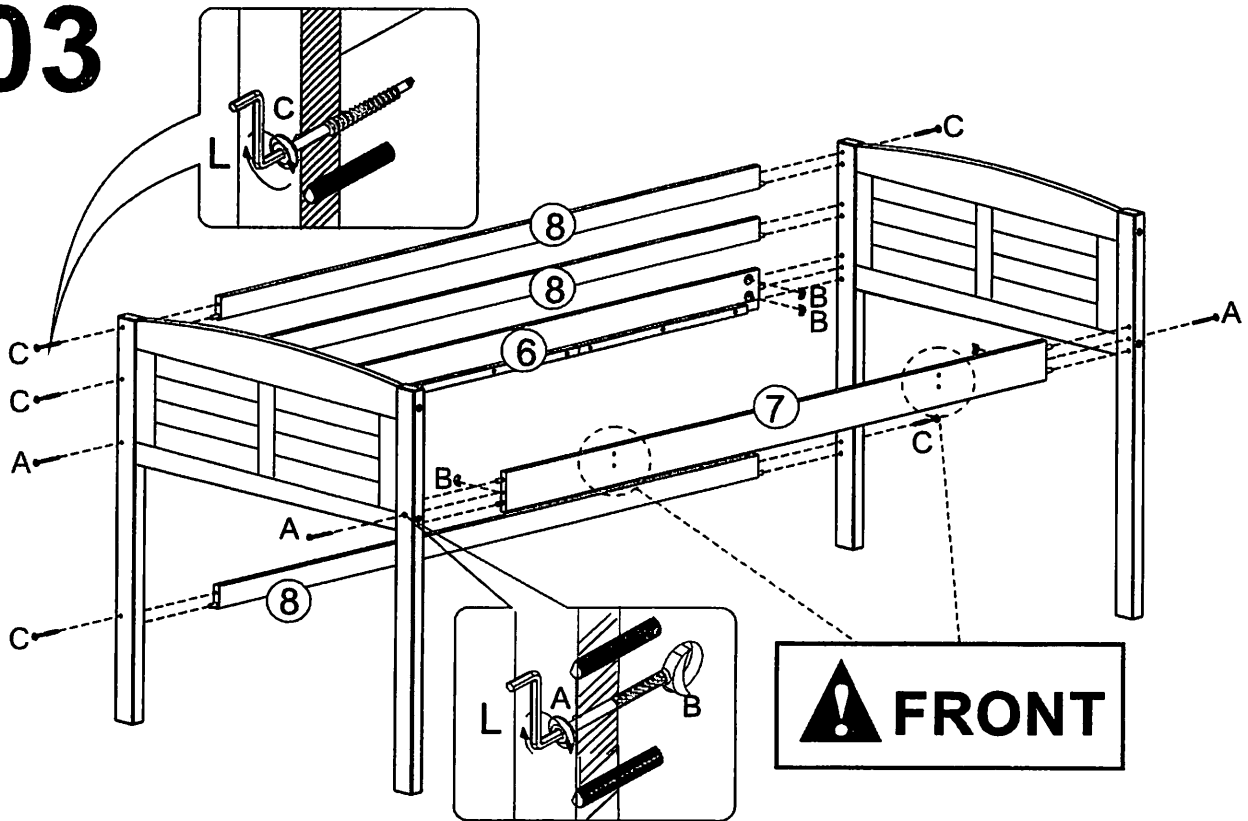


A  Qty **04**
1/4 x 80 Screw

B  Half Moon Qty **04**
1/4" Half Moon

C  Qty **06**
7.0 x 80 Screw

L  Qty **01**
Hex Screwdriver



04

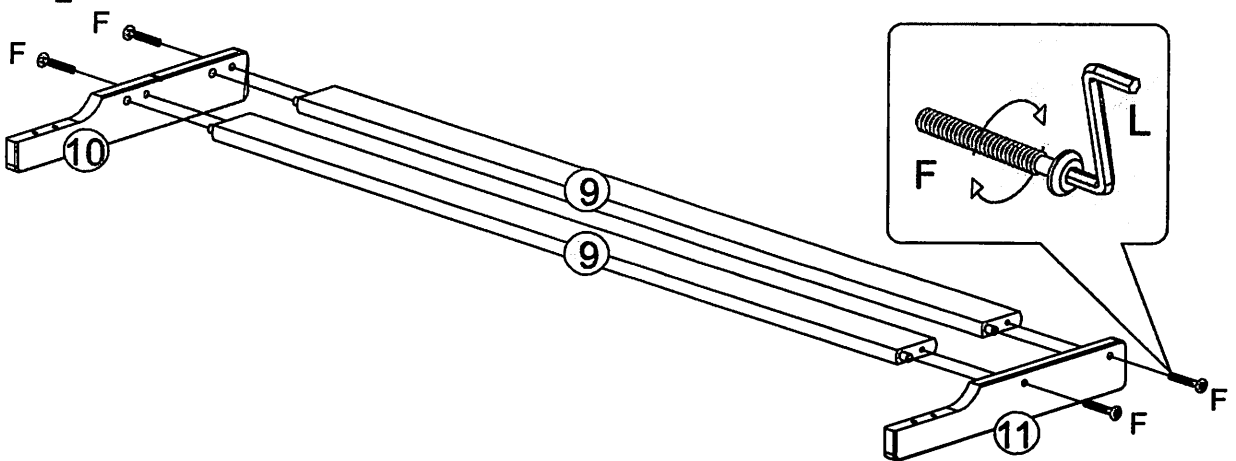









F  Qty **04**
7.0 x 50 Screw

L  Qty **01**
Hex Screwdriver


05

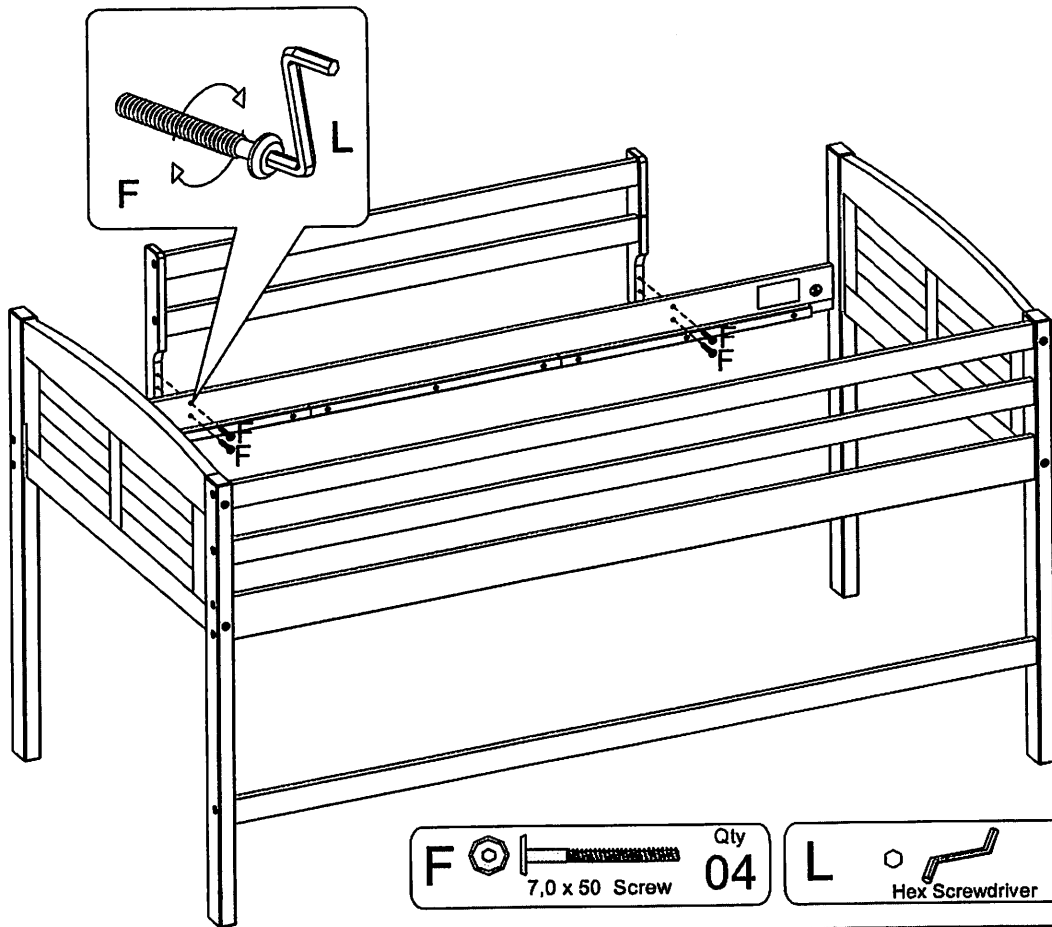


06 LADDER

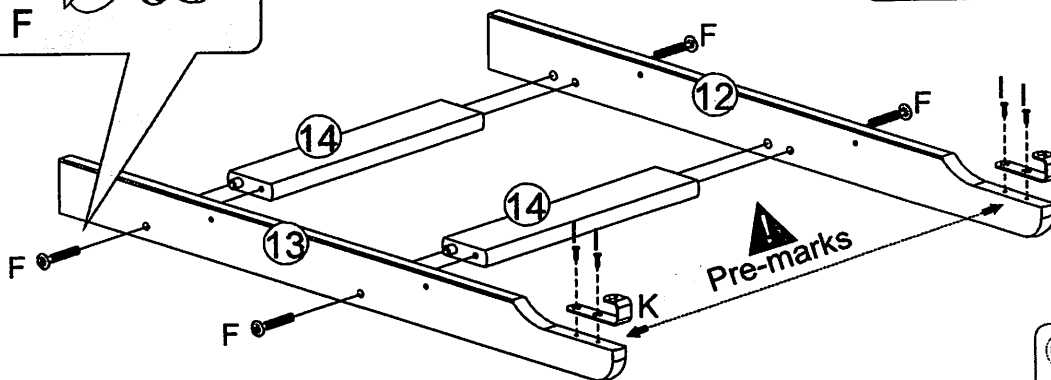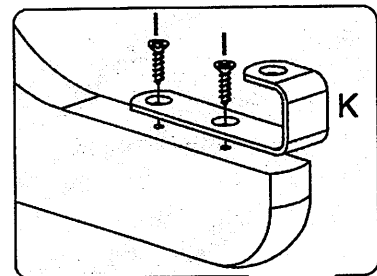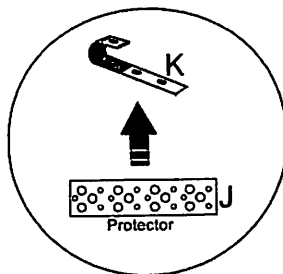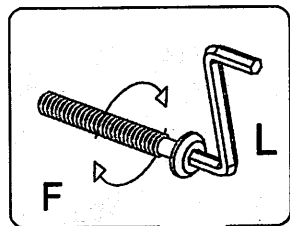


07

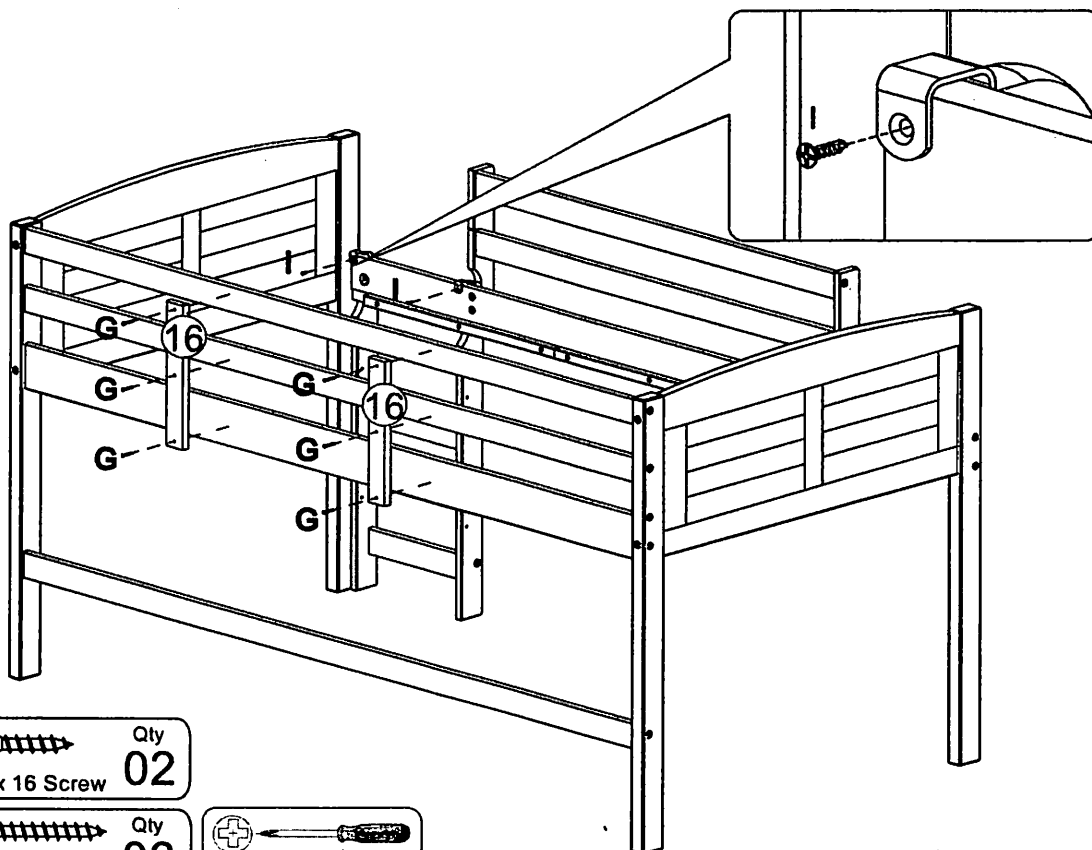


I  Qty 02
3,5 x 16 Screw


G  Qty 06
4,0 x 30 Screw




08

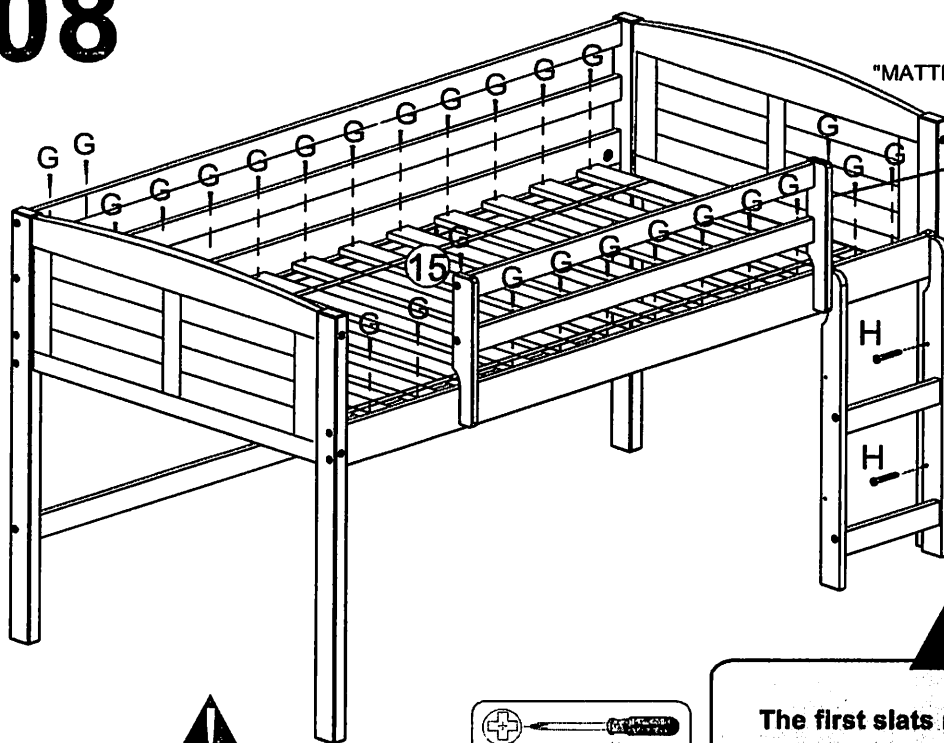


WARNING
THE MATTRESS
SURFACE MUST NOT
BE ABOVE THIS LINE
"MATTRESS 8" HIGH LIMITED"

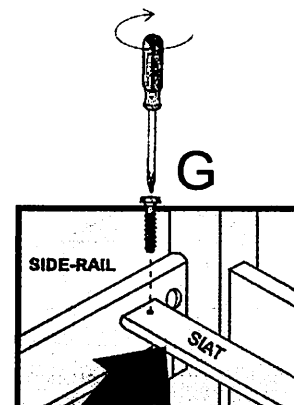



! "INSTALL SLAT KIT WITH SPACER TAPE ON TOP (FACING UP)"




H  Qty 02
4,0 x 40 Screw

The first slats must be fixed at 3" from each headboard end.

G  Qty 24
4,0 x 30 Screw

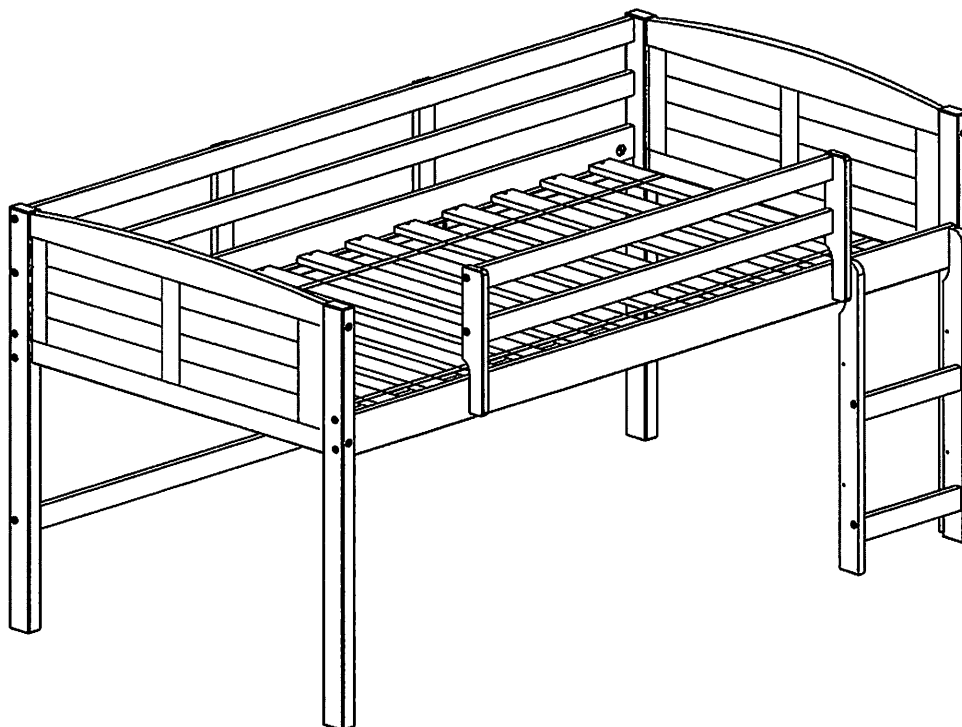


BED ONLY

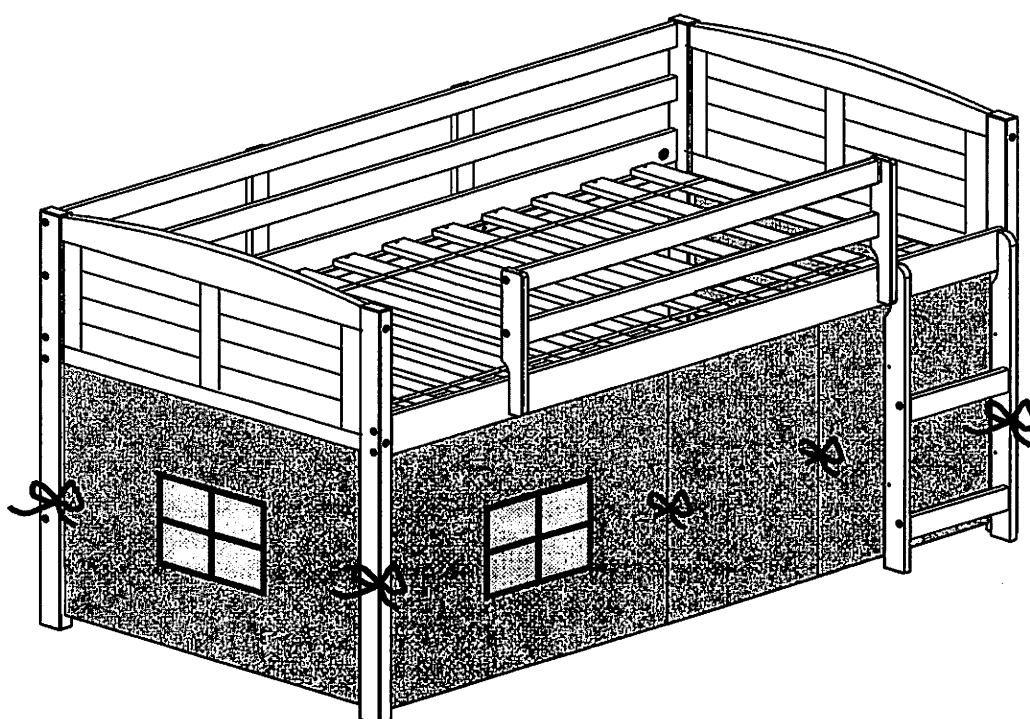


TENT SET FABRIC

OPTION COMPONENTS

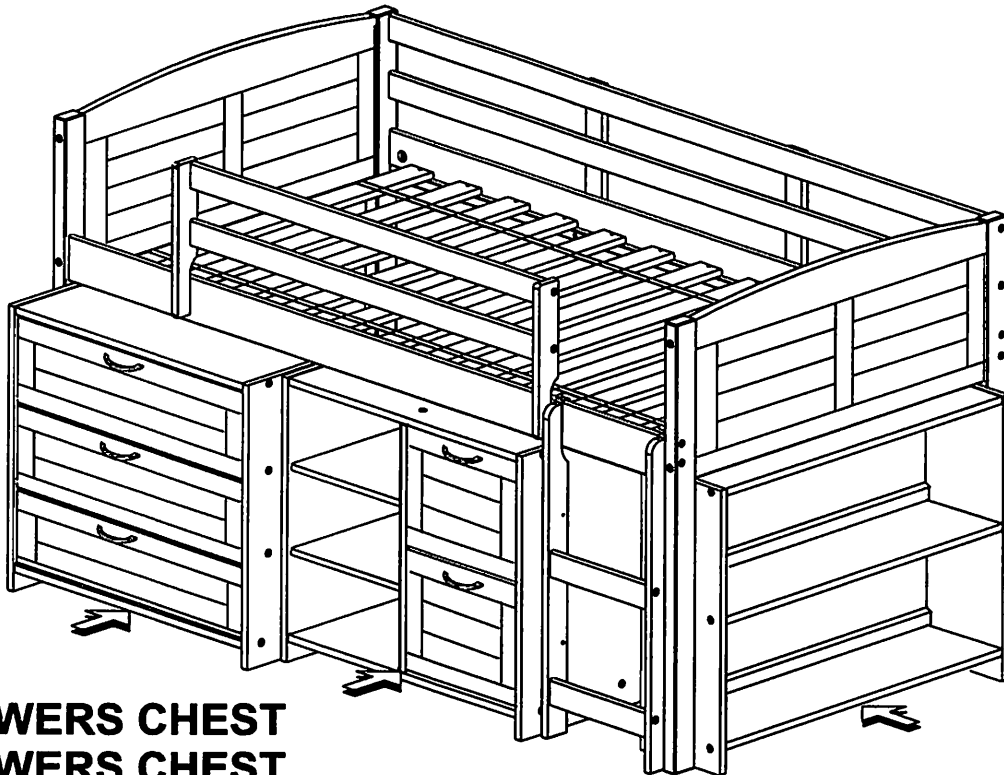


**3 DRAWERS CHEST
2 DRAWERS CHEST
HEADBOARD BOOKCASE**

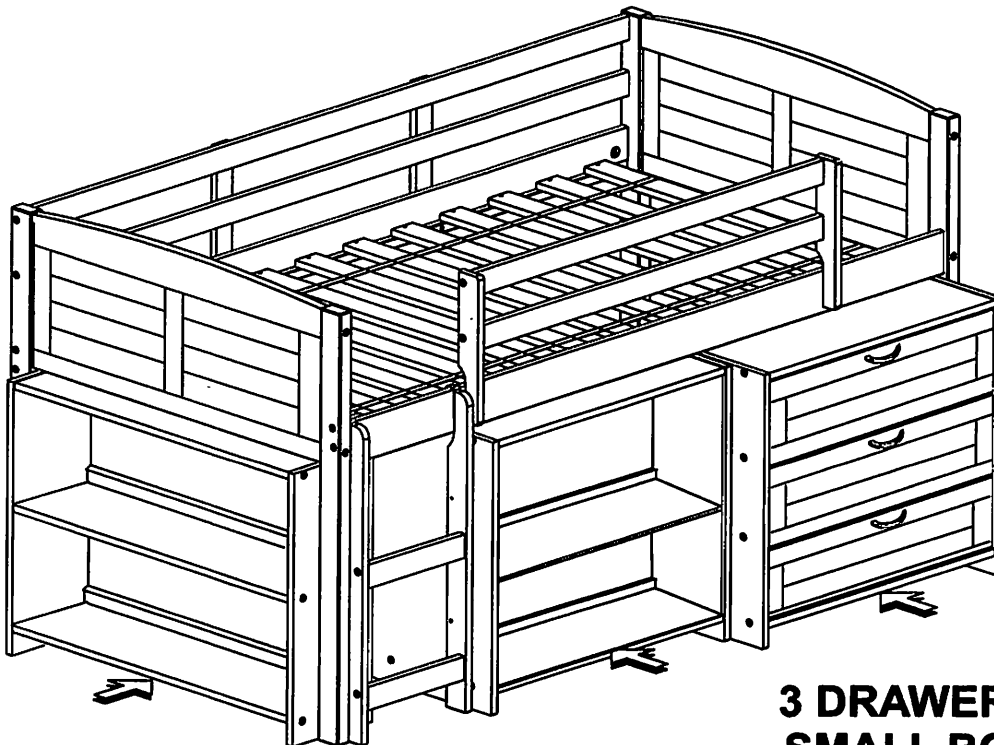


**3 DRAWERS CHEST
SMALL BOOKCASE
HEADBOARD BOOKCASE**

OPTION COMPONENTS

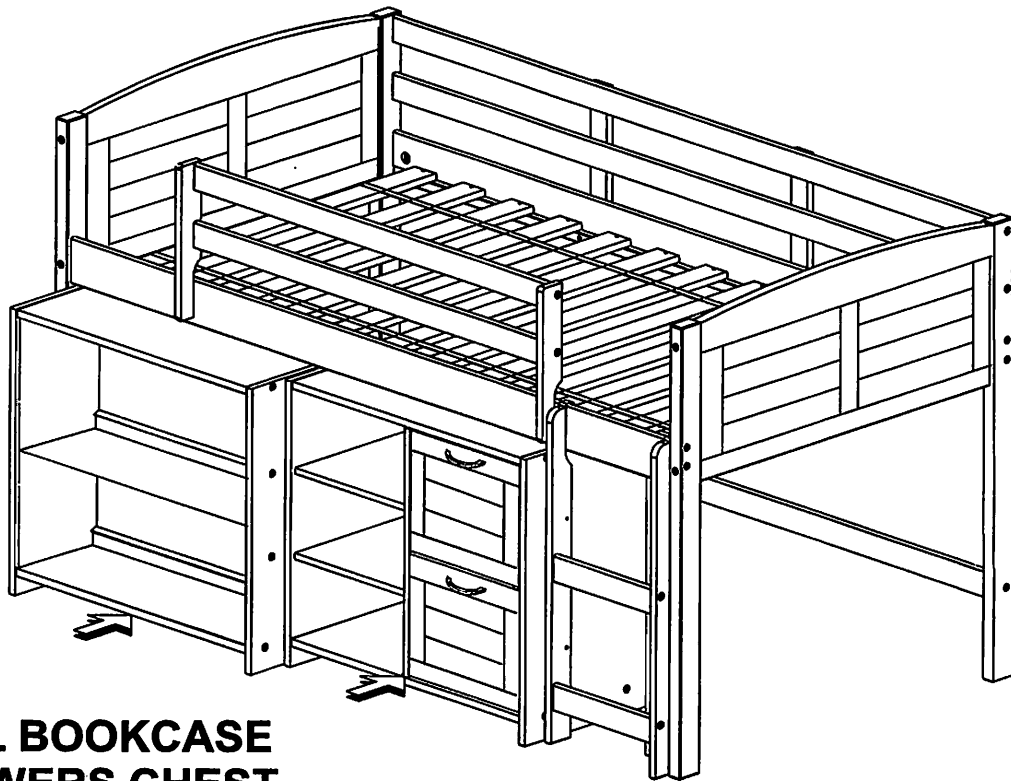

**SMALL BOOKCASE
2 DRAWERS CHEST**

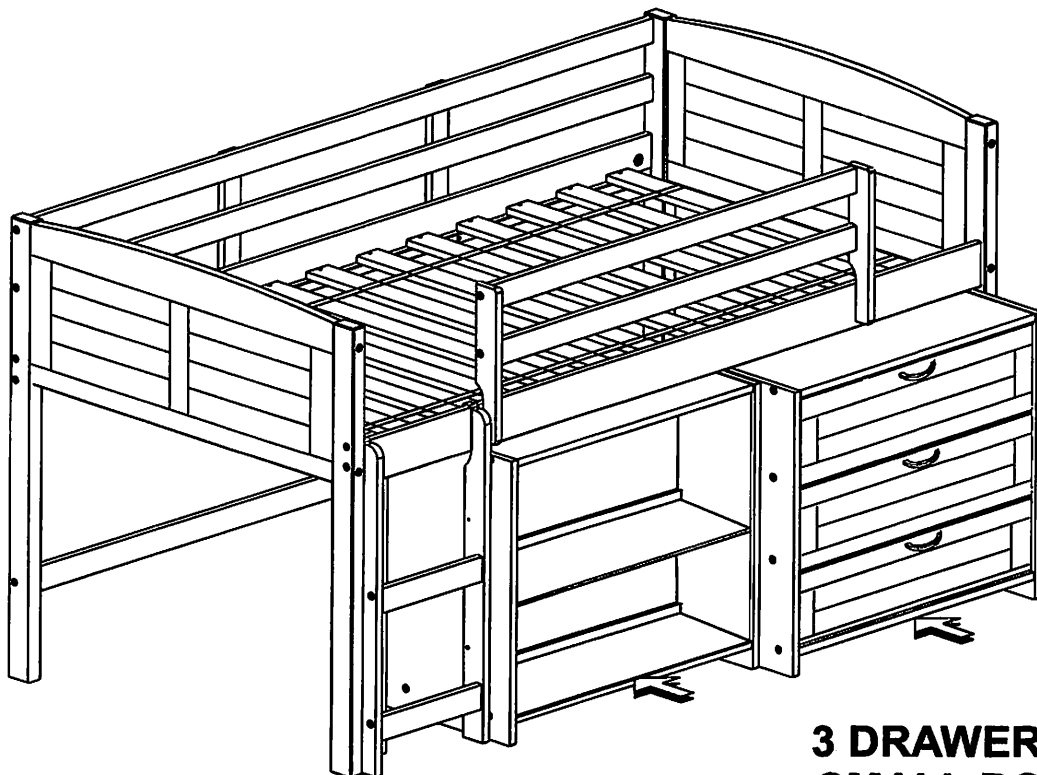

**3 DRAWERS CHEST
SMALL BOOKCASE**