



# INSTALLATION INSTRUCTIONS - DRAPERY HOLDBACK

## INCLUDES:

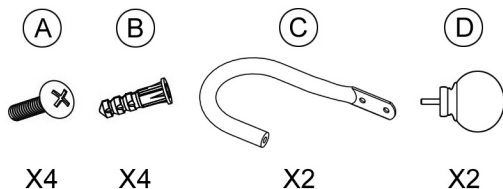


## YOU WILL NEED (not included):

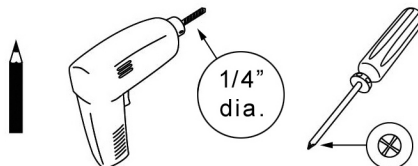

## CARE INSTRUCTIONS:


Clean with a soft cloth.  
Do not use abrasive  
cleaning agents,  
solvents or polishes.

1

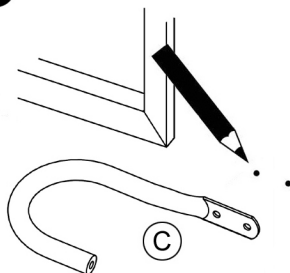


Use holdback (C) as a guide to mark location for mounting screws (A).

2

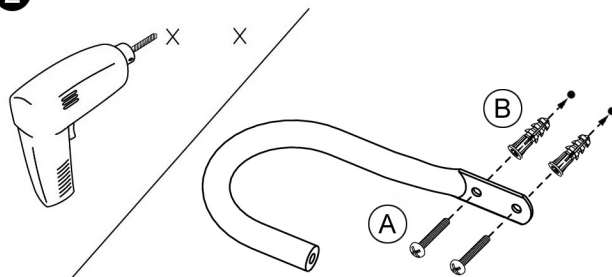

Drill pilot holes into wall with 1/4" drill bit (not included). Insert wall anchors (B) and attach holdback (C) using mounting screws (A). Wall anchors may not be necessary if drilling into studs.

3

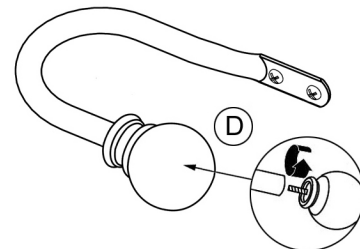

Screw finial (D) onto end of holdback. Repeat for second holdback.